




# SAFECAST kGeigie Kit

## Assembly Diagram 組み立て図

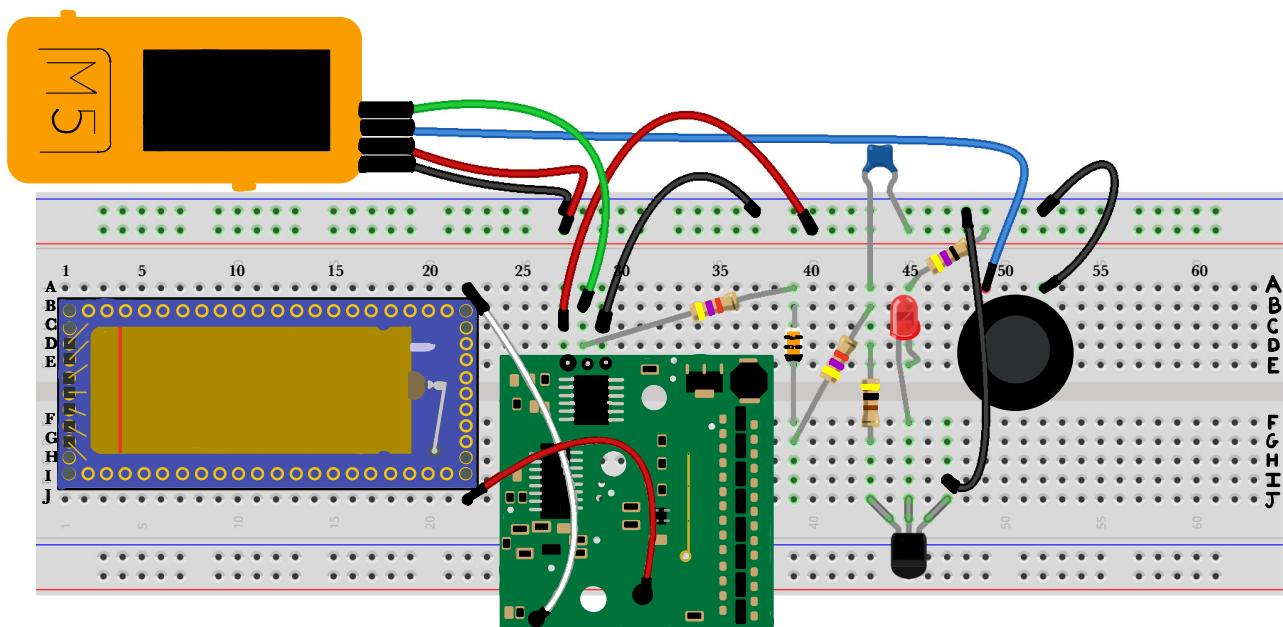


## Parts Used:

### iRover

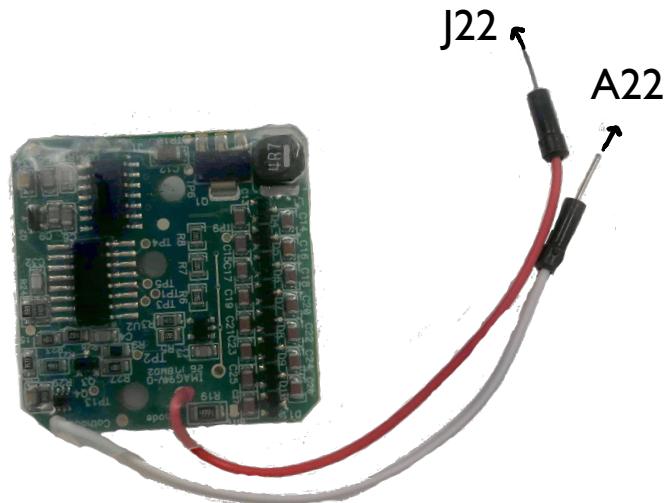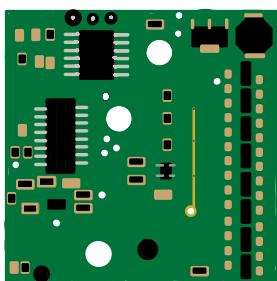

Connect: Red to J22  
White to A22

### M5 Stick-C

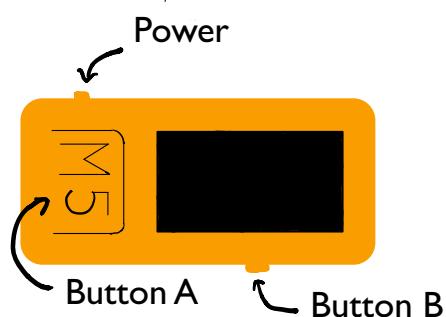

Attach Jumper Wires to Ports and connect:

- BLACK: GND to 21(-)
- RED: 5V to 21(+)
- BLUE: G26 to A49
- GREEN: G36 to B28

## Buzzer



Connect: prongs to A49 (+ prong) and A52

## Diode



Connect ends to B39 and F39, as oriented above\*

\*Note: The black end MUST face F39

## Resistors


Yellow, Purple, Red, Gold x2



Brown, Black, Yellow, Gold x1

Yellow, Purple, Black, Gold x1

## Alpha, Beta, Gamma Probe

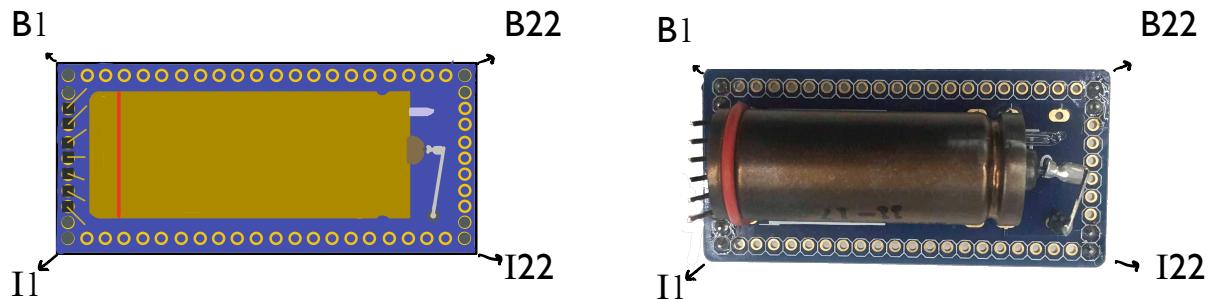

Connect corners to B1, B22, I1, I22 as oriented above.

### Jumper Wires

Blue x1




Connect M5Stick-C Port G26 to A49

Green x1



Connect M5Stick-C Port G36 to B28

Black x4

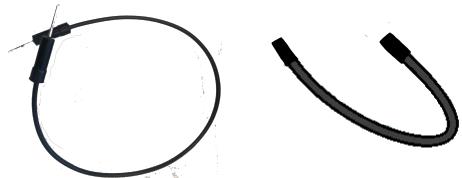

Red x2

Connect: M5Stick-C Port GND to 21(-)  
C29 to 32(-)  
I47 to 48(-)  
A52 to 52 (-)

