WISC-F24Microarchitecture Specification

In this document, we describe the microarchitecture, including register file specifications, memory system organization, etc. you will use for your CS/ECE 552 project. The WISC-F24 architecture that you will design for the final project shares many resemblances to the MIPS R2000 described in the text. The major differences are a smaller instruction set and 16-bit words for the WISC-F24. Similarities include a load/store architecture and three fixed-length instruction formats.

1. Registers

There are eight user registers, R_0 - R_7 . Unlike the MIPS R2000, R_0 is **not** always zero. Register R_7 is used as the link register for JAL or JALR instructions. The program counter is separate from the user register file. If you chose to implement exceptions for extra credit, a special register named EPC is used to save the current PC upon an exception or interrupt invocation.


2. Memory System

The WISC-F24 is a Harvard architecture, meaning instructions and data are located in different physical memories. It is byte-addressable, word aligned (where a word is 16 bits long – note that this is different from some of the examples in class), and big-endian. The final version of the WISC-F24 will include a multi-cycle memory and one level of cache. However, initial versions of the machine will contain a single cycle memory. The WISC-F24 cache replacement policy is deterministic.

NOTE: For phase1 and phase2, you will work with a simplified memory model which supports un-aligned accesses.

3. Pipeline

The final version of the WISC-F24 contains a five-stage pipeline identical to the MIPS R2000. The stages are:

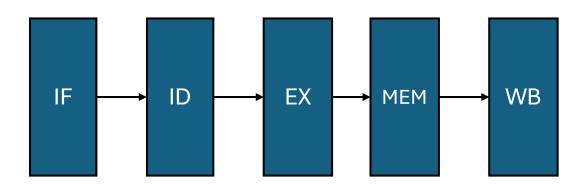

- 1. Instruction Fetch (IF)
- 2. Instruction Decode/Register Fetch (ID)
- 3. Execute/Address Calculation (EX)
- 4. Memory Access (MEM)
- 5. Write Back (WB)

See Figure 4.33 on page 299, Figure 4.35 on page 301, or Figure 4.36 on page 303 of the text for good starting points.

4. Optimizations

Your goal in optimizations is to reduce the CPI of the processor or the total cycles taken to execute a program. While the primary concern of the WISC-F24 is correct functionality, the architecture must still have a reasonable clock period. Therefore, you may not have more than one of the following in series during any stage:

- register file
- memory or cache
- 16-bit full adder
- barrel shifter

You may implement any type of optimization to reduce the CPI (as long as it's a valid optimization). The required optimizations are:

- Register file bypassing
- There are two register forwarding paths in the WISC-F24:
 - Forwarding from beginning of the MEM stage to beginning of EX stage (EX → EX forwarding)
 - Forwarding from beginning of the WB stage to the beginning of the EX stage (MEM → EX forwarding)
- All branches should be predicted not-taken. This means that the pipeline should continue to execute sequentially until the branch resolves, and then squash instructions after the branch if the branch was actually taken.

5. Exceptions: extra credit

Exception handling is extra credit. If you choose not to implement exception handling, an illegal instruction should be treated as a NOP.

IllegalOp is the only defined exception in the WISC-F24 architecture – i.e., if you run the wiscalculator it will show the siic instruction as an "IllegalOp." If you implement exception support, you will find that the exception handler is invoked when the opcode of the currently executing instruction is not a recognized member of the ISA (e.g., a siic instruction). Upon finding an illegal opcode, your processor should save the current PC into the reserved register EPC and then load address 0x02, which is the location of the IllegalOp exception handler. Note that if you choose to implement exceptions, address 0x00 must be a jump to the start of the main program.

The exception handler itself need not be complex. At a minimum it should load the value 0xBADD into R_7 and then use/call the RTI instruction to return to the address specified by the EPC. Several provided tests do exactly this.

WISC-F24 ISA Specification

1. Instruction Summary

(KEY: sss = rs, ddd = rd, ttt = rt, iii* = immediate)

(NET. 555 – 15, dud – 1d, ttt – 1t, iii – iiiiiilediate)					
Instruction Format			Syntax	Semantics	
00000	xxxxxxxxx	X	HALT	Cease instruction issue, dump memory state to file	
00001	xxxxxxxxx	X	NOP	None	
01000	sss ddd ii:	iii	ADDI Rd, Rs, immediate	Rd <- Rs + I(sign ext.)	
01001	sss ddd ii:	iii	SUBI Rd, Rs, immediate	Rd <- I(sign ext.) - Rs	
01010	sss ddd ii:	iii	XORI Rd, Rs, immediate	Rd <- Rs XOR I(zero ext.)	
01011	sss ddd ii:	iii	ANDNI Rd, Rs, immediate	Rd <- Rs AND ~I(zero ext.)	
10100	sss ddd ii:	iii	ROLI Rd, Rs, immediate	Rd <- Rs <<(rotate) I(lowest 4 bits)	
10101	sss ddd ii:	iii	SLLI Rd, Rs, immediate	Rd <- Rs << I(lowest 4 bits)	
10110	sss ddd ii:	iii	RORI Rd, Rs, immediate	Rd <- Rs >>(rotate) I(lowest 4 bits)	
10111	sss ddd ii:	iii	SRLI Rd, Rs, immediate	Rd <- Rs >> I(lowest 4 bits)	
10000	sss ddd ii:	iii	ST Rd, Rs, immediate	Mem[Rs + I(sign ext.)] <- Rd	
10001	sss ddd ii:	iii	LD Rd, Rs, immediate	Rd <- Mem[Rs + I(sign ext.)]	
10011	sss ddd ii:	iii	STU Rd, Rs, immediate	Mem[Rs + I(sign ext.)] <- Rd Rs <- Rs + I(sign ext.)	
11001	sss xxx ddd	d xx	BTR Rd, Rs	Rd[bit i] <- Rs[bit 15-i] for i=015	
11011	sss ttt ddd	d 00	ADD Rd, Rs, Rt	Rd <- Rs + Rt	
11011	sss ttt ddd	d 01	SUB Rd, Rs, Rt	Rd <- Rt - Rs	
11011	sss ttt ddd	d 10	XOR Rd, Rs, Rt	Rd <- Rs XOR Rt	
11011	sss ttt ddd	d 11	ANDN Rd, Rs, Rt	Rd <- Rs AND ~Rt	
11010	sss ttt ddd	d 00	ROL Rd, Rs, Rt	Rd <- Rs << (rotate) Rt (lowest 4 bits)	
11010	sss ttt ddd	d 01	SLL Rd, Rs, Rt	Rd <- Rs << Rt (lowest 4 bits)	
11010	sss ttt ddd	d 10	ROR Rd, Rs, Rt	Rd <- Rs >> (rotate) Rt (lowest 4 bits)	
11010	sss ttt ddd	d 11	SRL Rd, Rs, Rt	Rd <- Rs >> Rt (lowest 4 bits)	
11100	sss ttt ddd	d xx	SEQ Rd, Rs, Rt	if (Rs == Rt) then Rd <- 1 else Rd <- 0	
11101	sss ttt ddd	d xx	SLT Rd, Rs, Rt	if (Rs < Rt) then Rd <- 1 else Rd <- 0	

ADD ro, r1, r2 BNEZ ro, Imm

11110 sss ttt ddd xx	SLE Rd, Rs, Rt	if (Rs <= Rt) then Rd <- 1 else Rd <- 0
11111 sss ttt ddd xx	SCO Rd, Rs, Rt	if (Rs + Rt) generates carry out then Rd <- 1 else Rd <- 0
01100 sss iiiiiiii	BEQZ Rs, immediate	if (Rs == 0) then PC <- PC + 2 + I(sign ext.)
01101 sss iiiiiiii	BNEZ Rs, immediate	if (Rs != 0) then PC <- PC + 2 + I(sign ext.)
01110 sss iiiiiiii	BLTZ Rs, immediate	if (Rs < 0) then PC <- PC + 2 + I(sign ext.)
01111 sss iiiiiiii	BGEZ Rs, immediate	if (Rs >= 0) then PC <- PC + 2 + I(sign ext.)
11000 sss iiiiiiii	LBI Rs, immediate	Rs <- I(sign ext.)
10010 sss iiiiiiii	SLBI Rs, immediate	Rs <- (Rs << 8) I(zero ext.)
00100 ddddddddddd	J displacement	PC <- PC + 2 + D(sign ext.)
00101 sss iiiiiiii	JR Rs, immediate	PC <- Rs + I(sign ext.)
00110 ddddddddddd	JAL displacement	R7 <- PC + 2 PC <- PC + 2 + D(sign ext.)
00111 sss iiiiiiii	JALR Rs, immediate	R7 <- PC + 2 PC <- Rs + I(sign ext.)
00010	siic Rs	produce IllegalOp exception. Must provide one source register.
00011 xxxxxxxxxx	NOP / RTI	PC <- EPC

2. Formats

WISC-F24 supports instructions in four different formats: J-format, 2 I-formats, and the R-format. These are described below.

2.1 J-format

The J-format is used for jump instructions that need a large displacement.

J-Format

5 bits	11 bits
Op Code	Displacement

Jump Instructions

The Jump instruction loads the PC with the value found by adding the PC of the next instruction (PC+2, not PC+4 as in MIPS) to the **sign-extended** displacement.

The Jump-And-Link instruction loads the PC with the same value and also saves the address of the next sequential instruction (i.e., PC+2) in the link register R₇.

The syntax of the jump instructions is:

- J displacement
- JAL displacement

2.2 I-format

I-format instructions use either a destination register, a source register, and a 5-bit immediate value; or a destination register and an 8-bit immediate value. The two types of I-format instructions are described below.

I-format 1 Instructions

I-format 1

5 bits	3 bits	3 bits	5 bits
Op Code	R _s	R _d	Immediate

The I-format 1 instructions include XOR-Immediate, ANDN-Immediate, Add-Immediate, Subtract-Immediate, Rotate-Left-Immediate, Shift-Left-Logical-Immediate, Rotate-Right-Immediate, Shift-Right-Logical-Immediate, Load, Store, and Store with Update.

The **ANDNI** instruction loads register R_d with the value of the register R_s AND-ed with the **one's complement** of the zero-extended immediate value. (It may be thought of as a bit-clear instruction.) **ADDI** loads register R_d with the sum of the value of the register R_s plus the **sign-extended** immediate value. **SUBI** loads register R_d with the result of subtracting register R_s from the **sign-extended** immediate value. (That is, immed - R_s , **not** R_s - immed.) Similar instructions have similar semantics, i.e. the logical instructions have zero-extended values and the arithmetic instructions have sign-extended values.

For Load and Store instructions, the effective address of the operand to be read or written is calculated by adding the value in register R_s with the **sign-extended** immediate value. The value is loaded to or stored from register R_d . The **STU** instruction, Store with Update, acts like Store but also writes R_s with the effective address.

The syntax of the I-format 1 instructions is:

- ADDI R_d, R_s, immediate
- SUBI Rd, Rs, immediate

- XORI Rd, Rs, immediate
- ANDNI Rd, Rs, immediate
- ROLI R_d, R_s, immediate
- SLLI Rd, Rs, immediate
- RORI R_d, R_s, immediate
- SRLI Rd, Rs, immediate
- ST R_d, R_s, immediate
- LD R_d, R_s, immediate
- STU Rd, Rs, immediate

I-format 2 Instructions

I-format 2

5 bits	3 bits	8 bits
Op Code	R _s	Immediate

The Load Byte Immediate instruction loads R_s with a sign-extended 8-bit immediate value.

The Shift-and-Load-Byte-Immediate instruction shifts R_s 8 bits to the left and replaces the lower 8 bits with the immediate value.

The format of these instructions is:

- \bullet LBI R_s , signed immediate
- SLBI Rs, unsigned immediate

The Jump-Register instruction loads the PC with the value of register R_s + signed immediate. The Jump-And-Link-Register instruction does the same and also saves the return address (i.e., the address of the JALR instruction plus one) in the link register R_7 . The format of these instructions is

- JR Rs, immediate
- JALR Rs, immediate

The branch instructions test a general-purpose register for some condition. The available conditions are: equal to zero, not equal to zero, less than zero, and greater than or equal to zero. If the condition holds, the signed immediate is added to the address of the next sequential instruction and loaded into the PC. The format of the branch instructions is

- BEQZ Rs, signed immediate
- BNEZ Rs, signed immediate
- BLTZ Rs, signed immediate
- BGEZ Rs, signed immediate

2.3 R-format

R-format instructions use only registers for operands.

R-format

5 bits	3 bits	3 bits	3 bits	2 bits
Op Code	Rs	Rt	Rd	Op Code Extension

ALU and Shift Instructions

The ALU and shift R-format instructions are similar to I-format 1 instructions, but do not require an immediate value. In each case, the value of R_t is used in place of the immediate. No extension of its value is required. In the case of shift instructions, all but the 4 least-significant bits of R_t are ignored.

The ADD instruction performs signed addition. The SUB instruction subtracts R_s from R_t . (*Not* R_s - R_t .) The set instructions SEQ, SLT, SLE instructions compare the values in R_s and R_t and set the destination register R_d to 0x1 if the comparison is true, and 0x0 if the comparison is false. SLT checks for R_s less than R_t , and SLE checks for R_s less than or equal to R_t . (R_s and R_t are two's complement numbers.) The set instruction SCO will set R_d to 0x1 if R_s plus R_t would generate a carry-out from the most significant bit; otherwise it sets R_d to 0x0. The Bit-Reverse instruction, BTR, takes a single operand R_s and copies it to R_d , but with a left-right reversal of each bit; i.e. bit 0 goes to bit 15, bit 1 goes to bit 14, etc.

The syntax of the R-format ALU and shift instructions is:

- ADD Rd, Rs, Rt
- SUB Rd, Rs, Rt
- XOR Rd, Rs, Rt
- ANDN Rd, Rs, Rt
- ROL R_d, R_s, R_t
- SLL Rd, Rs, Rt
- ROR Rd, Rs, Rt
- SRL Rd, Rs, Rt
- SEQ R_d, R_s, R_t
- SLT R_d, R_s, R_t
 SLE R_d, R_s, R_t
- SCO R_d, R_s, R_t
- BTR Rd, Rs

3. Special Instructions

Special instructions use the R-format. The HALT instruction halts the processor. The HALT instruction and all older instructions execute normally, but the instruction after the halt will never execute. The PC is left pointing to the instruction directly after the halt.

The No-operation instruction occupies a position in the pipeline but does nothing.

The syntax of these instructions is:

- HALT
- NOP

The SIIC and RTI instructions are extra credit and can be deferred for later. They will be not tested until the final demo.

The SIIC instruction is an illegal instruction and should trigger the exception handler. EPC should be set to PC + 2, and control should be transferred to the exception handler which is at PC 0x02.

The syntax of this instruction is:

• SIIC Rs

The source register name must be ignored. The syntax is specified this way with a dummy source register, to reuse some components from our existing assembler. The RTI instruction should remain equivalent to NOP until the rest of the design has been completed and thoroughly tested.

RTI returns from an exception by loading the PC from the value in the EPC register.

The syntax of this instruction is:

• RTI

Note that if you do not implement exception support, then you should treat RTI as a NOP. But, once you add this support, RTI will always load the PC from the value in the EPC register – i.e., it is no longer a NOP.

See the Part 4 in the Microarchitecture description for more information on optimizations.