2 Microelectronics Technology

2.1 Definitions

Microelectronics

- The design, manufacture, and use of microchips and microcircuits [Oxford Dictionary].
- The technology for development and fabrication of electronic systems consisting of devices whose operation is based on the movement and storage of electrical charges.
- Comprises not only integrated semiconductor circuits, but also solid state devices having other modes of operation and their application in complex systems.

Microelectronics, Microsystems Technology (μOptics, μMechanics)

→ Microtechnologies

Interaction of materials, processes, equipment, technology

Status: 01.04. 2014





Only for internal use at TU Chemnitz for study purposes. Unauthorized copying and distribution is prohibited.

Chapter 2 - 1

Scope of microelectronic products:

Memories Processors ASIC's Power electronics Microsystems

Innovations:

Technology Architecture Algorithms New technologies, Microtechnologies, driver & design Power engineering special developments evolution

Goals: $\mu E \longrightarrow \text{Scaling down}$

Decrease of all characteristic dimensions and structures (e. g. channel length of MOS transistors)

More Moore

 $\mu ST \longrightarrow$ Systems (sensor, actuator) & combination with μE (see special lecture courses)

More than Moore


This lecture deals with processes and technologies which are applied in Micro and Nanoelectronics or have future application potential.

 $\mu E = Microelectronics$


 $\mu ST = Microsystems technology$






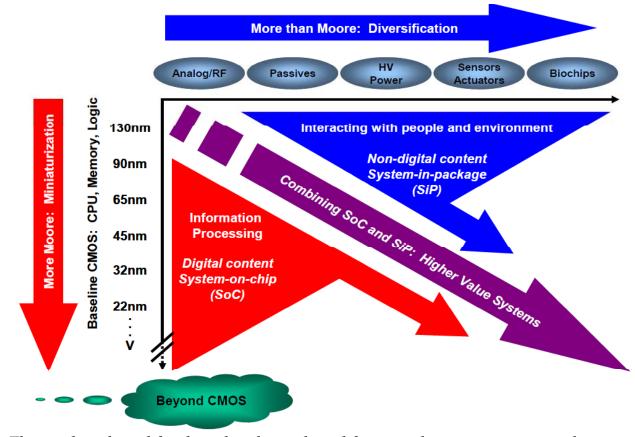

ECHINIPACINE UNIQUERRANSIS





Only for internal use at TU Chemnitz for study purposes. Unauthorized copying and distribution is prohibited.

Chapter 2 - 3

Terms


Basic process steps (BPS)

- indivisible step in the process flow
- characterized by physical / chemical parameters (temperature, pressure, gas composition...)
- e.g. special diffusion step (pre-deposition), implantation step, special cleaning step (rinsing)

Technology: $\sum BPS$

Parameter: Special parameter determining device properties

example: Dopant concentration → resistance, depth of p-n-junction

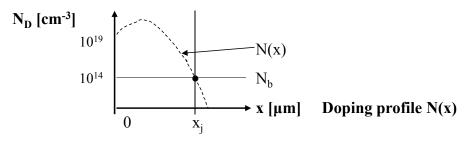

Equipment: Tools for a specific process step

(e.g. implanter, PVD cluster tool, ...)



2.2 Processes / Basic Technologies

Process

- consists of one ore more BPS
- carried out by using of specific tools (equipment)
- standardized component of a technology
- results in achievement of a specific property
- e.g. doping (pre-deposition, drive in),

photolithography (deposition of resist, exposure, development, ...)

Process technology

- physical, chemical and other mechanism/principle of the process
- technical realization using specific equipment
- process integration issues

Basic technology

Sum of processes (or BPS) to be performed for the fabrication of a specific product, e.g. CMOS, BICMOS, Bipolar, ...


Important:

Technology is characterized by the number of devices per chip and the critical (minimum) dimension of the device structure

Microelectronics:

- Silicon-based: Si wafer as the basic material, Trend: wafer diameter increases (200 mm \rightarrow 300 mm \rightarrow 450 mm)
- Other semiconductor materials (e.g. GaAs, SiC) with smaller wafer size (100, 150 mm)





Only for internal use at TU Chemnitz for study purposes Unauthorized copying and distribution is prohibite

Chapter 2 - 5


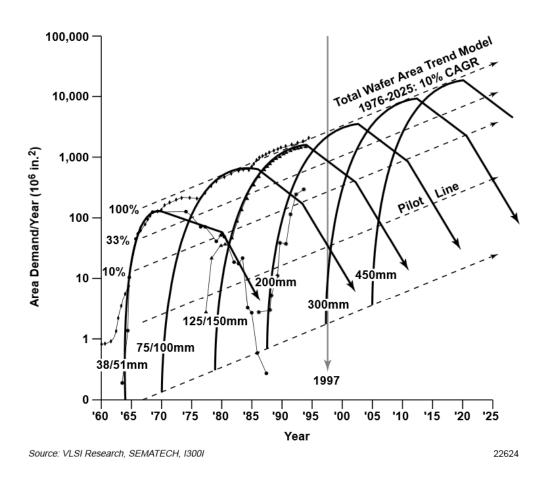


Figure 7-1. Lifecycles of Different Wafer Sizes



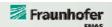

Overall Process

 Phase 1: Preparation
 crystal pulling mechanical treatment (diameter) wafer fabrication: sawing, lapping, polishing

 Phase 2: Wafer processing
 ∑ Basic process steps (BPS)


 BPS 1
 BPS 2

 basic technology)
 ...incl. repetition (see lecture "Technologies for


• BPS/processes often summarized in process modules (see chapter 5.1)

Micro and Nano Systems" and section 3.1 ... 3.9)

e.g. CMOS:

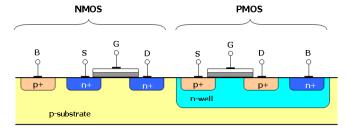

Phase 3: Packaging



Fraunhofer


Only for internal use at TU Chemnitz for study purposes Unauthorized copying and distribution is prohibited.

Chapter 2 - 7

2.3 Devices

MOS Transistor:

MOSFET: Metal-Oxide-Semiconductor Field Effect Transistor Basic device of MOS/CMOS Technology

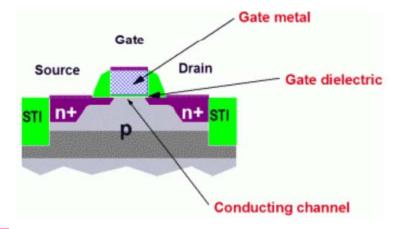


Depletion mode

→ Channel already exists at zero gate voltage. Control by depletion of majority carriers.

Enhancement mode

→ Self-blocking at zero gate voltage. Channel emerges due to enhancement of minority carriers until inversion.






Advanced Integrated Circuit Technology

n-Channel Enhancement:

 $V_G = 0 \rightarrow$ no channel, n^+p n^+ - structure blocked \rightarrow only leakage current

 $V_G > 0 \rightarrow \text{n-conducting channel formed by influence}$

→ current from source to drain possible

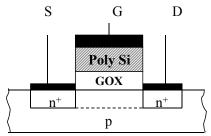

Remark:

Fabrication is difficult because a channel can be formed already at $V_G = 0$ due to the positive charges in the oxide and the contact potential. \rightarrow Problem can be solved by supplementary corrective doping


(p-Channel enhancement accordingly: Enhancement for $V_G < 0$ and no technological problems because n-Si is used as the substrate and additional negative charges are generated in the channel by influence due to positive oxide charges)

n-Channel Depletion:

→ P(hosphorous) doping (by ion implantation) in the channel range → n channel exists at $V_G = 0$

 $V_G = 0 \rightarrow \text{current}$, transistor is "on" $V_G < 0 \rightarrow \text{decrease of current}$

(p-channel depletion accordingly, depletion for $V_G > 0$)

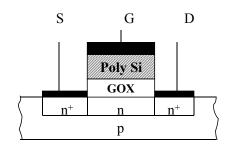






Only for internal use at TU Chemnitz for study purposes Unauthorized copying and distribution is prohibited.

Chapter 2 - 9

CMOS Inverter

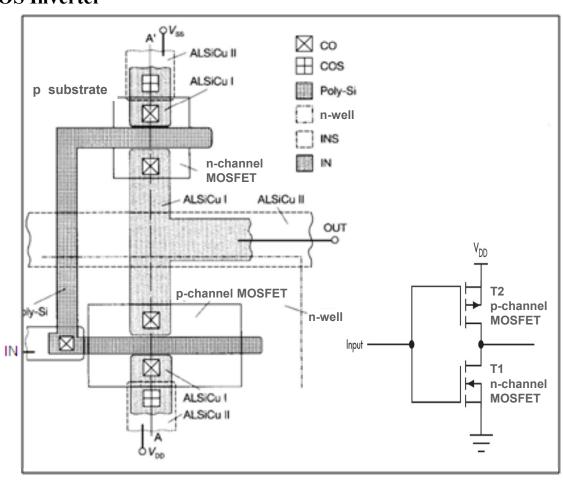





CMOS:

$V_{IN} < V_{th}$ (threshold voltage):

T1 (n channel) is blocked

(i.e. n channel enhancement mode)

 $V_{OUT} = V_{DD}$ because T2 (p channel) is conducting.


Reason: Negative voltage between gate and source (as long as $V_{IN} < V_{DD}$) controls T2



T1 conducting,

 $V_{\rm OUT}$ decreases with increasing $V_{\rm IN}$ T2 operates in the active mode,

$$V_G = V_{DD} - V_{OUT} + V_{Th}$$

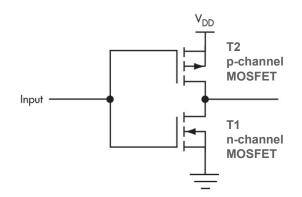

Technology:

- Gate (channel) length L determines switching behavior
- Gate dielectric thickness (100...< 10 nm) determines transconductance of the transistor
- Metallization critical for shallow p-n junctions
- Isolation by SiO₂ (local oxidation of Si = LOCOS or shallow trench isolation = STI)
- Passivation: Phosphorus Silicate Glass = PSG (getters mobile impurities)
- Na (sodium) ions are harmful (mobile ion impurities) degrading device characteristics
- Metallization: Al, AlSi, AlSiCu, AlCu, Cu






Only for internal use at TU Chemnitz for study purposes. Unauthorized copying and distribution is prohibited.

Chapter 2 - 11

CMOS Structure - Technological realization

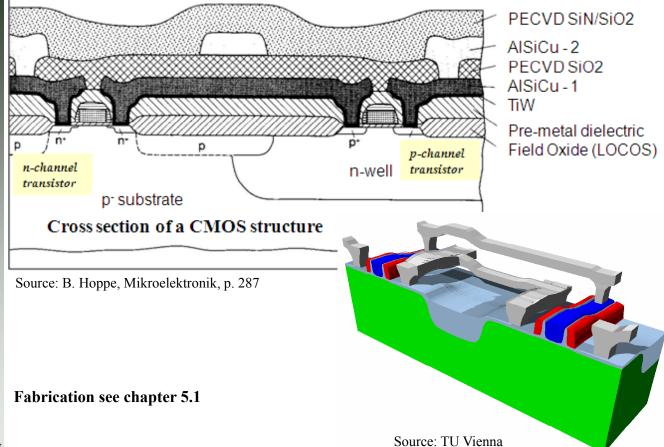


Advanced Integrated Circuit Technology

Resistor:

Very high-resistance n-doped epitaxial layer \rightarrow The low-resistance p doped layer (red) is formed by boron implantation and used as a resistor after contact formation.

$$R = \rho \cdot \frac{L}{x_{j} \cdot W}$$

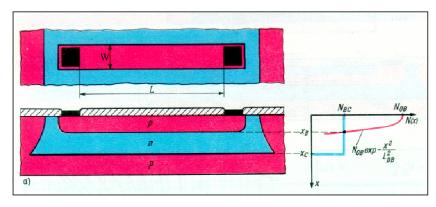



Capacitor:

$$C = \varepsilon_0 \, \varepsilon_r \cdot \frac{A}{d_{\text{SiO}_2}} = \varepsilon_0 \, \varepsilon_r \cdot \frac{L \cdot W}{d_{\text{SiO}_2}}$$

L, W = length, width of the area where the electrodes do overlap d_{SiO2} = thickness of SiO_2

MOS capacitor

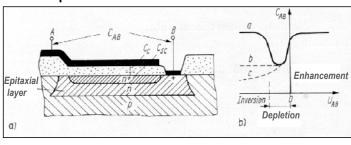

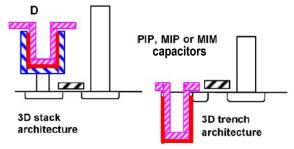



Only for internal use at TU Chemnitz for study purposes Unauthorized copying and distribution is prohibited.

Chapter 2 - 15

2.4 Development Trends


- Production of many identical devices / circuits / chips by one process → cost!
- Characteristic quantities:
 - Wafer diameter (now: 300 mm)
 - Die size ca. 100 200 mm²
 - Number of transistors per die (degree of integration)
 - Yield
- Main feature: New and improved products (performance, reliability)
 - Require the continued increase of degree of integration
- → scaling down (miniaturization of devices, decrease of lateral dimensions and layer thicknesses)
 - Increase of die size

Goal: equal or higher yield than in previous technology node

• Trend:

Year	Era	critical dimension	degree of integration
1968 1972	MSI (Medium Scale Integration)	> 6 µm	$\sim 10^2$
1972 1981	LSI (Large Scale Integration)	2.5 6 μm	$\sim 10^3$
1981 1989	VLSI (Very Large Scale Integration	n) 2.5 1 μm	$\sim 10^5$
since 1990	ULSI (Ultra Large Scale Integration	on) $< 1 \mu m$	
since 2000		< 100 nm	> 108



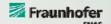





- Geometrical (constant field) Scaling refers to the continued shrinking of horizontal and vertical physical feature sizes of the on-chip logic and memory storage functions in order to improve density (cost per function reduction) and performance (speed, power) and reliability values to the applications and end customers.
- Equivalent Scaling (occurs in conjunction with, and also enables, continued geometrical scaling) refers to 3-dimensional device structure ("Design Factor") improvements plus other non-geometrical process techniques and new materials that affect the electrical performance of the chip.
- Design Equivalent Scaling (occurs in conjunction with equivalent scaling and continued geometric scaling) refers to design technologies that enable high performance, low power, high reliability, low cost, and high design productivity.
 - o "Examples (not exhaustive) are: Design for variability; low power design (sleep modes, hibernation, clock gating, multi-Vdd, etc.); and homogeneous and heterogeneous multicore SOC architectures."
 - o Addresses the need for quantifiable, specific Design Technologies that address the power and performance tradeoffs associated with meeting "More Moore" functionality needs, and may also drive "More Moore" architectural functionality as part of the solution to power and performance needs.

Only for internal use at TU Chemnitz for study purposes. Unauthorized copying and distribution is prohibited

Chapter 2 - 17

Trends

	Al gate PMOS	Si gate NMOS			Si gate CMOS			SGT	HKMG		
	1969	1972	1975	1978	1981	1984	1987	1990	2000	2006	2009
t _{Ox} [nm]	150	120	110	70	50	40	25	20	47	1 2*	< 1*
L _{eff} [µm]	10	6	5	3	2	1,6	1	0,8	0.15	0.06	<0.03
x _j [µm]	2	1	0.8	0.5	0.4	0.35	0.3	0.25	0.10	0.03	<0.02
Masks	5	5	6	710	710	812	1015	1218	<18	<25	~28
Diameter of Si wafer [inch]	2	2	3	4	4	5	6	6	200mm	300mm	300mm

L_{eff} = effective channel (gate) length

* EOT: equivalent oxide thickness

Moore's law:

Degree of integration

 $I = 10^{0.2} (year - 1970) + 2.75$

(I is doubled every 1.5 ... 2 years)


Murphy: **Reduction of costs per device**

 $K_{EE} = K_0 \cdot 10^{-0.2 \text{ (year - 1970)}} - 1.8$







Microprocessor Transistor Counts 1971-2011 & Moore's Law

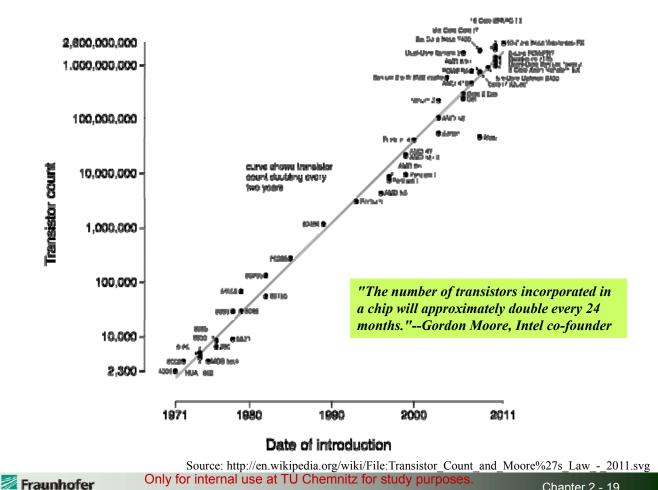

Definition of Pitches

Unauthorized copying and distribution is prohibited

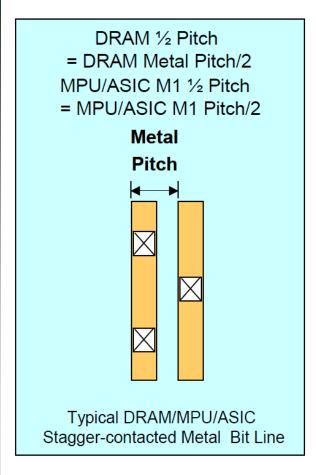

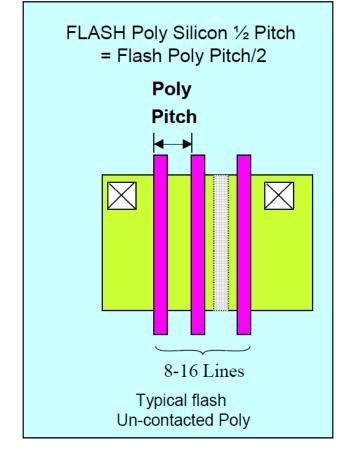







Chapter 2 - 19

DRAM and Flash Memory Half Pitch Trends (2009 ITRS)

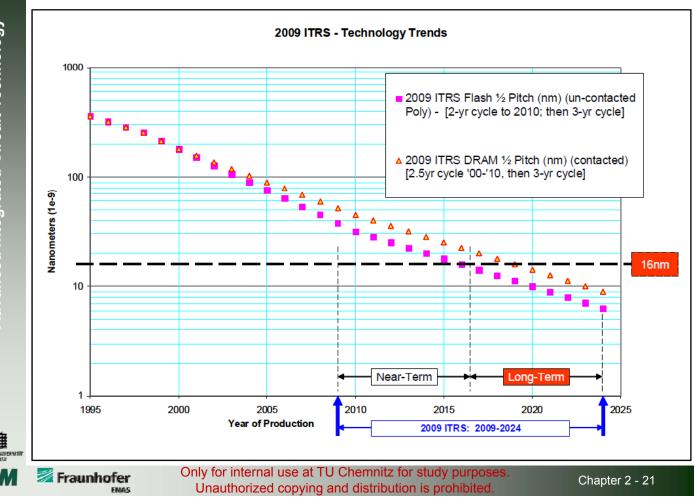

MPU/high-performance ASIC Half Pitch and Gate Length Trends (2009 ITRS)

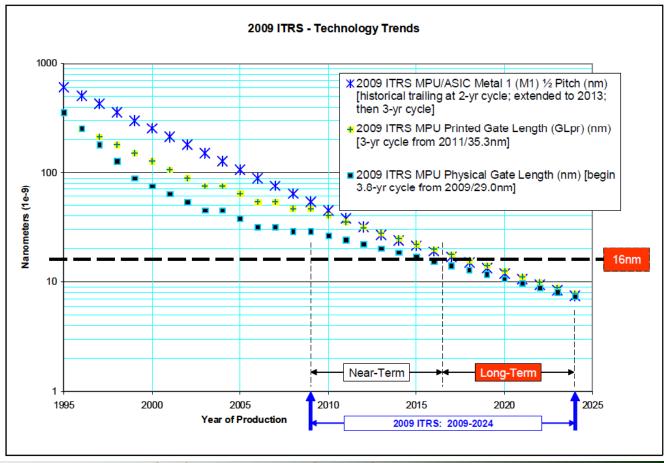





Channel material

> SOI: silicon on insulator (PD: partially depleted; FD: fully depleted) ORTC: Overall Roadmap Technology Characteristics

Only for internal use at TU Chemnitz for study purposes.

Chapter 2 - 23

MuG: Multiple gate

co: company

high µ SiGe


materials

+ III/V High μ

Alternative Channel Mat'ls

2019]





PDSOI

stressors

Unauthorized copying and distribution is prohibited

Trends: ITRS 2005 for DRAM's

	1995	2001	2005	2006	2008	2010	2013
DRAM ½ pitch	350 nm	180 nm	80 nm	70 nm	57 nm	45 nm	32 nm
Gate length		100 nm	32 nm	28 nm	22 nm	18 nm	13 nm
Memory	64 Mb	1 Gb	2 Gb	2 Gb	4 Gb	4 Gb	8 Gb
Cell size			0.051µm	0.039µт	0.026µт	0.016µm	0.008µm
Effective oxide thickness			4.4 nm	4.3 nm	2.8 nm	2.0 nm	1.4 nm
Trench depth at 35 fF			6.2µm	6.8µm	6.7µm	6.1µm	6.0µт
Aspect ratio depth / width			60	75	90	105	145
Capacitor (bottle-shaped trench)	Poly Si / ONO / Si	Poly Si /NO / Si	Poly Si / high-k/Si	Poly Si / high-k/Si	Metal / high-k/Si	Metal / high-k / Si or Metall	Metal / high-k / Metal




Advanced Integrated Circuit Technology

Fraunhofer

DRAM: ½ pitch = Technology Node


ONO & NO: oxynitride

higk-k: metal oxides, e.g. LaO₂/HfO₂

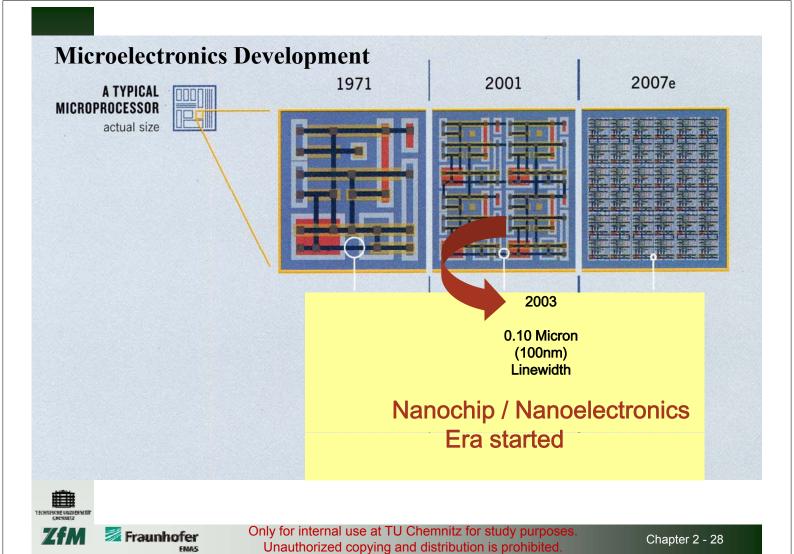


Nanoelectronics road to 2015

More Moore

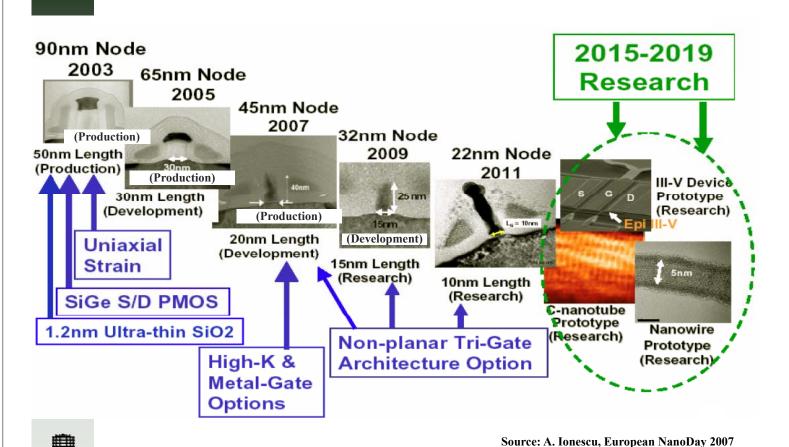







After traditional scaling (CMOS)

No general replacement for CMOS (yet?)!

