
Grove - Vibration Sensor (SW-420) SKU:101020586

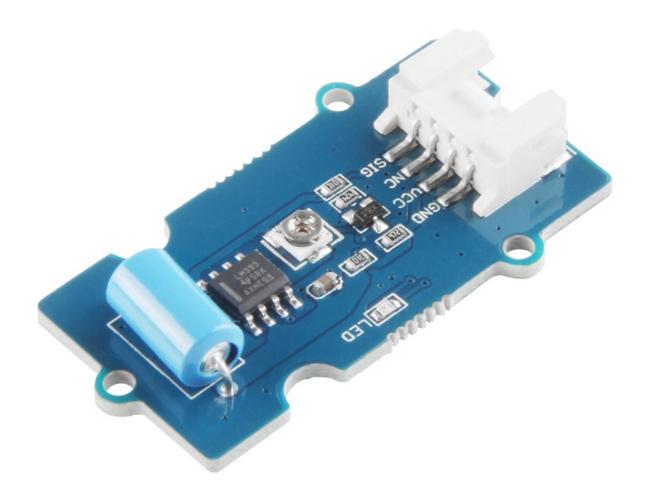

The Grove - Vibration Sensor (SW-420) is a high sensitivity non-directional vibration sensor. When the module is stable, the circuit is turned on and the output is high. When the movement or vibration occurs, the circuit will be briefly disconnected and output low. At the same time, you can also adjust the sensitivity according to your own needs.

All in all, this is a perfect module for vibration or tilt sensor.

Version

Product Version	Changes	Released Date
Grove - Vibration Sensor (SW-420)	Initial	Sep 2018

Features

- Non-directional
- High sensitivity
- Respond to vibration, tilt
- Waterproof
- Compression resistance

Specification


Item	Value
Operating voltage	3.3V / 5V
Interface	Digital
Size	L: 40mm W: 20mm H: 10mm
Weight	4.3g
Package size	L: 140mm W: 85mm H: 10mm
Gross Weight	10g

Applications

- Car, bicycle, motorcycle burglar alarm
- Game control
- Vibration detection


Hardware Overview

Pin Map

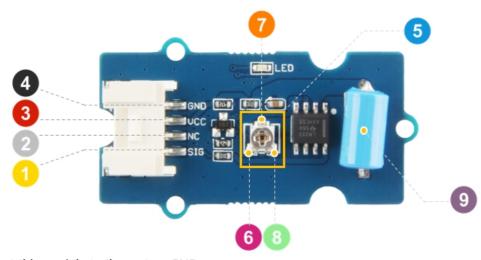

- 4 GND: connect this module to the system GND
- 3 VCC: you can use 5V or 3.3V for this module
- NC: none connected in this module
- SIG: output the Vout voltage signal
- 5 Potentiometer: you can use a screwdriver to rotate the potentiometer which controls the sensitivity of this sensor.
- 6 GND: the GND pin of the potentiometer.
- Vsen: the lower the voltage of Vsen, the higher the sensitivity
- Occ. the VCC pin of the potentiometer.
- SW-420: the Vibration Sensor

Schemaitc

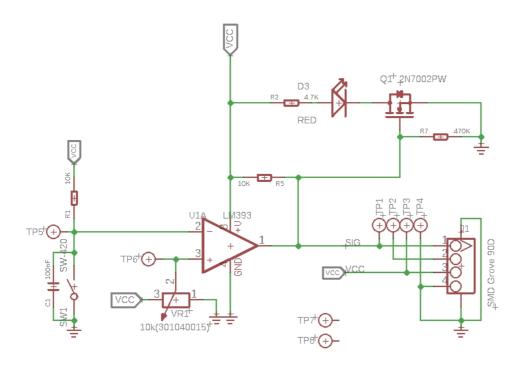

First, let's begin with the **SW1** which at the lower left corner. Actually, the **SW1** is the vibration module **SW-420**. When the module is in a stable state, the module is turned on. **Pin2** of **U1A** is connected to the **GND** though **SW1**.

The VR1 is the potentiometer, the Pin2 of the potentiometer is connected to the Pin3 of the U1A

The **U1A** is a comparators. For the comparators,

 $V_{out} = \left(x \right) + V_- \setminus w \in V_+ > V_- \setminus w \in V_+ < V_- \in S$

V+ connects to Pin3, V- connects to Pin2, V_{out} connects to Pin1.

For the **V+** you can adjust it by rotate the potentiometer, for instance, we can make it \$VCC/2\$.

For the V-, it depends on the SW1(SW-420):

 If this module is in a stable state, the SW1 is turned on, Pin2 of U1A is connected to the GND through SW1. It will be:

 $\$ \left. \begin{array}{|| & V- = 0V \ & V+ = VCC/2 \end{array} \right} V_{out} = High \$\$

• If the module vibrates or tilts, the **SW1** will be turned off, the voltage of **V**- will be pulled up by the **VCC** through R1. Once the **V**- is higher than the VCC/2, then:

 $\$ \left. \begin{array}{I} & V- > VCC/2 \ & V+ = VCC/2 \end{array} \right} V_{out} = Low \$\$

Now you can set the V+ to adjust the sensitivity, just remember: the lower the voltage of V+, the higher the sensitivity

Platforms Supported

Arduino	Raspberry Pi	BeagleBone	Wio	LinkIt ONE
⊙ ⊕	TO DO	TODO	TODO	то во

!!!Caution The platforms mentioned above as supported is/are an indication of the module's software or theoritical compatibility. We only provide software library or code examples for Arduino platform in most cases. It is not possible to provide software library / demo code for all possible MCU platforms. Hence, users have to write their own software library.

Getting Started

Play With Arduino


Hardware

Materials required

Seeeduino V4.2	Base Shield	Grove - Vibration Sensor	Grove - Buzzer
			S and a mode

!!!note **1** Please plug the USB cable gently, otherwise you may damage the port. Please use the USB cable with 4 wires inside, the 2 wires cable can't transfer data. If you are not sure about the wire you have, you can click here to buy. **2** Each Grove module comes with a Grove cable when you buy. In case you lose the Grove cable, you can click here to buy.

- **Step 1.** Connect the Grove Vibration Sensor (SW-420) to the **D2** port of the Base Shield.
- **Step 2.** Connect the Grove Buzzer to the **D3** port of the Base Shield.
- **Step 3.** Plug Grove Base Shield into Seeeduino.
- **Step 4.** Connect Seeeduino to PC via a USB cable.

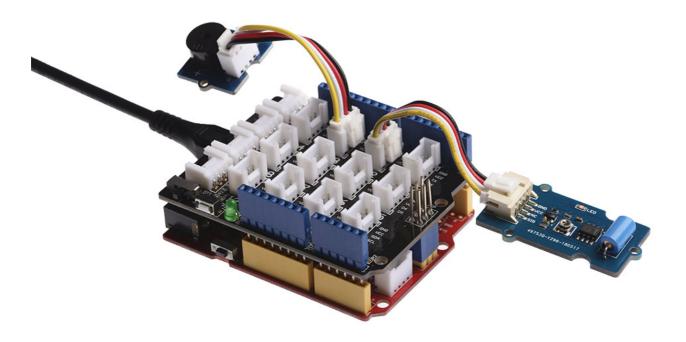

!!!Note If we don't have Grove Base Shield, We also can directly connect this module to Seeeduino as below.

Seeeduino	Grove - Vibration Sensor
5V	Red
GND	Black
NC	White
D2	Yellow
Seeeduino	Grove - Buzzer
Seeeduino 5V	Red
5V	Red

Software

!!!Note If this is the first time you work with Arduino, we strongly recommend you to see Getting Started with Arduino before the start.

• **Step 1.** Open your Arduino IDE, start a new sketch.

• **Step 2.** Copy all the code below, or you can just click the icon in upper right corner of the code block to copy the following code into the new sketch.

```
// constants won't change. They're used here to set pin numbers:
const int buttonPin = 2;  // the number of the pushbutton pin
const int buzzer = 3;
                          // the number of the buzzer pin
// variables will change:
int buttonState = 0;
                       // variable for reading the pushbutton status
void setup() {
  // initialize the LED pin as an output:
  pinMode(buzzer, OUTPUT);
 // initialize the pushbutton pin as an input:
 pinMode(buttonPin, INPUT);
}
void loop() {
  // read the state of the pushbutton value:
  buttonState = digitalRead(buttonPin);
  // check if the pushbutton is pressed. If it is, the buttonState is HIGH:
 if (buttonState == HIGH) {
   // turn LED on:
   digitalWrite(buzzer, LOW);
  } else {
    // turn LED off:
    digitalWrite(buzzer, HIGH);
  }
}
```

• **Step 3.** Upload the demo. If you do not know how to upload the code, please check How to upload code.

!!!success If every thing goes well, everytime you move, shake or tilt the Grove - Vibration Sensor the Grove - buzzer will ring.

Play with Codecraft

Hardware

- **Step 1.** Connect a Grove Vibration Sensor to port D2, and connect a Grove Buzzer to port D3 of a Base Shield.
- **Step 2.** Plug the Base Shield to your Seeeduino/Arduino.
- **Step 3.** Link Seeeduino/Arduino to your PC via an USB cable.

Software

Step 1. Open Codecraft, add Arduino support, and drag a main procedure to working area.

!!!Note If this is your first time using Codecraft, see also Guide for Codecraft using Arduino.

Step 2. Drag blocks as picture below or open the cdc file which can be downloaded at the end of this page.



Upload the program to your Arduino/Seeeduino.

!!!Success When the code finishes uploaded, the buzzer will beep when the vibration sensor detects vibration.

Resources

- [Zip] Grove Vibration Sensor (SW-420) eagle files
- [Codecraft] CDC File

Project

This is the introduction Video of this product, simple demos, you can have a try.

https://www.youtube.com/embed/oFmvKxoZluw?rel=0

Tech Support

Please do not hesitate to submit the issue into our forum.