
# ODE and State Space Control Theory, Lecture 1

by Sergei Savin

Spring 2025

### Role of Control Theory

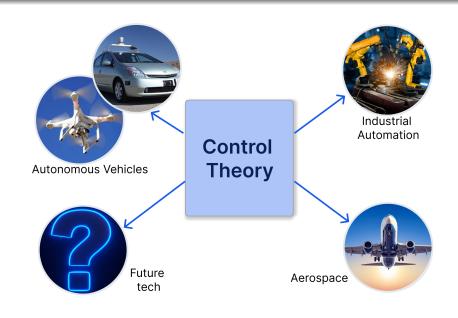

## Role of this course

#### We will learn:

- how to think about objects that we can control;
- what goals we can expect to achieve with control;
- how to control;
- what problems we face when working with control, and how to deal with them.

This is an introductory course, we aim at fulfilling prerequizintes for all advanced courses that need basic control background (Control of Autonomous Vehicles, Nonlinear Control, etc)

### Models

A lot of physical objects that we can control are described by **ODE**s.

We begin this course by learning how to write ODEs in a form immideately useful for control purposes, called **State Space** representation.

# Ordinary differential equations, 1st order

Let us remember the normal form of first-order ordinary differential equations (ODEs):

$$\dot{\mathbf{x}} = \mathbf{f}(\mathbf{x}, t) \tag{1}$$

where  $\mathbf{x} = \mathbf{x}(t)$  is the solution of the equation and t is a free variable (usually - time).

#### Definition

We can call this equation (same as any other ODEs) a  $dynamical\ system$ , and  $\mathbf{x}$  is called the state of the dynamical system.

$$\dot{x} = -2x\tag{2}$$

### STATE

State of a dynamical system is a minimal set of variables that describes the system, in the sense that knowing the current state and all future inputs one can describe the future behavior of the system.

#### Example

For a spring-damper system, the state variables could be position and velocity of the mass.

### Example

For a double pendulum, the state variables could be joint angles and joint velocities.

# ODES, N-TH ORDER

The normal form of an n-th order ordinary differential equation is:

$$y^{(n)} = f(y^{(n-1)}, y^{(n-2)}, \dots, \dot{y}, y, t)$$
(3)

where y = y(t) is the solution of the equation. Same as before, it is a *dynamical system*, but this time we need more variables to describe the state of this system, for example we can use the set  $\{y, \dot{y}, \dots, y^{(n-1)}\}$ .

### Example (Pendulum)

$$\ddot{y} = -0.1\dot{y} - 7\sin(y) \tag{4}$$

### Example (DC motor under constant voltage)

$$\begin{cases} \dot{y}_1 = -100\dot{y}_2 - 2y_1 + 10\\ \ddot{y}_2 = -0.1\dot{y}_2 + 100y_1 \end{cases}$$
 (5)

# LINEAR ODE, 1ST ORDER

A system of linear ODEs of the first order can be written as:

$$\dot{\mathbf{x}} = \mathbf{A}\mathbf{x} \tag{6}$$

#### Example

$$\begin{cases} \dot{x}_1 = -20x_1 + 7x_2 \\ \dot{x}_2 = 10x_1 - 3x_2 \end{cases}$$
 (7)

$$\begin{bmatrix} \dot{x}_1 \\ \dot{x}_2 \end{bmatrix} = \begin{bmatrix} -20 & 7 \\ 10 & -3 \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \end{bmatrix} \tag{8}$$

# LINEAR DIFFERENTIAL EQUATIONS, N-TH ORDER

A single linear ODE of the n-th order is often written in the form:

$$a_n y^{(n)} + \dots + a_2 \ddot{y} + a_1 \dot{y} + a_0 y = 0$$
(9)

#### Example

$$12\ddot{y} + 5\dot{y} + 2y = 0 \tag{10}$$

$$5\ddot{y} - \dot{y} + 10y = 0 \tag{11}$$

# ODEs with an input, 1

Sometimes it is convenient to write an ODE in the form with an *input*, for example:

$$a_2\ddot{y} + a_1\dot{y} + a_0y = u(t) \tag{12}$$

In this equation u(t) is a function of time. This form offers us many uses:

- We can use u(t) to model the *control input*, (e.g. voltage, motor torque) that we directly control.
- We can use u(t) to model external forces acting on the system.
- We can substitute particular function instead of u(t), e.g. a sine wave or a step function, to study how the system behaves under such input.

### FIRST-ORDER ODES WITH AN INPUT

Some examples of linear ODEs with one input:

### Example

$$\begin{cases} \dot{y}_1 = -20y_1 + 7y_2 + u \\ \dot{y}_2 = 10y_1 - y_2 \end{cases}$$
 (13)

$$\begin{bmatrix} \dot{x}_1 \\ \dot{x}_2 \end{bmatrix} = \begin{bmatrix} -20 & 7 \\ 10 & -1 \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \end{bmatrix} + \begin{bmatrix} 1 \\ 0 \end{bmatrix} u \tag{14}$$

## ODE AND STATE-SPACE

General form of an n-th order linear ODE with an input can be presented as follows:

$$a_n y^{(n)} + \dots + a_2 \ddot{y} + a_1 \dot{y} + a_0 y = u(t)$$
 (15)

The state-space representation of a linear system with an input is:

$$\dot{\mathbf{x}} = \mathbf{A}\mathbf{x} + \mathbf{B}\mathbf{u} \tag{16}$$

Note that in (15) u is a scalar, while in (16)  $\mathbf{u}$  can either be a scalar or a vector.

# EQUATIONS WITH AN OUTPUT

Equations can also have an output. What "output" means depends on the particular use-case - it is not a mathematical issue, it is a question of interpretation. For example, an output can mean:

- What we measure (the position and orientation of a quadrotor, angular velocity of a motor's rotor, etc.).
- What we care about and/or what we want to control (the height of a quadrotor, the velocity of a car, etc.)
- etc.

We often denote output as y, and it depends on the state of the system:  $y = g(\mathbf{x})$ 

# EQUATIONS WITH AN OUTPUT

State-space representation of a linear system with an input and an output is:

$$\begin{cases} \dot{\mathbf{x}} = \mathbf{A}\mathbf{x} + \mathbf{B}\mathbf{u} \\ \mathbf{y} = \mathbf{C}\mathbf{x} \end{cases} \tag{17}$$

If  $\mathbf{u} \in \mathbb{R}$  and  $\mathbf{y} \in \mathbb{R}$  (i.e. if they are scalars) and you want to represent the system with an output as a single ODE, it is typical to treat the output as the ODE variable:

$$a_n y^{(n)} + \dots + a_2 \ddot{y} + a_1 \dot{y} + a_0 y = u(t)$$
 (18)

# LINEAR DIFFERENTIAL EQUATIONS

In this course we will focus entirely on linear dynamical systems, expressed as ODEs:

$$a_n y^{(n)} + \dots + a_2 \ddot{y} + a_1 \dot{y} + a_0 y = u(t)$$
 (19)

or in state-space form:

$$\begin{cases} \dot{\mathbf{x}} = \mathbf{A}\mathbf{x} + \mathbf{B}\mathbf{u} \\ \mathbf{y} = \mathbf{C}\mathbf{x} \end{cases}$$
 (20)

If  $\mathbf{u}$  and  $\mathbf{y}$  are scalars, the system is called *single-input* single-output (SISO), if they are vectors - multi-input multi-output (MIMO).

We can always express a SISO system in either form - ODE or state-space.

## ODE TO STATE-SPACE CONVERSION

Consider eq.  $\ddot{y} + a_2\ddot{y} + a_1\dot{y} + a_0y = u$ .

Make a substitution:  $x_1 = y$ ,  $x_2 = \dot{y}$ ,  $x_3 = \ddot{y}$ . We get:

$$\dot{x}_1 = \dot{y} = x_2 \tag{21}$$

$$\dot{x}_2 = \ddot{y} = x_3 \tag{22}$$

$$\dot{x}_3 = \ddot{y} = u - a_2 \ddot{y} - a_1 \dot{y} - a_0 y = u - a_2 x_3 - a_1 x_2 - a_0 x_1 \quad (23)$$

Which can be directly put in the state-space form:

$$\begin{bmatrix} \dot{x}_1 \\ \dot{x}_2 \\ \dot{x}_3 \end{bmatrix} = \begin{bmatrix} 0 & 1 & 0 \\ 0 & 0 & 1 \\ -a_0 & -a_1 & -a_2 \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \\ x_3 \end{bmatrix} + \begin{bmatrix} 0 \\ 0 \\ u \end{bmatrix}$$
 (24)

### LITERATURE

- Nise, N.S. Control systems engineering. John Wiley & Sons. (Chapter 3 Modeling in Time Domain)
- 2.14 Analysis and Design of Feedback Control Systems:
  - ▶ State-Space Representation of LTI Systems
  - ▶ Time-Domain Solution of LTI State Equations
- Linear Physical Systems Analysis:
  - ➤ State Space Representations of Linear Physical Systems lpsa.swarthmore.edu/Representations/SysRepSS.html
  - ➤ Transformation: Differential Equation to State Space lpsa.swarthmore.edu/.../DE2SS.html

Lecture slides are available via Github:

github.com/SergeiSa/Control-Theory-2025



### STATE SPACE TO ODE

Check out the code implementation.

