


#### **DANGER**

All connections are NOT hot plug capable. Please turn off power before removing or plugging in ANY plug!!!

# **BPU-MCXU**

# **Documentation A.1**

**IB Ostendorff** 

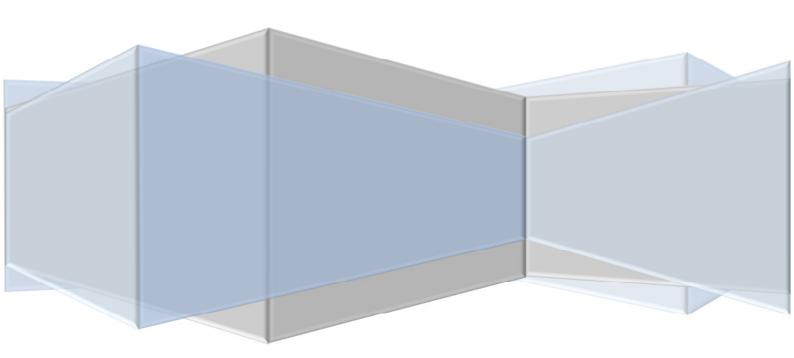

# **Table of content**

1.	Ove	rview	1
	1.1.	How to read	1
	1.2.	BBU	1
	1.3.	MCXU	
_	1.4.	BPU-MCXU	
2.	Ope	ration	
	2.1.	Operation of BBU	
	2.1.1		
	2.1.2		
	2.1.3		
	2.1.4		
	2.2.	Operation of MCXU	7
3.	Tem	plates	8
	3.1.	Directory structure	8
4.	Con	nections	9
	4.1.	GOLDi bus connector	10
	4.2.	Secondary power connector	10
	4.3.	USB	11
	4.4.	BBU 10-pin connector	12
	4.5.	MCXU JP1	
	4.6.	BBU to MCXU internal interface	13
	4.6.1		
	4.6.2		
5.	Elec	tro mechanical physical system connection	14
	5.1.	Elevator (type A – 3 floors)	15
	5.2.	Elevator (type C – 4 floors)	19
	5.3.	Production Cell	22
	5.4.	3-axis portal	
	5.5.	Water level control	
	5.6.	Storage warehouse	31
6	Dow	iniona	2/

# List of figures

Figure 1:	BBU v1_11 (with CBI fitted and empty eXpansion slot)	2
Figure 2:	MCXU v1_00 (top side)	3
Figure 3:	MCXU v1_00 (bottom side)	3
Figure 4:	BPU-MCXU assembly (with CBI and MCXU fitted)	4
Figure 5:	BBU LEDs	5
Figure 6:	BBU DIP and user button	6
Figure 7:	Reset button and power LED (not fitted on this board)	7
Figure 8:	Template structure	8
Figure 9:	BPU-MCXU front view (with empty eXpansion slot)	9
Figure 10:	BPU-MCXU back view (with fitted MCXU on top eXpansion slot)	10
Figure 11:	GOLDi bus connector	10
Figure 12:	2.1mm power connector	11
Figure 13:	Adapter polarity	11
Figure 14:	Mini USB connector	11
Figure 15:	10-pin connector on BBU	12
Figure 16:	6-pin connector on MCXU	12
Figure 17:	3-level elevator electro mechanical physical system	15
Figure 18:	3-level elevator electro mechanical physical system schematic	16
Figure 19:	4-level elevator electro mechanical physical system	19
Figure 20:	Production cell electro mechanical physical system	22
Figure 21:	Production cell electro mechanical physical system schematic	23
Figure 22:	3-axis portal mechanical physical system	26
Figure 23:	3-axis portal mechanical physical system schematic	27
Figure 24:	Storage warehouse mechanical physical system	31

# List of tables

Table 1:	Function of BBU LEDs	5
Table 2:	Function of BBU DIP switches	6
Table 3:	MCXU JP2	13
Table 4:	MCXU JP3	13
Table 5:	3-level elevator sensors	17
Table 6:	3-level elevator actuators	18
Table 7:	4-level elevator sensors	20
Table 8:	4-level elevator actuators	21
Table 9:	Production cell sensors	24
Table 10:	Production cell actuators	25
Table 11:	3-axis portal sensors	28
Table 12:	3-axis portal actuators	29
Table 13:	Storage warehouse sensors	32
Table 14:	Storage warehouse actuators	33

# **Abbreviations**

BBU.....Base Board Unit

BPU .....Bus Protection Unit

BPU-MCXU.......Bus Protection Unit with  $\mu C$  Control eXpansion Unit

GOLDi.....Grid of Online Lab Devices Ilmenau

ISP..... In System Programming

JTAG..... Joint Test Action Group

MCXU.....µC Control eXpansion Unit

# **Explanations**

Symbols mark especially important information.



#### **DANGER**

Please read these sections with extreme caution, to avoid any danger for human beings and the machine.



#### **ATTENTION**

Read these sections carefully to avoid problems while using the device.



#### **INFORMATION**

Read this section for additional information and hints.

#### 1. Overview

This documentation describes the BPU-MCXU.

BPU-MCXU stands for "Bus Protection Unit with  $\mu$ C Control eXpansion". This is a  $\mu$ C-based control unit for the *Grid of Online Lab Devices Ilmenau (GOLDi)*. It consists of the following parts:

- Base Board Unit (BBU) with a CAN Bus Interface (CBI),
- as well as the μC Control eXpansion Unit (MCXU).



All boards are designed for academic and research use as part of the *GOLDi* infrastructure and NOT for any industrial usage.



For feedback, as well as ideas and comments please send an email to goldi@ib-ostendorff.de.

#### 1.1. How to read

This document is for users as well as administrators working with the BPU-MCXU. Therefore not all information is equally relevant for all users.

While users should have a short look at section 1 they should especially read section 3 and section 5. The others section might be skipped.

Administrators should be familiar with the complete document.

#### 1.2. **BBU**

The BBU is used to interface the MCXU to the *GOLDi* infrastructure. It connects the plugged in eXpansion boards, MCXU in this case, via CAN to *GOLDi* bus system. The MCXU has to be plugged in the top eXpansion port of the BBU. See Figure 4 for details.



Figure 1: BBU v1\_11 (with CBI fitted and empty eXpansion slot)

# **1.3.** MCXU

The MCXU is designed to act as a control unit in *GOLDi* infrastructure. It has the standard 85x30mm format to plug into a BBU.

The MCXU Board version 1.00 contains a microcontroller from Atmel. The type is ATMEGA 644A-AU. It runs off a 3,3V power supply and uses an external crystal with 12 MHz.



Figure 2: MCXU v1\_00 (top side)

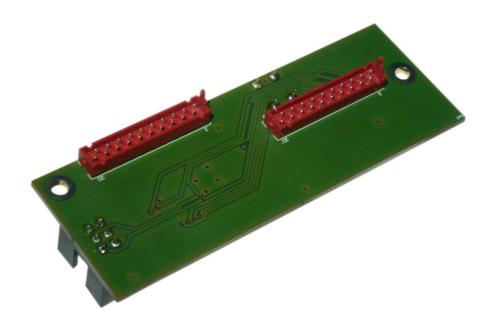


Figure 3: MCXU v1\_00 (bottom side)

# 1.4. BPU-MCXU

The combination of BBU and MCXU together with the right firmware creates the BPU-MCXU.



Figure 4: BPU-MCXU assembly (with CBI and MCXU fitted)

# 2. Operation

The functions described in this section only relate to the combination of MCXU and BBU with the newest firmware for MCXU-BPU.

# 2.1. Operation of BBU

The BBU supplies the following functions relevant for the user.

# 2.1.1. LEDs

The four yellow LEDs on the front side of the BBU have the following functions:

function	mode	LED
no connection to <i>GOLDi</i>	off	1
firmware running	flashing	
MCXU is powered off	off	2
MCXU is powered on	on	
<i>GOLDi</i> bus data traffic		3
GOLDi bus control message traffic		4

**Table 1: Function of BBU LEDs** 



Figure 5: BBU LEDs

The LEDs 1..4 are numbered from left to right.

#### 2.1.2. DIP

The four DIP switches on the front side of the BBU have the following functions:

DIP	mode	
14	0000	normal running mode
14	1111	firmware update mode
14	else	no function defined yet

**Table 2:** Function of BBU DIP switches



Figure 6: BBU DIP and user button

#### 2.1.3. User Button

The user button currently has no functionality. For the location see Figure 6.

#### 2.1.4. Reset

The reset button resets the complete BPU-MCXU. Press at least 1 second to reset device. It takes at least 3 seconds after releasing the button, until BPU-MCXU has been completely reset and is in a safe state again and LED 1 starts flashing.

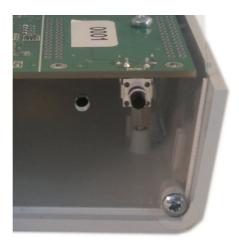


Figure 7: Reset button and power LED (not fitted on this board)

# 2.2. Operation of MCXU

A UART is used for the communication with the BBU. With this interface all sensor and actuator values will be transmitted to the physical system model. Details about the format can be found in the template.



It is recommended to use the templates for the communication with the BBU.

The MCXU relies on the correct firmware running on the BBU. This firmware takes care of programming the controller as well as the data handling and the communication with the *GOLDi* infrastructure and the services running on the *GOLDi* server.



Please make sure to use the correct firmware for the BBU when using the MCXU. The newest firmware can be found at www.ib-ostendorff.de/GOLDi\_firmware or have a look at www.tu-ilmenau.de/GOLDi.

#### 3. Templates

There are templates for the MCXU Board available that contain all important information to use the board for control tasks within the *GOLDi* infrastructure. The user can concentrate on his control task while leaving the handling of the interface to the functions supplied with the template.



Changing code within the interface functions of the template will not damage any hardware or disrupt the functionality of the *GOLDi* infrastructure, but may result in a non-proper working user design.

It is NOT recommended to change any code in the interface functions.

The user is free to program his control algorithm in any way he wants. This can be as automata (like in the template), as some other C-code or even assembler is valid. There are no restrictions to the user.



In most cases to edit the automaton.c and automaton.h files. Changes to other files, especially in the directory interface and the files UART0.c and UART0.h are *NOT* necessary.

Please see www.ib-ostendorff.de/GOLDi\_templates or www.tu-ilmenau.de/GOLDi for templates.

The template project has been created with AVR Studio 6.

# 3.1. Directory structure

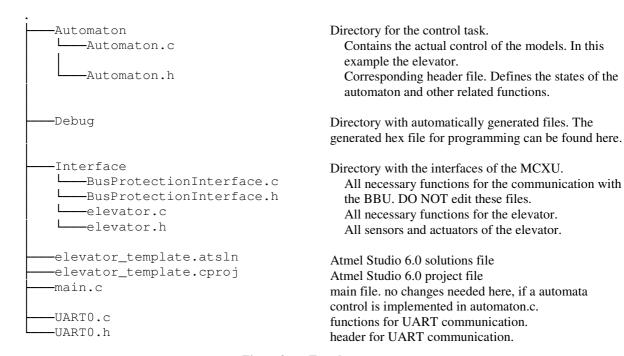


Figure 8: Template structure

#### 4. Connections

There are different interfaces available at the MCXU. They are either 'real' and connect the MCXU to the BBU, or they are 'virtual' and describe how the MCXU can communicate with electro mechanical models connected to the *GOLDi* infrastructure. The 'virtual' connections are described in section 5.



Figure 9: BPU-MCXU front view (with empty eXpansion slot)

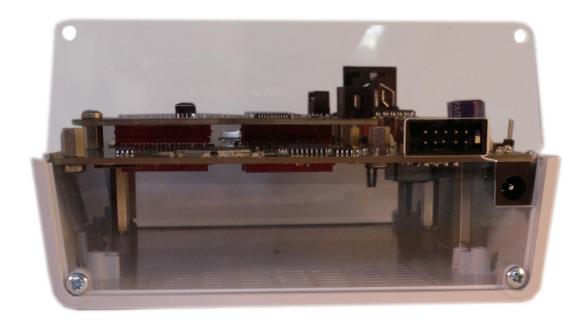


Figure 10: BPU-MCXU back view (with fitted MCXU on top eXpansion slot)

#### 4.1. *GOLDi* bus connector

The *GOLDi* connector is a 6-pin DIN connector that interfaces the BPU-MCXU to the *GOLDi* infrastructure. It is also used as the main power connection for the BBU.



Figure 11: GOLDi bus connector

# 4.2. Secondary power connector

During regular operation within the *GOLDi* infrastructure the power is supplied via the *GOLDi* connector. In some cases it might be useful to supply the BBU with its own power supply. Use a power supply with 24V DC with a minimum of 1 A. See Figure 13 for correct adapter polarity.



Figure 12: 2.1mm power connector



Figure 13: Adapter polarity

#### **4.3.** USB

The BBU has a mini USB connector for maintenance (e.g. firmware updates) and stand-alone use. A FTDI 2232HL is used to enable the reprogramming of the BBU.



Figure 14: Mini USB connector



Only use the BBU programming tool supplied for any reprogramming to avoid damage to the hardware.

# 4.4. BBU 10-pin connector

On a BPU-MCXU the 10-pin connector on the back side of the BBU has no functionality.



Figure 15: 10-pin connector on BBU

# **4.5.** MCXU JP1

6 pin connector for ISP. This is for development only.



Figure 16: 6-pin connector on MCXU

# 4.6. BBU to MCXU internal interface

The internal interface connection to the BBU is as follows.

# 4.6.1. MCXU JP2

Connection	Pin number	Pin number	Connection
Port C7	1	2	Port C6
TDI	3	4	TDO
TMS	5	6	TCK
I2C SDA	7	8	I2C SCL
Port D7	9	10	Port D6
Port D5	11	12	Port D4
TXD1	13	14	RXD1
TXD0	15	16	RXD0
GND	17	18	+3,3V
GND	19	20	+24V

Table 3: MCXU JP2

# 4.6.2. MCXU JP3

Connection	Pin number	Pin number	Connection
MOSI	1	2	Port A0
nRESET	3	4	Port A1
SCK	5	6	Port A2
MISO	7	8	Port A3
Port B1	9	10	Port A4
Port B2	11	12	Port A5
Port B3	13	14	Port A6
Port B0	15	16	Port A7
GND	17	18	+3,3V
GND	19	20	+24V

Table 4: MCXU JP3

## 5. Electro mechanical physical system connection

The virtual external interface connects the microcontroller to different electro mechanical physical systems within the *GOLDi* infrastructure. The actual connection depends on the models and the firmware used.

The connections are defined as structs in the file <model>.h (e.g. elevator4flours.h or productioncell.h). There is one struct for actuators and one for sensors. All actuators and sensors are one bit only, if not specified otherwise.



If you use a different electro mechanical physical system, please contact goldi@ib-ostendorff.de for assistance.

#### 5.1. Elevator (type A - 3 floors)

There are different elevator models available. This one describes the larger model with 3 floors.

The elevator consists of a cage with counterweights, a pit and three floor units, each one containing a pneumatic driven sliding door, call buttons and colored control lamps to indicate the moving direction of the cage. In addition to this there is a control panel, realizing the operating options from inside the cage. In essence, these are selection buttons to choose a floor, an alarm button, an emergency stop and the ability to choose a mode of operation, where the lift is controlled exclusively from outside the cage. The simulated process shows the elevator being brought from a basic position to one of the floors, by operating the control panel or one of the call buttons, and after opening and closing the sliding door being ready for the next sequence: After operation one of the call buttons, indicated by a signal lamp, the cage is brought in a slow-fast-slow-movement, being controlled by mechanical switches depending on the distance, to the chosen floor. The sliding door gets opened and remains open, until the programmed loading time is over. A one way light barrier controls the entrance to prevent, in a real case persons or things that are in the danger zone of the door, from getting hurt. After closing the sliding door, the cage gets moved to the next chosen floor, where the sequence of opening and closing the sliding door occurs in the same manner. A miniature compressor for the pneumatic driven sliding doors is integrated in the model.



Figure 17: 3-level elevator electro mechanical physical system

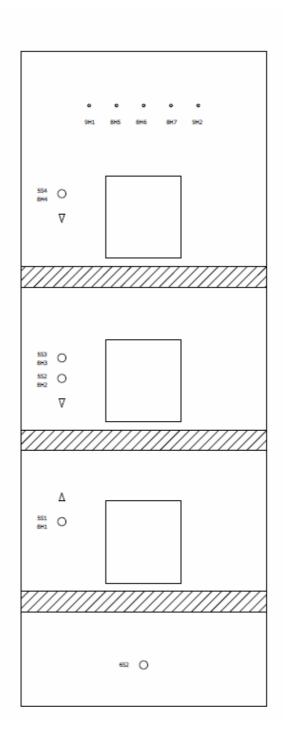


Figure 18: 3-level elevator electro mechanical physical system schematic

Var	Name	Function
x0	not defined yet	cabin pos. ground floor
x1	not defined yet	cabin pos. 1. floor
x2	not defined yet	cabin pos. 1. floor
хЗ	not defined yet	switchover slow ground floor
x4	not defined yet	switchover slow 1. floor from the bottom
x5	not defined yet	switchover slow 1. floor from the top
x6	not defined yet	switchover slow 2. floor
x7	not defined yet	door ground floor open
x8	not defined yet	door ground floor closed
x9	not defined yet	door 1. floor open
x10	not defined yet	door 1. floor closed
x11	not defined yet	door 2. floor open
x12	not defined yet	door 2. floor closed
x13	not defined yet	light barrier ground floor
x14	not defined yet	light barrier 1. floor
x15	not defined yet	light barrier 2. floor
x16	not defined yet	call button ground floor
x17	not defined yet	call button 1. floor downward
x18	not defined yet	call button 1. floor upstairs
x19	not defined yet	call button 2. floor
x20	not defined yet	<pre>call button ground floor (operator panel)</pre>
x21	not defined yet	<pre>call button 1. floor (operator panel)</pre>
x22	not defined yet	call button 2. floor (operator panel)
x23	not defined yet	alert (operator panel)
x24	not defined yet	emergency stop (operator panel)
x25	not defined yet	Simulation overload

**Table 5:** 3-level elevator sensors

Var	Name	Function
у0	not defined yet	cabin to Z+
y1	not defined yet	cabin to Z-
у2	not defined yet	cabin slow
уЗ	not defined yet	to open door ground floor
у4	not defined yet	to close door ground floor
у5	not defined yet	to open door 1. floor
у6	not defined yet	to close door 1. floor
у7	not defined yet	to open door 2. floor
У8	not defined yet	to close door 2. floor
у9	not defined yet	call display ground floor
у10	not defined yet	call display 1. floor upstairs
y11	not defined yet	call display 1. floor downward
y12	not defined yet	call display 2. floor
у13	not defined yet	indicator display ground floor
y14	not defined yet	indicator display 1. floor
y15	not defined yet	indicator display 2. floor
у16	not defined yet	drive direction display downward
y17	not defined yet	drive direction display upstairs
y18	not defined yet	call display ground floor LED (operator panel)
y19	not defined yet	call display 1. floor LED (operator panel)
у20	not defined yet	call display 2. floor LED (operator panel)
y21	not defined yet	alert LED (operator panel)
у22	not defined yet	emergency stop LED (operator panel)
у23	not defined yet	overload LED (operator panel)

**Table 6: 3-level elevator actuators** 

# **5.2.** Elevator (type C – 4 floors)

There are different elevator models available. This one describes the larger model with 4 floors.

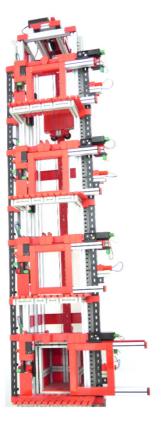


Figure 19: 4-level elevator electro mechanical physical system

Var	Name	Function
x0	elevator_sens_call1_up	call elevator to go up on 1st
		floor
x1	elevator_sens_call2_down	call elevator to go down on 2 <sup>nd</sup>
		floor
x2	elevator_sens_call2_up	call elevator to go up on 2 <sup>nd</sup> floor
x3	elevator sens call3 down	call elevator to go down on 3 <sup>rd</sup>
AS	cicvacor_scns_carrs_down	floor
x4	elevator_sens_call3_up	call elevator to go up on 3 <sup>rd</sup>
		floor
x5	elevator_sens_call4_down	call elevator to go down on 2 <sup>nd</sup>
		floor
x6	elevator_sens_cab_F1	cabin is on 1 <sup>st</sup> floor
x7	elevator_sens_cab_F2	cabin is on 2 <sup>nd</sup> floor
x8	elevator_sens_cab_F3	cabin is on 3 <sup>rd</sup> floor
x9	elevator_sens_cab_F4	cabin is on 4 <sup>th</sup> floor
x10	elevator_sens_cab_above_F1	cabin is close above 1 <sup>st</sup> floor
x11	elevator_sens_cab_above_F2	cabin is close above 2 <sup>nd</sup> floor
x12	elevator_sens_cab_above_F3	cabin is close above 3 <sup>rd</sup> floor
x13	elevator_sens_cab_below_F2	cabin is close below 1 <sup>st</sup> floor
x14	elevator_sens_cab_below_F3	cabin is close below 2 <sup>nd</sup> floor
x15	elevator_sens_cab_below_F4	cabin is close below 3 <sup>rd</sup> floor
x16	elevator_sens_cab_F1	1 <sup>st</sup> floor selected in cabin 2 <sup>nd</sup> floor selected in cabin
x17 x18	elevator_sens_cab_F2	3 <sup>rd</sup> floor selected in cabin
x19	elevator_sens_cab_F3 elevator_sens_cab_F4	4 <sup>th</sup> floor selected in cabin
x20	elevator sens cab alarm	alarm triggered
x21	elevator_sens_cab_emerg	emergency triggered
x22	elevator sens door F1 free	door on 1 <sup>st</sup> floor is not blocked
x23	elevator_sens_door_F1_closed	
x24	elevator_sens_door_F1_opened	door on 1 <sup>st</sup> floor is opened
x25	elevator_sens_door_F2_free	door on 2 <sup>nd</sup> floor is not blocked
x26	elevator_sens_door_F2_closed	door on 2 <sup>nd</sup> floor is closed
x27	elevator_sens_door_F2_opened	door on 2 <sup>nd</sup> floor is opened
x28	elevator_sens_door_F3_free	door on 3 <sup>rd</sup> floor is not blocked
x29	elevator_sens_door_F3_closed	door on 3 <sup>rd</sup> floor is closed
x30	elevator_sens_door_F3_opened	door on 3 <sup>rd</sup> floor is opened
x31	elevator_sens_door_F4_free	door on 4 <sup>th</sup> floor is not blocked
x32	elevator_sens_door_F4_closed	door on 4 <sup>th</sup> floor is closed
x33	elevator_sens_door_F4_opened	door on 4 <sup>th</sup> floor is opened
x34	elevator_sens_overload	overload detected

**Table 7:** 4-level elevator sensors

Var	Name	Function
у0	elevator_act_cab_down	move cabin downwards
у1	elevator_act_cab_up	move cabin upwards
у2	elevator_act_cab_slow	move cabin slowly
у3	elevator_act_LED1_up	indicate request for cabin going up on $1^{\rm st}$ floor
у4	elevator_act_LED1_red	red indicator showing cabin is coming down to $1^{\rm st}$ floor
у5	elevator_act_LED2_down	indicate request for cabin going down on 2 <sup>nd</sup> floor
у6	elevator_act_LED2_up	indicate request for cabin going up on 3 <sup>rd</sup> floor
у7	elevator_act_LED2_green	green indicator showing cabin is coming up to 2 <sup>nd</sup> floor
У8	elevator_act_LED2_red	red indicator showing cabin is coming down to 2 <sup>nd</sup> floor
у9	elevator_act_LED3_down	indicate request for cabin going down on 3 <sup>rd</sup> floor
y10	elevator_act_LED3_up	indicate request for cabin going up on 3 <sup>rd</sup> floor
y11	elevator_act_LED3_green	green indicator showing cabin is coming up to $3^{\rm rd}$ floor
y12	elevator_act_LED3_red	red indicator showing cabin is coming down to 3 <sup>rd</sup> floor
y13	elevator_act_LED4_down	indicate request for cabin going down on $4^{\rm th}$ floor
y14	elevator_act_LED4_green	green indicator showing cabin is coming up to $4^{\rm th}$ floor
y15	elevator_act_cab_LED_F1	indicate cabin is on 1 <sup>st</sup> floor
у16	elevator_act_cab_LED_F2	indicate cabin is on 2 <sup>nd</sup> floor
y17	elevator_act_cab_LED_F3	indicate cabin is on 3 <sup>rd</sup> floor
у18	elevator_act_cab_LED_F4	indicate cabin is on 4 <sup>th</sup> floor
у19	elevator_act_cab_LED_emerg	indicate emergency button pushed
у20	elevator_act_cab_LED_overlo	indicate overload situation of cabin
y21	elevator_act_door1_open	open door on 1 <sup>st</sup> floor
у22	elevator_act_door1_close	close door on 1 <sup>st</sup> floor
у23	elevator_act_door2_open	open door on 2 <sup>nd</sup> floor
y24	elevator_act_door2_close	close door on 2 <sup>nd</sup> floor
y25	elevator_act_door3_open	open door on 3 <sup>rd</sup> floor
у26	elevator_act_door3_close	close door on 3 <sup>rd</sup> floor
у27	elevator_act_door4_open	open door on 4 <sup>th</sup> floor
y28	elevator_act_door4_close	close door on 4 <sup>th</sup> floor

**Table 8:** 4-level elevator actuators

#### **5.3. Production Cell**

The model process cell simulates a process cell with an integrated circular store, as used for example in industrial metal cutting processes. The process cell consists of a rail leaded carriage with a conveyor belt, two slewing tables with conveyor chains, a vertical milling machine and three conveyor belts. The different means of transport are arranged in a closed circuit. Mechanical switches control the end positions of the moveable conveying units and inductive proximity switches check positions of parts. The simulated process shows a part being brought into the circular store, then being clockwise transported to the vertical milling machine, where it gets machined, and finally being brought out to a discharge station. The unmachined part is laid onto the conveyor belt and is brought to the rail leaded carriage. The carriage brings it to the next conveyor belt. There the part is transported to the slewing table, which executes a 90°-turn (+C-direction) to bring the part to the next conveyor belt. This conveyor belt transports it to the milling machine. The upright housing executes a motion along its – Y-direction to draw near the part. The spindle starts rotating and gets moved along its –Z-direction to intimate a machining sequence. After finishing this sequence, the upright housing and the spindle are brought back to their starting position and the machined part is conveyed to the second slewing table that brings it back again onto the first conveyor belt, ready to be withdrawn.

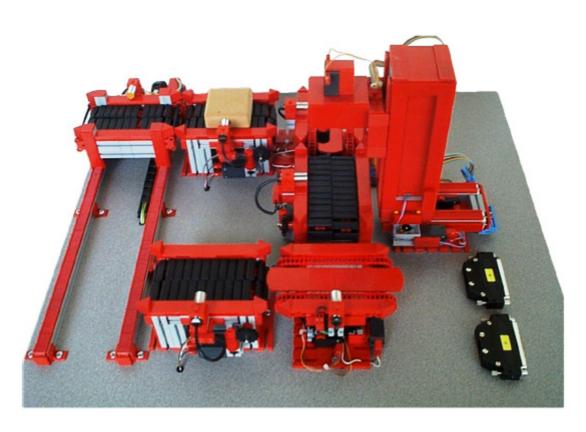


Figure 20: Production cell electro mechanical physical system

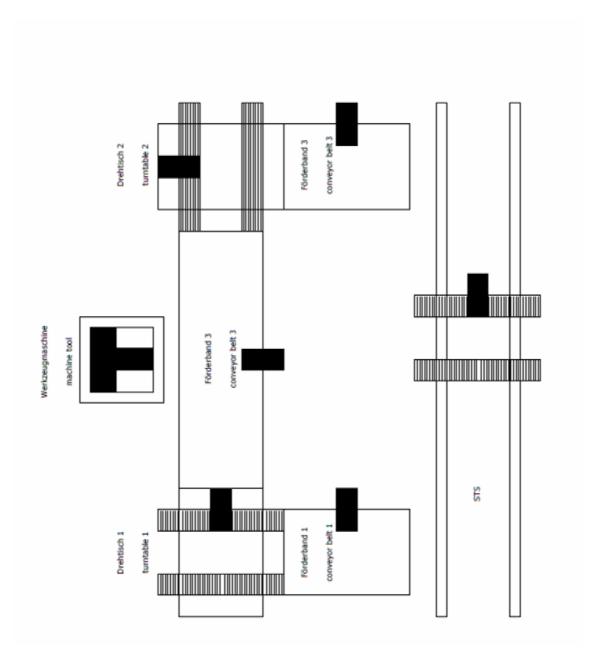


Figure 21: Production cell electro mechanical physical system schematic

Var	Name	Function
x0	not yet defined	<pre>Transport_table_in_line_with_con veyor_belt_3_LOW_ACTIVE</pre>
x1	not yet defined	Transport_table_in_line_with_con veyor_belt_1_LOW_ACTIVE
x2	not yet defined	<pre>Transport_table_workpiece_availa ble</pre>
х3	not yet defined	Conveyor_belt_1_workpiece_availa ble
x4	not yet defined	Turntable_1_in_line_with_conveyor_belt_1_LOW_ACTIVE
x5	not yet defined	Turntable_1_in_line_with_conveyor_belt_2_LOW_ACTIVE
x6	not yet defined	Turntable_1_workpiece_available
x7	not yet defined	Conveyor_belt_2_workpiece_availa ble
x8	not yet defined	Turntable_2_in_line_with_conveyor_belt_2_LOW_ACTIVE
x9	not yet defined	Turntable_2_in_line_with_conveyor_belt_3_LOW_ACTIVE
x10	not yet defined	Turntable_2_workpiece_available
x11	not yet defined	Conveyor_belt_3_workpiece_availa ble
x12	not yet defined	Milling_machine_away_from_convey or_belt_2_LOW_ACTIVE
x13	not yet defined	Milling_machine_at_conveyor_belt _2_LOW_ACTIVE
x14	not yet defined	Milling_head_is_up_LOW_ACTIVE
x15	not yet defined	Milling_head_is_down_LOW_ACTIVE
x16	not yet defined	Emergency_Stop

**Table 9:** Production cell sensors

# Electro mechanical physical system connection

Var	Name	Function
У0	not yet defined	Transport_table_move_to_conveyor _belt_3
у1	not yet defined	<pre>Transport_table_move_to_conveyor _belt_1</pre>
у2	not yet defined	Transport_table_drive_conveyor_b elt_similar_to_conveyor_belt_1
у3	not yet defined	<pre>Transport_table_drive_conveyor_b elt_similar_to_conveyor_belt_3</pre>
у4	not yet defined	Conveyor_belt_1_drive_belt
у5	not yet defined	<pre>Turntable_1_rotate_to_conveyor_b elt_1</pre>
у6	not yet defined	<pre>Turntable_1_rotate_to_conveyor_b elt_2</pre>
у7	not yet defined	Turntable_1_drive_belt
У8	not yet defined	Conveyor_belt_2_drive_belt
у9	not yet defined	<pre>Turntable_2_rotate_to_conveyor_b elt_2</pre>
у10	not yet defined	<pre>Turntable_2_rotate_to_conveyor_b elt_3</pre>
y11	not yet defined	Turntable_2_drive_belt
y12	not yet defined	Conveyor_belt_3_drive_belt
y13	not yet defined	<pre>Milling_machine_retreat_from_con veyor_belt_2</pre>
у14	not yet defined	Milling_machine_approach_conveyo r_belt_2
y15	not yet defined	Milling_head_rise
у16	not yet defined	Milling_head_lower
y17	not yet defined	Milling_head_drive_head

**Table 10:** Production cell actuators

#### 5.4. 3-axis portal

The model 3-axis-portal simulates a stationary used handling robot with an orthogonal work space used for passing on work pieces to processing or sorting unit, as used e. g. in factories being automated in a large degree. The model consists of the portal robot that is able to move in three linear directions and an electromagnetic gripper, fit to be moved in Z-direction, a piece store and a discharge station. The end positions of the several moving parts are each recognized by software end position switches. The simulated process shows metal work pieces being withdrawn from the store by the electromagnetic gripper, being moved to the discharge station and there getting put down: At the beginning of the sequence the moving parts of the robot execute a reference tour, in order to equalize the incremental distance measuring systems of the X- and Y-axes with their real positions. The reference tour is done with the gripper being in its upper end position. After this, the gripper is moved in X- and Y-direction until it has reached its demanded position above the piece store. The gripper moves in -Z-direction until it touches the work piece. The magnet gets switched on and the part is attached to the gripper. The gripper moves in +Z-direction until it has again reached its upper end position. Following this, it executes a movement in X- and Y-direction until it has reached a position above the discharge station. Having reached this state, the gripper again moves in -Z-direction until the attached piece is put on the discharge station, where it gets recognized by an inductive proximity switch. The work piece is withdrawn by deactivating the electromagnetic gripper. In order to save the whole unit from being damaged by moving out of the allowed work space, caused by a mistake in programming the control unit, the linear directions are supplementary equipped with hardware end position switches, which cause an immediately stop of the corresponding axis in case of being actuated. The electronic concept of the model only enables a restarting of the robot by executing a movement towards the work space.



Figure 22: 3-axis portal mechanical physical system

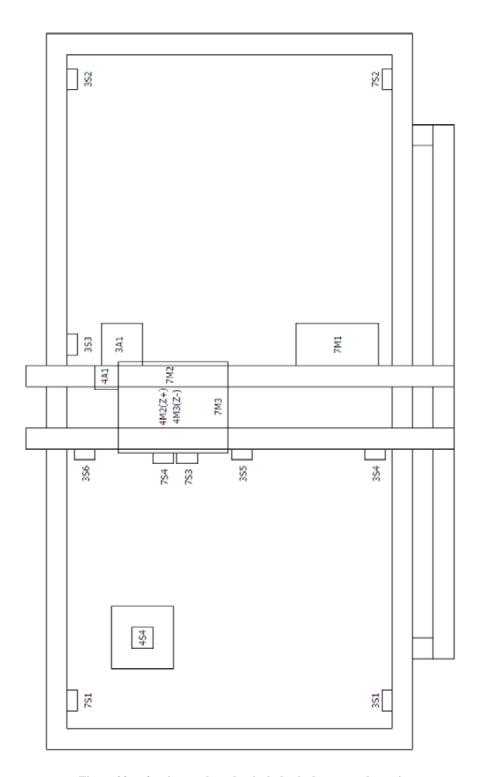


Figure 23: 3-axis portal mechanical physical system schematic

Var	Name		Function
x0	not ye	et defined	x_axis_at_position_x_minus
x1	not ye	et defined	x_axis_at_position_x_plus
x2	not ye	et defined	x_axis_reference_position
хЗ	not ye	et defined	y_axis_at_position_y_minus
x4	not ye	et defined	y_axis_at_position_y_plus
x5	not ye	et defined	y_axis_reference_position
x6	not ye	et defined	z_axis_at_position_z_plus
x7	not ye	et defined	z_axis_at_position_z_minus
x8	not ye	et defined	proximity_switch
x9	not ye	et defined	start_button
x10	not ye	et defined	abs_position_x_15
x11	not ye	et defined	abs_position_x_14
x12	not ye	et defined	abs_position_x_13
x13	not ye	et defined	abs_position_x_12
x14	not ye	et defined	abs_position_x_11
x15	not ye	et defined	abs_position_x_10
x16	not ye	et defined	abs_position_x_09
x17	not ye	et defined	abs_position_x_08
x18	not ye	et defined	abs_position_x_07
x19	_	et defined	abs_position_x_06
x20		et defined	abs_position_x_05
x21	not ye	et defined	abs_position_x_04
x22	not ye	et defined	abs_position_x_03
x23	not ye	et defined	abs_position_x_02
x24	not ye	et defined	abs_position_x_01
x25	not ye	et defined	abs_position_x_00
x26		et defined	abs_position_y_15
x27		et defined	abs_position_y_14
x28	-	et defined	abs_position_y_13
x29	_	et defined	abs_position_y_12
x30		et defined	abs_position_y_11
x31		et defined	abs_position_y_10
x32		et defined	abs_position_y_09
x33		et defined	abs_position_y_08
x34		et defined	abs_position_y_07
x35		et defined	abs_position_y_06
x36		et defined	abs_position_y_05
x37		et defined	abs_position_y_04
x38		et defined	abs_position_y_03
x39		et defined	abs_position_y_02
x40		et defined	abs_position_y_01
x41	not ye	et defined	abs_position_y_00

Table 11: 3-axis portal sensors

# Electro mechanical physical system connection

Var	Name	Function	
у0	not yet defined	x_axis_to_x_minus	
у1	not yet defined	x_axis_to_x_plus	
у2	not yet defined	y_axis_to_y_minus	
у3	not yet defined	y_axis_to_y_plus	
у4	not yet defined	z_axis_to_z_plus	
у5	not yet defined	z_axis_to_z_minus	
v 6	not yet defined	magnet	

 Table 12:
 3-axis portal actuators

# 5.5. Water level control

Coming soon...

#### **5.6.** Storage warehouse

The High Level Storage Warehouse simulates an automatically working high-level-storage system as used for example in many industrial branches. The model consists of a rack, being divided up in 5 x 10 storage places, a warehouse operating device, being portable in X-direction, and two charge / discharge stations. A cage being portable in Z-direction and including a telescopic palette carrier, that is portable in Y-direction, is attached to the warehouse operating device. The simulated process shows palettes being stored and withdrawn from the high-level storage: In case of one charge station being occupied by a palette, the telescopic palette carrier moves to the station and takes over the palette. This is recognized by a reflection light switch. Following this, the warehouse operating device brings the palette to the intended storage place in an optimized manner by moving in X- and Z-direction at the same time. Occupying a storage place is recognized by software. In order to enable a quick movement to the storage place on the one hand and a safe lay-in-movement on the other hand, the horizontal rack positions are equipped with advanced mechanical switches that allow retarding the warehouse operating device before reaching the intended position. Withdrawing palettes occurs in the same manner, done in inverse chronological order. In cause of bolting the Y-axes against the two others moving the palette carrier in X- and Z-direction is only possible, if the palette carrier is in its middle position. Moreover, the X-axes is equipped with a hardware end position switch to prevent the whole warehouse system from fatal mistakes in using the conveyor or programming the control unit. The High-level-storage warehouse is fit to be combined with further modules and standard models in order to automate the periphery of the warehouse.

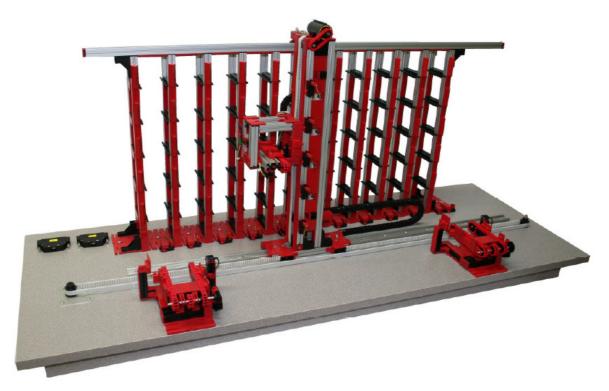


Figure 24: Storage warehouse electro mechanical physical system

Var	Name Function		
x0	not yet	defined	
x1	not yet	defined	
x2	not yet	defined	
х3	not yet	defined	
x4	not yet	defined	
x5	not yet	defined	
x6	not yet	defined	
x7	not yet	defined	
x8	not yet	defined	
x9	not yet	defined	
x10	not yet	defined	
x11	not yet	defined	
x12	not yet	defined	
x13	not yet	defined	
x14	not yet	defined	
x15	not yet	defined	
x16		defined	
x17		defined	
x18		defined	
x19	not yet	defined	
x20	not yet	defined	
x21	-	defined	
x22		defined	
x23	_	defined	
x24		defined	
x25		defined	
x26		defined	
x27		defined	
x28		defined	
x29		defined	
x30		defined	
x31		defined	
x32		defined	
x33	_	defined	
x34	not yet	defined	

**Table 13:** Storage warehouse sensors

Var	Name Fu	nction
у0	not yet defined	
y1	not yet defined	
у2	not yet defined	
уЗ	not yet defined	
у4	not yet defined	
у5	not yet defined	
уб	not yet defined	
у7	not yet defined	
λ8	not yet defined	
у9	not yet defined	
у10	not yet defined	
y11	not yet defined	
y12	not yet defined	
y13	not yet defined	
у14	not yet defined	
y15	not yet defined	
у16	not yet defined	
y17	not yet defined	
у18	not yet defined	
y19	not yet defined	
y20	not yet defined	
y21	not yet defined	
y22	not yet defined	
y23	not yet defined	
y24	not yet defined	
y25	not yet defined	
у26	not yet defined	
у27	not yet defined	
y28	not yet defined	

**Table 14:** Storage warehouse actuators

#### Revisions

# 6. Revisions

A.0	21.03.2014	First version of documentation.
A.1	23.01.2015	Minor corrections. Added pictures and more model descriptions.