


Date: 21/02/2021

Student's name	Anuj Shah	
Roll Number	18104B0024	
Name of	Professor Mohit Gujar	
Professor		

Experiment	3
number	
Experiment title	Interfacing of LED's with 8051 ports
Hardware	_
requirement	
Software	Keil uVision5
requirement	

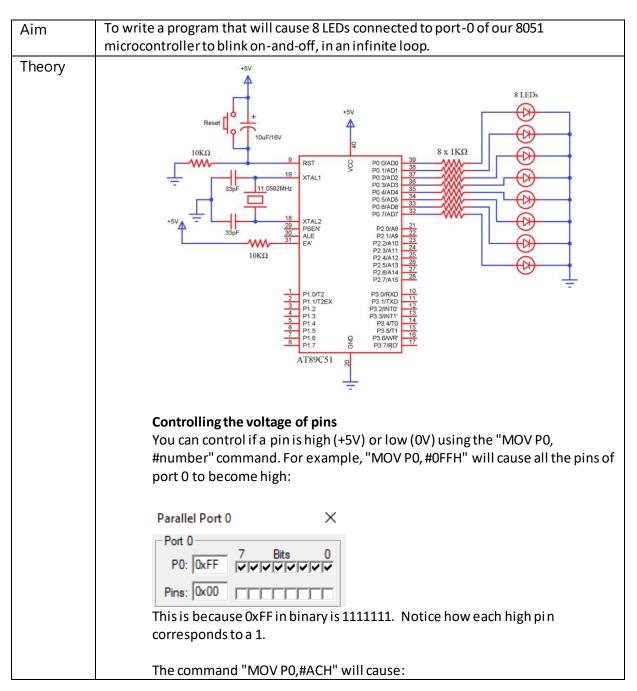

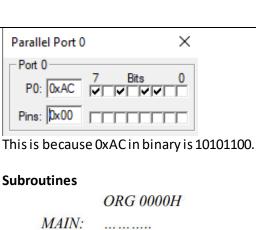

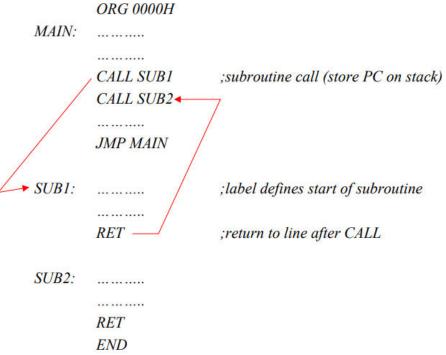

A subroutine is always executed with the ACALL instruction

- When the ACALL instruction is executed, the PC register contains the address of the next instruction to be executed
- The PC is saved onto the stack low byte first
- The PC is then loaded with the address of the subroutine
- The subroutine is then executed

The last line of a subroutine is always the RET instruction

- The RET instruction will cause the return address to be popped off the stack and loaded into the PC
- The instruction at the return address is then executed

#### Source:

http://www.polyengineeringtutor.com/8051%20Assembly%20Programming.pdf

# Algorithm / Flowchart

#### **MAIN** routine:

- 1. The instruction "MOV P0,#0FFH" causes all the pins of port 0 to become activated. Physically, this means that all the LEDs will turn on.
- 2. "ACALL DELAY" calls the DELAY subroutine, producing a delay of around 1/10th of a second.
- 3. The instruction "MOV P0,#00H" causes all the pins of port 0 to become disactivated. Physically, this means that all the LEDs will turn off.
- 4. "ACALL DELAY" calls the DELAY subroutine, again producing a delay of

around 1/10th of a second.

5. "JMP MAIN" causes the whole MAIN routine to be executed again.

Thus, we see that the MAIN routine produces an infinite loop, in which all the LEDs are on for 0.1 seconds, and then they are off for 0.1 seconds. We thus get a blinking effect.

### **DELAY** subroutine:


- 1. The instruction "MOV R2,#0FFH" causes the hex number 0xFF (decimal = 255) to be loaded into register R2.
- 2. The instruction "MOV R1,#0FFH" causes the hex number 0xFF (decimal = 255) to be loaded into register R1.
- 3. The instruction "DJNZ R1,L1" decrements register R1 (eg. 0xFF to 0xFE), and as long as R1 doesn't become 0x00, it will keep jumping back to this step.
- 4. The instruction "DJNZ R2,L2" decrements register R2 (eg. 0xFF to 0xFE), and as long as R2 doesn't become 0x00, it will jump to step 2.
- 5. The "RET" statement let's us leave the DELAY subroutine, and go back to the MAIN routine.

The delay subroutine is a nested loop. Both L1 (the inner loop) and L2 (the outer loop) are executed 255 (FF) times. Because each machine cycle is approximately 1 microsecond, and because a DJNZ instruction requires 2 machine cycles, we thus get a total delay of approximately:

(2\*255\*255)\*1 microsecond = 130050 micrseconds ~ 130 milliseconds = 0.13 seconds ~ 1/10th of a second

## Program

exp3.asm				
1		ORG 0000H		
2				
3	MAIN:	MOV PO,#0FFH		
4		ACALL DELAY		
5		MOV PO,#00H		
6		ACALL DELAY		
7		JMP MAIN		
8				
9	DELAY:	MOV R2,#0FFH		
10	L2:	MOV R1,#0FFH		
11	L1:	DJNZ R1,L1		
12		DJNZ R2,L2		
13		RET		
14				
15		END		

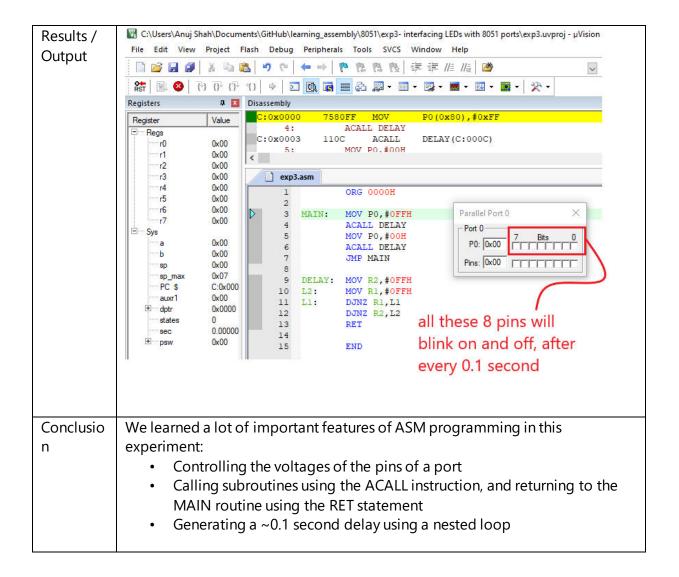

Faculty Sign

Grade received