
1 Schematic View of Filter

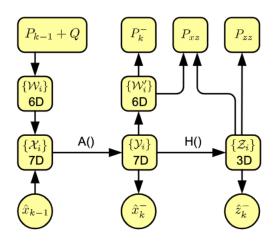

2 State Vector x

 $x \in \mathcal{R}^7$ combines orientation q and angular velocity ω , $x = \begin{pmatrix} q \\ \omega \end{pmatrix}$ where q is a unit quaternion, i.e. $q = (q_0, q_1, q_2, q_3)$. $\omega = (\omega_x, \omega_y, \omega_z)$.

3 Process Model A

 $x_{k+1} = A(x_k, w_k)$ where w_k is a random variable (process noise).

Suppose time interval is Δt , We have $q_{k+1} = q_k q_\Delta$ in **quaternion multiplication** form. For 6-dimensional noise w_k , we can write as $w_k = \begin{pmatrix} w_q \\ w_\omega \end{pmatrix}$ where $w_q \in \mathcal{R}^3$ affects orientation and

 $w_{\omega} \in \mathcal{R}^3$ affects angular velocity.

Suppose quaternion representation of w_q is q_w .

A disturbed quaternion is $\tilde{q}_k = q_k q_w$. Likewise, a disturbed angular velocity is $\tilde{\omega}_k = \omega_k + w_\omega$. Finally, process model A is given by

$$x_{k+1} = \begin{pmatrix} \tilde{q}_k q_{\Delta} \\ \tilde{\omega}_k \end{pmatrix} = \begin{pmatrix} q_k q_w q_{\Delta} \\ \omega_k + w_{\omega} \end{pmatrix} = \begin{pmatrix} q_{k+1} \\ \omega_{k+1} \end{pmatrix}$$

4 Measurement Model H

Generally, $z_k = H(x_k, v_k)$ where v_k is a random variable (measurement noise).

Define \vec{g} be the vector of gravitational field (down), \vec{b} be the vector of magnetic field (north). Their quaternion vector can be written as $g = (0, [g_x, g_y, g_z]) = (0, \vec{g})$.

Transformation of \vec{g} from **global** coordinate system to **tracker** coordinate system $\vec{g'}$ is $g' = q_k g q_k^{-1}$. Similar for b, $b' = q_k b q_k^{-1}$ where g, g', b, b' are quaternion vectors.

5 Unscented Kalman Filter (UKF)

5.1 Sigma Points

For a $n \times n$ matrix P_{k-1} , we can derive a set of 2n sigma points by Cholesky Decomposition $P_{k-1} = S^T S$. The n **column** vectors of S are multiplied by $\pm \sqrt{2n}$ form the set $\{W_i\}$ (with 0 mean and P_{k-1} covariance). By shifting mean, we get

$$\chi_i = \hat{x}_{k-1} + W_i$$

In quaternion representation,

$$\chi_i = \begin{pmatrix} q_{k-1} q_W \\ \overrightarrow{\omega_{k-1}} + \overrightarrow{\omega_W} \end{pmatrix}$$

where q_W is the quaternion w.r.t the first three components of W_i . $\vec{\omega_W}$ is the angular velocity vector built from the remaining three components.

5.2 Transformation of Sigma Points

We transfer $\{\chi_i\}$ into a different set of state vectors $\{Y_i\}$: $Y_i = A(\chi_i, 0)$. Let

$$\overline{\hat{x}_k} = Mean(\{Y_i\})$$

$$\overline{P_k} = Covariance(\{Y_i\})$$

Further Transfer $\{Y_i\}$ into $\{Z_i\}$: $Z_i = H(Y_i, 0)$. Similarly, Let

$$\overline{z_k} = Mean(\{Z_i\})$$

$$P_{zz} = Covariance(\{Z_i\})$$

Define innovation $v_k = z_k - \overline{\hat{z}_k}$. Its covariance $P_{vv} = P_{zz} + R$ where R is the measurement noise covariance. Kalman gain $K_k = P_{xz}P_{vv}^{-1}$.

5.3 Computation of Mean

Unit quaternion are members of a homogenous Riemannian manifold (four dimensional unit sphere). Quaternion representation of error vector \vec{e}_i is $e_i = q_i \overline{q}_t^{-1}$. The barycentric mean \vec{e} of all error vectors is

$$\vec{e} = \frac{1}{2n} \sum_{i=1}^{2n} \vec{e_i}$$

Then we can better estimate \overline{q}_{t+1} by

$$\overline{q}_{t+1} = e\overline{q}_t$$

Keep doing until

$$\overline{q}_{t+1} = \overline{q}_t$$

5.4 Computation of Covariance

Measurement covariance matrix is given by

$$P_{zz} = \frac{1}{2n} \sum_{i=1}^{2n} [Z_i - \overline{z_k}] [Z_i - \overline{z_k}]^T$$

Similarly, cross correlation matrix can be computed according to

$$P_{xz} = \frac{1}{2n} \sum_{i=1}^{2n} [W_i'] [Z_i - \overline{z_k}]^T = \frac{1}{2n} \sum_{i=1}^{2n} [Y_i - \overline{\hat{x}_k}] [Z_i - \overline{z_k}]^T$$