picoVersat User Guide



October 17, 2018

USER GUIDE





Contents

1	Intro	oduction	9
2	Blo	ck Diagram	11
	2.1	Accumulator register	11
	2.2	Pointer register	11
	2.3	Flags register	11
	2.4	PC register	12
	2.5	Control Bus	12
	2.6	Interface Signals	13
		2.6.1 Instruction Interface Timing Diagram	13
		2.6.2 Control Bus Interface Timing Diagram	13
3	Men	nory Map	15
4	Inst	ruction Set	17
	4.1	Virtual Instructions	17
	4.2	Delayed Branches	17
5	Pro	gramming	19
•			
	5.1	The Assembler	19
	5.2	Assembly	20
		5.2.1 Program	20
		5.2.2 Data	22





List of Tables

1	Control Bus signals as driven by the controller.	12
2	Interface signals	13
3	Memory map base addresses	15
4	Instruction format	17
5	Instruction Set.	17





List of Figures

1	Block Diagram	11
2	Instruction interface pipelined reads	13
3	Control Bus interface reads	14
4	Control Bus interface writes	14
5	Read from SPI routine	20
6	Data in the program memory.	22

www.iobundle.com





1 Introduction

PicoVersat is a minimal hardware controller. It is designed for simple control tasks where normally finite state machines are employed. Being a programmable solution, the risk of hardware design errors is mitigated and the design of complex control structures is simplified.

PicoVersat features a minimal instruction set and is not designed for high performance computing. However, it can effectively implement simple algorithms and perform simple calculations. PicoVersat has a program memory interface and a memory mapped data interface, only.





2 Block Diagram

The picoVersat block diagram is shown in Fig. 1.

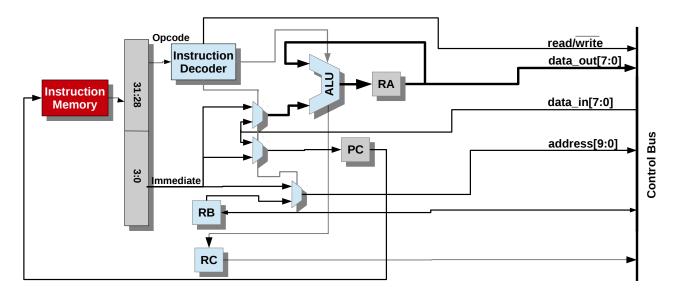


Figure 1: Block Diagram

PicoVersat contains 4 main registers: the accumulator (register A), the data pointer (register B), the flags register (register C) and the program counter (register PC).

2.1 Accumulator register

Register A, the accumulator, is the main register in this architecture. It can be loaded with an immediate value from the instruction itself (immediate value) or with a value read from the data interface. It is the destination of operations using as operands register A itself and an immediate or addressed value. Its value is driven out to the data interface.

2.2 Pointer register

Register B, the memory pointer, is used to implement indirect loads and stores to/from the accumulator, respectively. Its contents is the load/store address for the data interface. Register B itself is in the memory map so it can be read or written as if accessing the data interface.

2.3 Flags register

Register C, the flags register, is used to store three operation flags: the negative, overflow and carry flags. Register C itself is in the memory map so it can be read or written as if accessing the data interface.



2.4 PC register

The Porgram Counter (PC) register contains the address of the next instruction to be fetched from the Program Memory. The PC normally increments to fetch the next instruction. In program jumps, the PC register is loaded with an instruction immediate or with the register B value.

2.5 Control Bus

The Control Bus signals shown in Fig. 1 are described in Table 1.

Name	Direction	Description
req	OUT	Read or write request.
rnw	OUT	Characterizes the request as read if it is 1 or a write if it is 0.
address	OUT	Address to be read or written
data2read	IN	Data to be read from the Control Bus
data2write	OUT	Data to be written to the Control Bus

Table 1: Control Bus signals as driven by the controller.



2.6 Interface Signals

The interface signals of the Versat controller core are described in Table 2.

Name	Direction	Description	
clk	IN	Clock signal.	
rst	IN	Reset signal.	
	Instruction Interface		
instruction[7:0]	IN	Instruction to execute.	
pc[9:0]	OUT	Program Counter.	
Control Bus Interface			
rw_req	OUT	Data request for read or write.	
rw_rnw	OUT	Data read (1) or write (0) signal.	
rw_addr[9:0]	OUT	Data address.	
rw_data_to_rd[7:0]	IN	Data to read.	
rw_data_to_wr[7:0]	OUT	Data to write.	

Table 2: Interface signals.

2.6.1 Instruction Interface Timing Diagram

The timing diagram for pipelined instruction read using the Instruction Interface is shown in Figure 2.

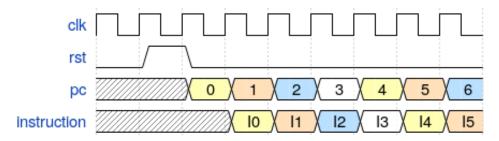


Figure 2: Instruction interface pipelined reads.

2.6.2 Control Bus Interface Timing Diagram

The timing diagrams for reads and writes using the Control Bus Interface are shown in Figure 3 and Figure 4, respectively. These operations may be consecutive or not, as illustrated.

www.iobundle.com



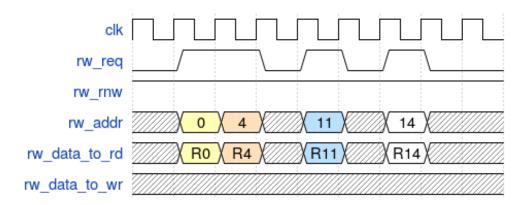


Figure 3: Control Bus interface reads.

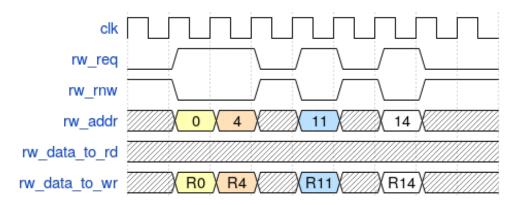


Figure 4: Control Bus interface writes.



3 Memory Map

In this section the memory map of the system, where the controller is integrated, is presented as seen by its Control Bus interface.

The Control Bus interface, allows the programmers to access different parts of the system by using the addresses given in this section.

The base addresses given in Table 3 are reserved. Other addresses may be added to the memory map as they are needed to access new peripherals.

Mnemonic	Address	Read/Write permissions	Description
RB0	0	RW	Register B less significant bits
RB1	1	RW	Register B most significant bits
RC	2	R	Register C (carry bit)
USER_MEM_BASE	3	RW	User memory base

Table 3: Memory map base addresses





Instruction Set

Versat controller features a very minimal set of instructions to control the execution hole system where it is integrated.

There is only one instruction type illustrated in Table 4.

Bits	Description	
7-4	Operation code (opcode)	
3-0	Immediate constant	

Table 4: Instruction format.

The instruction set is given in Table 5. Brackets are used to represent memory pointers. For example, M[lmm] represents the contents of the memory position whose address is lmm.

Mnemonic	Opcode	Description
rdw	0x0	RA = M[Imm]; PC = PC+1
wrw	0x1	M[Imm] = RA; PC = PC+1
rdwb	0x2	RA = M[RB+Imm]; PC = PC+1
wrwb	0x3	M[RB+Imm] = RA; PC = PC+1
beqi	0x4	RA == 0? PC = Imm: PC += 1; RA = RA-1
beq	0x5	RA == 0? PC = M[lmm]: PC += 1; RA = RA-1
bneqi	0x6	RA != 0? PC = Imm: PC += 1; RA = RA-1
bneq	0x7	RA != 0? PC = M[Imm]: PC += 1; RA = RA-1
ldi	0x8	RA = Imm; PC=PC+1
ldih	0x9	RA[7:4] = Imm; PC=PC+1
shft	0xA	RA = (Imm < 0)? RA << 1: RA >> 1; PC=PC+1
add	0xB	RA = RA + M[Imm]; PC=PC+1
addi	0xC	RA = RA + Imm; PC=PC+1
sub	0xD	RA = RA - M[lmm]; PC=PC+1
and	0xE	RA = RA & M[lmm]; PC=PC+1
xor	0xF	$RA = RA \oplus M[Imm]; PC=PC+1$

Table 5: Instruction Set.

4.1 **Virtual Instructions**

There is also a nop instruction, which do not have its own opcode. The assembler will translate this instruction as an addi 0. From the progammer point of view, it is an instruction available as any other.

4.2 **Delayed Branches**

The PC increments by one after non branch instructions. For branch or flow control instructions (beqi, beq, bneqi, bneq), the PC is assigned the branch target value, PC + Imm or RB, depending on whether it is a relative branch (beqi, bneqi) or an absolute branch (beq, bneq), respectively. Due to the controller pipeline circuits, the new value of the PC is delayed by 1 instruction. Hence, the 1 instructions immediately after the branch instruction is executed and constitute a delay slot. If one lacks a useful instruction for this slot, one should be filled with nop instruction.

www.iobundle.com





5 Programming

The Versat controller can only be programmed in assembly language, which is not difficult due to its simple architecture. To better explain how the ecosystem works, a full example will be used in this section to show how to program and use the assembler, for an 8-bit controller.

5.1 The Assembler

The assembler is a Python script that reads the assembly code (in a <file>.va) and translates it into machine code. It is design to generate machine code for 2 different memories: the boot ROM memory and the instruction memory. (Depending on the system where it is inserted, the controller can have a program memory with a boot ROM and an instruction memories, or just the boot ROM.)

The assembler generates two files, the opcode.hex and the rom.v. The first one is just the machine code written as a text file (one instruction per line) with the program memory size, which are read with the *readmemh* (a verilog primitive). If the target memory has a 256 instruction capacity, it will generate 256 machine codes, the first instructions correspond to the ones given to the assembler and remain are filled with nop instructions (see section 4). The second one is a file that contains the same instructions in a verilog hard ROM format, so it is possible to use a ROM without the *readmemh*. This second file is crucial in case of ASIC implementation and is only generated for the boot ROM.

To use the assembler, there is the need to create a dictionary named xdict.txt with some parameters. This dictionary is a JSON file read by the assembler, so it can generates the machine codes correctly. The parameters needed are the following:

- All the memory addresses (memory map);
- Instruction parameters: immediate and instruction widths (IMM_W and INSTR_W, respectively). Note: the INSTR_W is equal to opcode size (4 bits) + IMM_W;
- Boot ROM address width (ROM_ADDR_W);
- Instruction memory address width (IADDR₋W);
- Number of delay slots (DELAY_SLOTS).

Some of these parameters may not be necessary, it depends on the system where the controller is inserted.

For the boot ROM, the assembler should be invoked as follows:

```
./va -b < <assembly file>.va
```

For the instruction memory, the assembler should be invoked as in the boot ROM case, but without the boot ROM flag:

```
./va < <assembly file>.va
```



5.2 Assembly

5.2.1 Program

In figure 5 is an example of a full assembly routine for Versat controller.

```
# Read from SPI routine
# - reads the reading address from R3
# - writes the 32-bit data to R4-R7
# - returns to the address stored in R8-R9
rd spi ldi 31
                   # number of iterations (Nbits - 1)
       ldih 31
       wrw R1
       ldi R7
       ldih 0
       wrw R2
       ldi 0
       wrw R4
       wrw R5
       wrw R6
       wrw R7
       ldih 0x1
                     # constant for toggle the sclk signal
                     # assert sclk signal
       wrw R0
       rdw R3
                     # reads address for reading
       wrw SPI CTRL REG
       wrw R10
rdloop rdw R10
       xor R0
       wrw SPI_CTRL_REG
       xor R0
       wrw SPI_CTRL_REG
       wrw R10
       rdw R2
       wrw RB
       ldi 0
       wrw RB,1
       rdwb \\
       shft -1
       add RTC REG
       wrwb
       ldi 0x7
       and R1
       bnegi nincrd
       rdw R2
       addi -1
       wrw R2
nincrd Idi rdloop
       ldih rdloop
       wrw RB
       ldi rdloop>>8
       wrw RB,1
       rdw R1
       bneq
wrw R1
       rdw R8
                     # reads return address
       wrw RB
       rdw R9
       wrw RB,1
       ldi 0
                     # clears the SPI control register
       wrw SPI_CTRL_REG
       beq
       nop
```

Figure 5: Read from SPI routine.

Due to the given dictionary, all mnemonics are recognized by the assembler. For instance, the SPI_CTRL_REG is a known address from the assembler point of view.



This routine executes the SPI protocol for reading from external modules, by reading and writing to a peripheral present on the memory map. The comments are written after a "#" character is inserted, they can be used in the beginning of a line, or at the end of it.

The blue words are labels and the assembler use them to compute the jump addresses.

The immediate value has half the width of the data. To load a value bigger than that, the programmer should do as follows:

ldi 0x67 ldih 0x67

The assembler will first read the less significant bits from value, for the first instruction, and then will read the most significant bits, for the second one. The prefix 0x is used to indicate to the assembler that it is a hexadecimal value.

When an immediate value is bigger than the IMM_W parameter, the programmer must use a shift as follows:

ldi 0x367>>8

This shift will be executed at compile time by the assembler. It performs the shift and then replaces the immediate in the instruction by the result (in this example, 3).

The same happens with labels, and because the programmer never knows what value they have, it is imperative to use this scheme.

ldi rdloop ldih rdloop wrw RB ldi rdloop>>8 wrw RB,1

This last instruction is translated by the assembler as a write instruction to the sum of RB address plus one. To read or write any value to a memory mapped address bigger than immediate width (in this example, 4 bits), the instructions rdwb and wrwb, respectively, must be used.

For optimization, in a case of a for loop, the delay slot is filled with the write instruction to the control loop register (see 4). For example:

rdw R1 bneq wrw R1

where the R1 is the control register. Do not forget to load the RB with the label used in the for loop before the branch instruction.



5.2.2 Data

In figure 6 is an example of a data section in an assembly program for Versat controller.

Figure 6: Data in the program memory.

Here, the data must be preceded from the directive .memset, in the instruction place. The use of a label is required to access the data.