Step by step with ATLAS Silvaco

Present	sentation · April 2018	
DOI: 10.131	10.13140/RG.2.2.19564.46722	
CITATIONS	TIONS READS	
0	2,570	
1 autho	ıthor:	
	Ali Abdolahzadeh Ziabari	
1	55 PUBLICATIONS 606 CITATIONS	
	SEE PROFILE	
Some of	ne of the authors of this publication are also working on these related projects:	
Project	Smart Coatings View project	
	Synthesis of 7n0 papaparticles and its application in photocatalytic degradation of I	ADS by the trial and error and Tagushi methods View preject

Getting Started with Atlas

Ali Abdolahzadeh Ziabari

Atlas is a physically-based **two** and **three dimensional** device simulator. It predicts the **electrical behavior** of specified semiconductor structures and provides insight into the internal physical mechanisms associated with device operation.

1-Running Atlas inside Deckbuild

Each Atlas run inside DeckBuild should start with the line:

go atlas

2-The Order of Atlas Commands

Group		Statements
1. Structure Specification	8	MESH REGION ELECTRODE DOPING
2. Material Models Specification		MATERIAL MODELS CONTACT INTERFACE
3. Numerical Method Selection	50.	METHOD
4. Solution Specification	—	LOG SOLVE LOAD SAVE
5. Results Analysis	<u>.</u>	EXTRACT TONYPLOT

3- Using The Command Language to Define a Structure

You must first define a mesh. The first statement **must be**:

```
MESH SPACE.MULT=<VALUE>
```

This is followed by a series of X.MESH and Y.MESH statements.

```
X.MESH LOCATION=<VALUE> SPACING=<VALUE>
.
Y.MESH LOCATION=<VALUE> SPACING=<VALUE>
```

The SPACE.MULT parameter value is used <u>as a scaling factor</u> for the mesh created by the X.MESH and Y.MESH statements. <u>The default value is 1</u>. Values greater than 1 will create a globally coarser mesh for fast simulation. Values less than 1 will create a globally finer mesh for increased accuracy.

EXAMPLE: a simple mesh

```
mesh space.mult=1

x.m l=-1 s=0.01

x.m l=0 s=0.05

x.m l=1 s=0.01

y.m l=0 s=1

y.m l=2 s=0.02

save outf=simple.str
tonyplot simple.str
```


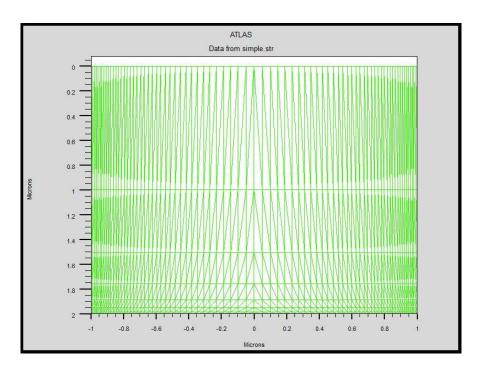


Fig.1. A simple structure by Atlas.

After an initial mesh has been defined, you can remove grid lines in specified regions. This is typically done in regions of the device where a coarse grid is expected to be sufficient such as the substrate. The removal of grid lines is accomplished using the **ELIMINATE** statement. The **ELIMINATE** statement removes every second mesh line in the specified direction from within a specified rectangle.

EXAMPLE:

```
go atlas
mesh space.mult=1
x.m l=-1 s=0.01
x.m l=0 s=0.05
x.m l=1 s=0.01
y.m l=0 s=1
y.m l=2 s=0.02
eliminate columns x.min=-0.5 x.max=0.5 y.min=0 y.max=1
save outf=simple.str
tonyplot simple.str
```

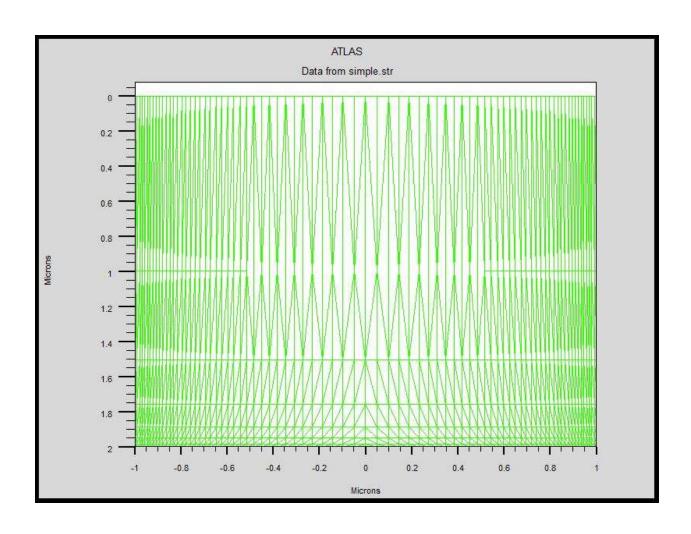

4-Specifying Regions and Materials

REGION number=<integer> <material_type> <position parameters>

Example:


```
mesh space.mult=1.0

x.mesh loc=0.0 spacing=2.5
x.mesh loc=10.0 spacing=2.5

y.mesh loc=0.0 spacing=0.05
y.mesh loc=5.0 spacing=0.2
y.mesh loc=10 spacing=0.05

region num=1 material=Silicon y.max=9.5
region num=2 material=Ge y.min=9.5 y.max=10

save outf=ali.str
tonyplot ali.str
```

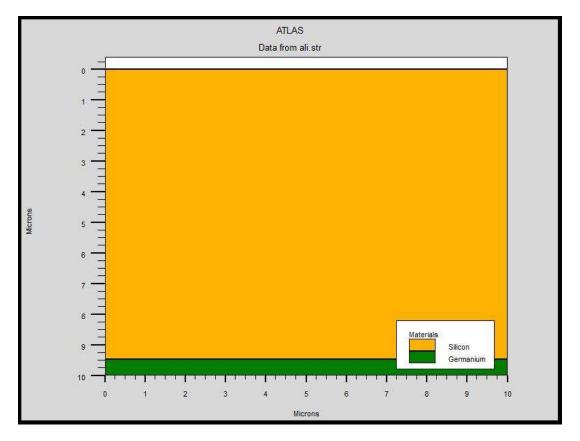

5- Specifying Electrodes

Once you have specified the regions and materials, define at least one electrode that contacts a semiconductor material. This is done with the **ELECTRODE** statement:

```
ELECTRODE NAME=<electrode name> <position parameters>
```

You can specify up to 50 electrodes.


Shortcuts: <u>If no Y coordinate parameters are specified</u>, the electrode is assumed to be located on <u>the top of the structure</u>. You also can use the RIGHT, LEFT, TOP, and BOTTOM parameters to define the location. For **example**:

```
ELECTRODE NAME=SOURCE LEFT LENGTH=0.5
```

specifies the source electrode starts at the top left corner of the structure and extends to the right for the distance LENGTH.

Example

```
mesh space.mult=1
x.m l=0 s=0.5
x.m l=1.5 s=0.2
y.m l=0 s=0.2
y.m l=3 s=0.1
region num=1 mat=zno y.min=0 y.max=3
electrode name=cathode top length=2
electrode name=anode bottom length=2
save outf=sari.str
tonyplot sari.str
```

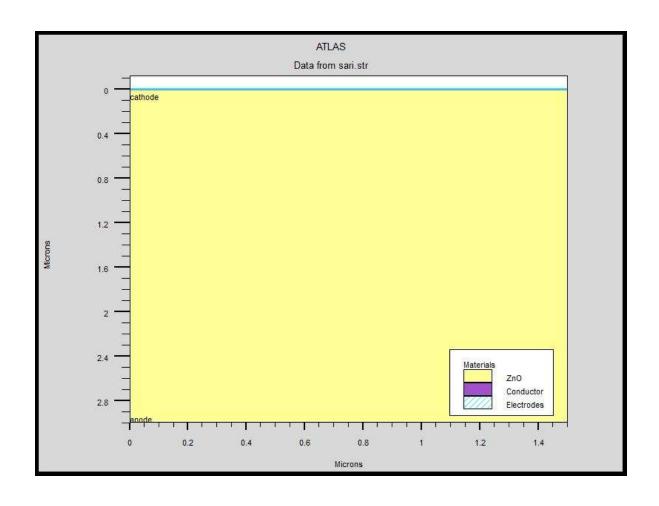

6- Specifying Doping

You specify the doping using the DOPING statement. For example:

```
DOPING <distribution type> <dopant type> <position parameters>
```

Analytical doping profiles can have **uniform**, **Gaussian**, or **complementary** error function forms. The parameters defining the analytical distribution are specified in the DOPING statement.

Example

```
mesh space.mult=1

x.m 1=0 s=0.5
x.m 1=1.5 s=0.2

y.m 1=0 s=0.2
y.m 1=3 s=0.1

region num=1 mat=zno y.min=0 y.max=2
region num=2 mat=al2o3 y.min=2

electrode name=cathode top length=2
electrode name=anode bottom length=2
doping uniform concentration=1e18 n.type region=1
doping gaussian concentration=1e16 characteristic=0.05 p.type x.left=0
x.right=1.5 peak=0.75

save outf=sari.str
tonyplot sari.str
```

