
# 1. Identify and explain the components of a complete data communication system.

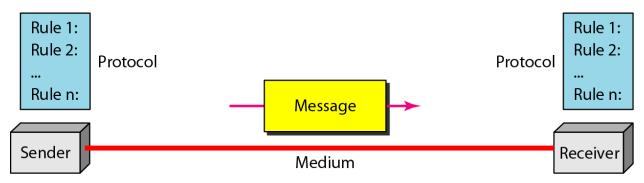

### 1. Message:

This is most useful asset of a data communication system. The message simply refers to data or piece of information which is to be communicated. A message could be in any form, it may be in form of a text file, an audio file, a video file, etc.

#### 2. Sender:

To transfer message from source to destination, someone must be there who will play role of a source. Sender plays part of a source in data communication system. It is simple a device that sends data message. The device could be in form of a computer, mobile, telephone, laptop, video camera, or a workstation, etc.

#### 3. Receiver:

It is destination where finally message sent by source has arrived. It is a device that receives message. Same as sender, receiver can also be in form of a computer, telephone mobile, workstation, etc.

#### 4. Transmission Medium:

In entire process of data communication, there must be something which could act as a bridge between sender and receiver, Transmission medium plays that part. It is physical path by which data or message travels from sender to receiver. Transmission medium could be guided (with wires) or unguided

(without wires), for example, twisted pair cable, fiber optic cable, radio waves, microwaves, etc.

### 5. Set of rules (Protocol):

To govern data communications, various sets of rules had been already designed by the designers of the communication systems, which represent a kind of agreement between communicating devices. These are defined as protocol. In simple terms, the protocol is a set of rules that govern data communication. If two different devices are connected but there is no protocol among them, there would not be any kind of communication between those two devices. Thus the protocol is necessary for data communication to take place.

# 2.Explain the characteristics that the effectiveness of a data communication system depends on.

The effectiveness of a data communications system depends on four fundamental characteristics: delivery, accuracy, timeliness, and jitter.

### 1. Delivery:

The system must deliver data to the correct destination. Data must be received by the intended device or user and only by that device or user.

### 2. Accuracy:

The system must deliver the data accurately. Data that have been altered in transmission and left uncorrected are unusable.

#### 3. Timeliness:

The system must deliver data in a timely manner. Data delivered late are useless. In the case of video and audio, timely delivery means delivering data as they are produced, in the same order that they are produced, and without significant delay. This kind of delivery is called real-time transmission.

#### 4. Jitter:

Jitter refers to the variation in the packet arrival time. It is the uneven delay in the delivery of audio or video packets. For example, let us

assume that video packets are sent every 3D ms. If some of the packets arrive with

3Dms delay and others with 4D-ms delay, an uneven quality in the video is the result.


### 3. What is meant by data communication?

The term telecommunication means communication at a distance. The word data refers to information presented in whatever form is agreed upon by the parties creating and using the data. Data communications are the exchange of data between two devices via some form of transmission medium such as a wire cable.

# 4.Difference between digital and analog system.

| Difference Between Analog And Digital Signal                             |  |
|--|--|
| Analog Signals   | Digital Signals  |
| Continuous signals   | Discrete signals   |
| Represented by sine waves  | Represented by square waves                                      |
| Human voice, natural sound, analog electronic devices are a few examples | Computers, optical drives, and other electronic devices          |
| Continuous range of values   | Discontinuous values   |
| Records sound waves as they are  | Converts into a binary waveform.                                 |
| Only used in analog devices.   | Suited for digital electronics like computers, mobiles and more. |

### 5.Explain a simplified data communication model.

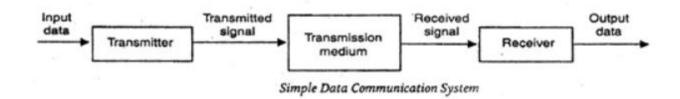

### 6.Simplex, half-duplex, full duplex-

### Simplex mode:

In simplex mode, Sender can send the data but that sender can't receive the data. It is a unidirectional communication.

### Half-duplex mode:

In half duplex mode, Sender can send the data and also can receive the data but one at a time. It is two-way directional communication but one at a time.

### Full duplex mode:

In full duplex mode, Sender can send the data and also can receive the data simultaneously. It is two-way directional communication simultaneously.

### 7. Define bandwidth and spectrum of a signal.

**Bandwidth:** The bandwidth of a composite signal is the difference between the highest and the lowest frequencies contained in that signal.

**Spectrum:** Spectrum refers to the invisible radio frequencies that wireless signals travel over. Those signals are what enable us to make calls from our mobile devices, tag our friends on Instagram, call an Uber, pull up directions to a destination, and do everything on our mobile devices. The frequencies we use for wireless are only a portion of what is called the electromagnetic spectrum.

### 8. Define block coding and its purpose.

**Block coding**: Block coding helps in error detection and re-transmission of the signal. It is normally referred to as mB/nB coding as it replaces each m-bit data group with an n-bit data group (where n>m). Thus, its adds extra bits (redundancy bits) which helps in synchronization at receiver's and sender's end and also providing some kind of error detecting capability.

### 9. What is throughput?


<u>Throughput</u> is the actual amount of data that is successfully sent/received over the communication link. Throughput is presented as kbps, Mbps or Gbps, and can differ from bandwidth due to a range of technical issues, including latency, packet loss, jitter and more.

### 10.Explain modulation technique for delta modulation.

- i. This scheme sends only the difference between pulses, if the pulse at time tn+1 is higher in amplitude value than the pulse at time tn, then a single bit, say a "1", is used to indicate the positive value.
- ii. If the pulse is lower in value, resulting in a negative value, a "0" is used.
- **iii.** This scheme works well for small changes in signal values between samples. If changes in amplitude are large, this will result in large errors.


# 11.Explain pulse code modulation process with diagram.

- PCM consists of three steps to digitize an analog signal:
  - 1. Sampling
  - 2. Quantization
  - 3. Binary encoding
- Before we sample, we have to filter the signal to limit the maximum frequency of the signal as it affects the sampling rate.
- Filtering should ensure that we do not distort the signal, ie remove high frequency components that affect the signal shape.

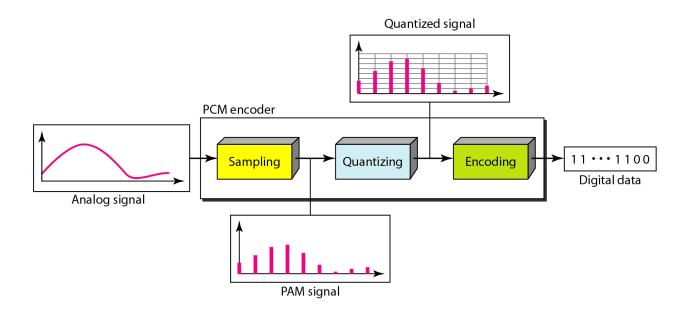

# 12.Define 4-PSK/ QPSK method with constellation diagram.

- A constellation diagram helps us to define the amplitude and phase of a signal when we are using two carriers, one in quadrature of the other.
- The X-axis represents the in-phase carrier and the Y-axis represents quadrature carrier.

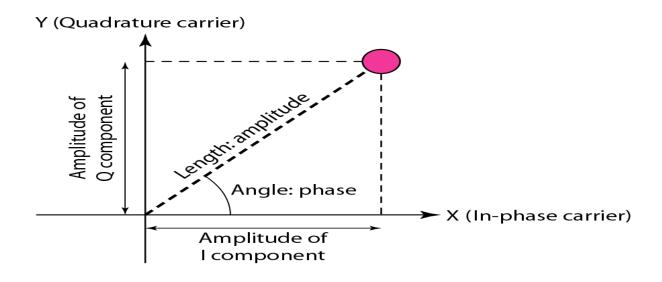

# 13. What is modulation? Purpose of carrier signal in modulation?

Modulation is the process of encoding information from a message source in a way that is suitable for transmission. This is achieved by altering the characteristics of a wave.