

THE ANATOMY OF THE **1541**



YOU CAN COUNT ON
Abacus
Software

THE ANATOMY OF THE 1541 DISK DRIVE

**A Complete Guide to Using
The Commodore Disk Drive**

Authors: Lothar Englisch
Norbert Szczepanowski

Edited by: Greg Dykema
Arnie Lee

ABACUS SOFTWARE
P.O. BOX 7211
GRAND RAPIDS, MI 49510

Second English Printing, June 1984

Printed in U.S.A

Copyright (C)1983 Data Becker GmGH
Merowingerstr. 30
4000 Dusseldorf W. Germany
Copyright (C)1984 Abacus Software
P.O. Box 7211
Grand Rapids, MI 49510

This book is copyrighted. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of ABACUS Software, Inc.

ISBN 0-916439-01-1

PREFACE

The VIC-1541 disk drive represents a very efficient external storage medium for the Commodore user. It is an affordable peripheral. In order to get the most from your 1541, you need the appropriate information. In months of long, detailed work, Lothar Englisch and Norbert Szczepanowski have discovered many secrets of the 1541.

This book progresses from simple storage techniques, to direct access commands, to program chaining techniques. Beginners will welcome the numerous sample programs that are fully explained in clear text. Machine language programmers will particularly like the detailed documentation listing of the Disk Operating System (DOS).

This book contains many useful and ready-to-run programs that need only be typed in. Some of these programs are: routines for extending BASIC, helpful routines such as spooling, efficient address management, a complete household budget planner and an easy-to-use DOS monitor to manipulate individual sectors. Have fun with this book and your VIC-1541 disk drive.

TABLE OF CONTENTS

| | |
|---|-----------|
| Chapter 1: Programming the VIC-1541..... | 1 |
| 1.1 Getting Started..... | 1 |
| 1.1.1 The Disk Operating System..... | 1 |
| 1.1.2 The TEST/DEMO Diskette..... | 2 |
| 1.1.3 Formatting New Diskettes..... | 2 |
| 1.1.4 Some Facts about a 1541 Diskette..... | 3 |
| 1.2 Storing Programs on Diskette..... | 4 |
| 1.2.1 SAVE - Storing BASIC Programs..... | 4 |
| 1.2.2 LOAD - Loading BASIC Programs..... | 4 |
| 1.2.3 VERIFY - Checking Stored programs..... | 5 |
| 1.2.4 SAVE "@...." Replacing Programs..... | 5 |
| 1.2.5 Loading Machine Language Programs..... | 6 |
| 1.2.6 Storing Machine Language Programs..... | 7 |
| 1.3 Disk System Commands..... | 10 |
| 1.3.1 Transmitting Commands to the Disk Drive..... | 10 |
| 1.3.2 NEW - Formatting Diskettes..... | 11 |
| 1.3.3 Reading the Error Channel..... | 12 |
| 1.3.4 LOAD "S",8 Loading the Directory..... | 13 |
| 1.3.5 SCRATCH - Deleting Files..... | 14 |
| 1.3.6 RENAME - Renaming Files..... | 15 |
| 1.3.7 COPY - Copying Files..... | 16 |
| 1.3.8 INITIALIZE - Initializing the Diskette..... | 16 |
| 1.3.9 VALIDATE - "Cleaning up" the Diskette..... | 17 |
| 1.3.10 ? * - The Wildcards..... | 18 |
| 1.4 Sequential Data Storage..... | 20 |
| 1.4.1 The Principle..... | 20 |
| 1.4.2 OPENing a Sequential File..... | 21 |
| 1.4.3 Transferring Data between Disk and Computer..... | 24 |
| 1.4.4 Adding Data to Sequential Files..... | 27 |
| 1.4.5 CLOSEing a Sequential File..... | 28 |
| 1.4.6 Redirecting the Screen Output..... | 29 |
| 1.4.7 Sequential Files as Tables in the Computer..... | 30 |
| 1.4.8 Searching Tables..... | 32 |
| 1.4.9 Simple Sorting of Tables..... | 35 |
| 1.4.10 Mailing List Management with Sequential Data Storage..... | 38 |
| 1.4.11 Uses for Sequential Storage..... | 45 |
| 1.5 Relative Data Storage..... | 46 |
| 1.5.1 The Principle..... | 46 |
| 1.5.2 The Advantage over Sequential Storage..... | 47 |
| 1.5.3 OPENing a Relative File..... | 47 |
| 1.5.4 Preparing the Data for Relative Storage..... | 50 |
| 1.5.5 Transferring Data..... | 52 |
| 1.5.6 CLOSEing a Relative File..... | 55 |
| 1.5.7 Searching Records with the Binary Method..... | 55 |
| 1.5.8 Searching Records with a Separate Index File..... | 58 |
| 1.5.9 Changing Records..... | 61 |
| 1.5.10 Expanding a Relative File..... | 62 |

| | | |
|--|---|-----|
| 1.5.11 | Home Accounting with Relative Data Storage..... | 64 |
| 1.6 | Disk Error Messages and their Causes..... | 72 |
| 1.7 | Overview of Commands with a Comparison of BASIC 2.0 - BASIC 4.0 - DOS 5.1..... | 77 |
| Chapter 2: Advanced Programming..... | | 82 |
| 2.1 | The Direct Access of any Block of the Diskette..... | 82 |
| 2.2 | The Direct Access Commands..... | 86 |
| 2.2.1 | The Block-Read Command..... | 86 |
| 2.2.2 | The Block-Pointer Command..... | 87 |
| 2.2.3 | The Block-Write Command..... | 88 |
| 2.2.4 | The Block-Allocate Command..... | 89 |
| 2.2.5 | The Block-Free Command..... | 90 |
| 2.2.6 | The Block-Execute Command..... | 91 |
| 2.3 | Uses of Direct Access..... | 92 |
| 2.4 | Accessing the DOS - The Memory Commands..... | 94 |
| 2.4.1 | The Memory-Read Command..... | 94 |
| 2.4.2 | The Memory-Write Command..... | 95 |
| 2.4.3 | The Memory-Execute Command..... | 96 |
| 2.4.4 | The User Commands..... | 97 |
| Chapter 3: Technical Information..... | | 99 |
| 3.1 | The Construction the VIC-1541..... | 99 |
| 3.1.1 | Block Diagram of the Disk Drive..... | 99 |
| 3.1.2 | DOS Memory Map - ROM, RAM, I/O..... | 100 |
| 3.2 | Operation of the DOS - An Overview..... | 104 |
| 3.3 | The Structure of the Diskette..... | 106 |
| 3.3.1 | The BAM of the VIC 1541..... | 106 |
| 3.3.2 | The Directory..... | 107 |
| 3.3.3 | The Directory Format..... | 109 |
| 3.4 | The Organization of Relative Files..... | 114 |
| 3.5 | DOS 2.6 Rom Listings..... | 118 |
| Chapter 4: Programs and Tips For Utilization of the VIC-1541..... | | 269 |
| 4.1 | Utility Programs..... | 269 |
| 4.1.1 | Displaying all File Parameters..... | 269 |
| 4.1.2 | Scratch-protect Files - File Protect..... | 273 |
| 4.1.3 | Backup Program - Copying a Diskette..... | 278 |
| 4.1.4 | Copying Individual Files to another Diskette.. | 280 |

| | | |
|---|--|-----|
| 4.1.5 | Reading the Directory from within a Program... | 281 |
| 4.2 | The Utility Programs on the TEST/DEMO Disk..... | 283 |
| 4.2.1 | DOS 5.1..... | 283 |
| 4.2.2 | COPY/ALL..... | 284 |
| 4.2.3 | DISK ADDR CHANGE..... | 284 |
| 4.2.4 | DIR..... | 285 |
| 4.2.5 | VIEW BAM..... | 285 |
| 4.2.6 | CHECK DISK..... | 285 |
| 4.2.7 | DISPLAY T&S..... | 286 |
| 4.2.8 | PERFORMANCE TEST..... | 286 |
| 4.3 | BASIC-Expansion and Programs for Easy Use of the 1541..... | 287 |
| 4.3.1 | Input Strings of desired Length from the Disk. | 287 |
| 4.3.2 | Easy Preparation of Data Records..... | 290 |
| 4.3.3 | Spooling - Printing Directly from the Disk.... | 295 |
| 4.4 | Overlay Technique and Chaining Machine Language Programs..... | 299 |
| 4.5 | Merge - Appending BASIC Programs..... | 302 |
| 4.6 | Disk-Monitor for Commodore 64 and VIC 20..... | 304 |
| Chapter 5: The Larger CBM Disks..... | | 317 |
| 5.1 | IEEE-Bus and Serial Bus..... | 317 |
| 5.2 | Comparison of all CBM Disk Drives..... | 319 |

Chapter 1: Programming the VIC-1541

1.1 Getting Started

There it sits, your new Commodore VIC-1541 disk drive. It's fast and efficient but also intimidating. But have no fear. We will instruct you in the ways of disk programming. The first part of this book gives the beginner an intensive look at the VIC-1541. At least one example follows each command, thereby explaining its functions and capabilities. You will be surprised how easy the operation of your disk drive can be, when you understand the "basics".

The beginner probably uses the disk drive mainly to store programs. Perhaps he has not realized that there are many other ways to use the disk drive. This book attempts to uncover these other ways.

Experienced programmers should not ignore the first chapter. There may be some sections that may shed light on disk usage. This is especially true concerning relative files and data management.

1.1.1 The Disk Operating System

The disk drive is a rather complicated device which coordinates mechanical hardware and electronic circuitry to allow the storage of data on the diskette. When the Commodore 64 or VIC-20 needs to read from or write to the disk drive, it sends commands to the disk drive along the heavy black cable that connects the drive to the computer. The commands sent by the Commodore 64 or VIC-20 are understood at the disk drive by a built in program called the Disk Operating System (DOS).

The DOS is a lengthy program contained on ROM in the disk drive and carries out the activities of the disk drive as commanded by the Commodore 64 or VIC-20. The version of DOS contained in the VIC-1541 carries the designation CBM DOS V2.6.

The Commodore 64 and VIC-20 contain a version of BASIC called COMMODORE BASIC 2.0. Other versions of BASIC (e.g. BASIC 4.0 found on the Commodore 8032) have more advanced disk commands which the VIC-1541 can also understand. In order to use these advanced disk commands, you have to simulate them using BASIC 2.0.

At the end of the chapter is a listing of the BASIC 2.0

Anatomy of the 1541 Disk Drive

commands with corresponding commands of the easier BASIC 4.0, as found on the larger Commodore computers.

1.1.2 The TEST/DEMO Diskette

The VIC-1541 disk drive is packaged with a diskette called TEST/DEMO. Some of the programs contained on it cannot be used without adequate knowledge of the way the disk drive works. For now, lay this diskette aside.

The TEST/DEMO diskette is described in detail later.

1.1.3 Formatting New Diskettes

Brand new diskettes must be prepared before using them to store data. Preparing them is called **formatting**.

What does formatting mean? Each disk drive mechanism has its own special characteristics. A diskette is divided into tracks and information is written along each track (similar to the grooves of a phonographic record). The number of tracks per diskette is varies from one manufacturer to another. Each track is divided into sectors, whose number can also vary.

During formatting empty sectors are written to the diskette. A sector is written to each track and sector location and each sector receives its own "address". This allows the DOS to identify its position on the diskette. A sector is also given a code so that the DOS can recognize if this diskette was formatted by this type of disk drive. The code for the VIC-1541 disk drive is 2A. The remainder of the sector (called a block) is used to store data and accommodates exactly 256 characters.

The final purpose of formatting is to construct the **directory** for the diskette. The directory is a "table of contents" of the files stored on the diskette. There is also a special data block (called the bit availability map or BAM) which indicates if a given block on the diskette is already in use or available for use. The directory and BAM are kept on track 18 of the diskette.

1.1.4 Some Facts about a 1541 Diskette

Diskette:

| | |
|---------------------------|---|
| Number of Tracks: | 35 |
| Sectors per Track: | 17 to 21 (depending on track) |
| Bytes per block: | 256 |
| Total number of blocks: | 683 |
| Number of free blocks | 644 (the directory occupies the remainder) |
| Entries in the directory: | 144 per diskette |

Mechanism:

- intelligent peripheral with its own processor and control system
- connection to serial bus from CBM 64 or VIC-20, device number 4-15 (8 standard)

Anatomy of the 1541 Disk Drive

1.2 Storing Programs on Diskette

The most common use of the disk drive is for storage of programs. Storing programs with a disk drive is considerably easier than with a cassette recorder. The greatest advantage of the disk drive is the speed of data transfer to and from the computer. Here's a comparison:

Saving a 3 Kbyte program takes:

- 75 seconds with the VIC-1530 Datasette
- 12 seconds with the VIC-1541 disk drive

An additional advantage is that a diskette can store more programs than the cassette. To load a program, you can consult the directory to view the selection of programs. Even though the cassette drive allows you to store more than one program on a tape, searching for that program is very time consuming.

Before trying any of the following examples in this chapter, you should remember that the diskette must be previously formatted as explained in section 1.3.2 in order to be able to save programs onto it.

1.2.1 SAVE - Storing BASIC Programs

Perhaps you previously owned a datasette on which you stored programs. In this case the command to save programs onto diskette should be familiar to you. The SAVE command for the disk drive is essentially the same as for the cassette drive. You need only tell the computer that the program is to be saved onto the disk drive and not on cassette. This is done by adding the device number (usually 8) to the command SAVE. Normally the drive is preset to respond to this device number. Now write a small BASIC program and save it with the command:

```
SAVE"TEST",8
```

type in a the NEW command so the program in the computer's memory is erased. In the following section you will learn how the program can be retrieved.

1.2.2 LOAD - Loading BASIC Programs

As with the SAVE command, this command is similar to the LOAD command for the datasette with the addition of the device number. Now load in the previously saved program with:

LOAD "TEST",8

You can check the program by using the LIST command. Any previous program in memory has now been replaced by the program "TEST". It is possible to load a program into the memory without replacing the previous program in memory. Combining two programs in memory is called "merging". An example of merging is presented in a later section.

1.2.3 VERIFY - Checking Stored Programs

When you have saved a program on disk with the SAVE command, it is often desirable to make sure that the program was written error-free. You can do this by using the VERIFY command. It has the following format:

VERIFY"filename",8

Earlier you saved a program with SAVE "TEST",8. This program should still be in memory. Using VERIFY, the program in memory is checked against the program stored on diskette. If both programs are identical, the computer responds with OK.

To try this out, type a few BASIC lines and then give the following commands:

```
SAVE "TEST2",8  
VERIFY "TEST2",8
```

Your computer will respond with OK if it is performing correctly.

1.2.4 SAVE"@... - Replacing Programs

If you try to save your small TEST program on the disk again, the computer will respond with a FILE EXISTS error and will not complete the SAVE. The operating system of the VIC-1541 disk drive does not allow two programs to be saved under the same name. This is logical because the computer would not be able to distinguish between two programs with the same name.

However you may want to update a program on diskette that was previously saved. There are three ways to accomplish this:

1. Save the program under a different name
2. First erase the old program from the disk and save the new one under the old name

Anatomy of the 1541 Disk Drive

3. Use the addition @: in front of the file name in the SAVE command

This is used as follows:

```
SAVE "@:TEST",8
```

If you forget to use the characters @: in front of the filename, and try to save a program whose name is already contained on the diskette, you get the FILE EXISTS error.

If you are replacing a program on a diskette then the DOS carries this out as follows:

1. A free block is designated as the first block of the program and its location is stored in the directory entry of the old copy.
2. The new copy of the program is stored in a free area of the diskette.
3. All of the blocks of the old copy are marked as free.

1.2.5 Loading Machine Language Programs

Machine language programs are handled a little differently from BASIC programs. A machine language program is transferred to the computer by using a secondary address of 1. When secondary address 1 is used, the program is loaded "absolutely", that is, loaded into memory beginning at the address specified in the first two bytes of the disk file. An example:

```
LOAD "MACHPGRM",8,1
```

loads the machine language program at an absolute address.

For example, the program may be set up to load at the decimal address 49152, and is started by the command : SYS 49152. Should you load a machine language program without the secondary address, you will most likely see the message "SYNTAX ERROR IN" if you type RUN.

Likewise, trying to LIST the machine language program will display nonsense. Unfortunately, machine language programs are not differentiated from BASIC programs in the directory. Both have the file type PRG.

Usually, if typing RUN results in SYNTAX ERROR IN, you know that the program is not written in BASIC and should be treated as a machine language program. In this case it must be loaded with the command LOAD "program",8,1. It cannot be

started with RUN however! You must first find the execution address of this program.

In a later section is a program that lists all the file parameters of a program. One of the parameters is a load address. This load address is usually the initial execution address of the program and can be called with the command **SYS load address**. You can find the load address of a program with the following program:

```

10 OPEN 1,8,2,"programname,S,R"
20 GET#1,X$:IF X$="" THEN XS=CHR$(0)
30 LB=ASC(XS)
40 GET#1,X$:IF X$="" THEN X$=CHR$(0)
50 HB=ASC(X$)
60 CLOSE 1
70 AD=HB*256+LB
80 PRINT"LOAD ADDRESS:";AD

```

The program shows the load address of "programname". Here the program file is opened as a sequential data file. The starting address is stored as the first two bytes of the file and read using the GET command and appropriately constructed. The first byte is the low byte and the second byte the high byte of the two-byte address. If the function of this program is unclear, handling sequential files clarified in the next sections.

1.2.6 Storing Machine Language Programs

Machine language programs are usually written with an assembler or a machine language monitor and saved using this program. Machine language programs can also be written from BASIC with the individual bytes of the program written in decimal values in DATA statements. A machine language program written in BASIC with the help of DATA statements follows:

```

10 SA=starting address
20 EA=ending address
30 FOR I=SA TO EA
40 READ X
50 POKE I,PEEK(X)
60 NEXT I
80 DATA .....
90 DATA .....

```

In this example, the decimal value of the starting address is placed in line 10 and the ending address in line 20. The decimal values of the individual bytes of the machine language program are typed into the DATA statements of the

Anatomy of the 1541 Disk Drive

program, separated by commas.

Naturally, you can save any machine language program that you find in this book in the form of a BASIC program. This is, however, a tedious and complicated process. A more elegant and time-saving method is to store the machine language program in true form. This way, you can immediately execute the program after LOADING without requiring any complicated conversion.

The following program will save such a program that is already in memory:

```
10 SA=starting address
20 EA=ending address
30 OPEN 1,8,1,"programname"
40 HB=INT(SA/256):LB=SA-HB*256
50 PRINT#1,CHR$(LB);CHR$(HB);
60 FOR I=SA TO EA
70 PRINT#1,CHR$(PEEK(I));
80 NEXT I
90 CLOSE 1
```

This routine assumes that the machine language program is already in the memory of the computer. If a program is already encoded into DATA statements, the following routine can be used to produce a pure machine language program:

```
10 SA=starting address
20 EA=ending address
30 OPEN 1,8,1,"programname"
40 HB=INT(SA/256):LB=SA-HB*256
50 PRINT#1,CHR$(LB);CHR$(HB);
60 FOR I=SA TO EA
70 READ X
80 PRINT#1,CHR$(X);
90 NEXT I
100 CLOSE 1
110 DATA .....
120 DATA .....
```

Here the addresses and DATA statements are filled in also. The above program writes a machine language program to diskette which can later be loaded with the command LOAD "programname",8,1. Then the program can be executed with the command: SYS (starting address). Machine language programs can also be loaded and executed from a BASIC program. Such a program might have this form:

```
10 IF A=0 THEN A=1:LOAD"programname",8,1
20 SYS (starting address)
```

The IF command in line 10 is puzzling at first. It must be present because after performing a LOAD from within a program, the BASIC interpreter begins executing again at the

first line of the new BASIC program. Because the machine language program doesn't usually overlay the BASIC program in memory, the original BASIC program remains intact and is therefore is re-executed. If you use the routine:

```
10 LOAD"programname",8,1  
20 SYS (starting address)
```

the program continues to LOAD "programname" again, and the SYS command is never executed. If the variable A is present, the program branches to line 20 at the end of the first command on line 10. This loader can be placed on the diskette together with the machine language program. To execute the machine language program, you need only give the commands:

```
LOAD"loader",8  
RUN
```

This has the advantage that the starting address of the machine language program need not be known, because it is included in the SYS of the loader.

Anatomy of the 1541 Disk Drive

1.3 Disk System Commands

As already mentioned, the VIC-1541 disk drive is similar to the earlier, larger disk drives of the Commodore family - the CBM 4040, 8050, 8250. They are all intelligent peripheral device with their own processor and control system. The Disk Operating System (DOS) occupies no space in the memory of the Commodore 64 or VIC-20 and yet offers a flexible set of efficient commands. These commands effectively expand the builtin commands of your Commodore computer.

Because the disk drive is an intelligent peripheral, the commands of the DOS can be executed independently of the computer. But because the commands are not found in the version of BASIC supplied in the Commodore 64 or VIC-20, you will have to communicate to the disk using a special method. When the commands are sent to the disk drive, the DOS interprets and carries out the desired task.

1.3.1 Transmitting commands to the Disk Drive

Commands intended for the disk drive, are sent over a **channel**. You can communicate with the disk drive over any of the 15 available channels. But channel 15 is reserved as the **command channel**. Data transfer over this channel takes place as follows:

- opening the channel (OPEN)
- data transfer (PRINT)
- close the channel (CLOSE)

In the OPEN command you specify a logical file number (arbitrary between 1 and 127), a device number of the disk drive (usually 8) and the secondary address (15 for the command channel). You can also send a command to the device as illustrated below:

```
OPEN lfn,8,15,"command"  
or  
OPEN lfn,8,15:PRINT#lfn,"command"
```

The number 8 is the device number of the disk drive and the number 15 is the secondary address or channel number. The parameter lfn is the logical file number which is used in subsequent commands (PRINT#, INPUT#, GET#). It can be a number in the range 1-127. The "command" can either follow the OPEN statement directly, or can be transferred with a PRINT# command following the opening. Any number of system commands can be transmitted until the channel is closed, but must be referenced by the logical file number used in the OPEN command.

1.3.2 NEW - Formatting Diskettes

The command to format a diskette is called **NEW** and can, as every other command, be abbreviated to its first letter (**N**). As already mentioned, the command can follow an **OPEN** command or be given in a **PRINT#** command. The **NEW** command has the following format:

NEW:diskname,id

The parameter **diskname** may contain up to 16 characters and is stored in the header of the diskette directory. The parameter **ID** (identification) consists of two arbitrary characters, so that the DOS can recognize if a different diskette has been used. Since you can freely choose the **id**, this allows you to uniquely identify each diskette. Here is an example for formatting a disk:

OPEN 1,8,15,"NEW:ABCDISK,KL"

The command can be abbreviated to:

OPEN 1,8,15,"N:ABCDISK,KL"

You need only use the command once - when you first use a brand new diskette. Formatting takes about 80 seconds. Formatting uses the processor of the 1541 drive while the processor of the computer is not needed; you can continue to work with the computer.

To use the command with a **PRINT#** statement, the following commands must be given:

OPEN 1,8,15 to open the channel
PRINT#1,"N:ABCDISK,KL"

The number 1 in the **PRINT#** command is the logical file number corresponding to the **OPEN** command. Other commands may also be transmitted over this channel after the **PRINT#** statement. When no more commands are to be transmitted, the channel must be closed. This is accomplished through the use of the **CLOSE** statement. Give the following command after formatting:

CLOSE 1

Now the command channel is closed. The number 1 is again the logical file number of the corresponding **OPEN** command.

Anatomy of the 1541 Disk Drive

1.3.3 Reading the Error Channel

When the Commodore 64 or VIC-20 is incorrectly programmed, it responds with an error message. Disk commands are carried out and verified by the processor of the disk drive. Therefore the computer cannot directly display error messages that are detected by the disk drive. Errors are indicated by the flashing red LED on the disk drive. In order to determine which error has occurred, the computer must read the error from channel 15. Therefore channel 15 must be OPENed, if this has not already been done. Then the error can be read with the INPUT# command. An error is sent back to the computer in four fields -

```
Field 1: Error number  
Field 2: Description of the error (string)  
Field 3: Track number  
Field 4: Sector number
```

The track and sector information may indicate where the error occurred (if these fields are relevant to the command). These four fields of the error message must be read into four variables. You can use an INPUT# statement followed by four variables. An example of reading the error channel:

```
OPEN 1,8,15          (if not already done)  
INPUT#1,EN,DES,TR,SE  
CLOSE 1
```

The INPUT# statement must be entered from within a program. It is not proper to issue an INPUT# statement from command mode.

```
10 OPEN 1,8,15  
20 INPUT#1,EN,DES,TR,SE  
30 PRINT EN;DES;TR;SE      (to display the error)  
40 CLOSE 1
```

To understand the operation of this program, first create the following error:

```
OPEN 1,8,15,"NEW ABCDISK,T1"  
CLOSE 1
```

When you have given these commands, the red LED on the disk drive begins to blink. Did you spot the error? A colon is missing from the command NEW. Now type the program to read the error channel and type RUN. The error will appear on the screen:

```
34 SYNTAX ERROR 0 0
```

The 34 is the number of the error, which is explained later. The track and sector fields are 0 because this information

is not relevant to this error.

If you read the error channel when an error had not occurred, the message:

0 OK 0 0

is returned. In any case, if the red LED on the drive blinks, check the syntax of the command, since most errors can be easily recognized. Otherwise, you can simply read the error channel to find the error which the DOS has detected. A detailed description of the error message and their causes follows in section 1.6.

1.3.4 LOAD"\$",8 - Loading the Directory

The **directory** is a "table of contents" of the diskette. All the files on the diskette are catalogued here. Be sure to note that loading the directory has a disadvantage: any program previously in memory is overlayed by the directory information. The directory is loaded by typing:

LOAD "\$",8

and can be viewed with the **LIST** command. Try LOADING the directory of the TEST/DEMO diskette that accompanies your disk drive. Insert this diskette into the disk drive and enter: **LOAD "\$",8** to load the directory. Then display the directory by using the **LIST** command. What follows should be shown on the screen

| | | |
|----|--------------------|---------|
| 0 | "1541test/demo | " zx 2a |
| 13 | "how to use" | prg |
| 5 | "how part two" | prg |
| 4 | "vic-20 wedge" | prg |
| 1 | "c-64 wedge" | prg |
| 4 | "dos 5.1" | prg |
| 11 | "copy/all" | prg |
| 4 | "disk addr change" | prg |
| 4 | "dir" | prg |
| 6 | "view bam" | prg |
| 4 | "check disk" | prg |
| 14 | "display t&s" | prg |
| 9 | "performance test" | prg |
| 5 | "sequential file" | prg |
| 13 | "random file" | prg |

A lot of information is kept in the directory. Let's look at the first line, the header of the directory. The number **0** in this line means that the directory is of the diskette in drive 0. Other disk drives such as the 4040, contain two disk drives - drive 0 or drive 1. On the 1541 the drive

Anatomy of the 1541 Disk Drive

number is always 0. Next follows the name and ID of the diskette as set up by formatting. The characters 2A symbolize the disk format. If this format is not 2A then this diskette was not formatted with a 1541 drive.

Next are the individual file names, their lengths in blocks in the first column and the file type in the last column. This diskette contains three different file types:

PRG These are PROGRAM files, written in either BASIC or machine language

SEQ Sequential data files, explained later

REL This is another form of data storage, also explained later

The length of the files is given in blocks. Each block contains 256 bytes. You can find the approximate size a program, by subtracting 2 bytes from each 256-byte block that the file occupies. Finally at the end of the directory is the number of free blocks remaining on the disk. When you add the lengths of the files and the number of free blocks, the result is the total number of available blocks on a diskette (664).

If you own a printer, this directory can be printed as you would print a program listing. Use the following commands:

| | |
|----------|---|
| OPEN 1,4 | open the printer |
| CMD 1 | the printer is now linked to the screen |
| LIST | the directory will be printed |
| PRINT#1 | send a RETURN to the printer |
| CLOSE 1 | close the printer again |

It is assumed that the directory is already loaded with the LOAD"\$",8 command before these commands are executed. By inserting a wildcard when loading the directory, you can cause only part of the directory to be loaded, such as only the programs. This is explained in section 1.3.10

1.3.5 SCRATCH - Deleting Files

Sometimes an unneeded file must be removed from the diskette. The SCRATCH command is provided for doing so. Before using this command, you must be sure that the name given in the SCRATCH command corresponds with the file to be deleted. An unintentionally deleted file can ruin many hours or even days of work, so be careful before using the SCRATCH command.

To delete a file, the following format should be used:

```
PRINT#lfn,"SCRATCH: filename1, filename2,..."
```

More than one file can be deleted by using a single command. But remember that only 40 characters at a time can be sent over the transmission channel to the disk drive.

For example, to erase a file with the name TEST, the following commands are used:

```
OPEN 1,8,15,"S:TEST"  
CLOSE 1
```

If channel 15 is already open, only the PRINT# command is required:

```
PRINT#1,"S:TEST"
```

It is possible to delete the entire contents of a diskette. This is discussed in section 1.3.10, the wildcard character (*):

```
PRINT#1,"S:/*"
```

But be very careful! Make sure that you do not need any of the files on the diskette before using this command. After completing the operation the error channel transfers the message:

```
01 FILES SCRATCHED nn 00
```

where nn is the number of deleted files. This message can be read with the routine given in section 1.3.3.

1.3.6 RENAME - Renaming Files

You can also change the name of a file on the diskette. The command RENAME is provided for this purpose. It has the following format:

```
RENAME:newname=oldname
```

For example, if you want to change the name of the file from TEST to PEST you would use the following commands:

```
OPEN 1,8,15,"R:PEST=TEST"  
CLOSE 1
```

or

Anatomy of the 1541 Disk Drive

```
OPEN 1,8,15  
PRINT#1,"R:PEST=TEST"  
CLOSE 1
```

Note that you cannot rename a file until it is CLOSED.

1.3.7 COPY - Copying Files

Using this command, a file can be copied onto a diskette. Several different sequential files can be used to create a new file. If, for example, you have a data record for each month of your household expenses and they have the names EXP.01, EXP.02, etc. you can combine them into quarters (EXP.Q1 for example) with this command. The COPY command has the format:

```
COPY:newfile=oldfile1,oldfile2,...
```

So, the named data records can be combined as follows:

```
OPEN 1,8,15,"C:EXP.01=EXP.01,EXP.02,EXP.03"  
CLOSE 1
```

This method of combining data records **cannot** be used for programs. Only a single program can be copied onto the diskette. Also the name of the new file must not already exist on the diskette.

The COPY command is seldom used. This is because copying files onto the same diskette usually makes no sense. The only sensible use of the command is to combine several sequential or user files into a single file.

Copying files from one diskette to another diskette is much more sensible. This is indispensable for data security. If you own two disk drives, you can assign the device number 9 to one of them and use the program COPY/ALL to copy files from one to the other. This program is found on the TEST/DEMO diskette.

We have also thought of you who have only one disk drive. A utility program is included in section 4.1 to allow you to copy individual files and even the entire diskette.

1.3.8 INITIALIZE - Initializing the Diskette

The DOS requires a BAM (Block Allocation Map) to be present on each disk. The BAM is a layout of the usage of the blocks on each diskette. It marks each block on the diskette

as free for use or allocated (already in use). If you change diskettes in the drive and the new diskette has the same id as the old diskette, the DOS will not recognize the fact that you have changed diskettes. The BAM of the new diskette will be different, but the DOS will still be working with the old BAM.

Therefore, each diskette should be given a unique id when you format it. It is a good practice to give each diskette a different id. You can force the disk drive to read the BAM of a new diskette by issuing the INITIALIZE command. This command has the following format:

PRINT#lfn,"INITIALIZE"

or shortened to

PRINT#lfn,"I"

Example:

```
OPEN 1,8,15,"I"  
CLOSE 1
```

If you change diskettes and also change data records, then we strongly recommend that you use the INITIALIZE command after changing the diskettes, to be safe.

1.3.9 VALIDATE - "Cleaning Up" the Diskette

The command **VALIDATE** frees all allocated blocks that are not assigned to normally CLOSEd files. For example, if you OPEN a file, and transfer data to that file, but forget to CLOSE the file, the **VALIDATE** command can be used to free the data blocks that were written to. If you use the direct access commands, be sure to allocate them (using the BLOCK-ALLOCATE command) or the **VALIDATE** command will free them again.

The command has an additional function: If a file is deleted using the **SCRATCH** command, the file type in the first byte of the file entry is set to 0. It no longer appears in the directory. If you now change this byte back to its old file type with the DOS monitor (described later) or other direct access commands, **VALIDATE** will restore the file. If it has not been overwritten, it will be the same as before the **SCRATCH** command. The command has the following format:

PRINT#lfn,"VALIDATE"

or the shorter form

PRINT#lfn,"V"

Anatomy of the 1541 Disk Drive

An example:

```
OPEN 1,8,15,"V"  
CLOSE 1
```

If you have a diskette such that the sum of the file lengths plus the number of free blocks does not equal the total number available (664), use the VALIDATE command to restore it.

Another example: If you want to store a program or data record that uses more than the number of free blocks, the DOS will give the error **DISK FULL**. If the disk had shown some blocks free before, the number is now zero. The VALIDATE command will restore the original free blocks.

1.3.10 ? * - The Wildcards

There are two wildcard characters - the asterisk (*) and the characters of the first file on the disk that begins with the characters which precede the asterisk. An example:

```
LOAD"TEST*",8
```

This command loads the first program that begins with the first four letters "TEST". The command:

```
LOAD"**",8
```

loads the first program on the diskette because there are no characters in front of the asterisk. The asterisk in the SCRATCH command has a different effect. If used in the SCRATCH command, not only the first file will be deleted, but all files. For instance, the command:

```
OPEN 1,8,15,"S:TEST*"  
CLOSE 1
```

erases all files beginning with the letters "TEST". This must be taken into account! Loading the directory with an asterisk can also select certain files. An example:

```
LOAD"$A*",8
```

loads only the directory of the files that begin with the letter "A".

The DOS offers an additional use of the asterisk that has not been mentioned yet. It can also select file types if the asterisk is followed by the first letter of the desired file type. Here is a summary:

| | |
|-----|-------------------------------|
| *=S | selects only sequential files |
| *=P | selects program files |
| *=R | selects relative files |
| *=U | selects user-files |

For example, the command:

```
LOAD "$*=P",8
```

causes only the directory entries of programs to be loaded and shown when you type LIST. This can also be used with the SCRATCH command to delete all sequential files, for instance. Here is the command:

```
OPEN 1,8,15,"S:*=S"  
CLOSE 1
```

With the question mark, certain characters of a file name can be declared "not relevant". To illustrate the function of the question mark, here are two examples of shortened file names and their effects:

| | |
|----------|--|
| A????? | - refers to a six-letter filename of which first character is A |
| ????TEST | - refers to an eight-character filename, the last four letters of which are TEST |

A combination of asterisks and question marks is allowed. You should notice, however, that an asterisk followed by question marks has no meaning. Two examples of combinations of asterisks and question marks:

| | |
|--------------|--|
| ????.* | - refers to all file names that have four characters before a period |
| TEST.??* | - refers to all file names having at least 7 characters, of which the first five are TEST. |
| TEST-??01*=S | - refers to all sequential files whose names have at least nine characters, the first five being TEST- and the eighth and ninth being 01 |

Anatomy of the 1541 Disk Drive

1.4 Sequential Data Storage

A disk drive need not be used exclusively for storing programs. If you have written a program that manages a large quantity of data, you need a fast way of organizing it. Sequential data storage is not the fastest, but it is the easiest method of managing data. This method is comparable to sequential storage on a cassette, which can be maintained in a program as such:

1. Load the program
2. Read the entire data file into the memory of the computer
3. Work with the data in memory (change, delete, combine)
4. Write the new file on an external medium (cassette, diskette)
5. Exit the program

The maximum number of data items that the program can handle depends on the size of the computer's memory, because a single data item cannot be changed or erased directly on the cassette or diskette. To that end, the entire set of data items must be read in, changed, and then rewritten again. Reading and rewriting the data occurs remarkably faster on a disk drive than on cassette.

It is worth mentioning that programs which work with sequential data on cassettes can be easily modified to work with disk. Only the corresponding OPEN commands need be changed.

1.4.1 The Principle

A sequential data file consists of several data records that are further divided into fields. The following is a name and address file and illustrates the principle of sequential data storage. Individual names and addresses comprise the data records of this file. A record consists of several fields (last name, first name, etc.). The structure of the file looks something like this:

```
=====
Field 1 : Field 2 : Field 3 : Field 1 : Field 2 : Field 3 :
=====
Data record 1      :      Data record 2
-----
FILE
-----
```

Only two records are shown above. The data records of a file are stored one after another (sequentially) as are the fields within each record. The fields and records may be of any length. For example, field 1 of record 1 may be longer than field 1 of record 2. This is possible because the fields are separated from each other by a special character (the RETURN character), which is generated by the PRINT# statement. When read back into the computer by the INPUT# statement, the RETURN character is recognized as a field separator.

Each field is associated with a variable when written with a PRINT# statement or read with an INPUT# statement.

How does the computer know, when reading the data, where each field ends? Each field ends with a RETURN character. The RETURN character has the decimal ASCII value 13. An example of a telephone directory file illustrates this. Our telephone directory file has three fields:

FIELD 1 : LAST NAME
FIELD 2 : FIRST NAME
FIELD 3 : TELEPHONE EXTENSION

Let's look at a section of this previously written file (the character + symbolizes a RETURN):

| | |
|-----------|--|
| Position: | 111111111222222222333333334444444 |
| | 123456789012345678901234567890123456 |
| ----- | |
| Data: | SMITH+JOHN+236+LONG+TIM+121+HARRIS+SAM+654+... |
| ----- | |

You can see that the fields are of different lengths and are all separated by a RETURN character. This RETURN character is automatically written after the data field by a PRINT# statement, provided the PRINT# statement is not followed by a semicolon (which suppresses the RETURN character).

These data items are assigned to the variables with an INPUT# statement. After that, another INPUT# must follow in order to read the next field, and so on. The following sections explain the fundamentals of writing programs using sequential data storage.

1.4.2 Opening a Sequential Data File

To create a sequential data file, you must first OPEN the file. When opening a file to be written to, the following is carried out:

1. The diskette is checked to see if an existing file has

Anatomy of the 1541 Disk Drive

- the same name. If so, the error message **FILE EXISTS** is given by the DOS.
2. The file entry in the directory is written. In the file type it is noted that this file is not yet CLOSED. This appears in a directory listing with an asterisk which precedes the file type.
 3. A free block is found, into which the first data items are written. The address (track and sector) of this free block is stored in the file entry of the directory.
 4. The number of blocks in the file is set to 0, because no blocks of the file have been written yet.

The OPEN command specifies for what purpose (mode) the file is to be used (reading or writing). The format of the OPEN command looks like this:

OPEN lfn,8,sa,"filename,filetype,mode"

When the logical file number is between 1 and 127, a PRINT# statement sends a RETURN character to the file after each variable. If the logical file number is greater than 127 (128-255), the PRINT# statement sends an additional line-feed after each RETURN. This is necessary for printers, for example, that do not provide an automatic line-feed after a RETURN character.

The secondary address (sa) can be a value between 2 and 14. The secondary address indicates the channel over which the computer is to transfer data to and from the disk drive. Secondary addresses 0 and 1 are reserved by the DOS for saving and loading programs. Secondary address 15 is designated as the command and error channel. Should several files be open at once, they must all use different secondary addresses, as only one file can use a channel. If, however, a file is opened with the secondary address of a previously opened file, the previous file is closed.

A maximum of 3 channels can be opened with the VIC-1541 at a time. When utilizing relative data files, the DOS requires 2 channels per file. Therefore, the following maximum combinations are possible:

- 1 relative and 1 sequential file
or - 3 sequential files

When specifying the filename to be written to (in the OPEN command), you must be sure that the file name does not already exist on the diskette. If a file that already exists is to be opened for writing, an at sign followed by a colon (@:) must be placed in front of the file name (same as in the SAVE command). For example:

OPEN 1,8,2,"@:ADDRESSES,S,W"

The file type must be given when the file is opened. The file type may be shortened to one of following:

- S - sequential file
- U - user file
- P - program
- R - relative file

User files are sequential files that are listed in the directory with the file type **USR**. It is not a data file in the true sense. This file type is usually used when output that normally goes to the screen (BASIC listing, directory) is sent to the disk. In section 1.4.6 you find a description of this technique.

The last parameter (mode) establishes how the channel will be used. There are four possibilities:

- W - Write a file (WRITE - section 1.4.3)
- R - Read a file (READ - section 1.4.4)
- A - Add to a sequential file
(APPEND - section 1.4.4)
- M - read a file that has not been closed
("discovered" by us in the DOS listing and explained in section 1.4.5)

Now open a sequential file with the name **SEQU.TEST** for writing:

OPEN 1,8,2,"SEQU.TEST,S,W"

If you now load the directory with **LOAD"\$",8** and then **LIST** it, you see this file listed with an asterisk before the file type:

| | | |
|---|-----------|------|
| 0 | SEQU.TEST | *SEO |
|---|-----------|------|

But you are no longer allowed to close this file! After a file is OPENed and data written to it, it must be closed before the directory is loaded!

While a file is open, the command/error channel 15 may be opened, but when channel 15 is closed, all other channels are closed as well. You must take note of this.

Now some examples of the OPEN command:

| | |
|-----------------------------------|--------------------------------------|
| OPEN 1,8,2,"SEOU.TEST,S,R" | - open a sequential file for reading |
| OPEN 2,8,3,"SEOU.TEST,U,W" | - open a user file for writing |
| OPEN 3,8,4,"TEST,P,R" | - open a program file for reading |

Anatomy of the 1541 Disk Drive

```
OPEN 4,8,5,"SEQU.TEST,S,A"      - open a sequential file for
                                 appending data
OPEN 5,8,6,"CSTMRS.1983,S,M"  - open the unclosed customer
                                 file for reading
```

1.4.3 Transferring Data Between Disk and Computer

After opening a file for writing, you transfer data to be stored to the diskette with the PRINT# statement. This statement transmits an additional RETURN that is required for separating data. In the following example, a file is OPENed, data written to it, and CLOSEd again. PRINT# can also be used as a direct command, that is, outside of the program, so the following commands can be typed one after the other and executed. Now open a file with the name "TEST":

```
OPEN 1,8,2,"TEST,S,W"
```

You should notice that the red LED on the disk drive was lit. It signals the fact that a file was OPENed. You can now write to the file named TEST. Here is how we would write a name and address record consisting of 4 fields:

```
PRINT#1,"SAM"
PRINT#1,"HARRIS"
PRINT#1,"2001 MAIN STREET"
PRINT#1,"ANYTOWN"
```

Now these data items have been written to the file so we can close the file with CLOSE 1. The red LED should go out. In order to read this data again, you must open the file in the read mode (R). Because the INPUT# statement cannot be used directly, a small program must be written:

```
10 OPEN 1,8,2,"TEST,S,R"
20 INPUT#1,FNS
30 INPUT#1,LNS
40 INPUT#1,STS
50 INPUT#1,CTS
60 CLOSE 1
70 PRINT"FIRST NAME: ";FNS
80 PRINT"LAST NAME: ";LNS
90 PRINT"STREET:      ";STS
100 PRINT"CITY:       ";CTS
```

The program is simple to explain:

Line 10 The file TEST is opened for reading

Lines 20-50 The data are read in the same order as they were written. Variables are used so that the data can be printed later.

Line 60 The file is closed.

Lines 70-100 The data are printed out on the screen.

When you enter this program and type RUN, the data will appear as written earlier, on the screen:

```
FIRST NAME: SAM
LAST NAME: HARRIS
STREET: 2001 MAIN STREET
CITY: ANYTOWN
```

Four INPUT# statements were used to read the data because the name and address record is composed of four fields. But when a record is written that has, say, 20 fields, it is very time-consuming to type out 20 INPUT# statements. A loop can make this much simpler. This is obvious in this example:

```
10 OPEN 1,8,2,"TEST,S,R"
20 FOR I=1 TO 4
30 INPUT#1,DS(I)
40 NFXT I
50 CLOSE 1
60 PRINT"FIRST NAME: ";DS(1)
70 PRINT"LAST NAME: ";DS(2)
80 PRINT"STREET: ";DS(3)
90 PRINT"CITY: ";DS(4)
```

Here, instead of four separate string variables, an array with index 1-4 is used. It should be noted that in BASIC 2.0, if an index higher than 10 is used, the array must be dimensioned with a DIM statement. Should we want to read in 20 fields, the statement **DIM DS(20)** must be given before any are read.

There are still more ways of shortening input and output of data. With the INPUT statement for keyboard input, several variables can be given in one line, separated by commas. For example:

```
INPUT FNS,LNS,TE
```

With this statement, three variables must be entered, such as:

```
NICHOLAS,MULLER,7465
```

The read data can be printed on the screen with:

```
PRINT FNS,LNS,TE
```

Anatomy of the 1541 Disk Drive

In this manner, sequential data can be written and later read back in again. The only difference is that the string variables containing the data to be written must be separated by commas enclosed in quotes. For example, if you wish to write the previous variables to a file, the PRINT# statement command must be changed as follows:

```
PRINT#1,PNS$,"LNS$","TE
```

Numeric variables need only be separated with a comma from the other variables. To read the data, use the command:

```
INPUT#1,PVS,LNS,TE
```

Because the maximum number of characters read by an INPUT# statement may not exceed 88, this method of reading is only marginally useful. If a field in a record is more than 88 characters long, a different statement must be used. This is the GET# statement, which reads each individual character, one at a time. Suppose you want to read a record of which a field is 100 characters long. This record can be placed in a string variable with the following routine:

```
10 OPEN 1,8,.....  
20 D$=""  
30 FOR I=1 TO 100  
40 GET#1,X$  
50 D$=D$+X$  
60 NEXT I  
70 GET#1,X$  
80 CLOSE 1
```

At the end of this program, the string variable D\$ will contain the 100 characters of the data field. After opening a sequential data file, the DOS establishes a pointer that always points to next character to be read. We assume that the data was written with a PRINT# statement without a trailing semicolon, so that a RETURN was written at the end of the data item. After reading the first 100 characters, the pointer points to this RETURN. The next GET# in line 70 is necessary to read the RETURN found at the end of the field. Then the next GET# statement can read the next field and not the RETURN.

In the above example, we used data records with a constant length of 100 characters. According to the rules of sequential access, the length of data records need not be constant. Since the INPUT# statement can only read a maximum of 88 characters, we will use the GET# statement to recognize the RETURN as the end of a field. Such a routine looks like this:

```
10 OPEN 1,8,.....  
20 S$=""  
30 GET#1,X$  
40 IF X$=CHRS(13) THEN 80
```

```

50 SS=SS+XS
60 IF ST<>64 THEN 30
70 CLOSE 1:END
80 PRINT SS
90 GOTO 20

```

Here a file with variable record length is read and printed on the screen. Naturally, you can use the data in other ways instead of printing it on the screen.

To avoid the problem of reading data records of more than 88 characters, divide the record into several parts, which you can combine after reading them.

1.4.4 Adding Data to Sequential Files

If you want to add data to a sequential file, you have to read the entire file into memory, add the data, and write the new file back to the diskette again. This is a very time-consuming process. For this reason, the DOS offers an easier alternative to add to a sequential data file without reading the entire file. This is made possible through the OPEN mode A (Append). If you have a sequential data file, as in the previous section, you can add data to it by selecting the A mode in the OPEN command. An example follows.

Give the following commands:

```

OPEN 1,8,2,"TEST2,S,W"
PRINT#1,"1. DATA RECORD"
CLOSE 1

```

Now you have a sequential data file containing one data record. This file can be expanded with two more records as follows:

```

OPEN 1,8,2,"TEST2,S,A"
PRINT#1,"2. DATA RECORD"
PRINT#1,"3. DATA RECORD"
CLOSE 1

```

Now the file TEST2 has three data records. You can check this with the following program:

```

100 OPEN 1,8,2,"TEST2,S,R"
110 FOR I=1 TO 3
120 INPUT#1,DR$
130 PRINT DR$
140 NEXT I
150 CLOSE 1

```

After the program starts, the data records is read and printed on the screen.

Anatomy of the 1541 Disk Drive

You can see that the append A mode makes it quick and easy to expand a sequential data files.

1.4.5 Closing a Sequential File

OPENed data files can be closed with the CLOSE command. This command has the format:

```
CLOSE lfn
```

The parameter lfn is the logical file number of the file that was used in the OPEN statement. Should several files need to be closed a CLOSE statement must be given for each one. When the last file is closed, the red LED on the drive goes out.

As you already know, data is sent to the disk drive over a channel. This channel uses storage inside the disk (called a buffer) in which the data transmitted by the computer is stored. When this buffer is full, its contents are written to the diskette.

When the file is closed, any data still in the buffer is written to the diskette. An unclosed file is incomplete and is also not recognized by the DOS as a properly closed file. The DOS allows no read access in the R (Read) mode and responds WRITE FILE OPEN when trying to read an unclosed file.

This could be a problem if the DOS did not allow read access to a file. For this reason, the DOS offers the M mode. A file that is marked as an improperly closed file can be read in this mode. It is logical to then write these records to a second file which can then be properly closed. In this way one can "rescue" a file.

The following program will transfer an improperly closed file (original file) to a correctly closed file (destination file):

```
100 INPUT"ORIGINAL FILE NAME";SS
110 INPUT"DESTINATION FILE NAME";DS
120 OPEN 1,8,2,S$+",S,M"
130 OPEN 2,8,3,D$+",S,W"
140 INPUT#1,X$ 
150 PRINT#2,X$ 
160 IF ST<>64 THEN 140
170 CLOSE 1:CLOSE 2
180 OPEN 1,8,15,"S:"+SS
190 CLOSE 1
```

At the completion of the program, the unneeded original file

is deleted (scratched).

1.4.6 Redirecting the Screen Output

Any output appearing on the video screen (PRINT, LIST, etc) can be redirected to a sequential data file. This is accomplished through the CMD command, which has the following format:

CMD lfn

For this to occur, a file of type **USR** must be opened. To transfer a BASIC program listing, for instance, as a sequential file on diskette, use the following commands:

```
OPEN 1,8,2,"TEST.LIST,U,W"
CMD 1
LIST
CLOSE 1
```

The command **CLOSE 1** causes further output to be sent to the screen.

Storing a program as a sequential file on disk is very useful, if, for example, you would like to read a program with a word processor to edit it. It is assumed that the word processor in this case reads data stored in ASCII code.

This is how the listings in this book were transferred from a Commodore 64 to a Commodore 8032.

In order to print this file on the screen again, you need the following routine:

```
10 OPEN 1,8,2,"TEST.LIST,U,R"
20 GET#1,X$
```

- 30 PRINT X\$
- 40 IF ST<>64 THEN 20
- 50 CLOSE 1

This routine is a loop that reads every character (byte) of the file and displays it on the screen. The end of the file is signalled by the status variable which is set to 64 at the end. To send a sequential file to the printer, use the following program:

```
10 OPEN 1,8,2,"TEST.LIST,U,R"
20 OPEN 2,4
30 GET#1,X$
```

- 40 PRINT#2,X\$
- 50 IF ST<>64 THEN 30
- 60 CLOSE 1

Anatomy of the 1541 Disk Drive

Here it assumed that the printer is connected as device address 4.

1.4.7 Sequential Files as Tables in the Computer

Sequential data files must reside completely in the computer for data management. Most of the time, a two dimensional table can be used. This table is also called an array or matrix, because a data element can be addressed through the input of two coordinates. To this end, you use a two dimensional variable, which must be reserved with a DIM statement. The first dimension corresponds to the data record, the second dimension to the field inside the record. The following diagram shows an example of a table:

| . | Field 1 | Field 2 | Field 3 |
|----------|----------|----------|----------|
| Record 1 | D\$(1,1) | D\$(1,2) | D\$(1,3) |
| Record 2 | D\$(2,1) | D\$(2,2) | D\$(1,3) |
| Record 3 | D\$(3,1) | D\$(3,2) | D\$(3,3) |
| Record 4 | D\$(4,1) | D\$(4,2) | D\$(4,3) |
| Record 5 | D\$(5,1) | D\$(5,2) | D\$(5,3) |
| Record 6 | D\$(6,1) | D\$(6,2) | D\$(6,3) |

This table is a file composed of six records which have three fields each. The variable D\$ is reserved with DIM D\$(6,3). To read a sequential file as a table, it is necessary to create such a file with, for example, six records with three fields each. For this purpose, use the following program:

```
100 OPEN 1,8,2,"TABFILE,S,W"
110 FOR X=1 TO 6
120 PRINT CHR$(147)
130 PRINT"RECORD ";X
140 PRINT"-----"
150 FOR Y=1 TO 3
160 PRINT"FIELD ";Y;": "
170 INPUT XS
180 PRINT#1,X$
```

```
190 NEXT Y
200 NEXT X
210 CLOSE 1
```

Two nested loops are used here, whose variables are numbered with the record and field. Enter six data records. When the program is done, these records will be contained on the

diskette with the filename of TABFILE. A tip: save this program with **SAVE"TABPROG",8** so you can use it later.

This file can now be loaded into the computer as a table. Two nested loops indexed for the table are necessary:

```
100 OPEN 1,8,2,"TABFILE.SEO,S,R"
110 DIM D$(6,3)
120 FOR X=1 TO 6
130 FOR Y=1 TO 3
140 INPUT#1,D$(X,Y)
150 NEXT Y
160 NEXT X
170 CLOSE 1
```

This program places data into the table. You can check this with a PRINT statements, to see if the data has been stored in the right place. Because each field can be addressed with indices, you can give a command like **PRINT D\$(1,2)** to see the second field of record one. It is meaningful to be able to display the fields of a given record. Use the following routine for this purpose, after you have saved the previous program:

```
100 INPUT"RECORD NUMBER: ";X
110 PRINT"-----"
120 PRINT"FIELD 1: ";D$(X,1)
130 PRINT"FIELD 2: ";D$(X,2)
140 PRINT"FIELD 3: ";D$(X,3)
```

Notice that the first index (the record number) after the question is used as the variable in the field output. The second index (field number) is then constant.

This table can now be altered as desired. Add the following lines to the preceding program:

```
160 PRINT"-----"
170 INPUT"FIELD TO CHANGE: ";Y
180 INPUT"NEW CONTENTS:    ";D$(X,Y)
190 PRINT"OK"
200 PRINT"FURTHER CHANGES (Y/N)?"
210 GET X$:IF X$="" THEN 210
220 IF X$="Y" THEN 100
230 IF X$="N" THEN END
240 GOTO 210
```

Here the number of the field to be changed is used as the second index, which is adjacent to the index of the desired record to input the new table element.

This modified table must now be written to the diskette again. You can use the following routine. Don't forget to save the previous edit program first!

Anatomy of the 1541 Disk Drive

```
100 OPEN 1,8,2,"@:TABFILE,S,W"
110 FOR X=1 TO 6
120 FOR Y=1 TO 3
130 PRINT#1,DS(X,Y)
140 NEXT Y
150 NEXT X
160 CLOSE 1
```

This routine also is relatively short because of the use of nested loops. The @: in line 10 is necessary in order to overwrite the existing file.

Accessing data through the use of the table is very fast. The access time is independent of the size of the table. The size of the table and therefore the quantity of data is dependent on the memory capacity of the computer, however. The large storage area of the Commodore 64 is excellent for table management. If you write a data management program that occupies 8K bytes, then 30K bytes still remain for storing data. If you consider that storing a name and address record of about 80 characters, you can still store 384 records in memory! And this with an access time that cannot be surpassed by refined data management techniques (indexed sequential, relative). But with larger quantities of data, sequential storage is no longer feasible.

1.4.8 Searching Tables

As mentioned in the table processing section, each data record of a table can be indexed. Because the table is two dimensional, the first index selects the data record. If a record of the table is to be changed or accessed, the operator must know the record number. The record number can be a part or customer number. There are files, however, for which there is no suitable method of numbering. In such files, the number of the record must be found through a search of all the records. Here is a practical example:

First of all, create a data file with the following program. Names and telephone numbers are saved in the example:

```
100 OPEN 1,8,2,"TELEDAT,S,W"
110 PRINT CHR$(147)
120 INPUT"LAST NAME    :";LNS
130 INPUT"FIRST NAME   :";FNS
140 INPUT"AREA CODE    :";ACS
150 INPUT"NUMBER       :";NUS
160 PRINT"INFORMATION CORRECT (Y/N)?"
170 GETX$:
170 IF X$="" OR X$<>"Y" AND X$<>"N" THEN 170
180 IF X$="N" THEN 110
190 PRINT#1,LNS","FNS","ACS","NUS
```

```

200 PRINT"MORE INPUT (Y/N)?"
210 GETXS:IF X$="" OR X$<>"Y" AND X$<>"N" THEN 200
220 IF X$="N" THEN 240
230 GOTO 110
240 CLOSE 1

```

Program Documentation:

- Line 100 The sequential file "TELEDAT" is opened for writing
- Line 110 The screen is cleared
- Lines 120-150 The four fields are entered from the keyboard
- Lines 160-180 If the data are not correct, they can be entered again
- Line 190 The four fields are written to disk
- Lines 200-220 Here the execution of the program can be ended
- Line 230 Input will be continued
- Line 240 The file opened in line 100 is closed

Type this program in, RUN it, and enter some data. Save the program on diskette, so you can combine it with other routines later if you like. In the last section of this chapter, is a complete program for managing your telephone numbers.

If you have entered some data, you would probably like to find a telephone number. To do so, you could print the entire file on the screen or printer and find it yourself. This is, however, a wasteful method, especially if you have entered many records.

The search for the telephone number corresponding to a given name can be performed by the computer. It runs through the whole list, looking for the desired name. Once found, it gives you the complete record which contained that name. The following routine accomplishes this:

```

100 OPEN 1,8,2,"TELEDAT,S,R"
110 DIM DS(100,4):X=1
120 INPUT#1,DS(X,1),DS(X,2),DS(X,3),DS(X,4)
130 IF ST<>64 THEN X=X+1:GOTO 120
140 CLOSE 1
150 PRINT CHR$(147)
160 PRINT"DESIRED NAME: ";NS
170 FOR I=1 TO X
180 IF DS(I,1)=NS THEN 210
190 NEXT I

```

Anatomy of the 1541 Disk Drive

```
200 PRINT"NAME NOT FOUND!":GOTO 280
210 PRINT"NAME FOUND:"
220 PRINT"-----"
230 PRINT"LAST NAME: ";D$(I,1)
240 PRINT"FIRST NAME: ";D$(I,2)
250 PRINT"AREA CODE: ";D$(I,3)
260 PRINT"NUMBER: ";D$(I,4)
270 PRINT"-----"
280 PRINT"MORE (Y/N)?"
290 GETX$ : IF X$="" OR X$<>"Y" AND X$<>"N" THEN 290
300 IF X$="Y" THEN 150
310 PRINT"PROGRAM DONE":END
```

Program Documentation

- Line 100 The sequential file "TELEDAT" is opened for reading
- Line 110 The table is dimensioned for 100 records and the index is set to one
- Line 120 The data records are read into the table
- Line 130 The status variable ST is checked for end of file (indicated by a value of 64). If the end has not been reached, the index is incremented and a new record is read.
- Line 140 The file opened in line 100 is closed
- Line 150 The screen is cleared
- Line 160 The last name to be searched for is read from the keyboard and placed in the variable NS
- Lines 170-190 The loop searches the table of records, checking the name fields against the desired name. If the position is found, the program branches to the output routine
- Line 200 The name was not found
- Lines 210-270 The record containing the desired name is displayed
- Lines 280-310 The possibility to search for a new name is allowed

You will notice that this search is quite fast when the data is already loaded into the computer. Searching the computer's memory is faster than searching the diskette. The program can be easily changed to search for a desired field other than the name. You might want to search for an area code, for instance. The first program stops the search when the first matching data record is found. This is not always

desired, however. If, for instance, you wish to search the table looking for a particular area code and want all matches to be displayed, a different routine is needed. The routine must continue the search after the first match is found. The next program takes care of this:

```

100 OPEN 1,8,2,"TELEDAT,S,R"
110 DIM D$(100,4):X=1
120 INPUT#1,D$(X,1),D$(X,2),D$(X,3),D$(X,4)
130 IF ST<>64 THEN X=X+1:GOTO 120
140 CLOSE 1
150 PRINT CHR$(147)
160 PRINT"AREA CODE TO SEARCH FOR: ";AC$
170 FOR I=1 TO X
180 IF D$(I,3)=AC$ THEN 210
190 NEXT I
200 PRINT"END OF DATA!":GOTO 270
210 PRINT"-----"
220 PRINT"LAST NAME:      ";D$(I,1)
230 PRINT"FIRST NAME:     ";D$(I,2)
240 PRINT"AREA CODE:       ";D$(I,3)
250 PRINT"NUMBER:          ";D$(I,4)
260 PRINT"-----"
270 PRINT"MORE (Y/N)?"
280 GETX$:IF X$="" OR X$<>"Y" AND X$<>"N" THEN 280
290 IF X$="Y" THEN 190
300 PRINT"SEARCH DONE!":END

```

Here the search is continued if a record with the appropriate area code is found. This happens in line 290, which branches back to the loop instead of ending the program. After searching all of the records, the program responds **END OF DATA**. If you understand the operation of this program, you can now develop a search for the last name. With the help of the previous programs, this should present no difficulty.


1.4.9 Simple Sorting of Tables

In data processing, it is often necessary to sort data into numeric or alphabetic order. This has always been a time consuming task, which the programmer has tried to shorten by using better sorting methods. Sorting is certainly a time consuming task when performed with the programming language BASIC, which is relatively slow.

Why should we sort the data at all? Suppose you had a telephone book in which the names were not ordered. You would have search the entire book from beginning to end to find a name. Sorting offers advantages when searching data. The computer can also search sorted data faster.

Anatomy of the 1541 Disk Drive

There are several search methods which differ mainly in their speed of execution. The simplest method compares each data item with every other. If a table is supposed to be sorted in ascending order, the first item in the table is compared to the second. If the first is greater, it is exchanged with the second. After that, the first will be compared to the third, and so on, until the last item is reached. Now the smallest item is at the beginning, in the right place. The next time through, the first item is no longer needed. A flowchart of the program logic appears below.

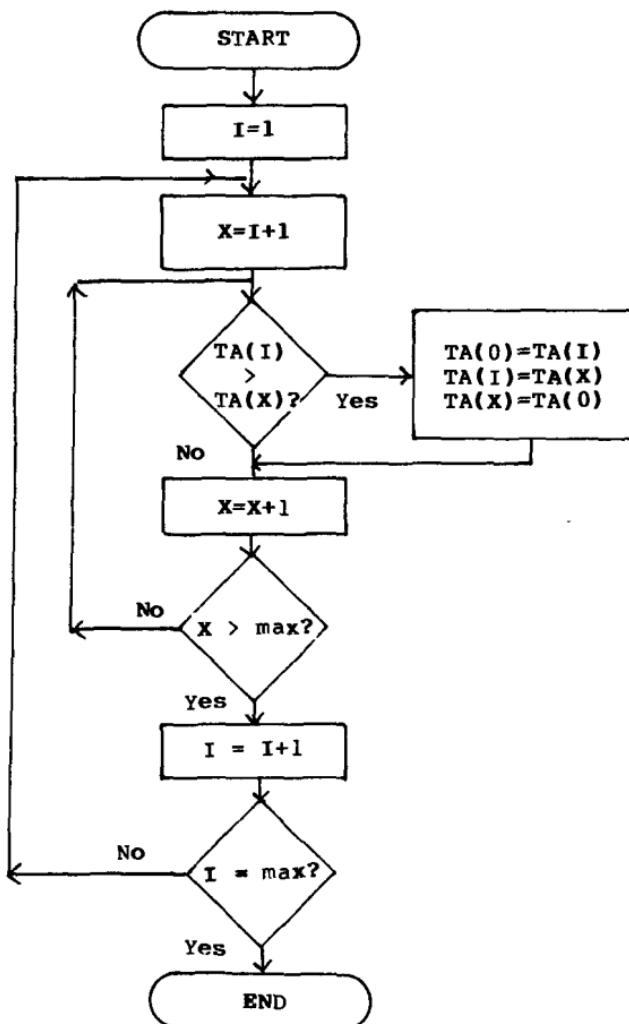

This sort program starts using an index of 1, which is stored in the variable I. The second index is the variable X, which receives a value one greater than I. Then the first item is compared to the second. If the value of TA(I) is greater than TA(X), the program must use a temporary variable, TA(0), to make the exchange between the two. After this, the value of X is incremented, to three, and TA(I) is again compared to TA(X), etc. When the last item in the table is reached, ($X >$ last index), the first item will be the smallest, and the index I is incremented by one. Now the second item is compared to every other (starting with the third), and so on.

This sort method looks quite complicated at first glance. Comparisons in memory are done relatively quickly, however. This method is sufficient for small quantities of data.

In order to run this program, a table must be built. This example uses a table with twelve items containing alphanumeric data (strings). The table is filled by the following routine:

```
100 DIM TAS(12)
110 FOR I=1 TO 12
120 INPUT TAS(I)
130 NEXT I
```

This program allows you to enter twelve strings, which are then sorted with the following program:

```
140 I=1
150 X=I+1
160 IF TAS(I) < TAS(X) THEN 180
170 TAS(0)=TAS(I):TAS(I)=TAS(X):TAS(X)=TAS(0)
180 X=X+1
190 IF X <= 12 THEN 160
200 I=I+1
210 IF I <> 12 THEN 150
220 FOR I=1 TO 12
230 PRINT TAS(12)
240 NEXT I
```

The table is sorted and displayed on the screen. If, instead of a one dimensional table, you want to sort a two dimensional table such as our telephone file, exchange the fields by changing lines 160-170 as below:

```
160 IF DS(I,1) < DS(X,1) THEN 180
170 DS(0,1)=DS(I,1):DS(I,1)=DS(X,1):
   DS(X,1)=DS(0,1)
171 DS(0,2)=DS(I,2):DS(I,2)=DS(X,2):
   DS(X,2)=DS(0,2)
172 DS(0,3)=DS(I,3):DS(I,3)=DS(X,3):
   DS(X,3)=DS(0,3)
173 DS(0,4)=DS(I,4):DS(I,4)=DS(X,4):
   DS(X,4)=DS(0,4)
```

Anatomy of the 1541 Disk Drive

It is very time consuming to sort a greater amount of data with this method. If you have a large amount of data to be sorted, we recommend that you use the very fast machine language sort routine from our book Commodore 64 Tips & Tricks.

1.4.10 MAILING LIST MANAGEMENT with Sequential Data Storage

At the end of this section, is a mailing list management program that every user will hopefully find easy to use. At the same time, this program provides insight into the operation of many data processing techniques.

A mailing list record of this program consists of the following fields:

- NAME 1
- NAME 2
- STREET
- CITY, STATE
- ZIP CODE
- TELEPHONE NUMBER
- NOTES

The use of the fields 'NAME 1' and 'NAME 2' are up to the user. For instance, 'NAME 1' can be the first name and 'NAME 2' the last name, or 'NAME 1' the company name and "to the attention of..." in 'NAME 2'. The field 'NOTES' can be used for grouping the addresses (family, business, friends, etc.).

The program offers the following Main Menu options:

- 1- LOAD DATA
- 2- SAVE DATA
- 3- INPUT DATA
- 4- EDIT DATA
- 5- SELECT/PRINT DATA
- 6- DELETE DATA
- 0- END PROGRAM

-1- LOAD DATA

Use this function to enter the name of the mailing list file that is to be maintained. If the file exists on the diskette, it is loaded and ready to be used. The number of records in the file is displayed. If an error is encountered while loading, or if the file does not exist, the message **DISK ERROR!** is displayed. At the conclusion of this function, the Main Menu reappears.

-2- SAVE DATA

Use this function to write an updated or expanded copy of the mailing list to the diskette. If the file name already exists, then the file is overwritten.

The mailing list should be saved often while using the program in case a power outage should erase the computer's memory. After saving, the file can be used further, without having to reload it again.

-3- INPUT DATA

Use this function to add records to the mailing list:

1. When no data has been previously loaded.

First a file name for the mailing list is entered. Enter a file name which does not already exist on the diskette or the old file is overwritten. All records that are inputted are new to the mailing list.

2. When data has been previously loaded.

All records that are inputted are added to the existing mailing list.

After entering an mailing list entry, the message **CORRECT (Y/N)?** is displayed. Here you may correct the data. If the entry is not correct, press the **N** key. If the entry is correct, press **Y**. Now the message **MORE INPUT (Y/N)?** is displayed. If you want to enter another mailing list entry, press **Y**. If you press **N**, the Main Menu appears again.

-4- EDIT DATA

Use this function to change existing mailing list records. Both Name 1 and Name 2 must be entered. If both names are not known, the other can be found with the **SELECT/PRINT DATA** routine. After entering the names, the mailing list is searched for matching names. When they are found, the complete address is displayed with the fields numbered. Now you must enter the number of the field which you want to change. The new contents are requested. The record is once again displayed in its updated form. If no more changes to this record are required, press **9**. The program asks if another record is to be changed. This question is to be answered by pressing **Y** or **N**.

Anatomy of the 1541 Disk Drive

-5- SELECT/PRINT DATA

Use this function to search for certain records and print or display them. You must first specify if the selected records are to be printed on the screen (S) or the printer (P). If you have selected the printer, you must again choose if the data is to be printed with all fields on normal paper (P), or if fields 1-5 are to be printed on mailing labels (M). The address labels must be in a single column and measure 89mm x 36mm.

In order to select the data, enter search criteria. For fields which are not relevant, simply press RETURN. If, for example, you want to find all addresses in Grand Rapids, press RETURN for the first three fields and type GRAND RAPIDS, MI for the fourth, and press RETURN for the next three.

An example:

| | | |
|------------------|---|----------|
| NAME 1 | : | M |
| NAME 2 | : | <return> |
| STREET | : | <return> |
| CITY, STATE | : | <return> |
| ZIP CODE | : | <return> |
| TELEPHONE NUMBER | : | <return> |
| NOTES | : | FAMILY |

All family members whose name 1 begins with 'M' will be displayed.

You can see how versatile this search is. Try it out yourself.

-6- DELETE DATA

Use this function to delete records. After entering the first and second names of the record, the record is read and the remaining fields are displayed. Then you are asked to confirm that the record is to be deleted. If you press Y, the record is deleted.

-0- END PROGRAM

Use this function to leave the program. Before the program is ended, you are reminded that you can restart the program without losing data by typing GOTO 110. This is important if you forget to save the data before ending the program.

Here is the program listing:

```

100 POKE 53280,5:POKE53281,2:PRINTCHR$(158)::DIMDS$(100,7)
110 GOSUB2030
120 PRINT"SELECT THE DESIRED FUNCTION:"
130 PRINT"-----":PRINT
140 PRINT"      -1- LOAD DATA"
150 PRINT"      -2- SAVE DATA"
160 PRINT"      -3- INPUT DATA"
170 PRINT"      -4- EDIT DATA"
180 PRINT"      -5- SELECT/PRINT DATA"
190 PRINT"      -6- DELETE DATA":PRINT
200 PRINT"      -0- END PROGRAM"
210 PRINT
220 PRINT"      CHOICE (0-6)?"
230 GETX$ :IFX$<"0"ORX$>"6"THEN230
240 IF XS<>"0"THEN340
250 PRINT:PRINT"      ARE YOU SURE (Y/N)?"
260 GETX$ :IFX$<>"N"ANDX$<>"Y"THEN260
270 IFX$="N"THEN110
280 GOSUB2030
290 PRINT"THE PROGRAM CAN BE RESTARTED WITH
300 PRINT"      'GOTO 110'"
310 PRINT"      WITHOUT LOSS OF DATA"
330 END
340 ONVAL(X$)GOSUB360,540,680,880,1190,1770
350 GOTO 110
360 REM *****
370 REM LOAD DATA
380 REM *****
390 GOSUB 2030
400 INPUT"NAME THE FILE ":";FNS$
410 OPEN 15,8,15
420 OPEN1,8,2,FNS+",S,R"
430 INPUT#15,FE:IF FE=0 THEN 460
440 PRINT"DISK ERROR!"
450 GOTO 510
460 X=1
470 INPUT#1,DS(X,1),DS(X,2),DS(X,3),DS(X,4),DS(X,5),DS(X,6),
     DS(X,7)
480 IF ST<>64 THEN X=X+1:GOTO470
490 PRINT"FILE IS LOADED AND CONTAINS";X;"RECORDS."
500 PRINT
510 CLOSE:CLOSE15
520 PRINT"RETURN FOR MORE"
530 INPUTX$ :RETURN
540 REM *****
550 REM SAVE DATA
560 REM *****
570 IF X>0 THEN 590
580 GOSUB2230:RETURN
590 GOSUB 2030
600 OPEN 1,8,2,"@:"+FNS+",S,W"
610 FORI=1TOX
620 PRINT#1,DS(I,1),"DS(I,2)","DS(I,3);

```

Anatomy of the 1541 Disk Drive

```
630 PRINT#1,D$(I,4),"D$(I,5)","D$(I,6)","D$(I,7)
640 NEXT
650 PRINT"DATA IS SAVED":CLOSE1:RETURN
660 PRINT"RETURN FOR MORE"
670 INPUTX$:RETURN
680 REM *****
690 REM INPUT DATA
700 REM *****
710 IFX>0THEN730
720 GOSUB2030:INPUT"FILENAME ";FNS
730 X=X+1
740 GOSUB2030
750 PRINT"INPUT DATA:"
760 PRINT"-----":PRINT
770 I=X:GOSUB2110
780 FORI=1TO7:PRINTCHR$(145);:NEXT
790 FORI=1TO7:PRINTTAB(12);:INPUTD$(X,I):NEXT
800 PRINT:PRINT"CORRECT (Y/N)?"
810 GETX$:IFX$<>"N"ANDX$<>"Y"THEN810
820 IFX$="Y"THEN840
830 GOTO 740
840 PRINT"MORE INPUT (Y/N)?"
850 GETX$:IFX$<>"N"ANDX$<>"Y"THEN850
860 IFX$="Y"THEN730
870 RETURN
880 REM *****
890 REM EDIT DATA
900 REM *****
910 IF X>0THEN930
920 GOSUB2230:RETURN
930 GOSUB2030
940 INPUT"NAME 1: ";N1$
950 INPUT"NAME 2: ";N2$
960 FORI=1TOX
970 IF D$(I,1)=N1$ANDD$(I,2)=N2$THEN1010
980 NEXTI
990 PRINT"NAME NOT FOUND!"
1000 PRINT"RETURN FOR MORE":INPUTX$:RETURN
1010 GOSUB2030
1020 PRINT"-1- NAME 1      :";D$(I,1)
1030 PRINT"-2- NAME 2      :";D$(I,2)
1040 PRINT"-3- STREET       :";D$(I,3)
1050 PRINT"-4- CITY, STATE   :";D$(I,4)
1060 PRINT"-5- ZIP CODE     :";D$(I,5)
1070 PRINT"-6- TELEPHONE    :";D$(I,6)
1080 PRINT"-7- NOTES        :";D$(I,7)
1090 PRINT"NO. OF FIELD TO CHANGE: ":PRINT"(9=NO
CHANGES)"
1100 GETX$:IFVAL(X$)<1ORVAL(X$)>7ANDVAL(X$)<>9THEN1100
1110 IFVAL(X$)=9THEN1150
1120 Y=VAL(X$)
1130 INPUT"NEW CONTENTS";D$(I,Y):PRINT
1140 GOTO 1010
1150 PRINT"MORE CHANGES (Y/N)?"
1160 GETX$:IFX$<>"Y"ANDX$<>"N"THEN1160
```

```

1170 IFX$="Y"THEN880
1180 RETURN
1190 REM ****
1200 REM SELECT/PRINT DATA
1210 REM ****
1220 IF X>0THEN1240
1230 GOSUB2230:RETURN
1240 GOSUB2030:PRINT"OUTPUT TO PRINTER (P) OR SCREEN (S)?"
1250 GETX$ :IFX$<>"S"ANDX$<>"P"THEN1250
1260 O$=X$:IFO$="S"THEN1300
1270 PRINT:PRINT"PAPER (P) OR MAILING LABELS (M)?"
1280 GETX$ :IFX$<>"P"ANDX$<>"M"THEN1280
1290 D$=X$
1300 GOSUB2030
1310 PRINT"ENTER THE SEARCH DATA:"
1320 PRINT"PRESS RETURN BY IRRELEVANT FIELDS."
1330 PRINT"-----":PRINT
1340 I=0:GOSUB2110
1350 FORI=1TO7:PRINTCHR$(145),:SS(I)="" :NEXT
1360 FORI=1TO7:PRINTTAB(12),:INPUTSS$(I):NEXT
1370 IFO$="S"ORD$="M"THEN1450
1380 GOSUB2030:PRINT"PRINTER READY (Y)?"
1390 GETX$ :IFX$<>"Y"THEN1390
1400 OPEN 1,4
1410 PRINT#1,"NAME 1";SPC(8); "NAME 2";SPC(8); "STREET";
      SPC(10);
1420 PRINT#1,"CITY, STATE";SPC(4); "ZIP CODE TELEPHONE NOTES"
1430 FORI=1TO79:PRINT#1,"=" :NEXT:PRINT#1
1440 CLOSE1
1450 FORI=1TOX
1460 FORY=1TO7
1470 IFSS(Y)=LEFT$(D$(I,Y),LEN(SS(Y)))THENZ=Z+1:GOTO1480
1480 NEXTY
1490 IFZ=7THENGOSUB1550
1500 Z=0:NEXTI
1510 PRINT:PRINT"END OF DATA!":PRINT
1520 PRINT"RETURN FOR MORE":PRINT
1530 INPUTX$
1540 RETURN
1550 IFO$="S"THEN1730
1560 IFDS$="M"THEN1670
1570 OPEN1,4
1580 PRINT#1,D$(I,1);SPC(14-LEN(D$(I,1)));
1590 PRINT#1,D$(I,2);SPC(14-LEN(D$(I,2)));
1600 PRINT#1,D$(I,3);SPC(16-LEN(D$(I,3)));
1610 PRINT#1,D$(I,4);SPC(15-LEN(D$(I,4)));
1620 PRINT#1,D$(I,5);SPC(8-LEN(D$(I,5)));
1630 PRINT#1,D$(I,6);SPC(12-LEN(D$(I,6)));
1640 PRINT#1,D$(I,7)
1650 PRINT#1:CLOSE1
1660 RETURN
1670 OPEN2,4
1680 PRINT#2
1690 FORJ=1TO5:PRINT#2,D$(I,J):NEXT
1700 PRINT#2:PRINT#2:PRINT#2

```

Anatomy of the 1541 Disk Drive

```
1710 CLOSE2
1720 RETURN
1730 GOSUB2030:GOSUB2110
1740 PRINT:PRINT"MORE (Y)?""
1750 GETX$ :IFX$<>"Y"THEN1750
1760 RETURN
1770 REM ****
1780 REM DELETE DATA
1790 REM ****
1800 IFX>0THEN1820
1810 GOSUB2230:RETURN
1820 GOSUB2030
1830 INPUT"NAME 1 : ";N1$
1840 INPUT"NAME 2 : ";N2$
1850 FORI=1TOX
1860 IFDS(I,1)=N1$ANDDS(I,2)=N2$THEN1900
1870 NEXTI
1880 PRINT"NAME NOT FOUND!":PRINT
1890 PRINT"RETURN FOR MORE":INPUTX$ :RETURN
1900 GOSUB2030:GOSUB2110
1910 PRINT:PRINT"DELETE RECORD (Y/N)?""
1920 GETX$ :IFX$<>"Y"ANDX$<>"N"THEN1920
1930 IFX$="N"THENRETURN
1940 FORY=ITOX-1
1950 FORJ=1TO6
1960 D$(Y,J)=D$(Y+1,J)
1970 NEXTJ,Y
1980 FORJ=1TO6:D$(X,J)="":NEXTJ
1990 X=X-1
2000 PRINT"RECORD IS DELETED!"
2010 PRINT"RETURN FOR MORE"
2020 INPUTX$ :RETURN
2030 REM ****
2040 REM PROGRAM HEADING
2050 REM ****
2060 PRINTCHR$(147);
2070 PRINTTAB(8);=====
2080 PRINTTAB(8);M A I L I N G   L I S T
2090 PRINTTAB(8);=====
2100 RETURN
2110 REM ****
2120 REM PRINT RECORD
2130 REM ****
2140 PRINT"NAME 1      : ";D$(I,1)
2150 PRINT"NAME 2      : ";D$(I,2)
2160 PRINT"STREET      : ";D$(I,3)
2170 PRINT"CITY, STATE : ";D$(I,4)
2180 PRINT"ZIP CODE   : ";D$(I,5)
2190 PRINT"TELEPHONE  : ";D$(I,6)
2200 PRINT"NOTES      : ";D$(I,7)
2220 RETURN
2230 REM ****
2240 REM NO DATA!
2250 REM ****
2260 GOSUB2030
```

```
2270 PRINT"NO DATA IN MEMORY!":PRINT  
2280 PRINT"RETURN FOR MORE"  
2290 INPUTX$:RETURN
```

1.4.11 Uses for Sequential Storage

The great advantage of sequential storage as compared to relative and direct access storage, is that a lot of data can be written to the diskette quickly. Data of varying lengths can be stored together, without requiring the records to be of a definite length. It makes sense to make use of this advantage, where the file must not be permanently divided into parts. Examples are:

- * Bookkeeping files

In a bookkeeping journal, all entries are recorded continuously. Changes should not be made to these entries. Instead, adjustment entries should be made to effect changes.

- * Analysis files

You analyze a direct access file, looking for, say, all customers with whom you have done more than 2000 dollars of business in a certain zip code, and write the found records in a sequential file for later access.

Naturally, sequential files also offer a substitute for direct access files, as discussed in this chapter, if the user does not possess further programming knowledge. We must certainly recommend that you work through the other methods of data storage, which offer other advantages.

1.5 Relative Data Storage

Relative data storage and its programming is not described in the VIC-1541 user's manual. The reason may lie in the fact that the Commodore 64 and the VIC-20 have no commands to process relative files using BASIC 2.0. Therefore, it is in principle not possible to use relative data storage on the Commodore 64 and VIC-20 - but only in principle. We have developed a few tricks that work within the limitations of BASIC 2.0 and permit the Commodore 64 and also the VIC-20 to use relative data storage. The examples may seem to be somewhat complicated at first. For example, information about the record lengths will be transmitted to the disk using CHR\$(x) codes. But they provide for a very easy method of data storage.

1.5.1 The Principle

When using relative record data processing, the data records are numbered. It is assumed that all records in a relative file have the same length and that the record number of every record is known or can be calculated. To find a record, it is not necessary to search through the entire file. Only the record number need be given to access the record. Using the record number, the DOS can find where the record is "relative" to the beginning of the file on the diskette and can read it directly. Therefore, you don't have to read an entire file into the computer, only the desired records.

Managing a relative file follows this pattern:

Create a relative file:

1. The file is opened. With this the length of a record is established.
2. The last record is marked.
3. The file is closed.

Writing a record:

1. The file is opened.
2. The file is positioned on the record to be written.
3. The record is written.
4. The file is closed.

Reading a record:

1. The file is opened.
2. The file is positioned over the record to be read.
3. The record is read.
4. The file is closed.

This is only an outline. In the following sections these processes will be explained in detail.

1.5.2 The Advantage over Sequential Storage

The greatest advantages of relative storage are:

- * faster access to individual records
- * does not require much of the computer's memory

It has already been mentioned that the sequential file must reside completely in the computer's memory for processing. Using sequential techniques, it may be necessary to search the entire file to find a given record. The record must be read and compared during the search process. But if a sequential file cannot be entirely loaded into memory, this method of search is impossible.

Using relative data files, the processing is much simpler. By using the record number, a desired record can be read individually. The file size is not limited to the computer's memory. So, for example, a program that uses all 3.5K bytes of a standard VIC-20 can manage a file with up to 163 Kbytes!

The advantages of relative over sequential file management are large enough that many of you, once acquainted with the techniques will prefer to use them.

1.5.3 Opening a Relative File

Relative files are also opened with the OPEN command. The command differs only slightly from that for sequential files. Take a look at the format of the OPEN command:

```
OPEN lfn,da,channel,"filename,L,"+CHR$(recordlength)
```

The first four parameters are identical to those for sequential files. They are logical file number, device address (normally 8), channel (2-14), and name of the file. Next follows an L which informs the DOS that a relative file should be opened, whose record length follows. This record length is transmitted with a CHR\$ code. The length is between one and 254. Thus each record of a relative file is limited to a maximum of 254 characters.

If the record length is smaller than 88, the record can be read with an INPUT# statement. For this, it is necessary

Anatomy of the 1541 Disk Drive

that the PRINT# statement transfers the record with a trailing RETURN. A PRINT# statement sends a RETURN when it is not ended with a semicolon. This RETURN is now a part of the record. When you want to read records with INPUT#, the record length must be increased by one.

A file composed of 80-character records, to be read by the INPUT# statement would be opened as follows:

```
OPEN 1,8,2,"FILE.REL,L,"+CHR$(81)
```

Here a relative file with the name "FILE.REL" is opened using channel 2. The record length should total 81 characters. Records comprised of 80 characters should be sent with a PRINT# statement, with no trailing semicolon.

It is important to note that only one relative file can be opened at a time. If you want to work with two relative files, you must always close the first before opening the second. One sequential file may be opened in addition to one relative file.

When a relative file is opened for the first time, the DOS creates as many "null" or unused records that can fit in a single 254 byte block. It creates these "null" records by writing a record with a CHR\$(255) at the beginning of each record. This is called formatting a relative file.

If you want to expand a relative file beyond the initial number of records that the DOS formatted, then you can reference the last record number that you want to write (by positioning to that record number) and the DOS automatically formats the records between the current end of file and the new last record number by writing records containing CHR\$(255). Formatting takes time to complete.

If you try to read a record whose number greater than that of the last record, the DOS returns the error RECORD NOT PRESENT. However, if you write a record which is greater than the highest current record, all records less than the new record number are also written with CHR\$(255). Subsequently accessing these record does not result in an error.

If you want to avoid long delays as relative records are formatted (as the file is expanded), then you should reference the last record number immediately after opening the file. The formatting of the null records takes place at that time instead of at a more inconvenient time.

To position the DOS for a specific relative record you must send a position command over the command channel (15), as shown here:

```
PRINT#lfn,"P"+CHR$(channel)+CHR$(low)+CHR$(high)+CHR$(byte)
```

If you are positioning to a record which is beyond the current end of file, the DOS presents the message RECORD NOT PRESENT appears to the disk error channel. If this record is to be written, then you can ignore the message. The following PRINT# statement is carried out in spite of the error message.

The parameters low and high in the P command designate the record number. The maximum value that can be given with one byte is 255, but a relative file contains up to 65535 records. Therefore, the record number must be transmitted in two bytes. These two bytes are calculated with the following formula:

```
HB=INT(RN/256)
LB=RN-HB*256
```

HB = High Byte (parameter high)

LB = Low Byte (parameter low)

RN = Record Number

The last parameter (byte) serves to position to a specific location within the given record. An example:

```
PRINT#2,"P"+CHR$(2)+CHR$(10)+CHR$(1)+CHR$(5)
```

Here the file is positioned to the fifth byte of the 266th record. This 266 is coded as a low byte of 10 and a high byte of 1 (high byte * 256 + low byte = record number).

To read or write a complete record, the file is positioned to the first byte of the record. If the last parameter is not given, the trailing RETURN (CHR\$(13)) is taken as the character location.

The corresponding BASIC program to establish a file of 100 80-character records looks like this:

```
100 RN=100
110 HB=INT(RN/256)
120 LB=RN-HB*256
130 OPEN1,8,2,"FILE.REL,L,"+CHR$(80)
140 OPEN2,8,15
150 PRINT#2,"P"+CHR$(2)+CHR$(LB)+CHR$(HB)+CHR$(1)
160 PRINT#1,CHR$(255)
170 CLOSE 1:CLOSE 15
```

Freeing 100 records takes some time. The creation of this file takes about ten minutes. Notice that of the 80 characters in a record, only 79 can be used to hold data, because transferring data with a PRINT# command adds a trailing RETURN.

Anatomy of the 1541 Disk Drive

1.5.4 Preparing Data for Relative Storage

As already mentioned, you cannot change the record length of a relative file. If a record consists of several fields, these fields must be combined. It is important that these fields always be in the same position so that they can be separated later. Let's work through a problem:

We want to manage an inventory using relative storage techniques. To that end, the following fields are necessary:

| | |
|------------------------|---------------|
| PART NUMBER | 4 CHARACTERS |
| DESCRIPTION | 15 CHARACTERS |
| QUANTITY | 5 CHARACTERS |
| COST | 6 CHARACTERS |
| PRICE | 6 CHARACTERS |
| ----- | |
| Record length 36 bytes | |
| ===== | |

The inventory contains approximately 200 items with a record length of 36 bytes. This inventory file can now be created:

```
100 RN=200:REM NUMBER OF INVENTORY ITEMS
110 RL=36 :REM RECORD LENGTH
120 OPEN 1,8,2,"INVEN,L,"+CHR$(36)
130 OPEN 2,8,15
140 PRINT#2,"P"+CHR$(2)+CHR$(200)+CHR$(0)+CHR$(1)
150 PRINT#1,CHR$(255)
160 CLOSE 1:CLOSE 2
```

Now the file is created and all records are written. Let's suppose that the inventory is present as a sequential file. It consists of 200 records, the fields of which are ordered one after the other. These fields must be written to the relative file. This is not simple, however, because many of the descriptions are not the full fifteen characters in length, for example. The structure of the relative file looks as follows:

| | |
|--------------------------------------|-----------------------------------|
| Position : | 11111111112222222223333333 |
| 123456789012345678901234567890123456 | ===== |
| Field : | P\$---DE\$-----Q\$---C\$---P\$--- |
| Contents : | 1 1/8 in. sheet 1344 11.40 20.30 |
| : | 2 No. 10 screw 1231 4.00 7.00 |
| : | 3 Valve A3A4 1243 11.45 16.40 |
| : | . |
| : | . |
| : | . |
| : | 200 1/2 in. tubing 2321 3.35 4.10 |

The fields will be read from the sequential file into the following variables:

| | |
|-------------|-----|
| Part number | PNS |
| Description | DES |
| Quantity | QS |
| Cost | C\$ |
| Price | P\$ |

The following command chains these fields together:

```
RC$ = PNS + DES + QS + CS + PS
```

The record variable RC\$ does not have the desired structure. The reason is that the quantity immediately follows the description. Because the quantity must begin at position 20 and the description is not always fifteen characters, we have a problem. In order to read the records from the relative file, the structure must be observed. Therefore, all fields that are shorter than the planned length must be padded with blanks. Taking this into account, the chaining goes like this:

```
BL$=""  
RC$=PNS+LEFT$(BL$,4-LEN(PNS))  
RC$=RC$+DES+LEFT$(BL$,15-LEN(DES))  
RC$=RC$+QS+LEFT$(BL$,5-LEN(QS))  
RC$=RC$+CS+LEFT$(BL$,6-LEN(C$))  
RC$=RC$+PS+LEFT$(BL$,6-LEN(P$))
```

This concatenation looks more complicated than it really is. Each field must be filled with enough blanks to bring it to its appropriate length. The blanks are added to the individual fields from the string BL\$, defined at the beginning. T

Let's go through an example:

Suppose the first part number is 8. The length of this string, LEN(PNS), is then one. The maximum length of this field (4) minus the actual length (1) is 3. The string PNS must therefore be padded with three blanks, LEFT\$(BL\$,3).

Each record of the old sequential file must be prepared in this manner before it can be transferred to the relative file.

Naturally, the above is true for all input values to be used in a relative file. Therefore, you must always remember to use a routine to fill each field with blanks to its full length when working with relative data processing.

1.5.5 Transferring Data

In principle, transferring data to and from a relative file does not differ from sequential storage. Records are written with PRINT# and read with INPUT# or GET#. The only difference is that before a record is be written or read, the file must be positioned to that record. This is accomplished with the P command. This example program illustrates what we have discussed:

```

100 BL$="          "
105 OPEN 1,8,2,"TEST.REL,L,"+CHR$(41)
110 OPEN 2,8,15
120 PRINT#2,"P"+CHR$(2)+CHR$(100)+CHR$(0)+CHR$(1)
130 PRINT#1,CHR$(255)
140 PRINT CHR$(147)
150 PRINT"INPUT RECORD:"
160 PRINT"-----"
170 INPUT"RECORD NUMBER (1-100) : ";RN
180 IF RN<1 OR RN>100 THEN PRINTCHR$(145);:GOTO160
190 INPUT"FIELD 1 (MAX.10 CHAR.) : ";F1$
200 IF LEN(F1$)>10 THEN PRINTCHR$(145);:GOTO190
210 INPUT"FIELD 2 (MAX. 5 CHAR.) : ";F2$
220 IF LEN(F2$)>5 THEN PRINTCHR$(145);:GOTO210
230 INPUT"FIELD 3 (MAX.10 CHAR.) : ";F3$
240 IF LEN(F3$)>10 THEN PRINTCHR$(145);:GOTO230
250 INPUT"FIELD 4 (MAX.15 CHAR.) : ";F4$
260 IF LEN(F4$)>15 THEN PRINTCHR$(145);:GOTO250
270 PRINT"CORRECT (Y/N)?"
280 GETX$:IF X$<>"Y" AND X$<>"N" THEN 280
290 IF X$="N" THEN 140
300 RCS=F1$+LEFT$(BL$,10-LEN(F1$))
310 RCS=RCS+F2$+LEFT$(BL$,5-LEN(F2$))
320 RCS=RCS+F3$+LEFT$(BL$,10-LEN(F3$))
330 RCS=RCS+F4$+LEFT$(BL$,15-LEN(F4$))
340 PRINT#2,"P"+CHR$(2)+CHR$(RN)+CHR$(0)+CHR$(1)
350 PRINT#1,RCS
360 PRINT"MORE INPUT (Y/N)?"
370 GETX$:IF X$<>"Y" AND X$<>"N" THEN 370
380 IF X$="Y" THEN 140
390 CLOSE 1:CLOSE 2:END

```

The following line-oriented documentation explains the operation of the program:

| | |
|-----|---|
| 100 | A blank-character string with 15 blanks is defined. |
| 105 | The relative file is opened with a length of 15. |
| 110 | The command channel 15 is opened. |
| 120 | To initialize the relative file, the head is positioned over the first byte of the last (100th) record. |
| 130 | The last record is freed and the initialization begun. |
| 140 | The screen is erased. |

150-260 The record no. and fields 1-4 are entered and checked for correct length.
 270-290 The entered data can be corrected.
 300-330 The record is prepared.
 340 The head is positioned over the first byte of the record.
 350 The record is written to the disk.
 360-380 New data can be entered.
 390 The program ends.

Now write some records with this program, but don't forget to save in case you need it later.

Certainly, it is also necessary to read and change existing records. To do this, the relative file is opened, the file is positioned to the appropriate record, and the record is read. This record must then be divided into its fields. Let's read a record that was recorded with the previous program. The following routine reads the record:

```

100 OPEN 1,8,2,"TEST.REL,L,"+CHR$(41)
110 OPEN 2,8,15
115 PRINT CHR$(147)
120 INPUT"RECORD NUMBER :";RN
130 PRINT#2,"P"+CHR$(2)+CHR$(RN)+CHR$(0)+CHR$(1)
140 INPUT#1,RC$
160 IF ASC(RC$)<>255 THEN PRINT"RECORD NOT FOUND!":
  GOTO250
170 PRINT RC$
250 CLOSE 1:CLOSE 2

```

This routine reads a specified record. If this record has never been written, it is recognized by the value 255 with which every record was marked at the establishment of the file.

A record that is found is displayed. You can see that the four fields are in the same positions. If you want to divide the record into its individual parts, you must use the function MIDS. For example, in order to extract field 1 of the record, give the following statements in the direct mode after the record is found and read:

```

F1$=MIDS(RC$,1,10)
PRINT F1$

```

Now the variable F1\$ contains the first field, as written by the first program. The division of records into individual fields is accomplished by building on the previous program. Add or change the following lines:

```

170 F1$=MIDS(RC$,1,10)
180 F2$=MIDS(RC$,11,5)
190 F3$=MIDS(RC$,16,10)
200 F4$=MIDS(RC$,26,15)

```

Anatomy of the 1541 Disk Drive

```
210 PRINT"FIELD 1: ";F1$  
220 PRINT"FIELD 2: ";F2$  
230 PRINT"FIELD 3: ";F3$  
240 PRINT"FIELD 4: ";F4$  
250 PRINT"MORE (Y/N)?"  
260 GETX$:IF X$<>"Y" AND X$<>"N" THEN 260  
270 IF X$="Y" THEN 115  
280 CLOSE 1:CLOSE 2
```

Here the record is separated into the individual fields and the fields are displayed. It is important for the MID\$ function that the exact positions of the fields within the record be maintained. The first parameter within the parentheses is the string variable containing the record. The second parameter is the position at which the number of characters represented by the parameter will be taken out. Further work may be done with the selected fields inside the program.

So far, we have read the records with the INPUT# statement. If the record is longer than 88 characters, it can no longer be read with the INPUT# statement. The way to get around the limited INPUT# statement is with the GET# statement. The bytes of a record are read one at a time with this command and assembled into a single string. Suppose you have a relative file with 128-character records. Now you want to read the tenth record of this file and place it in the variable RCS\$. The example of the following routine illustrates reading this with GET#:

```
100 OPEN 1,8,2,"TEST.GET,L,"+CHR$(128)  
110 OPEN 2,8,15  
120 PRINT#2,"P"+CHR$(2)+CHR$(10)+CHR$(0)+CHR$(1)  
130 RCS$=""  
140 FOR I=1 TO 128  
150 GET#1,X$  
160 RCS$=RCS$+X$  
170 NEXT I  
.  
.  
.  
.
```

After running this routine, the record is contained in the variable RCS\$. If this record had been written with a PRINT# statement without a trailing semicolon, the last character in the string will be a RETURN. To ignore this RETURN, allow the loop in line 140 to run only to 127. The last character of the record RETURN is not read.

As already mentioned, the last parameter of the P command specifies at which character the transfer of data should begin. If, for instance, in the 127-character record of the previous example, you want to read positions 40-60 into a

field, the head must be positioned over the 40th character and the next 21 bytes read. The following routine clarifies this:

```
100 OPEN 1,8,2,"TEST.GET,L,"+CHR$(128)
110 OPEN 2,8,15
120 PRINT#2,"P"+CHR$(2)+CHR$(10)+CHR$(0)+CHR$(40)
130 F$=""
140 FOR I=1 TO 21
150 GET#1,X$ 
160 F$=F$+X$ 
170 NEXT I
.
.
.
```

In line 120, the head is positioned over the the 40th byte of the tenth record in line 120 and the loop in lines 140-170 reads the following 21 bytes (bytes 40-60 of the record) into F\$.

You see then that the entire record need not be read if you only want to work with part of it.

1.5.6 Closing a Relative File

There is no difference between closing a relative file and sequential file. Because the command channel must always be open to send the position command when working with relative storage, it must also be closed.

1.5.7 Searching Records with the Binary Method

Normally each record is accessed by record number. But what if you want to search for a specific name in a relative file and the record number is not known. It is possible to read each record and compare each for the desired name. But this is very time consuming if the file has many records.

If the file is kept in name order, the records can be searched using an alternative method. This method is called a binary search. In order to use a binary search, the relative file must be arranged in sorted order. Using the above example, relative record 1 must contain a name with the lowest collating sequence while the last relative record must contain a name with the highest collating sequence. Thus the name AARON might be contained in relative record 1 and ZYPHER might be contained in the last relative record of

Anatomy of the 1541 Disk Drive

the file and all other names would be ordered throughout.

When records are added to the file, then the records must be reordered. Similarly if a name is changed, then the records must be reordered.

The binary search can be explained using a simple example. When you want to find a name in the telephone book, you don't search through it sequentially. You open the book in the middle and compare the first letter of the desired name with the first letter of names on the page. If the desired name comes before these, you turn halfway into the first section of the book, and so on. You go through it systematically.

The binary search is not a sequential search. It identifies a record halfway through the remaining number of records. The following example will clarify this:

There exists the following relative file, sorted in ascending order:

| Record number | Contents |
|---------------|----------|
| 1 | 1985 |
| 2 | 1999 |
| 3 | 2005 |
| 4 | 2230 |
| 5 | 2465 |
| 6 | 2897 |
| 7 | 3490 |
| 8 | 3539 |
| 9 | 4123 |
| 10 | 5000 |
| 11 | 5210 |
| 12 | 6450 |
| 13 | 6500 |
| 14 | 6550 |
| 15 | 6999 |

Out of these fifteen records we will search for a contents of 3490. It is not known which record it is stored in.

We must first know how many records are in the file. In this case, there are fifteen. We divide this by two. The middle of the file is record eight with the contents 3539. We determine if the contents of this record equal to the target value, and if not, whether it is larger or smaller. In this case, it (3539) is larger. This means the record we are looking for is in the first half of the file. So we divide eight by two and examine the contents of record four, 2230. Since 2230 is less than 3490, it lies between four and eight. We again divide by two and add this to record 4 which and results in record 6 whose contents is 2897. 2897 is less than 3490, so our target lies between records six and eight. Record seven is indeed the record we are looking for.

The principle of the binary search is to determine by the result of each comparison whether to search upwards or downwards until the search data is found. The maximum number of comparisons can be found using the following formula:

$$S = \text{INT}(\log(N)/\log(2)+1)$$

S is the number of comparisons (searches) and N is the number of records in the file. In a sorted relative data file with 1000 records, no more than ten comparisons will be necessary to find the desired record!

Let's create a relative data file with fifteen records to test the binary search:

```

100 OPEN1,8,2,"BINARY.REL,L,"+CHR$(5)
110 FOR I=1 TO 15
120 READ RCS
130 PRINT#1,RC$ 
140 NEXT I
150 CLOSE 1:CLOSE 2:END
160 DATA 1985,1999,2005,2230,2465,2897,3490,3539
170 DATA 4123,5000,5210,6450,6500,6550,6999

```

This program puts the fifteen records in a file called BINARY.REL using the values given in lines 160-170. The position command is not necessary because the data will be written straight through from first to last record. After opening the file the pointer points to the first record. This file is designed to be searched with the binary method. The following program is based on the logic of the binary search:

```

100 OPEN1,8,2,"BINARY.REL,L,"+CHR$(5)
110 OPEN2,8,15
120 PRINTCHR$(147)
140 N=15: REM NUMBER OF RECORDS
150 I=LOG(N)/LOG(2)
160 IF I-INT(I)<>0 THEN I=INT(I)+1
170 M=I-1
180 I=2^I
190 X=I/2
210 INPUT"RECORD TO FIND (* TO END): ";SR$
220 IF SR$="*" THEN 320
230 IF M<0 THEN PRINT"RECORD NOT FOUND":GOTO140
240 M=M-1
250 PRINT#2,"P"+CHR$(2)+CHR$(X)+CHR$(0)+CHR$(1)
260 INPUT#1,RC$ 
270 IF SR$=RC$ THEN 340
280 IF SR$<RC$ THEN X=X-2^M:GOTO230
290 X=X+2^M
300 IF X>I THEN PRINT"END OF FILE EXCEEDED!"
310 GOTO 230
320 CLOSE 1:CLOSE 2

```

Anatomy of the 1541 Disk Drive

```
330 END
340 PRINT"RECORD FOUND!"
350 PRINT"CONTENTS : ";RCS
360 GOTO 140
```

Program Documentation:

100 The relative file "BINARY.REL" is opened.
110 The command channel is opened.
120 The screen is erased.
140 The number of records is assigned to the variable N.
150-190 If the maximum number of records does not represent a power of two, the next higher power of two is formed. The file will be expanded, but no records are lost. The exponent of this power of two is used as the index. X is the value of I/2. I/2 indicates the exact middle of the (expanded) file. After that, the variable M receives the value of I-1.
210-220 The record to be found is read. To end the program, enter a '*'.
230 If M<0, the record was not found.
240 M is decremented by one. The next Mth power represents half of the rest of the file.
250-260 The file is positioned over the record containing in the variable X.
270 If the target record is found, the search is ended and the record displayed.
280-310 It is determined if the target record is larger or smaller than the record just read. The middle of the upper or lower half (as appropriate) is stored in the variable X.
320-330 The file is closed and the program is ended.
340-360 The found record is displayed.

This binary search, coded in BASIC, is implemented universally. Only the number of records and the appropriate record to be searched for need be changed. You can use this routine for finding records in your sorted relative data files.

1.5.8 Searching Records with a Separate Index File

If you work with individual records frequently and need quick access with alphanumeric keys that don't correspond to the logical record number, and your file is not sorted, we recommend another method.

Create an index file for each desired key field, in which each record is composed of

- an index key
- the corresponding record number

This entire index file is to be loaded into the computer's memory. An example:

You have constructed your name and address manager as a relative file consisting of

- First name
- Last name
- Street
- City, State
- Zip code
- Telephone number

You want to be able to search the file based on the last name. So you create an additional sequential file that contains the desired key (in this case the last name) and the record number of the corresponding record in the relative file.

The index file is read completely into the computer so the search can be accomplished as quickly as possible. If you want to access a record that has the last name **HARRIS**, then you search through the appropriate index in memory and when found, read the corresponding relative record by using the record number also contained in the index.

Here is an example:

We assume that a data file and an index file exist for the names:

| Data file: | | | Index file: | | |
|------------|------------|-------------|----------------------|---------------------|----|
| ===== | | | ===== | | |
| Last name | First name | more fields | Index (last name) | Record No. LB HB | |
| Smith | John | | Smith | 01 | 00 |
| Harris | Sam | | Harris | 02 | 00 |
| Hanson | Carl | | Hanson | 03 | 00 |
| Johnson | Mark | | Johnson | 04 | 00 |
| . | : | | . | | . |
| . | : | | . | | . |
| . | : | | . | | . |
| Green | Simon | | Green | 99 | 00 |

The file contains 99 records. Before the program can be used, the index file must be read in. This can be a sequential file, which can be read into a memory table reserved with DIM ITS(99). The first twenty characters of each index table position comprise the last name. The next

Anatomy of the 1541 Disk Drive

to the last byte (no. 21) is the low byte and the last byte (no. 22) is the high byte of the record number. With these conditions, a desired record can be found with the following routine:

```
.  
. .  
100 INPUT "LAST NAME";NS  
110 FOR I=1 TO 99  
120 IF LEFT$(ITS(I),20)=NS THEN 150  
130 NEXT I  
140 PRINT "NAME NOT FOUND!":END  
150 PRINT "RECORD FOUND!"  
160 OPEN1,8,2,"ADDRESS,L,"+CHR$(81)  
170 OPEN 2,8,15  
180 PRINT#2,"P"+CHR$(2)+MID$(ITS(I),21,1)+CHR$(0)  
     +CHR$(1)  
190 INPUT#1,RCS  
. .
```

The loop in lines 110-130 goes through the index table sequentially, searching for the target name contained in the twenty leftmost characters. If the name is not found, an appropriate message is given (line 140), before the program is ended.

If, in line 120, the target name matches the index entry, the program branches to line 150. After giving the message, the address file is opened. After opening the command channel, the position command is sent to the disk. Because the next to the last byte of the index entry contains the low byte of the record number, it must be extracted using the MID\$ function. The high byte is known to be zero since there are fewer than 255 record.

Finally the relative record is read in line 190.

The access of index files is an equally fast and extraordinarily flexible form of data organization. One can theoretically have as many index files as desired. Above all, you must take note of two important restrictions:

1. Changes in the main data file which affect the key fields must also be made to the corresponding index file. With several index files this can become very time-consuming.
2. The number and size of the index files that are kept in the computer's memory for fast access are limited by the availability of memory.

1.5.9 Changing Records

The logical process for changing a record is this:

1. Read the record
2. Split the record into its fields
3. Change the appropriate field
4. Rebuild the record (combine fields)
5. Rewrite the record

In section 1.5.5 we wrote some records in the file "TEST.REL". This file had the following properties:

| | |
|--------------------------------|---------------------|
| Record length | 41 bytes |
| Number of records | 100 |
| Number of fields | 4 |
| Length, position field 1 : | 10, 1-10 |
| " , " | field 2 : 5, 11-15 |
| " , " | field 3 : 10, 16-25 |
| " , " | field 4 : 15, 26-40 |
| Trailing RETURN in position 41 | |

A file description such as the one above should be made for each of your files. This is very important if other programs are to use these data. The file description defines the order and length of the fields of the file.

In this file, we allow for the contents of the records to be changed. The following program allows changes:

```

100 REM =====
110 REM      PREPARATION
120 REM =====
130 BL$="
140 OPEN 1,8,2,"TEST.REL,L,"+CHR$(41)
150 OPEN 2,8,15
160 REM =====
170 REM      READ RECORD
180 REM =====
190 PRINT CHR$(147)
200 INPUT"RECORD NUMBER (1-100): ";RN
205 IF RN<1 OR RN>100 THEN PRINTCHR$(145);:GOTO200
210 PRINT"-----"
220 PRINT#2,"P"+CHR$(2)+CHR$(RN)+CHR$(0)+CHR$(1)
230 INPUT#1,RC$ 
240 IF ASC(RC$)<>255 THEN 270
250 PRINT "RECORD NOT WRITTEN"
260 GOTO 630
270 REM =====
280 REM      PREPARE RECORD
290 REM =====
300 F$(1)=MID$(RC$,1,10)
310 F$(2)=MID$(RC$,11,5)
320 F$(3)=MID$(RC$,16,10)
330 F$(4)=MID$(RC$,26,15)

```

Anatomy of the 1541 Disk Drive

```
340 REM =====
350 REM      DISPLAY FIELDS
360 REM =====
370 PRINT CHR$(147)
380 FOR I=1 TO 4
390 PRINT"FIELD";I;" ";F$(I)
400 NEXT I
410 PRINT"-----"
420 REM =====
430 REM      CHANGE FIELDS
440 REM =====
450 PRINT"CHANGE WHICH FIELD (1-4)?"
460 GETX$ : IF X$<"1" OR X$>"4" THEN 460
470 INPUT"NEW CONTENTS : ";F$(VAL(X$))
480 PRINT"RECORD IS CHANGED"
490 PRINT"MORE CHANGES IN THIS RECORD (Y/N)?"
500 GETX$ : IF X$<>"Y" AND X$<>"N" THEN 500
510 IF X$="Y" THEN 340
520 REM =====
530 REM      CHAIN FIELDS
540 REM =====
550 RCS=F$(1)+LEFT$(BLS,10-LEN(F$(1)))
560 RCS=RCS+FS(2)+LEFT$(BLS,5-LEN(F$(2)))
570 RCS=RCS+FS(3)+LEFT$(BLS,10-LEN(F$(3)))
580 RCS=RCS+FS(4)+LEFT$(BLS,15-LEN(F$(4)))
590 REM =====
600 REM      WRITE RECORD BACK
610 REM =====
620 PRINT#1,RC$ 
630 REM =====
640 REM      END PROGRAM?
650 REM =====
660 PRINT"MORE CHANGES TO FILE (Y/N)?"
670 GETX$ : IF X$<>"Y" AND X$<>"N" THEN 670
680 IF X$="Y" THEN 160
690 CLOSE 1:CLOSE 2:END
```

After this program is RUN you can change any desired record. This record must have been written with the program in section 1.5.5.

This editing program does not check the new field data for correct length.

The important commands in this program have already been explained in the corresponding sections.

1.5.10 Expanding a Relative File

Every relative file has a user-determined number of records that ranges from 1 to 65538. This number is the record with the highest record number and is written to the file with a

value of CHR\$(255). Writing this last record also formats all records in the file that precede this record number with CHR\$(255).

You can expand the size of a relative file at a later time. For example, consider a relative file that is initially created with three records. After the file is OPENed, you position the file at record number 3 and write the record with CHR\$(255). Here's an example of how you might do this:

```
10 OPEN 1,8,2,"REFILE,L,"+CHR$(50)
20 OPEN 15,8,15
30 PRINT#15,"P"+CHR$(2)+CHR$(3)+CHR$(0)+CHR$(1)
40 PRINT#1,CHR$(255)
```

When statement 40 is performed, not only is record 3 written, but records 1 and 2 are also formatted by the DOS. Subsequently, if you position and write a 90th record, the DOS formats records 4 through 89 (see lines 150 and 160 below). Each time the file is expanded, the DOS formats records between the current high record number and the new high record number.

```
150 PRINT#15,"P"+CHR$(2)+CHR$(90)+CHR$(0)+CHR$(1)
160 PRINT#1,CHR$(255)
.
.
500 PRINT#15,"P"+CHR$(2)+CHR$(175)+CHR$(0)+CHR$(1)
510 PRINT#1,CHR$(255)
.
```

An existing relative file can be expanded at any time, provided there is sufficient room on the disk. To do so, the new last record is written with CHR\$(255). At the same time, all records between the old and new end of file are also formatted.

When writing a record to a relative file whose record number is higher than the current high record number, a DOS error is not returned. If there is room on the diskette for the new records (current high record number through the new high record number) the file is simply expanded. If there is a lack of space on the diskette for the new records, the DOS error FILE TOO LARGE is returned. When reading a record from a relative file whose record number is higher than the current high record number, the DOS error RECORD NOT PRESENT is returned to the error channel.

1.5.11 Home Accounting with Relative Data Storage

A complete example of problem solving using relative files offers you a good insight into the organization of relative file processing. It can be used by most readers of this book. Few examples of relative file usage have been explained elsewhere, so here is such a program.

In this application, individual accounts are numbered. This account number is used as a key to the corresponding records.

This provides that each account contain a clear text description. The first field of each record is this account name. Twenty characters are allowed for the name.

Since information is needed for each month, twelve fields are necessary for each record. These summary fields are each ten characters long. The account summaries are stored as strings which are converted to numbers with the help of the VAL function. The record consists of 141 characters (twenty for the name, 12*10 for the month summaries and one for RETURN).

The layout of the records follows:

| Field | Length | Position |
|------------------|--------|----------|
| Account name | 20 | 1-20 |
| January summary | 10 | 21-30 |
| February summary | 10 | 31-40 |
| . | | |
| . | | |
| . | | |
| November summary | 10 | 121-130 |
| December summary | 10 | 131-140 |

The maximum number of accounts per year is set to twenty. Therefore, a year's file consists of twenty records of 141 bytes each.

We also specified the functions that this program is to perform.

- * Create accounts
- * Post to accounts
- * Display summary by Account
- * Display account names
- * Display Monthly summary

* Display Year-end summary

Create accounts:

This function creates the file for a year. It asks for the number and names of the accounts. The records are then written with the account name and the summary fields are set to zero. Should a data file already exist with the same name, the old file is deleted.

Post to accounts:

This function asks for the account number to be posted and whether the posting is an income or expense. For example, the category "SALARY" is an income account and the category "RENT" is an expense account.

After this, the current contents of the account are displayed. When you post the appropriate amount, which is always positive. If you are making a correction entry, use a negative amount.

Now the updated contents are displayed. You may then make a new entry.

Producing account summary:

After entering the account number, the summary of the twelve months and the year's total are displayed for that account.

Display account names:

Each account is determined by its number. Should you forget a number, this function lists all accounts by name and corresponding number.

Display monthly summary:

Here the income or expenses of all accounts are displayed. The monthly balance of all accounts is also displayed.

Display year-end summary:

This function shows the summary of all accounts and the year-end balance. This display takes some time, since all monthly fields of each record must be read and totaled. It accesses the entire file.

Here's the program listing:

Anatomy of the 1541 Disk Drive

```
100 POKE 53280,2:POKE53281,2:PRINTCHR$(158)::  
    BL$="":DIMS(12)  
110 GOSUB 2050  
120 INPUT"CURRENT YEAR : ";YS  
130 IF Y$<"1984"ORYS>"1999"THENPRINTCHR$(145);:GOTO120  
140 GOSUB 2050  
150 PRINT"SELECT A FUNCTION:  
160 PRINT"-----":PRINT  
170 PRINT" -1- CREATE ACCOUNTS"  
180 PRINT" -2- POST TO ACCOUNTS"  
190 PRINT" -3- ACCOUNT SUMMARY"  
200 PRINT" -4- DISPLAY ACCOUNT NAMES"  
210 PRINT" -5- MONTHLY SUMMARY"  
220 PRINT" -6- YEAR SUMMARY":PRINT  
230 PRINT" -0- END PROGRAM"  
240 GETX$:IFX$<"0"ORX$>"9"THEN240  
250 IFX$<>"0"THEN270  
260 END  
270 ONVAL(X$)GOSUB 290,560,920,1160,1370,1720  
280 GOTO 140  
290 REM ======  
300 REM      CREATE ACCOUNTS  
310 REM ======  
320 GOSUB 2050  
330 PRINT"CAUTION! ANY PREVIOUS FILE FOR THIS YEAR"  
340 PRINT"WILL BE ERASED!":PRINT  
350 PRINT"CONTINUE (Y/N)?"  
360 GETX$:IFX$<>"Y"ANDX$<>"N"THEN360  
370 IFX$="Y"THEN390  
380 CLOSE1:CLOSE2:RETURN  
390 OPEN2,8,15,"S:ACCOUNTS"+YS  
400 OPEN1,8,2,"ACCOUNTS"+YS+",L,"+CHR$(141)  
410 GOSUB 2050  
420 INPUT"HOW MANY ACCOUNTS (1-20): ";AN  
430 PRINT  
440 IFAN<1ORAN>20THENPRINTCHR$(145);:GOTO420  
450 FORI=1TOAN  
460 PRINT"NAME OF ACCOUNT NO.";I;": "  
470 INPUTANS  
480 IFLEN(ANS)>20THENPRINTCHR$(145);:GOTO420  
490 RCS=ANS+LEFT$(BLS,20-LEN(ANS))  
500 FORX=1TO12  
510 RCS=RCS+STR$(0)+LEFT$(BLS,8)  
520 NEXTX  
530 PRINT#1,RCS  
540 NEXT I  
550 CLOSE 1:CLOSE 2:RETURN  
560 REM ======  
570 REM      POSTING  
580 REM ======  
590 GOSUB2050  
600 INPUT"ACCOUNT NUMBER";AN  
610 IFAN<1ORAN>20THENPRINTCHR$(145);:GOTO600  
620 GOSUB2140  
630 PRINT"-----"
```

```

640 PRINT"NO.";AN;" - ";ANS
650 PRINT"-----"
660 PRINT"INCOME OR EXPENSE (I/E)?"-----"
670 PRINT"-----"
680 GETX$ : IFX$<>"I" ANDX$<>"E" THEN 680
690 INPUT"MONTH (1-12) : ";M
700 IFM<1ORM>12THENPRINTCHR$(145);:GOTO690
710 PRINT"-----"
720 PRINT"OLD CONTENTS : ";S(M)
730 PRINT"-----"
740 INPUT"POSTING AMOUNT : ";PA
750 PRINT"-----"
760 IFX$="I" THENS(M)=S(M)+PA:GOTO780
770 S(M)=S(M)-PA
780 PRINT"NEW CONTENTS : ";S(M)
790 PRINT"-----"
800 RCS=ANS+LEFT$(BL$,20-LEN(ANS))
810 FORI=1TO12
820 SS=STR$(S(I))
830 RCS=RCS+SS+LEFT$(BL$,10-LEN(SS))
840 NEXTI
850 PRINT#2,"P"+CHR$(2)+CHR$(AN)+CHR$(0)+CHR$(1)
860 PRINT#1,RCS
870 CLOSE1:CLOSE2
880 PRINT"FURTHER POSTING (Y/N)?"-----"
890 GETX$ : IFX$<>"Y" ANDX$<>"N" THEN 890
900 IFX$<>"Y" THENGOSUB2050:GOTO600
910 RETURN
920 REM =====
930 REM ACCOUNT SUMMARY
940 REM =====
950 GOSUB2050
960 INPUT"ACCOUNT NUMBER : ";AN
970 IFAN<1ORAN>20THENPRINTCHR$(145);:GOTO960
980 GOSUB2140
990 GOSUB2050:PRINTCHR$(145);CHR$(145);
1000 PRINT"-----"
1010 PRINT"NO.";AN;" - ";ANS
1020 PRINT"-----"
1030 PRINT"MONTH TOTAL"
1040 PRINT"-----"
1050 TL=0
1060 FORI=1TO12
1070 PRINTI;TAB(8);S(I)
1080 TL=TL+S(I)
1090 NEXTI
1100 PRINT"-----"
1110 PRINT"TOTAL";TAB(8);TL
1120 PRINTTAB(9);"====="
1130 PRINT"RETURN FOR MORE"
1140 INPUTX$
1150 CLOSE1:CLOSE2:RETURN
1160 REM =====
1170 REM DISPLAY ACCOUNT NAMES
1180 REM =====

```

Anatomy of the 1541 Disk Drive

```
1190 GOSUB2050
1200 OPEN1,8,2,"ACCOUNTS"+Y$+,L,"+CHR$(141)
1210 OPEN2,8,15
1220 I=1
1230 PRINT#2,"P"+CHR$(2)+CHR$(I)+CHR$(0)+CHR$(1)
1240 RC$=""
1250 FORX=1TO20
1260 GET#1,X$
1270 RC$=RC$+X$
1280 NEXTX
1290 INPUT#2,X
1300 IFX=50THEN1340
1320 PRINTI;" - ";RC$
1330 I=I+1:GOTO1230
1340 PRINT"RETURN FOR MORE"
1350 INPUTX$
1360 CLOSE1:CLOSE2:RETURN
1370 REM =====
1380 REM MONTH SUMMARY
1390 REM =====
1400 GOSUB2050
1410 INPUT"MONTH : ";M
1420 GOSUB2050
1430 PRINT"-----"
1440 PRINT"NO. NAME          CONTENTS"
1450 PRINT"-----"
1460 OPEN1,8,2,"ACCOUNTS"+Y$+,L,"+CHR$(141)
1470 OPEN2,8,15
1480 TL=0
1490 FORAN=1TO20
1500 AN$="" : SS="""
1510 PRINT#2,"P"+CHR$(2)+CHR$(AN)+CHR$(0)+CHR$(1)
1520 FORI=1TO20
1530 GET#1,X$
1540 AN$=AN$+X$
1550 NEXTI
1560 INPUT#2,F
1570 IFF<>50THEN1590
1580 GOTO1670
1590 PRINT#2,"P"+CHR$(2)+CHR$(AN)+CHR$(0)+CHR$(20+(M-1)*10)
1600 FORI=1TO10
1610 GET#1,X$
1620 SS=SS+X$
1630 NEXT I
1640 TL=TL+VAL(SS)
1650 PRINT AN;TAB(6);AN$;TAB(26);SS
1660 NEXT AN
1670 PRINT"-----"
1680 PRINT"TOTAL BALANCE";TAB(26);STR$(TL)
1690 PRINTTAB(26);"===== "
1700 PRINT"RETURN FOR MORE";
1710 INPUTX$:CLOSE1:CLOSE2:RETURN
1720 REM =====
1730 REM YEAR SUMMARY
1740 REM =====
```

```

1750 GOSUB2050
1760 OPEN1,8,2,"ACCOUNTS"+Y$+,L,"+CHR$(141)
1770 OPEN2,8,15
1780 PRINT"-----"
1790 PRINT"NO. NAME           YEAR BALANCE"
1800 PRINT"-----"
1810 TL=0
1820 FOR AN=1TO20
1830 PRINT#2,"P"+CHR$(2)+CHR$(AN)+CHR$(0)+CHR$(1)
1840 RC$=""
1850 FORI=1TO140
1860 GET#1,X$
1870 RC$=RC$+X$
1880 NEXTI
1890 INPUT#2,F:IFF=50THEN1980
1900 AN$=LEFT$(RC$,20)
1910 YB=0
1920 FORI=1TO10
1930 YB=YB+VAL(MIDS$(RC$,20+(I-1)*10,10))
1940 NEXTI
1950 TL=TL+YB
1960 PRINTAN;TAB(6);ANS;TAB(26);YB
1970 NEXTAN
1980 PRINT"-----"
1990 CLOSE1:CLOSE2
2000 PRINT"TOTAL BALANCE";TAB(26);TL
2010 PRINTTAB(26);"====="
2020 PRINT"RETURN FOR MORE"
2030 INPUTX$
2040 RETURN
2050 REM =====
2060 REM   PROGRAM HEADING
2070 REM =====
2080 PRINTCHR$(147);
2090 PRINTTAB(4);"====="
2100 PRINTTAB(4);"H O M E   A C C O U N T I N G"
2110 PRINTTAB(4);"====="
2120 PRINT:PRINT
2130 RETURN
2140 REM =====
2150 REM   READ ACCOUNT
2160 REM =====
2170 OPEN1,8,2,"ACCOUNTS"+Y$+,L,"+CHR$(141)
2180 OPEN2,8,15
2190 PRINT#2,"P"+CHR$(2)+CHR$(AN)+CHR$(0)+CHR$(1)
2200 RC$=""
2210 FORI=1TO140
2220 GET#1,X$
2230 RC$=RC$+X$
2240 NEXT I
2250 INPUT#2,F
2260 IFF<>50THEN2300
2270 PRINT"YEAR FILE OR ACCOUNT NOT FOUND!":PRINT
2280 PRINT"RETURN FOR MORE":INPUTX$
2290 CLOSE1:CLOSE2:RETURN

```

Anatomy of the 1541 Disk Drive

```
2300 ANS=LEFT$(RC$,20)
2310 TL=0
2320 FOR I=1 TO 12
2330 S(I)=VAL(MID$(RC$,20+(I-1)*10,10))
2340 TL=TL+S(I)
2350 NEXT I
2360 RETURN
```

Program Documentation:

Initialization:

```
-----  
100      Screen and character color set; blank character  
          string defined; variable for account summaries  
          dimensioned.  
110-130   Program heading displayed and current year read.  
140-280   Program functions displayed and choice read;  
          corresponding subprogram called.
```

Establish Accounts:

```
-----  
390-400   Any existing files of this year are erased and the  
          new file is opened.  
480       Account name is placed in positions 1-20 of the  
          record RC$.  
500-540   Month summaries are set to zero and placed in the  
          record as string variables.  
530       The record is transferred with a trailing RETURN.
```

Posting:

```
-----  
590       The routine "Read Account" is called. This routine  
          places the month summaries of the account in the  
          variables S(1) to S(12).  
800       Account name is placed in the record.  
810-840   Account summary is placed in the record.  
850-860   Record is transferred.
```

Account Summary:

```
-----  
980       Desired account is read and the month summaries  
          are placed in variables S(1) to S(12).  
1050-1090  Month summaries are displayed and the total (TL)  
          is added up.  
1110       Total displayed.
```

Display Account Names:

```
-----  
1220     Account number is initialized.  
1230     The head is positioned over the corresponding
```

record.

- 1240-1280 Account name is read out of the record in RCS.
1290-1300 If RECORD NOT PRESENT is sent over the error
channel (error 50), the routine is broken off.
1320 Account number and name are displayed.

Month Summary:

- 1490-1660 Loop to read all accounts.
1510 Position head over record.
1520-1550 Read account name.
1560-1580 Determine if account exists; stop if all twenty
accounts have been defined.
1590 Position over summary field of the desired month.
1600-1630 Read the month summary.
1640 Add month summary to total.
1650 Account number, account name and month summary are
displayed.
1680 Total balance displayed.

Year Summary:

- 1820-1970 Loop to read all accounts
1830 Position head over record.
1850-1880 Complete record read into RCS.
1890 Test if RECORD NOT PRESENT.
1900 Get account name from record.
1920-1940 Read month summary, convert to numerical form and
add to year summary (YS).
1950 Year summary (YS) is added to total (TL).
1960 Account number, account name and year summary
displayed.
2000 Total balance (month balance) displayed.

Read Account:

- 2190 Position over record given in AN.
2210-2240 Read record into RCS.
2250-2260 Test if RECORD NOT PRESENT.
2300 Account name read from record.
2320-2350 Month summaries read from record, converted to
numerical form and placed into the table S(1) to
S(12).

Anatomy of the 1541 Disk Drive

1.6 Disk Error Messages and their Causes

If you cause an error while working with the disk drive, the drive signals this by blinking the red LED. The LED blinks until you read the error channel of the disk drive or until you send a new command. First we want to see how to read the error message from the disk drive.

In order to do this, the error/command channel must be opened with the secondary address 15:

```
100 OPEN 15,8,15
110 INPUT#15,A,B$,C,D
120 PRINT A,B$,C,D
```

If no error has occurred, the following is displayed:

```
0      OK      0      0
```

The first number is the error number, in this case zero, which means no error has occurred. Next follows the error message (variable BS). The variables C and D contain the track and sector numbers, respectively, in which the error occurred, which is dependent on the type of error (mainly associated with hardware errors and block-oriented commands).

This routine accomplishes the same function:

```
100 OPEN15,8,15
110 GET#15,A$:PRINTA$,:IFST<>64THEN110
00, OK,00,00
```

Here characters are read from the error channel until the end is recognized (status = 64). This gives the error message exactly as the BASIC 4.0 command

```
PRINT DS$
```

When using BASIC 4.0, variables DS\$ and DS are reserved variables which contain the complete error message and error number. Each access of these variables gives the error status of the last disk operation. Unfortunately, the Commodore 64 does not use BASIC 4.0, so these variables are meaningless in Commodore 64 BASIC (BASIC 2.0).

Next follows the list of error messages that the DOS can recognize:

00, OK,00,00

This message occurs when the last disk operation was error free or if no command or data was sent after the last error message.

01, FILES SCRATCHED,XX,00

This is the message after a SCRATCH command. The number XX denotes the number of files that were erased. Since this is not really an error message, the LED does not blink.

20, READ ERROR,TT,SS

This error means that the 'header' of a block was not found. It is usually the result of a defective diskette. TT and SS designate the track and sector in which the error occurred. Remedy: change defective diskette.

21, READ ERROR,TT,SS

This is also a read error. The SYNC (synchronous) marker of a block was not found. The cause may be an unformatted disk, or no disk in the drive. This error can also be caused by a misaligned read/write head. Remedy: Either insert a diskette, format the disk, or have the read/write head aligned.

22, READ ERROR,TT,SS

This error message means that a checksum error has occurred in the header of a data block, which can be caused by the incorrect writing of a block.

23, READ ERROR,TT,SS

The error implies that a data block was read into the DOS buffer, but a checksum error occurred. One or more data bytes are incorrect. Remedy: Save as many files as possible onto another diskette.

24, READ ERROR,TT,SS

This error also results from a checksum error in the data block or in the preceding data header. Incorrect bytes have been read. Remedy: same as error 23.

25, WRITE ERROR,TT,SS

This error is actually a VERIFY ERROR. After writing every block the data is read again checked against the data in the buffer. This error is produced if the data are not identical. Remedy: Repeat the command that caused the error. If this doesn't work, the corresponding block must be locked out from further use with the block-allocate command.

26, WRITE PROTECT ON,TT,SS

An attempt was made to write to a disk with a write protect tab on it. Remedy: Remove write protect tab.

27, READ ERROR,TT,SS

A checksum error occurred in the header of a data block. Remedy: Repeat command or rescue block.

Anatomy of the 1541 Disk Drive

28,WRITE ERROR,TT,SS

After writing a data block, the SYNC characters of the next data block were not found. Remedy: Format disk again, or exchange it.

29,DISK ID MISMATCH,TT,SS

The ID (two character disk identification) in the DOS memory does not agree with the ID on the diskette. The diskette was either not initialized or there is an error in the header of a data block. Remedy: Initialize diskette.

30,SYNTAX ERROR,00,00

A command was sent over the command channel that the DOS could not understand. Remedy: Check and correct command.

31,SYNTAX ERROR,00,00

A command was not recognized by the DOS, for example, the BACKUP command (Duplicate) on the 1541. Remedy: Do not use the command.

32,SYNTAX ERROR,00,00

The command sent over the command channel was longer than 40 characters. Remedy: Shorten command.

33,SYNTAX ERROR,00,00

A wildcard ('*' or '?') was used in an OPEN or SAVE command. Remedy: Remove wildcard.

34,SYNTAX ERROR,00,00

The DOS cannot find the filename in a command. This may be because a colon was forgotten after the command word. Remedy: Check and correct command.

39,FILE NOT FOUND,00,00

User program of type 'USR' was not found for automatic execution. Remedy: Check filename.

50,RECORD NOT PRESENT,00,00

A record was addressed in a relative data file that has not yet been written. When writing a record this is not really an error. You can avoid this error message if you write the highest record number of the file with CHR\$(255) when initializing it. This error will no longer occur upon later access.

51,OVERFLOW IN RECORD,00,00

The number of characters sent when writing a record in a relative file was greater than the record length. The excess characters are ignored.

52,FILE TOO LARGE,00,00

The record number of a relative file is too big; the diskette does not have enough capacity. Remedy: Use another diskette or reduce the record number.

60,WRITE FILE OPEN,00,00

An attempt was made to OPEN a file that had not previously been CLOSEd after writing. Remedy: Use mode 'M' in the OPEN command to read the file.

61,FILE NOT OPEN,00,00

A file was accessed that had not been OPENed. Remedy: Open the file or check the filename.

62,FILE NOT FOUND,00,00

An attempt was made to load a program or open a file that does not exist on the diskette. Remedy: Check the filename.

63,FILE EXISTS,00,00

An attempt was made to establish a new file with the name of a file already on the diskette. Remedy: Use a different filename or @: (to replace the old file).

64,FILE TYPE MISMATCH,00,00

The file type use in the OPEN command does not agree with the file type in the directory. Remedy: Correct file type.

65,NO BLOCK,TT,SS

This error message is given in association with the BLOCK-ALLOCATE command when the specified block is no longer free. In this case, the DOS automatically searches for a free block with a higher sector and/or track number and gives these values as the track and sector number in the error message. If no block with a greater number is free, two zeroes will be given.

66,ILLEGAL TRACK OR SECTOR,TT,SS

If you attempt to use a block with the block commands that does not exist, this error is returned.

67,ILLEGAL TRACK OR SECTOR,TT,SS

The track-sector combination of a file produces a non-existent track or sector.

70,NO CHANNEL,00,00

An attempt was made to open more files than channels available or a direct access channel is already reserved.

71,DIR ERROR,TT,SS

The number of free blocks in the DOS storage does not agree with the BAM. Usually this means the disk has not been initialized.

72,DISK FULL,00,00

Fewer than three blocks are free on the diskette or the maximum number of directory entries have been used (144 on the VIC 1541).

Anatomy of the 1541 Disk Drive

73,CBM DOS V.26 1541,00,00

The message is the power-up message of the VIC 1541. As an error message, it appears when an attempt is made to write to a disk that was not formatted with the same DOS version, for example, the forerunner of the CBM 4040, the CBM 2040 (DOS version 1.0).

74,DRIVE NOT READY,00,00

When one attempts to use the disk without a diskette in the drive, this error message is returned.

75,FORMAT SPEED ERROR,00,00

This error message occurs only on the CBM 8250. It indicates a deviation from the normal revolutions per minute while formatting.

1.7 Overview of Commands with a Comparison of BASIC 2.0 - BASIC 4.0 - DOS 5.1

| BASIC 2.0 | BASIC 4.0 (abbrev) | DOS 5.1 |
|---------------------------------|-----------------------------|---------|
| OPEN - Mode 'A' | APPEND (aP) | |
| | BACKUP (bA) | |
| LOAD"\$",8 & LIST V(alidate) | CATALOG (cA) @\$ or >S | |
| | COLLECT (coL) @V or >V | |
| | CONCAT (conC) | |
| C(opy) | COPY (cop) @C:.. or >C:.. | |
| CLOSE ... | DCLOSE (dC) | |
| LOAD"...",8 | DLOAD (dL) @file or /file | |
| OPEN ...,8,... | DOPEN (dO) | |
| OPEN 1,8,15 ... | DSS, DS @ or > | |
| SAVE"...",8 | DSAVE (dS) | |
| N(new) | HEADER (hE) @N:.. or >N:.. | |
| I(initialize) | I(initialize) @I or >I | |
| P | RECORD (reC) | |
| R(ename) | RENAME (reN) @R:.. or >R:.. | |
| S(cratch) | SCRATCH (sC) @S:.. or >S:.. | |

This table lists the different versions of BASIC. The DOS 5.1 is found on the TEST/DEMO disk and will be described in section 4.2.1.

The essential difference between BASIC 2.0 and BASIC 4.0 is that with BASIC 2.0, each command is executed by the disk control system (DOS) and must be sent over channel 15. The disk commands of BASIC 4.0 manage this channel themselves (with the exception of INITIALIZE). For example, the command HEADER D0,"DISK1",IHJ generates the same sequence of commands necessary in BASIC 2.0, namely:

```
OPEN 1,8,15,"N:DISK1,HJ"
CLOSE 1
```

Here are the specifics of the BASIC 4.0 commands:

Note the following parameters:

```
lfn = logical file number
dn = drive number - drive 0 (D0) or drive 1 (D1) with
      a double drive, or D0 for a single drive
da = device address of the disk drive (U4 to U31)
```

Information in parentheses is optional. The standard parameters D0 and U8 will be used (meaning Drive 0 and Unit 8).

Anatomy of the 1541 Disk Drive

APPEND:

This command allows data to be added to a sequential file, which is accomplished in BASIC 2.0 with the OPEN-command mode A.

This command has the following format:

```
APPEND#lfn,"filename"(,Ddn,Uda)
```

For example, should the sequential file "SEQU.1" be on drive 0, the following statements are necessary to add a data record to it:

```
100 APPEND#1,"SEQU.1",D0  
110 PRINT#1,X$  
120 CLOSE 1
```

BACKUP:

With this command, a complete diskette can be copied. The BACKUP command can only be used with a dual disk drive (such as the 4040), however. Notice the format of this command:

```
BACKUP Ddn TO Ddn(,Uda)
```

It is important that either D0 to D1 or D1 to D0 be given. An example:

The diskette in drive 1 is supposed to be copied onto the disk in drive 0. To this end, give the following command:

```
BACKUP D1 TO D0
```

CATALOG:

'-' (A CATALOG command of BASIC 4.0 has the advantage that the program in the computer's memory is not erased, as is true in BASIC 2.0. The format of the command:

```
CATALOG (Ddn,Uda)
```

If no drive number is given for a double drive, the contents of both drives are given. With a single drive, CATALOG D0 is assumed. An example:

```
CATALOG D0
```

The contents of the disk in drive 0 will be displayed.

COLLECT:

This command corresponds with the VALIDATE command of BASIC 2.0. The syntax of this command looks like this:

```
COLLECT (Ddn)
```

CONCAT:

W^{AT}F concatenates sequential files, in which one file is to be made from the data of two files. The format:

```
CONCAT (Ddn,) "file1" TO (Ddn,) "file2" (ON Uda)
```

Suppose you want to combine the data of the files "SEQU.2" in drive 0 and "SEQU.1" in D1. To accomplish this, issue the following command:

```
CONCAT D0,"SEQU.2" TO D1,"SEQU.1"
```

COPY:

With this command files can be copied from one drive to the other (except relative files). The command is useless with a single drive. The syntax looks like this:

```
COPY (Ddn,)("file1") TO (Ddn,)("file2")
```

To copy all files (for example, from drive 0 to drive 1), use the following command:

```
COPY D0 TO D1
```

DCLOSE:

The command DCLOSE has the same function as the simple CLOSE command, with the following exceptions:

| | |
|----------------|--|
| DCLOSE | closes all files |
| DCLOSE#1 | closes file number 1 |
| DCLOSE#1 ON U9 | closes the logical file #1 on device address 9 |
| DCLOSE U8 | closes all files on device address 8 |

The command has the following syntax:

```
DCLOSE (#lfn) (ON Uda)
```

DLOAD:

The command DLOAD has the advantage that the standard device address 8 used. The format:

```
DLOAD "program" (,Ddn)(,Uda)
```

For instance, if you want to load the program "PRG.2" from drive 0 or from a single drive, give the following command:

```
DLOAD "PRG.2"
```

Drive 0 (D0) is the default value.

Anatomy of the 1541 Disk Drive

DOPEN:

This command of BASIC 4.0 is very comprehensive. The following format verifies this:

```
DOPEN#lfn,"file"(,Ddn)(,Uda)(,fileparameter)
```

The peculiarity of this method of opening is the file parameter. There are two file parameters, that have the following function:

```
-----  
: 'L'-parameter : 'W'-parameter : Mode of operation :  
-----  
: YES : NO : A relative file is :  
: : : opened. :  
: NO : YES : A sequential file is :  
: : : opened for writing. :  
: NO : NO : A file is opened for :  
: : : reading(REL,SEQ,PRG,USR):  
-----
```

In addition to the 'L' parameter the record length must be given (such as L80). A DOPEN command of this type looks like this:

```
DOPEN#1,"FILE.REL",D0,L80
```

Here a relative file is opened with a record length of 80 bytes. The declaration of the file parameter is only necessary once, at the establishment of the file. All later openings of the file can occur without the parameter declaration.

DSS & DS:

After a disk error, the complete error message can be displayed with PRINT DSS or just the error number with PRINT DS. Of course, the error can be read within a program and the appropriate branch made. For example:

```
100 IF DS = 26 THEN GOTO ...
```

DSAVE:

A program can be saved on disk with this command. The following format is to be noted:

```
DSAVE (Ddn,) "programname"(,Uda)
```

HEADER:

A disk is formatted with the HEADER command in BASIC 4.0. It corresponds to the NEW command in BASIC 2.0. The syntax of the command:

HEADER "diskname",D0,Iid(U,da)
or HEADER Ddn,"diskname",Iid

Here there are two possibilities to designate the drive. The id is the diskette identification. If it is not given, the disk is presumed to be formatted and is merely given a new name and all files are erased.

RECORD:

This command corresponds to the position command of BASIC 2.0 (DOS 2.6). The read/write head can be positioned over a record in a relative file, without the need to send the position over channel 15. The syntax of this command illustrates how easy this positioning is:

RECORD#lfn,rn(,bp)

The logical file number is obtained from the opened relative file. 'rn' is the record number (1-65535) and 'bp' is the position within this record (1-254).

An example: You want to position the head over the twelfth byte of the 128th record of a relative file opened with the logical file number 2. The following command accomplishes this:

RECORD#2,128,12

RENAME:

This RENAME is similar to the RENAME of BASIC 2.0. The format of this command:

RENAME (Ddn,) "old name" TO "new name"(,Uda)

SCRATCH:

This method of erasing files is essentially easier because files can be erased with one command. The format of this command:

SCRATCH (Ddn,) "file"(,Uda)

After entering a SCRATCH command the message "ARE YOU SURE?" which allows the command to be stopped. If the file is really supposed to be erased, answer 'Y' else 'N'. After erasing the file, the message "FILES SCRATCHED" appears on the screen.

Chapter 2: Advanced Disk Programming

2.1 Direct Access of any Block of the Diskette

When handling files and programs on the diskette, as described in Chapter 1, we didn't have to concern ourselves with the organization on the diskette, because the disk operating system (DOS) took care of these details for us.

But the DOS offers the capability of accessing each individual block on the diskette. This gives us a lot of flexibility - ranging from manipulation of individual files to creating completely new data structures.

In order to access a block directly, a channel is OPENed to a data buffer within the 1541 disk drive. It is over this channel that data is transmitted. The data buffer serves as an intermediate storage place for the data that is read from the diskette or written to the diskette. In order to inform the DOS that we want to work with direct access commands, we use a special filename in the OPEN command:

```
OPEN 1,8,2,"#"
```

Using this command, logical file number 1 on device 8 (the disk drive), is associated with a direct access file. Channel 2 serves to transmit data to and from the disk drive. The channel number (secondary address in the OPEN command) may be 2 through 14. Channels 0 and 1 are reserved for LOAD and SAVE and channel 15 is the command channel. The choice of a secondary address is arbitrary. You may not use the same secondary address simultaneously, since the DOS, upon encountering the second OPEN command with the same secondary address, closes the previous file using this channel number. This also occurs when working with sequential or relative files.

This form of the OPEN command causes the DOS to search for a free data buffer and assign it to that channel. By using a GET# statement immediately after the OPEN we can find the buffer number that the DOS assigns:

```
100 OPEN 1,8,2,"#"  
110 GET#1, AS  
120 PRINT ASC(AS+CHR$(0))  
RUN
```

3

In this case, buffer three was assigned. The buffer numbers range from 0 to 4. Each buffer can hold 256 characters of data. The buffers are located in the following memory

locations in the VIC 1541:

| Buffer number | Memory location |
|---------------|------------------------|
| 0 | \$300-\$3FF, 768-1023 |
| 1 | \$400-\$4FF, 1024-1279 |
| 2 | \$500-\$5FF, 1280-1535 |
| 3 | \$600-\$6FF, 1536-1791 |
| 4 | \$700-\$7FF, 1792-2047 |

Buffer 4 is normally unavailable, because the BAM is stored there. If we work with sequential or relative files at the same time, buffer 3 is also unavailable, because it is used for the directory. If we want to associate a specific data buffer for direct access, we can assign it with the OPEN command.

OPEN 1,8,2,"#3"

This associates buffer 3 (\$600-\$6FF) with channel number 2, assuming it is still free. Unless you have a pressing reason to use a specific buffer, you should leave the choice of the buffer up to the DOS, because the choice of a definite buffer increases the possibility that it will not be available.

After opening a channel, you should check the error channel.

```
130 OPEN 15,8,15
140 GET#15, A$ : PRINT A$; : IF ST<>64 THEN 140
```

If the buffer is already in use, you will receive the error message

70,NO CHANNEL,00,00

If no other files are open, you can open up to 4 channels for direct access. The following example illustrates this:

```
10 OPEN 1,8,15,"I0" : I=2 : REM ERROR CHANNEL
20 OPEN 2,8,2, "#" : GOSUB 100
30 OPEN 3,8,3, "#" : GOSUB 100
40 OPEN 4,8,4, "#" : GOSUB 100
50 OPEN 5,8,5, "#" : GOSUB 100
60 OPEN 6,8,6, "#" : GOSUB 100
70 END
100 GET#I,A$:PRINT ASC(A$+CHR$(0))
110 I=I+1 : REM BUFFER NUMBER
120 GET#1,A$ : PRINT A$; : IF ST<>64 THEN 120
130 RETURN
```

When RUN, the above program produces the following output:

Anatomy of the 1541 Disk Drive

```
00, OK,00,00
2
00, OK,00,00
1
00, OK,00,00
0
00, OK,00,00
199
70,NO CHANNEL,00,00
```

As you see, attempting to open a fifth channel for direct access fails.

Transmitting data to and from the buffer usually takes place using the GET#, INPUT# and PRINT# statements.

If a buffer contains pure text (alphanumeric data) which is not longer than 88 characters and is separated using CR (Carriage Return, CHR\$(13)), it can be read using INPUT#. However, if the buffer contains control characters or the text is separated using commas or colons, the INPUT# statement fails. Then we must use the GET# statement, which retrieves only one character at a time. GET# does not allow null values (CHR\$(0)) to be read. In this case, GE1# receives an empty string and you must check for this condition as below:

```
100 GET#2, A$ : IF A$ + "" THEN A$ = CHR$(0)
```

A simpler alternative to the GET# statement is to use the statement INPUT*, as is described in section 4.3.1. Here you can declare how many characters are to be read into a string. It also handles null values (CHR\$(0)). You can read almost the entire buffer (255 characters are possible) with one command.

In the next section, all commands used for direct access are described in detail. Keep the following points in mind when using direct access commands.

When using direct access commands, you must explicitly cause the blocks on the diskette to be read or written. The direct access commands are transmitted over command channel 15. The data that is read from or written to a buffer are transmitted over a separate channel that is associated with that buffer. Both channel 15 and the separate channel must be OPENed before transmission can begin.

- 1) A PRINT# statement to command channel 15, sends a direct access command to the DOS.
- 2) A PRINT# statement to channels 2 thru 14 sends data to a buffer.
- 3) An INPUT# or GET# statement to command channel 15 re-

Anatomy of the 1541 Disk Drive

turns any error messages detected by the DOS.

- 4) An INPUT# or GET# statement to channels 2 thru 14, reads the data from the buffer.

If you are ready to work with the block commands and want to display individual blocks on the screen or change them, you can use the DOS monitor in section 4.6, which provides a simple and easy way of doing so.

Anatomy of the 1541 Disk Drive

2.2 The Direct Access Commands

2.2.1 The Block-Read Command B-R

The block-read command instructs the 1541 to read a block from the diskette into a buffer of a previously opened direct access file. The block-read command is sent over the command channel (secondary address 15) to the disk drive. The block-read command can be shortened to B-R. Because this command does not read the first byte of the block, you can substitute the command U1 to read a block. The command has the following syntax:

U1 channelnumber drive track sector

You must give the channel number that you used when OPENing the direct access file. Next follows the drive number, which is always zero for the VIC 1541, and then the track and sector numbers of the block you want to read.

```
10 OPEN 1,8,15
20 OPEN 2,8,2, "#"
30 PRINT#1, "U1 2 0 18 0"
```

This reads the contents of track 18 sector 0 into the buffer belonging to channel 2. Now you can read the data from this buffer with GET#2.

```
40 GET#2, AS,B$  
50 PRINT ASC(AS$), ASC(B$)
```

```
18      1
```

Now we have read and displayed the first two bytes in the buffer. Sector 0 of track 18 contains a pointer to the first directory block (track and sector) and the BAM for the diskette.

In the demo program DISPLAY T&S on the TEST/DEMO diskette (section 4.2.7) this command is used in order to read the RAM from the disk and to graphically display each record on the disk.

We can read all 256 bytes of the block from the buffer with the GET# statement; in our example we will read the diskette name and ID from position 144.

The blocks which comprise a file are chained to each other. The first two bytes of each file block contains a pointer to the track and sector of the following block. Using this information, you can piece together the usage of disk space for a file. A track pointer of zero indicates the last

block of the file and the pointer which usually contains the sector number now contains the number of bytes of the last block which are part of this file. The first sector of a file can be read with our program in section 4.1.1. The following small program displays all of the remaining tracks and sectors that are part of the file.

```

100 OPEN 1,8,15
110 OPEN 2,8,2, "#"
120 INPUT "TRACK AND SECTOR ";T,S
130 PRINT#1,"U1 2 0";T,S
140 GET#2, T$, S$
150 T = ASC(T$+CHR$(0)): S = ASC(S$+CHR$(0))
160 IF T=0 THEN CLOSE 2 : CLOSE 1 : END
170 PRINT "TRACK";T,"SECTOR";S
180 GOTO 130

```

Enter 18 and 0 as track and sector to follow the blocks for the BAM and directory.

2.2.2 The Block-Pointer Command B-P

The diskette name is located starting at position 144 of track 18, sector 0. Using the above example, we have to read the first 143 bytes of the buffer in order to be positioned at the diskette name. But the DOS has an easier way to do this. To access any desired byte of a buffer, you can use the block-pointer command. Using the block-pointer command the DOS moves to an exact position within the buffer. The block-pointer command can be shortened to B-P. The syntax is the following:

B-P channelnumber position

Now we can read the diskette name directly:

```

100 OPEN 1,8,15
110 OPEN 2,8,2, "#"
120 PRINT#1,"U1 2 0 18 0"
130 PRINT#1,"B-P 2 144"
140 FOR I = 1 TO 16 : REM MAXIMUM LENGTH
150 GET#2, A$ : IF A$=CHR$(160) THEN 170
160 PRINT A$; : NEXT
170 CLOSE 2 : CLOSE 1

```

Here we first read the block, set the buffer pointer to position 144 and then read and print the diskette name which has a maximum length of 16 characters. A shifted space (CHR\$(160)) indicates the end of the diskette name.

The bytes in the buffer are numbered 0 through 255, the first byte having the number 0. The buffer pointer is auto-

Anatomy of the 1541 Disk Drive

matically set to zero by reading a block with U1. You can, for example, read byte number 2 after reading the name. You do this by setting the buffer pointer to this value.

```
PRINT#1, "B-P 2 2"
```

2.2.3 The Block-Write Command B-W

The block-write command allows us to write the contents of a buffer to a desired block on the diskette. With this, you can write the block one has sent to the buffer within the disk drive.

It is possible to read a block into the buffer with the block-read command, change some bytes, and then write the block back. The block-write command can be shortened to B-W. Because this B-W command writes the contents of the buffer pointer, one usually uses the U2 command which always sets the buffer pointer to 1. The syntax of the command is analogous to the B-R command:

```
U2 channelnumber drive track sector
```

```
100 OPEN 1,8,15
110 OPEN 2,8,2, "#"
120 PRINT#2, "TEST DATA"
130 PRINT#1, "U2 2 0 1 0"
140 CLOSE 2 : CLOSE 1
```

Here the text "TEST DATA" will be written to the buffer associated to channel 2 and then written to track 1 sector 0 of the diskette. The U2 command does not change the contents of the buffer.

Here's an example of using the block-write command to change the diskette name that we read in the last section. For this we must fill the new name with 16 characters ending with a shifted spaces CHR\$(160), so that we can write it to the disk. We will again use the block-pointer command to set the buffer pointer directly to the desired position within the buffer.

```
100 OPEN 1,8,15
110 OPEN 2,8,2, "#"
120 PRINT#1,"U1 2 0 18 0"
130 PRINT#1,"B-P 2 144"
140 A$="NEW FILE NAME"
150 IF LEN(A$)<16 THEN A$=A$+CHR$(160) : GOTO 150
160 PRINT#2,A$;
170 PRINT#1,"U2 2 0 18 0"
180 CLOSE 2
190 PRINT#1,"I0" : CLOSE 1
```

First we read track 18 sector 0 into the buffer, set the buffer pointer to the position of the diskette name and write a new 16 character name to the buffer. Note that the diskette name is changed in the buffer only. But in line 170, the buffer contents are written to the same block which changes the name permanently on the diskette. Next channel 2 is closed. Finally the diskette is initialized so the BAM and name in the DOS memory are updated. Get the directory with

```
LOAD"$",8
LIST
```

on the screen to verify that the diskette name has changed.

2.2.4 The Block-Allocate Command B-A

The block-allocate command has the task of indicating in the BAM (block availability map) is a particular diskette block is being used. The block allocate command can be shortened to **B-A**. For program, sequential or relative files, as diskette blocks are used, the BAM is updated to note that the block is no longer available. But blocks written using the direct access commands are not automatically allocated. When blocks used in this manner are not allocated, the possibility exists that they will be overwritten when other files are used. The block-allocate command can be used to prevent this overwriting. The block-allocate command has the following syntax:

B-A drive track sector

With this the corresponding block in the BAM is marked as allocated and is protected from being overwritten by other files. If the block was already allocated, the error channel returns error message 65,'NO BLOCK'.

```
100 OPEN 1,8,15
110 INPUT "TRACK, SECTOR ";T,S
120 PRINT#1, "B-A 0";T,S
130 INPUT#1, A$,B$,C$,D$
140 PRINT A$,"B$","C$","D$
```

Using this program you can input a track and sector number of a block that you want to allocate. If the block is still free, it was allocated and the message **00,OK,00,00** is returned. If that block is already allocated, the message **65,NO BLOCK,TT,SS** is returned. In this case TT and SS contain the next higher numbered free block on the diskette. This tells you that the requested block is allocated but the block at TT,SS is still available. If error message 65 returns zeroes as the track and sector numbers, it means

Anatomy of the 1541 Disk Drive

that no block with a higher track and/or sector number is available. The following program automatically allocates the next free sector:

```
100 OPEN 1,8,15
110 INPUT "TRACK, SECTOR ";T,S
120 PRINT#1, "B-A 0";T:S
130 INPUT#1, A$,B$,TT,SS
140 IF A$ = "00" THEN 190
150 IF A$<>"65" THEN PRINT A$,"B$","TT","SS : END
160 IF TT=0 THEN PRINT "NO MORE FREE BLOCKS" : END
170 IF TT=18 THEN TT=19 : SS=0
180 T=TT : S=SS : GOTO 120
190 PRINT "TRACK" TT "SECTOR" SS "ALLOCATED."
```

The test for track 18 in line 180 prevents a block in the directory from being allocated. An additional error message in connection with the B-A command is interesting. If one attempts to allocate a block that does not exist, for example, track 20 sector 21, one received the error message

66,ILLEGAL TRACK OR SECTOR,20,21

Marking a block as allocated in the BAM prevents it from being overwritten by other files. The block will be recognized as allocated until the command **VALIDATE** (COLLECT in BASIC 4.0) is issued. The VALIDATE command rebuilds a new BAM by rechaining the blocks of individual files and marking each block as belonging to a new BAM. Unclosed files, marked in the directory with * are deleted. All blocks allocated with the B-A command and those not belonging to a properly closed file are freed. So, if you allocate blocks that do not belong to a file that appears in the directory, you should not use the VALIDATE command, or the blocks will be freed, thus destroying your file.

2.2.5 The Block-Free Command B-F

The block-free command performs the opposite function of the block-allocate command. It marks a block as not allocated (free) in the BAM. The block-free command can be shortened to **B-F**. The syntax is analogous to the block-allocate command:

B-F drive track sector

```
100 OPEN 1,8,15
110 PRINT#1, "B-F 0 20 9"
```

Here the block in track 20 sector 9 is freed in the BAM. If this block is already free, no error occurs.

Allocating and freeing blocks has an effect only on the blocks used by program, sequential or relative file by the DOS. The block-write and block-read commands do not check the BAM before overwriting blocks. With these commands you can write to blocks marked as allocated in the BAM. If, for example, you have a disk containing only direct access files, it is in principle unnecessary to allocate written blocks because no other files will be written on the diskette. In this case, you can use the directory blocks in track 18 and have 672 blocks available on the VIC 1541 diskette.

2.2.6 The Block-Execute Command B-E

The block-execute command allows a block to be read from diskette into a buffer and then the contents of the buffer to be executed as a machine language program. You can write routines that the DOS is supposed to execute with the B-W or U2 command to a sector and later load it into a buffer with the block-execute program where it will be executed as a machine language program. Naturally, this presupposes knowledge of the internal workings of the DOS. If you want to use the B-E command, you usually give the buffer number in the OPEN command, in case the machine language program is not relocatable and is written for a specific buffer. The block-execute command has the following syntax:

B-E channelnumber drive track sector

```
100 OPEN 1,8,15
110 OPEN 2,8,2, "#3"
120 PRINT#1, "B-E 2 0 17 12"
```

Here buffer 3 (\$600-\$6FF) is assigned to channel 2. The contents of track 17 sector 12 is loaded into this buffer and there the machine language program is executed.

The block-execute command is a combination of the block-read and memory-execute commands. Examples of the design of machine language programs to execute in the DOS are found in section 2.4 by the memory commands.

Anatomy of the 1541 Disk Drive

2.3 Uses of direct access

What do the direct access commands permit us to do?

Here is a sample of their use:

By manipulating individual sectors you can make changes to the BAM sector (Track 18, Sector 0) such as changing the diskette name or ID.

You can make changes to the DIRECTORY (beginning at Track 18, Sector 1). Each file entry in the directory has unused space. You can use the unused space to store additional information.

You can change file names in the directory by using direct access commands.

You can follow the "chaining" of the blocks in a file to determine if the file is intact.

You can CLOSE an unclosed file by setting bit 7 of the file type indicator in the directory. For example, you can change the file type indicator from \$02 to \$82. Normally these files are indicated in the directory with an asterisk; after the above change the asterisk will disappear.

Each file entry also contains a "lock" which disallows deletion (SCRATCH command). If you set bit 6 of the file type then the file is said to be locked and not available for deletion. These entries have the < symbol after the type designation in the directory listing. Using this bit of knowledge, you can protect important programs on your diskette from accidental erasure. More information on this topic is found in section 4.1.

If you are interested in making such changes, you may want to read an entire sector and display it on the screen, change it, and write it back again. Such a program called the DISK MONITOR is described in section 4.6. Before you begin with such experiments, however, you should make a copy of your diskette. A directory or BAM error can result in the loss of the entire diskette contents.

Have you ever accidentally scratched a program or file from a diskette? As long as you haven't written any other programs or data to the diskette, you can recover this scratched file. Scratching a file simply sets the file type to 0 in the directory and frees the allocated blocks. You need only search the directory entries for the file and restore the file type: \$81 for SEQ, \$82 for PRG, \$83 for USR, and \$84 for REL. After restoring the file type, you should use the VALIDATE command to reallocate the blocks again (for example: OPEN 1,8,15:PRINT#1,"V0").

Other uses of direct access can provide the means for creating new data structures that the DOS normally does not recognize. You can undertake the management of the new file yourself, and use the direct access commands for reading and writing. Such a data structure is the ISAM file. ISAM is an abbreviation for Indexed Sequential Access Method. With an ISAM file, you can directly access each record, similar to the relative file. However, access is not by the record number, however, but by a **key or index**. This index is a field within the record. If, for example, a record consists of 5 fields, last name, first name, street, city/state and zip code, last name can be defined as the access key. To read the record **Muller**, the command is simply 'read record "Muller"'. We need not concern ourselves with record number or other ordering criteria and can select which record we want to read, change, write or erase with clear text. In such an ISAM file system, the index is usually saved separately, together with the information where the data record can be found on the disk. Such an ISAM file management with very powerful additions as described here, is found along with other features in the program development system **MASTER 64**, also available for the Commodore 64 from Abacus Software.

Anatomy of the 1541 Disk Drive

2.4 Accessing the DOS - The Memory Commands

In section 2.2.6 we saw a way to load a program into DOS memory and execute it. With the memory commands, we can access each byte of the DOS and execute programs in RAM and ROM. For instance, we can access the work space of the DOS and read the number of free blocks on the disk or get the disk name from the BAM buffer. By writing into the DOS RAM we can change constants such as the device number of the drive or the number of read attempts for a block until an error message results. Furthermore, we can execute routines inside the DOS memory. These can be DOS ROM routines or your own, that are stored in a buffer and executes there. Of course this presumes knowledge of 6502 machine language and of the method of operation of the DOS. We hope this book is helpful for the latter. Now follows a description of the commands and examples of their use.

2.4.1 The Memory-Read Command M-R

Using this command, you can access each byte of the DOS. The memory-read command can be shortened to M-R. The memory-read command is transmitted over the command channel. The byte read is then returned over the command channel where it can be retrieved with GET#. The syntax of the command looks like this:

M-R CHR\$(LO) CHR\$(HI)

LO and HI signify the low and high bytes of the address in the DOS that should be read. The following program asks for an address and reads the contents of the address out of the DOS.

```
100 INPUT"ADDRESS ";A
110 HI = INT(A/256)
120 LO = A-256*HI
130 OPEN 1,8,15
140 PRINT#1, "M-R";CHR$(LO);CHR$(HI)
150 GET#1,A$
160 PRINT ASC(A$+CHR$(0))
```

For instance, if we want to know the number of free blocks on a diskette, we don't have to read the entire directory, rather we can read the appropriate bytes directly from the DOS storage. This may be necessary if files are to be established by a program and you don't know if there is enough space on the disk.

```
100 OPEN 1,8,15,"I0"
110 PRINT#1, "M-R" CHR$(250) CHR$(2)
120 GET#1, A$ : IF A$="" THEN A$=CHR$(0)
```

```

130 PRINT#1, "M-R" CHR$(252) CHR$(2)
140 GET#1, BS : IF BS="" THEN BS=CHR$(0)
150 PRINT ASC(A$) + 256 * ASC(B$) "BLOCKS FREE"
160 CLOSE 1

```

With this syntax, an M-R command must be given for each byte that is to be read. As you can gather from the DOS listing and through checking and verifying, one can read more than one byte at a time with a M-R command. You need only give the number of bytes to be read as the third parameter:

M-R CHR\$(LO) CHR\$(HI) CHR\$(NUMBER)

We can use this to read the name of a diskette from the BAM buffer storage. Before this can be done, the diskette must be initialized so that the current diskette name is stored in the buffer at address \$700, out of which we will read the name of the disk with the M-R command.

```

100 OPEN 1,8,15, "I0"
110 PRINT#1, "M-R" CHR$(144) CHR$(7) CHR$(16)
120 INPUT#1, A$
130 PRINT A$

```

This is a simple way to read the name of the diskette (16 characters padded with shifted spaces (CHR\$(160)). With this you can check if the correct diskette is in the drive.

The disk buffer can also be read using this method. It also allows parts of the DOS to be manipulated by copying the contents of the ROM to a buffer where it can be changed and executed. This is explained in the next two sections.

2.4.2 The Memory-Write Command M-W

The complement command of memory-read is the command to write data in the DOS storage memory-write or M-W. Writing is allowed only to DOS RAM - page zero, stack, and buffers. It is possible to send several bytes with one command. The syntax look like this:

M-W CHR\$(LO) CHR\$(HI) CHR\$(NUMBER) CHR\$(DATA1) CHR\$(DATA2)

The number of bytes as specified by NUMBER can be transmitted, theoretically 255, but because the input buffer holds only 40 characters, the number of bytes is limited to 34. A possible use of this command is to change the address number (see program 'DISK ADDRESS CHANGE', section 4.2.3). The address is stored in two memory locations in page zero. The device number plus \$20 (32 decimal) is stored in address \$77 (119 decimal) for LISTEN, for receiving data from the computer. The address immediately following contains the

Anatomy of the 1541 Disk Drive

device number plus \$40 (64 decimal) for TALK, for sending data to the computer. Because the addresses are saved separately. It is possible to use different send and receive addresses. In the following example, the receive address is set to 9 and the send address to 10.

```
100 OPEN 1,8,15
110 PRINT#1, "M-W" CHR$(119) CHR$(0) CHR$(2)
                           CHR$(9+32) CHR$(10+64)
120 CLOSE 1
140 OPEN 1,9,15
150 OPEN 2,10,15
160 PRINT#1,"I0"
170 INPUT#2,A$,B$,C$,D$
180 PRINT A$,"B$","C$","D$
```

00, OK,00,00

Programs cannot be loaded this way because the DOS will try to load the program using the same address that the filename was sent under.

Changing the device number is necessary if you want to use more than one disk drive with a single computer. To this end, change the device address of the second drive to 9. This software change remains in effect only until a reset (for example, turning the drive off). If the change needs to be permanent, you can change the with DIP switches or cut the circuit board jumper inside the drive.

Because many parameters of the DOS are in RAM, you can make extensive changes to the function of the DOS, such as the step size, with which the number of sectors per track is determined (address \$69 (105 decimal), normally contains 10). We can also specify the number of attempted reads until an error results (address \$6A (106 decimal), contains 5). More addresses of parameters can be found in section 3.1.2.

2.4.3 The Memory-Execute Command M-E

Using this command you can call up and execute machine language programs in the DOS memory. The memory-execute command can be shortened to M-E. The programs must end with RTS (Return from Subroutine, \$60). The syntax of the command:

M-E CHR\$(LO) CHR\$(HI)

Again, LO and HI are the low and high bytes of the starting address of the machine language routine. It is possible to call up routines in the DOS ROM as well as our own routines written to a buffer with M-W and there executed. As an

example, you can call up a routine that creates an error message. For example, address \$EFC9 is the entry point for message 72, 'DISK FULL'. The example looks like this:

```
100 OPEN 1,8,15
110 PRINT#1,"M-E" CHR$(201) CHR$(239)
120 INPUT#1,AS,B$,C$,D$
130 PRINT AS "," B$ "," C$ "," D$
```

In line 110, the address \$EFC9 is divided into a low byte of \$C9 (201) and high byte of \$EF (239) and sent as the parameters of the M-E command. Then the error channel is read and the message displayed.

72,DISK FULL,00,00

If you want to run your own programs in the 1541 drive, the program should be written to a buffer and there called with M-E. Should this program be used more often, the contents of the buffer can be written to a block on the diskette. It can then be executed with the B-E command, which loads the contents of the block in the buffer and then automatically starts the routine. As a suggestion for your own program in DOS, you can display the directory in a different form, with additional parameters, similar to the program in section 4.1.1. In addition, you could count the number of files on the disk and display that. Using such a routine you can get a much clearer understanding of how the directory is created in the DOS listing. If you are clear on the matter of the new directory format, you are ready to take the additional parameters from the directory entries and assemble them in the desired format.

2.4.4 The User Commands U

Using the USER commands there are two possible ways of executing programs in the drive. The user commands have the following syntax:

UX

X can be a letter from A to J or a digit from 1 to 9 or ':' (which takes the place of 10). When a command is called, a jump is made to the following addresses in DOS:

| | | | |
|----|----|--------|------------------------------|
| UA | U1 | \$CD5F | substitute for 'Block-Read' |
| UB | U2 | \$DC97 | substitute for 'Block-Write' |
| UC | U3 | \$0500 | |
| UD | U4 | \$0503 | |
| UE | U5 | \$0506 | |
| UF | U6 | \$0509 | |
| UG | U7 | \$050C | |

Anatomy of the 1541 Disk Drive

```
UH    U8    $050F
UI    U9    $FF01
UJ    U:    $EAA0      reset
```

You are already acquainted with the commands U1 and U2 (also UA and UB); they serve as substitutes for BLOCK-READ and BLOCK-WRITE. The commands U3 to U8 (UC to UH) jump to addresses within buffer 2 (address \$500 (1280) - see section 2.1). If you want to use several commands, a jump table to individual routines can be placed there; if only one user command (U3) is used, the program can begin directly at \$500.

The user command UJ jumps to the reset vector; the disk drive is then reset.

```
100 OPEN 1,8,15
110 PRINT#1,"UJ"
120 FOR I=1 TO 1000 : NEXT
130 GET#1,A$ : PRINT A$ : IF ST<>64 THEN 130
73,CBM DOS V2.6 1541,00,00
```


Line 120 waits for the reset to take place. Then the initialization message is retrieved in line 130.

By using the user commands, parameters can be passed to the routines. The complete command string is put in the input buffer at \$200 (512). Possible parameters are addresses, command codes, and filenames. This way, the user commands can be utilized to expand the commands of the disk or to realize a new data structure. Whole user commands can replace the M-E command with its corresponding addresses; the user-call is shorter and clearer.

Chapter 3: Technical Information

3.1 The Construction of the VIC 1541


3.1.1 Block Diagram of the Disk Drive

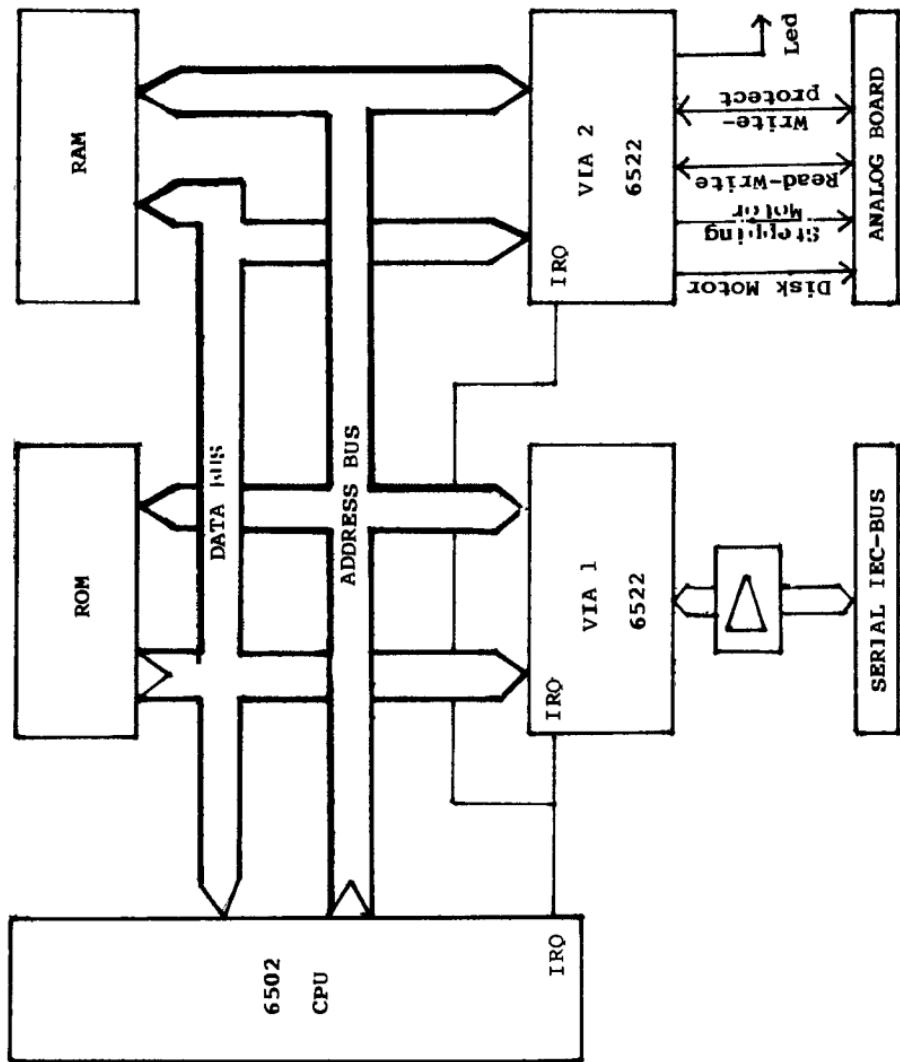

Anatomy of the 1541 Disk Drive

3.1.2 DOS Memory Map - ROM, RAM, I/O

Memory map of the VIC 1541 disk drive

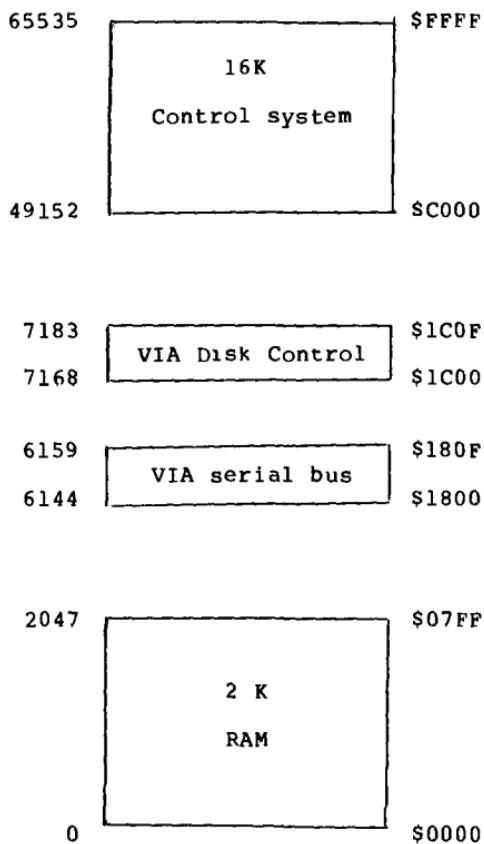

Allocating and freeing blocks has an effect only on the blocks used by program, sequential or relative file by the DOS. The block-write and block-read commands do not check the BAM before overwriting blocks. With these commands you can write to blocks marked as allocated in the BAM. If, for example, you have a disk containing only direct access files, it is in principle unnecessary to allocate written blocks because no other files will be written on the diskette. In this case, you can use the directory blocks in track 18 and have 672 blocks available on the VIC 1541 diskette.

2.2.6 The Block-Execute Command B-E

The block-execute command allows a block to be read from diskette into a buffer and then the contents of the buffer to be executed as a machine language program. You can write routines that the DOS is supposed to execute with the B-W or U2 command to a sector and later load it into a buffer with the block-execute program where it will be executed as a machine language program. Naturally, this presupposes knowledge of the internal workings of the DOS. If you want to use the B-E command, you usually give the buffer number in the OPEN command, in case the machine language program is not relocatable and is written for a specific buffer. The block-execute command has the following syntax:

B-E channelnumber drive track sector

```
100 OPEN 1,8,15
110 OPEN 2,8,2, "#3"
120 PRINT#1, "B-E 2 0 17 12"
```

Here buffer 3 (\$600-\$6FF) is assigned to channel 2. The contents of track 17 sector 12 is loaded into this buffer and there the machine language program is executed.

The block-execute command is a combination of the block-read and memory-execute commands. Examples of the design of machine language programs to execute in the DOS are found in section 2.4 by the memory commands.

Anatomy of the 1541 Disk Drive

2.3 Uses of direct access

What do the direct access commands permit us to do?

Here is a sample of their use:

By manipulating individual sectors you can make changes to the BAM sector (Track 18, Sector 0) such as changing the diskette name or ID.

You can make changes to the DIRECTORY (beginning at Track 18, Sector 1). Each file entry in the directory has unused space. You can use the unused space to store additional information.

You can change file names in the directory by using direct access commands.

You can follow the "chaining" of the blocks in a file to determine if the file is intact.

You can CLOSE an unclosed file by setting bit 7 of the file type indicator in the directory. For example, you can change the file type indicator from \$02 to \$82. Normally these files are indicated in the directory with an asterisk; after the above change the asterisk will disappear.

Each file entry also contains a "lock" which disallows deletion (SCRATCH command). If you set bit 6 of the file type then the file is said to be locked and not available for deletion. These entries have the < symbol after the type designation in the directory listing. Using this bit of knowledge, you can protect important programs on your diskette from accidental erasure. More information on this topic is found in section 4.1.

If you are interested in making such changes, you may want to read an entire sector and display it on the screen, change it, and write it back again. Such a program called the DISK MONITOR is described in section 4.6. Before you begin with such experiments, however, you should make a copy of your diskette. A directory or BAM error can result in the loss of the entire diskette contents.

Have you ever accidentally scratched a program or file from a diskette? As long as you haven't written any other programs or data to the diskette, you can recover this scratched file. Scratching a file simply sets the file type to 0 in the directory and frees the allocated blocks. You need only search the directory entries for the file and restore the file type: \$81 for SEQ, \$82 for PRG, \$83 for USR, and \$84 for REL. After restoring the file type, you should use the VALIDATE command to reallocate the blocks again (for example: OPEN 1,8,15:PRINT#1,"V0").

Other uses of direct access can provide the means for creating new data structures that the DOS normally does not recognize. You can undertake the management of the new file yourself, and use the direct access commands for reading and writing. Such a data structure is the ISAM file. ISAM is an abbreviation for Indexed Sequential Access Method. With an ISAM file, you can directly access each record, similar to the relative file. However, access is not by the record number, however, but by a **key or index**. This index is a field within the record. If, for example, a record consists of 5 fields, last name, first name, street, city/state and zip code, last name can be defined as the access key. To read the record **Muller**, the command is simply 'read record "Muller"'. We need not concern ourselves with record number or other ordering criteria and can select which record we want to read, change, write or erase with clear text. In such an ISAM file system, the index is usually saved separately, together with the information where the data record can be found on the disk. Such an ISAM file management with very powerful additions as described here, is found along with other features in the program development system **MASTER 64**, also available for the Commodore 64 from Abacus Software.

Anatomy of the 1541 Disk Drive

2.4 Accessing the DOS - The Memory Commands

In section 2.2.6 we saw a way to load a program into DOS memory and execute it. With the memory commands, we can access each byte of the DOS and execute programs in RAM and ROM. For instance, we can access the work space of the DOS and read the number of free blocks on the disk or get the disk name from the BAM buffer. By writing into the DOS RAM we can change constants such as the device number of the drive or the number of read attempts for a block until an error message results. Furthermore, we can execute routines inside the DOS memory. These can be DOS ROM routines or your own, that are stored in a buffer and executes there. Of course this presumes knowledge of 6502 machine language and of the method of operation of the DOS. We hope this book is helpful for the latter. Now follows a description of the commands and examples of their use.

2.4.1 The Memory-Read Command M-R

Using this command, you can access each byte of the DOS. The memory-read command can be shortened to M-R. The memory-read command is transmitted over the command channel. The byte read is then returned over the command channel where it can be retrieved with GET#. The syntax of the command looks like this:

M-R CHR\$(LO) CHR\$(HI)

LO and HI signify the low and high bytes of the address in the DOS that should be read. The following program asks for an address and reads the contents of the address out of the DOS.

```
100 INPUT"ADDRESS ";A
110 HI = INT (A/256)
120 LO = A-256*HI
130 OPEN 1,8,15
140 PRINT#1, "M-R";CHR$(LO);CHR$(HI)
150 GET#1,A$
160 PRINT ASC(A$+CHR$(0))
```

For instance, if we want to know the number of free blocks on a diskette, we don't have to read the entire directory, rather we can read the appropriate bytes directly from the DOS storage. This may be necessary if files are to be established by a program and you don't know if there is enough space on the disk.

```
100 OPEN 1,8,15,"I0"
110 PRINT#1, "M-R" CHR$(250) CHR$(2)
120 GET#1, A$ : IF A$="" THEN A$=CHR$(0)
```

```

130 PRINT#1, "M-R" CHR$(252) CHR$(2)
140 GET#1, BS : IF BS="" THEN BS=CHR$(0)
150 PRINT ASC(A$) + 256 * ASC(B$) "BLOCKS FREE"
160 CLOSE 1

```

With this syntax, an M-R command must be given for each byte that is to be read. As you can gather from the DOS listing and through checking and verifying, one can read more than one byte at a time with a M-R command. You need only give the number of bytes to be read as the third parameter:

M-R CHR\$(LO) CHR\$(HI) CHR\$(NUMBER)

We can use this to read the name of a diskette from the BAM buffer storage. Before this can be done, the diskette must be initialized so that the current diskette name is stored in the buffer at address \$700, out of which we will read the name of the disk with the M-R command.

```

100 OPEN 1,8,15, "I0"
110 PRINT#1, "M-R" CHR$(144) CHR$(7) CHR$(16)
120 INPUT#1, A$
130 PRINT A$

```

This is a simple way to read the name of the diskette (16 characters padded with shifted spaces (CHR\$(160)). With this you can check if the correct diskette is in the drive.

The disk buffer can also be read using this method. It also allows parts of the DOS to be manipulated by copying the contents of the ROM to a buffer where it can be changed and executed. This is explained in the next two sections.

2.4.2 The Memory-Write Command M-W

The complement command of memory-read is the command to write data in the DOS storage memory-write or M-W. Writing is allowed only to DOS RAM - page zero, stack, and buffers. It is possible to send several bytes with one command. The syntax look like this:

M-W CHR\$(LO) CHR\$(HI) CHR\$(NUMBER) CHR\$(DATA1) CHR\$(DATA2)

The number of bytes as specified by NUMBER can be transmitted, theoretically 255, but because the input buffer holds only 40 characters, the number of bytes is limited to 34. A possible use of this command is to change the address number (see program 'DISK ADDRESS CHANGE', section 4.2.3). The address is stored in two memory locations in page zero. The device number plus \$20 (32 decimal) is stored in address \$77 (119 decimal) for LISTEN, for receiving data from the computer. The address immediately following contains the

Anatomy of the 1541 Disk Drive

device number plus \$40 (64 decimal) for TALK, for sending data to the computer. Because the addresses are saved separately. It is possible to use different send and receive addresses. In the following example, the receive address is set to 9 and the send address to 10.

```
100 OPEN 1,8,15
110 PRINT#1, "M-W" CHR$(119) CHR$(0) CHR$(2)
                           CHR$(9+32) CHR$(10+64)
120 CLOSE 1
140 OPEN 1,9,15
150 OPEN 2,10,15
160 PRINT#1,"I0"
170 INPUT#2,A$,B$,C$,D$
180 PRINT A$,"B$","C$","D$
```

00, OK,00,00

Programs cannot be loaded this way because the DOS will try to load the program using the same address that the filename was sent under.

Changing the device number is necessary if you want to use more than one disk drive with a single computer. To this end, change the device address of the second drive to 9. This software change remains in effect only until a reset (for example, turning the drive off). If the change needs to be permanent, you can change the with DIP switches or cut the circuit board jumper inside the drive.

Because many parameters of the DOS are in RAM, you can make extensive changes to the function of the DOS, such as the step size, with which the number of sectors per track is determined (address \$69 (105 decimal), normally contains 10). We can also specify the number of attempted reads until an error results (address \$6A (106 decimal), contains 5). More addresses of parameters can be found in section 3.1.2.

2.4.3 The Memory-Execute Command M-E

Using this command you can call up and execute machine language programs in the DOS memory. The memory-execute command can be shortened to M-E. The programs must end with RTS (Return from Subroutine, \$60). The syntax of the command:

M-E CHR\$(LO) CHR\$(HI)

Again, LO and HI are the low and high bytes of the starting address of the machine language routine. It is possible to call up routines in the DOS ROM as well as our own routines written to a buffer with M-W and there executed. As an

example, you can call up a routine that creates an error message. For example, address \$EFC9 is the entry point for message 72, 'DISK FULL'. The example looks like this:

```
100 OPEN 1,8,15
110 PRINT#1,"M-E" CHR$(201) CHR$(239)
120 INPUT#1,AS,B$,C$,D$
130 PRINT AS "," B$ "," C$ "," D$
```

In line 110, the address \$EFC9 is divided into a low byte of \$C9 (201) and high byte of \$EF (239) and sent as the parameters of the M-E command. Then the error channel is read and the message displayed.

72,DISK FULL,00,00

If you want to run your own programs in the 1541 drive, the program should be written to a buffer and there called with M-E. Should this program be used more often, the contents of the buffer can be written to a block on the diskette. It can then be executed with the B-E command, which loads the contents of the block in the buffer and then automatically starts the routine. As a suggestion for your own program in DOS, you can display the directory in a different form, with additional parameters, similar to the program in section 4.1.1. In addition, you could count the number of files on the disk and display that. Using such a routine you can get a much clearer understanding of how the directory is created in the DOS listing. If you are clear on the matter of the new directory format, you are ready to take the additional parameters from the directory entries and assemble them in the desired format.

2.4.4 The User Commands U

Using the USER commands there are two possible ways of executing programs in the drive. The user commands have the following syntax:

UX

X can be a letter from A to J or a digit from 1 to 9 or ':' (which takes the place of 10). When a command is called, a jump is made to the following addresses in DOS:

| | | | |
|----|----|--------|------------------------------|
| UA | U1 | \$CD5F | substitute for 'Block-Read' |
| UB | U2 | \$DC97 | substitute for 'Block-Write' |
| UC | U3 | \$0500 | |
| UD | U4 | \$0503 | |
| UE | U5 | \$0506 | |
| UF | U6 | \$0509 | |
| UG | U7 | \$050C | |

Anatomy of the 1541 Disk Drive

| | | |
|----|----|---------------------|
| UH | U8 | \$050F |
| UI | U9 | \$FF01 |
| UJ | U: | \$EAA0 reset |

You are already acquainted with the commands U1 and U2 (also UA and UB); they serve as substitutes for BLOCK-READ and BLOCK-WRITE. The commands U3 to U8 (UC to UH) jump to addresses within buffer 2 (address \$500 (1280) - see section 2.1). If you want to use several commands, a jump table to individual routines can be placed there; if only one user command (U3) is used, the program can begin directly at \$500.

The user command UJ jumps to the reset vector; the disk drive is then reset.

```
100 OPEN 1,8,15
110 PRINT#1,"UJ"
120 FOR I=1 TO 1000 : NEXT
130 GET#1,A$ : PRINT A$ : IF ST<>64 THEN 130
73,CBM DOS V2.6 1541,00,00
```


Line 120 waits for the reset to take place. Then the initialization message is retrieved in line 130.

By using the user commands, parameters can be passed to the routines. The complete command string is put in the input buffer at \$200 (512). Possible parameters are addresses, command codes, and filenames. This way, the user commands can be utilized to expand the commands of the disk or to realize a new data structure. Whole user commands can replace the M-E command with its corresponding addresses; the user-call is shorter and clearer.

Chapter 3: Technical Information

3.1 The Construction of the VIC 1541


3.1.1 Block Diagram of the Disk Drive

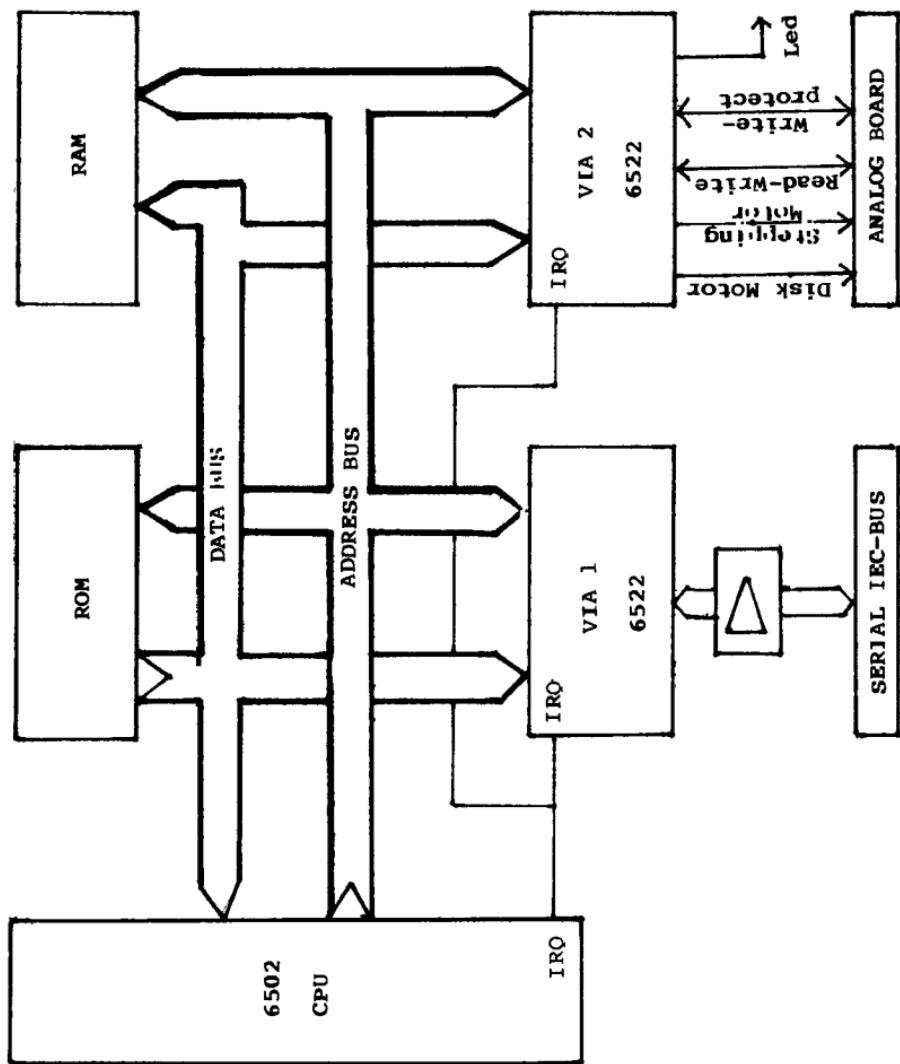

Anatomy of the 1541 Disk Drive

3.1.2 DOS Memory Map - ROM, RAM, I/O

Memory map of the VIC 1541 disk drive

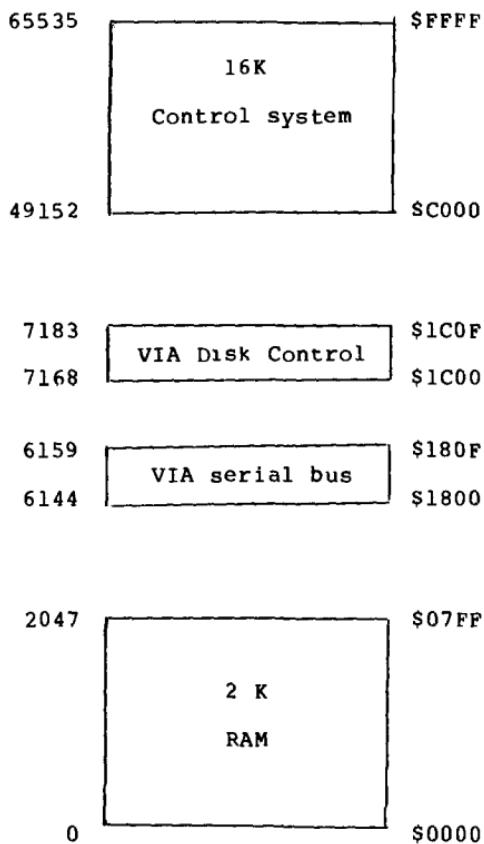

Layout of the I/O Ports (VIA 6522)

VIA 6522 1, Port for Serial Bus

| | |
|---------|---------------------|
| \$1800 | Port B |
| \$1801 | Port A |
| \$1802 | Direction of Port B |
| \$1803 | Direction of Port A |
| \$1805 | Timer |
| PB 0: | DATA IN |
| PB 1: | DATA OUT |
| PB 2: | CLOCK IN |
| PB 3: | CLOCK OUT |
| PB 4: | ATN A |
| PB 5,6: | Device address |
| CB 2: | ATN IN |

VIA 6522 2, Port for Motor and Read/Write Head Control

| | |
|--------|--|
| \$1C00 | Port B, control port |
| \$1C01 | Port A, data to and from read/write head |
| \$1C02 | Direction of Port A |
| \$1C03 | Direction of Port B |
| PB 0: | STP I |
| PB 1: | STP O step motor for head movement |
| PB 2: | MTR drive motor |
| PB 3: | ACT LED on drive |
| PB 4: | WPS Write Protect Switch |
| PB 7: | SYNC |
| CA 1: | Byte ready |
| CA 2: | SOE |

Anatomy of the 1541 Disk Drive

The Layout of the Important Memory Locations

| | | |
|-----|-----------|---|
| 0 | \$00 | Command code for buffer 0 |
| 1 | \$01 | Command code for buffer 1 |
| 2 | \$02 | Command code for buffer 2 |
| 3 | \$03 | Command code for buffer 3 |
| 4 | \$04 | Command code for buffer 4 |
| 6 | \$06-\$07 | Track and sector for buffer 0 |
| 8 | \$08-\$09 | Track and sector for buffer 1 |
| 10 | \$0A-\$0B | Track and sector for buffer 2 |
| 12 | \$0C-\$0D | Track and sector for buffer 3 |
| 14 | \$0E-\$0F | Track and sector for buffer 4 |
| 18 | \$12-\$13 | ID for drive 0 |
| 20 | \$14-\$15 | ID for drive 1 |
| 22 | \$16-\$17 | ID |
| 32 | \$20-\$21 | Flag for head transport |
| 48 | \$30-\$31 | Buffer pointer for disk controller |
| 57 | \$39 | Constant 8, mark for beginning of data block header |
| 58 | \$3A | Parity for data buffer |
| 61 | \$3D | Drive number for disk controller |
| 63 | \$3F | Buffer number for disk controller |
| 67 | \$43 | Number of sectors per track for formatting |
| 71 | \$47 | Constant 7, mark for beginning of data block header |
| 73 | \$49 | Stack pointer |
| 74 | \$4A | Step counter for head transport |
| 81 | \$51 | Actual track number for formatting |
| 105 | \$69 | Step size for sector division (10) |
| 106 | \$6A | Number of read attempts (5) |
| 111 | \$6F-\$70 | Pointer to address for M & B commands |
| 119 | \$77 | Device number + \$20 for listen |
| 120 | \$78 | Device number + \$40 for talk |
| 121 | \$79 | Flag for listen (1/0) |
| 122 | \$7A | Flag for talk (1/0) |
| 124 | \$7C | Flag for ATN from serial bus receiving |
| 125 | \$7D | Flag for EOI from serial bus |
| 127 | \$7F | Drive number |
| 128 | \$80 | Track number |
| 129 | \$81 | Sector number |
| 130 | \$82 | Channel number |
| 131 | \$83 | Secondary address |
| 132 | \$84 | Secondary address |
| 133 | \$85 | Data byte |
| 139 | \$8B-\$8D | Work storage for division |
| 148 | \$94-\$95 | Actual buffer pointer |
| 153 | \$99-\$9A | Address of buffer 0 \$300 |
| 155 | \$9B-\$9C | Address of buffer 1 \$400 |
| 157 | \$9D-\$9E | Address of buffer 2 \$500 |
| 159 | \$9F-\$A0 | Address of buffer 4 \$600 |
| 161 | \$A1-\$A2 | Address of buffer 5 \$700 |
| 163 | \$A3-\$A4 | Pointer to input buffer \$200 |
| 165 | \$A5-\$A6 | Pointer to buffer for error message \$2D5 |

Anatomy of the 1541 Disk Drive

| | | |
|-----------|-------------|--------------------------------------|
| 181 | \$B5-\$BA | Record # lo, block # lo |
| 187 | \$BB-\$C0 | Record # hi, block # hi |
| 193 | \$C1-\$C6 | Write pointer for rel. file |
| 199 | \$C7-\$CC | Record length for rel. files |
| 212 | \$D4 | Pointer in record for rel. file |
| 213 | \$D5 | Side sector number |
| 214 | \$D6 | Pointer to data block in side sector |
| 215 | \$D7 | Pointer to record in rel. file |
| 231 | \$E7 | File type |
| 249 | \$F9 | Buffer number |
| 256-325 | \$100-\$145 | Stack |
| 512-552 | \$200-\$228 | Buffer for command string |
| 586 | \$24A | File type |
| 600 | \$258 | Record length |
| 601 | \$259 | Track side-sector |
| 602 | \$25A | Sector side-sector |
| 628 | \$274 | Length of input line |
| 632 | \$278 | Number of file names |
| 663 | \$297 | File control method |
| 640-644 | \$280-\$284 | Track of a file |
| 645-649 | \$285-\$289 | Sector of a file |
| 725-761 | \$2D5-\$2F9 | Buffer for error message |
| 762/764 | \$2FA/\$2FC | Number of free blocks |
| 768-1023 | \$300-\$3FF | Buffer 0 |
| 1024-1279 | \$400-\$4FF | Buffer 1 |
| 1280-1535 | \$500-\$5FF | Buffer 2 |
| 1536-1791 | \$600-\$6FF | Buffer 3 |
| 1792-2047 | \$700-\$7FF | Buffer 4 |

Anatomy of the 1541 Disk Drive

3.2 Operation of the DOS - An Overview

The VIC-1541 is an intelligent disk drive with its own microprocessor and control system (Disk Operation System, DOS). This means that no memory space or processing time is taken from the computer. The computer needs only transmit commands to the disk drive, which it then executes on its own.

The disk performs three tasks simultaneously: Firstly, it manages data traffic to and from the computer. Secondly, it interprets the commands and performs the management of files and the associated communications channels and block buffer. Thirdly, it handles the hardware-oriented related functions of the disk drive - formatting, reading and writing, etc.

These tasks are carried out simultaneously by the 6502 microprocessor in the VIC 1541. This is possible with the help of the interrupt technique. Only in this way can three tasks be executed simultaneously.

Most of the DOS is concerned with interpreting and executing the transmitted commands. The reception of data and commands from the computer is controlled by interrupts. If the computer wants to talk to a peripheral device, it sends a pulse along the ATN line (ATteNtion, see section 5.1). This generates an interrupt at the disk drive. The DOS stops its current task and notices that the computer wants to send data. The DOS then finishes the original task. After that, the DOS will accept further data and commands from the computer. If the command is finished, the DOS stays in a wait loop until new commands arrive from the disk.

The execution of a command at this level is limited to the logical processing of the command, the management of the communications channel to and from the computer and the preparation and retrieval of data to be written or read, respectively. The tasks of a disk controller, formatting diskettes and writing and reading individual blocks, must also be performed by the processor.

These tasks are again interrupt controlled. Regular programs in the disk are interrupted every 14 milliseconds by a built-in timer, and control branches to a program that fulfills the tasks of a disk controller. Communications between the two independent programs is handled through a common area of memory, in which the main program places codes for the disk controller program. If the interrupt program is active, it looks at the memory locations to determine which activities are demanded, such as formatting a diskette. If this is the case, the drive and head motors are set in motion. At the end of the interrupt routine, the main program examines the memory locations to determine if the task was carried out by the disk controller, or if it

must wait yet. In this way, the main program is informed in case of an error, such as a read error or if a write protect tab is present. The main program can then react appropriately and display the error message, for example.

In the large CBM disks, two 6504 microprocessors are used as a disk controller. Communication again occurs over a common area of memory.

An overview of the storage layout of the DOS such as the I/O primitives for managing the diskette and serial bus can be found in the previous section.

This overview of the work of the DOS is naturally just a rough outline. If you want more exact information, refer to the DOS listing of the VIC 1541 in section 3.5, in which the complete 16K control system is documented.

3.3 The Structure of the VIC 1541 Diskette

The diskette of the 1541 is divided into 35 tracks. Each track contains from 17 to 21 sectors. The total number of sectors is 683. Because the directory occupies track 18, 664 data are available for use, each containing 256 bytes. The tracks are layed out as follows:

| : TRACK | : NUMBER OF SECTORS : | : |
|--------------|-----------------------|---|
| :- | :- | : |
| : 1 TO 17 : | 21 | : |
| : 18 TO 24 : | 19 | : |
| : 25 TO 30 : | 18 | : |
| : 31 TO 35 : | 17 | : |

The varying number of sectors per track is necessitated by the shortening of the tracks from the midpoint on.

3.3.1 The BAM of the VIC 1541

BAM is an abbreviation for Block Availability Map. The BAM indicates whether a block on the diskette is free or allocated to a file. After every manipulation of blocks (saving, deleting, etc.) the BAM is updated. When the BAM indicates that a file to be saved requires more blocks than are available, an error message is given. When a file is OPENed, the BAM in the DOS storage is updated, and is rewritten to disk when the file is CLOSEd. Commands that have a write or delete function read the BAM, update it, and rewrite it to the diskette. The BAM is organized as follows on track 18 sector 0:

| | | | |
|---|-------------|-------------------------------|---|
| : Track 18, sector 0 | | | : |
| : BYTE | | | : |
| : : CONTENTS : MEANING | | | : |
| : 0,1 (\$00-\$01) | : \$12,\$01 | : Track and sector of the 1st | : |
| : : | : | : block of the directory | : |
| : 2 (\$02) | : \$41 | : ASCII character 'A'; | : |
| : : | : | : indicates 1541 format | : |
| : 3 (\$03) | : \$00 | : Zero flag for future use | : |
| : 4-143 (\$04-\$8F) | : | : Bit map of free and | : |
| : : | : | : allocated blocks * | : |
| : * 1 = block free; 0 = block allocated | | | : |

The bit map of the blocks is organized so that 4 bytes

represent the sectors on a track. As can be inferred from the following table, the first of the 4 bytes contain the number of free blocks in the track. The other 3 bytes (24 bits) indicate which blocks are free and which are allocated in this track.

Structure of the BAM entry of a track:

| : BYTE | : CONTENTS | : |
|--------|--|---|
| : 0 | : Number of available blocks in this track | : |
| : 1 | : Bit map of sectors 0-7 | : |
| : 2 | : Bit map of sectors 8-15 | : |
| : 3 | : Bit map of sectors 16-23 | : |

4 bytes of a track designation in the BAM:

| | | | |
|---|---|----------------------------|---|
| ----- | | | |
| : Track 18, sector 0, bytes 4-7 (track 1) : | | | |
| ----- | | | |
| : 00001010 | : | 00000000 00000011 11111111 | : |
| : (\$0A) | : | (\$00) (\$03) (\$FF) | : |
| ----- | | | |
| : 10 free | : | 1 = free | : |
| : blocks | : | 0 = allocated | : |
| ----- | | | |

Using a simple program, you can read the first byte of each track entry in the bit map, add them up and find the total number of free blocks on the diskette.

3.3.2 The Directory

The directory is the table of contents of the diskette. It contains the following information:

- disk name
- disk ID
- DOS version number
- filenames
- file types
- blocks per file
- free blocks

This directory is loaded into memory with the command **LOAD "S",8**. A program previously in memory will be destroyed! It can be displayed on the screen with the **LIST** command.

The directory occupies all of track 18 on the disk. The file entries follow the directory header. Each block accommodates

Anatomy of the 1541 Disk Drive

a maximum of 8 file entries. Because the BAM and the header occupy one block, 18 blocks are left for file entries. A total of 144 files may reside on one diskette (18 blocks with 8 entries each).

Format of the directory header:

| | | |
|---|-------------|---------------------------|
| ----- | | |
| : Track 18, sector 0 | : | : |
| ----- | | |
| : BYTE | : CONTENTS | : MEANING |
| ----- | | |
| : 144-161 (\$90-\$A1) | : | : Disk name (padded with |
| : : | : | : shifted spaces) |
| : 162,163 (\$A2-\$A3) | : | : Disk ID marker |
| : 164 (\$A4) | : \$A0 | : Shifted Space |
| : 165,166 (\$A5-\$A6) | : \$32,\$41 | : ASCII characters "2A" |
| : | : | : (format) |
| : 167-170 (\$A7-\$AA) | : \$A0 | : Shifted Space |
| : 171-255 (\$AB-\$FF) | : \$00 | : not used, filled with 0 |
| ----- | | |
| : * Bytes 180 to 191 have the contents "BLOCKS FREE" on | : | |
| : many diskettes | : | |
| ----- | | |

The Diskette Name:

The name of the diskette can be a maximum of 16 characters in length and is established when the diskette is formatted. If fewer than 16 characters are given, the rest is filled with shifted spaces (\$A0). The following BASIC routine reads the name and saves it in the string variable DNS:

```
100 OPEN 15,8,15,"IO"           : REM COMMAND CHANNEL 15
                               : AND DISK INITIALIZED
110 OPEN 2,8,2,"#"             : REM DATA CHANNEL 2 OPENED
120 PRINT#15,"B-R";2;0;18;0    : REM TRACK 18, SECTOR 0 READ
                               : AND PLACED IN CHANNEL 2
130 PRINT#15,"B-P";2;144       : REM BUFFER-POINTER TO BYTE
                               : 144
140 DNS=""                     : REM STRING DNS IS ERASED
150 REM LOOP TO READ THE 16 BYTES OF THE NAME
160 FOR I=1 TO 16
170 ::GET#2,X$                 : REM READ A BYTE
180 ::IF ASC(X$)=160 THEN 200   : REM IGNORE SHIFT SPACE
190 ::DNS=DNS+X$                : REM BYTE ADDED TO DNS
200 NEXT I
210 CLOSE 2:CLOSE 15          : REM CLOSE CHANNELS
```

After running the routine, the string DNS contains the disk name.

Diskette ID:

The diskette ID is two characters in length and is specified when formatting the diskette. The DOS uses this ID to detect if a diskette in the drive has been replaced. If so, then the DOS performs an INITIALIZE. Initializing a diskette loads the BAM into memory in the drive. This way, the actual BAM is always in memory, provided the ID given when formatting is always different. Should this not be the case, a diskette must be initialized explicitly by using the INITIALIZE command.

3.3.3 The Directory Format

Blocks 1 through 19 on track 18 contain the file entries. The first two bytes of a block point to the next directory block with file entries. If no more directory blocks follow, these bytes contain \$00 and SFF, respectively.

| | | |
|----------------------|--|---|
| : Track 18, sector 1 | | : |
| : Byte | : Contents | : |
| : 0,1 | (\$00,\$01) : Track and sector number of the | : |
| : | : next directory block | : |
| : 2-31 | (\$02-\$1F) : Entry of 1st file | : |
| : 34-63 | (\$22-\$3F) : Entry of 2nd file | : |
| : 66-95 | (\$42-\$5F) : Entry of 3rd file | : |
| : 98-127 | (\$62-\$7F) : Entry of 4th file | : |
| : 130-159 | (\$82-\$9F) : Entry of 5th file | : |
| : 162-191 | (\$A2-\$BF) : Entry of 6th file | : |
| : 194-223 | (\$C2-\$DF) : Entry of 7th file | : |
| : 226-255 | (\$E2-\$FF) : Entry of 8th file | : |

Format of a Directory Entry:

Each file entry consists of 30 bytes, the functions of which are described below:

Anatomy of the 1541 Disk Drive

| : BYTE | : CONTENTS | : |
|---------|--|---|
| : 0 | (\$00) : File type | : |
| : 1,2 | (\$01,\$02) : Track and sector number of the | : |
| : | : first data block | : |
| : 3-18 | (\$03-\$12) : Filename (padded with "SHIFT SPACE") | : |
| : 19,20 | (\$13,\$14) : Only used for relative files | : |
| : | : (track and sector of the first | : |
| : | : side-sector block) | : |
| : 21 | (\$15) : Only used for relative files | : |
| : | : (record length) | : |
| : 22-25 | (\$16-\$19) : Not used | : |
| : 26,27 | (\$1A-\$1B) : Track and sector number of the new | : |
| : | : file when overwritten with the @: | : |
| : 28,29 | (\$1C-\$1D) : Number of blocks in the file (low | : |
| : | : byte, high byte) | : |

File Type Marker:

Byte 0 of the file entry denotes the file type. Bits 0-2 are used to indicate the 5 file types. Bit 7 indicates if the file has been CLOSED properly. Closing a file sets bit 7. An unclosed file is denoted with an asterisk in front of the file type in the directory listing. If, for example, a sequential file "TEST" is opened and the directory is listed, this file will be represented like this:

```
12      "TEST"          *SEO
```

If the file is CLOSED again, the asterisk does not appear in future directory listings. If this file remains unclosed and later opened, the error message "WRITE FILE OPEN" will appear.

The File Type:

In order to understand the function of byte 0 in the file entry, the file type, a table of all file types follows:

| : File type | : Bit mask opened | : Bit mask closed | : |
|--------------|-------------------|-------------------|-------------|
| : | : 7654 3210 | HEX | : 7654 3210 |
| : DELETED | : 0000 0000 | \$00 | : 1000 0000 |
| : SEQUENTIAL | : 0000 0001 | \$01 | : 1000 0001 |
| : PROGRAM | : 0000 0010 | \$02 | : 1000 0010 |
| : USER | : 0000 0011 | \$03 | : 1000 0011 |
| : RELATIVE | : 0000 0100 | \$04 | : 1000 0100 |

Perhaps you have noticed that bits 3-6 have no function. But we verified with help from the DOS listing, bit 6 has a

function:

BIT 6 OF THE FILE TYPE DENOTES A PROTECTED FILE!

If you set this bit to 1, the corresponding file can no longer be deleted. This is designated in the directory listing with a < next to the file type. Because setting this bit requires some complicated commands, you will find a program in chapter 4 of this book with which you can protect, unprotect, and delete files.

Track and sector of the first Data Block

Bytes 1 and 2 of the file entry point to the first data block of the file. The first byte contains the track and the second the sector number where the file begins. The first data block, in turn contains a pointer to the second block of the file (also contained in the first two bytes of the block). The last data block of the file is indicated by a first-byte value of \$00. The second byte contains the number of bytes used in this last sector.

This concatenation can be explained with the help of the DOS MONITOR, contained in this book:

```
>:B0 A0 A0 A0 A0 A0 00 00 00 ...  

>:B8 00 00 00 00 00 00 0B 00 .....  

>:C0 00 00 81 13 09 54 31 32 .....Tl2  

>:C8 2F 53 30 31 A0 A0 A0 A0 /S01  

>:D0 A0 A0 A0 A0 00 00 00 ...  

>:D8 00 00 00 00 00 00 06 00 .....  

>:E0 00 00 82 10 00 44 49 53 .....DIS  

>:E8 4B 20 41 44 44 52 20 43 K ADDR C  

>:F0 48 41 4E 47 45 00 00 00 HANGE...  

>:F8 00 00 00 00 00 04 00
```

This is an extract from the directory (track 18, sector 1) of the TEST/DEMO diskette. You can follow the organization of the file DISK ADDR CHANGE. The entry of this file begins at byte \$E2 and ends with byte \$FF. This is a PRG file, which can be recognized by the file type \$82 in byte \$E2. This file comprises 4 blocks on the disk. This is evident from bytes \$E2 and \$FF. Bytes \$E3 and \$E4 of the entry address the first data block of the file (\$10, \$00, corresponding to track 16, sector 0).

Let's look at a section of this block:

```
>:00 10 0A 01 04 0F 04 64 00 .....$.  

>:08 97 35 39 34 36 38 2C 31 .59468,1  

>:10 32 00 39 04 6E 0D 99 22 2.9...."  

>:18 93 13 11 11 11 11 44 52 .....DR  

>:20 49 56 45 20 41 44 44 52 IVE ADDR  

>:28 45 53 53 20 43 48 41 4E ESS CHAN
```

Anatomy of the 1541 Disk Drive

```
>:30  47 45 20 50 52 4F 47 52  GE PROGR
>:38  41 4D 22 00 59 04 6F 00  AM".Y./.
>:40  99 22 11 54 55 52 4E 20  ."TURN
>:48  4F 46 46 20 41 4C 4C 20  OFF ALL
```

This block contains the first part of the program. It is stored on the diskette exactly as it is stored in the computer's memory. The BASIC commands are converted to one byte codes called tokens. This is why only the text can be recognized in the right hand translation of the hexadecimal codes. The first two bytes of this data block indicate the second data block (\$10 and \$0A, track 16, sector 10) from which this section follows:

```
>:00  10 14 34 30 00 1D 05 A0  ..40...
>:08  00 8D 20 33 30 30 3A 20  .. 300:
>:10  8F 20 46 49 4E 44 20 44  . FIND D
>:18  52 49 56 45 20 54 59 50  DRIVE TYP
>:20  45 00 39 05 AA 00 8D 20  E.9. ..
>:28  36 30 30 3A 20 8F 20 43  600: . C
>:30  48 41 4E 47 45 20 41 44  HANGE AD
>:38  44 52 45 53 53 00 68 05  DRESS.(
>:40  B4 00 99 22 11 54 48 45  ..".THE
>:48  20 53 45 4C 45 43 54 45  SELECTE
```

The program is continued in this block. Bytes \$00 and \$01 point to the third data block of the file (\$10, \$14, track 16, sector 20):

```
>:00  10 08 31 30 30 30 00 23  ..1000.#
>:08  06 54 01 8B 20 43 B2 32  .T.. C 2
>:10  35 34 20 A7 20 4D 54 B2  54   MT
>:18  31 31 39 3A 20 8F 3A 20  119: ..
>:20  32 30 33 31 20 56 32 2E  2031 V2.
>:28  36 00 45 06 5E 01 8B 20  6.E. ..
>:30  43 B2 32 32 36 20 A7 20  C 226
>:38  4D 54 B2 35 30 3A 20 8F  MT 50: .
>:40  3A 20 32 30 34 30 20 56  : 2040 V
>:48  31 2E 32 00 67 06 68 01  1.2. .(.
```

This is the next to the last block of the program. You have no doubt recognized that the data blocks are in the same track, but are not contiguously. The first data block is block 0. The next is block 10, 10 blocks from the first block. 9 blocks are always skipped between data blocks of a file. The third data block is block number 20. The DOS begins again with the first block if the calculated block oversteps the highest block. Because track 16 contains 21 blocks, the last data block is block number 8. The first two bytes of this third block address it:

```
>:00  00 F8 5A 42 B2 31 20 A7  . ZB 1
>:08  20 34 34 30 00 14 07 A3  440...
>:10  01 8B 20 53 54 20 A7 20  .. ST
>:18  31 30 30 30 00 45 07 B8  1000.E.
```

```
>:20 01 98 31 35 2C 22 4D 2D ..15,"M-
>:28 52 22 C7 28 31 37 32 29 R" (172)
>:30 C7 28 31 36 29 3A A1 23 (16): #
>:38 31 35 2C 5A 43 24 3A 5A 15,ZC$:Z
>:40 43 B2 C6 28 5A 43 24 AA C F(ZC$ 
>:48 C7 28 30 29 00 66 07 G(0)).&.
```

Here the end of the program is marked by the value \$00 in byte \$00. Byte \$01 gives the number of bytes in this last block that belong to the program. (\$F8 corresponds to 248 bytes). Now we can find out the size of the program:

| | |
|--|-------------|
| 3 blocks with 254 bytes each = 762 bytes | |
| last block | = 248 bytes |
| | ----- |
| Size of the program | 1100 bytes |
| | ===== |

The Filename:

The filename is contained in bytes 3-18 of the file entry. It consists of a maximum of 16 characters. Should the name be shorter than 16 characters, the rest of the name is padded with shifted spaces (\$A0).

Track and Sector of the new File for "Overwriting":

If a file is overwritten by using the @:, the new file is first completely saved. No filename entry is made in the directory for this file because the file already exists under this same name. Instead the address of the first block of the new file is placed in bytes 26 and 27 of the filename entry. If the new program is removed, the old one is deleted, which merely designates the blocks allocated to the file as free in the BAM. Now the address of the first data block of the new file is placed into the filename entry in bytes 1 and 2 is used and the file is "overwritten".

Number of Blocks in the File:

The length of a file is given in bytes 28 and 29 of its file entry. A file consists of at least one block and as many as 664 blocks. The first byte is the low byte, and the second is the high byte. If, for example, you discovered the file length \$1F,\$00 with the DISK MONITOR, the file consists of 31 blocks.

Anatomy of the 1541 Disk Drive

3.4 The Organization of Relative Files

Relative files differ from sequential files in that each data record can be accessed directly by a record number. The 1541 DOS takes care of most of the tasks required to support relative records. Let's take a closer look at the organization of a relative file.

First OPEN a relative file with a record length of 100:

```
OPEN 2,8,2, "REL-FILE,L,"+CHR$(100)
```

Now write data record number 70:

```
OPEN 1,8,15
PRINT#1,"P"+CHR$(2)+CHR$(70)+CHR$(0)+CHR$(1)
PRINT#2,"DATA FOR RECORD 70"
CLOSE 2 : CLOSE 1
```

The directory entry then looks like this:

```
>:00 .. . 84 11 00 52 45 4C ...REL
>:08 2D 46 49 4C 45 A0 A0 A0 -FILE
>:10 A0 A0 A0 A0 A0 11 0A 64 ..$ 
>:18 00 00 00 00 00 00 1D 00 .....
```

The first byte \$84 denotes a relative file. The next two bytes denote the first track and sector of the data (\$11, \$00; track 17 sector 0); exactly as with a sequential file. As usual, the name of the file follows (16 characters, padded with shifted spaces, \$A0). Following are two fields not used with sequential files. The first field is a two byte pointer to the track and sector of the first **side-sector** block. A side-sector contains the pointers to each data record and is described more in detail later (\$11, \$0A; track 17, sector 10). The second field is a byte which contains the record length, a value between 1 and 254, in our case \$64 (100).

The convenience of being able to access each record individually requires a definite length for each record that must be defined when establishing a relative file. The rest of the fields in the directory entry have the usual significance; the last two bytes contain the number of blocks in the file (lo and hi byte, \$1D and \$00 (29)).

What does such a side-sector block look like and what is its function?

The side-sector blocks contain the track and sector pointers to the individual data records. For example, if we want to read the 70th record in the relative file, the DOS consults the side-sector block to determine which track and sector contains the record and then read this record directly. As

a result, you can read the 70th record of the file without having to read the entire file. Now let's take a look at the exact construction of a side-sector block. This side-sector block is from our previous file.

```
>:00 00 47 00 64 11 0A 00 00 .G.$....  

>:08 00 00 00 00 00 00 00 00 .....  

>:10 11 00 11 0B 11 01 11 0C .....  

>:18 11 02 11 0D 11 03 11 0E .....  

>:20 11 04 11 0F 11 05 11 10 .....  

>:28 11 06 11 11 11 07 11 12 .....  

>:30 11 08 11 13 11 09 11 14 .....  

>:38 10 08 10 12 10 06 10 10 .....  

>:40 10 04 10 0E 10 02 10 0C .....  

>:48 00 00 00 00 00 00 00 00 .....  

>:50 00 00 00 00 00 00 00 00 .....  

etc.
```

The first two bytes point to the track and sector of the next side-sector block, as usual. In our case, no further side-sector blocks exist (\$00) and only \$47 = 71 bytes of this sector are used. Byte 2 contains the number of the side-sector block, 00. A relative file can contain a maximum of 6 such blocks; the numbering goes from 0 to 5. The record length, \$64 (100), is in byte 3. The next twelve bytes (bytes 4 through 15) contain the track and sector pointers (two bytes each) to the 6 side-sector blocks (00,00 means the block is not yet used). Starting at byte 16 (\$10) are the pointers to the data, and the track and sector pointers to the first 120 data blocks (in our case, only 28 pointers). Using the record number and record length, the DOS can calculate in which block the data lies and at which position within the block the record begins. Take the following example, for instance:

To read the 70th record from the file with a record length of 100 characters, you can perform the following calculations:

$$(70-1) * 100 / 254$$

We get a quotient of 27 and a remainder of 42. The DOS now knows that the record can be found in the 27th data block at the 42+2 or 44th position.

Here's an explanation of the calculation. Each block contains 256 bytes, the first two of which are used as a pointer to the next block. 254 bytes are then left over for data storage. We can calculate the byte number from the start of the file (which is record 1) from the record number and record length. If we divide this value by the number of bytes per block, we get the number of the block containing the record. The remainder of the division gives the position within the block (add 2, because the first two bytes serve as a pointer). If the record overlaps the end of the block,

Anatomy of the 1541 Disk Drive

the next block must also be read.

In our example, the 27th data block lies in track \$10 = 16 and sector \$0C = 12. If we read this block, we get the following picture:

```
>:00 00 F3 00 00 00 00 00 00 00 .....  
>:08 00 00 00 00 00 00 00 00 00 .....  
>:10 00 00 00 00 00 00 00 00 00 .....  
>:18 00 00 00 00 00 00 00 00 00 .....  
>:20 00 00 00 00 00 00 00 00 00 .....  
>:28 00 00 00 00 44 41 54 41 ....DATA  
>:30 20 46 4E 52 20 52 45 43 FOR REC  
>:38 46 52 44 20 37 30 0D 00 ORD 70..  
>:40 00 00 00 00 00 00 00 00 00 .....  
>:48 00 00 00 00 00 00 00 00 00 .....  
>:50 00 00 00 00 00 00 00 00 00 .....  
>:58 00 00 00 00 00 00 00 00 00 .....  
>:60 00 00 00 00 00 00 00 00 00 .....  
>:68 00 00 00 00 00 00 00 00 00 .....  
>:70 00 00 00 00 00 00 00 00 00 .....  
>:78 00 00 00 00 00 00 00 00 00 .....  
>:80 00 00 00 00 00 00 00 00 00 .....  
>:88 00 00 00 00 00 00 00 00 00 .....  
>:90 FF 00 00 00 00 00 00 00 00 .....  
>:98 00 00 00 00 00 00 00 00 00 .....  
>:A0 00 00 00 00 00 00 00 00 00 .....  
>:A8 00 00 00 00 00 00 00 00 00 .....  
>:B0 00 00 00 00 00 00 00 00 00 .....  
>:B8 00 00 00 00 00 00 00 00 00 .....  
>:C0 00 00 00 00 00 00 00 00 00 .....  
>:C8 00 00 00 00 00 00 00 00 00 .....  
>:D0 00 00 00 00 00 00 00 00 00 .....  
>:D8 00 00 00 00 00 00 00 00 00 .....  
>:E0 00 00 00 00 00 00 00 00 00 .....  
>:E8 00 00 00 00 00 00 00 00 00 .....  
>:F0 00 00 00 FF 00 00 00 00 .....  
>:F8 00 00 00 00 00 00 00 00 .....
```

If we get a block number greater than 120 from the calculation, the pointer can no longer be found on the first side-sector block, rather in the next side-sector blocks. In this case, you divide the block number by 120, the quotient being the number of the side-sector block. The remainder gives the location of the pointer within this block. For instance, to find record number 425, divide by 120 and get a quotient 3, remainder 65. Therefore, you must read side-sector block 3 and get the pointer to the 65th data block. Between 2 and 4 block accesses are necessary to access a record of a relative data file.

When creating or expanding a relative file, the following takes place:

First, a directory entry is created for the relative file,

containing the record length. Two channels are reserved for the relative file, one for the data, the other for the side-sectors. If a record pointer is set to a specific record, the DOS first checks to see if the record already exists. If so, the corresponding block is read and the buffer pointer set so that the contents can be accessed. If not, the record is created. All records preceding this record number that do not already exist are also created. The first byte of a new record is written to contain \$FF (255), and the rest of the record is filled with \$00.

If the corresponding record is at the beginning of a block, the rest of the block is filled with empty records. Each time a non-existing record is accessed, the error message **50, RECORD NOT PRESENT** is returned. When writing a new record, this is not considered an error, but indicates that a new record was created.

You can use this method for creating a new file if you know the maximum number of data records. You simply set the record pointer to this record and write \$FF (CHR\$(255)) to this record. By allocating a file like this, the error message 50 no longer appears. You also know if there is sufficient space on the diskette. If not, the error message **52, FILE TOO LARGE** is returned.

With a maximum of 6 side sectors, a relative file can contain $6 * 120 * 254 = 182,880$ bytes. In the case of the VIC 1541, this is more than the capacity of the whole diskette. With the bigger 8050 drive, which contains more than 500K of storage, this may present a limitation. But DOS version 2.7 has an expansion of the side-sector procedure ('super side-sector'), with which a relative file may contain up to 23 MB. DOS 2.7 is contained in the CBM 8250 and the Commodore hard drives as well as the newer 8050 drives (see section 5.2).

Because a relative file requires two data channels, and the VIC 1541 has only 3 channels available, only one relative file can be open at a time. The third channel can still be used for a sequential file open at the same time. With the larger CBM drives, more channels are available (3 relative files open simultaneously, see also section 5.2).

Anatomy of the 1541 Disk Drive

3.5 DOS 2.6 ROM LISTINGS

```
***** turn LED on
C100 78      SEI
C101 A9 F7    LDA #$F7    erase LED bit
C103 2D 00 1C AND $1C00
C106 48      PHA
C107 A5 7F    LDA $7F    drive number
C109 F0 05    BEQ SC110   0?
C10B 68      PLA
C10C 09 00    ORA #$00    not drive 0, turn LED off
C10E D0 03    BNE SC113
C110 68      PLA
C111 09 08    ORA #$08    turn LED on
C113 8D 00 1C STA $1C00
C116 58      CLI
C117 60      RTS

***** turn LED on
C118 78      SEI
C119 A9 08    LDA #$08
C11B 0D 00 1C QRA $1C00    LED on
C11E 8D 00 1C STA $1C00
C121 58      CLI
C122 60      RTS

***** erase error flags.
C123 A9 00    LDA #$00
C125 8D 6C 02 STA $026C
C128 8D 6D 02 STA $026D
C12B 60      RTS

*****
C12C 78      SEI
C12D 8A      TXA    save X register
C12E 48      PHA
C12F A9 50    LDA #$50
C131 8D 6C 02 STA $026C
C134 A2 00    LDX #$00
C136 BD CA FE LDA $FECA,X  8
C139 8D 6D 02 STA $026D
C13C 0D 00 1C ORA $1C00
C13F 8D 00 1C STA $1C00    turn LED on
C142 68      PLA
C143 AA      TAX    get x register back
C144 58      CLI
C145 60      RTS

***** interpret command from
computer
C146 A9 00    LDA #$00
C148 8D F9 02 STA $02F9
C14B AD 8E 02 LDA $028E    last drive number
```

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|-----------------------------|
| C14E | 85 7F | STA \$7F | drive number |
| C150 | 20 BC E6 | JSR \$E6BC | prepare 'ok' message |
| C153 | A5 84 | LDA \$84 | secondary address |
| C155 | 10 09 | BPL \$C160 | |
| C157 | 29 0F | AND #\$0F | 15, command channel |
| C159 | C9 0F | CMP #\$0F | yes |
| C15B | F0 03 | BEQ \$C160 | to OPEN command |
| C15D | 4C B4 D7 | JMP \$D7B4 | determine line length and |
| C160 | 20 B3 C2 | JSR \$C2B3 | erase flags |
| C163 | B1 A3 | LDA (\$A3),Y | get first character |
| C165 | 8D 75 02 | STA \$0275 | and store |
| C168 | A2 0B | LDX #\$0B | 11 |
| C16A | BD 89 FE | LDA \$FE89,X | commands |
| C16D | CD 75 02 | CMP \$0275 | compare to first character |
| C170 | F0 08 | BEQ \$C17A | found? |
| C172 | CA | DEX | |
| C173 | 10 F5 | BPL \$C16A | |
| C175 | A9 31 | LDA #\$31 | not found |
| C177 | 4C C8 C1 | JMP \$C1C8 | 31, 'syntax error' |
| C17A | 8E 2A 02 | STX \$022A | number of command words |
| C17D | E0 09 | CPX #\$09 | |
| C17F | 90 03 | BCC \$C184 | command number < 9? |
| C181 | 20 EE C1 | JSR \$C1EE | test for 'R', 'S', and 'N' |
| C184 | AE 2A 02 | LDX \$022A | command number |
| C187 | BD 95 FE | LDA \$FE95,X | jump address lo |
| C18A | 85 6F | STA \$6F | |
| C18C | BD A1 FE | LDA \$FEA1,X | jump address hi |
| C18F | 85 70 | STA \$70 | |
| C191 | 6C 6F 00 | JMP (\$006F) | jump to command |
| ***** | | | |
| | | | prepare error message after |
| | | | executing command |
| C194 | A9 00 | LDA #\$00 | |
| C196 | 8D F9 02 | STA \$02F9 | |
| C199 | AD 6C 02 | LDA \$026C | |
| C19C | D0 2A | BNE \$C1C8 | flag set? |
| C19E | A0 00 | LDY #\$00 | yes, then set error message |
| C1A0 | 98 | TYA | |
| C1A1 | 84 80 | STY \$80 | error number 0 |
| C1A3 | 84 81 | STY \$81 | track number 0 |
| C1A5 | 84 A3 | STY \$A3 | sector number 0 |
| C1A7 | 20 C7 E6 | JSR \$E6C7 | |
| C1AA | 20 23 C1 | JSR \$C123 | prepare 'ok' message |
| C1AD | A5 7F | LDA \$7F | erase error flag |
| C1AF | 8D 8E 02 | STA \$028E | drive number |
| C1B2 | AA | TAX | save as last drive number |
| C1B3 | A9 00 | LDA #\$00 | |
| C1B5 | 95 FF | STA \$FF,X | |
| C1B7 | 20 BD C1 | JSR \$C1BD | erase input buffer |
| C1BA | 4C DA D4 | JMO SD4DA | close internal channel |
| ***** | | | |
| | | | erase input buffer |
| C1BD | A0 28 | LDY #\$28 | erase 41 characters |
| C1BF | A9 00 | LDA #\$00 | |

Anatomy of the 1541 Disk Drive

| | | | |
|------------------------------|----------|--------------|---|
| C1C1 | 99 00 02 | STA \$0200,Y | \$200 to \$228 |
| C1C4 | 88 | DEY | |
| C1C5 | 10 FA | BPL \$C1C1 | |
| C1C7 | 60 | RTS | |
| ***** | | | |
| C1C8 | A0 00 | LDY #\$00 | give error message (track & sector) |
| C1CA | 84 80 | STY \$80 | track = 0 |
| C1CC | 84 81 | STY \$81 | sector = 0 |
| C1CE | 4C 45 E6 | JMP \$E645 | error number acc, generate error message |
| ***** | | | |
| | | | check input line |
| C1D1 | A2 00 | LDX #\$00 | |
| C1D3 | 8E 7A 02 | STX \$027A | pointer to drive number |
| C1D6 | A9 3A | LDA #\$3A | : |
| C1D8 | 20 68 C2 | JSR \$C268 | test line to ':' or to end |
| C1DB | F0 05 | BEO \$C1E2 | no colon found? |
| C1DD | 88 | DEY | |
| C1DE | 88 | DEY | |
| C1DF | 8C 7A 02 | STY \$027A | point to drive number (before colon) |
| C1E2 | 4C 68 C3 | JMP \$C368 | get drive # and turn LED on |
| ***** | | | |
| C1E5 | A0 00 | LDY #\$00 | check input line |
| C1E7 | A2 00 | LDX #\$00 | pointer to input buffer |
| C1E9 | A9 3A | LDA #\$3A | counter for commas |
| C1EB | 4C 68 C2 | JMP \$C268 | : |
| test line to colon or to end | | | |
| ***** | | | |
| C1EE | 20 E5 C1 | JSR \$C1E5 | check input line |
| C1F1 | D0 05 | BNE \$C1F8 | test line to ':' or end |
| C1F3 | A9 34 | LDA #\$34 | colon found? |
| C1F5 | 4C C8 C1 | JMP \$C1C8 | 34, 'syntax error' |
| C1F8 | 88 | DEY | |
| C1F9 | 88 | DEY | set pointer to colon |
| C1FA | 8C 7A 02 | STY \$027A | position of the drive no. |
| C1FD | 8A | TXA | comma before the colon |
| C1FE | D0 F3 | BNE \$C1F3 | yes, then 'syntax error' |
| C200 | A9 3D | LDA #\$3D | '=' |
| C202 | 20 68 C2 | JSR \$C268 | check input to '=' |
| C205 | 8A | TXA | comma found? |
| C206 | F0 02 | BEO \$C20A | no |
| C208 | A9 40 | LDA #\$40 | bit 6 |
| C20A | 09 21 | ORA #\$21 | and set bit 0 and 5 |
| C20C | 8D 8B 02 | STA \$028B | flag for syntax check |
| C20F | E8 | INX | |
| C210 | 8E 77 02 | STX \$0277 | |
| C213 | 8E 78 02 | STX \$0278 | wildcard found? |
| C216 | AD 8A 02 | LDA \$028A | no |
| C219 | F0 0D | BEO \$C228 | |
| C21B | A9 80 | LDA #\$80 | set bit 7 |
| C21D | 0D 8B 02 | ORA \$028B | |
| C220 | 8D 8B 02 | STA \$028B | |

| | | | |
|------|----------|--------------|-----------------------------|
| C223 | A9 00 | LDA #\$00 | |
| C225 | 8D 8A 02 | STA \$028A | reset wildcard flag |
| C228 | 98 | TYA | '=' found? |
| C229 | F0 29 | BEO \$C254 | no |
| C22B | 9D 7A 02 | STA \$027A,X | number of commas before '=' |
| C22E | AD 77 02 | LDA \$0277 | |
| C231 | 8D 79 02 | STA \$0279 | |
| C234 | A9 8D | LDA #\$8D | |
| C236 | 20 68 C2 | JSR \$C268 | shift CR |
| C239 | E8 | INX | check line to end |
| C23A | 8E 78 02 | STX \$0278 | increment comma counter |
| C23D | CA | DEX | store # of commas |
| C23E | AD 8A 02 | LDA \$028A | wildcard found? |
| C24A | F0 02 | BEO \$C245 | no |
| C243 | A9 08 | LDA #\$08 | set bit 3 |
| C245 | EC 77 02 | CPX \$0277 | comma after '='? |
| C248 | F0 02 | BEO \$C24C | no |
| C24A | 09 04 | ORA #\$04 | set bit 2 |
| C24C | 09 03 | ORA #\$03 | set bits 0 and 1 |
| C24E | 4D 8B 02 | EOR \$028B | |
| C251 | 8D 8B 02 | STA \$028B | as flag for syntax check |
| C254 | AD 8B 02 | LDA \$028B | syntax flag |
| C257 | AE 2A 02 | LDX \$022A | command number |
| C25A | 3D A5 FE | AND \$FEA5,X | combine with check byte |
| C25D | D0 01 | BNE \$C260 | |
| C25F | 60 | RTS | |
| C260 | 8D 6C 02 | STA \$026C | set error flag |
| C263 | A9 30 | LDA #\$30 | |
| C265 | 4C C8 C1 | JMP \$C1C8 | 30, 'syntax error' |

| | | | |
|------|----------|--------------|-----------------------------------|
| C268 | 8D 75 02 | STA \$0275 | search characters in input buffer |
| C26B | CC 74 02 | CPY \$0274 | save character |
| C26E | B0 2E | BCS \$C29E | already done? |
| C270 | B1 A3 | LDA (\$A3),Y | yes |
| C272 | C8 | INY | get char from buffer |
| C273 | CD 75 02 | CMP \$0275 | |
| C276 | F0 28 | BEO \$C2A0 | compared with char found |
| C278 | C9 2A | CMP #\$2A | *** |
| C27A | F0 04 | BEO \$C280 | |
| C27C | C9 3F | CMP #\$3F | '?' |
| C27E | D0 03 | BNE \$C283 | |
| C280 | EE 8A 02 | INC \$028A | set wildcard flag |
| C283 | C9 2C | CMP #\$2C | , |
| C285 | D0 E4 | BNE \$C26B | |
| C287 | 98 | TYA | |
| C288 | 9D 7B 02 | STA \$027B,X | note comma position |
| C28B | AD 8A 02 | LDA \$028A | wildcard flag |
| C28E | 29 7F | AND #\$7F | |
| C290 | F0 07 | BEO \$C299 | no wildcard |
| C292 | A9 80 | LDA #\$80 | |
| C294 | 95 E7 | STA \$E7,X | note flag |
| C296 | 8D 8A 02 | STA \$028A | and save as wildcard flag |
| C299 | E8 | INX | inc comma counter |

Anatomy of the 1541 Disk Drive

| | | | |
|------------------------------|----------|--------------|----------------------------------|
| C29A | E0 04 | CPX #\$04 | 4 commas already? |
| C29C | 90 CD | BCC \$C26B | no, continue |
| C29E | A0 00 | LDY #\$00 | |
| C2A0 | AD 74 02 | LDA \$0274 | set flag for line end |
| C2A3 | 9D 7B 02 | STA \$027B,X | |
| C2A6 | AD 8A 02 | LDA \$028A | wildcard flag |
| C2A9 | 29 7F | AND #\$7F | |
| C2AB | F0 04 | BEQ \$C2B1 | no wildcard |
| C2AD | A9 80 | LDA #\$80 | |
| C2AF | 95 E7 | STA \$E7,X | set flag |
| C2B1 | 98 | TYA | |
| C2B2 | 60 | RTS | |
| ***** | | | |
| C2B3 | A4 A3 | LDY \$A3 | check line length |
| C2B5 | F0 14 | BEQ \$C2CB | ptr to command input buffer |
| C2B7 | 88 | DEY | zero? |
| C2B8 | F0 10 | BEQ \$C2CA | one? |
| C2BA | B9 00 02 | LDA \$0200,Y | pointer to input buffer |
| C2BD | C9 0D | CMP #\$0D | 'CR' |
| C2BF | F0 0A | BEQ \$C2CB | yes, line end |
| C2C1 | 88 | DEY | |
| C2C2 | R9 00 02 | LDA \$0200,Y | preceding character |
| C2C5 | C9 0D | CMP #\$0D | 'CR' |
| C2C7 | F0 02 | BEQ \$C2CB | yes |
| C2C9 | C8 | INY | |
| C2CA | C8 | INY | |
| C2CB | 8C 74 02 | STY \$0274 | pointer to old value again |
| C2CE | C0 2A | CPY #\$2A | same line length |
| C2D0 | A0 FF | LDY #\$FF | compare with 42 characters |
| C2D2 | 90 08 | BCC \$C2DC | |
| C2D4 | 8C 2A 02 | STY \$022A | smaller, ok |
| C2D7 | A9 32 | LDA #\$32 | |
| C2D9 | 4C C8 C1 | JMP \$C1C8 | 32, 'syntax error' line too long |
| ***** | | | |
| erase flag for input command | | | |
| C2DC | A0 00 | LDY #\$00 | |
| C2DE | 98 | TYA | |
| C2DF | 85 A3 | STA \$A3 | pointer to input buffer lo |
| C2E1 | 8D 58 02 | STA \$0258 | record length |
| C2E4 | 8D 4A 02 | STA \$024A | file type |
| C2E7 | 8D 96 02 | STA \$0296 | |
| C2EA | 85 D3 | STA \$D3 | |
| C2EC | 8D 79 02 | STA \$0279 | comma counter |
| C2FF | 8D 77 02 | STA \$0277 | " |
| C2F2 | 8D 78 02 | STA \$0278 | " |
| C2F5 | 8D 8A 02 | STA \$028A | wildcard flag |
| C2F8 | 8D 6C 02 | STA \$026C | error flag |
| C2FB | A2 05 | LDX #\$05 | |
| C2FD | 9D 79 02 | STA \$0279,X | flags for line analysis |
| C300 | 95 D7 | STA \$D7,X | directory sectors |
| C302 | 95 DC | STA \$DC,X | buffer pointer |
| C304 | 95 E1 | STA \$E1,X | drive number |
| C306 | 95 E6 | STA \$E6,X | wildcard flag |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|---------------|
| C308 | 9D 7F 02 | STA \$027F,X | track number |
| C30B | 9D 84 02 | STA \$0284,X | sector number |
| C30E | CA | DEX | |
| C30F | D0 EC | BNE \$C2FD | |
| C311 | 60 | RTS | |

| | | | |
|------|----------|--------------|----------------------------|
| C312 | AD 78 02 | LDA \$0278 | preserve drive number |
| C315 | 8D 77 02 | STA \$0277 | number of commas |
| C318 | A9 01 | LDA #\$01 | save |
| C31A | 8D 78 02 | STA \$0278 | number of drive numbers |
| C31D | 8D 79 02 | STA \$0279 | |
| C320 | AC 8E 02 | LDY \$028E | last drive number |
| C323 | A2 00 | LDX #\$00 | |
| C325 | 86 D3 | STX \$D3 | |
| C327 | BD 7A 02 | LDA \$027A,X | position of the colon |
| C32A | 20 3C C3 | JSR \$C33C | get drive no. before colon |
| C32D | A6 D3 | LDX \$D3 | |
| C32F | 9D 7A 02 | STA \$027A | save exact position |
| C332 | 98 | TYA | |
| C333 | 95 E2 | STA \$E2,X | drive number in table |
| C335 | E8 | INX | |
| C336 | EC 78 02 | CPX \$0278 | got all drive numbers? |
| C339 | 90 EA | BCC \$C325 | no, continue |
| C33B | 60 | RTS | |

| | | | |
|------|----|-----|-------------------------|
| C33C | AA | TAX | search for drive number |
| | | | note position |

| | | | |
|------|----------|--------------|------------------|
| C33D | A0 00 | LDY #\$00 | |
| C33F | A9 3A | LDA #\$3A | : |
| C341 | DD 01 02 | CMP \$0201,X | colon behind it? |
| C344 | F0 0C | BEO \$C352 | yes |
| C346 | DD 00 02 | CMP \$0200,X | colon here? |
| C349 | D0 16 | BNE \$C361 | no |
| C34B | E8 | INX | |
| C34C | 98 | TYA | |
| C34D | 29 01 | AND #\$01 | drive number |
| C34F | A8 | TAY | |
| C350 | 8A | TXA | |
| C351 | 60 | RTS | |

| | | | |
|------|----------|--------------|------------------|
| C352 | BD 00 02 | LDA \$0200,X | get drive number |
|------|----------|--------------|------------------|

| | | | |
|------|-------|------------|------------------------------|
| C355 | E8 | INX | |
| C356 | E8 | INX | |
| C357 | C9 30 | CMP #\$30 | '0'? |
| C359 | F0 F2 | BEO \$C34D | yes |
| C35B | C9 31 | CMP #\$31 | '1'? |
| C35D | F0 EE | BEO \$C34D | yes |
| C35F | D0 EB | BNE \$C34C | no, use last drive number |
| C361 | 98 | TYA | last drive number |
| C362 | 09 80 | ORA #\$80 | set bit 7, uncertain drive # |
| C364 | 29 81 | AND #\$81 | erase remaining bits |
| C366 | D0 E7 | BNE \$C34F | |

get drive number

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|--|
| C368 | A9 00 | LDA #S00 | |
| C36A | 8D 8B 02 | STA \$028B | erase syntax flag |
| C36D | AC 7A 02 | LDY \$027A | position in command line |
| C370 | B1 A3 | LDA (\$A3),Y | get chars from command buffer |
| C372 | 20 BD C3 | JSR SC3BD | get drive number |
| C375 | 10 11 | BPL \$C388 | certain number? |
| C377 | C8 | INY | increment pointer |
| C378 | CC 74 02 | CPY \$0274 | line end? |
| C37B | B0 06 | BCS \$C383 | yes |
| C37D | AC 74 02 | LDY \$0274 | |
| C380 | 88 | DEY | |
| C381 | D0 ED | BNE \$C370 | search line for drive no. |
| C383 | CE 8B 02 | DEC \$028B | |
| C386 | A9 00 | LDA #S00 | |
| C388 | 29 01 | AND #\$01 | |
| C38A | 85 7F | STA \$7F | drive number |
| C38C | 4C 00 C1 | JMP SC100 | turn LED on |
| ***** | | | |
| C38F | A5 7F | LDA \$7F | reverse drive number |
| C391 | 49 01 | EOR #\$01 | drive number |
| C393 | 29 01 | AND #\$01 | switch bit 0 |
| C395 | 85 7F | STA \$7F | |
| C397 | 60 | RTS | |
| ***** | | | |
| C398 | A0 00 | LDY #S00 | establish file type |
| C39A | AD 77 02 | LDA \$0277 | '=' found? |
| C39D | CD 78 02 | CMP \$0278 | |
| C3A0 | F0 16 | BEO \$C3B8 | no |
| C3A2 | CE 78 02 | DEC \$0278 | get pointer |
| C3A5 | AC 78 02 | LDY \$0278 | |
| C3A8 | B9 7A 02 | LDA \$027A,Y | set pointer to character behind '=' |
| C3AB | A8 | TAY | |
| C3AC | B1 A3 | LDA (\$A3),Y | pointer to buffer |
| C3AE | A0 04 | LDY #S04 | compare with marker for file type |
| C3B0 | D9 BB FE | CMP \$FEBB,Y | 'S', 'P', 'U', 'R' |
| C3B3 | F0 03 | BEO \$C3B8 | agreement |
| C3B5 | 88 | DEY | |
| C3B6 | D0 F8 | BNE \$C3B0 | |
| C3B8 | 98 | TYA | |
| C3B9 | 8D 96 02 | STA \$0296 | note file type (1-4) |
| C3BC | 60 | RTS | |
| ***** | | | |
| C3BD | C9 30 | CMP #S30 | check drive number |
| C3BF | F0 06 | BEO \$C3C7 | '0' |
| C3C1 | C9 31 | CMP #S31 | |
| C3C3 | F0 02 | BEO \$C3C7 | '1' |
| C3C5 | 09 80 | ORA #S80 | |
| C3C7 | 29 81 | AND #S81 | no zero or one, then set bit 7 |
| C3C9 | 60 | RTS | |

```
***** verify drive number
C3CA A9 00 LDA #$00
C3CC 85 6F STA $6F
C3CE 8D 8D 02 STA $028D
C3D1 48 PHA
C3D2 AE 78 02 LDX $0278      number of drive numbers
C3D5 68 PLA
C3D6 05 6F ORA $6F
C3D8 48 PHA
C3D9 A9 01 LDA #$01
C3DB 85 6F STA $6F
C3DD CA DEX
C3DE 30 0F BMI $C3EF
C3E0 B5 E2 LDA $E2,X
C3E2 10 04 BPL $C3E8
C3E4 06 6F ASL $6F
C3E6 06 6F ASL $6F
C3E8 4A LSR A
C3E9 90 EA RCC $C3D5
C3EB 06 6F ASL $6F
C3ED D0 E6 BNE $C3D5
C3EF 68 PLA
C3F0 AA TAX
C3F1 BD 3F C4 LDA $C43F,X  get syntax flag
C3F4 48 PHA
C3F5 29 03 AND #$03
C3F7 8D 8C 02 STA $028C
C3FA 68 PLA
C3FB 0A ASL A
C3FC 10 3E BPL $C43C
C3FE A5 E2 LDA $E2
C400 29 01 AND #$01      isolate drive number
C402 85 7F STA $7F
C404 AD 8C 02 LDA $028C
C407 F0 28 BEQ $C434
C409 20 3D C6 JSR $C63D      initialize drive
C40C F0 12 BEQ $C420      error?
C40E 20 8F C3 JSR $C38F      switch to other drive
C411 A9 00 LDA #$00
C413 8D 8C 02 STA $028C
C416 20 3D C6 JSR $C63D      initialize drive
C419 F0 1E BEQ $C439      no error?
C41B A9 74 LDA #$74
C41D 20 C8 C1 JSR $C1C8      74, 'drive not ready'
C420 20 8F C3 JSR $C38F

C423 20 3D C6 JSR $C63D      initialize drive
C426 08 PHP
C427 20 8F C3 JSR $C38F      switch to other drive
C42A 28 PLP
C42B F0 0C BEQ $C439      no error?
C42D A9 00 LDA #$00
C42F 8D 8C 02 STA $028C      number of drives
C432 F0 05 BEQ $C439
C434 20 3D C6 JSR $C63D      initialize drive
```

Anatomy of the 1541 Disk Drive

| | | | |
|--|-------------------------|------------|--------------------------------|
| C437 | D0 E2 | BNE \$C41B | error? |
| C439 | 4C 00 C1 | JMP SC100 | Turn LED on |
| C43C | 2A | ROL A | drive # from carry after bit 0 |
| C43D | 4C 00 C4 | JMP SC400 | |
| ***** flags for drive check ***** | | | |
| C440 | 00 80 41 01 01 01 01 81 | | |
| C448 | 81 81 81 42 42 42 42 | | |
| ***** search for file in directory ***** | | | |
| C44F | 20 CA C3 | JSR SC3CA | initialize drive |
| C452 | A9 00 | LDA #\$00 | |
| C454 | 8D 92 02 | STA \$0292 | pointer |
| C457 | 20 AC C5 | JSR SC5AC | read first directory block |
| C45A | D0 19 | BNE SC475 | entry present? |
| C45C | CE 8C 02 | DEC \$028C | drive number clear? |
| C45F | 10 01 | BPL SC462 | no |
| C461 | 60 | RTS | |
| C462 | A9 01 | LDA #\$01 | |
| C464 | 8D 8D 02 | STA \$028D | |
| C467 | 20 8F C3 | JSR SC38F | change drive |
| C46A | 20 00 C1 | JSR SC100 | Turn LED on |
| C46D | 4C 52 C4 | JMP SC452 | and search |
| C470 | 20 17 C6 | JSR SC617 | search next file in directory |
| C473 | F0 10 | BEO SC485 | not found? |
| C475 | 20 D8 C4 | JSR SC4D8 | verify directory entry |
| C478 | AD 8F 02 | LDA \$028F | |
| C47B | F0 01 | BEO SC47E | more files? |
| C47D | 60 | RTS | |
| C47E | AD 53 02 | LDA \$0253 | |
| C481 | 30 ED | BMI SC470 | file not found? |
| C483 | 10 F0 | BPL SC475 | yes |
| C485 | AD 8F 02 | LDA \$028F | |
| C488 | F0 D2 | BEO SC45C | |
| C48A | 60 | RTS | |
| C48B | 20 04 C6 | JSR SC604 | search next directory block |
| C48E | F0 1A | BEO SC4AA | not found? |
| C490 | D0 28 | BNE SC4BA | |
| C492 | A9 01 | LDA #\$01 | |
| C494 | 8D 8D 02 | STA \$028D | |
| C497 | 20 8F C3 | JSR SC38F | change drive |
| C49A | 20 00 C1 | JSR SC100 | turn LFD on |
| C49D | A9 00 | LDA #\$00 | |
| C49F | 8D 92 02 | STA \$0292 | |
| C4A2 | 20 AC C5 | JSR SC5AC | read directory block |
| C4A5 | D0 13 | BNE SC4BA | found? |
| C4A7 | 8D 8F 02 | STA \$028F | |
| C4AA | AD 8F 02 | LDA \$028F | |
| C4AD | D0 28 | BNE SC4D7 | |
| C4AF | CE 8C 02 | DEC \$028C | |

Anatomy of the 1541 Disk Drive

| | | | | | |
|------|----|----|-----|--------|-------------------------------|
| C4B2 | 10 | DE | BPL | \$C492 | |
| C4B4 | 60 | | RTS | | |
| C4B5 | 20 | 17 | C6 | JSR | \$C617 |
| C4B8 | F0 | F0 | | BEO | \$C4AA |
| C4BA | 20 | D8 | C4 | JSR | \$C4D8 |
| C4BD | AE | 53 | 02 | LDX | \$0253 |
| C4C0 | 10 | 07 | | BPL | \$C4C9 |
| C4C2 | AD | 8F | 02 | LDA | \$028F |
| C4C5 | F0 | EE | | BEO | \$C4B5 |
| C4C7 | D0 | 0E | | BNE | \$C4D7 |
| | | | | | next entry in directory |
| | | | | | not found? |
| | | | | | check entry |
| | | | | | file found? |
| | | | | | yes |
| | | | | | no, then done |
| C4C9 | AD | 96 | 02 | LDA | \$0296 |
| C4CC | F0 | 09 | | BEO | \$C467 |
| C4CE | B5 | E7 | | LDA | \$E7,X |
| C4DD | 29 | 07 | | AND | #\$07 |
| C4D2 | CD | 96 | 02 | CMP | \$0296 |
| C4D5 | D0 | DE | | BNE | \$C4B5 |
| C4D7 | 60 | | | RTS | |
| | | | | | same as desired file type? |
| | | | | | no |
| C4D8 | A2 | FF | | LDX | #\$FF |
| C4DA | 8E | 53 | 02 | STX | \$0253 |
| C4DD | E8 | | | INX | |
| C4DE | 8E | 8A | 02 | STX | \$028A |
| C4E1 | 20 | 89 | C5 | JSR | \$C589 |
| C4E4 | F0 | 06 | | BEO | \$C4EC |
| C4E6 | 60 | | | RTS | |
| | | | | | flag for data found |
| C4E7 | 20 | 94 | C5 | JSR | \$C594 |
| C4EA | D0 | FA | | BNE | \$C4E6 |
| C4EC | A5 | 7F | | LDA | \$7F |
| C4EE | 55 | E2 | | EOR | SE2,X |
| C4F0 | 4A | | | LSR | A |
| C4F1 | 90 | 0B | | BCC | \$C4FE |
| C4F3 | 29 | 40 | | AND | #\$40 |
| C4F5 | F0 | F0 | | BEO | \$C4B7 |
| C4F7 | A9 | 02 | | LDA | #\$02 |
| C4F9 | CD | 8C | 02 | CMP | \$028C |
| C4FC | F0 | E9 | | BEO | \$C4E7 |
| C4FE | RD | 7A | 02 | LDA | \$027A,X |
| C501 | AA | | | TAX | |
| C502 | 20 | A6 | C6 | JSR | \$C6A6 |
| C505 | A0 | 03 | | LDY | #\$03 |
| C507 | 4C | 1D | C5 | JMP | \$C51D |
| | | | | | get length of filename |
| C50A | BD | 00 | 02 | LDA | \$0200,X |
| C50D | D1 | 94 | | CMP | (\$94),Y |
| C50F | F0 | 0A | | BEO | \$C51B |
| C511 | C9 | 3F | | CMP | #\$3F |
| C513 | D0 | D2 | | BNE | \$C4E7 |
| C515 | B1 | 94 | | LDA | (\$94),Y |
| C517 | C9 | A0 | | CMP | #\$A0 |
| C519 | F0 | CC | | BEO | \$C4E7 |
| C51B | E8 | | | INX | |
| C51C | C8 | | | INY | |
| | | | | | get chars out of command line |
| | | | | | same character in directory? |
| | | | | | yes |
| | | | | | '?' |
| | | | | | no |
| | | | | | shift blank, end of name? |
| | | | | | yes |
| | | | | | increment pointer |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|---------------------------------|
| C51D | EC 76 02 | CPX \$0276 | end of the name in the command? |
| C520 | B0 09 | BCS \$C52B | yes |
| C522 | BD 00 02 | LDA \$0200,X | next character |
| C525 | C9 2A | CMP #\$2A | '*' |
| C527 | F0 0C | BEO \$C535 | yes, file found |
| C529 | DO DF | BNE \$C50A | continue search |
| C52B | C0 13 | CPY #\$13 | 19 |
| C52D | B0 06 | BCS \$C535 | reached end of name |
| C52F | B1 94 | LDA (\$94),Y | shift blank, end of name |
| C531 | C9 A0 | CMP #\$A0 | not found |
| C533 | D0 B2 | BNE \$C4E7 | |
| C535 | AE 79 02 | LDX \$0279 | |
| C538 | 8E 53 02 | STX \$0253 | |
| C53B | B5 E7 | LDA \$E7,X | |
| C53D | 29 80 | AND #\$80 | |
| C53F | 8D 8A 02 | STA \$028A | |
| C542 | AD 94 02 | LDA \$0294 | |
| C545 | 95 DD | STA \$DD,X | |
| C547 | A5 81 | LDA \$81 | sector number of the directory |
| C549 | 95 D8 | STA \$D8,X | enter in table |
| C54B | A0 00 | LDY #\$00 | |
| C54D | B1 94 | LDA (\$94),Y | file type |
| C54F | C8 | INY | |
| C550 | 48 | PHA | |
| C551 | 29 40 | AND #\$40 | isolate scratch-protect bit |
| C553 | 85 6F | STA \$6F | (6) and save |
| C555 | 68 | PLA | |
| C556 | 29 DF | AND #\$DF | erase bit 7 |
| C558 | 30 02 | BMI \$C55C | |
| C55A | 09 20 | ORA #\$20 | set bit 5 |
| C55C | 29 27 | AND #\$27 | erase bits 3 and 4 |
| C55E | 05 6F | ORA \$6F | get bit 6 again |
| C560 | 85 6F | STA \$6F | |
| C562 | A9 80 | LDA #\$80 | |
| C564 | 35 E7 | AND \$E7,X | isolate flag for wildcard |
| C566 | 05 6F | ORA \$6F,X | |
| C568 | 95 E7 | STA \$E7,X | write in table |
| C56A | B5 E2 | LDA \$E2,X | |
| C56C | 29 80 | AND #\$80 | |
| C56E | 05 7F | ORA \$7F | drive number |
| C570 | 95 E2 | STA \$E2,X | |
| C572 | B1 94 | LDA (\$94),Y | |
| C574 | 9D 80 02 | STA \$0280,X | first track of file |
| C577 | C8 | INY | |
| C578 | B1 94 | LDA (\$94),Y | |
| C57A | 9D 85 02 | STA \$0285,X | get sector from directory |
| C57D | AD 58 02 | LDA \$0258 | record length |
| C580 | D0 07 | BNE \$C589 | |
| C582 | A0 15 | LDY #\$15 | |
| C584 | B1 94 | LDA (\$94),Y | record length |
| C586 | 8D 58 02 | STA \$0258 | get from directory |
| C589 | A9 FF | LDA #\$FF | |
| C58B | 8D 8F 02 | STA \$028F | |
| C58E | AD 78 02 | LDA \$0278 | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|----------------------------------|
| C591 | 8D 79 02 | STA \$0279 | |
| C594 | CE 79 02 | DEC \$0279 | |
| C597 | 10 01 | BPL \$C59A | |
| C599 | 60 | RTS | |
| C59A | AE 79 02 | LDX \$0279 | |
| C59D | B5 E7 | LDA \$E7,X | wildcard flag set? |
| C59F | 30 05 | BMI SC5A6 | yes |
| C5A1 | BD 80 02 | LDA \$0280,X | track number already set |
| C5A4 | D0 EE | BNE \$C594 | yes |
| C5A6 | A9 00 | LDA #\$00 | |
| C5A8 | 8D 8F 02 | STA \$028F | |
| C5AB | 60 | RTS | |
| C5AC | A0 00 | LDY #\$00 | |
| C5AE | 8C 91 02 | STY \$0291 | |
| C5B1 | 88 | DEY | |
| C5B2 | 8C 53 02 | STY \$0253 | |
| C5B5 | AD 85 FE | LDA \$FE85 | 18, directory track |
| C5B8 | 85 80 | STA \$80 | |
| C5BA | A9 01 | LDA #\$01 | |
| C5BC | 85 81 | STA \$81 | sector 1 |
| C4BE | 8D 93 02 | STA \$0293 | |
| C5C1 | 20 75 D4 | JSR \$D475 | read sector |
| C5C4 | AD 93 02 | LDA \$0293 | |
| C5C7 | D0 01 | BNE \$C5CA | |
| C5C9 | 60 | RTS | |
| C5CA | A9 07 | LDA #\$07 | |
| C5CC | 8D 95 02 | STA \$0295 | number of directory entries (-1) |
| C5CF | A9 00 | LDA #\$00 | |
| C5D1 | 20 F6 D4 | JSR \$D4F6 | get pointer from buffer |
| C5D4 | 8D 93 02 | STA \$0293 | save as track number |
| C5D7 | 20 E8 D4 | JSR \$D4E8 | set buffer pointer |
| C5DA | CE 95 02 | DEC \$0295 | decrement counter |
| C5DD | A0 00 | LDY #\$00 | |
| C5DF | B1 94 | LDA (\$94),Y | first byte from directory |
| C5E1 | D0 18 | BNE \$C5FB | |
| C5E3 | AD 91 02 | LDA \$0291 | |
| C5E6 | D0 2F | BNE \$C617 | |
| C5E8 | 20 3B DE | JSR \$DDE3B | get track and sector number |
| C5EB | A5 81 | LDA \$81 | |
| C5ED | 8D 91 02 | STA \$0291 | sector number |
| C5F0 | A5 94 | LDA \$94 | |
| C5F2 | AE 92 02 | LDX \$0292 | |
| C5F5 | 8D 92 02 | STA \$0292 | buffer pointer |
| C5F8 | F0 1D | BEO \$C617 | |
| C5FA | 60 | RTS | |
| C5FB | A2 01 | LDX #\$01 | |
| C5FD | EC 92 02 | CPX \$0292 | buffer pointer to one? |
| C600 | D0 2D | BNE \$C62F | |
| C602 | F0 13 | BEO \$C617 | |
| C604 | AD 85 FE | LDA \$FE85 | 18, track number of BAM, |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|------------|------------------------------------|
| C607 | 85 80 | STA \$80 | track number |
| C609 | AD 90 02 | LDA \$0290 | |
| C60C | 85 81 | STA \$81 | sector number |
| C60E | 20 75 D4 | JSR \$D475 | read block |
| C611 | AD 94 02 | LDA \$0294 | |
| C614 | 20 C8 D4 | JSR \$D4C8 | set buffer pointer |
| C617 | AD FF | LDA #\$FF | |
| C619 | 8D 53 02 | STA \$0253 | erase-file found flag |
| C61C | AD 95 02 | LDA \$0295 | |
| C61F | 30 08 | BMI \$C629 | all directory entries checked? |
| C621 | A9 20 | LDA #\$20 | |
| C623 | 20 C6 D1 | JSR \$D1C6 | inc buffer ptr by 32, next entry |
| C626 | 4C D7 C5 | JMP \$C567 | and continue |
| C629 | 20 4D D4 | JSR \$D44D | set buffer pointer |
| C62C | 4C C4 C5 | JMP \$C5C4 | read next block |
| C62F | A5 94 | LDA \$94 | |
| C631 | 8D 94 02 | STA \$0294 | |
| C634 | 20 3B DE | JSR \$DE3B | get track & sector no. from buffer |
| C637 | A5 81 | LDA \$81 | |
| C639 | 8D 90 02 | STA \$0290 | save sector number |
| C63C | 60 | RTS | |
| ***** | | | |
| | | | test and initialize drive |
| C63D | A5 68 | LDA \$68 | |
| C63F | D0 28 | BNE \$C669 | |
| C641 | A6 7F | LDX \$7F | drive number |
| C643 | 56 1C | LSR \$1C,X | disk changed? |
| C645 | 90 22 | BCC \$C669 | no, then done |
| C647 | A9 FF | LDA \$FF | |
| C649 | 8D 98 02 | STA \$0298 | set error flag |
| C64C | 20 0E D0 | JSR \$D00E | read directory track |
| C64F | A0 FF | LDY #\$FF | |
| C651 | C9 02 | CMP #\$02 | 20, 'read error'? |
| C653 | F0 0A | BEO \$C65F | yes |
| C655 | C9 03 | CMP #\$03 | 21, 'read error'? |
| C657 | F0 06 | BEO \$C65F | yes |
| C659 | C9 0F | CMP #\$0F | 74, 'drive not ready'? |
| C65B | F0 02 | BEO \$C65F | yes |
| C65D | A0 00 | LDY #\$00 | |
| C65F | A6 7F | LDX \$7F | drive number |
| C661 | 98 | TYA | |
| C662 | 95 FF | STA \$FF,X | save error flag |
| C664 | D0 03 | BNE \$C669 | error? |
| C666 | 20 42 D0 | JSR \$D042 | load BAM |
| C669 | A6 7F | LDX \$7F | drive number |
| C66B | B5 FF | LDA \$FF,X | transmit error code |
| C66D | 60 | RTS | |
| ***** | | | |
| | | | name of file in directory buffer |
| C66E | 48 | PHA | |
| C66F | 20 A6 C6 | JSR \$C6A6 | get end of the name |
| C672 | 20 88 C6 | JSR \$C688 | write filename in buffer |
| C675 | 68 | PLA | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|-----------------------------|
| C676 | 38 | SEC | |
| C677 | ED 4B 02 | SBC \$024B | compare len with max length |
| C67A | AA | TAX | |
| C67B | F0 0A | BEO \$C687 | |
| C67D | 90 08 | BCC \$C687 | |
| C67F | A9 A0 | LDA #\$A0 | |
| C681 | 91 94 | STA (\$94),Y | pad with 'Shift blank' |
| C683 | C8 | INY | |
| C684 | CA | DEX | |
| C685 | D0 FA | BNE \$C681 | |
| C687 | 60 | RTS | |

| | | | |
|------|----------|--------------|--------------------------------|
| C688 | 98 | TYA | buffer number |
| C689 | 0A | ASL A | |
| C68A | A8 | TAY | times 2 as pointer |
| C68B | B9 99 00 | LDA \$0099,Y | |
| C68E | 85 94 | STA \$94 | |
| C690 | B9 9A 00 | LDA \$009A | buffer pointer after \$94/\$95 |
| C693 | 85 95 | STA \$95 | |
| C695 | A0 00 | LDY #\$00 | |
| C697 | BD 00 02 | LDA \$0200,X | transmit characters in buffer |
| C69A | 91 94 | STA (\$94),Y | |
| C69C | C8 | INY | |
| C69D | F0 06 | BEO \$C6A5 | buffer already full? |
| C69F | E8 | INX | |
| C6A0 | EC 76 02 | CPX \$0276 | |
| C6A3 | 90 F2 | BCC \$C697 | |
| C6A5 | 60 | RTS | |

search for end of name in command

| | | | |
|------|----------|--------------|------------------------------|
| C6A6 | A9 00 | LDA #\$00 | |
| C6A8 | 8D 4B 02 | STA \$024B | |
| C6AB | 8A | TXA | |
| C6AC | 48 | PHA | |
| C6AD | BD 00 02 | LDA \$0200,X | get characters out of buffer |
| C6B0 | C9 2C | CMP #\$2C | ',' |
| C6B2 | F0 14 | BEO \$C6C8 | |
| C6B4 | C9 3D | CMP #\$3D | '=' |
| C6B6 | F0 10 | BEO \$C6C8 | |
| C6B8 | EE 4B 02 | INC \$024B | increment length of name |
| C6BB | E8 | INX | |
| C6BC | A9 0F | LDA #\$0F | 15 |
| C6BE | CD 4B 02 | CMP \$024B | |
| C6C1 | 90 05 | BCC \$C6C8 | greater? |
| C6C3 | EC 74 02 | CPX \$0274 | end of input line? |
| C6C6 | 90 E5 | BCC \$C6AD | |
| C6C8 | 8E 76 02 | STX \$0276 | |
| C6CB | 68 | PLA | |
| C6CC | AA | TAX | pointer to end of name |
| C6CD | 60 | RTS | |

| | | | |
|------|-------|----------|-----------------------------------|
| C6CE | A5 83 | LDA \$83 | |
| C6D0 | 48 | PHA | secondary address and channel no. |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|---------------------------------|
| C6D1 | A5 82 | LDA \$82 | |
| C6D3 | 48 | PHA | |
| C6D4 | 20 DE C6 | JSR \$C6DE | create file entry for directory |
| C6D7 | 68 | PLA | |
| C6D8 | 85 82 | STA \$82 | |
| C6DA | 68 | PLA | get data back |
| C6DB | 85 83 | STA \$83 | |
| C6DD | 60 | RTS | |
| ***** | | | |
| C6DE | A9 11 | LDA #\$11 | 17 |
| C6E0 | 85 83 | STA \$83 | secondary address |
| C6E2 | 20 EB D0 | JSR \$D0EB | open channel to read |
| C6E5 | 20 E8 D4 | JSR \$D4E8 | set buffer pointer |
| C6E8 | AD 53 02 | LDA S0253 | |
| C6EB | 10 0A | BPL SC6F7 | not yet last entry? |
| C6ED | AD 8D 02 | LDA S028D | |
| C6F0 | D0 0A | BNE \$C6FC | |
| C6F2 | 20 06 C8 | JSR \$C806 | write 'blocks free.' |
| C6F5 | 18 | CLC | |
| C6F6 | 60 | RTS | |
| C6F7 | AD 8D 02 | LDA S028D | |
| C6FA | F0 1F | BEQ \$C71B | |
| C6FC | CE 8D 02 | DEC \$028D | |
| C6FF | D0 0D | BNE \$C70E | |
| C701 | CE 8D 02 | DEC \$028D | |
| C704 | 20 8F C3 | JSR \$C38F | change drive |
| C707 | 20 06 C8 | JSR \$C806 | write 'blocks free.' |
| C70A | 38 | SEC | |
| C708 | 4C 8F C3 | JMP \$C38F | change drive |
| C70E | A9 00 | LDA #\$00 | |
| C710 | 8D 73 02 | STA S0273 | drive no. for header, hi-byte |
| C713 | 8D 8D 02 | STA \$028D | |
| C716 | 20 B7 C7 | JSR \$C7B7 | write header |
| C719 | 38 | SEC | |
| C71A | 60 | RTS | |
| C71B | A2 18 | LDX #\$18 | |
| C71D | A0 1D | LDY #S1D | |
| C71F | B1 94 | LDA (\$94),Y | number of blocks hi |
| C721 | 8D 73 02 | STA S0273 | in buffer |
| C724 | F0 02 | BEQ SC728 | zero? |
| C726 | A2 16 | LDX #\$16 | |
| C728 | 88 | DEY | |
| C729 | B1 94 | LDA (\$94),Y | number of blocks lo |
| C72B | 8D 72 02 | STA S0272 | in buffer |
| C72E | E0 16 | CPX #\$16 | |
| C730 | F0 0A | BEQ SC73C | |
| C732 | C9 0A | CMP #\$0A | 10 |
| C734 | 90 06 | BCC SC73C | |
| C736 | CA | DEX | |
| C737 | C9 64 | CMP #\$64 | 100 |
| C739 | 90 01 | BCC SC73C | |
| C73B | CA | DEX | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|---------------------------------|
| C73C | 20 AC C7 | JSR \$C7AC | erase buffer |
| C73F | B1 94 | LDA (\$94),Y | file type |
| C741 | 48 | PHA | |
| C742 | 0A | ASL A | bit 7 in carry |
| C743 | 10 05 | BPL \$C74A | bit 6 not set? |
| C745 | A9 3C | LDA #\$3C | '<' for protected file |
| C747 | 9D B2 02 | STA \$02B2,X | write behind file type |
| C74A | 68 | PLA | |
| C74B | 29 OF | AND #\$0F | isolate bits 0-3 |
| C74D | A8 | TAY | as file type marker |
| C74E | B9 C5 FE | LDA \$FEC5,Y | 3rd letter of the file type |
| C751 | 9D B1 02 | STA \$02B1,X | in buffer |
| C754 | CA | DEX | |
| C755 | B9 C0 FE | LDA \$FEC0,Y | 2nd letter of file type |
| C758 | 9D B1 02 | STA \$02B1,X | in buffer |
| C75B | CA | DEX | |
| C75C | B9 BB FE | LDA \$FEBB,Y | 1st letter of file type |
| C75F | 9D B1 02 | STA \$02B1,X | in buffer |
| C762 | CA | DEX | |
| C763 | CA | DEX | |
| C764 | B0 05 | BCS \$C76B | file not closed? |
| C766 | A9 2A | LDA #\$2A | '*' |
| C768 | 9D B2 02 | STA \$02B2,X | before file type in buffer |
| C76B | A9 A0 | LDA #\$A0 | pad with 'shift blank' |
| 676D | 9D B1 02 | STA \$02B1,X | in buffer |
| C770 | CA | DEX | |
| C771 | A0 12 | LDY #\$12 | |
| C773 | B1 94 | LDA (\$94),Y | filenames |
| C775 | 9D B1 02 | STA \$02B1,X | write in buffer |
| C778 | CA | DEX | |
| C779 | 88 | DEY | |
| C77A | C0 03 | CPY #\$03 | |
| C77C | B0 F5 | BCS \$C773 | |
| C77E | A9 22 | LDA #\$22 | '=' |
| C780 | 9D B1 02 | STA \$02B1,X | write before file type |
| C783 | E8 | INX | |
| C784 | E0 20 | CPX #\$20 | |
| C786 | B0 0B | BCS \$C793 | |
| C788 | BD B1 02 | LDA \$02B1,X | character from buffer |
| C78B | C9 22 | CMP #\$22 | '=?' |
| C78D | F0 04 | BEO \$C793 | |
| C7BF | C9 A0 | CMP #\$A0 | 'shift blank' at end of name |
| C791 | D0 F0 | BNE \$C783 | |
| C793 | A9 22 | LDA #\$22 | fill through '=' |
| C795 | 9D B1 02 | STA \$02B1,X | |
| C798 | E8 | INX | |
| C799 | E0 20 | CPX #\$20 | |
| C89B | B0 0A | BCS \$C7A7 | |
| C79D | A9 7F | LDA #\$7F | bit 7 |
| C79F | 3D B1 02 | AND \$02B1,X | |
| C7A2 | 9D B1 02 | STA \$02B1,X | erase in the remaining chars |
| C7A5 | 10 F1 | BPL \$C798 | |
| C7A7 | 20 B5 C4 | JSR \$C4B5 | search for next directory entry |
| C7AA | 38 | SEC | |
| C7AB | 60 | RTS | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|--------------------------------|
| C7AC | A0 1B | LDY #\$1B | erase directory buffer |
| C7AE | A9 20 | LDA #\$20 | ' ' blank |
| C7B0 | 99 B0 02 | STA \$02B0,Y | write in buffer |
| C7B3 | 88 | DEY | |
| C7B4 | D0 FA | BNE \$C7B0 | |
| C7B6 | 60 | RTS | |
| ***** | | | |
| C7B7 | 20 19 F1 | JSR \$F119 | create header with disk name |
| C7BA | 20 DF F0 | JSR \$F0DF | initialize if needed |
| C7BD | 20 AC C7 | JSR \$C7AC | read disk name |
| C7C0 | A9 FF | LDA #\$FF | erase buffer |
| C7C2 | 85 6F | STA \$6F | |
| C7C4 | A6 7F | LDX \$7F | drive number |
| C7C6 | 8E 72 02 | STX \$0272 | as block no. lo in buffer |
| C7C9 | A9 00 | LDA #\$00 | |
| C7CB | 8D 73 02 | STA \$0273 | block number lo |
| C7CE | A6 F9 | LDX \$F9 | buffer number |
| C7D0 | BD E0 FE | LDA \$FEE0,X | hi-byte of the buffer address |
| C7D3 | 85 95 | STA \$95 | |
| C7D5 | AD 88 FE | LDA \$FE88 | \$90, position of disk name |
| C7D8 | 85 94 | STA \$94 | save |
| C7DA | A0 16 | LDY #\$16 | |
| C7DC | B1 94 | LDA (\$94),Y | pad buffer with 'shift blank' |
| C7DE | C9 A0 | CMP #\$A0 | |
| C7E0 | D0 0B | BNE \$C7ED | |
| C7E2 | A9 31 | LDA #\$31 | '1' |
| C7E4 | 2C | .BYTE \$2C | |
| C7E5 | B1 94 | LDA (\$94),Y | character from buffer |
| C7E7 | C9 A0 | CMP #\$A0 | compare with 'shift blank' |
| C7E9 | D0 02 | BNE \$C7ED | |
| C7EB | A9 20 | LDA #\$20 | ' ' blank |
| C7ED | 99 B3 02 | STA \$02B3 | in buffer |
| C7F0 | 88 | DEY | |
| C7F1 | 10 F2 | BPL \$C7E5 | |
| C7F3 | A9 12 | LDA #\$12 | 'RVS ON' |
| C7F5 | 8D B1 02 | STA \$02B1 | in buffer |
| C7F8 | A9 22 | LDA #\$22 | " " |
| C7FA | 8D B2 02 | STA \$02B2 | write before |
| C7FD | 8D C3 02 | STA \$02C3 | and after disk name |
| C800 | A9 20 | LDA #\$20 | ' ' blank |
| C802 | 8D C4 02 | STA \$02C4 | behind it |
| C805 | 60 | RTS | |
| ***** | | | |
| C806 | 20 AC C7 | JSR \$C7AC | create last line |
| C809 | A0 0B | LDY #\$0B | erase buffer |
| C80B | B9 17 C8 | LDA \$C817,Y | 12 characters |
| C80E | 99 B1 02 | STA \$02B1,Y | 'blocks free.' |
| CB11 | 88 | DEY | write in buffer |
| C812 | 10 F7 | BPL \$C80B | |
| C814 | 4C 4D EF | JMP \$EF4D | number of free blocks in front |

Anatomy of the 1541 Disk Drive

| | | |
|------|-------------------------|----------------------------|
| C817 | 42 4C 4F 43 4B 53 20 46 | 'blocks f' |
| C81F | 52 45 45 2E | 'ree.' |
| | | ***** |
| C823 | 20 98 C3 | S command 'scratch' |
| C826 | 20 20 C3 | ascertain file type |
| C829 | 20 CA C3 | get drive number |
| C82C | A9 00 | initialize drive if needed |
| C82E | 85 86 | LDA #\$00 |
| C830 | 20 9D C4 | STA \$86 |
| C833 | 30 3D | JSR SC49D |
| C835 | 20 B7 DD | BMI SC872 |
| C838 | 90 33 | JSR \$DDB7 |
| C83A | A0 00 | BCC \$C86D |
| C83C | B1 94 | LDY #\$00 |
| C83E | 29 40 | LDA (\$94),Y |
| C840 | D0 2B | AND #\$40 |
| C842 | 20 B6 C8 | BNE SC86D |
| C845 | A0 13 | JSR SC8B6 |
| C847 | B1 94 | LDY #\$13 |
| C849 | F0 0A | LDA (\$94),Y |
| C84B | 85 80 | BEO SC855 |
| C84D | C8 | STA \$80 |
| C84E | B1 94 | INY |
| C850 | 85 81 | LDA (\$94),Y |
| C852 | 20 7D C8 | STA \$81 |
| C855 | AE 53 02 | JSR SC87D |
| C858 | A9 20 | LDX \$0253 |
| C85A | 35 E7 | LDA #\$20 |
| C85C | D0 0D | AND \$E7,X |
| C85E | BD 80 02 | BNE SC86B |
| C861 | 85 80 | LDA \$0280,X |
| C863 | BD 85 02 | STA \$80 |
| C866 | 85 81 | LDA \$0285,X |
| C868 | 20 7D C8 | STA \$81 |
| C86B | E6 86 | JSR SC87D |
| C86D | 20 8B C4 | INC \$86 |
| C870 | 10 C3 | JSR SC48B |
| C872 | A5 86 | BPL SC835 |
| C874 | 85 80 | LDA \$86 |
| C876 | A9 01 | STA \$80 |
| C878 | A0 00 | LDA #\$01 |
| C87A | 4C A3 C1 | LDY #\$00 |
| | | JMP SC1A3 |
| | | ***** |
| C87D | 20 5F EF | message 'files scratched' |
| C880 | 20 75 D4 | erase file |
| C883 | 20 19 F1 | free block in BAM |
| C886 | B5 A7 | JSR \$D475 |
| C888 | C9 FF | JSR SF119 |
| C88A | F0 08 | LDA \$A7,X |
| C88C | AD F9 02 | CMP #\$FF |
| C88F | 09 40 | BEO SC894 |
| C891 | 8D F9 02 | LDA \$02F9 |
| | | get buffer number in BAM |

Anatomy of the 1541 Disk Drive

| | | | |
|-----------------------------------|----------|--------------|------------------------------|
| C894 | A9 00 | LDA #\$00 | |
| C896 | 20 C8 D4 | JSR \$D4C8 | buffer pointer to zero |
| C899 | 20 56 D1 | JSR \$D156 | get track |
| C89C | 85 80 | STA \$80 | |
| C89E | 20 56 D1 | JSR \$D156 | get sector |
| C8A1 | 85 81 | STA \$81 | |
| C8A3 | A5 80 | LDA \$80 | track number |
| C8A5 | D0 06 | BNE SC8AD | not equal to zero |
| C8A7 | 20 F4 EE | JSR \$EEF4 | write BAM |
| C8AA | 4C 27 D2 | JMP \$D227 | close channel |
| C8AD | 20 5F EF | JSR \$EF5F | free block in BAM |
| C8B0 | 20 4D D4 | JSR \$D44D | read next block |
| C8B3 | 4C 94 C8 | JMP SC894 | and continue |
| ***** erase directory entry ***** | | | |
| C8B6 | A0 00 | LDY #\$00 | |
| C8B8 | 98 | TYA | |
| C8B9 | 91 94 | STA (\$94),Y | set file type to zero |
| C8BR | 20 5E DE | JSR \$DE5E | write block |
| C8BE | 4C 99 D5 | JMP \$D599 | and check |
| ***** D-command 'backup' ***** | | | |
| C8C1 | A9 31 | LDA #\$31 | |
| C8C3 | 4C C8 C1 | JMP \$C1C8 | 31, 'syntax error' |
| ***** format diskette ***** | | | |
| C8C6 | A9 4C | LDA #\$4C | JMP-command |
| C8C8 | 8D 00 06 | STA \$0600 | |
| C8CB | A9 C7 | LDA #\$C7 | |
| C8CD | 8D 01 06 | STA \$0601 | JMP \$FAC7 in \$600 to \$602 |
| C8D0 | A9 FA | LDA #\$FA | |
| C8D2 | 8D 02 06 | STA \$0602 | |
| C8D5 | A9 03 | LDA #\$03 | |
| C8D7 | 20 D3 D6 | JSR \$D6D3 | set track and sector number |
| C8DA | A5 7F | LDA \$7F | drive number |
| C8DC | 09 E0 | ORA #\$E0 | command code for formatting |
| C8DE | 85 03 | STA \$03 | transmit |
| C8E0 | A5 03 | LDA \$03 | |
| C8E2 | 30 FC | BMI SC8E0 | wait until formatting done |
| C8E4 | C9 02 | CMP #\$02 | |
| C8E6 | 90 07 | BCC SC8EF | smaller than two, then ok |
| C8E8 | A9 03 | LDA #\$03 | |
| C8EA | A2 00 | LDX #\$00 | |
| C8EC | 4C 0A E6 | JMP \$E60A | 21, 'read error' |
| C8EF | 60 | RTS | |
| ***** C-command 'copy' ***** | | | |
| C8F0 | A9 E0 | LDA #\$E0 | |
| C8F2 | 8D 4F 02 | STA \$024F | |
| C8F5 | 20 D1 F0 | JSR \$F0D1 | |
| C8F8 | 20 19 F1 | JSR \$F119 | get buffer number of BAM |
| C8FB | A9 FF | LDA #\$FF | |
| C8FD | 95 A7 | STA \$A7,X | |
| C8FF | A9 0F | LDA #\$0F | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|---------------------------------|
| C901 | 8D 56 02 | STA \$0256 | |
| C904 | 20 E5 C1 | JSR \$C1E5 | check input line |
| C907 | D0 03 | BNE \$C90C | |
| C909 | 4C C1 C8 | JMP \$C8C1 | 31, 'syntax error' |
| C90C | 20 F8 C1 | JSR \$C1F8 | check input |
| C90F | 20 20 C3 | JSR \$C320 | test drive number |
| C912 | AD 8B 02 | LDA \$028B | flag for syntax check |
| C915 | 29 55 | AND #\$55 | |
| C917 | D0 0F | BNE \$C928 | |
| C919 | AE 7A 02 | LDX \$027A | |
| C91C | BD 00 02 | LDA \$0200,X | character of the command |
| C91F | C9 2A | CMP #\$2A | '*' |
| C921 | D0 05 | BNE \$C928 | |
| C923 | A9 30 | LDA #\$30 | |
| C925 | 4C C8 C1 | JMP \$C1C8 | 30, 'syntax error' |
| C928 | AD 8B 02 | LDA \$028B | syntax flag |
| C92B | 29 D9 | AND #\$D9 | |
| C92D | D0 F4 | BNE \$C923 | 30, 'syntax error' |
| C92F | 4C 52 C9 | JMP \$C952 | |
| C932 | A9 00 | LDA #\$00 | |
| C934 | 8D 58 02 | STA \$0258 | |
| C937 | 8D 8C 02 | STA \$028C | number of drives |
| C93A | 8D 80 02 | STA \$0280 | track number in directory |
| C93D | 8D 81 02 | STA \$0281 | |
| C940 | A4 E3 | LDA \$E3 | |
| C942 | 29 01 | AND #\$01 | |
| C944 | 85 7F | STA \$7F | drive number |
| C946 | 09 01 | ORA #\$01 | |
| C948 | 8D 91 02 | STA \$0291 | |
| C94B | AD 7B 02 | LDA \$027R | |
| C94E | 8D 7A 02 | STA \$027A | |
| C951 | 60 | RTS | |
| C952 | 20 4F C4 | JSR \$C44F | search for file in directory |
| C955 | AD 78 02 | LDA \$0278 | number of filenames in command |
| C958 | C9 03 | CMP #\$03 | smaller than three? |
| C95A | 90 45 | BCC \$C9A1 | yes |
| C95C | A5 E2 | LDA \$E2 | first drive number |
| C95E | C5 E3 | CMP \$E3 | second drive number |
| C960 | D0 3F | BNE \$C9A1 | not on same drive? |
| C962 | A5 DD | LDA \$DD | directory block of the 1st file |
| C964 | C5 DE | CMP \$DE | same dir block as second file? |
| C966 | D0 39 | BNE \$C9A1 | no |
| C968 | A5 D8 | LDA \$D8 | directory sector of first file |
| C96A | C5 D9 | CMP \$D9 | same dir sector as second file? |
| C96C | D0 33 | BNE \$C9A1 | no |
| C96E | 20 CC CA | JSR \$CACC | is file present |
| C971 | A9 01 | LDA #\$01 | |
| C973 | 8D 79 02 | STA \$0279 | |
| C976 | 20 FA C9 | JSR SC9FA | |
| C979 | 20 25 D1 | JSP SD125 | get data type |
| C97C | F0 04 | BEQ SC982 | rel-file? |
| C97E | C9 02 | CMP #\$02 | prg-file |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|------------|--------------------------|
| C980 | D0 05 | BNE \$C987 | no |
| C982 | A9 64 | LDA #\$64 | |
| C984 | 20 C8 C1 | JSR \$C1C8 | 64, 'file type mismatch' |
| C987 | A9 12 | LDA #\$12 | 18 |
| C989 | 85 83 | STA \$83 | secondary address |
| C98B | AD 3C 02 | LDA \$023C | |
| C98E | 8D 3D 02 | STA \$023D | |
| C991 | A9 FF | LDA #\$FF | |
| C993 | 8D 3C 02 | STA \$023C | |
| C996 | 20 2A DA | JSR \$DA2A | prepare append |
| C999 | A2 02 | LDX #\$02 | |
| C99B | 20 B9 C9 | JSR \$C9B9 | copy file |
| C99E | 4C 94 C1 | JMP \$C194 | done |
| | | | |
| C9A1 | 20 A7 C9 | JSR SC9A7 | copy file |
| C9A4 | 4C 94 C1 | JMP \$C194 | done |
| | | | |
| C9A7 | 20 E7 CA | JSR \$CAE7 | |
| C9AA | A4 E2 | LDA \$E2 | drive no. of first file |
| C9AC | 29 01 | AND #\$01 | |
| C9AE | 85 7F | STA \$7F | drive number |
| C9B0 | 20 86 D4 | JSR \$D486 | |
| C9B3 | 20 E4 D6 | JSR \$D6E4 | |
| C9B6 | AE 77 02 | LDX \$0277 | |
| C9B9 | 8E 79 02 | STX \$0279 | |
| C9BC | 20 FA C9 | JSR \$C9FA | enter file in directory |
| C9BF | A9 11 | LDA #\$11 | 17 |
| C9C1 | 85 83 | STA \$83 | |
| C9C3 | 20 EB D0 | JSR \$D0EB | |
| C9C6 | 20 25 D1 | JSR \$D125 | get data type |
| C9C9 | D0 03 | BNE SC9CE | no rel-file? |
| C9CB | 20 53 CA | JSR \$CA53 | |
| C9CE | A9 08 | LDA #\$08 | |
| C9D0 | 85 F8 | STA \$F8 | |
| C9D2 | 4C D8 C9 | JMP \$C9D8 | |
| | | | |
| C9D5 | 20 9B CF | JSR \$CF9B | write byte in buffer |
| C9D8 | 20 35 CA | JSR \$CA35 | and get byte |
| C9DB | A9 80 | LDA #\$80 | |
| C9DD | 20 A6 DD | JSR \$DDA6 | test bit 7 |
| C9E0 | F0 F3 | BEQ \$C9D5 | not set? |
| C9E2 | 20 25 D1 | JSR \$D125 | check file type |
| C9E5 | F0 03 | BEQ \$C9EA | rel-file? |
| C9E7 | 20 9B CF | JSR \$CF9B | get data byte in buffer |
| C9EA | AE 79 02 | LDX \$0279 | |
| C9ED | E8 | INX | |
| C9EE | EC 78 02 | CPX \$0278 | |
| C9F1 | 90 C6 | BCC \$C9B9 | |
| C9F3 | A9 12 | LDA #\$12 | 18 |
| C9F5 | 85 83 | STA \$83 | |
| C9F7 | 4C 02 DB | JMP \$DB02 | close channel |
| | | | |
| C9FA | AE 79 02 | LDX \$0279 | |
| C9FD | B5 E2 | LDA \$E2,X | drive number |
| C9FF | 29 01 | AND #\$01 | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|------------|-----------------------------|
| CA01 | 85 7F | STA \$7F | save |
| CA03 | AD 85 FE | LDA \$FE85 | 18, directory track |
| CA06 | 85 80 | STA \$80 | save |
| CA08 | B5 D8 | LDA \$D8,X | directory sector |
| CA0A | 85 81 | STA \$81 | |
| CA0C | 20 75 D4 | JSR \$D475 | read block |
| CA0F | AE 79 02 | LDX \$0279 | |
| CA12 | B5 DD | LDA \$DD,X | pointer in block |
| CA14 | 20 C8 D4 | JSR \$D4C8 | set buffer pointer |
| CA17 | AE 79 02 | LDX \$0279 | |
| CA1A | B5 E7 | LDA \$E7,X | file type |
| CA1C | 29 07 | AND #\$07 | isolate |
| CA1E | 8D 4A 02 | STA \$024A | and save |
| CA21 | A9 00 | LDA #\$00 | |
| CA23 | 8D 58 02 | STA \$0258 | |
| CA26 | 20 A0 D9 | JSR \$D9A0 | get parameters for rel-file |
| CA29 | A0 01 | LDY #\$01 | |
| CA2B | 20 25 D1 | JSR \$D125 | get file type |
| CA2E | F0 01 | BEQ \$CA31 | rel-file? |
| CA30 | C8 | INY | |
| CA31 | 98 | TYA | |
| CA32 | 4C C8 D4 | JMP \$D4C8 | set buffer pointer |
| CA35 | A9 11 | LDA #\$11 | 17 |
| CA37 | 85 83 | STA \$83 | |
| CA39 | 20 9B D3 | JSR \$D39B | open channel and get byte |
| CA3C | 85 85 | STA \$85 | |
| CA3E | A6 82 | LDX \$82 | channel number |
| CA40 | B5 F2 | LDA \$F2,X | |
| CA42 | 29 08 | AND #\$08 | isolate end marker |
| CA44 | 85 F8 | STA \$F8 | |
| CA46 | D0 0A | BNE \$CA52 | not set? |
| CA48 | 20 25 D1 | JSR \$D125 | get data type |
| CA4B | F0 05 | BEQ \$CA52 | rel-file? |
| CA4D | A9 80 | LDA #\$80 | |
| CA4F | 20 97 DD | JSR \$DD97 | set bit 7 |
| CA52 | 60 | RTS | |
| CA53 | 20 D3 D1 | JSR \$D1D3 | set drive number |
| CA56 | 20 CB E1 | JSR \$E1CB | |
| CA59 | A5 D6 | LDA \$D6 | |
| CA5B | 48 | PHA | |
| CA5C | A5 D5 | LDA \$D5 | |
| CA5E | 48 | PHA | |
| CA5F | A9 12 | LDA #\$12 | 18 |
| CA61 | 85 83 | STA \$83 | |
| CA63 | 20 07 D1 | JSR \$D107 | open write channel |
| CA66 | 20 D3 D1 | JSR \$D1D3 | set drive number |
| CA69 | 20 CB E1 | JSR \$E1CB | |
| CA6C | 20 9C E2 | JSR \$E29C | |
| CA6F | A5 D6 | LDA \$D6 | |
| CA71 | 85 87 | STA \$87 | |
| CA73 | A5 D5 | LDA \$D5 | |
| CA75 | 85 86 | STA \$86 | |
| CA77 | A9 00 | LDA #\$00 | |
| CA79 | 85 88 | STA \$88 | |

Anatomy of the 1541 Disk Drive

| | | |
|------|----------|------------|
| CA7B | 85 D4 | STA \$D4 |
| CA7D | 85 D7 | STA \$D7 |
| CA7F | 68 | PLA |
| CA80 | 85 D5 | STA \$D5 |
| CA82 | 68 | PLA |
| CA83 | 85 D6 | STA \$D6 |
| CA85 | 4C 3B E3 | JMP \$E33B |

***** R-command, 'rename'
CA88 20 20 C3 JSR \$C320 get drive no. from command line
CA8B A5 E3 LDA \$E3
CA8D 29 01 AND #\$01
CA8F 85 E3 STA \$E3 2nd drive number
CA91 C5 E2 CMP \$E2 compare with 1st drive number
CA93 F0 02 BEQ \$CA97 same?
CA95 09 80 ORA #\$80
CA97 85 E2 STA \$E2
CA99 20 4F C4 JSR \$C44F search for file in directory
CA9C 20 E7 CA JSR \$CAE7 does name exist?
CA9F A5 E3 LDA \$E3
CAA1 29 01 AND #\$01
CAA3 85 7F STA \$7F drive number
CAA5 A5 D9 LDA \$D9
CAA7 85 81 STA \$81 sector number
CAA9 20 57 DE JSR \$DE57 read block from directory
CAAC 20 99 D5 JSR \$D599 ok?
CAAF A5 DE LDA \$DE pointer to directory entry
CAB1 18 CLC
CAB2 69 03 ADC #\$03 pointer plus 3 to file name
CAB4 20 C8 D4 JSR \$D4C8 set buffer pointer
CAB7 20 93 DF JSR \$DE93 get buffer number
CABA A8 TAY
CARB AE 7A 02 LDX \$027A
CABE A9 10 LDA #\$10 16 characters
CAC0 20 6E C6 JSR \$C66E write name in buffer
CAC3 20 5E DE JSR \$DE5E write block to directory
CAC6 20 99 D5 JSR \$D599 ok?
CAC9 4C 94 C1 JMP \$C194 done, prepare disk status

***** check if file present
CACC A5 E8 LDA \$E8 file type
CACE 29 07 AND #\$07
CAD0 8D 4A 02 STA \$024A save
CAD3 AE 78 02 LDX \$0278
CAD6 CA DEX
CAD7 EC 77 02 CPX \$0277
CADA 90 0A BCC \$CAE6
CADC BD 80 02 LDA \$0280,X track number
CADF D0 F5 BNE \$CAD6 not zero?
CAE1 A9 62 LDA #\$62
CAE3 4C C8 C1 JMP \$C1C8 62, 'file not found'
CAE6 60 RTS

CAE7 20 CC CA JSR \$CACC does file exist with old name?
CAEA 8D 80 02 LDA \$0280,X track number of new file

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|----------------------------------|
| CAED | F0 05 | BEQ SCAF4 | file erased? |
| CAEF | A9 63 | LDA #\$63 | |
| CAF1 | 4C C8 C1 | JMP SC1C8 | 63, 'file exists' |
| CAF4 | CA | DEX | |
| CAF5 | 10 F3 | BPL SCAEA | |
| CAF7 | 60 | RTS | |
| ***** | | | |
| CAF8 | AD 01 02 | LDA \$0201 | M-command, 'memory' |
| CAF9 | C9 2D | CMP #\$2D | 2nd character from buffer |
| CAF9 | D0 4C | BNE SCB4B | '-' |
| CAFF | AD 03 02 | LDA \$0203 | |
| CB02 | 85 6F | STA \$6F | address in \$6F/\$70 |
| CB04 | AD 04 02 | LDA \$0204 | |
| CB07 | 85 70 | STA \$70 | |
| CB09 | A0 00 | LDY #\$00 | |
| CB0B | AD 02 02 | LDA \$0202 | 3rd character from buffer |
| CB0E | C9 52 | CMP #\$52 | 'R' |
| CB10 | F0 0E | BEO SCB20 | to memory read |
| CB12 | 20 58 F2 | JSR \$F258 | (RTS) |
| CB15 | C9 57 | CMP #\$57 | 'W' |
| CB17 | F0 37 | BEO SCB50 | to memory write |
| CB19 | C9 45 | CMP #\$45 | 'E' |
| CB1B | D0 2E | BNE SCB4B | |
| CB1D | 6C 6F 00 | JMP (\$006F) | memory-execute |
| ***** | | | |
| CB20 | B1 6F | LDA (\$6F),Y | M-R, 'Memory-Read' |
| CB22 | 85 85 | STA \$85 | read byte |
| CB24 | AD 74 02 | LDA \$0274 | |
| CB27 | C9 06 | CMP #\$06 | length of command line |
| CB29 | 90 1A | BCC SCB45 | less than 6? |
| CB2B | AE 05 02 | LDX \$0205 | yes |
| CB2E | CA | DEX | number |
| CB2F | F0 14 | BEO SCR45 | only one byte? |
| CB31 | 8A | TXA | number of bytes |
| CB32 | 18 | CLC | |
| CB33 | 65 6F | ADC \$6F | plus start address |
| CB35 | E6 6F | INC \$6F | |
| CB37 | 8D 49 02 | STA \$0249 | end pointer |
| CB3A | A5 6F | LDA \$6F | |
| CB3C | 85 A5 | STA \$A5 | buffer pointer for error message |
| CB3E | A5 70 | LDA \$70 | set to start address for 'M-R' |
| CB40 | 85 A6 | STA \$A6 | |
| CB42 | 4C 43 D4 | JMP \$D443 | byte out |
| CB45 | 20 EB D0 | JSR \$D0EB | open read channel |
| CB48 | 4C 3A D4 | JMP \$D43A | byte out |
| CB4B | A9 31 | LDA #\$31 | |
| CB4D | 4C C8 C1 | JMP SC1C8 | 31, 'syntax error' |
| ***** | | | |
| CB50 | B9 06 02 | LDA \$0206,Y | M-W, 'memory-write' |
| CB53 | 91 6F | STA (\$6F),Y | read character |
| | | | and save |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|---------------------------------|
| CB55 | C8 | INY | |
| CB56 | CC 05 02 | CPY \$0205 | number of characters |
| CB59 | 90 F5 | BCC \$CB50 | all characters? |
| CB5B | 60 | RTS | |
| ***** | | | |
| CB5C | AC 01 02 | LDY \$0201 | U-command, 'user' |
| CB5F | C0 30 | CPY #\$30 | second char |
| CB61 | D0 09 | BNE \$CB6C | '0' |
| CB63 | A9 EA | LDA #\$EA | no |
| CB65 | 85 6B | STA \$6B | ptr to table of user-addresses |
| CB67 | A9 FF | LDA #\$FF | \$FFEAA |
| CB69 | 85 6C | STA \$6C | |
| CB6B | 60 | RTS | |
| CB6C | 20 72 CB | JSR SCB72 | |
| CB6F | 4C 94 C1 | JMP SC194 | done, prepare error message |
| CB72 | 88 | DEY | |
| CB73 | 98 | TYA | |
| CB74 | 29 0F | AND #\$0F | number |
| CB76 | 0A | ASL A | times 2 |
| CB77 | A8 | TAY | |
| CB78 | B1 6B | LDA (\$6B),Y | as pointer in table |
| CB7A | 85 75 | STA \$75 | |
| C87C | C8 | INY | address at \$75/\$76 |
| CB7D | B1 6B | LDA (\$6B),Y | |
| CB7F | 85 76 | STA \$76 | |
| CB81 | 6C 75 00 | JMP (\$0075) | execute function |
| ***** | | | |
| CB84 | AD 8E 02 | LDA \$028E | open direct access channel, '#' |
| CB87 | 85 7F | STA \$7F | last drive number |
| CB89 | A5 83 | LDA \$83 | drive number |
| CB8B | 48 | PHA | channel number |
| CB8C | 20 3D C6 | JSR SC63D | check drive and initialize |
| CB8F | 68 | PLA | |
| CB90 | 85 83 | STA \$83 | |
| CB92 | AE 74 02 | LDX \$0274 | length of filename |
| CB95 | CA | DEX | |
| CB96 | D0 0D | BNE SCBA5 | greater than one? |
| CB98 | A9 01 | LDA #\$01 | |
| CB9A | 20 E2 D1 | JSR SD1E2 | layout buffer and channel |
| CB9D | 4C F1 CB | JMP SCBF1 | set flags, done |
| CBA0 | A9 70 | LDA #\$70 | |
| CBA2 | 4C C8 C1 | JMP SC1C8 | 70, 'no channel' |
| CBA5 | A0 01 | LDY #\$01 | |
| CBA7 | 20 7C CC | JSR SCC7C | get buffer number |
| CBAA | AE 85 02 | LDX \$0285 | buffer number |
| CBAD | E0 05 | CPX #\$05 | bigger than 5? |
| CBAF | B0 EF | BCS SCBA0 | 70, 'no channel' |
| CBB1 | A9 00 | LDA #\$00 | |
| CBB3 | 85 6F | STA \$6F | |
| CBBS | 85 70 | STA \$70 | |

| | | | |
|------|----------|--------------|--------------------------|
| CBB7 | 38 | SEC | |
| CBB8 | 26 6F | ROL \$6F | |
| CBBA | 26 70 | ROL \$70 | |
| CBBC | CA | DEX | |
| CBBB | 10 F9 | BPL SCBB8 | |
| CBBF | A5 6F | LDA \$6F | |
| CBC1 | 2D 4F 02 | AND \$024F | |
| CBC4 | D0 DA | BNE \$CBA0 | |
| CBC6 | A5 70 | LDA \$70 | |
| CBC8 | 2D 50 02 | AND \$0250 | |
| CBCB | D0 D3 | BNE \$CBA0 | |
| CBCD | A5 6F | LDA \$6F | |
| CBCF | 0D 4F 02 | ORA \$024F | |
| CBD2 | 8D 4F 02 | STA \$024F | |
| CBD5 | A5 70 | LDA \$70 | |
| CBD7 | 0D 50 02 | ORA \$0250 | |
| CBDA | 8D 50 02 | STA \$0250 | |
| CBDD | A9 00 | LDA #\$00 | |
| CBDF | 20 E2 D1 | JSR \$D1E2 | search channel |
| CBE2 | A6 82 | LDX \$82 | channel number |
| CBE4 | AD 85 02 | LDA \$0285 | buffer number |
| CBE7 | 95 A7 | STA \$A7,X | |
| CBE9 | AA | TAX | |
| CBEA | A5 7F | LDA \$7F | drive number |
| CBEC | 95 00 | STA \$00,X | |
| CBEE | 9D 5B 02 | STA \$025B,X | |
| CBF1 | A6 83 | LDX \$83 | secondary address |
| CBF3 | BD 2B 02 | LDA \$022B,X | |
| CBF6 | 09 40 | ORA #\$40 | set READ and WRITE flags |
| CBF8 | 9D 2B 02 | STA \$022B,X | |
| CBFB | A4 82 | LDY \$82 | channel number |
| CBFD | A9 FF | LDA #\$FF | |
| CBFF | 99 44 02 | STA \$0244,Y | end pointer |
| CC02 | A9 89 | LDA #\$89 | |
| CC04 | 99 F2 00 | STA \$00F2,Y | set READ and WRITE flags |
| CC07 | B9 A7 00 | LDA \$00A7,Y | buffer number |
| CC0A | 99 3E 02 | STA \$023E,Y | |
| CC0D | 0A | ASL A | times 2 |
| CC0E | AA | TAX | |
| CC0F | A9 01 | LDA #\$01 | |
| CC11 | 95 99 | STA \$99,X | buffer pointer to one |
| CC13 | A9 0E | LDA #\$0E | |
| CC15 | 99 EC 00 | STA \$00EC,Y | flag for direct access |
| CC18 | 4C 94 C1 | JMP \$C194 | done |

| | | | |
|-------|----------|------------|-----------------------|
| ***** | ***** | ***** | B-command, 'Block' |
| CC1B | A0 00 | LDY #\$00 | |
| CC1D | A0 00 | LDX #\$00 | |
| CC1F | A9 2D | LDA #\$2D | '-' |
| CC21 | 20 68 C2 | JSR \$C268 | search for minus sign |
| CC24 | D0 0A | BNE \$CC30 | found? |
| CC26 | A9 31 | LDA #\$31 | |
| CC28 | 4C C8 C1 | JMP \$C1C8 | 31, 'syntax error' |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|-------------------|--------------|---|
| CC2B | A9 30 | LDA #\$30 | |
| CC2D | 4C C8 C1 | JMP SCC1C8 | 30, 'syntax error' |
| CC30 | 8A | TXA | |
| CC31 | D0 F8 | BNE SCC2B | comma, then error |
| CC33 | A2 05 | LDX #\$05 | |
| CC35 | B9 00 02 | LDA \$0200,Y | char from buffer |
| CC38 | DD 5D CC | CMP SCC5D,X | compare with 'AFRWEP' |
| CC3B | F0 05 | BEQ SCC42 | found? |
| CC3D | CA | DEX | |
| CC3E | 10 F8 | BPL SCC38 | compare with all characters |
| CC40 | 30 E4 | BMI SCC26 | not found, error |
| CC42 | 8A | TXA | |
| CC43 | 09 80 | ORA #\$80 | command number, set bit 7 |
| CC45 | 8D 2A 02 | STA \$022A | |
| CC48 | 20 6F CC | JSR SCC6F | get parameters |
| CC4B | AD 2A 02 | LDA \$022A | |
| CC4E | 0A | ASL A | number times 2 |
| CC4F | AA | TAX | as index |
| CC50 | BD 64 CC | LDA SCC64,X | address of command hi |
| CC53 | 85 70 | STA \$70 | |
| CC55 | BD 63 CC | LDA SCC63,X | address lo |
| CC58 | 85 6F | STA \$6F | |
| CC5A | 6C 6F 00 | JMP (\$006F) | jump to command |
| ***** | | | |
| CC5D | 41 46 52 57 45 50 | | names of the various block cmds 'AFRWEP' |
| ***** | | | |
| CC63 | 03 CD | | addresses of block commands |
| CC65 | F5 CC | | \$CD03, B-A |
| CC67 | 56 CD | | \$CCF5, B-F |
| CC69 | 73 CD | | \$CD56, B-R |
| CC6B | A3 CD | | \$CD73, B-W |
| CC6D | BD CD | | \$SCDA3, B-E |
| | | | \$CDBD, B-P |
| ***** | | | |
| CC6F | A0 00 | LDY #\$00 | get parameters for block commands |
| CC71 | A2 00 | LDX #\$00 | |
| CC73 | A9 3A | LDA #\$3A | ':' |
| CC75 | 20 68 C2 | JSR SC268 | test line to colon |
| CC78 | D0 02 | BNE SCC7C | found? |
| CC7A | A0 03 | LDY #\$03 | no, begin at 4th character |
| CC7C | B9 00 02 | LDA \$0200,Y | search for separating char |
| CC7F | C9 20 | CMP #\$20 | ' ' blank |
| CC81 | F0 08 | BEQ SCC8B | |
| CC83 | C9 1D | CMP #\$1D | cursor right |
| CC85 | F0 04 | BEQ SCC8B | |
| CC87 | C9 2C | CMP #\$2C | ',' comma |
| CC89 | D0 07 | BNE SCC92 | |
| CC8B | C8 | INY | |
| CC8C | CC 74 02 | CPY \$0274 | line end? |
| CC8F | 90 EB | BCC SCC7C | |
| CC91 | 60 | RTS | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|---|
| CC92 | 20 A1 CC | JSR \$CCA1 | preserve next parameter |
| CC95 | EE 77 02 | INC \$0277 | increment parameter counter |
| CC98 | AC 79 02 | LDY \$0279 | |
| CC9B | E0 04 | CPX #\$04 | compare with maximum number |
| CC9D | 90 EC | BCC \$CC8B | |
| CC9F | B0 8A | BCS \$CC2B | 30, 'syntax error' |
| CCA1 | A9 00 | LDA #\$00 | |
| CCA3 | 85 6F | STA \$6F | |
| CCA5 | 85 70 | STA \$70 | erase storage area for decimal #s |
| CCA7 | 85 72 | STA \$72 | |
| CCA9 | A2 FF | LDX #\$FF | |
| CCAB | B9 00 02 | LDA \$0200,Y | get characters from input buffer |
| CCAE | C9 40 | CMP #\$40 | |
| CCB0 | B0 18 | BCS \$CCCA | no digits? |
| CCB2 | C9 30 | CMP #\$30 | '0' |
| CCB4 | 90 14 | BCC \$CCCA | no digits? |
| CCB6 | 29 0F | AND #\$0F | convert ASCII digits to hex |
| CCB8 | 48 | PHA | and save |
| CCB9 | A5 70 | LDA \$70 | |
| CCBB | 85 71 | STA \$71 | |
| CCBD | A4 6F | LDA \$6F | |
| CCBF | 85 70 | STA \$70 | |
| CCC1 | 68 | PLA | |
| CCC2 | 85 6F | STA \$6F | note read number |
| CCC4 | C8 | INY | increment pointer in input buffer |
| CCC5 | CC 74 02 | CPY \$0274 | line end reached |
| CCC7 | 90 E1 | BCC \$CCAB | no |
| CCCA | 8C 79 02 | STY \$0279 | save pointer |
| CCCD | 18 | CLC | |
| CCCE | A9 00 | LDA #\$00 | |
| CCD0 | E8 | INX | |
| CCD1 | E0 03 | CPX #\$03 | |
| CCD3 | B0 0F | BCS \$CC4E | convert hex digits to one byte |
| CCD5 | B4 6F | LDY \$6F,X | |
| CCD7 | 88 | DEY | |
| CCD8 | 30 F6 | BMI \$CCD0 | |
| CCDA | 7D F2 CC | ADC \$CCF2,X | add decimal value |
| CCDD | 90 F8 | BCC \$CCD7 | |
| CCDF | 18 | CLC | |
| CCE0 | E6 72 | INC \$72 | |
| CCE2 | D0 F3 | BNE \$CCD7 | |
| CCE4 | 48 | PHA | |
| CCE5 | AE 77 02 | LDX \$0277 | counter for parameters |
| CCE8 | A5 72 | LDA \$72 | |
| CCEA | 9D 80 02 | STA \$0280,X | hi-byte |
| CCED | 68 | PLA | |
| CCEE | 9D 85 02 | STA \$0285,X | lo-byte |
| CCF1 | 60 | RTS | |
| ***** | | | |
| CCF2 | 01 0A 64 | | decimal values 1, 10, 100 |
| ***** | | | |
| CCF5 | 20 F5 CD | JSR \$CDF5 | B-F command, 'Block-Free' |
| CCF8 | 20 5F EF | JSR \$EF5F | get track, sector and drive no. free block |

Anatomy of the 1541 Disk Drive

CCFB 4C 94 C1 JMP SC194 done, prepare error message

CCFE A9 01 LDA #\$01
CD00 8D F9 02 STA \$02F9

CD03 20 F5 CD JSR \$CDF5 B-A command, 'Block-Allocate'
CD06 A5 81 LDA \$81 get track, sector and drive no.
CD08 48 PHA sector
CD09 20 FA F1 JSR SF1FA save
CD0C F0 0B BEQ \$CD19 find block in BAM
CD0E 68 PLA block allocated?
CD0F C5 81 CMP \$81 desired sector
CD11 D0 19 BNE \$CD2C = next free sector?
CD13 20 90 EF JSR \$EF90 no
CD16 4C 94 C1 JMP SC194 allocate block in BAM
done

CD19 68 PLA

CD1A A9 00 LDA #\$00

CD1C 85 81 STA \$81

CD1E E6 80 INC \$80

CD20 A5 80 LDA \$80

CD22 CD D7 FE CMP \$FED7

CD25 B0 0A BCS \$CD31

CD27 20 FA F1 JSR SF1FA

CD2A F0 EE BEQ \$CD1A

CD2C A9 65 LDA #\$65

CD2E 20 45 E6 JSR SE645

CD31 A9 65 LDA #\$65

CD33 20 C8 C1 JSR \$C1C8

sector

save

find block in BAM

block allocated?

desired sector

= next free sector?

no

allocate block in BAM

done

sector 0

next track

track number

36, last track number + 1

>=, then 'no block'

find free block in next track

not found, check next track

65, 'no block' next free block

65,'no block' no more free blocks

CD36 20 F2 CD JSR \$CDF2 open channel, set parameters
CD39 4C 60 D4 JMP \$D460 read block from disk

CD3C 20 2F D1 JSR SD12F

CD3F A1 99 LDA (\$99,X)

CD41 60 RTS

get byte from buffer

set pointer to buffer

get byte

read block from disk

open channel, read block

set buffer pointer to zero

get a byte from the buffer

set read and write flag

CD42 20 36 CD JSR \$CD36

CD45 A9 00 LDA #\$00

CD47 20 C8 D4 JSR \$D4C8

CD4A 20 3C CD JSR \$CD3C

CD4D 99 44 02 STA \$0244,Y

CD50 A9 89 LDA \$89

CD52 99 F2 00 STA \$00F2,Y

CD55 60 RTS

B-R command, 'Block-Read'

read block from disk

prepare byte from buffer

prepare error message

Anatomy of the 1541 Disk Drive

```
*****
CD5F  20 6F CC  JSR SCC6F   U1 command, sub. for 'Block-Read'
CD62  20 42 CD  JSR SCD42  get parameters of the command
CD65  B9 44 02  LDA $0244,Y read block from disk
CD68  99 3E 02  STA $023E,Y end pointer
CD6B  A9 FF    LDA #$FF   save as data byte
CD6D  99 44 02  STA $0244,Y end pointer to $FF
CD70  4C 94 C1  JMP SC194  done, prepare error message

*****
CD73  20 F2 CD  JSR SCDF2  B-W command, 'Block-Write'
CD76  20 E8 D4  JSR $D4E8  open channel
CD79  A8        TAY      set buffer pointer
CD7A  88        DEY
CD7B  C9 02    CMP #$02  buffer pointer lo less than 2?
CD7D  B0 02    BCS $CD81  no
CD7F  A0 01    LDY #$01
CD81  A9 00    LDA #$00
CD83  20 C8 D4  JSR $D4C8  buffer pointer to zero
CD86  98        TYA
CD87  20 F1 CF  JSR SCFF1  write byte in buffer
CD8A  8A        TXA
CD8B  48        PHA
CD8C  20 64 D4  JSR $D464  write block to disk
CD8F  68        PLA
CD90  AA        TAX
CD91  20 EE D3  JSR $D3EE  get byte from buffer
CD94  4C 94 C1  JMP SC194  done, error message

*****
CD97  20 6F CC  JSR SCC6F   U2, sub for 'Block-Write'
CD9A  20 F2 CD  JSR SCDF2  get command parameters
CD9D  20 64 D4  JSR $D464  open channel
CDA0  4C 94 C1  JMP SC194  and write block to disk
                                         done

*****
CDA3  20 58 F2  JSR SF258  'B-E' command, 'Block-Execute'
CDA6  20 36 CD  JSR SCD36  (RTS)
CDA9  A9 00    LDA #$00  open channel and read block
CDAB  85 6F    STA $6F  address low
CDAD  A6 F9    LDX SF9   buffer number
CDAF  BD E0 FE  LDA $FE00,X buffer address high
CDB2  85 70    STA $70  execute routine
CDB4  20 BA CD  JSR SCDBA  done
CDB7  4C 94 C1  JMP SC194  jump to routine

*****
CDBD  20 D2 CD  JSR $CDD2  'B-P' command, 'Block-Pointer'
CDC0  A5 F9    LDA SF9   open channel, get buffer number
CDC2  0A        ASL A   buffer number
CDC3  AA        TAX    * 2
CDC4  AD 86 02  LDA $0286  as index
CDC7  95 99    STA $99,X  pointer value
                                         save as buffer pointer
```

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|------------------------------------|
| CDC9 | 20 2F D1 | JSR \$D12F | prepare a byte in buffer |
| CDCC | 20 EE D3 | JSR \$D3EE | for output |
| CDCF | 4C 94 C1 | JMP SC194 | done |
| ***** | | | |
| CDD2 | A6 D3 | LDX \$D3 | open channel |
| CDD4 | E6 D3 | INC \$D3 | |
| CDD6 | BD 85 02 | LDA \$0285,X | buffer number |
| CDD9 | A8 | TAY | |
| CDDA | 88 | DEY | |
| CDDB | 88 | DEY | |
| CDDC | C0 0C | CPY #\$0C | buffer number smaller than 14? |
| CDDE | 90 05 | BCC \$CDE5 | yes |
| CDE0 | A9 70 | LDA #\$70 | |
| CDE2 | 4C C8 C1 | JMP \$C1C8 | 70, 'no channel' |
| ***** | | | |
| CDE5 | 85 83 | STA \$83 | secondary address |
| CDE7 | 20 EB D0 | JSR \$D0EB | open channel |
| CDEA | B0 F4 | BCS SCDE0 | already allocated, 70 'no channel' |
| CDEC | 20 93 DF | JSR \$DF93 | buffer number |
| CDEF | 85 F9 | STA \$F9 | set |
| CDF1 | 60 | RTS | |
| ***** | | | |
| CDF2 | 20 D2 CD | JSR \$CDD2 | check buffer no. and open channel |
| CDF5 | A6 D3 | LDX SD3 | channel number |
| CDF7 | BD 85 02 | LDA \$0285,X | buffer address |
| CDFA | 29 01 | AND #\$01 | |
| CDFC | 85 7F | STA \$7F | drive number |
| CDFE | BD 87 02 | LDA \$0287,X | |
| CE01 | 85 81 | STA \$81 | sector |
| CE03 | BD 86 02 | LDA \$0286,X | |
| CE06 | 85 80 | STA \$80 | track |
| CE08 | 20 5F D5 | JSR \$D55F | track and sector ok? |
| CE0B | 4C 00 C1 | JMP SC100 | turn LED on |
| ***** | | | |
| CE0E | 20 2C CE | JSR \$CE2C | set pointer for rel-file |
| CE11 | 20 6E CE | JSR \$CE6E | record number * record length |
| CE14 | A5 90 | LDA \$90 | divide by 254 |
| CE16 | 85 D7 | STA \$D7 | remainder = pointer in data block |
| CE18 | 20 71 CE | JSR \$CE71 | data pointer |
| CE1B | E6 D7 | INC \$D7 | divide by 120 = side-sector # |
| CE1D | E6 D7 | INC \$D7 | |
| CE1F | A5 8B | LDA \$8B | data ptr + 2 (track/sector ptr!) |
| CE21 | 85 D5 | STA \$D5 | result of division |
| CE23 | A5 90 | LDA \$90 | equals side-sector number |
| CE25 | 0A | ASL A | remainder |
| CE26 | 18 | CLC | times 2 |
| CE27 | 69 10 | ADC #\$10 | |
| CE29 | 85 D6 | STA \$D6 | plus 16 |
| CE2B | 60 | RTS | =ptr in side-sector to data block |
| ***** | | | |
| CE2C | 20 D9 CE | JSR SCED9 | erase work storage |

Anatomy of the 1541 Disk Drive

| | | | |
|---------------------------------------|----------|------------|-------------------------------|
| CE2F | 85 92 | STA \$92 | |
| CE31 | A6 82 | LDX \$82 | channel number |
| CE33 | B5 B5 | LDA \$B5,X | record number lo |
| CE35 | 85 90 | STA \$90 | |
| CE37 | B5 BB | LDA \$BB,X | record number hi |
| CE39 | 85 91 | STA \$91 | |
| CE3B | D0 04 | BNE \$CE41 | |
| CE3D | A5 90 | LDA \$90 | |
| CE3F | F0 0B | BEO SCE4C | record number not zero? |
| CE41 | A5 90 | LDA \$90 | |
| CE43 | 38 | SEC | |
| CE44 | E9 01 | SBC #\$01 | then subtract one |
| CE46 | 85 90 | STA \$90 | |
| CE48 | B0 02 | BCS SCE4C | |
| CE4A | C6 91 | DEC \$91 | |
| CE4C | B5 C7 | LDA \$C7,X | record length |
| CE4E | 85 6F | STA \$6F | |
| CE50 | 46 6F | LSR \$6F | |
| CE52 | 90 03 | BCC SCE57 | |
| CE54 | 20 ED CE | JSR \$CEED | record number * record length |
| CE57 | 20 E5 CE | JSR \$CEE5 | shift register left |
| CE5A | A5 6F | LDA \$6F | |
| CE5C | D0 F2 | BNE \$CE50 | |
| CE5E | A5 D4 | LDA \$D4 | |
| CE60 | 18 | CLC | |
| CE61 | 65 8B | ASC \$8B | |
| CE63 | 85 8B | STA \$8B | |
| CE65 | 90 06 | BCC \$CE6D | result in \$8B/\$8C/\$8D |
| CE67 | E6 8C | INC \$8C | |
| CE69 | D0 02 | BNE \$DE6D | |
| CE6B | E6 8D | INC \$8D | |
| CE6D | 60 | RTS | |
| *****divide by 254, calculate block # | | | |
| CE6E | A9 FE | LDA #\$FE | 254 |
| CE70 | 2C | .BYTE \$2C | |
| *****divide by 120, calculate | | | |
| CE71 | A9 78 | LDA #\$78 | side-sector number |
| CE73 | 85 6F | STA \$6F | divisor |
| CE75 | A2 03 | LDX #\$03 | |
| CE77 | B5 8F | LDA \$8F,X | |
| CE79 | 48 | PHA | |
| CE7A | B5 8A | LDA \$8A,X | |
| CE7C | 95 8F | STA \$8F,X | |
| CE7E | 68 | PLA | |
| CE7F | 95 8A | STA \$8A,X | |
| CE81 | CA | DEX | |
| CE82 | D0 F3 | BNE SCE77 | |
| CE84 | 20 D9 CE | JSR \$CED9 | erase work storage |
| CE87 | A2 00 | LDX #\$00 | |
| CE89 | B5 90 | LDA \$90,X | |
| CE8B | 95 8F | STA \$8F,X | |
| CE8D | E8 | INX | |
| CE8E | E0 04 | CPX #\$04 | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|------------|------------------------------|
| CE90 | 90 F7 | BCC SCE89 | |
| CE92 | A9 00 | LDA #\$00 | |
| CE94 | 85 92 | STA \$92 | |
| CE96 | 24 6F | BIT \$6F | |
| CE98 | 30 09 | BMI SCEA3 | |
| CE9A | 06 8F | ASL \$8F | |
| CE9C | 08 | PHP | |
| CE9D | 46 8F | LSR \$8F | |
| CE9F | 28 | PLP | |
| CEA0 | 20 E6 CE | JSR \$CEE6 | shift register 1 left |
| CEA3 | 20 ED CE | JSR \$CEDD | add register 0 to register 1 |
| CEA6 | 20 E5 CE | JSR \$CEE5 | shift register 1 left |
| CEA9 | 24 6F | BIT \$6F | |
| CEAB | 30 03 | BMI SCEB0 | |
| CEAD | 20 E2 CE | JSR \$CEE2 | left-shift register 1 twice |
| CEB0 | A5 8F | LDA \$8F | |
| CEB2 | 18 | CLC | |
| CEB3 | 65 90 | ADC \$90 | |
| CEB5 | 85 90 | STA \$90 | |
| CEB7 | 90 06 | BCC \$CEBF | |
| CEB9 | E6 91 | INC \$91 | |
| CEBB | D0 02 | BNE \$CEBF | |
| CEBD | E6 92 | INC \$92 | |
| CEBF | A5 92 | LDA \$92 | |
| CEC1 | 05 91 | ORA \$91 | |
| CEC3 | D0 C2 | BNE \$CE87 | |
| CEC5 | A5 90 | LDA \$90 | |
| CEC7 | 38 | SEC | |
| CEC8 | E5 6F | SBC \$6F | quotient in \$8B/\$8C/\$8D |
| CECA | 90 0C | BCC \$CED8 | |
| CECC | E6 8B | INC \$8B | |
| CECE | D0 06 | BNE \$CED6 | |
| CED0 | E6 8C | INC \$8C | |
| CED2 | D0 02 | BNE \$CED6 | |
| CED4 | 85 90 | STA \$90 | remainder in \$90 |
| CED8 | 60 | RTS | |

***** erase work storage *****

| | | |
|------|-------|-----------|
| CED9 | A9 00 | LDA #\$00 |
| CEDB | 85 8B | STA \$8B |
| CEDD | 85 8C | STA \$8C |
| CEDF | 85 8D | STA \$8D |
| CEE1 | 60 | RTS |

***** left-shift 3-byte register twice *****

| | | |
|------|----------|------------|
| CEE2 | 20 E5 CE | JSR \$CEE5 |
|------|----------|------------|

***** left-shift 3-byte register once *****

| | | |
|------|-------|----------|
| CEE5 | 18 | CLC |
| CEE6 | 29 90 | ROL \$90 |
| CEE8 | 26 91 | ROL \$91 |
| CEEA | 26 92 | ROL \$92 |
| CEEC | 60 | RTS |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|--------------------------------|
| CEED | 18 | CLC | |
| CEEE | A2 FD | LDX #\$FD | |
| CEF0 | B5 8E | LDA \$8E,X | register \$90/\$91/\$92 |
| CEF2 | 75 93 | ADC \$93,X | add to register \$8B/\$8C/\$8D |
| CEF4 | 95 8E | STA \$8E,X | |
| CEF6 | E8 | INX | |
| CEF7 | D0 F7 | BNE SCEFO | |
| CEF9 | 60 | RTS | |
| CEFA | A2 00 | LDX #\$00 | |
| CEFC | 8A | TXA | |
| CEFD | 95 FA | STA \$FA,X | |
| CEFF | E8 | INX | |
| CF00 | E0 04 | CPX #\$04 | |
| CF02 | D0 F8 | BNE SCEFC | |
| CF04 | A9 06 | LDA #\$06 | |
| CF06 | 95 FA | STA \$FA,X | |
| CF08 | 60 | RTS | |
| CF09 | A0 04 | LDY #\$04 | |
| CF0B | A6 82 | LDX \$82 | channel number |
| CF0D | B9 FA 00 | LDA \$00FA,Y | . |
| CF10 | 96 FA | STX \$FA,Y | |
| CF12 | C5 82 | CMP \$82 | channel number |
| CF14 | F0 07 | BEO \$CF1D | |
| CF16 | 88 | DEY | |
| CF17 | 30 E1 | BMI SCEFA | |
| CF19 | AA | TAX | |
| CF1A | 4C 0D CF | JMP \$CF0D | |
| CF1D | 60 | RTS | |
| CF1E | 20 09 CF | JSR \$CF09 | |
| CF21 | 20 B7 DF | JSR \$DFB7 | |
| CF24 | D0 46 | BNE \$CF6C | |
| CF26 | 20 D3 D1 | JSR \$D1D3 | set drive number |
| CF29 | 20 8E D2 | JSR \$D28E | |
| CF2C | 30 48 | BMI \$CF76 | |
| CF2E | 20 C2 DF | JSR \$DFC2 | |
| CF31 | A5 80 | LDA \$80 | track |
| CF33 | 48 | PHA | |
| CF34 | A5 81 | LDA \$81 | sector |
| CF36 | 48 | PHA | |
| CF37 | A9 01 | LDA #\$01 | |
| CF39 | 20 F6 D4 | JSR \$D4F6 | get byte 1 from buffer |
| CF3C | 85 81 | STA \$81 | sector |
| CF3E | A9 00 | LDA #\$00 | |
| CF40 | 20 F6 D4 | JSR \$D4F6 | get byte 0 from buffer |
| CF43 | 85 80 | STA \$80 | track |
| CF45 | F0 1F | BEO \$CF66 | |
| CF47 | 20 25 D1 | JSR \$D125 | check file type |
| CF4A | F0 0B | BEO \$CF57 | rel-file? |
| CF4C | 20 AB DD | JSR \$DDAR | |
| CF4F | D0 06 | BNE \$CF57 | |
| CF51 | 20 8C CF | JSR \$CF8C | |
| CF54 | 4C 5D CF | JMP \$CF5D | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|------------|---------------------------|
| CF57 | 20 8C CF | JSR \$CF8C | |
| CF5A | 20 57 DE | JSR \$DE57 | |
| CF5D | 68 | PLA | |
| CF5E | 85 81 | STA \$81 | get sector |
| CF60 | 68 | PLA | |
| CF61 | 85 80 | STA \$80 | and track number |
| CF63 | 4C 6F CF | JMP \$CF6F | |
| CF66 | 68 | PLA | |
| CF67 | 85 81 | STA \$81 | get back sector |
| CF69 | 68 | PLA | |
| CF6A | 85 80 | STA \$80 | and track number |
| CF6C | 20 8C CF | JSR \$CF8C | |
| CF6F | 20 93 DF | JSR \$DF93 | |
| CF72 | AA | TAX | |
| CF73 | 4C 99 D5 | JMP \$D599 | and verify |
| CF76 | A9 70 | LDA #\$70 | |
| CF78 | 4C C8 C1 | JMP \$C1C8 | 70, 'no channel' |
| CF7B | 20 09 CF | JSR \$CF09 | |
| CF7E | 20 B7 DF | JSR \$DFB7 | |
| CF81 | D0 08 | BNE \$CF8B | |
| CF83 | 20 8E D2 | JSR \$D28E | |
| CF86 | 30 EE | BMI \$CF76 | |
| CF88 | 20 C2 DF | JSR \$DFC2 | |
| CF8B | 60 | RTS | |
| ***** | | | |
| | | | change buffer |
| CF8C | A6 82 | LDX \$82 | channel number |
| CF8E | B5 A7 | LDA \$A7,X | |
| CF90 | 49 80 | EOR #\$80 | |
| CF92 | 95 A7 | STA \$A7,X | |
| CF94 | B5 AE | LDA \$AE,X | rotate bit 7 in table |
| CF96 | 49 80 | EOR #\$80 | |
| CF98 | 95 AE | STA \$AE,X | |
| CF9A | 60 | RTS | |
| ***** | | | |
| | | | write data byte in buffer |
| CF9B | A2 12 | LDX #\$12 | channel 18 |
| CF9D | 86 83 | STX \$83 | |
| CF9F | 20 07 D1 | JSR \$D107 | open write channel |
| CFA2 | 20 00 C1 | JSR \$C100 | turn LED on |
| CFA5 | 20 25 D1 | JSR \$D125 | check file type |
| CFA8 | 90 05 | RCC \$CFAF | no rel-file |
| CFAA | A9 20 | LDA #\$20 | |
| CFAC | 20 9D DD | JSR \$DD9D | change buffer |
| CFAF | A5 83 | LDA \$83 | secondary address |
| CFB1 | C9 0F | CMP #\$0F | 15? |
| CFB3 | F0 23 | BEO \$CFD8 | yes |
| CFB5 | D0 08 | BNE \$CFBF | no |
| CFB7 | A5 84 | LDA \$84 | secondary address |
| CFB9 | 29 8F | AND #\$8F | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|------------------------------|
| CFBB | C9 0F | CMP #\$0F | greater than 15? |
| CFBD | B0 19 | BCS \$CFD8 | then input buffer |
| CFBF | 20 25 D1 | JSR \$D125 | check file type |
| CFC2 | B0 05 | BCS \$CFC9 | rel-file or direct access? |
| CFC4 | A5 85 | LDA \$85 | data byte |
| CFC6 | 4C 9D D1 | JMP \$D19D | write in buffer |
| CFC9 | D0 03 | BNE \$CFCE | direct access file? |
| CFCB | 4C AB E0 | JMP \$E0AB | write data byte in rel-file |
| CFCE | A5 85 | LDA \$85 | |
| CFD0 | 20 F1 CF | JSR \$CFF1 | write data byte in buffer |
| CFD3 | A4 82 | LDY \$82 | channel number |
| CFD5 | 4C EE D3 | JMP \$D3EE | prepare next byte for output |
| CFD8 | A9 04 | LDA #\$04 | channel 4 |
| CFDA | 85 82 | STA \$82 | corresponding input buffer |
| CFDC | 20 E8 D4 | JSR \$D4E8 | set buffer pointer |
| CFDF | C9 2A | CMP #\$2A | 40 |
| CFE1 | F0 05 | BEO \$CFE8 | buffer end? |
| CFE3 | A5 85 | LDA \$85 | |
| CFE5 | 20 F1 CF | JSR \$CFF1 | write data byte in buffer |
| CFE8 | A5 F8 | LDA \$F8 | end flag set? |
| CFEA | F0 01 | BEO \$CFED | yes |
| CFEC | 60 | RTS | |
| CFED | EE 55 02 | INC \$0255 | set command flag |
| CFFO | 60 | RTS | |
| ***** | | | |
| CFF1 | 48 | PHA | write data byte in buffer |
| CFF2 | 20 93 DF | JSR \$DF93 | save data byte |
| CFF5 | 10 06 | BPL \$CFFD | get buffer number |
| CFF7 | 68 | PLA | associated buffer? |
| CFF8 | A9 61 | LDA #\$61 | |
| CFFA | 4C C8 C1 | JMP SC1C8 | 61, 'file not open' |
| CFFD | 0A | ASL A | buffer number times 2 |
| CFFE | AA | TAX | as index |
| CFFF | 68 | PLA | data byte |
| D000 | 81 99 | STA (\$99,X) | write in buffer |
| D002 | F6 99 | INC \$99,X | increment buffer pointer |
| D004 | 60 | RTS | |
| ***** | | | |
| D005 | 20 D1 C1 | JSR \$C1D1 | I-command, Initialize |
| D008 | 20 42 D0 | JSR \$D042 | find drive number |
| D00B | 4C 94 C1 | JMP SC194 | load BAM |
| | | | prepare disk status |
| ***** | | | |
| D00E | 20 0F F1 | JSR \$F10F | |
| D011 | A8 | TAY | |
| D012 | B6 A7 | LDX SA7,Y | |
| D014 | E0 FF | CPX #\$FF | |
| D016 | 48 | PHA | |
| D019 | 20 8E D2 | JSR \$D28E | |

Anatomy of the 1541 Disk Drive

| | | | |
|-----------|----------|--------------|-----------------------------------|
| D01C | AA | TAX | |
| D01D | A9 70 | LDA #\$70 | |
| D021 | 20 48 E6 | JSR \$E648 | 70, 'no channel' |
| D024 | 68 | PLA | |
| D025 | A8 | TAY | |
| D026 | 8A | TXA | |
| D027 | 09 80 | ORA #\$80 | |
| D029 | 99 A7 00 | STA \$00A7,Y | |
| D02C | 8A | TXA | |
| D02D | 29 0F | AND #\$0F | |
| D02F | 85 F9 | STA \$F9 | |
| D031 | A2 00 | LDA #\$00 | |
| D033 | 86 81 | STX \$81 | sector 0 |
| D035 | AE 85 FE | LDX \$FE85 | 18 |
| D038 | 86 80 | STX \$80 | track 18 |
| D03A | 20 D3 D6 | JSR \$D6D3 | transmit param to disk controller |
| D03D | A9 B0 | LDA #\$B0 | command code 'read block header' |
| D03F | 4C 8C D5 | JMP \$D58C | transmit to disk controller |
| ***** | | | |
| | | load BAM | |
| D042 | 20 D1 F0 | JSR \$F0D1 | |
| D045 | 20 13 D3 | JSR \$D313 | |
| D048 | 20 0E D0 | JSR \$D00E | read block |
| D04B | A6 7F | LDX \$7F | drive number |
| D04D | A9 00 | LDA #\$00 | |
| D04F | 9D 51 02 | STA \$0251,X | reset flag for 'BAM changed' |
| D052 | 8A | TXA | |
| D053 | OA | ASL A | |
| D054 | AA | TAX | |
| D055 | A5 16 | LDA \$16 | |
| D057 | 95 12 | STA \$12,X | |
| D059 | A4 17 | LDA \$17 | save ID |
| D05B | 95 13 | STA \$13,X | |
| D05D | 20 86 D5 | JSR \$D586 | |
| D060 | A5 F9 | LDA \$F9 | buffer number |
| D062 | 0A | ASL A | |
| D063 | AA | TAX | |
| D064 | A9 02 | LDA #\$02 | buffer pointer to \$200 |
| D066 | 95 99 | STA \$99,X | |
| D068 | A1 99 | LDA (\$99,X) | get character from buffer |
| D06A | A6 7F | LDX \$7F | drive number |
| D06C | 9D 01 01 | STA \$0101,X | |
| D06F | A9 00 | LDA #\$00 | |
| D071 | 95 1C | STA \$1C,X | flag for write protect |
| D073 | 95 FF | STA \$FF,X | flag for read error |
| ***** | | | |
| D075 | 20 3A EF | JSR \$EF3A | calculate blocks free |
| D078 | A0 04 | LDY #\$04 | buffer address to \$6D/\$6E |
| D07A | A9 00 | LDA #\$00 | begin at position 4 |
| D07C | AA | TAX | |
| D07D | 18 | CLC | |
| D07E | 71 6D | ADC (\$6D),Y | add no. of free blocks per track |
| D080 | 90 01 | BCC \$D083 | |
| D082 | E8 | INX | X as hi-byte |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|--------------------|
| D083 | C8 | INY | |
| D084 | C8 | INY | plus 4 |
| D085 | C8 | INY | |
| D086 | C8 | INY | |
| D087 | C0 48 | CPY #\$48 | track 18? |
| D089 | F0 F8 | BEO \$D083 | then skip |
| D08B | C0 90 | CPY #\$90 | last track number? |
| D08D | D0 EE | BNE \$D07D | no |
| D08F | 48 | PHA | lo-byte |
| D090 | 8A | TXA | hi-byte |
| D091 | A6 7F | LDX \$7F | drive number |
| D093 | 9D FC 02 | STA \$02FC,X | hi-byte to \$2FC |
| D096 | 68 | PLA | lo-byte |
| D097 | 9D FA 02 | STA \$02FA,X | to \$2FA |
| D09A | 60 | RTS | |

| | | | |
|------|----------|------------|-------------------------------|
| D09B | 20 D0 D6 | JSR \$D6D0 | parameters to disk controller |
| D09E | 20 C3 D0 | JSR \$D0C3 | read block |
| DOA1 | 20 99 D5 | JSR \$D599 | ok? |
| DOA4 | 20 37 D1 | JSR \$D137 | get byte from buffer |
| DOA7 | 85 80 | STA \$80 | track |
| DOA9 | 20 37 D1 | JSR \$D137 | next byte from buffer |
| DOAC | 85 81 | STA \$81 | sector |
| DOAE | 60 | RTS | |

| | | | |
|------|----------|------------|-------------------------------|
| DOAF | 20 9B D0 | JSR \$D09B | |
| D0B2 | A5 80 | LDA \$80 | track |
| D0B4 | D0 01 | BNE \$D0B7 | |
| D0B6 | 60 | RTS | |
| D0B7 | 20 1E CF | JSR \$CF1E | change buffer |
| D0BA | 20 D0 D6 | JSR \$D6D0 | parameters to disk controller |
| D0BD | 20 C3 D0 | JSR \$D0C3 | read block |
| D0C0 | 4C 1E CF | JMP \$CF1E | change buffer |

| | | | |
|------|-------|------------|-----------------|
| DOC3 | A9 80 | LDA #\$80 | read block |
| DOC5 | D0 02 | BNE \$D0C9 | code for 'read' |

| | | | |
|------|----------|------------|----------------------------------|
| DOC7 | A9 90 | LDA #\$90 | write block |
| DOC9 | 8D 4D 02 | STA \$024D | code for 'write' |
| DOCC | 20 93 DF | JSR \$DF93 | save |
| DOCF | AA | TAX | get buffer number |
| D0D0 | 20 06 D5 | JSR \$D506 | get track/sector, read/write blk |
| D0D3 | 8A | TXA | |
| D0D4 | 48 | PHA | |
| D0D5 | 0A | ASL A | buffer pointer times 2 |
| D0D6 | AA | TAX | |
| D0D7 | A9 00 | LDA #\$00 | |
| D0D9 | 95 99 | STA \$99,X | pointer in buffer to zero |
| D0DB | 20 25 D1 | JSR \$D125 | get file type |
| D0DE | C9 04 | CMP #\$04 | rel-file or direct access? |
| D0E0 | B0 06 | BCS \$D0E8 | yes |
| D0E2 | F6 B5 | INC \$B5,X | |

Anatomy of the 1541 Disk Drive

| | | | |
|--------------------------------|----------|--------------|----------------------------|
| D0E4 | D0 02 | BNE \$D0E8 | increment block counter |
| D0E6 | F6 BB | INC \$BB,X | |
| D0E8 | 68 | PLA | |
| D0E9 | AA | TAX | |
| D0EA | 60 | RTS | |
| ***** | | | |
| D0EB | A5 83 | LDA \$83 | open channel for reading |
| D0ED | C9 13 | CMP #\$13 | secondary address |
| D0EF | 90 02 | BCC \$D0F3 | 19 |
| D0F1 | 29 0F | AND #\$0F | smaller? |
| D0F3 | C9 0F | CMP #\$0F | |
| D0F5 | D0 02 | BNE \$D0F9 | |
| D0F7 | A9 10 | LDA #\$10 | 16 |
| D0F9 | AA | TAX | |
| D0FA | 38 | SEC | |
| D0FB | BD 2B 02 | LDA \$022B,X | |
| D0FE | 30 06 | BMI \$D106 | |
| D100 | 29 0F | AND #\$0F | |
| D102 | 85 82 | STA \$82 | |
| D104 | AA | TAX | |
| D105 | 18 | CLC | flag for ok |
| D106 | 60 | RTS | |
| ***** | | | |
| D107 | A4 83 | LDA \$83 | open channel for writing |
| D109 | C9 13 | CMP #\$13 | secondary address |
| D10B | 90 02 | BCC \$D10F | 19 |
| D10D | 29 0F | AND #\$0F | smaller? |
| D10F | AA | TAX | |
| D110 | BD 2B 02 | LDA \$022B,X | channel number |
| D113 | A8 | TAY | |
| D114 | 0A | ASL A | |
| D115 | 90 0A | BCC \$D121 | |
| D117 | 30 0A | BMI \$D123 | |
| D119 | 98 | TYA | |
| D11A | 29 0F | AND #\$0F | |
| D11C | 85 82 | STA \$82 | |
| D11E | AA | TAX | |
| D11F | 18 | CLC | flag for ok |
| D120 | 60 | RTS | |
| D121 | 30 F6 | BMI \$D119 | |
| D123 | 38 | SEC | flag for channel allocated |
| D124 | 60 | RTS | |
| ***** | | | |
| D125 | A6 82 | LDX \$82 | check for file type 'REL' |
| D127 | B5 EC | LDA SEC,X | |
| D129 | 4A | LSR A | |
| D12A | 29 07 | AND #\$07 | |
| D12C | C9 04 | CMP #\$04 | 'REL'? |
| D12E | 60 | RTS | |
| ***** | | | |
| get buffer and channel numbers | | | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|-----------------------------------|
| D12F | 20 93 DF | JSR \$DF93 | get buffer number |
| D132 | 0A | ASL A | |
| D133 | AA | TAX | |
| D134 | A4 82 | LDY \$82 | |
| D136 | 60 | RTS | |
| ***** | | | |
| D137 | 20 2F D1 | JSR \$D12F | get a byte from buffer |
| D13A | B9 44 02 | LDA \$0244,Y | get buffer and channel number |
| D13D | F0 12 | BEO \$D151 | end pointer |
| D13F | A1 99 | LDA (\$99,X) | get byte from buffer |
| D141 | 48 | PHA | |
| D142 | B5 99 | LDA \$99,X | buffer pointer |
| D144 | D9 44 02 | CMP \$0244,Y | equal end pointer? |
| D147 | D0 04 | BNE \$D14D | no |
| D149 | A9 FF | LDA #\$FF | |
| D14B | 95 99 | STA \$99,X | buffer pointer to -1 |
| D14D | 68 | PLA | data byte |
| D14E | F6 99 | INC \$99,X | increment buffer pointer |
| D150 | 60 | RTS | |
| D151 | A1 99 | LDA (\$99,X) | get character from buffer |
| D153 | F6 99 | INC \$99,Y | increment buffer pointer |
| D155 | 60 | RTS | |
| ***** | | | |
| D156 | 20 37 D1 | JSR \$D137 | get byte and read next block |
| D159 | D0 36 | BNE \$D191 | get byte from buffer |
| D15B | 85 85 | STA \$85 | not last character? |
| D15D | B9 44 02 | LDA \$0244,Y | save data byte |
| D160 | F0 08 | BEO \$D16A | end pointer |
| D162 | A9 80 | LDA #\$80 | yes |
| D164 | 99 F2 00 | STA \$00F2,Y | READ-flag |
| D167 | A5 85 | LDA \$85 | data byte |
| D169 | 60 | RTS | |
| ***** | | | |
| D16A | 20 1E CF | JSR \$CF1E | change buffer and read next block |
| D16D | A9 00 | LDA #\$00 | |
| D16F | 20 C8 D4 | JSR \$D4C8 | set buffer pointer to zero |
| D172 | 20 37 D1 | JSR \$D137 | get first byte from buffer |
| D175 | C9 00 | CMP #\$00 | track number zero |
| D177 | F0 19 | BEO \$D192 | yes, then last block |
| D179 | 85 80 | STA \$80 | save last track number |
| D17B | 20 37 D1 | JSR \$D137 | get next byte |
| D17E | 85 81 | STA \$81 | save as following track |
| D180 | 20 1E CF | JSR \$CF1E | change buffer and read next block |
| D183 | 20 D3 D1 | JSR \$D1D3 | save drive number |
| D186 | 20 D0 D6 | JSR \$D6D0 | param to disk controller |
| D189 | 20 C3 D0 | JSR \$D0C3 | transmit read command |
| D18C | 20 1E CF | JSR \$CF1E | change buffer and read block |
| D18F | A5 85 | LDA \$85 | get data byte |
| D191 | 60 | RTS | |
| ***** | | | |
| D192 | 20 37 D1 | JSR \$D137 | get next byte from buffer |
| D195 | A4 82 | LDY \$82 | |
| D197 | 99 44 02 | STA \$0244,Y | save as end pointer |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|--------------------------------|
| D19A | A5 85 | LDA \$85 | get data byte back |
| D19C | 60 | RTS | |
| ***** | | | |
| D19D | 20 F1 CF | JSR \$CFF1 | byte in buffer and write block |
| D1A0 | F0 01 | BEO \$D1A3 | byte in buffer |
| D1A2 | 60 | RTS | buffer full? |
| ***** | | | |
| D1A3 | 20 D3 D1 | JSR \$D1D3 | get drive number |
| D1A6 | 20 1E F1 | JSR \$F11E | find free block in BAM |
| D1A9 | A9 00 | LDA #\$00 | |
| D1AB | 20 C8 D4 | JSR \$D4C8 | buffer pointer to zero |
| D1AE | A5 80 | LDA \$80 | |
| D1B0 | 20 F1 CF | JSR \$CFF1 | track number as first byte |
| D1B3 | A5 81 | LDA \$81 | |
| D1B5 | 20 F1 CF | JSR \$CFF1 | sector number as second byte |
| D1B8 | 20 C7 D0 | JSR \$D0C7 | write block |
| D1BB | 20 1E CF | JSR \$CF1E | change buffer |
| D1BE | 20 D0 D6 | JSR \$D6D0 | param to disk controller |
| D1C1 | A9 02 | LDA #\$02 | |
| D1C3 | 4C C8 D4 | JMP \$D4C8 | buffer pointer to 2 |
| ***** | | | |
| | | | increment buffer pointer |
| D1C6 | 85 6F | STA \$6F | |
| D1C8 | 20 E8 D4 | JSR \$D4E8 | get buffer pointer |
| D1CB | 18 | CLC | |
| D1CC | 65 6F | ADC \$6F | |
| D1CE | 95 99 | STA \$99,X | and increment |
| D1D0 | 85 94 | STA \$94 | |
| D1D2 | 60 | RTS | |
| ***** | | | |
| | | | get drive number |
| D1D3 | 20 93 DF | JSR \$DF93 | get drive number |
| D1D6 | AA | TAX | |
| D1D7 | BD 5B 02 | LDA \$025B,X | |
| D1DA | 29 01 | AND #\$01 | isolate drive number |
| D1DC | 85 7F | STA \$7F | and save |
| D1DE | 60 | RTS | |
| ***** | | | |
| | | | find write channel and buffer |
| D1DF | 38 | SEC | flag for writing |
| D1E0 | B0 01 | BCS \$D1E3 | |
| ***** | | | |
| | | | find read channel and buffer |
| D1E2 | 18 | CLC | flag for reading |
| D1E3 | 08 | PHP | save |
| D1E4 | 85 6F | STA \$6F | buffer number |
| D1E6 | 20 27 D2 | JSR \$D227 | close channel |
| D1E9 | 20 7F D3 | JSR \$D37F | allocate free channel |
| D1EC | 85 82 | STA \$82 | channel number |
| D1EE | A6 83 | LDX \$83 | secondary address |
| D1F0 | 28 | PLP | |
| D1F1 | 90 02 | BCC \$D1F5 | read channel? |
| D1F3 | 09 80 | ORA #\$80 | flag for writing |
| D1F5 | 9D 2B 02 | STA \$022B,X | set |
| D1F8 | 29 3F | AND #\$3F | |

| | | | |
|-----------|----------|--------------|-----------------------------|
| D1FA | A8 | TAY | |
| D1FB | A9 FF | LDA #\$FF | default value |
| D1FD | 99 A7 00 | STA \$00A7,Y | |
| D200 | 99 AE 00 | STA \$00AE,Y | write in associated table |
| D203 | 99 CD 00 | STA \$00CD,Y | |
| D206 | C6 6F | DEC \$6F | decrement buffer number |
| D208 | 30 1C | BMI \$D226 | done already? |
| D20A | 20 8E D2 | JSR \$D28E | find buffer |
| D20D | 10 08 | BPL \$D217 | found? |
| D20F | 20 5A D2 | JSR \$D25A | erase flags in table |
| D212 | A9 70 | LDA #\$70 | |
| D214 | 4C C8 C1 | JMP \$C1C8 | 70, 'no channel' |
| D217 | 99 A7 00 | STA \$00A7,Y | buffer number in table |
| D21A | C6 6F | DEC \$6F | buffer number |
| D21C | 30 08 | BMI \$D226 | already done? |
| D21E | 20 8E D2 | JSR \$D28E | find buffer |
| D221 | 30 EC | BMI \$D20F | not found? |
| D223 | 99 AE 00 | STA \$00AE,Y | buffer number in table |
| D226 | 60 | RTS | |
| ***** | | | |
| D227 | A5 83 | LDA \$83 | close channel |
| D229 | C9 0F | CMP #\$0F | secondary address |
| D22B | D0 01 | BNE \$D22E | 15? |
| D22D | 60 | RTS | no else done already |
| D22E | A6 83 | LDX \$83 | |
| D230 | BD 2B 02 | LDA \$022B,X | channel number |
| D233 | C9 FF | CMP #\$FF | not associated? |
| D235 | F0 22 | BEQ \$D259 | then done |
| D237 | 29 3F | AND #\$3F | |
| D239 | 85 82 | STA \$82 | channel number |
| D23B | A9 FF | LDA #\$FF | |
| D23D | 9D 2B 02 | STA \$022B,X | erase association in table |
| D240 | A6 82 | LDX \$82 | |
| D242 | A9 00 | LDA #\$00 | |
| D244 | 95 F2 | STA \$F2,X | erase READ and WRITE flag |
| D246 | 20 5A D2 | JSR \$D25A | free buffer |
| D249 | A6 82 | LDX \$82 | channel number |
| D24B | A9 01 | LDA #\$01 | set bit 0 |
| D24D | CA | DEX | |
| D24E | 30 03 | BMI \$D253 | shift to correct position |
| D250 | 0A | ASL A | |
| D251 | D0 FA | BNE \$D24D | |
| D253 | 0D 56 02 | ORA \$0256 | free in allocation register |
| D256 | 8D 56 02 | STA \$0256 | |
| D259 | 60 | RTS | |
| ***** | | | |
| D25A | A6 82 | LDX \$82 | free buffer |
| D25C | B5 A7 | LDA \$A7,X | channel number |
| D25E | C9 FF | CMP #\$FF | buffer number |
| D260 | F0 09 | BEQ \$D26B | not associated? |
| D262 | 48 | PHA | |
| D263 | A9 FF | LDA #\$FF | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|------------|----------------------------------|
| D265 | 95 A7 | STA \$A7,X | erase buffer association |
| D267 | 68 | PLA | |
| D268 | 20 F3 D2 | JSR \$D2F3 | erase buffer allocation register |
| D26B | A6 82 | LDX \$82 | channel number |
| D26D | B5 AE | LDA SAE,X | |
| D26F | C9 FF | CMP #\$FF | associated in second table? |
| D271 | F0 09 | BEO \$D27C | no |
| D273 | 48 | PHA | |
| D274 | A9 FF | LDA #\$FF | |
| D276 | 95 AE | STA \$AE,X | erase association |
| D278 | 68 | PLA | |
| D279 | 20 F3 D2 | JSR \$D2F3 | erase buffer in allocation reg. |
| D27C | A6 82 | LDX \$82 | channel number |
| D27E | B5 CD | LDA SCD,X | |
| D280 | C9 FF | CMP #\$FF | associated in 3rd table? |
| D282 | F0 09 | BEO \$D28D | no |
| D284 | 48 | PHA | |
| D285 | A9 FF | LDA #\$FF | |
| D287 | 95 CD | STA SCD,X | erase association |
| D289 | 68 | PLA | |
| D28A | 20 F3 D2 | JSR \$D2F3 | erase buffer in allocation reg |
| D28D | 60 | RTS | |

***** find buffer *****

| | | | |
|------|----------|--------------|-----------|
| D28E | 98 | TYA | |
| D28F | 48 | PHA | |
| D290 | A0 01 | LDY #\$01 | |
| D292 | 20 BA D2 | JSR \$D2BA | |
| D295 | 10 0C | BPL \$D2A3 | |
| D297 | 88 | DEY | |
| D298 | 20 BA D2 | JSR \$D2BA | |
| D29B | 10 06 | BPL \$D2A3 | |
| D29D | 20 39 D3 | JSR \$D339 | |
| D2A0 | AA | TAX | |
| D2A1 | 30 13 | BMI \$D2B6 | |
| D2A3 | B5 00 | LDA \$00,X | |
| D2A5 | 30 FC | BMI \$D2A3 | |
| D2A7 | A5 7F | LDA \$7F | |
| D2A9 | 95 00 | STA \$00,X | |
| D2AB | 9D 5B 02 | STA \$025B,X | |
| D2AE | 8A | TXA | |
| D2AF | 0A | ASL A | |
| D2B0 | A8 | TAY | |
| D2B1 | A9 02 | LDA #\$02 | |
| D2B3 | 99 99 00 | STA \$0099,Y | |
| D2B6 | 68 | PLA | |
| D2B7 | A8 | TAY | |
| D2B8 | 8A | TXA | |
| D2B9 | 60 | RTS | |
| D2BA | A2 07 | LDX #\$07 | |
| D2BC | B9 4F 02 | LDA \$024F,Y | |
| D2BF | 3D E9 EF | AND \$EFE9,Y | erase bit |
| D2C2 | F0 04 | BEO \$D2C8 | |
| D2C4 | CA | DEX | |

| | | | |
|--------------------------------|----------|--------------|-------------------------------|
| D2C5 | 10 F5 | BPL \$D2BC | |
| D2C7 | 60 | RTS | |
| D2C8 | B9 4F 02 | LDA \$024F,Y | |
| D2CB | 5D E9 EF | EOR \$FEF9,X | rotate bit |
| D2CE | 99 4F 02 | STA \$024F,Y | |
| D2D1 | 8A | TXA | buffer number |
| D2D2 | 88 | DEY | |
| D2D3 | 30 03 | BMI \$D2D8 | |
| D2D5 | 18 | CLC | |
| D2D6 | 69 08 | ADC #\$08 | |
| D2D8 | AA | TAX | buffer number |
| D2D9 | 60 | RTS | |
| D2DA | A6 82 | LDX \$82 | |
| D2DC | B5 A7 | LDA \$A7,X | |
| D2DE | 30 09 | BMI \$D2E9 | |
| D2E0 | 8A | TXA | |
| D2E1 | 18 | CLC | |
| D2E2 | 69 07 | ADC #\$07 | |
| D2E4 | AA | TAX | |
| D2E5 | B5 A7 | LDA \$A7,X | |
| D2E7 | 10 F0 | BPL \$D2D9 | |
| D2E9 | C9 FF | CMP #\$FF | |
| D2EB | F0 EC | BEQ \$D2D9 | |
| D2ED | 48 | PHA | |
| D2EE | A9 FF | LDA #\$FF | |
| D2F0 | 95 A7 | STA \$A7,X | |
| D2F2 | 68 | PLA | |
| D2F3 | 29 0F | AND #\$0F | |
| D2F5 | A8 | TAY | buffer number |
| D2F6 | C8 | INY | |
| D2F7 | A2 10 | LDX #\$10 | 16 |
| D2F9 | 6E 50 02 | ROR \$0250 | |
| D2FC | 6E 4F 02 | ROR \$024F | rotate 16-bit allocation reg. |
| D2FF | 88 | DEY | |
| D300 | D0 01 | BNE \$D303 | |
| D302 | 18 | CLC | erase bit for buffer |
| D303 | CA | DEX | |
| D304 | 10 F3 | BPL \$D2F9 | |
| D306 | 60 | RTS | |
| ***** | | | |
| close all channels | | | |
| D307 | A9 0E | LDA #\$0E | 14 |
| D309 | 85 83 | STA \$83 | secondary address |
| D30B | 20 27 D2 | JSR SD227 | close channel |
| D30E | C6 83 | DEC \$83 | next secondary address |
| D310 | D0 F9 | BNE \$D30B | |
| D312 | 60 | RTS | |
| ***** | | | |
| close channels of other drives | | | |
| D313 | A9 0E | LDA #\$0E | 14 |
| D315 | 85 83 | STA \$83 | secondary address |
| D317 | A6 83 | LDX \$83 | |
| D319 | BD 2B 02 | LDA \$022B,X | association table |
| D31C | C9 FF | CMP #\$FF | channel associated? |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|------------------------------|
| D31E | F0 14 | BEQ \$D334 | no |
| D320 | 29 3F | AND #\$3F | |
| D322 | 85 82 | STA \$82 | channel number |
| D324 | 20 93 DF | JSR \$DF93 | get buffer number |
| D327 | AA | TAX | |
| D328 | BD 5B 02 | LDA \$025B,X | drive number |
| D32B | 29 01 | AND #\$01 | isolate |
| D32D | C5 7F | CMP \$7F | equal to actual drive number |
| D32F | D0 03 | BNE \$D334 | no |
| D331 | 20 27 D2 | JSR \$D227 | close channel |
| D334 | C6 83 | DEC \$83 | next channel |
| D336 | 10 DF | BPL \$D317 | |
| D338 | 60 | RTS | |

| | | | |
|------|----------|--------------|--|
| D339 | A5 6F | LDA \$6F | |
| D33B | 48 | PHA | |
| D33C | A0 00 | LDY #\$00 | |
| D33E | B6 FA | LDX \$FA,Y | |
| D340 | B5 A7 | LDA \$A7,X | |
| D342 | 10 04 | BPL \$D348 | |
| D344 | C9 FF | CMP #\$FF | |
| D346 | D0 16 | BNE \$D35E | |
| D348 | 8A | TXA | |
| D349 | 18 | CLC | |
| D34A | 69 07 | ADC #\$07 | |
| D34C | AA | TAX | |
| D34D | B5 A7 | LDA \$A7,X | |
| D34F | 10 04 | BPL \$D355 | |
| D351 | C9 FF | CMP #\$FF | |
| D353 | D0 09 | BNE \$D35E | |
| D355 | C8 | INY | |
| D356 | C0 05 | CPY #\$05 | |
| D358 | 90 E4 | BCC \$D33E | |
| D35A | A2 FF | LDX #\$FF | |
| D35C | D0 1C | BNE \$D37A | |
| D35E | 86 6F | STX \$6F | |
| D360 | 29 3F | AND #\$3F | |
| D362 | AA | TAX | |
| D363 | B5 00 | LDA \$00,X | |
| D365 | 30 FC | BMI \$D363 | |
| D367 | C9 02 | CMP #\$02 | |
| D369 | 90 08 | BCC \$D373 | |
| D36B | A6 6F | LDX \$6F | |
| D36D | E0 07 | CPX #\$07 | |
| D36F | 90 D7 | BCC \$D348 | |
| D371 | B0 E2 | BCS \$D355 | |
| D373 | A4 6F | LDY \$6F | |
| D375 | A9 FF | LDA #\$FF | |
| D377 | 99 A7 00 | STA \$00A7,Y | |
| D37A | 68 | PLA | |
| D37B | 85 6F | STA \$6F | |
| D37D | 8A | TXA | |
| D37E | 60 | RTS | |

```
*****
      find channel and allocate
D37F  A0 00      LDY #$00
D381  A9 01      LDA #$01
D383  2C 56 02    BIT $0256
D386  D0 09      BNE $D391
D388  C8          INY
D389  0A          ASL A
D38A  D0 F7      BNE $D383
D38C  A9 70      LDA #$70
D38E  4C C8 C1    JMP $C1C8
                                channel free?
                                rotate bit to left
                                all channels checked?
                                70, 'no channel'

D391  49 FF      EOR #$FF
D393  2D 56 02    AND $0256
D396  8D 56 02    STA $0256
                                allocate channel
D399  98          TYA
D39A  60          RTS

*****
      get byte for output
D39B  20 EB D0    JSR $D0EB
D39E  20 00 C1    JSR $C100
D3A1  20 AA D3    JSR $D3AA
D3A4  A6 82      LDX $82
D3A6  BD 3E 02    LDA $023E,X
D3A9  60          RTS
                                channel number
                                open channel for reading
                                turn LED on
                                get byte in output register
                                channel number
                                get byte

D3AA  A6 82      LDX $82
D3AC  20 25 D1    JSR $D125
D3AF  D0 03      BNE $D3B4
D3B1  4C 20 E1    JMP $E120
                                no rel-file?
                                get byte from rel-file

D3B4  A5 83      LDA $83
D3B6  C9 0F      CMP #$0F
D3B8  F0 5A      BEQ $D414
D3BA  B5 F2      LDA $F2,X
D3BC  29 08      AND #$08
D3BE  D0 13      BNE $D3D3
D3C0  20 25 D1    JSR $D125
D3C3  C9 07      CMP #$07
D3C5  D0 07      BNE $D3CE
D3C7  A9 89      LDA #$89
D3C9  95 F2      STA $F2,X
D3CB  4C DE D3    JMP $D3DE
                                end flag set?
                                no
                                check file type
                                direct access file?
                                no
                                set READ and WRITE flag

D3CE  A9 00      LDA #$00
D3D0  95 F2      STA $F2,X
D3D2  60          RTS
                                erase READ and WRITE flag

D3D3  A5 83      LDA $83
D3D5  F0 32      BEQ $D409
D3D7  20 25 D1    JSR $D125
D3DA  C9 04      CMP #$04
D3DC  90 22      BCC $D400
D3DE  20 2F D1    JSR $D12F
D3E1  B5 99      LDA $99,X
                                secondary address
                                zero, LOAD?
                                check file type
                                rel-file or direct access?
                                no
                                get buffer and channel number
                                buffer pointer
```

Anatomy of the 1541 Disk Drive

| | | | |
|-----------------|----------|--------------|-----------------------------------|
| D3E3 | D9 44 02 | CMP \$0244,Y | equal end pointer? |
| D3E6 | D0 04 | BNE \$D3EC | no |
| D3E8 | A9 00 | LDA #\$00 | |
| D3EA | 95 99 | STA \$99,X | buffer pointer to zero |
| D3EC | F6 99 | INC \$99,X | increment buffer pointer |
| D3EE | A1 99 | LDA (\$99,X) | get byte from buffer |
| D3F0 | 99 3E 02 | STA \$023E,Y | into output register |
| D3F3 | B5 99 | LDA \$99,X | buffer pointer |
| D3F5 | D9 44 02 | CMP \$0244,Y | equal end pointer? |
| D3F8 | D0 05 | BNE \$D3FF | no |
| D3FA | A9 81 | LDA #\$81 | |
| D3FC | 99 F2 00 | STA \$00F2,Y | set flags |
| D3FF | 60 | RTS | |
| D400 | 20 56 D1 | JSR SD156 | get byte from buffer |
| D403 | A6 82 | LDX \$82 | channel number |
| D405 | 9D 3E 02 | STA \$023E,X | byte in output register |
| D408 | 60 | RTS | |
| D409 | AD 54 02 | LDA \$0254 | flag for directory? |
| D40C | F0 F2 | BEO \$D400 | no |
| D40E | 20 67 ED | JSR SED67 | create directory line |
| D411 | 4C 03 D4 | JMP \$D403 | |
| D414 | 20 E8 D4 | JSR \$D4E8 | set buffer pointer |
| D417 | C9 D4 | CMP #\$D4 | |
| D419 | D0 18 | BNE SD433 | |
| D41B | A5 95 | LDA \$95 | |
| D41D | C9 02 | CMP #\$02 | |
| D41F | D0 12 | BNE \$D433 | |
| D421 | A9 0D | LDA #\$0D | CR |
| D423 | 85 85 | STA \$85 | in output register |
| D425 | 20 23 C1 | JSR SCL23 | erase error flags |
| D428 | A9 00 | LDA #\$00 | |
| D42A | 20 C1 E6 | JSR \$E6C1 | create 'ok' message |
| D42D | C6 A5 | DEC SA5 | set buffer pointer back |
| D42F | A9 80 | LDA #\$80 | set READ flag |
| D431 | D0 12 | BNE \$D445 | |
| D433 | 20 37 D1 | JSR \$D137 | get byte from buffer |
| D436 | 85 85 | STA \$85 | into output register |
| D438 | D0 09 | BNE \$D443 | |
| D43A | A9 D4 | LDA #\$D4 | |
| D43C | 20 C8 D4 | JSR \$D4C8 | set buf ptr in front of error ptr |
| D43F | A9 02 | LDA #\$02 | |
| D441 | 95 9A | STA \$9A,X | hi-address |
| D443 | A9 88 | LDA #\$88 | set READ flag |
| D445 | 85 F7 | STA \$F7 | |
| D447 | A5 85 | LDA \$85 | data byte |
| D449 | 8D 43 02 | STA \$0243 | into output register |
| D44C | 60 | RTS | |
| ***** | | | |
| read next block | | | |
| D44D | 20 93 DF | JSR \$DF93 | get buffer number |
| D450 | 0A | ASL A | times 2 |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|--------------------------------|
| D451 | AA | TAX | |
| D452 | A9 00 | LDA #\$00 | |
| D454 | 95 99 | STA \$99,X | buffer pointer to zero |
| D456 | A1 99 | LDA (\$99,X) | get first byte from buffer |
| D458 | F0 05 | BEO \$D45F | no block following? |
| D45A | D6 99 | DEC \$99,X | buffer pointer to -1 |
| D45C | 4C 56 D1 | JMP \$D156 | read next block |
| D45F | 60 | RTS | |
| ***** | | | |
| D460 | A9 80 | LDA #\$80 | read block |
| D462 | D0 02 | BNE \$D466 | command code for reading |
| ***** | | | |
| D464 | A9 90 | LDA #\$90 | write block |
| D466 | 05 7F | ORA \$7F | command code for writing |
| D468 | 8D 4D 02 | STA \$024D | drive number |
| D46B | A5 F9 | LDA \$F9 | save code |
| D46D | 20 D3 D6 | JSR \$D6D3 | param to disk controller |
| D470 | A6 F9 | LDX \$F9 | |
| D472 | 4C 93 D5 | JMP \$D593 | execute command |
| ***** | | | |
| D475 | A9 01 | LDA #\$01 | allocate buffer and read block |
| D477 | 8D 4A 02 | STA \$024A | file type to sequential |
| D47A | A9 11 | LDA #\$11 | 17 |
| D47C | 85 83 | STA \$83 | secondary address |
| D47E | 20 46 DC | JSR \$DC46 | allocate buffer and read block |
| D481 | A9 02 | LDA #\$02 | |
| D483 | 4C C8 D4 | JMP \$D4C8 | buffer pointer to 2 |
| ***** | | | |
| D486 | A9 12 | LDA #\$12 | allocate new block |
| D488 | 85 83 | STA \$83 | 18 |
| D48A | 4C DA DC | JMP \$DCDA | secondary address |
| ***** | | | |
| D48D | 20 3B DE | JSR \$DE3B | allocate new block |
| D490 | A9 01 | LDA #\$01 | get track and sector number |
| D492 | 85 6F | STA \$6F | a block |
| D494 | A5 69 | LDA \$69 | save step width 10 for block |
| D496 | 48 | PHA | allocation |
| D497 | A9 03 | LDA #\$03 | |
| D499 | 85 69 | STA \$69 | |
| D49B | 20 2D F1 | JSR \$F12D | find free block in BAM |
| D49E | 68 | PLA | |
| D49F | 85 69 | STA \$69 | get step width back |
| D4A1 | A9 00 | LDA #\$00 | |
| D4A3 | 20 C8 D4 | JSR \$D4C8 | buffer pointer to zero |
| D4A6 | A5 80 | LDA \$80 | |
| D4A8 | 20 F1 CF | JSR SCFF1 | track number in buffer |
| D4AB | A5 81 | LDA \$81 | |
| D4AD | 20 F1 CF | JSR SCFF1 | sector number in buffer |
| D4B0 | 20 C7 D0 | JSR \$D0C7 | write block to disk |
| D4B3 | 20 99 D5 | JSR \$D599 | and verify |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|----------------------------------|
| D4B6 | A9 00 | LDA #\$00 | |
| D4B8 | 20 C8 D4 | JSR \$D4C8 | buffer pointer to zero |
| D4BB | 20 F1 CF | JSR \$CF1 | fill buffer with zeroes |
| D4BE | D0 FB | BNE \$D4BB | |
| D4C0 | 20 F1 CF | JSR \$CF1 | zero as following track |
| D4C3 | A9 FF | LDA #\$FF | |
| D4C5 | 4C F1 CF | JMP \$CF1 | \$FF as number of bytes |
| ***** | | | |
| D4C8 | 85 6F | STA \$6F | set buffer pointer |
| D4CA | 20 93 DF | JSR \$DF93 | save pointer |
| D4CD | 0A | ASL A | get buffer number |
| D4CE | AA | TAX | times 2 |
| D4CF | B5 9A | LDA \$9A,X | buffer pointer hi |
| D4D1 | 85 95 | STA \$95 | |
| D4D3 | A5 6F | LDA \$6F | |
| D4D5 | 95 99 | STA \$99,X | buffer pointer lo, new value |
| D4D7 | 85 94 | STA \$94 | |
| D4D9 | 60 | RTS | |
| ***** | | | |
| D4DA | A9 11 | LDA #\$11 | close internal channel |
| D4DC | 17 | | |
| D4DE | 20 27 D2 | JSR \$D227 | close channel |
| D4E1 | A9 12 | LDA #\$12 | 18 |
| D4E3 | 85 83 | STA \$83 | |
| D4E5 | 4C 27 D2 | JMP \$D227 | close channel |
| ***** | | | |
| D4E8 | 20 93 DF | JSR \$DF93 | set buffer pointer |
| D4EB | 83 | STA \$83 | get buffer number |
| D4EC | 0A | ASL A | |
| D4ED | AA | TAX | |
| D4EF | B5 9A | LDA \$9A,X | buffer pointer hi |
| D4F1 | 85 95 | STA \$95 | |
| D4F3 | 95 99 | LDA \$99,X | buffer pointer lo |
| D4F5 | 85 94 | STA \$94 | |
| D4F7 | 60 | RTS | |
| ***** | | | |
| D4F6 | 85 71 | STA \$71 | get byte from buffer |
| D4F8 | 20 93 DF | JSR \$DF93 | pointer lo |
| D4FB | 83 | GET | get buffer number |
| D4FC | BD E0 FE | LDA \$FEE0,X | hi-byte buffer address |
| D4FF | 85 72 | STA \$72 | pointer hi |
| D501 | A0 00 | LDY #\$00 | |
| D503 | B1 71 | LDA (\$71),Y | get byte from buffer |
| D505 | 60 | RTS | |
| ***** | | | |
| D506 | BD 5B 02 | LDA \$025B,X | check track and sector numbers |
| D509 | 29 01 | AND #\$01 | command code for disk controller |
| D50B | 0D 4D 02 | ORA \$024D | drive number |
| D50E | A8 | PHA | plus command code |
| D50F | 86 F9 | STX \$F9 | save |
| D511 | 8A | TXA | buffer number |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|------------|-------------------------------|
| D512 | 0A | ASL A | times 2 |
| D513 | AA | TAX | |
| D514 | B5 07 | LDA \$07,X | sector |
| D516 | 8D 4D 02 | STA \$024D | save |
| D519 | B5 06 | LDA \$06,X | track |
| D51B | F0 2D | BEO \$D54A | 66, 'illegal track or sector' |
| D51D | CD D7 FE | CMP \$FED7 | 36, highest track number + 1 |
| D520 | B0 28 | BCS \$D54A | 66, 'illegal track or sector' |
| D522 | AA | TAX | |
| D523 | 68 | PLA | command code |
| D524 | 48 | PHA | |
| D525 | 29 F0 | AND #\$F0 | |
| D527 | C9 90 | CMP #\$90 | code for writing? |
| D529 | D0 4F | BNE \$D57A | no |
| D52B | 68 | PLA | |
| D52C | 48 | PHA | |
| D52D | 4A | LSR A | |
| D52E | B0 05 | BCS \$D535 | |
| D530 | AD 01 01 | LDA \$0101 | |
| D533 | 90 03 | BCC \$D538 | |
| D535 | AD 02 01 | LDA \$0102 | |
| D538 | F0 05 | BEO \$D53F | |
| D53A | CD D5 FE | CMP \$FED5 | 'A', format marker |
| D53D | D0 33 | BNE \$D572 | 73, 'cbm dos v2.6 1541' |
| D53F | 8A | TXA | track number |
| D540 | 20 4B F2 | JSR \$F24B | get maximum sector number |
| D543 | CD 4D 02 | CMP \$024D | compare with sector number |
| D546 | F0 02 | BEO \$D54A | equal, then error |
| D548 | B0 30 | BCS \$D57A | smaller? |
| D54A | 20 52 D5 | JSR \$D552 | get track and sector number |
| D54D | A9 66 | LDA #\$66 | |
| D54F | 4C 45 E6 | JMP \$E645 | 66, 'illegal track or sector' |
| ***** | | | |
| D552 | A5 F9 | LDA \$F9 | get track and sector number |
| D554 | 0A | ASL A | buffer number |
| D555 | AA | TAX | *2 |
| D556 | B5 06 | LDA \$06,X | as index |
| D558 | 85 80 | STA \$80 | |
| D55A | B5 07 | LDA \$07,X | track |
| D55C | 85 81 | STA \$81 | sector |
| D55E | 60 | RTS | |
| D55F | A5 80 | LDA \$80 | track |
| D561 | F0 EA | BEO \$D54D | zero, then error |
| D563 | CD D7 FE | CMP \$FED7 | 36, maximum track number + 1 |
| D566 | B0 E5 | BCS \$D54D | 66, 'illegal track or sector' |
| D568 | 20 4B F2 | JSR \$F24B | get maximum sector number |
| D56B | C5 81 | CMP \$81 | sector |
| D56D | F0 DE | BEO \$D54D | |
| D56F | 90 DC | BCC \$D54D | error |
| D571 | 60 | RTS | |
| D572 | 20 52 D5 | JSR \$D552 | get track and sector number |
| D575 | A9 73 | LDA #\$73 | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|----------------------------------|
| D577 | 4C 45 E6 | JMP \$E645 | 73, 'cbm dos v2.6 1541' |
| D57A | A6 F9 | LDX \$F9 | buffer number |
| D57C | 68 | PLA | |
| D57D | 8D 4D 02 | STA \$024D | command code for disk controller |
| D580 | 95 00 | STA \$00,X | in command register |
| D582 | 9D 5B 02 | STA \$025B,X | and write in table |
| D585 | 60 | RTS | |
| ***** | | | |
| D586 | A9 80 | LDA #\$80 | read block |
| D588 | D0 02 | BNE \$D58C | code for read |
| ***** | | | |
| D58A | A9 90 | LDA #\$90 | write block |
| D58C | 05 7F | ORA \$7F | code for write |
| D58E | A6 F9 | LDX \$F9 | drive number |
| D590 | 8D 4D 02 | STA \$024D | buffer number |
| D593 | AD 4D 02 | LDA \$024D | command code |
| D596 | 20 0E D5 | JSR \$D50E | check track and sector |
| ***** | | | |
| D599 | 20 A6 D5 | JSR \$D5A6 | verify execution |
| D59C | B0 FB | BCS \$D599 | verify execution |
| D59E | 48 | PHA | wait for end |
| D59F | A9 00 | LDA #\$00 | |
| D5A1 | 8D 98 02 | STA \$0298 | erase error flag |
| D5A4 | 68 | PLA | |
| D5A5 | 60 | RTS | |
| ***** | | | |
| D5A6 | B5 00 | LDA \$00.X | cmd code (bit 7) still in reg? |
| D5A8 | 30 1A | BMI \$D5C4 | yes |
| D5AA | C9 02 | CMP #\$02 | |
| D5AC | 90 14 | BCC \$D5C2 | error-free execution |
| D5AE | C9 08 | CMP #\$08 | 8 |
| D5B0 | F0 08 | BEQ \$D5BA | write protect |
| D5B2 | C9 0B | CMP #\$0B | 11 |
| D5B4 | F0 04 | BEQ \$D5BA | ID mismatch |
| D5B6 | C9 0F | CMP #\$0F | 15 |
| D5B8 | D0 0C | BNE \$D5C6 | |
| D5BA | 2C 98 02 | BIT \$0298 | |
| D5BD | 30 03 | BMI \$D5C2 | |
| D5BF | 4C 3F D6 | JMP \$D63F | create error message |
| D5C2 | 18 | CLC | execution ended |
| D5C3 | 60 | RTS | |
| ***** | | | |
| D5C4 | 38 | SEC | execution not yet ended |
| D5C5 | 60 | RTS | |
| ***** | | | |
| D5C6 | 98 | TYA | |
| D5C7 | 48 | PHA | |
| D5C8 | A5 7F | LDA \$7F | drive number |
| D5CA | 48 | PHA | |
| D5CB | BD 5B 02 | LDA \$025B,X | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|-----------------------------------|
| D5CE | 29 01 | AND #\$01 | drive number |
| D5D0 | 85 7F | STA \$7F | |
| D5D2 | A8 | TAY | |
| D5D3 | B9 CA FE | LDA \$FECA,Y | bit model for drive |
| D5D6 | 8D 6D 02 | STA \$026D | |
| D5D9 | 20 A6 D6 | JSR \$D6A6 | read attempt |
| D5DC | C9 02 | CMP #\$02 | |
| D5DE | B0 03 | BCS \$D5E3 | not ok? |
| D5E0 | 4C 6D D6 | JMP \$D66D | done |
| D5E3 | BD 5B 02 | LDA \$025B,X | command code |
| D5E6 | 29 F0 | AND #\$F0 | isolate |
| D5E8 | 48 | PHA | |
| D5E9 | C9 90 | CMP #\$90 | code for write |
| D5EB | D0 07 | BNE \$D5F4 | no |
| D5ED | A5 7F | LDA \$7F | drive number |
| D5EF | 09 B8 | ORA #\$B8 | |
| D5F1 | 9D 5B 02 | STA \$025B,X | |
| D5F4 | 24 6A | BIT \$6A | |
| D5F6 | 70 39 | BVS \$D631 | |
| D5F8 | A9 00 | LDA #\$00 | |
| D5FA | 8D 99 02 | STA \$0299 | cntr for searches next to track |
| D5FD | 8D 9A 02 | STA \$029A | |
| D600 | AC 99 02 | LDY \$0299 | counter |
| D603 | AD 9A 02 | LDA \$029A | |
| D606 | 38 | SEC | |
| D607 | F9 DB FE | SBC \$FEDB,Y | constants for read attempts |
| D60A | 8D 9A 02 | STA \$029A | |
| D60D | B9 DB FE | LDA \$FEDB,Y | |
| D610 | 20 76 D6 | JSR \$D676 | position head next to track |
| D613 | EE 99 02 | INC \$0299 | increment counter |
| D616 | 20 A6 D6 | JSR \$D6A6 | read attempt |
| D619 | C9 02 | CMP #\$02 | return message |
| D61B | 90 08 | BCC \$D625 | smaller than 2, ok? |
| D61D | AC 99 02 | LDY \$0299 | load counter |
| D620 | B9 DB FE | LDA \$FEDB,Y | get constants |
| D623 | D0 DB | BNE \$D600 | not yet zero (table end)? |
| D625 | AD 9A 02 | LDA \$029A | |
| D628 | 20 76 D6 | JSR \$D676 | position head |
| D62B | B5 00 | LDA \$00,X | |
| D62D | C9 02 | CMP #\$02 | return message |
| D62F | 90 2B | BCC \$D65C | ok? |
| D631 | 24 6A | BIT \$6A | |
| D633 | 10 0F | BPL \$D644 | |
| D635 | 68 | PLA | command code |
| D636 | C9 90 | CMP #\$90 | for writing? |
| D638 | D0 05 | BNE \$D63F | no |
| D63A | 05 7F | ORA \$7F | drive number |
| D63C | 9D 5B 02 | STA \$025B,X | command code in table |
| D63F | B5 00 | LDA \$00,X | return message |
| D641 | 20 0A E6 | JSR \$E60A | set error message |
| D644 | 68 | PLA | |
| D645 | 2C 98 02 | BIT \$0298 | |
| D648 | 30 23 | BMI \$D66D | |
| D64A | 48 | PHA | |
| D64B | A9 C0 | LDA #\$C0 | command code for head positioning |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|---------------------------------|
| D64D | 05 7F | ORA \$7F | drive number |
| D64F | 95 00 | STA \$00,X | in command register |
| D651 | B5 00 | LDA \$00,X | |
| D653 | 30 FC | BMI \$D651 | wait for execution |
| D655 | 20 A6 D6 | JSR \$D6A6 | attempt command execution again |
| D658 | C9 02 | CMP #\$02 | return message |
| D65A | B0 D9 | BCS \$D635 | incorrect? |
| D65C | 68 | PLA | |
| D65D | C9 90 | CMP #\$90 | command code for writing |
| D65F | D0 0C | BNE \$D66D | no |
| D661 | 05 7F | ORA \$7F | drive number |
| D663 | 9D 5B 02 | STA \$025B,X | in table |
| D666 | 20 A6 D6 | JSR \$D6A6 | attempt execution again |
| D669 | C9 02 | CMP #\$02 | return message |
| D66B | B0 D2 | BCS \$D63F | error? |
| D66D | 68 | PLA | |
| D66E | 85 7F | STA \$7F | get drive number back |
| D670 | 68 | PLA | |
| D671 | A8 | TAY | |
| D672 | B5 00 | LDA \$00,X | error code |
| D674 | 18 | CLC | end-of-execution flag |
| D675 | 60 | RTS | |
| D676 | C9 00 | CMP #\$00 | |
| D678 | F0 18 | BEO \$D692 | |
| D67A | 30 0C | BMI \$D688 | |
| D67C | A0 01 | LDY #\$01 | |
| D67E | 20 93 D6 | JSR \$D693 | transmit data for head position |
| D681 | 38 | SEC | |
| D682 | E9 01 | SBC #\$01 | |
| D684 | D0 F6 | BNE \$D67C | |
| D686 | F0 0A | BEO \$D692 | |
| D688 | A0 FF | LDY #\$FF | |
| D68A | 20 93 D6 | JSR \$D693 | transmit data for head position |
| D68D | 18 | CLC | |
| D68E | 69 01 | ADC #\$01 | |
| D690 | D0 F6 | BNE \$D688 | |
| D692 | 60 | RTS | |
| D693 | 48 | PHA | |
| D694 | 98 | TYA | |
| D695 | A4 7F | LDY \$7F | drive number |
| D697 | 99 FE 02 | STA \$02FE,Y | |
| D69A | D9 FE 02 | CMP \$02FE,Y | wait for return message from |
| D69D | F0 FB | BEO \$D69A | |
| D69F | A9 00 | LDA #\$00 | disk controller |
| D6A1 | 99 FE 02 | STA \$02FE,Y | |
| D6A4 | 68 | PLA | |
| D6A5 | 60 | RTS | |
| D6A6 | A5 6A | LDA \$6A | maximum number of repetitions |
| D6A8 | 29 3F | AND #\$3F | |
| D6AA | A8 | TAY | |
| D6AB | AD 6D 02 | LDA \$026D | bit for LED |

Anatomy of the 1541 Disk Drive

| | | | |
|---|----------|--------------|-------------------------------|
| D6AE | 4D 00 1C | EOR \$1C00 | |
| D6B1 | 8D 00 1C | STA \$1C00 | |
| D6B4 | BD 5B 02 | LDA \$025B,X | command |
| D6B7 | 95 00 | STA \$00,X | transmit to disk controller |
| D6B9 | B5 00 | LDA \$00,X | and return message |
| D6BB | 30 FC | BMI \$D6B9 | wait |
| D6BD | C9 02 | CMP #\$02 | ok? |
| D6BF | 90 03 | BCC \$D6C4 | yes |
| D6C1 | 88 | DEY | decrement counter |
| D6C2 | D0 E7 | BNE \$D6AB | attempt again |
| D6C4 | 48 | PHA | |
| D6C5 | AD 6D 02 | LDA \$026D | |
| D6C8 | 0D 00 1C | ORA \$1C00 | LED off |
| D6CB | 8D 00 1C | STA \$1C00 | |
| D6CE | 68 | PLA | |
| D6CF | 60 | RTS | |
| ***** transmit param to disk controller ***** | | | |
| D6D0 | 20 93 DF | JSR \$DF93 | get buffer number |
| D6D3 | 0A | ASL A | |
| D6D4 | A8 | TAY | |
| D6D5 | A5 80 | LDA \$80 | track number |
| D6D7 | 99 06 00 | STA \$0006,Y | transmit |
| D6DA | A5 81 | LDA \$81 | sector number |
| D6DC | 99 07 00 | STA \$0007,Y | transmit |
| D6DF | A5 7F | LDA \$7F | drive number |
| D6E1 | 0A | ASL | times 2 |
| D6E2 | AA | TAX | |
| D6E3 | 60 | RTS | |
| ***** enter file in directory ***** | | | |
| D6E4 | A5 83 | LDA \$83 | secondary address |
| D6E6 | 48 | PHA | |
| D6E7 | A5 82 | LDA \$82 | channel number |
| D6E9 | 48 | PHA | |
| D6EA | A5 81 | LDA \$81 | sector number |
| D6EC | 48 | PHA | |
| D6ED | A5 80 | LDA \$80 | track number |
| D6EF | 48 | PHA | save |
| D6F0 | A9 11 | LDA #\$11 | |
| D6F2 | 85 83 | STA \$83 | secondary address 17 |
| D6F4 | 20 3B DE | JSR \$DE3B | get track and sector number |
| D6F7 | AD 4A 02 | LDA \$024A | file type |
| D6FA | 48 | PHA | save |
| D6FB | A4 E2 | LDA \$E2 | drive number |
| D6FD | 29 01 | AND #\$01 | |
| D6FF | 85 7F | STA \$7F | set |
| D701 | A6 F9 | LDX \$F9 | buffer number |
| D703 | 5D 5B 02 | EOR \$025B,X | |
| D706 | 4A | LSR A | |
| D707 | 90 0C | BCC \$D715 | equal drive number? |
| D709 | A2 01 | LDX #\$01 | |
| D70B | 8E 92 02 | STX \$0292 | pointer in directory |
| D70E | 20 AC C5 | JSR \$C5AC | load dir and find first entry |
| D711 | F0 1D | BEO \$D730 | not found? |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|-------------------------------|
| D713 | D0 28 | BNE \$D73D | found? |
| D715 | AD 91 02 | LDA \$0291 | sector number in directory |
| D718 | F0 0C | BEO \$D726 | equal zero |
| D71A | C5 81 | CMP \$81 | equal sector number? |
| D71C | F0 1F | BEO \$D73D | yes |
| D71E | 85 81 | STA \$81 | save sector number |
| D720 | 20 60 D4 | JSR \$D460 | read block |
| D723 | 4C 3D D7 | JMP \$D73D | |
| D726 | A9 01 | LDA #\$01 | |
| D728 | 8D 92 02 | STA \$0292 | pointer to one |
| D72B | 20 17 C6 | JSR SC617 | find next entry in directory |
| D72E | D0 0D | BNE \$D73D | found? |
| D730 | 20 8D D4 | JSR \$D48D | write directory block |
| D733 | A5 81 | LDA \$81 | sector number |
| D735 | 8D 91 02 | STA \$0291 | |
| D738 | A9 02 | LDA #\$02 | |
| D73A | 8D 92 02 | STA \$0292 | pointer to 2 |
| D73D | AD 92 02 | LDA \$0292 | |
| D740 | 20 C8 D4 | JSR \$D4C8 | set buffer pointer |
| D743 | 68 | PLA | |
| D744 | 8D 4A 02 | STA \$024A | file type |
| D747 | C9 04 | CMP #\$04 | rel-file? |
| D749 | D0 02 | BNE \$D74D | no |
| D74B | 09 80 | ORA #\$80 | set bit 7 |
| D74D | 20 F1 CF | JSR \$CFF1 | and write in buffer |
| D750 | 68 | PLA | |
| D751 | 8D 80 02 | STA \$0280 | following track |
| D754 | 20 F1 CF | JSR \$CFF1 | in buffer |
| D757 | 68 | PLA | |
| D758 | 8D 85 02 | STA \$0285 | following sector |
| D75B | 20 F1 CF | JSR \$CFF1 | in buffer |
| D75E | 20 93 DF | JSR \$DF93 | get buffer number |
| D761 | A8 | TAY | |
| D762 | AD 7A 02 | LDA \$027A | pointer to drive number |
| D765 | AA | TAX | |
| D766 | A9 10 | LDA #\$10 | 16. length of filename |
| D768 | 20 6E C6 | JSR SC66E | write filename in buffer |
| D76B | A0 10 | LDY #\$10 | |
| D76D | A9 00 | LDA #\$00 | |
| D76F | 91 94 | STA (\$94),Y | fill with zeroes at pos 16 |
| D771 | C8 | INY | |
| D772 | C0 1B | CPY #\$1B | position 27 already? |
| D774 | 90 F9 | BCC \$D76F | no |
| D776 | AD 4A 02 | LDA \$024A | file type |
| D779 | C9 04 | CMP #\$04 | rel-file |
| D77B | D0 13 | BNE \$D790 | no |
| D77D | A0 10 | LDY #\$10 | |
| D77F | AD 59 02 | LDA \$0259 | track |
| D782 | 91 94 | STA (\$94),Y | |
| D784 | C8 | INY | |
| D785 | AD 5A 02 | LDA \$025A | and sector |
| D788 | 91 94 | STA (\$94),Y | the side-sectors in dir entry |
| D78A | C8 | INY | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|-----------------------------------|
| D78B | AD 58 02 | LDA \$0258 | record length |
| D78E | 91 94 | STA (\$94),Y | in directory |
| D790 | 20 64 D4 | JSR \$D464 | write block |
| D793 | 68 | PLA | |
| D794 | 85 82 | STA \$82 | channel number |
| D796 | AA | TAX | |
| D797 | 68 | PLA | |
| D798 | 85 83 | STA \$83 | secondary address |
| D79A | AD 91 02 | LDA \$0291 | |
| D79D | 85 D8 | STA \$D8 | |
| D79F | 9D 60 02 | STA \$0260,X | |
| D7A2 | AD 92 02 | LDA \$0292 | |
| D7A5 | 85 DD | STA \$DD | |
| D7A7 | 9D 66 02 | STA \$0266,X | |
| D7AA | AD 4A 02 | LDA \$024A | file type |
| D7AD | 85 E7 | STA \$E7 | |
| D7AF | A5 7F | LDA \$7F | drive number |
| D7B1 | 85 E2 | STA \$E2 | |
| D7B3 | 60 | RTS | |
| ***** | | | |
| D7B4 | A5 83 | LDA \$83 | OPEN command, secondary adr <> 15 |
| D7B6 | 8D 4C 02 | STA \$024C | secondary address |
| D7B9 | 20 B3 C2 | JSR \$C283 | |
| D7BC | 8E 2A 02 | STX \$022A | get line length, erase flags |
| D7BF | AE 00 02 | LDX \$0200 | first character from buffer |
| D7C2 | AD 4C 02 | LDA \$024C | secondary address |
| D7C5 | D0 2C | BNE SD7F3 | not equal 0 (LOAD)? |
| D7C7 | E0 2A | CPX #\$2A | *** |
| D7C9 | D0 28 | PNE \$D7F3 | |
| D7CB | A5 7E | LDA \$7E | last track number |
| D7CD | F0 4D | BEO \$D81C | |
| D7CF | 85 80 | STA \$80 | track number |
| D7D1 | AD 6E 02 | LDA \$026E | last drive number |
| D7D4 | 85 7F | STA \$7F | drive number |
| D7D6 | 85 E2 | STA \$E2 | |
| D7D8 | A9 02 | LDA #\$02 | |
| D7DA | 85 E7 | STA \$E7 | set data type to program |
| D7DC | AD 6F 02 | LDA \$026F | last sector number |
| D7DF | 85 81 | STA \$81 | sector |
| D7E1 | 20 00 C1 | JSR \$C100 | turn LED on |
| D7E4 | 20 46 DC | JSR \$DC46 | allocate buffer, read block |
| D7E7 | A9 04 | LDA #\$04 | file type |
| D7E9 | 05 7F | ORA \$7F | drive number |
| D7EB | A6 82 | LDX \$82 | channel number |
| D7ED | 99 EC 00 | STA \$00EC,Y | set flag |
| D7F0 | 4C 94 C1 | JMP \$C194 | done |
| D7F3 | E0 24 | CPX #\$24 | '\$' |
| D7F5 | D0 1E | BNE SD815 | no |
| D7F7 | AD 4C 02 | LDA \$024C | secondary address |
| D7FA | D0 03 | BNF \$D7FF | not equal to zero? |
| D7FC | 4C 55 DA | JMP \$DA55 | OPEN \$ |
| D7FF | 20 D1 C1 | JSR \$C1D1 | analyze line to end |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|------------|----------------------------------|
| D802 | AD 85 FE | LDA \$FE85 | 18, directory track |
| D805 | 85 80 | STA \$80 | |
| D807 | A9 00 | LDA #\$00 | |
| D809 | 85 81 | STA \$81 | sector 0 |
| D80B | 20 46 DC | JSR \$DC46 | allocate buffer, read block |
| D80E | A5 7F | LDA \$7F | drive number |
| D810 | 09 02 | ORA #\$02 | |
| D812 | 4C EB D7 | JMP \$D7EB | continue as above |
| D815 | E0 23 | CPX #\$23 | '#' |
| D817 | D0 12 | BNE \$D82B | |
| D819 | 4C 84 CB | JMP \$CB84 | open direct access file |
| D81C | A9 02 | LDA #\$02 | |
| D81E | 8D 96 02 | STA \$0296 | file type program |
| D821 | A9 00 | LDA #\$00 | |
| D823 | 85 7F | STA \$7F | drive 0 |
| D825 | 8D 8E 02 | STA \$028E | |
| D828 | 20 42 D0 | JSR \$D042 | load BAM |
| D82B | 20 B5 C1 | JSR \$C1E5 | analyze line |
| D82E | D0 04 | BNE \$D834 | colon found? |
| D830 | A2 00 | LDX #\$00 | |
| D832 | F0 OC | BEQ \$D840 | |
| D834 | 8A | TXA | comma found? |
| D835 | F0 05 | REQ \$D83C | no |
| D837 | A9 30 | LDA #\$30 | |
| D839 | 4C C8 C1 | JMP \$C1C8 | 30, 'syntax error' |
| D83C | 88 | DEY | |
| D83D | F0 01 | BEQ \$D840 | |
| D83F | 88 | DEY | |
| D840 | 8C 7A 02 | STY \$027A | pointer to drive number |
| D843 | A9 8D | LDA #\$8D | shift CR |
| D845 | 20 68 C2 | JSR \$C268 | analyze line to end |
| D848 | E8 | INX | |
| D849 | 8E 78 02 | STX \$0278 | comma counter |
| D84C | 20 12 C3 | JSR \$C312 | get drive number |
| D84F | 20 CA C3 | JSR \$C3CA | check drive number |
| D852 | 20 9D C4 | JSR \$C49D | find file entry in directory |
| D855 | A2 00 | LDX #\$00 | default values |
| D857 | 8E 58 02 | STX \$0258 | record length |
| D85A | 8E 97 02 | STX \$0297 | |
| D85D | 8E 4A 02 | STX \$024A | file type |
| D860 | E8 | INX | |
| D861 | EC 77 02 | CPX \$0277 | comma before equal sign? |
| D864 | B0 10 | BCS \$D876 | no |
| D866 | 20 09 DA | JSR \$DA09 | get file type and control mode |
| D869 | E8 | INX | |
| D86A | EC 77 02 | CPX \$0277 | additional comma? |
| D86D | B0 07 | BCS \$D876 | no |
| D86F | C0 04 | CPY #\$04 | |
| D871 | F0 3E | BEQ \$D8B1 | |
| D873 | 20 09 DA | JSR \$DA09 | get file type and control method |
| D876 | AE 4C 02 | LDX \$024C | |
| D879 | 86 83 | STX \$83 | secondary address |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|-----------------------------------|
| D87B | E0 02 | CPX #\$02 | greater than 2? |
| D87D | B0 12 | BCS \$D891 | yes |
| D87F | 8E 97 02 | STX \$0297 | 0 or 1 (LOAD or SAVE) |
| D882 | A9 40 | LDA #\$40 | |
| D884 | 8D F9 02 | STA \$02F9 | |
| D887 | AD 4A 02 | LDA \$024A | file type |
| D88A | D0 1B | BNE \$D8A7 | not deleted |
| D88C | A9 02 | LDA #\$02 | PRG |
| D88E | 8D 4A 02 | STA \$024A | as file type |
| D891 | AD 4A 02 | LDA \$024A | |
| D894 | D0 11 | RNE \$D8A7 | |
| D896 | A5 E7 | LDA \$E7 | |
| D898 | 29 07 | AND #\$07 | get file type and command line |
| D89A | 8D 4A 02 | STA \$024A | |
| D89D | AD 80 02 | LDA \$0280 | track number |
| D8A0 | D0 05 | BNE \$D8A7 | not equal zero? |
| D8A2 | A9 01 | LDA #\$01 | |
| D8A4 | 8D 4A 02 | STA \$024A | file type sequential |
| D8A7 | AD 97 02 | LDA \$0297 | control method |
| DBAA | C9 01 | CMP #\$01 | 'W' |
| DBAC | F0 18 | BEQ \$D8C6 | yes |
| D8AE | 4C 40 D9 | JMP \$D940 | |
| D8B1 | BC 7A 02 | LDY \$027A,X | pointer behind second comma |
| D8B4 | B9 00 02 | LDA \$0200,Y | get value |
| D8B7 | 8D 5B 02 | STA \$025B | record length |
| D8BA | AD 80 02 | LDA \$0280 | track number |
| D8BD | D0 B7 | BNE \$D876 | |
| D8BF | A9 01 | LDA #\$01 | 'W' |
| D8C1 | 8D 97 02 | STA \$0297 | as control method |
| D8C4 | D0 B0 | BNE \$D876 | |
| D8C6 | A5 E7 | LDA \$E7 | file type |
| D8C8 | 29 80 | AND #\$80 | isolate wildcard flag |
| D8CA | AA | TAX | |
| D8CB | D0 14 | BNE \$D8E1 | wildcard in name |
| D8CD | A9 20 | LDA #\$20 | |
| D8CF | 24 E7 | BIT \$E7 | was file closed? |
| D8D1 | F0 06 | BEQ \$D8D9 | yes |
| D8D3 | 20 B6 C8 | JSR \$C8B6 | byte 0 in buffer and write block |
| D8D6 | 4C E3 D9 | JMP \$D9E3 | |
| D8D9 | A9 80 02 | LDA \$0280 | track number of the first block |
| D8DC | D0 03 | BNE \$D8E1 | already existing |
| D8DE | 4C E3 D9 | JMP \$D9E3 | |
| D8E1 | AD 00 02 | LDA \$0200 | first character from input buffer |
| D8E4 | C9 40 | CMP #\$40 | '@'? |
| D8E6 | F0 0D | BEQ \$D8F5 | yes |
| D8E8 | 8A | TXA | |
| D8E9 | D0 05 | BNE \$D8F0 | wildcard set? |
| D8EB | A9 63 | LDA #\$63 | |
| D8ED | 4C C8 C1 | JMP \$C1C8 | 63, 'file exists' |
| D8F0 | A9 33 | LDA #\$33 | |
| D8F2 | 4C C8 C1 | JMP \$C1C8 | 33, 'syntax error' |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|------------------------------------|
| D8F5 | A5 E7 | LDA \$E7 | open a file with overwriting |
| D8F7 | 29 07 | AND #\$07 | file type isolate |
| D8F9 | CD 4A 02 | CMP \$024A | |
| D8FC | D0 67 | BNE \$D965 | file type different? |
| D8FE | C9 04 | CMP #\$04 | rel-file? |
| D900 | F0 63 | BEO \$D965 | 64, 'file type mismatch' |
| D902 | 20 DA DC | JSR \$DCDA | |
| D905 | A5 82 | LDA \$82 | |
| D907 | 8D 70 02 | STA \$0270 | save channel number |
| D90A | A9 11 | LDA #\$11 | |
| D90C | 20 EB D0 | JSR \$DOEB | open read channel |
| D911 | AD 94 02 | LDA \$0294 | |
| D914 | 20 C8 D4 | JSR \$D4C8 | set buffer pointer for directory |
| D917 | A0 00 | LDY #\$00 | |
| D919 | B1 94 | LDA (\$94),Y | file type |
| D91B | 09 20 | ORA #\$20 | set bit 5, open file |
| D91D | 91 94 | STA (\$94),Y | |
| D91F | A0 1A | LDY #\$1A | |
| D921 | A5 80 | LDA \$80 | track |
| D923 | 91 94 | STA (\$94),Y | |
| D925 | C8 | INY | |
| D926 | A5 81 | LDA \$81 | and sector |
| D928 | 91 94 | STA (\$94),Y | for open with at-sign |
| D92A | AE 70 02 | LDX \$0270 | channel number |
| D92D | A5 D8 | LDA \$D8 | |
| D92F | 9D 60 02 | STA \$0260,X | pointer to directory block |
| D932 | A5 DD | LDA \$DD | |
| D934 | 9D 66 02 | STA \$0266,X | |
| D937 | 20 3B DE | JSR \$DE3B | get track and sector number |
| D93A | 20 64 D4 | JSR \$D464 | write block |
| D93D | 4C EF D9 | JMP \$D9EF | prepare trk, sector, and drive # |
| D940 | AD 80 02 | LDA \$0280 | |
| D943 | D0 05 | BNE \$D94A | first track number |
| D945 | A9 62 | LDA #\$62 | file not erased? |
| D947 | 4C C8 C1 | JMP \$C1C8 | |
| D94A | AD 97 02 | LDA \$0297 | 62, 'file not found' |
| D94D | C9 03 | CMP #\$03 | control mode |
| D94F | F0 0B | BEO \$D95C | 'M' |
| D951 | A9 20 | LDA #\$20 | yes, then no test of unclosed file |
| D953 | 24 E7 | BIT SE7 | bit 5 |
| D955 | F0 05 | BEO \$D95C | test in file type |
| D957 | A9 60 | LDA #\$60 | not set, ok |
| D959 | 4C C8 C1 | JMP \$C1C8 | 60, 'write file open' |
| D95C | A5 E7 | LDA \$E7 | |
| D95E | 29 07 | AND #\$07 | isolate file type |
| D960 | CD 4A 02 | CMP \$024A | |
| D963 | F0 05 | BEO \$D96A | |
| D965 | A9 64 | LDA #\$64 | |
| D967 | 4C C8 C1 | JMP \$C1C8 | 64, 'file type mismatch' |
| D96A | A0 00 | LDY #\$00 | |
| D96C | 8C 79 02 | STY \$0279 | |
| D96F | AE 97 02 | LDX \$0297 | control mode |
| D972 | E0 02 | CPX #\$02 | 'A', append |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|-----------------------------|
| D974 | D0 1A | BNE \$D990 | no |
| D976 | C9 04 | CMP #\$04 | rel-file? |
| D978 | F0 EB | BEQ SD965 | |
| D97A | B1 94 | LDA (\$94),Y | |
| D97C | 29 4F | AND #\$4F | |
| D97E | 91 94 | STA (\$94),Y | |
| D980 | A5 83 | LDA \$83 | |
| D982 | 48 | PHA | |
| D983 | A9 11 | LDA #\$11 | |
| D985 | 85 83 | STA \$83 | channel 17 |
| D987 | 20 3B DE | JSR \$DE3B | get track and sector number |
| D98A | 20 64 D4 | JSR \$D464 | write block |
| D98D | 68 | PLA | |
| D98E | 85 83 | STA \$83 | get channel # back |
| D990 | 20 A0 D9 | JSR \$D9A0 | |
| D993 | AD 97 02 | LDA \$0297 | control mode |
| D996 | C9 02 | CMP #\$02 | |
| D998 | D0 55 | BNE \$D9EF | |
| D99A | 20 2A DA | JSR \$DA2A | |
| D99D | 4C 94 C1 | JMP SC194 | done |
| D9A0 | A0 13 | LDA #\$13 | |
| D9A2 | B1 94 | LDA (\$94),Y | track |
| D9A4 | 8D 59 02 | STA \$0259 | |
| D9A7 | C8 | INY | |
| D9A8 | B1 94 | LDA (\$94),Y | |
| D9AA | 8D 5A 02 | STA \$025A | |
| D9AD | C8 | INY | |
| D9AE | B1 94 | LDA (\$94),Y | record length |
| D9B0 | AE 58 02 | LDX \$0258 | last record len |
| D9B3 | 8D 58 02 | STA \$0258 | |
| D9B6 | 8A | TXA | |
| D9B7 | F0 0A | BEO SD9C3 | |
| D9B9 | CD 58 02 | CMP #\$0258 | |
| D9BC | F0 05 | BEO SD9C3 | |
| D9BE | A9 50 | LDA #\$50 | |
| D9C0 | 20 C8 C1 | JSR \$C1C8 | 50, 'record not present' |
| D9C3 | AE 79 02 | LDX \$0279 | |
| D9C6 | BD 80 02 | LDA \$0280,X | |
| D9C9 | 85 80 | STA \$80 | track |
| D9CB | BD 85 02 | LDA \$0285,X | |
| D9CE | 85 81 | STA \$81 | sector |
| D9D0 | 20 46 DC | JSR \$DC46 | |
| D9D3 | A4 82 | LDY \$82 | |
| D9D5 | AE 79 02 | LDX \$0279 | |
| D9D8 | B5 D8 | LDA \$D8,X | |
| D9DA | 99 60 02 | STA \$0260,Y | |
| D9DD | B5 DD | LDA \$DD,X | |
| D9DF | 99 66 02 | STA \$0266,Y | |
| D9E2 | 60 | RTS | |
| D9E3 | A5 E2 | LDA \$E2 | drive # |
| D9E5 | 29 01 | AND #\$01 | |
| D9F7 | 85 7F | STA \$7F | |
| D9E9 | 20 DA DC | JSR \$DCDA | |

Anatomy of the 1541 Disk Drive

| | | | | |
|------|----|----|----|------------|
| D9EC | 20 | E4 | D6 | JSR \$D6E4 |
| D9EF | A5 | 83 | | LDA \$83 |
| D9F1 | C9 | 02 | | CMP #\$02 |
| D9F3 | B0 | 11 | | BCS \$DA06 |
| D9F5 | 20 | 3E | DE | JSR \$DE3E |
| D9F8 | A5 | 80 | | LDA \$80 |
| D9FA | 85 | 7E | | STA \$7E |
| D9FC | A5 | 7F | | LDA \$7F |
| D9FE | 8D | 6E | 02 | STA \$026E |
| DA01 | A5 | 81 | | LDA \$81 |
| DA03 | 8D | 6F | 02 | STA \$026F |
| DA06 | 4C | 99 | C1 | JMP SC199 |

channel #

| | | | | |
|-------|----|----|----|----------------------------------|
| ***** | | | | check file type and control mode |
| DA09 | BC | 7A | 02 | LDY \$027A,X |
| DA0C | B9 | 00 | 02 | LDA \$2000,Y |
| DA0F | A0 | 04 | | LDY #\$04 |
| DA11 | 88 | | | DEY |
| DA12 | 30 | 08 | | BMI \$DA1C |
| DA14 | D9 | B2 | FE | CMP \$FEB2,Y |
| DA17 | D0 | F8 | | BNE \$DA11 |
| DA19 | 8C | 97 | 02 | STY \$0297 |
| DA1C | A0 | 05 | | LDY #\$05 |
| DA1E | 88 | | | DEY |
| DA1F | 30 | 08 | | BMI \$DA29 |
| DA21 | D9 | B6 | FE | CMP \$FEB6,Y |
| DA24 | D0 | F8 | | BNE \$DA1E |
| DA26 | 8C | 4A | 02 | STY \$024A |
| DA29 | 60 | | | RTS |

pointer in command line
get characters from line

control modes 'R', 'W', 'A', 'M'

save

| | | | | |
|-------|----|----|----|------------------------|
| ***** | | | | preparation for Append |
| DA2A | 20 | 39 | CA | JSR SCA39 |
| DA2D | A9 | 80 | | LDA #\$80 |
| DA2F | 20 | A6 | DD | JSR \$DDA6 |
| DA32 | F0 | F6 | | BEQ \$DA 2A |
| DA34 | 20 | 95 | DE | JSR \$DE95 |
| DA37 | A6 | 81 | | LDX \$81 |
| DA39 | E8 | | | INX |
| DA3A | 8A | | | TXA |
| DA3B | D0 | 05 | | BNE \$DA42 |
| DA3D | 20 | A3 | D1 | JSR \$D1A3 |
| DA40 | A9 | 02 | | LDA #\$02 |
| DA42 | 20 | C8 | D4 | JSR \$D4C8 |
| DA45 | A6 | 82 | | LDX \$82 |
| DA47 | A9 | 01 | | LDA #\$01 |
| DA49 | 95 | F2 | | STA \$F2,X |
| DA4B | A9 | 80 | | LDA #\$80 |
| DA4D | 05 | 82 | | ORA \$82 |
| DA4F | A6 | 83 | | LDX \$83 |
| DA51 | 9D | 2B | 02 | STA \$022B,X |
| DA54 | 60 | | | RTS |

open channel to read, get byte

last byte?

no

get track and sector number
sector number

not \$FF?

close buffer, write block

buffer pointer to 2
channel number

set flag for WRITE

channel number in table

| | | | | |
|-------|--|--|--|-----------|
| ***** | | | | OPEN "\$" |
|-------|--|--|--|-----------|

| | | | | |
|------|----|----|----|------------|
| DA55 | A9 | 0C | | LDA #\$0C |
| DA57 | 8D | 2A | 02 | STA \$022A |

command number 12

| | | | |
|------|----------|------------|----------------------------------|
| DA5A | A9 00 | LDA #\$00 | |
| DA5C | AE 74 02 | LDX \$0274 | |
| DA5F | CA | DEX | |
| DA60 | F0 0B | BEO \$DA6D | |
| DA62 | CA | DEX | |
| DA63 | D0 21 | BNE \$DA86 | |
| DA65 | AD 01 02 | LDA \$0201 | second character |
| DA68 | 20 BD C3 | JSR \$C3BD | get drive number |
| DA6B | 30 19 | BMI \$DA86 | not a plain number? |
| DA6D | 85 E2 | STA \$E2 | |
| DA6F | EE 77 02 | INC \$0277 | |
| DA72 | EE 78 02 | INC \$0278 | |
| DA75 | EE 7A 02 | INC \$027A | |
| DA78 | A9 80 | LDA #\$80 | |
| DA7A | 85 E7 | STA \$E7 | set wildcard flag |
| DA7C | A9 2A | LDA #\$2A | ** |
| DA7E | 8D 00 02 | STA \$0200 | as file name in command buffer |
| DA81 | 8D 01 02 | STA \$0201 | |
| DA84 | D0 18 | BNE \$DA9E | absolute jump |
| DA86 | 20 E5 C1 | JSR \$C1E5 | test input line to ':' |
| DA89 | D0 05 | RNE \$DA90 | found? |
| DA8B | 20 DC C2 | JSR \$C2DC | erase flags |
| DA8E | A0 03 | LDY #\$03 | |
| DA90 | 88 | DEY | |
| DA91 | 88 | DEY | |
| DA92 | 8C 7A 02 | STY \$027A | pointer to drive no. in command |
| DA95 | 20 00 C2 | JSR \$C200 | analyze line |
| DA98 | 20 98 C3 | JSR \$C398 | ascertain file type |
| DA9B | 20 20 C3 | JSR \$C320 | get drive number |
| DA9E | 20 CA C3 | JSR \$C3CA | initialize drive if necessary |
| DAA1 | 20 B7 C7 | JSR \$C7B7 | prepare disk title |
| DAA4 | 20 9D C4 | JSR \$C49D | load directory |
| DAA7 | 20 9E EC | JSR \$EC9E | create and prepare directory |
| DAAA | 20 37 D1 | JSR \$D137 | get byte from buffer |
| DAAD | A6 82 | LDX \$82 | channel number |
| DAAF | 9D 3E 02 | STA \$023E | byte in output register |
| DAB2 | A4 7F | LDA \$7F | drive number |
| DAB4 | 8D 8E 02 | STA \$028E | save as last drive number |
| DAB7 | 09 04 | ORA #\$04 | |
| DAB9 | 95 EC | STA \$EC,X | PRG-flag |
| DABB | A9 00 | LDA #\$00 | |
| DABD | 85 A3 | STA \$A3 | set pointer back in input buffer |
| DABF | 60 | RTS | |

CLOSE-routine

| | | | |
|------|----------|------------|---------------------------------|
| DAC0 | A9 00 | LDA #\$00 | |
| DAC2 | 8D F9 02 | STA \$02F9 | |
| DAC5 | A5 83 | LDA \$83 | secondary address |
| DAC7 | D0 08 | BNE \$DAD4 | not zero? |
| DAC9 | A9 00 | LDA #\$00 | secondary address 0, LOAD |
| DACB | 8D 54 02 | STA \$0254 | |
| DACE | 20 27 D2 | JSR \$D227 | close channel |
| DAD1 | 4C DA D4 | JMP \$D4DA | close internal channels 17 & 18 |
| DAD4 | C9 0F | CMP #\$0F | 15 |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|--------------------------------|
| DAD6 | F0 14 | BEQ \$DAEC | yes, close all channels |
| DAD8 | 20 02 DB | JSR \$DB02 | close file |
| DADB | A5 83 | LDA \$83 | secondary address |
| DADD | C9 02 | CMP #\$02 | |
| DADF | 90 F0 | BCC \$DAD1 | smaller than 2? |
| DAE1 | AD 6C 02 | LDA \$026C | |
| DAE4 | D0 03 | BNE \$DAE9 | |
| DAE6 | 4C 94 C1 | JMP \$C194 | termination |
| DAE9 | 4C AD C1 | JMP \$C1AD | |
| DAEC | A9 0E | LDA #\$0E | 14 |
| DAEE | 85 83 | STA \$83 | secondary address |
| DAF0 | 20 02 DB | JSR \$DB02 | close file |
| DAF3 | C6 83 | DEC \$83 | next secondary address |
| DAF5 | 10 F9 | BPL \$DAF0 | |
| DAF7 | AD 6C 02 | LDA \$026C | |
| DAFA | D0 03 | BNE \$DAFF | |
| DAFC | 4C 94 C1 | JMP \$C194 | termination |
| DAFF | 4C AD C1 | JMP \$C1AD | |
| ***** | | | |
| DB02 | A6 83 | LDX \$83 | close file |
| DB04 | BD 2B 02 | LDA \$022B,X | secondary address |
| DB07 | C9 FF | CMP #\$FF | get channel number |
| DB09 | D0 01 | BNE \$DB0C | no channel associated? |
| DB0B | 60 | RTS | no, then done |
| DB0C | 29 0F | AND #\$0F | isolate channel number |
| DB0E | 85 82 | STA \$82 | |
| DB10 | 20 25 D1 | JSR \$D125 | check data type |
| DB13 | C9 07 | CMP #\$07 | direct access? |
| DB15 | F0 0F | BEQ \$DB26 | yes |
| DB17 | C9 04 | CMP #\$04 | rel-file? |
| DB19 | F0 11 | BEO \$DB2C | yes |
| DB1B | 20 07 D1 | JSR \$D107 | channel for writing open |
| DB1E | B0 09 | BCS \$DB29 | no file for writing? |
| DB20 | 20 62 DB | JSR \$DB62 | write last block |
| DB23 | 20 A5 DB | JSR \$DBA5 | write entry in dir and block |
| DB26 | 20 F4 EE | JSR \$EEF4 | write BAM |
| DB29 | 4C 27 D2 | JMP \$D227 | close channel |
| DR2C | 20 F1 DD | JSR \$DDF1 | get buffer number, write block |
| DB2F | 20 1E CF | JSR \$CF1E | change buffer |
| DB32 | 20 CB E1 | JSR \$E1CB | get last side-sector |
| DB35 | A6 D5 | LDX \$D5 | side-sector number |
| DB37 | 86 73 | STX \$73 | |
| DB39 | E6 73 | INC \$73 | |
| DB3B | A9 00 | LDA #\$00 | |
| DB3D | 85 70 | STA \$70 | |
| DR3F | 85 71 | | |
| DB41 | A5 D6 | LDA \$D6 | |
| DB43 | 38 | SEC | |
| DB44 | E9 0E | SBC #\$0E | minus 14 for pointer |
| CB46 | 85 72 | STA \$72 | |
| DB48 | 20 51 DF | JSR \$DF51 | calculate block number of file |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|------------|--------------------|
| DB4B | A6 82 | LDX \$82 | channel number |
| DB4D | A5 70 | LDA \$70 | |
| DB4F | 95 B5 | STA \$B5,X | record number lo |
| DB51 | A5 71 | LDA \$71 | |
| DB53 | 95 BB | STA \$BB,X | record number hi |
| DB55 | A9 40 | LDA #\$40 | |
| DB57 | 20 A6 DD | JSR \$DDA6 | bit 6 set? |
| DB5A | F0 03 | BEO \$DB5F | no |
| DB5C | 20 A5 DB | JSR \$DBA5 | enter in directory |
| DB5F | AC 27 D2 | JMP \$D227 | close channel |

| | | | |
|------|----------|------------|---------------------------|
| DB62 | A6 82 | LDX \$82 | write last block |
| DB64 | B5 B5 | LDA \$B5,X | channel number |
| DB66 | 15 BB | ORA \$BB,X | record number lo |
| DB68 | D0 OC | BNE \$DB76 | record number hi |
| DB6A | 20 E8 D4 | JSR \$D4E8 | not zero? |
| DB6D | C9 02 | CMP #\$02 | set buffer pointer |
| DB6F | D0 05 | BNE \$DB76 | |
| DB71 | A9 0D | LDA #\$0D | not 2 |
| DB73 | 20 F1 CF | JSR SCFF1 | CR |
| DB76 | 20 E8 D4 | JSR \$D4E8 | in buffer |
| DB79 | C9 02 | CMP #\$02 | set buffer pointer |
| DB7B | D0 0F | BNE \$DB8C | now equal to 2? |
| DB7D | 20 1E CF | JSR \$CF1E | no |
| DB80 | A6 82 | LDX \$82 | change buffer |
| DB82 | B5 B5 | LDA \$B5,X | channel number |
| DB84 | D0 02 | BNE \$DB88 | record number lo |
| DB86 | D6 BB | DEC \$BB,X | |
| DB88 | D6 B5 | DEC \$B5,X | decrement block number hi |
| DB8A | A9 00 | LDA #\$00 | and block number lo |

| | | | |
|------|----------|------------|------------------------------|
| DB8C | 38 | SEC | |
| DB8D | E9 01 | SBC #\$01 | and |
| DB8F | 48 | PHA | set pointer to end |
| DB90 | A9 00 | LDA #\$00 | |
| DB92 | 20 C8 D4 | JSR \$D4C8 | buffer pointer to zero |
| DB95 | 20 F1 CF | JSR SCFF1 | write zero in buffer |
| DB98 | 68 | PLA | second byte = pointer to end |
| DB99 | 20 F1 CF | JSR SCFF1 | write in buffer |
| DB9C | 20 C7 D0 | JSR SD0C7 | write block to disk |
| DB9F | 20 99 D5 | JSR \$D599 | and verify |
| DBA2 | 4C 1E CF | JMP \$CF1E | change buffer |

| | | | |
|------|----------|--------------|----------------------------|
| DBA5 | A6 82 | LDX \$82 | directory entry |
| DBA7 | 8E 70 02 | STX \$0270 | channel number |
| DBAA | A5 83 | LDA \$83 | save |
| DBAC | 48 | PHA | secondary address |
| DBAD | BD 60 02 | LDA \$0260,X | save |
| DBB0 | 85 81 | STI \$81 | sector number in directory |
| DBB2 | BD 66 02 | LDA \$0266,X | set |
| DBB5 | 8D 94 02 | STA \$0294 | pointer in directory |
| DBB8 | B5 EC | LDA \$EC,X | |
| DBBA | 29 01 | AND #\$01 | |
| DBBC | 85 7F | STA \$7F | drive number |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|--|
| DBBE | AD 85 FE | LDA \$FE85 | 18, directory track |
| DBC1 | 85 80 | STA \$80 | set |
| DBC3 | 20 93 DF | JSR \$DF93 | increment buffer number |
| DBC6 | 48 | PHA | |
| DBC7 | 85 F9 | STA \$F9 | |
| DBC9 | 20 60 D4 | JSR \$D460 | read directory block |
| DBCC | A0 00 | LDY #\$00 | |
| DBCE | BD E0 FE | LDA \$FEEO,X | buffer address |
| DBD1 | 85 87 | STA \$87 | |
| DBD3 | AD 94 02 | LDA \$0294 | buffer pointer |
| DRD6 | 85 86 | STA \$86 | |
| DBD8 | B1 86 | LDA (\$86),Y | file type |
| DBDA | 29 20 | AND #\$20 | file closed? |
| DBDC | F0 43 | BEQ \$DC21 | yes |
| DBDE | 20 25 D1 | JSR \$D125 | check file type |
| DBE1 | C9 04 | CMP #\$04 | rel-file? |
| DBE3 | F0 44 | BEQ \$DC29 | yes |
| DBE5 | B1 86 | LDA (\$86),Y | |
| DBE7 | 29 8F | AND #\$8F | erase bits 4,5, and 6 |
| DBE9 | 91 86 | STA (\$86),Y | in file type |
| DBEB | C8 | INY | |
| DBEC | B1 86 | LDA (\$86),Y | track number |
| DBEE | 85 80 | STA \$80 | |
| DBF0 | 84 71 | STY \$71 | |
| DBF2 | A0 1B | LDY #\$1B | |
| DBF4 | B1 86 | LDA (\$86),Y | sector # of the file for overwriting |
| DBF6 | 48 | PHA | |
| DBF7 | 88 | DEY | |
| DBF8 | B1 86 | LDA (\$86),Y | track # for overwriting |
| DBFA | D0 0A | BNE \$DC06 | set? |
| DBFC | 85 80 | STA \$80 | set track number |
| DBFE | 68 | PLA | |
| DBFF | 85 81 | STA \$81 | sector number |
| DC01 | A9 67 | LDA #\$67 | |
| DC03 | 20 45 E6 | JSR \$E645 | 67, 'illegal track or sector' |
| DC06 | 48 | PHA | |
| DC07 | A9 00 | LDA #\$00 | |
| DC09 | 91 86 | STA (\$86),Y | erase track number |
| DC0B | C8 | INY | |
| DC0C | 91 86 | STA (\$86),Y | and sector number of the substitute file |
| DC0E | 68 | PLA | |
| DC0F | A4 71 | LDY \$71 | |
| DC11 | 91 86 | STA (\$86),Y | |
| DC13 | C8 | INY | set track & sec # of the new file |
| DC14 | B1 86 | LDA (\$86),Y | |
| DC16 | 85 81 | STA \$81 | |
| DC18 | 68 | PLA | |
| DC19 | 91 86 | STA (\$86),Y | |
| DC1B | 20 7D C8 | JSR \$C87D | erase all files |
| DC1E | 4C 29 DC | JMP \$DC29 | |
| DC21 | B1 86 | LDA (\$86),Y | get file type |
| DC23 | 29 0F | AND #\$0F | isolate bits 0-3 |
| DC25 | 09 80 | ORA #\$80 | set bit 7 for closed file |
| DC27 | 91 86 | STA (\$86),Y | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|-----------------------------------|
| DC29 | AE 70 02 | LDX \$0270 | channel number |
| DC2C | A0 1C | LDY #\$1C | |
| DC2E | B5 B5 | LDA \$B5,X | block number lo |
| DC30 | 91 86 | STA (\$86),Y | in directory entry |
| DC32 | C8 | INY | |
| DC33 | B5 BB | LDA \$BB,Y | and block number hi |
| DC35 | 91 86 | STA (\$86),Y | write |
| DC37 | 68 | PLA | buffer number |
| DC38 | AA | TAX | |
| DC39 | A9 90 | LDA #\$90 | code for 'writing' |
| DC3B | 20 90 D5 | JSR \$D590 | write block |
| DC40 | 68 | PLA | |
| DC41 | 85 83 | STA \$83 | secondary address |
| DC43 | 4C 07 D1 | JMP \$D107 | open channel for writing |
| ***** | | | |
| | | | read block, layout buffer |
| DC46 | A9 01 | LDA #\$01 | |
| DC48 | 20 E2 D1 | JSR \$D1E2 | find channel and buffer for read |
| DC4B | 20 B6 DC | JSR \$DCB6 | set pointer |
| DC4E | AD 4A 02 | LDA \$024A | file type |
| DC51 | 48 | PHA | save |
| DC52 | 0A | ASL A | |
| DC53 | 05 7F | ORA \$7F | drive number |
| DC55 | 95 EC | STA \$EC,X | |
| DC57 | 20 9B D0 | JSR \$D09B | read block in buffer |
| DC5A | A6 82 | LDX \$82 | channel number |
| DC5C | A5 80 | LDA \$80 | track |
| DC5E | D0 05 | BNE \$DC65 | following track? |
| DC60 | A5 81 | LDA \$81 | sector |
| DC62 | 9D 44 02 | STA \$0244,X | as end pointer |
| DC65 | 68 | PLA | file type |
| DC66 | C9 04 | CMP #\$04 | rel-file? |
| DC68 | D0 3F | BNE \$DCA9 | no |
| DC6A | A4 83 | LDA \$83 | secondary address |
| DC6C | B9 2B 02 | LDA \$022B,Y | channel number |
| DC6F | 09 40 | ORA #\$40 | |
| DC71 | 99 2B 02 | STA \$022B,Y | set flag for READ and WRITE |
| DC74 | AD 58 02 | LDA \$0258 | record length |
| DC77 | 95 C7 | STA \$C7,X | |
| DC79 | 20 8E D2 | JSR \$D28E | find buffer for side-sector |
| DC7C | 10 03 | BPL \$DC81 | found? |
| DC7E | 4C 0F D2 | JMP \$D20F | 70, 'no channel' |
| ***** | | | |
| DC81 | A6 82 | LDX \$82 | channel number |
| DC83 | 95 CD | STA \$CD,X | |
| DC85 | AC 59 02 | LDY \$0259 | |
| DC88 | 84 80 | STY \$80 | track for side-sector |
| DC8A | AC 5A 02 | LDA \$025A | |
| DC8D | 84 81 | STY \$81 | sector for side-sector |
| DC8F | 20 D3 D6 | JSR \$D6D3 | transmit parameters to disk cont. |
| DC92 | 20 73 DE | JSR \$DE73 | read block |
| DC95 | 20 99 D5 | JSR \$D599 | and verify |
| DC98 | A6 82 | LDX \$82 | channel number |
| DC9A | A9 02 | LDA #\$02 | |
| DC9C | 95 C1 | STA \$C1,X | pointer for writing |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|-----------------------------|
| DC9E | A9 00 | LDA #\$00 | |
| DCA0 | 20 C8 D4 | JSR \$D4C8 | buffer pointer to zero |
| DCA3 | 20 53 E1 | JSR \$E153 | find next record |
| DCA6 | 4C 3E DE | JMP \$DE3E | get track and sector number |
| DCA9 | 20 56 D1 | JSR \$D156 | get byte from buffer |
| DCAC | A6 82 | LDX \$82 | channel number |
| DCAE | 9D 3E 02 | STA \$023E,X | byte in output register |
| DCB1 | A9 88 | LDA #\$88 | set flag for READ |
| DCB3 | 95 F2 | STA \$F2,X | |
| DCB5 | 60 | RTS | |

| | | | |
|-------|----------|--------------|-------------------|
| ***** | | | reset pointer |
| DCB6 | A6 82 | LDX \$82 | channel number |
| DCB8 | B5 A7 | LDA \$A7,X | buffer number |
| DCBA | 0A | ASL A | times 2 |
| DCBB | A8 | TAY | |
| DCBC | A9 02 | LDA #\$02 | |
| DCBE | 99 99 00 | STA \$0099,Y | buffer pointer lo |
| DCC1 | B5 AE | LDA \$AE,X | |
| DCC3 | 09 80 | ORA #\$80 | set bit 7 |
| DCC5 | 95 AE | STA \$AE,X | |
| DCC7 | 0A | ASL A | |
| DCC8 | A8 | TAY | |
| DCC9 | A9 02 | LDA #\$02 | |
| DCCB | 99 99 00 | STA \$0099,Y | buffer pointer lo |
| DCCE | A9 00 | LDA #\$00 | |
| DCD0 | 95 B5 | STA \$B5,X | block number lo |
| DCD2 | 95 BB | STA \$BB,X | block number hi |
| DCD4 | A9 00 | LDA #\$00 | |
| DCD6 | 9D 44 02 | STA \$0244,X | end pointer |
| DCD9 | 60 | RTS | |

| | | | |
|-------|----------|--------------|-----------------------------------|
| ***** | | | construct a new block |
| DCDA | 20 A9 F1 | JSR \$F1A9 | find free sector in BAM |
| DCDD | A9 01 | LDA #\$01 | |
| DCDF | 20 DF D1 | JSR \$D1DF | open channel |
| DCE2 | 20 D0 D6 | JSR \$D6D0 | transmit param to disk controller |
| DCE5 | 20 B6 DC | JSR \$DCB6 | reset pointer |
| DCE8 | A6 82 | LDX \$82 | channel number |
| DCEA | AD 4A 02 | LDA \$024A | file type |
| DCED | 48 | PHA | |
| DCEE | 0A | ASL A | |
| DCEF | 05 7F | ORA \$7F | drive number |
| DCF1 | 95 EC | STA \$EC,X | save as flag |
| DCF3 | 68 | PLA | |
| DCF4 | C9 04 | CMP #\$04 | rel-file? |
| DCF6 | F0 05 | BEQ \$DCFD | yes |
| DCF8 | A9 01 | LDA #\$01 | |
| DCFA | 95 F2 | STA \$F2,X | set WRITE flag |
| DCFC | 60 | RTS | |
| DCFD | A4 83 | LDY \$83 | secondary address |
| DCFF | B9 2B 02 | LDA \$022B,Y | channel number in table |
| DD02 | 29 3F | AND #\$3F | erase the top two bits |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|-----------------------------------|
| DD04 | 09 40 | ORA #\$40 | set bit 6 |
| DD06 | 99 2B 02 | STA \$022B,Y | READ and WRITE flag |
| DD09 | AD 58 02 | LDA \$0258 | record length |
| DD0C | 95 C7 | STA \$C7,X | in table |
| DD0E | 20 8E D2 | JSR \$D28E | find buffer |
| DD11 | 10 03 | BPL \$DD16 | found? |
| DD13 | 4C 0F D2 | JMP \$D20F | 70, 'no channel' |
| DD16 | A6 82 | LDX \$82 | channel number |
| DD18 | 95 CD | STA \$CD,X | buffer number for side-sector |
| DD1A | 20 C1 DE | JSR \$DEC1 | erase buffer |
| DD1D | 20 1E F1 | JSR \$F11E | find free block in BAM |
| DD20 | A5 80 | LDA \$80 | track |
| DD22 | 8D 59 02 | STA \$0259 | for side-sector |
| DD25 | A5 81 | LDA \$81 | sector |
| DD27 | 8D 5A 02 | STA \$025A | for side-sector |
| DD2A | A6 82 | LDX \$82 | channel number |
| DD2C | B5 CD | LDA \$CD,X | buffer number |
| DD2E | 20 D3 D6 | JSR \$D6D3 | transmit param to disk controller |
| DD31 | A9 00 | LDA #\$00 | |
| DD33 | 20 E9 DE | JSR \$DEE9 | buffer pointer to zero |
| DD36 | A9 00 | LDA #\$00 | |
| DD38 | 20 8D DD | JSR \$DD8D | |
| DD3B | A9 11 | LDA #\$11 | 17 |
| DD3D | 20 8D DD | JSR \$DD8D | as end pointer in buffer |
| DD40 | A9 00 | LDA #\$00 | zero |
| DD42 | 20 8D DD | JSR \$DD8D | as side-sector number in buffer |
| DD45 | AD 58 02 | LDA \$0258 | record length |
| DD48 | 20 8D DD | JSR \$DD8D | in buffer |
| DD4B | A5 80 | LDA \$80 | track number of this block |
| DD4D | 20 8D DD | JSR \$DD8D | in buffer |
| DD50 | A5 81 | LDA \$81 | sector number |
| DD52 | 20 8D DD | JSR \$DD8D | in buffer |
| DD55 | A9 10 | LDA #\$10 | 16 |
| DD57 | 20 E9 DE | JSR \$DEE9 | buffer pointer to 16 |
| DD5A | 20 3E DE | JSR \$DE3E | get track and sector number |
| DD5D | A5 80 | LDA \$80 | track # of the first data block |
| DD5F | 20 8D DD | JSR \$DD8D | in buffer |
| DD62 | A5 81 | LDA \$81 | sector # of the first data block |
| DD64 | 20 8D DD | JSR \$DD8D | in buffer |
| DD67 | 20 6C DE | JSR \$DE6C | write block to disk |
| DD6A | 20 99 D5 | JSR \$D599 | and check |
| DD6D | A9 02 | LDA #\$02 | |
| DD6F | 20 C8 D4 | JSR \$D4C8 | buffer pointer to 2 |
| DD72 | A6 82 | LDX \$82 | channel number |
| DD74 | 38 | SEC | |
| DD75 | A9 00 | LDA #\$00 | |
| DD77 | F5 C7 | SBC \$C7,X | record length |
| DD79 | 95 C1 | STA \$C1,X | pointer for writing |
| DD7B | 20 E2 E2 | JSR \$E2E2 | erase buffer |
| DD7E | 20 19 DE | JSR \$DE19 | write link bytes in buffer |
| DD81 | 20 5E DE | JSR \$DE5E | write block to disk |
| DD84 | 20 99 D5 | JSR \$D599 | and check |
| DD87 | 20 F4 FE | JSR \$EEF4 | write BAM |
| DD8A | 4C 98 DC | JMP \$DC98 | and done |

Anatomy of the 1541 Disk Drive

| | | | |
|--|----------|--------------|---------------------------------|
| DD8D | 48 | PHA | write byte in side-sector block |
| DD8E | A6 82 | LDX \$82 | save byte |
| DD90 | B5 CD | LDA \$CD,X | channel number |
| DD92 | 4C FD CF | JMP SCFFD | buffer # of the side-sector |
| ***** | | | |
| ***** manipulate flags ***** | | | |
| DD95 | 90 06 | BCC \$DD9D | |
| DD97 | A6 82 | LDX \$82 | channel number |
| DD99 | 15 EC | ORA \$EC,X | set flag |
| DD9B | D0 06 | BNE \$DDA3 | |
| DD9D | A6 82 | LDX \$82 | channel number |
| DD9F | 49 FF | EOR #\$FF | |
| DDA1 | 35 EC | AND \$EC,X | erase flag |
| DDA3 | 95 EC | STA \$EC,X | |
| DDA5 | 60 | RTS | |
| DDA6 | A6 82 | LDX \$82 | channel number |
| DDA8 | 35 EC | AND \$EC,X | test flag |
| DDAA | 60 | RTS | |
| ***** | | | |
| ***** check command code for writing ***** | | | |
| DDAB | 20 93 DF | JSR \$DF93 | get buffer number |
| DDAE | AA | TAX | |
| DDAF | BD 5B 02 | LDA \$025B,X | |
| DDB2 | 29 F0 | AND #\$F0 | isolate command code |
| DDB4 | C9 90 | CMP #\$90 | code for writing? |
| DDB6 | 60 | RTS | |
| ***** | | | |
| DDB7 | A2 00 | LDX #\$00 | |
| DDB9 | 86 71 | STX \$71 | counter for secondary address |
| DDBB | BD 2B 02 | LDA \$022B,X | get channel number from table |
| DBBE | C9 FF | CMP #\$FF | |
| DDC0 | D0 08 | BNE \$DDCA | file open? |
| DDC2 | A6 71 | LDX \$71 | |
| DDC4 | E8 | INX | increment counter |
| DDC5 | E0 10 | CPX #\$10 | smaller than 16? |
| DDC7 | 90 F0 | BCC \$DDB9 | |
| DDC9 | 60 | RTS | |
| ***** | | | |
| DDCA | 86 71 | STX \$71 | |
| DDCC | 29 3F | AND #\$3F | isolate channel number |
| DDCE | A8 | TAY | |
| DDCF | B9 EC 00 | LDA \$00EC,Y | |
| DDD2 | 29 01 | AND #\$01 | isolate drive number |
| DDD4 | 85 70 | STA \$70 | |
| DDD6 | AE 53 02 | LDX \$0253 | |
| DDD9 | B5 F2 | LDA \$E2,X | |
| DDDB | 29 01 | AND #\$01 | isolate drive number |
| DDDD | C5 70 | CMP \$70 | same drive? |
| DDDF | D0 E1 | BNE \$DDC2 | no |
| DDE1 | B9 60 02 | LDA \$0260,Y | sector number in directory |
| DDE4 | D5 D8 | CMP \$D8,X | same as file? |
| DDE6 | D0 DA | BNE \$DDC2 | no |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|----------------------------------|
| DDE8 | B9 66 02 | LDA \$0266,Y | |
| DDEB | D5 DD | CMP \$DD,X | pointer same? |
| DDED | D0 D3 | BNE \$DDC2 | no |
| DDEF | 18 | CLC | |
| DDFO | 60 | RTS | |
| ***** | | | |
| DDF1 | 20 9E DF | JSR \$DF9E | write a block of a rel-file |
| DDF4 | 50 06 | BVC \$DDFC | get buffer number |
| DDF6 | 20 5E DE | JSR \$DE5E | no rel-file? |
| DDF9 | 20 99 D5 | JSR \$D599 | write block |
| DDFC | 60 | RTS | and verify |
| ***** | | | |
| DDFD | 20 2B DE | JSR \$DE2B | write bytes for following track |
| DE00 | A5 80 | LDA \$80 | set buffer pointer |
| DE02 | 91 94 | STA (\$94),Y | track number |
| DE04 | C8 | INY | in buffer |
| DE05 | A5 81 | LDA \$81 | sector number |
| DE07 | 91 94 | STA (\$94),Y | in buffer |
| DE09 | 4C 05 E1 | JMP \$E105 | set rel-flag |
| ***** | | | |
| DE0C | 20 2B DE | JSR \$DE2B | get following track and sector # |
| DE0F | B1 94 | LDA (\$94),Y | set buffer pointer |
| DE11 | 85 80 | STA \$80 | following track number |
| DE13 | C8 | INY | |
| DE14 | B1 94 | LDA (\$94),Y | and get sector number |
| DE16 | 85 81 | STA \$81 | |
| DE18 | RTS | | |
| ***** | | | |
| DE19 | 20 2B DE | JSR \$DE2B | following track for last block |
| DE1C | A9 00 | LDA #\$00 | set buffer pointer |
| DE1E | 91 94 | STA (\$94),Y | zero |
| DE20 | C8 | INY | as track number |
| DE21 | A6 82 | LDX \$82 | |
| DE23 | B5 C1 | LDA \$C1,X | channel number |
| DE25 | AA | TAX | pointer in block |
| DE26 | CA | DEX | |
| DE27 | 8A | TXA | minus 1 |
| DE28 | 91 94 | STA (\$94),Y | as pointer in block |
| DE2A | 60 | RTS | |
| ***** | | | |
| DE2B | 20 93 DF | JSR \$DF93 | buffer pointer to zero |
| DE2E | 0A | ASL A | get buffer number |
| DE2F | AA | TAX | times 2 |
| DE30 | B5 9A | LDA \$9A,X | |
| DE32 | 85 95 | STA \$95 | buffer pointer hi |
| DE34 | A9 00 | LDA #\$00 | |
| DE36 | 85 94 | STA \$94 | buffer pointer lo |
| DE38 | A0 00 | LDY #\$00 | |
| DE3A | 60 | RTS | |

Anatomy of the 1541 Disk Drive

```
*****  
DE3B  20 EB D0  JSR $D0EB  get track and sector  
DE3E  20 93 DF  JSR $DF93  get channel number  
DE41  85 F9    STA $F9   get buffer number  
DE43  0A       ASL A   save  
DE44  A8       TAY    times 2  
DE45  B9 06 00  LDA $0006,Y  get track  
DE48  85 80    STA $80   and sector # from disk controller  
DE4A  B9 07 00  LDA $0007,Y  
DE4D  85 81    STA $81  
DE4F  60       RTS  
  
*****  
DE50  A9 90    LDA #$90  command code for writing  
DE52  8D 4D 02  STA $024D  
DE55  D0 28    BNE $DE7F  
  
DE57  A9 80    LDA #$80  command code for reading  
DE59  8D 4D 02  STA $024D  
DE5C  D0 21    BNE $DE7F  
DE5E  A9 90    LDA #$90  command code for writing  
DE60  8D 4D 02  STA $024D  
DE63  D0 26    BNE $DE8B  
  
DE65  A9 80    LDA #$80  command code for reading  
DE67  8D 4D 02  STA $024D  
DE6A  D0 1F    BNE $DE8B  
  
DE6C  A9 90    LDA #$90  command code for writing  
DE6E  8D 4D 02  STA $024D  
DE71  D0 02    BNE $DE75  
  
DE73  A9 80    LDA #$80  command code for reading  
DE75  8D 4D 02  STA $024D  
DE78  A6 82    LDX $82   channel number  
DE7A  B5 CD    LDA $CD,X side-sector buffer number  
DE7C  AA       TAX    buffer associated?  
DE7D  10 13    BPL $DE92  generate header for disk cont.  
DE7F  20 D0 D6  JSR $D6D0  get buffer number  
DE82  20 93 DF  JSR $DF93  
DE85  AA       TAX    drive number  
DE86  A5 7F    LDA $7F  
DE88  9D 5B 02  STA $025B,X  
DE8B  20 15 E1  JSR $E115  
DE8E  20 93 DF  JSR $DF93  
DE91  AA       TAX    buffer number  
DE92  4C 06 D5  JMP $D506  get buffer number  
DE95  A9 00    LDA #$00  write block  
DE97  20 C8 D4  JSR $D4C8  get following track & sector from  
DE9A  20 37 D1  JSR $D137  buffer  
DE9D  85 80    STA $80   pointer to zero  
DE9F  20 37 D1  JSR $D137  get byte  
DEA2  85 81    STA $81   save as track  
                   get byte  
                   as sector
```

DEA4 60 RTS

***** copy buffer contents

```

DEA5 48 PHA
DEA6 A9 00 LDA #$00
DEA8 85 6F STA $6F
DEAA 85 71 STA $71
DEAC B9 E0 FE LDA $FEE0,Y buffer address Y, hi
DEAF 85 70 STA $70
DFB1 BD E0 FE LDA $FEE0,X buffer address X, hi
DEB4 85 72 STA $72
DEB6 68 PLA
DEB7 A8 TAY
DEB8 88 DEY
DEB9 B1 6F LDA ($6F),Y copy contents of buffer Y
DEBB 91 71 STA ($71),Y to buffer X
DEBD 88 DEY
DEBE 10 F9 BPL $DEB9
DEC0 60 RTS

```

***** erase buffer Y

```

DEC1 A8 TAY buffer number
DEC2 B9 E0 FE LDA SFEE0,Y get hi-address
DEC5 85 70 STA $70
DEC7 A9 00 LDA #$00 lo-address
DEC9 85 6F STA $6F
DECB A8 TAY
DECC 91 6F STA ($6F),Y erase buffer
DECE C8 INY
DEC9 D0 FB BNE $DECC
DED1 60 RTS

```

***** get side-sector number

```

DED2 A9 00 LDA #$00
DED4 20 DC DE JSR SDEDC buffer pointer to zero
DED7 A0 02 LDY #$02
DED9 B1 94 LDA ($94),Y byte 2 contains the side-sector #
DEDB 60 RTS

```

***** set buffer ptr to side-sector

```

DEDC 85 94 STA $94 pointer lo
DEDE A6 82 LDX S82 channel number
DEEO R5 CD LDA $CD,X buffer number
DEE2 AA TAX
DEE3 BD E0 FE LDA $FEE0,X buffer address hi
DEE6 85 95 STA $95 set
DEE8 60 RTS

```

***** buffer pointer for side-sector

```

DEE9 48 PHA pointer in side-sector
DEEA 20 DC DE JSR $DEDC set buffer pointer
DEED 48 PHA
DEEE 8A TXA buffer number
DEEF 0A ASL A times 2
DEF0 AA TAX

```

Anatomy of the 1541 Disk Drive

| | | | |
|---|----------|--------------|-----------------------------------|
| DEF1 | 68 | PLA | buffer pointer hi |
| DEF2 | 95 9A | STA \$9A,X | |
| DEF4 | 68 | PLA | buffer pointer lo |
| DEF5 | 95 99 | STA \$99,X | |
| DEF7 | 60 | RTS | |
| ***** | | | |
| DEF8 | 20 66 DF | JSR \$DF66 | get side-sector and buffer ptr |
| DEFB | 30 0E | BMI \$DF0B | is side-sector in buffer |
| DEFD | 50 13 | BVC \$DF12 | no |
| DEFF | A6 82 | LDX \$82 | ok |
| DF01 | B5 CD | LDA \$CD,X | channel number |
| DF03 | 20 1B DF | JSR \$DF1B | buffer number |
| DF06 | 20 66 DF | JSR \$DF66 | read side-sector |
| DF09 | 10 07 | BPL \$DF12 | and check if in buffer |
| DF0B | 20 CB E1 | JSR \$E1CB | yes? |
| DF0E | 2C CE FE | BIT \$FECE | get last side-sector |
| DF11 | 60 | RTS | set V bit |
| DF12 | A5 D6 | LDA \$D6 | side-sector end pointer |
| DF14 | 20 E9 DE | JSR \$DEE9 | set pointer in side-sector |
| DF17 | 2C CD DE | BIT \$FECD | erase V bit |
| DF1A | 60 | RTS | |
| ***** | | | |
| DF1B | 85 F9 | STA \$F9 | read side-sector |
| DF1D | A9 80 | LDA #\$80 | buffer number |
| DF1F | D0 04 | BNE \$DF25 | command code for reading |
| ***** | | | |
| DF21 | 85 F9 | STA \$F9 | write side-sector |
| DF23 | A9 90 | LDA #\$90 | buffer number |
| DF25 | 48 | PHA | command code for writing |
| DF26 | B5 EC | LDA \$EC,X | |
| DF28 | 29 01 | AND #\$01 | isolate drive number |
| DF2A | 85 7F | STA \$7F | |
| DF2C | 68 | PLA | |
| DF2D | 05 7F | ORA \$7F | command code plus drive number |
| DF2F | 8D 4D 02 | STA \$024D | save |
| DF32 | B1 94 | LDA (\$94),Y | track number |
| DF34 | 85 80 | STA \$80 | |
| DF36 | C8 | INY | |
| DF37 | B1 94 | LDA (\$94),Y | sector number |
| DF39 | 85 81 | STA \$81 | |
| DF3B | A5 F9 | LDA \$F9 | buffer number |
| DF3D | 20 D3 D6 | JSR \$D6D3 | transmit param to disk controller |
| DF40 | A6 F9 | LDX \$F9 | buffer number |
| DF42 | 4C 93 D5 | JMP \$D593 | transmit cmd to disk controller |
| ***** | | | |
| DF45 | A6 82 | LDX \$82 | set buffer pointer in side-sector |
| DF47 | B5 CD | LDA \$CD,X | channel number |
| DF49 | 4C EB D4 | JMP SD4EB | buffer number |
| ***** | | | |
| DF4C | A9 78 | LDA #\$78 | set buffer pointer |
| ***** | | | |
| calculate block # of a rel-file 120 block ptrs per side-sector | | | |

Anatomy of the 1541 Disk Drive

| | | | |
|------------------------------|----------|--------------|---------------------------------|
| DF4E | 20 5C DF | JSR \$DF5C | add to \$70/\$71 |
| DF51 | CA | DEX | side-sector number |
| DF52 | 10 F8 | BPL \$DF4C | next side-sector? |
| DF54 | A5 72 | LDA \$72 | pointer value in last block |
| DF56 | 4A | LSR A | divided by 2 |
| DF57 | 20 5C DF | JSR \$DF5C | add to previous sum |
| DF5A | A5 73 | LDA \$73 | number of the side-sector block |
| DF5C | 18 | CLC | |
| DF5D | 65 70 | ADC \$70 | |
| DF5F | 85 70 | STA \$70 | |
| DF61 | 90 02 | BCC \$DF65 | |
| DF63 | E6 71 | INC \$71 | |
| DF65 | 60 | RTS | |
| ***** | | | |
| verify side-sector in buffer | | | |
| DF66 | 20 D2 DE | JSR \$DED2 | get side-sector number |
| DF69 | C5 D5 | CMP \$D5 | = number of necessary block? |
| DF6B | D0 0E | BNE \$DF7B | no |
| DF6D | A4 D6 | LDY \$D6 | pointer in side-sector |
| DF6F | B1 94 | LDA (\$94),Y | track number |
| DF71 | F0 04 | BEQ \$DF77 | |
| DF73 | 2C CD FE | BIT \$FECD | erase bits |
| DF76 | 60 | RTS | |
| DF77 | 2C CF FE | BIT \$FECE | set N-bit |
| DF7A | 60 | RTS | |
| ***** | | | |
| DF7B | A5 D5 | LDA \$D5 | side-sector number |
| DF7D | C9 06 | CMP #\$06 | 6 or greater? |
| DF7F | B0 0A | BCS \$DF8B | yes |
| DF81 | 0A | ASL A | |
| DF82 | A8 | TAY | |
| DF83 | A9 04 | LDA #\$04 | |
| DF85 | 85 94 | STA \$94 | |
| DF87 | B1 94 | LDA (\$94),Y | track number |
| DF89 | D0 04 | BNE \$DF8F | |
| DF8B | 2C D0 FE | BIT \$FED0 | set N and V bits |
| DF8E | 60 | RTS | |
| ***** | | | |
| DF8F | 2C CE FE | BIT \$FECE | set V bit |
| DF92 | 60 | RTS | |
| ***** | | | |
| DF93 | A6 82 | LDX \$82 | get buffer number |
| DF95 | B5 A7 | LDA \$A7,X | channel number |
| DF97 | 10 02 | BPL \$DF9B | buffer number |
| DF99 | B5 AE | LDA \$AE,X | buffer number from second table |
| DF9B | 29 BF | AND #\$BF | erase V bit |
| DF9D | 60 | RTS | |
| ***** | | | |
| DF9E | A6 82 | LDX \$82 | channel number |
| DFA0 | 8E 57 02 | STX \$0257 | save |
| DFA3 | B5 A7 | LDA \$A7,X | get buffer number |
| DFA5 | 10 09 | BPL \$DFB0 | buffer allocated |
| DFA7 | 8A | TXA | |
| DFA8 | 18 | CLC | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|-----------------------------------|
| DFA9 | 69 07 | ADC #\$07 | increment number by 7 |
| DFAB | 8D 57 02 | STA \$0257 | and save |
| DFAE | B5 AE | LDA \$AE,X | buffer number from table 2 |
| DFB0 | 85 70 | STA \$70 | |
| DFB2 | 29 1F | AND #\$1F | erase the highest 3 bits |
| DFB4 | 24 70 | BIT \$70 | |
| DFB6 | 60 | RTS | |
| | | | |
| DFB7 | AD 82 | LDX \$82 | channel number |
| DFB9 | B5 A7 | LDA \$A7,X | buffer number |
| DFB9 | 30 02 | BMI \$DFBF | buffer free? |
| DFBD | B5 AE | LDA \$AE,X | buffer number from table 2 |
| DFBF | C9 FF | CMP #\$FF | free? |
| DFC1 | 60 | RTS | |
| | | | |
| DFC2 | A6 82 | LDX \$82 | |
| DFC4 | 09 80 | ORA #\$80 | |
| DFC6 | B4 A7 | LDY \$A7,X | |
| DFC8 | 10 03 | BPL \$DFCD | |
| DFCA | 95 A7 | STA \$A7,X | |
| DFCC | 60 | RTS | |
| DFCD | 95 AE | STA \$AE,X | |
| DFCF | 60 | RTS | |
| ***** | ***** | ***** | get next record in rel-file |
| DFD0 | A9 20 | LDA #\$20 | |
| DFD2 | 20 9D DD | JSR \$DD9D | erase bit 5 |
| DFD5 | A9 80 | LDA #\$80 | |
| DFD7 | 20 A6 DD | JSR \$DDA6 | test bit 7 |
| DFDA | D0 41 | BNE \$E01D | set? |
| DFDC | A6 82 | LDX \$82 | channel number |
| DFDE | F6 B5 | INC \$B5,X | increment record number |
| DFE0 | D0 02 | BNE \$DFE4 | |
| DFE2 | F6 BB | INC \$BB,X | record number hi |
| DFE4 | A6 82 | LDX \$82 | channel number |
| DFE6 | B5 C1 | LDA \$C1,X | write pointer |
| DFE8 | F0 2E | BEQ \$E018 | zero? |
| DFEA | 20 E8 D4 | JSR \$D4E8 | set buffer pointer |
| DFED | A6 82 | LDX \$82 | channel number |
| DFEF | D5 C1 | CMP \$C1,X | buffer ptr smaller than write ptr |
| DFF1 | 90 03 | BCC \$DFF6 | yes |
| DFF3 | 20 3C E0 | JSR \$E03C | write block, read next block |
| DFF6 | A6 82 | LDX \$82 | channel number |
| DFF8 | B5 C1 | LDA \$C1,X | write pointer |
| DFFA | 20 C8 D4 | JSR \$D4C8 | set buffer pointer = write ptr |
| DFFD | A1 99 | LDA (\$99),X | byte from buffer |
| DFFF | 85 85 | STA \$85 | put in output register |
| E001 | A9 20 | LDA #\$20 | |
| E003 | 20 9D DD | JSR \$DD9D | erase bit 5 |
| E006 | 20 04 E3 | JSR \$E304 | add record length to write ptr |
| E009 | 48 | PHA | and save |
| E00A | 90 28 | RCC \$E034 | not yet in last block? |
| E00C | A9 00 | LDA #\$00 | |
| E00E | 20 F6 D4 | JSR \$D4F6 | get track number |
| E011 | D0 21 | BNE \$E034 | does block exist? |

Anatomy of the 1541 Disk Drive

| | | | |
|--------------------------|----------|--------------|---------------------------------|
| E013 | 68 | PLA | pointer |
| E014 | C9 02 | CMP #\$02 | = 2 |
| E016 | F0 12 | BEO \$E02A | yes |
| E018 | A9 80 | LDA #\$80 | |
| E01A | 20 97 DD | JSR \$DD97 | set bit 7 |
| E01D | 20 2F D1 | JSR \$D12F | get byte from buffer |
| E020 | B5 99 | LDA \$99,X | buffer pointer |
| E022 | 99 44 02 | STA \$0244,Y | as end pointer |
| E025 | A9 0D | LDA #\$0D | CR |
| E027 | 85 85 | STA \$85 | in output register |
| E029 | 60 | RTS | |
| E02A | 20 35 E0 | JSR \$E035 | |
| E02D | A6 82 | LDX \$82 | channel number |
| E02F | A9 00 | LDA #\$00 | |
| E031 | 95 C1 | STA \$C1,X | write pointer to zero |
| E033 | 60 | RTS | |
| E034 | 68 | PLA | |
| E035 | A6 82 | LDX \$82 | channel number |
| E037 | 95 C1 | STA \$C1,X | set write pointer |
| E039 | 4C 6E E1 | JMP \$E16E | |
| ***** | | | |
| E03C | 20 D3 D1 | JSR \$D1D3 | write block and read next block |
| E03F | 20 95 DE | JSR \$DE95 | get drive number |
| E042 | 20 9E DF | JSR \$DF9E | get track and sector number |
| E045 | 50 16 | BVC \$E05D | get buffer number |
| E047 | 20 5E DE | JSR \$DE5E | no rel-file? |
| E04A | 20 1E CF | JSR \$CF1E | write block |
| E04D | A9 02 | LDA #\$02 | change buffer |
| E04F | 20 C8 D4 | JSR \$D4C8 | |
| E052 | 20 AB DD | JSR \$DDAB | buffer pointer to 2 |
| E055 | D0 24 | BNE \$E078 | command code for writing? |
| E057 | 20 57 DE | JSR \$DE57 | no |
| E05A | 4C 99 D5 | JMP \$D599 | read block |
| | | | and verify |
| E05D | 20 1E CF | JSR \$CF1E | change buffer |
| E060 | 20 AB DD | JSR \$DDAB | command code for writing? |
| E063 | D0 06 | BNE \$E068 | no |
| E065 | 20 57 DE | JSR \$DE57 | read block |
| E068 | 20 99 D5 | JSR \$D599 | and verify |
| E06B | 20 95 DE | JSR \$DE95 | get track and sector number |
| E06E | A5 80 | LDA \$80 | track |
| E070 | F0 09 | BEO \$E07B | no following track |
| E072 | 20 1E CF | JSR \$CF1E | change buffer |
| E075 | 20 57 DE | JSR \$DE57 | read block |
| E078 | 20 1E CF | JSR \$CF1E | change buffer |
| E07B | 60 | RTS | |
| ***** | | | |
| write a byte in a record | | | |
| E07C | 20 05 E1 | JSR \$E105 | |
| E07F | 20 93 DF | JSR \$DF93 | get buffer number |
| E082 | 0A | ASL A | times 2 |
| E083 | AA | TAX | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|---------------------------------|
| E084 | A5 85 | LDA \$85 | data byte |
| E086 | 81 99 | STA (\$99,X) | write in buffer |
| E088 | B4 99 | LDY \$99,X | buffer pointer |
| E08A | C8 | INY | increment |
| E08B | D0 09 | BNE \$E096 | not equal zero? |
| E08D | A4 82 | LDY \$82 | channel number |
| E08F | B9 C1 00 | LDA \$00C1,Y | write pointer |
| E092 | F0 0A | BEQ \$E09E | equal zero? |
| E094 | A0 02 | LDY #\$02 | buffer pointer to 2 |
| E096 | 98 | TYA | |
| E097 | A5 82 | LDY \$82 | channel number |
| E099 | D9 C1 00 | CMP \$00C1,Y | buffer pointer = write pointer? |
| E09C | D0 05 | BNE \$E043 | no |
| E09E | A9 20 | LDA #\$20 | |
| E0A0 | 4C 97 DD | JMP \$DD97 | set bit 5 |
| E0A3 | F6 99 | INC \$99,X | increment buffer pointer |
| E0A5 | D0 03 | BNE \$E0AA | not zero? |
| E0A7 | 20 3C E0 | JSR \$E03C | else write block, read next one |
| E0AA | 60 | RTS | |
| ***** | | | |
| E0AB | A9 A0 | LDA #\$A0 | write byte in rel-file |
| E0AD | 20 A6 DD | JSR \$DDA6 | test bits 6 & 7 |
| E0B0 | D0 27 | BNE \$E0D9 | set? |
| E0B2 | A5 85 | LDA \$85 | data byte |
| E0B4 | 20 7C E0 | JSR \$E07C | write in record |
| E0B7 | A5 F8 | LDA \$F8 | end? |
| E0B9 | F0 0D | BEO \$E0C8 | yes |
| E0BB | 60 | RTS | |
| E0RC | A9 20 | LDA #\$20 | |
| E0BE | 20 A6 DD | JSR \$DDA6 | test bit 5 |
| E0C1 | F0 05 | REQ \$E0C8 | not set |
| E0C3 | A9 51 | LDA #\$51 | 51, 'overflow in record' |
| E0C5 | 8D 6C 02 | STA \$026C | set error flag |
| E0C8 | 20 F3 E0 | JSR \$E0F3 | fill remainder with zeroes |
| E0CB | 20 53 E1 | JSR \$E153 | |
| E0CE | AD 6C 02 | LDA \$026C | error flag set? |
| E0D1 | F0 03 | BEO \$E0D6 | no |
| E0D3 | 4C C8 C1 | JMP \$C1C8 | set error message |
| E0D6 | 4C BC E6 | JMP \$F6BC | error free execution |
| E0D9 | 29 80 | AND #\$80 | bit 7 set? |
| E0DB | D0 05 | BNE \$E0E2 | yes |
| E0DD | A5 F8 | LDA \$F8 | |
| E0DF | F0 DB | BEO \$E0BC | end? |
| E0E1 | 60 | RTS | |
| E0E2 | A5 85 | LDA \$85 | data byte |
| E0E4 | 48 | PHA | |
| E0E5 | 20 1C E3 | JSR \$E31C | expand side-sector |
| E0E8 | 68 | PLA | |
| E0E9 | 85 85 | STA \$85 | |
| E0EB | A9 80 | LDA #\$80 | |

Anatomy of the 1541 Disk Drive

| | | | |
|------------------------------|----------|--------------|----------------------------|
| E0ED | 20 9D DD | JSR \$DD9D | erase bit 7 |
| E0FO | 4C B2 E0 | JMP \$EOB2 | write byte in file |
| ***** | | | |
| EOF3 | A9 20 | LDA #\$20 | fill record with zeroes |
| EOF5 | 20 A6 DD | JSR \$DDA6 | test bit 5 |
| EOF8 | D0 0A | BNE \$E104 | set? |
| EOF9 | A9 00 | LDA #\$00 | |
| EOF C | 85 85 | STA \$85 | zero as data byte |
| EOF E | 20 7C E0 | JSR \$E07C | write in record |
| E101 | 4C F3 E0 | JMP \$EOF3 | until record full |
| E104 | 60 | RTS | |
| ***** | | | |
| write buffer number in table | | | |
| E105 | A9 40 | LDA #\$40 | |
| E107 | 20 97 DD | JSR \$DD97 | set bit 6 |
| E10A | 20 9E DF | JSR \$DF9E | get buffer number |
| E10D | 09 40 | ORA #\$40 | set bit 6 |
| E10F | AE 57 02 | LDX \$0257 | channel number + 7 |
| E112 | 95 A7 | STA \$A7,X | write in table |
| E114 | 60 | RTS | |
| E115 | 20 9E DF | JSR \$DF9E | get buffer number |
| E118 | 29 BF | AND #\$BF | erase bit 6 |
| E11A | AE 57 02 | LDX \$0257 | channel number |
| E11D | 95 A7 | STA \$A7,X | write in table |
| E11F | 60 | RTS | |
| ***** | | | |
| get byte from rel-file | | | |
| E120 | A9 80 | LDA #\$80 | |
| E122 | 20 A6 DD | JSR \$DDA6 | test bit 7 |
| E125 | D0 37 | BNE \$E15E | set? |
| E127 | 20 2F D1 | JSR \$D12F | get byte from buffer |
| E12A | B5 99 | LDA \$99,X | buffer pointer |
| E12C | D9 44 02 | CMP \$0244,Y | compare to end pointer |
| E12F | F0 22 | BEO \$E135 | equal? |
| E131 | F6 99 | INC \$99,X | increment buffer pointer |
| E133 | D0 06 | BNE \$E13B | not zero? |
| E135 | 20 3C E0 | JSR \$E03C | write block, read next one |
| E138 | 20 2F D1 | JSR \$D12F | get byte from buffer |
| E13B | A1 99 | LDA (\$99,X) | |
| E13D | 99 3E 02 | STA \$023E,Y | in output register |
| E140 | A9 89 | LDA #\$89 | |
| E142 | 99 F2 00 | STA \$00F2,Y | set READ and WRITE flag |
| E145 | B5 99 | LDA \$99,Y | buffer pointer |
| E147 | D9 44 02 | CMP \$0244,Y | compare to end pointer |
| E14A | F0 01 | BEO \$E14D | same? |
| E14C | 60 | RTS | |
| E14D | A9 81 | LDA #\$81 | |
| E14F | 99 F2 00 | STA \$00F2,Y | set flag for end |
| E152 | 60 | RTS | |
| E153 | 20 D0 DF | JSR \$DFD0 | find next record |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|---------------------------------|
| E156 | 20 2F D1 | JSR \$D12F | get buffer and channel number |
| E159 | A5 85 | LDA \$85 | data byte |
| E15B | 4C 3D E1 | JMP \$E13D | into output register |
| E15E | A6 82 | LDX \$82 | channel number |
| E160 | A9 0D | LDA #\$0D | CR |
| E162 | 9D 3E 02 | STA \$023E,X | into output register |
| E165 | A9 81 | LDA #\$81 | |
| E167 | 95 F2 | STA \$F2,X | set flag for end |
| E169 | A9 50 | LDA #\$50 | |
| E16B | 20 C8 C1 | JSR \$C1C8 | 50, 'record not present' |
| E16E | A6 82 | LDX \$82 | channel number |
| E170 | B5 C1 | LDA \$C1,X | write pointer |
| E172 | 85 87 | STA \$87 | save |
| E174 | C6 87 | DEC \$87 | |
| E176 | C9 02 | CMP #\$02 | equal 2? |
| E178 | D0 04 | BNE \$E17E | no |
| E17A | A9 FF | LDA #\$FF | |
| E17C | 85 87 | STA \$87 | |
| E17E | B5 C7 | LDA SC7,X | record length |
| E180 | 85 88 | STA \$88 | |
| E182 | 20 E8 D4 | JSR \$D4E8 | set buffer pointer |
| E185 | A6 82 | LDX \$82 | channel number |
| E187 | C5 87 | CMP \$87 | buffer pointer > write pointer? |
| E189 | 90 19 | BCC \$E1A4 | |
| E18B | F0 17 | BEQ \$E1A4 | no |
| E18D | 20 1E CF | JSR \$CF1E | change buffer |
| E190 | 20 B2 E1 | JSR \$E1B2 | |
| E193 | 90 08 | BCC \$E19D | |
| E195 | A6 82 | LDX \$82 | channel number |
| E197 | 9D 44 02 | STA \$0244,X | |
| E19A | 4C 1E CF | JMP \$CF1E | change buffer |
| E19D | 20 1E CF | JSR \$CF1E | change buffer |
| E1A0 | A9 FF | LDA #\$FF | |
| E1A2 | 85 87 | STA \$87 | |
| E1A4 | 20 B2 E1 | JSR \$E1B2 | |
| E1A7 | B0 03 | BCS \$E1AC | |
| E1A9 | 20 E8 D4 | JSR \$D4E8 | set buffer pointer |
| E1AC | A6 82 | LDX \$82 | channel number |
| E1AE | 9D 44 02 | STA \$0244,X | end pointer |
| E1B1 | 60 | RTS | |
| E1B2 | 20 2B DE | JSR \$DE2B | buffer pointer to zero |
| E1B5 | A4 87 | LDY \$87 | |
| E1B7 | B1 94 | LDA (\$94),Y | byte from buffer |
| E1B9 | D0 0D | BNE \$E1C8 | not zero? |
| E1BB | 88 | DEY | |
| E1BC | C0 02 | CPY #\$02 | |
| E1BE | 90 04 | BCC \$E1C4 | |
| E1C0 | C6 88 | DEC \$88 | |
| E1C2 | D0 F3 | BNE \$E1B7 | |
| E1C4 | C6 88 | DEC \$88 | |
| E1C6 | 18 | CLC | |

| | | | |
|-----------|----------|--------------|-------------------------------|
| E1C7 | 60 | RTS | |
| E1C8 | 98 | TYA | |
| E1C9 | 38 | SEC | |
| E1CA | 60 | RTS | |
| ***** | | | |
| E1CB | 20 D2 DE | JSR \$DED2 | get last side-sector |
| E1CE | 85 D5 | STA \$D5 | get number of the side-sector |
| E1D0 | A9 04 | LDA #\$04 | save |
| E1D2 | 85 94 | STA \$94 | pointer to side-sectors |
| E1D4 | A0 0A | LDY #\$0A | |
| E1D6 | D0 04 | BNE \$E1DC | |
| E1D8 | 88 | DEY | |
| E1D9 | 88 | DEY | |
| E1DA | 30 26 | BMI \$E202 | |
| E1DC | B1 94 | LDA (\$94),Y | track # of the previous block |
| E1DE | F0 F8 | BEO \$E1D8 | |
| E1E0 | 98 | TYA | |
| E1E1 | 4A | LSR A | divide by 2 |
| E1E2 | C5 D5 | CMP \$D5 | = number of the actual block? |
| E1E4 | F0 09 | BEO \$E1EF | yes |
| E1E6 | 85 D5 | STA \$D5 | else save all numbers |
| E1E8 | A6 82 | LDX \$82 | channel number |
| E1EA | B5 CD | LDA \$CD,X | buffer number |
| E1EC | 20 1B DF | JSR \$DF1B | read block |
| E1EF | A0 00 | LDY #\$00 | |
| E1F1 | 84 94 | STY \$94 | buffer pointer |
| E1F3 | B1 94 | LDA (\$94),Y | track number |
| E1F5 | D0 0B | BNE \$E202 | another block? |
| E1F7 | C8 | INY | |
| E1F8 | B1 94 | LDA (\$94),Y | sector number = end pointer |
| E1FA | A8 | TAY | |
| E1FB | 88 | DEY | |
| E1FC | 84 D6 | STY \$D6 | save end pointer |
| E1FE | 98 | TYA | |
| E1FF | 4C E9 DE | JMP \$DEE9 | set buffer pointer |
| E202 | A9 67 | #\$67 | |
| E204 | 20 45 E6 | JSR \$E645 | 67, 'illegal track or sector' |
| ***** | | | |
| E207 | 20 B3 C2 | JSR \$C2B3 | P-command, 'Record' |
| E20A | AD 01 02 | LDA \$0201 | verify lines |
| E20D | 85 83 | STA \$83 | secondary address |
| E20F | 20 EB D0 | JSR \$D0EB | find channel number |
| E212 | 90 05 | BCC \$E219 | found? |
| E214 | A9 70 | LDA #\$70 | |
| E216 | 20 C8 C1 | JSR \$C1C8 | 70, 'no block' |
| E219 | A9 A0 | LDA #\$A0 | |
| E21B | 20 9D DD | JSR \$DD9D | erase bits 6 & 7 |
| E21F | 20 25 D1 | JSR \$D125 | verify if 'REL'-file |
| E221 | F0 05 | BEO \$E228 | yes |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|------------|-------------------------------|
| E223 | A9 64 | LDA #\$64 | |
| E225 | 20 C8 C1 | JSR \$C1C8 | 64, 'file type mismatch' |
| E228 | B5 EC | LDA \$EC,X | |
| E22A | 29 01 | AND #\$01 | |
| E22C | 85 7F | STA \$7F | drive number |
| E22E | AD 02 02 | LDA \$0202 | record number lo |
| E231 | 95 B5 | STA \$B5,X | |
| E233 | AD 03 02 | LDA \$0203 | record number hi |
| E236 | 95 BB | STA \$BB,X | |
| E238 | A6 B2 | LDA \$82 | channel number |
| E23A | A9 89 | LDA #\$89 | |
| E23C | 95 F2 | STA \$F2,X | READ and WRITE flag |
| E23E | AD 04 02 | LDA \$0204 | byte-pointer |
| E241 | F0 10 | BEQ \$E253 | zero? |
| E243 | 38 | SEC | |
| E244 | E9 01 | SBC #\$01 | |
| E246 | F0 0B | BEQ \$E253 | |
| E248 | D5 C7 | CMP SC7,X | compare with record length |
| E24A | 90 07 | BCC \$E253 | |
| E24C | A9 51 | LDA #\$51 | |
| E24E | 8D 6C 02 | STA \$026C | |
| E251 | A9 00 | LDA #\$00 | |
| E253 | 85 D4 | STA \$D4 | |
| E255 | 20 0E CE | JSR \$CE0E | |
| E258 | 20 F8 DE | JSR \$DEF8 | |
| E25B | 50 08 | BVC \$E265 | does block exist? |
| E25D | A9 80 | LDA #\$80 | |
| E25F | 20 97 DD | JSR \$DD97 | set bit 7 |
| E262 | 4C 5E E1 | JMP \$E15E | and 50, 'record not present' |
| E265 | 20 75 E2 | JSR \$E275 | |
| E268 | A9 80 | LDA #\$80 | |
| E26A | 20 A6 DD | JSR \$DDA6 | test bit 7 |
| E26D | F0 03 | BEQ \$E272 | not set |
| E26F | 4C 5E E1 | JMP \$E15E | 50, 'record not present' |
| E272 | 4C 94 C1 | JMP \$C194 | done |
| E275 | 20 9C E2 | JSR \$E29C | |
| E278 | A5 D7 | LDA \$D7 | pointer in rel-file |
| E27A | 20 C8 D4 | JSR \$D4C8 | set buffer pointer |
| E27D | A6 82 | LDX \$82 | channel number |
| E27F | B5 C7 | LDA \$C7,X | record length |
| E281 | 38 | SEC | |
| E282 | E5 D4 | SBC \$D4 | minus position |
| E284 | B0 03 | BCS \$E289 | positive? |
| E286 | 4C 02 E2 | JMP \$E202 | 67, 'illegal track or sector' |
| E289 | 18 | CLC | |
| E28A | 65 D7 | ADC \$D7 | add pointer in data block |
| E28C | 90 03 | BCC \$E291 | no overflow |
| E28E | 69 01 | ADC #\$01 | plus 2 |
| E290 | 38 | SEC | |
| E291 | 20 09 E0 | JSR \$E009 | set pointer |
| E294 | 4C 38 E1 | JMP \$E138 | get byte from buffer |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|---------------------------------|
| E297 | A9 51 | LDA #\$51 | |
| E299 | 20 C8 C1 | JSR \$C1C8 | 51, 'overflow in record' |
| E29C | A5 94 | LDA \$94 | buffer pointer lo |
| E29E | 85 89 | STA \$89 | |
| E2A0 | A5 95 | LDA \$95 | buffer pointer hi |
| E2A2 | 85 8A | STA \$8A | |
| E2A4 | 20 D0 E2 | JSR \$E2D0 | compare track and sector |
| E2A7 | D0 01 | BNE \$E2AA | not equal? |
| E2A9 | 60 | RTS | |
| E2AA | 20 F1 DD | JSR \$DDF1 | |
| E2AD | 20 0C DE | JSR \$DE0C | |
| E2B0 | A5 80 | LDA \$80 | track |
| E2B2 | F0 0E | BEO \$E2C2 | no block following? |
| E2B4 | 20 D3 E2 | JSR \$E2D3 | compare track and sector number |
| E2B7 | D0 06 | BNE \$E2BF | not equal? |
| E2B9 | 20 1E CF | JSR \$CF1E | change buffer |
| E2BC | 4C DA D2 | JMP \$D2DA | |
| E2BF | 20 DA D2 | JSR \$D2DA | |
| E2C2 | A0 00 | LDY #\$00 | |
| E2C4 | B1 89 | LDA (\$89),Y | track |
| E2C6 | 85 80 | STA \$80 | |
| E2C8 | C8 | INY | |
| E2C9 | B1 89 | LDA (\$89),Y | and sector of the next block |
| E2CB | 85 81 | STA \$81 | |
| E2CD | 4C AF D0 | JMP \$D0AF | read block |
| E2D0 | 20 3E DE | JSR \$DE3E | |
| E2D3 | A0 00 | LDY #\$00 | |
| E2D5 | B1 89 | LDA (\$89),Y | track number |
| E2D7 | C5 80 | CMP \$80 | compare |
| E2D9 | F0 01 | BEO \$E2DC | |
| E2DB | 60 | RTS | |
| E2DC | C8 | INY | |
| E2DD | B1 89 | LDA (\$89),Y | sector number |
| E2DF | C5 81 | CMP \$81 | compare |
| E2E1 | 60 | RTS | |
| ***** | | | |
| E2E2 | 20 2B DE | JSR \$DE2B | subdivide records in data block |
| E2E5 | A0 02 | LDY #\$02 | set buffer pointer |
| E2E7 | A9 00 | LDA #\$00 | |
| E2E9 | 91 94 | STA (\$94),Y | erase buffer |
| E2EB | C8 | INY | |
| E2EC | D0 FB | BNE \$E2E9 | |
| E2EE | 20 04 E3 | JSR \$E304 | set pointer to next record |
| E2F1 | 95 C1 | STA \$C1,X | |
| E2F3 | A8 | TAY | |
| E2F4 | A9 FF | LDA #\$FF | |
| E2F6 | 91 94 | STA (\$94),Y | \$FF as 1st character in record |
| E2F8 | 20 04 E3 | JSR \$E304 | set pointer to next record |
| E2FB | 90 F4 | BCC \$E2F1 | done in this block? |
| E2FD | D0 04 | BNE \$E303 | block full? |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|------------|-----------------------------------|
| E2FF | A9 00 | LDA #\$00 | |
| E301 | 95 C1 | STA \$C1,X | write pointer to zero |
| E303 | 60 | RTS | |
| ***** | | | |
| E304 | A6 82 | LDX \$82 | set pointer to next record |
| E306 | B5 C1 | LDA \$C1,X | channel number |
| E308 | 38 | SEC | write pointer |
| E309 | F0 0D | BEQ \$E318 | |
| E30B | 18 | CLC | equal zero? |
| E30C | 75 C7 | ADC \$C7,X | |
| E30E | 90 0B | BCC \$E31B | add record length |
| E310 | D0 06 | BNE \$E318 | smaller than 256? |
| E312 | A9 02 | LDA #\$02 | equal 256? |
| E314 | 2C CC FE | BIT \$FECC | |
| E317 | 60 | RTS | |
| E318 | 69 01 | ADC #\$01 | add two |
| E31A | 38 | SEC | |
| E31B | 60 | RTS | |
| ***** | | | |
| E31C | 20 D3 D1 | JSR \$D1D3 | expand side-sector |
| E31F | 20 CB E1 | JSR \$E1CB | get drive number |
| E322 | 20 9C E2 | JSR \$E29C | get last side-sector |
| E325 | 20 7B CF | JSR \$CF7B | |
| E328 | A5 D6 | LDA \$D6 | |
| E32A | 85 87 | STA \$87 | |
| E32C | A5 D5 | LDA \$D5 | side-sector number |
| E32E | 85 86 | STA \$86 | |
| E330 | A9 00 | LDA #\$00 | |
| E332 | 85 88 | STA \$88 | |
| E334 | A9 00 | LDA #\$00 | |
| E336 | 85 D4 | STA \$D4 | |
| E338 | 20 0E CE | JSR \$CE0E | calculate side-sector no. and ptr |
| E33B | 20 4D EF | JSR \$EF4D | number of free blocks |
| E33E | A4 82 | LDY \$82 | channel number |
| E340 | B6 C7 | LDX \$C7,Y | record length |
| E342 | CA | DEX | |
| E343 | 8A | TXA | |
| E344 | 18 | CLC | |
| E345 | 65 D7 | ADC \$D7 | plus pointer in data block |
| E347 | 90 0C | RCC \$E355 | |
| E349 | E6 D6 | INC \$D6 | |
| E34B | E6 D6 | INC \$D6 | increment ptr to end by 2 |
| E34D | D0 06 | BNE \$E355 | |
| E34F | E6 D5 | INC \$D5 | increment side-sector number |
| E351 | A9 10 | LDA #\$10 | |
| E353 | 85 D6 | STA #D6 | set pointer to 16 |
| E355 | A5 87 | LDA \$87 | |
| E357 | 18 | CLC | |
| E358 | 69 02 | ADC #\$02 | |
| E35A | 20 E9 DE | JSR \$DEE9 | set buffer ptr for side-sector |
| E35D | A5 D5 | LDA \$D5 | side-sector number |
| E35F | C9 06 | CMP #\$06 | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|------------|-----------------------------------|
| E361 | 90 05 | BCC \$E368 | smaller than 6? |
| E363 | A9 52 | LDA #\$52 | |
| E365 | 20 C8 C1 | JSR SC1C8 | 52, 'file too large' |
| E368 | A5 D6 | LDA \$D6 | end pointer |
| E36A | 38 | SEC | |
| E36B | E5 87 | SBC \$87 | minus last end pointer |
| E36D | B0 03 | BCS \$E372 | |
| E36F | E9 0F | SBC #\$0F | minus 16 |
| E371 | 18 | CLC | |
| E372 | 85 72 | STA \$72 | |
| E374 | A5 D5 | LDA \$D5 | side-sector number |
| E376 | E5 86 | SBC \$86 | minus last side-sector number |
| E378 | 85 73 | STA \$73 | save |
| E37A | A2 00 | LDX #\$00 | |
| E37C | 86 70 | STX \$70 | erase sum for calculation |
| E37E | 86 71 | STX \$71 | |
| E380 | AA | TAX | |
| E381 | 20 51 DF | JSR \$DF51 | calculate block # of rel-file |
| E384 | A5 71 | LDA \$71 | |
| E386 | D0 07 | BNE \$E38F | |
| E388 | A6 70 | LDX \$70 | |
| E38A | CA | DEX | |
| E38B | D0 02 | BNE \$E38F | |
| E38D | E6 88 | INC \$88 | |
| E38F | CD 73 02 | CMP \$0273 | block number of rel-file |
| E392 | 90 09 | BCC \$E39D | greater than free blocks on disk? |
| E394 | D0 CD | BNE \$E363 | 52, 'file too large' |
| E396 | AD 72 02 | LDA \$0272 | |
| E399 | C5 70 | CMP \$70 | |
| E39B | 90 C6 | BCC \$E363 | 52, 'file too large' |
| E39D | A9 01 | LDA #\$01 | |
| E39F | 20 F6 D4 | JSR \$D4F6 | get byte from buffer |
| E3A2 | 18 | CLC | |
| E3A3 | 69 01 | ADC #\$01 | plus 1 |
| E3A5 | A6 82 | LDX \$82 | |
| E3A7 | 95 C1 | STA SC1,X | as write pointer |
| E3A9 | 20 1E F1 | JSR \$F11E | find free block in BAM |
| E3AC | 20 FD DD | JSR \$DDFD | track and sector in buffer |
| E3AF | A5 88 | LDA \$88 | |
| E3B1 | D0 15 | BNE \$E3C8 | only one block needed? |
| E3B3 | 20 5E DE | JSR \$DE5E | write block |
| E3B6 | 20 1E CF | JSR \$CF1E | change buffer |
| E3B9 | 20 D0 D6 | JSR \$D6D0 | transmit param to disk controller |
| E3BC | 20 1E F1 | JSR \$F11E | find free block in BAM |
| E3BF | 20 FD DD | JSR \$DDFD | track and sector in buffer |
| E3C2 | 20 E2 E2 | JSR \$E2E2 | erase buffer |
| E3C5 | 4C D4 E3 | JMP \$E3D4 | |
| E3C8 | 20 1E CF | JSR \$CF1E | change buffer |
| E3CB | 20 D0 D6 | JSR \$D6D0 | transmit param to disk controller |
| E3CE | 20 E2 E2 | JSR \$E2E2 | erase buffer |
| E3D1 | 20 19 DE | JSR SDE19 | zero byte and end ptr in buffer |
| E3D4 | 20 5E DE | JSR \$DE5E | write block |
| E3D7 | 20 0C DE | JSR \$DE0C | get track and sector |
| E3DA | A5 80 | LDA \$80 | track |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|--|
| E3DC | 48 | PHA | |
| E3DD | A4 81 | LDA \$81 | and sector save |
| E3DF | 48 | PHA | get track and sector from disk controller |
| E3E0 | 20 3E DE | JSR \$DE3E | |
| E3E3 | A5 81 | LDA \$81 | |
| E3E5 | 48 | PHA | |
| E3E6 | A5 80 | LDA \$80 | save track and sector |
| E3E8 | 48 | PHA | |
| E3E9 | 20 45 DF | JSR \$DF45 | set buffer ptr for side-sector |
| E3EC | AA | TAX | |
| E3ED | D0 0A | BNE \$E3F9 | pointer not zero? |
| E3EF | 20 4E E4 | JSR \$E44E | write side-sector |
| E3F2 | A9 10 | LDA #\$10 | |
| E3F4 | 20 E9 DE | JSR \$DEE9 | buffer pointer to 16 |
| E3F7 | E6 86 | INC \$86 | increment side-sector number |
| E3F9 | 68 | PLA | |
| E3FA | 20 8D DD | JSR \$DD8D | track in side sector |
| E3FD | 68 | PLA | |
| E3FE | 20 8D DD | JSR \$DD8D | sector in side-sector |
| E401 | 68 | PLA | |
| E402 | 85 81 | STA \$81 | sector |
| E404 | 68 | PLA | |
| E405 | 85 80 | STA \$80 | and get track back |
| E407 | F0 0F | BEQ \$E418 | no more blocks? |
| E409 | A5 86 | LDA \$86 | side-sector number |
| E40B | C5 D5 | CMP \$D5 | changed? |
| E40D | D0 A7 | BNE \$E3B6 | yes |
| E40F | 20 45 DF | JSR \$DF45 | set buffer ptr in side-sector |
| E412 | C5 D6 | CMP \$D6 | end pointer |
| E414 | 90 A0 | BCC \$E3B6 | smaller? |
| E416 | F0 R0 | BEQ \$E3C8 | same |
| E418 | 20 45 DF | JSR \$DF45 | set buffer ptr in side-sector |
| E41B | 48 | PHA | |
| E41C | A9 00 | LDA #\$00 | |
| E41E | 20 DC DE | JSR \$DED C | buffer pointer to zero |
| E421 | A9 00 | LDA #\$00 | |
| E423 | A8 | TAY | |
| E424 | 91 94 | STA (\$94),Y | zero as track number |
| E426 | C8 | INY | |
| E427 | 68 | PLA | end pointer |
| E428 | 38 | SEC | |
| E429 | E9 01 | SBC #\$01 | minus one |
| E42B | 91 94 | STA (\$94),Y | as sector |
| E42D | 20 6C DE | JSR \$DE6C | write block |
| E430 | 20 99 D5 | JSR \$D599 | and verify |
| E433 | 20 F4 EE | JSR \$EEF4 | update BAM |
| E436 | 20 0E CE | JSR \$CE0E | update pointer for rel-file |
| E439 | 20 1E CF | JSR \$CF1E | change buffer |
| E43C | 20 F8 DE | JSR \$DEF8 | right side-sector? |
| E43F | 70 03 | BVS \$E444 | no |
| E441 | 4C 75 E2 | JMP \$E275 | |
| E444 | A9 80 | LDA #\$80 | |
| E446 | 20 97 DD | JSR \$DD97 | set bit 7 |
| E449 | A9 50 | LDA #\$50 | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|--|
| E44B | 20 C8 C1 | JSR \$C1C8 | 50, 'record not present' |
| ***** | | | write side-sector and allocate new one |
| E44E | 20 1E F1 | JSR \$F11E | find free block in BAM |
| E451 | 20 1E CF | JSR \$CF1E | change buffer |
| E454 | 20 F1 DD | JSR \$DDF1 | write block |
| E457 | 20 93 DF | JSR \$DF93 | get buffer number |
| E45A | 48 | PHA | |
| E45B | 20 C1 DE | JSR \$DEC1 | erase buffer |
| E45E | A6 82 | LDX \$82 | channel number |
| E460 | B5 CD | LDA \$CD,X | buffer number |
| E462 | A8 | TAY | |
| E463 | 68 | PLA | |
| E464 | AA | TAX | |
| E465 | A9 10 | LDA #\$10 | 16 bytes of the side-sector |
| E467 | 20 A5 DE | JSR \$DEA5 | copy in buffer |
| E46A | A9 00 | LDA #\$00 | |
| E46C | 20 DC DE | JSR \$DED0 | buffer ptr to 0, old side-sector |
| E46F | A0 02 | LDY #\$02 | |
| E471 | B1 94 | LDA (\$94),Y | side-sector number |
| E473 | 48 | PHA | |
| E474 | A9 00 | LDA #\$00 | |
| E476 | 20 C8 D4 | JSR \$D4C8 | buffer ptr to 0, new side-sector |
| E479 | 68 | PLA | |
| E47A | 18 | CLC | |
| E47B | 69 01 | ADC #\$01 | increment side-sector number |
| E47D | 91 94 | STA (\$94),Y | and in buffer |
| E47F | 0A | ASL A | times 2 |
| E480 | 69 04 | ADC #\$04 | plus 4 |
| E482 | 85 89 | STA \$89 | |
| E484 | A8 | TAY | |
| E485 | 38 | SEC | |
| E486 | E9 02 | SBC #\$02 | minus 2 |
| E488 | 85 8A | STA \$8A | same pointer to old side-sector |
| E48A | A5 80 | LDA \$80 | track |
| E48C | 85 87 | STA \$87 | |
| E48E | 91 94 | STA (\$94),Y | in buffer |
| E490 | C8 | INY | |
| E491 | A5 81 | LDA \$81 | sector |
| E493 | 85 88 | STA \$88 | |
| E495 | 91 94 | STA (\$94),Y | in buffer |
| E497 | A0 00 | LDY #\$00 | |
| E499 | 98 | TYA | |
| E49A | 91 94 | STA (\$94),Y | zero in buffer |
| E49C | C8 | INY | |
| E49D | A9 11 | LDA #\$11 | 17 |
| E49F | 91 94 | STA (\$94),Y | number of bytes in block |
| E4A1 | A9 10 | LDA #\$10 | 16 |
| E4A3 | 20 C8 D4 | JSR \$D4C8 | buffer pointer to 16 |
| E4A6 | 20 50 DE | JSR \$DE50 | write block |
| E4A9 | 20 99 D5 | JSR \$D599 | and verify |
| E4AC | A6 82 | LDX \$82 | channel number |
| E4AE | B5 CD | LDA \$CD,X | buffer number of the side-sector |
| E4B0 | 48 | PHA | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------------------------|--------------|--------------------------------|
| E4B1 | 20 9E DF | JSR \$DF9E | get buffer number |
| E4B4 | A6 82 | LDX \$82 | channel number |
| E4B6 | 95 CD | STA \$CD,X | write in table |
| E4B8 | 68 | PLA | |
| E4B9 | AE 57 02 | LDX \$0257 | channel number + 7 |
| E4BC | 95 A7 | STA \$A7,X | in table |
| E4BE | A9 00 | LDA #\$00 | |
| E4C0 | 20 C8 D4 | JSR \$D4C8 | buffer pointer to zero |
| E4C3 | A0 00 | LDY #\$00 | |
| E4C5 | A5 80 | LDA \$80 | track |
| E4C7 | 91 94 | STA (\$94),Y | in buffer |
| E4C9 | C8 | INY | |
| E4CA | A5 81 | LDA \$81 | sector |
| E4CC | 91 94 | STA (\$94),Y | in buffer |
| E4CE | 4C DE E4 | JMP \$E4DE | |
| E4D1 | 20 93 DF | JSR \$DF93 | get buffer number |
| E4D4 | A6 82 | LDX \$82 | channel number |
| E4D6 | 20 1B DF | JSR \$DF1B | read block |
| E4D9 | A9 00 | LDA #\$00 | |
| E4DB | 20 C8 D4 | JSR \$D4C8 | buffer pointer to zero |
| EFDE | C6 8A | DEC \$8A | |
| E4E0 | C6 8A | DEC \$8A | counter for side-sector blocks |
| E4E2 | A4 89 | LDY \$89 | |
| E4E4 | A5 87 | LDA \$87 | track number |
| E4E6 | 91 94 | STA (\$94),Y | in buffer |
| E4E8 | C8 | INY | |
| E4E9 | A5 88 | LDA \$88 | sector number |
| E4EB | 91 94 | STA (\$94),Y | in buffer |
| E4ED | 20 5E DE | JSR \$DE5E | write block |
| E4F0 | 20 99 D5 | JSR \$D599 | and verify |
| E4F3 | A4 8A | LDY \$8A | counter for side-sector blocks |
| E4F5 | C0 03 | CPY #\$03 | |
| E4F7 | B0 D8 | BCS \$E4D1 | greater than or equal to 3? |
| E4F9 | 4C 1E CF | JMP \$CF1E | change buffer |
| ***** | | | |
| E4FC | 00 | | table of error messages |
| E4FD | A0 4F CB | | 00 'OK' |
| E500 | 20 21 22 23 24 27 | | error numbers of 'read error' |
| E506 | D2 45 41 44 | | 'Read' |
| E50A | 89 | | pointer to 'error' |
| E50B | 52 | | 52 |
| E50C | 83 | | pointer to 'file' |
| E50D | 20 54 4F 4F 20 AC 4A 52 47 | | C5 'too largE' |
| E517 | 50 | | 50 |
| E518 | 8B 06 | | pointer to 'record' and 'not' |
| E51A | 20 50 52 45 53 45 4E D4 | | 'present' |
| E522 | 51 | | 51 |
| E523 | CF 56 45 52 46 4C 4F 57 20 | | 'Overflow in' |
| E52E | 8B | | pointer to 'record' |
| E52F | 25 28 | | error numbers of 'write error' |
| E531 | 8A 89 | | pointer to 'write' and 'error' |
| E533 | 26 | | 26 |
| E534 | 8A | | pointer to 'write' |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------------------------|-----------------------------------|---------------|
| E535 | 20 50 52 4F 54 45 43 54 | 20 4F CE | ' protect oN' |
| E540 | 29 | 29 | |
| E541 | 88 | pointer to 'disk' | |
| E542 | 20 49 85 | ' id' | |
| E545 | 85 | pointer to ' mismatch' | |
| E546 | 30 31 32 33 34 | error numbers for 'syntax error' | |
| E54B | D3 59 4E 54 41 58 | 'Syntax' | |
| E551 | 89 | pointer to ' error' | |
| E552 | 60 | 60 | |
| E553 | 8A 03 84 | ptrs to 'write', 'file' & 'open' | |
| E556 | 63 | 63 | |
| E557 | 83 | pointer to 'file' | |
| E558 | 20 45 58 49 53 54 D3 | ' exists' | |
| E55F | 64 | 64 | |
| E560 | 83 | pointer to 'file' | |
| E561 | 20 54 59 50 45 | ' type' | |
| E566 | 85 | pointer to 'mismatch' | |
| E567 | 65 | 65 | |
| E568 | CE 4F 20 42 4C 4F 43 CB | 'No block' | |
| E570 | 66 67 | 'illegal track or sector' | |
| E572 | C9 4C 4C 45 47 41 4C 20 | 'Illegal ' | |
| E57A | 54 52 41 43 4B 20 4F 52 | 'track or' | |
| E582 | 20 53 45 43 54 4F D2 | 'sector' | |
| E589 | 61 | 61 | |
| E58A | 83 06 84 | pointer to 'file', 'not' & 'open' | |
| E58D | 39 62 | error nos. for 'file not found' | |
| E590 | 83 06 87 | ptrs to 'file', 'not' & 'found' | |
| E593 | 01 | 01 | |
| E594 | 83 | pointer to 'file' | |
| E594 | 53 20 53 43 52 41 54 43 48 | 45 C4 's scratched' | |
| E59F | 70 | 70 | |
| E5A0 | CE 4F 20 43 48 41 4E 4E 45 | CC 'No channel' | |
| E5AA | 71 | 71 | |
| E5AB | C4 49 52 | 'Dir' | |
| E5AE | 89 | pointer to 'error' | |
| E5AF | 72 | 72 | |
| E5B0 | 88 | pointer to 'disk' | |
| E5B1 | 20 46 55 4C CC | ' full' | |
| E5B6 | 73 | 73 | |
| E5B7 | C3 42 4D 20 44 4F 53 20 | 'Cbm dos ' | |
| E5BF | 56 32 2E 36 20 31 35 34 B1 | 'v2.6 1541' | |
| E5C4 | 74 | 74 | |
| E5C5 | C4 42 49 56 45 | 'Drive' | |
| E5CA | 06 | pointer to 'not' | |
| E5CB | 20 52 45 41 44 D9 | ' ready' | |
| E5D5 | 09 | | |
| E5D6 | C5 52 52 4F D2 | 'Error' | |
| E5DB | 0A | | |
| E5DC | D7 52 49 54 C5 | 'Write' | |
| E5E1 | 03 | | |
| E5E2 | C6 49 4C C5 | 'File' | |
| E5E6 | 04 | | |
| E6E7 | CF 50 45 CE | 'Open' | |
| E5EB | 05 | | |
| E5EC | CD 49 53 4D 41 54 43 C8 | 'Mismatch' | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|-------------------|------------|----------------------------------|
| E5F4 | 06 | | |
| E5F5 | CE 4F D4 | 'NoT' | |
| E5F8 | 07 | | |
| E5F9 | C6 4F 55 4E C4 | 'FounD' | |
| E5FE | 08 | | |
| E5FF | C4 49 53 CB | 'DisK' | |
| E603 | 0B | | |
| E604 | D2 45 43 4F 52 C4 | 'RecorD' | |
| ***** | | | |
| E60A | 48 | PHA | prepare error number and message |
| E60B | 86 F9 | STX \$F9 | save error code |
| E60D | 8A | TXA | drive number |
| E60E | 0A | ASL A | |
| E60F | AA | TAX | times 2 |
| E610 | B5 06 | LDA \$06,X | as pointer |
| E612 | 85 80 | STA \$80 | |
| E614 | B5 07 | LDA \$07,X | get track |
| E616 | 85 81 | STA \$81 | and sector number |
| E618 | 68 | PLA | get error code back |
| E619 | 29 0F | AND #\$0F | isolate bits 0-3 |
| E61B | F0 08 | BEQ \$E625 | zero, then 24, 'read error' |
| E61D | C9 0F | CMP #\$0F | 15? |
| E61F | D0 06 | BNE \$E627 | |
| E621 | A9 74 | LDA #\$74 | |
| E623 | D0 08 | BNE \$E62D | 74, 'drive not ready' |
| E625 | A9 06 | LDA #\$06 | 6 |
| E627 | 09 20 | ORA #\$20 | add \$20 |
| E629 | AA | TAX | |
| E62A | CA | DEX | |
| E62B | CA | DEX | subtract two |
| E62C | 8A | TXA | |
| E62D | 48 | PHA | save error number |
| E62E | AD 2A 02 | LDA \$022A | number of the disk command |
| E631 | C9 00 | CMP #\$00 | OPEN or VALIDATE? |
| E633 | D0 0F | BNE \$E644 | no |
| E635 | A9 FF | LDA #\$FF | |
| E637 | 8D 2A 02 | STA \$022A | |
| E63A | 68 | PLA | get error number back |
| E63B | 20 C7 E6 | JSR \$E6C7 | generate error message |
| E63E | 20 42 D0 | JSR \$D042 | load BAM |
| E641 | 4C 48 E6 | JMP \$E648 | set error message |
| E644 | 68 | PLA | |
| E645 | 20 C7 E6 | JSR \$E6C7 | set error message |
| E648 | 20 BD C1 | JSR \$C1BD | erase input buffer |
| E64B | A9 00 | LDA #\$00 | |
| E64D | 8D F9 02 | STA \$02F9 | erase error flag |
| E650 | 20 2C C1 | JSR \$C12C | turn LED off |
| E653 | 20 DA D4 | JSR \$D4DA | close channels 17 and 18 |
| E656 | A9 00 | LDA #\$00 | |
| E658 | 85 A3 | STA \$A3 | input buffer pointer to zero |
| E65A | A2 45 | LDX #\$45 | |
| E65C | 9A | TXS | initialize stack pointer |
| E65D | A5 84 | LDA \$84 | secondary address |

Anatomy of the 1541 Disk Drive

| | | | | |
|----------------------------------|----|-------|--------------|-----------------------------------|
| E65F | 29 | 0F | AND #\$0F | |
| E661 | 85 | 83 | STA \$83 | |
| E663 | C9 | 0F | CMP #\$0F | 15? |
| E665 | F0 | 31 | BEO \$E698 | yes, command channel |
| E667 | 78 | | SEI | |
| E668 | A5 | 79 | LDA \$79 | LISTEN active? |
| E66A | D0 | 1C | BNE \$E688 | yes |
| E66C | A5 | 7A | LDA \$7A | TALK active? |
| E66E | D0 | 10 | BNE \$E680 | yes |
| E670 | A6 | 83 | LDX \$83 | channel number |
| E672 | BD | 2B 02 | LDA \$022B,X | open channel to this second. addr |
| E675 | C9 | FF | CMP #\$FF | |
| E677 | F0 | 1F | BEO \$E698 | no |
| E679 | 29 | 0F | AND #\$0F | |
| E67B | 85 | 82 | STA \$82 | channel number |
| E67D | 4C | 8E E6 | JMP \$E68E | |
| ***** | | | | |
| TALK | | | | |
| E680 | 20 | EB D0 | JSR SD0EB | open channel for reading |
| E683 | 20 | 4E EA | JSR SEA4E | accept byte |
| E686 | D0 | 06 | BNE \$E68E | |
| ***** | | | | |
| LISTEN | | | | |
| E688 | 20 | 07 D1 | JSR SD107 | open channel for writing |
| E68B | 20 | 4E EA | JSR SEA4E | accept byte |
| E68E | 20 | 25 D1 | JSR SD125 | verify file type |
| E691 | C9 | 04 | CMP #\$04 | file type REL? |
| E693 | B0 | 03 | BCS \$E698 | yes |
| E695 | 20 | 27 D2 | JSR SD227 | close channel |
| E698 | 4C | E7 EB | JMP \$EBE7 | |
| ***** | | | | |
| convert hex to decimal (2 bytes) | | | | |
| E69B | AA | | TAX | |
| E69C | A9 | 00 | LDA #\$00 | |
| E69E | F8 | | SED | |
| E69F | E0 | 00 | CPX #\$00 | |
| F6A1 | F0 | 07 | BEO \$E6AA | convert hex to BCD |
| E6A3 | 18 | | CLC | |
| E6A4 | 69 | 01 | ADC #\$01 | |
| A6A6 | CA | | DEX | |
| E6A7 | 4C | 9F E6 | JMP \$E69F | |
| E6AA | D8 | | CLD | |
| ***** | | | | |
| divide BCD number into two bytes | | | | |
| E6AB | AA | | TAX | |
| E6AC | 4A | | LSR A | |
| E6AD | 4A | | LSR A | shift hi-nibble down |
| E6AE | 4A | | LSR A | |
| E6AF | 4A | | LSR A | |
| E6B0 | 20 | B4 E6 | JSR \$E6B4 | convert to ASCII |
| E6B3 | 8A | | TXA | |
| E6B4 | 29 | 0F | AND #\$0F | erase top 4 bits |
| E6B6 | 09 | 30 | ORA #\$30 | add '0' |
| E6B8 | 91 | A5 | STA (\$A5),Y | write in buffer |
| E6BA | C8 | | INY | increment buffer pointer |

Anatomy of the 1541 Disk Drive

E6BB 60 RTS

| | | | |
|-------|----------|--------------|--------------------------------|
| ***** | | | write 'ok' in buffer |
| E6BC | 20 23 C1 | JSR \$C123 | erase error flag |
| E6BF | A9 00 | LDA #\$00 | error number 0 |
| E6C1 | A0 00 | LDY #\$00 | |
| E6C3 | 84 80 | STY \$80 | track 0 |
| E6C5 | 84 81 | STY \$81 | sector 0 |
| ***** | | | error message in buffer |
| E6C7 | A0 00 | LDY #\$00 | buffer pointer |
| E6C9 | A2 D5 | LDX #\$D5 | |
| E6C8 | 86 A5 | STX SA5 | pointer \$A5/\$A6 TO \$2D5 |
| E6CD | A2 02 | LDX #\$02 | |
| E6CF | 86 A6 | STX SA6 | |
| E6D1 | 20 AB E6 | JSR \$E6AB | error # to ASCII and in buffer |
| E6D4 | A9 2C | LDA #\$2C | ',' comma |
| E6D6 | 9A A5 | STA (\$A5),Y | write in buffer |
| ED68 | C8 | INY | increment buffer pointer |
| E6D9 | AD D5 02 | LDA \$02D5 | first digit of the disk status |
| E6DC | 8D 43 02 | STA \$0243 | in output register |
| E6DF | 8A | TXA | error number in accumulator |
| E6E0 | 20 06 E7 | JSR \$E706 | error message in buffer |
| E6E3 | A9 2C | LDA #\$2C | ',' comma |
| E6E5 | 91 A5 | STA (\$A5),Y | write in buffer |
| E6E7 | C8 | INY | and increment buffer pointer |
| E6F8 | A5 80 | LDA \$80 | track number |
| E6EA | 20 9B E6 | JSR \$E69B | to ASCII and in buffer |
| E6ED | A9 2C | LDA #\$2C | ',' comma |
| E6EF | 91 A5 | STA (\$A5),Y | write in buffer |
| E6F1 | C8 | INY | increment buffer pointer |
| E6F2 | A5 81 | LDA \$81 | sector |
| E6F4 | 20 9B E6 | JSR \$E69B | convert to ASCII and in buffer |
| E6F7 | 88 | DEY | |
| E6F8 | 98 | TYA | |
| F6F9 | 18 | CLC | |
| E6FA | 69 D5 | ADC #\$D5 | |
| E6FC | 8D 49 02 | STA \$0249 | end pointer |
| E6FF | E6 A5 | INC SA5 | |
| E701 | A9 88 | LDA #\$88 | set READ flag |
| E703 | 85 F7 | STA \$F7 | |
| E705 | 60 | RTS | |
| ***** | | | write error message to buffer |
| E706 | AA | TAX | error code to X |
| E707 | A5 86 | LDA \$86 | |
| E709 | 48 | PHA | preserve pointer \$86/\$87 |
| E70A | A5 87 | LDA \$87 | |
| E70C | 48 | PHA | |
| E70D | A9 FC | LDA #\$FC | |
| F70F | 85 86 | STA #\$E4 | start of the error messages |
| E713 | 85 87 | STA \$87 | |
| E715 | 8A | TXA | |
| E716 | A2 00 | LDX #\$00 | error number in accumulator |
| E718 | C1 86 | CMP (\$86,X) | compare with error no in table |

Anatomy of the 1541 Disk Drive

| | | | |
|-------------------------|----------|--------------|-----------------------------------|
| E71A | F0 21 | BEQ \$E73D | |
| E71C | 48 | PHA | |
| E71D | 20 75 E7 | JSR \$E775 | bit 7 into carry and erase |
| E720 | 90 05 | BCC \$E727 | not set? |
| E722 | 20 75 E7 | JSR \$E775 | bit 7 into carry |
| E725 | 90 FB | BCC \$E722 | wait for character with bit 7 set |
| E727 | A5 87 | LDA \$87 | |
| E729 | C9 E6 | CMP #\$E6 | |
| E72B | 90 08 | BCC \$E735 | \$E60A, check to end of table |
| E72D | D0 0A | BNE \$E739 | |
| E72F | A0 0A | LDA #\$0A | |
| E731 | C5 86 | CMP \$86 | |
| E733 | 90 04 | BCC \$E739 | |
| E735 | 68 | PLA | |
| E736 | 4C 18 E7 | JMP \$E718 | no, continue |
| E739 | 68 | PLA | |
| E73A | 4C 4D E7 | JMP \$E74D | done |
| E73D | 20 67 E7 | JSR \$E767 | get a character, bit 7 in carry |
| E740 | 90 FB | BCC \$E73D | wait for character with bit 7 set |
| E742 | 20 54 E7 | JSR \$E754 | and write in buffer |
| E745 | 20 67 E7 | JST \$E767 | get next character |
| E748 | 90 F8 | BCC \$E742 | wait for character with bit 7 set |
| E74A | 20 54 E7 | JSR \$E754 | put character in buffer |
| E74D | 68 | PLA | |
| E74E | 85 87 | STA \$87 | |
| E750 | 68 | PLA | get pointer \$86/\$87 back |
| E751 | 85 86 | STA \$86 | |
| E753 | 60 | RTS | |
| ***** | | | |
| E754 | C9 20 | CMP #\$20 | get character and in buffer |
| E756 | B0 0B | BCS \$E763 | ' ' blank |
| E758 | AA | TAX | greater, then write in buffer |
| E759 | A9 20 | LDA #\$20 | save code |
| E75B | 91 A5 | STA (\$A5),Y | blank |
| E75D | C8 | INY | write in buffer |
| E75E | 8A | TXA | increment buffer pointer |
| E75F | 20 06 E7 | JSR \$E706 | code in accumulator |
| E762 | 60 | RTS | output previous text |
| E763 | 91 A5 | STA (\$A5),Y | write character in buffer |
| E765 | C8 | INY | and increment pointer |
| E766 | 60 | RTS | |
| ***** | | | |
| E767 | E6 86 | INC \$86 | get a char of the error message |
| E769 | D0 02 | BNE \$E76D | increment pointer |
| E76B | E6 87 | INC \$87 | |
| E76D | A1 86 | LDA (\$86,X) | get character |
| E76F | 0A | ASL A | bit 7 into carry |
| E770 | A1 86 | LDA (\$86,X) | get character |
| E772 | 29 7F | AND #\$7F | erase bit 7 |
| E774 | 60 | PTS | |
| ***** increment pointer | | | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|------------|--|
| E775 | 20 6D E7 | JSR \$E76D | bit 7 into carry |
| E778 | E6 86 | INC \$86 | |
| E77A | D0 02 | BNE \$E77E | increment pointer |
| E77C | E6 87 | INC \$87 | |
| E77E | 60 | RTS | |
| ***** | | | |
| E77F | 60 | RTS | |
| ***** | | | |
| E780 | AD 00 18 | LDA \$1800 | check for AUTO-start read IEEE port |
| E783 | AA | TAX | |
| E784 | 29 04 | AND #\$04 | isolate 'CLOCK IN' bit |
| E786 | F0 F7 | BEO \$E77F | not set, then done |
| E788 | 8A | TXA | |
| E789 | 29 01 | AND #\$01 | isolate 'DATA IN' bit |
| E78B | F0 F2 | BEO \$E77F | not set, then done |
| E78D | 58 | CLI | |
| E78E | AD 00 18 | LDA \$1800 | load IEEE port |
| E791 | 29 05 | AND #\$05 | test 'DATA IN' and 'CLOCK IN' |
| E793 | F0 F9 | BNE \$E78E | wait until both set |
| E795 | EE 78 02 | INC \$0278 | file name |
| E798 | EE 74 02 | INC \$0274 | character in the input line |
| E79B | A9 2A | LDA #\$2A | '*' as filename |
| E79D | 8D 00 02 | STA \$0200 | write in buffer |
| E7A0 | 4C A8 E7 | JMP \$E7A8 | |
| ***** | | | |
| E7A3 | A9 8D | LDA #\$8D | '&' - command |
| E7A5 | 20 68 C2 | JSR \$C268 | check command line to end |
| E7A8 | 20 58 F2 | JSR \$F258 | (RTS) |
| E7AB | AD 78 02 | LDA \$0278 | number of file names |
| E7AE | 48 | PHA | save |
| E7AF | A9 01 | LDA #\$01 | |
| E7B1 | 8D 78 02 | STA \$0278 | file name |
| E7B4 | A9 FF | LDA #\$FF | |
| E7B6 | 85 86 | STA \$86 | |
| E7B8 | 20 4F C4 | JSR \$C44F | find file |
| E7BB | AD 80 02 | LDA \$0280 | |
| E7BE | D0 05 | BNE \$E7C5 | found? |
| E7C0 | A9 39 | LDA #\$39 | |
| E7C2 | 20 C8 C1 | JSR \$C1C8 | 39, 'file not found' |
| E7C5 | 68 | PLA | |
| E7C6 | 8D 78 02 | STA \$0278 | get number of file names back |
| E7C9 | AD 80 02 | LDA \$0280 | |
| E7CC | 85 80 | STA \$80 | track |
| E7CE | AD 85 02 | LDA \$0285 | |
| E7D1 | 85 81 | STA \$81 | and sector |
| E7D3 | A9 03 | LDA #\$03 | file type 'USR' |
| E7D5 | 20 77 D4 | JSR \$D477 | buffer allocated, read 1st block |
| E7D8 | A9 00 | LDA #\$00 | |
| E7DA | 85 87 | STA \$87 | erase checksum |
| E7DC | 20 39 E8 | JSR \$E839 | get byte from file |
| E7DF | 85 88 | STA \$88 | save as start address to |
| E7E1 | 20 4B E8 | JSR \$E84B | form checksum |

Anatomy of the 1541 Disk Drive

| | | | |
|-------------------------|----------|--------------|-----------------------------------|
| E7E4 | 20 39 E8 | JSR \$E839 | get byte from file |
| E7E7 | 85 89 | STA \$89 | as start address hi |
| E7E9 | 20 4B E8 | JSR \$E84B | form checksum |
| E7EC | A5 86 | LDA \$86 | |
| E7EE | F0 0A | BEO \$E7FA | |
| E7F0 | A5 88 | LDA \$88 | |
| E7F2 | 48 | PHA | save program start address |
| E7F3 | A5 89 | LDA \$89 | |
| E7F5 | 48 | PHA | |
| E7F6 | A9 00 | LDA #\$00 | |
| E7F8 | 85 86 | STA \$86 | |
| E7FA | 20 39 E8 | JSR \$E839 | get byte from file |
| E7FD | 85 8A | STA \$8A | save as counter |
| E7FF | 20 4B E8 | JSR \$E84B | form checksum |
| E802 | 20 39 E8 | JSR \$E839 | get byte from file |
| E805 | A0 00 | LDY #\$00 | |
| E807 | 91 88 | STA (\$88),Y | save as program bytes |
| E809 | 20 4B E8 | JSR \$E84B | form checksum |
| E80C | A5 88 | LDA \$88 | |
| E80E | 18 | CLC | |
| E80F | 69 01 | ADC #\$01 | |
| E811 | 85 88 | STA \$88 | increment \$88/\$89 |
| E813 | 90 02 | BCC \$E817 | |
| E815 | E6 89 | INC \$89 | |
| E817 | C6 8A | DEC \$8A | decrement pointer |
| E819 | D0 E7 | BNE \$E802 | |
| E81B | 20 35 CA | JSR \$CA35 | get next byte |
| E81E | A5 85 | LDA \$85 | data byte |
| E820 | C5 87 | CMP \$87 | equal to checksum? |
| E822 | F0 08 | BEO \$E82C | yes |
| E824 | 20 3E DE | JSR \$DE3E | transmit param to disk controller |
| E827 | A9 50 | LDA #\$50 | |
| E829 | 20 45 E6 | JSR \$E645 | 50, 'record not present' |
| E82C | A5 F8 | LDA \$F8 | end? |
| E82E | D0 A8 | BNE \$E7D8 | no, next data block |
| E830 | 68 | PLA | |
| E831 | 85 89 | STA \$89 | |
| E833 | 68 | PLA | get program start address back |
| E834 | 85 88 | STA \$88 | |
| E836 | 6C 88 00 | JMP (\$0088) | and execute program |
| E839 | 20 35 CA | JSR \$CA35 | get byte from file |
| E83C | A5 F8 | LDA \$F8 | end? |
| E83E | D0 08 | BNE \$E848 | no |
| E840 | 20 3E DE | JSR \$DE3E | transmit param to disk controller |
| E843 | A9 51 | LDA #\$51 | |
| E845 | 20 45 E6 | JSR \$E645 | 51, 'overflow in record' |
| E848 | A5 85 | LDA \$85 | data byte |
| E84A | 60 | RTS | |
| ***** generate checksum | | | |
| E84B | A8 | CLC | |
| E84C | 65 87 | ADC \$87 | |
| E84E | 69 00 | ADC #\$00 | |
| E850 | 85 87 | STA \$87 | |
| E852 | 60 | RTS | |

Anatomy of the 1541 Disk Drive

***** IRO routine for serial bus
E853 AD 01 18 LDA \$1801 read port A, erase IRO flag
E856 A9 01 LDA #\$01
E858 85 7C STA \$7C set flag for 'ATN received'
E85A 60 RTS

***** servicing the serial bus
E85B 78 SEI
E85C A9 00 LDA #\$00
E85E 85 7C STA \$7C erase flag for 'ATN received'
E860 85 79 STA \$79 erase flag for LISTEN
E862 85 7A STA \$7A erase flag for TALK
E864 A2 45 LDX #\$45
E866 9A TXS initialize stack pointer
E867 A9 80 LDA #\$80
E869 85 F8 STA \$F8
E86B 85 7D STA \$7D
E86D 20 B7 E9 JSR \$E9B7
E870 20 A5 E9 JSR \$E9A5
E873 AD 00 18 LDA \$1800
E876 09 10 ORA #\$10 switch data lines to input
E878 8D 00 18 STA \$1800
E87B AD 00 18 LDA \$1800 read IEEE port
E87E 10 57 BPL \$E8D7 EOI?
E880 29 04 AND #\$04 CLOCK IN?
E882 D0 F7 BNE \$E87B no
E884 20 C9 E9 JSR \$E9C9 get byte from bus
E887 C9 3F CMP #\$3F unlisten?
E889 D0 06 BNE \$E891 no
E88B A9 00 LDA #\$00
E88D 85 79 STA \$79 reset flag for LISTEN
E88F F0 71 BEQ \$E902
E891 C9 5F CMP #\$5F
E893 D0 06 BNE \$E89B
E895 A9 00 LDA #\$00
E897 85 7A STA \$7A reset flag for TALK
E899 F0 67 BEQ \$E902
E89B C5 78 CMP \$78
E89D D0 0A BNE \$E8A9
E89F A9 01 LDA #\$01
E8A1 85 7A STA \$7A set flag for TALK
E8A3 A9 00 LDA #\$00
E8A5 85 79 STA \$79 reset flag for LISTEN
E8A7 F0 29 BEQ \$E8D2
E8A9 C5 77 CMP \$77
E8AB D0 0A BNE \$E8B7
E8AD A9 01 LDA #\$01
E8AF 85 79 STA \$79 set flag for LISTEN
E8B1 A9 00 LDA #\$00
E8B3 85 7A STA \$7A
E8B5 F0 1B BEQ \$E8D2
E8B7 AA TAX
E8B8 29 60 AND #\$60
E8BA C9 60 CMP #\$60 set bit 5 and 6

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|------------|------------------------------------|
| E8BC | D0 3F | BNE \$E8FD | |
| E8BE | 8A | TXA | |
| E8BF | 85 84 | STA \$84 | byte is secondary address |
| E8C1 | 29 0F | AND #\$0F | |
| E8C3 | 85 83 | STA \$83 | channel number |
| E8C5 | A5 84 | LDA \$84 | |
| E8C7 | 29 F0 | AND #\$F0 | |
| E8C9 | C9 E0 | CMP #\$E0 | CLOSE? |
| E8CB | D0 35 | BNE \$E902 | |
| E8CD | 58 | CLI | |
| E8CE | 20 C0 DA | JSR \$DAC0 | CLOSE routine |
| E8D1 | 78 | SEI | |
| E8D2 | 2C 00 18 | BIT \$1800 | |
| E8D5 | 30 AD | BMI \$E884 | |
| E8D7 | A9 00 | LDA #\$00 | |
| E8D9 | 85 7D | STA \$7D | set EOI |
| E8DB | AD 00 18 | LDA \$1800 | IEEE port |
| E8DE | 29 EF | AND #\$EF | switch data lines to output |
| E8E0 | 8D 00 18 | STA \$1800 | |
| E8E3 | A5 79 | LDA \$79 | LISTEN active? |
| E8E5 | F0 06 | BEO \$E8ED | no |
| E8E7 | 20 2E EA | JSR \$EA2E | receive data |
| E8EA | 4C E7 EB | JMP \$EBE7 | to delay loop |
| E8ED | A5 7A | LDA \$7A | TALK active? |
| E8EF | F0 09 | BEO \$E8FA | no |
| E8F1 | 20 9C E9 | JSR \$E99C | DATA OUT, bit '1', lo |
| E8F4 | 20 AE E9 | JSR \$E9AE | CLOCK OUT hi |
| E8F7 | 20 09 E9 | JSR \$E909 | send data |
| E8FA | 4C 4E EA | JMP \$EA4E | to delay loop |
| E8FD | A9 10 | LDA #\$10 | either TALK or LISTEN, ignore byte |
| E8FF | 8D 00 18 | STA \$1800 | switch data lines to input |
| E902 | 2C 00 18 | BIT \$1800 | |
| E905 | 10 D0 | BPL \$E8D7 | |
| E907 | 30 F9 | BMI \$E902 | wait for handshake |
| ***** | | | |
| E909 | 78 | SEI | send data |
| E90A | 20 EB D0 | JSR \$DOEB | open channel for read |
| E90D | B0 06 | BCS \$E915 | channel active |
| E90F | A6 82 | LDX \$82 | channel number |
| E911 | B5 F2 | LDA SF2,X | set READ flag? |
| E913 | 30 01 | BMI \$E916 | yes |
| E915 | 60 | RTS | |
| E916 | 20 59 FA | JSR \$EA59 | check EOI |
| E919 | 20 C0 E9 | JSR \$E9C0 | read IEEE port |
| E91C | 29 01 | AND #\$01 | isolate data bit |
| E91E | 08 | PHP | and save |
| E91F | 20 B7 E9 | JSR \$E9B7 | CLOCK OUT lo |
| E922 | 28 | PLP | |
| E923 | F0 12 | BEO \$E937 | |
| E925 | 20 59 EA | JSR \$EA59 | check EOI |
| E928 | 20 C0 E9 | JSR \$E9C0 | read IEEE port |
| E92B | 29 01 | AND #\$01 | isolate data bit |
| E92D | D0 F6 | BNE \$E925 | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|------------------------------|
| E92F | A6 82 | LDX \$82 | channel number |
| E931 | B5 F2 | LDA \$F2,X | |
| E933 | 29 08 | AND #\$08 | |
| E935 | D0 14 | BNE \$E94B | |
| E937 | 20 59 EA | JSR \$EA59 | check EOI |
| E93A | 20 C0 E9 | JSR \$E9C0 | read IEEE port |
| E93D | 29 01 | AND #\$01 | isolate data bit |
| E93F | D0 F6 | BNE \$E937 | |
| E941 | 20 59 EA | JSR \$EA59 | check EOI |
| E944 | 20 C0 E9 | JSR \$E9C0 | read IEEE port |
| E947 | 29 01 | AND #\$01 | isolate data bit |
| E949 | F0 F6 | BEQ \$E941 | |
| E84B | 20 AE E9 | JSR \$E9AE | CLOCK OUT hi |
| E94E | 20 59 EA | JSR \$EA59 | check EOI |
| E951 | 20 C0 E9 | JSR \$E9C0 | read IEEE port |
| E954 | 29 01 | AND #\$01 | isolate data bit |
| E956 | D0 F3 | BNE \$E94B | |
| E958 | A9 08 | LDA #\$08 | counter to 8 bits for serial |
| E95A | 85 98 | STA \$98 | transmission |
| E95C | 20 C0 E9 | JSR \$E9C0 | read IEEE port |
| E95F | 29 01 | AND #\$01 | isolate data bit |
| E961 | D0 36 | BNE \$E999 | |
| E963 | A6 82 | LDX \$82 | |
| E965 | BD 3E 02 | LDA \$023E,X | |
| E968 | 6A | ROR A | lowest bit in carry |
| E969 | 9D 3E 02 | STA \$023E,X | |
| E96C | B0 05 | BCS \$E973 | set bit |
| E96E | 20 AS E9 | JSR \$E9A5 | DATA OUT, output bit '0' |
| E971 | D0 03 | BNE \$E976 | absolute jump |
| E973 | 20 9C E9 | JSR \$E99C | DATA OUT, output bit '1' |
| E976 | 20 B7 E9 | JSR \$E9B7 | set CLOCK OUT |
| E979 | A5 23 | LDA \$23 | |
| E97B | D0 03 | BNE \$E980 | |
| E97D | 20 F3 FE | JSR \$FEF3 | delay for serial bus |
| E980 | 20 FB FE | JSR \$FEFB | set DATA OUT and CLOCK OUT |
| E983 | C6 98 | DEC \$98 | all bits output? |
| E985 | D0 D5 | BNE \$E95C | no |
| E987 | 20 59 EA | JSR \$EA59 | check EOI |
| E98A | 20 C0 E9 | JSR \$E9C0 | read IEEE port |
| E98D | 29 01 | AND #\$01 | isolate data bit |
| E98F | F0 F6 | BEQ \$E987 | |
| E991 | 58 | CLI | |
| E992 | 20 AA D3 | JSR \$D3AA | get next data byte |
| E995 | 78 | SEI | |
| E996 | 4C 0F E9 | JMP \$E90F | and output |
| E999 | 4C 4E EA | JMP SEA4E | to delay loop |
| ***** | | | |
| E99C | AD 00 18 | LDA \$1800 | DATA OUT lo |
| E99F | 29 FD | AND #\$FD | output bit '1' |
| E9A1 | 8D 00 18 | STA \$1800 | |
| E9A4 | 60 | RTS | |
| ***** | | | |
| | | | DATA OUT hi |

Anatomy of the 1541 Disk Drive

```

E9A5 AD 00 18 LDA $1800
E9A8 09 02 ORA #$02      output bit '0'
E9AA 8D 00 18 STA $1800
E9AD 60 RTS

***** CLOCK OUT hi *****
E9AE AD 00 18 LDA $1800
E9B1 09 08 ORA #$08      set bit 3
E9B3 8D 00 18 STA $1800
E9B6 60 RTS

***** CLOCK OUT lo *****
E9B7 AD 00 18 LDA $1800
E9BA 29 F7 AND #$F7      erase bit 3
E9BC 8D 00 18 STA $1800
E9BF 60 RTS

***** read IEEE port *****
E9C0 AD 00 18 LDA $1800
E9C3 CD 00 18 CMP $1800
E9C6 D0 F8 BNE $E9C0      wait for constants
E9C8 60 RTS

***** read port *****
E9C9 A9 08 LDA #$08
E9CB 85 98 STA $98
E9CD 20 59 EA JSR $EA59
E9D0 20 C0 E9 JSR $E9C0
E9D3 29 04 AND #$04
E9D5 D0 F6 BNE $E9CD
E9D7 20 9C E9 JSR $E99C
E9DA A9 01 LDA #$01
E9DC 8D 05 18 STA $1805
E9DF 20 59 EA JSR $EA59
E9E2 AD 0D 18 LDA $180D
E9E5 29 40 AND #$40
E9E7 D0 09 BNE $E9F2
E9E9 20 C0 E9 JSR $E9C0
E9EC 29 04 AND #$04
E9EE F0 EF BEQ $E9DF
E9F0 D0 19 BNE $EA0B
E9F2 20 A5 E9 JSR $E9A5
E9F5 A2 0A LDY #$0A
E9F7 CA DEX
E9F8 D0 FD BNE $E9F7
E9FA 20 9C E9 JSR $E99C
E9FD 20 59 EA JSR $EA59
EA00 20 C0 E9 JSR $E9C0
EA03 29 04 AND #$04
EA05 F0 F6 BEQ $E9FD
EA07 A9 00 LDA #$00
EA09 85 F8 STA $F8
EA0B AD 00 18 LDA $1800
EA0E 49 01 EOR #$01      invert data byte
EA10 4A LSR A

***** bit counter for serial output *****
***** check EOI *****
***** read IEEE port *****
***** CLOCK IN? *****
***** no, wait *****
***** DATA OUT, bit '1' *****
***** set timer *****
***** check EOI *****
***** timer run down? *****
***** yes, EOI *****
***** read IEEE port *****
***** CLOCK IN? *****
***** no, wait *****
***** DATA OUT bit '0' hi *****
***** 10 *****
***** delay loop, approx 50 micro sec. *****
***** DATA OUT, bit '1', lo *****
***** check EOI *****
***** read IEEE *****
***** CLOCK IN? *****
***** no, wait *****
***** set EOI flag *****
***** IEEE port *****

```

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|------------|--------------------------------|
| EA11 | 29 02 | AND #\$02 | |
| EA13 | D0 F6 | BNE \$EA0B | CLOCK IN? |
| EA15 | EA | NOP | |
| EA16 | EA | NOP | |
| EA17 | EA | NOP | |
| EA18 | 66 85 | ROR \$85 | prepare next bit |
| EA1A | 20 59 EA | JSR \$EA59 | check EOI |
| EA1D | 20 C0 E9 | JSR \$E9C0 | read IEEE port |
| EA20 | 29 04 | AND #\$04 | CLOCK IN? |
| EA22 | F0 F6 | BEQ \$EA1A | no |
| EA24 | C6 98 | DEC \$98 | decrement bit counter |
| EA26 | D0 E3 | BNE \$EA0B | all bits output? |
| EA28 | 20 A5 E9 | JSR \$E9A5 | DATA OUT, bit '0', hi |
| EA2B | A5 85 | LDA \$85 | load data byte again |
| EA2D | 60 | RTS | |
| ***** | | | |
| | | | accept data from serial bus |
| EA2E | 78 | SEI | |
| EA2F | 20 07 D1 | JSR \$D107 | open channel for writing |
| EA32 | B0 05 | RCS \$EA39 | channel not active? |
| EA34 | B5 F2 | LDA \$F2,X | WRITE flag |
| EA36 | 6A | ROR A | |
| EA37 | B0 0B | BCS \$EA44 | not set? |
| EA39 | A5 84 | LDA \$84 | secondary address |
| EA3B | 29 F0 | AND #\$F0 | |
| EA3D | C9 F0 | CMP #\$F0 | OPEN command? |
| EA3F | F0 03 | BEQ \$EA44 | yes |
| EA41 | 4C 4E EA | JMP \$EA4E | to wait loop |
| EA44 | 20 C9 E9 | JSR \$E9C9 | get data byte from bus |
| EA47 | 58 | CLI | |
| EA48 | 20 B7 CF | JSR \$CFB7 | and write in buffer |
| EA4B | 4C 2E EA | JMP \$EA2E | to loop beginning |
| EA4E | A9 00 | LDA #\$00 | |
| EA50 | 8D 00 18 | STA \$1800 | reset IEEE port |
| EA53 | 4C E7 EB | JMP \$EBE7 | to wait loop |
| EA56 | 4C 5B E8 | JMP \$EB58 | to serial bus main loop |
| ***** | | | |
| EA59 | A5 7D | LDA \$7D | EOI received? |
| EA5B | F0 06 | BEQ \$EA63 | yes |
| EA5D | AD 00 18 | LDA \$1800 | IEEE port |
| EA60 | 10 09 | BPL \$EA6B | |
| EA62 | 60 | RTS | |
| EA63 | AD 00 18 | LDA \$1800 | IEEE port |
| EA66 | 10 FA | BPL \$EA62 | |
| EA68 | 4C D7 E8 | JMP \$E8D7 | set EOI, serve serial bus |
| ***** | | | |
| EA6E | A2 00 | LDX #\$00 | blink LED for hardware defects |
| EA70 | 2C | .BYTE S2C | blink once, zero page |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|------------|---------------------------------|
| EA71 | A5 6F | LDX \$6F | blink X+1 times for RAM/ROM err |
| EA73 | 9A | TXS | |
| EA74 | BA | TSX | |
| EA75 | A9 08 | LDA #\$08 | select LED bit in the port |
| EA77 | 0D 00 1C | ORA \$1C00 | |
| EA7A | 4C EA FE | JMP \$FEEA | turn LED on, back to \$EA7D |
| EA7D | 98 | TYA | |
| EA7E | 18 | CLC | |
| EA7F | 69 01 | ADC #\$01 | |
| EA81 | D0 FC | BNE \$EA7F | |
| EA83 | 88 | DEY | |
| EA84 | D0 F8 | BNE \$EA7E | |
| EA86 | AD 00 1C | LDA \$1C00 | |
| EA89 | 29 F7 | AND #\$F7 | turn LED off |
| EA8B | 8D 00 1C | STA \$1C00 | |
| EA8E | 98 | TYA | |
| EA8F | 18 | CLC | |
| EA90 | 69 01 | ADC #\$01 | |
| EA92 | D0 FC | BNE \$EA90 | delay loop |
| EA94 | 88 | DEY | |
| EA95 | D0 F8 | BNE \$EA8F | |
| EA97 | CA | DEX | |
| EA98 | 10 DB | BPL \$EA75 | |
| EA9A | E0 FC | CPX #\$FC | |
| EA9C | D0 F0 | BNE \$EA8E | wait for delay |
| EA9E | F0 D4 | BEQ \$EA74 | turn LED on again |

***** RESET routine *****

| | | | |
|------|----------|------------|-----------------------------------|
| EAA0 | 78 | SEI | |
| EAA1 | D8 | CLD | |
| EAA2 | A2 FF | LDX #\$FF | |
| EAA4 | 8E 03 18 | STX \$1803 | port A to output |
| EAA7 | E8 | INX | |
| EAA8 | A0 00 | LDY #\$00 | |
| EAAA | A2 00 | LDX #\$00 | |
| EAAC | 8A | TXA | |
| EAAD | 95 00 | STA \$00,X | erase zero page |
| EAAF | E8 | INX | |
| EAB0 | D0 FA | BNE \$EAAC | |
| EAB2 | 8A | TXA | |
| EAB3 | D5 00 | CMP \$00,X | is byte erased? |
| EAB5 | D0 B7 | BNE \$EA6E | no, then to error display (blink) |
| EAB7 | F6 00 | INC \$00,X | |
| EAB9 | C8 | INY | |
| EABA | D0 FB | BNE \$EAB7 | |
| EABC | D5 00 | CMP \$00,X | |
| EABE | D0 AE | BNE \$EA6E | error |
| EAC0 | 94 00 | STY \$00,X | |
| EAC2 | B5 00 | LDA \$00,X | |
| EAC4 | D0 A8 | BNE \$EA6E | error |
| EAC6 | E8 | INX | |
| EAC7 | D0 E9 | BNE \$EAB2 | |
| EAC9 | E6 6F | INC \$6F | |
| EACB | 86 76 | STX \$76 | |
| EACD | A9 00 | LDA #\$00 | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|-------------------------------|
| EACF | 85 75 | STA \$75 | |
| EAD1 | A8 | TAY | |
| EAD2 | A2 20 | LDX #\$20 | test 32 pages |
| EAD4 | 18 | CLC | |
| EAD5 | C6 76 | DEC \$76 | |
| EAD7 | 71 75 | ADC (\$75),Y | |
| EAD9 | C8 | INY | |
| EADA | D0 FB | BNE \$EAD7 | |
| EADC | CA | DEX | |
| EADD | D0 F6 | BNE \$EAD5 | test ROM |
| EADF | 69 00 | ADC #\$00 | |
| EAE1 | AA | TAX | |
| EAE2 | C5 76 | CMP \$76 | |
| EAE4 | D0 39 | BNE \$EB1F | ROM error |
| EAE6 | E0 C0 | CPX #\$C0 | |
| EAE8 | D0 DF | BNE \$EAC9 | |
| EAEA | A9 01 | LDA #\$01 | |
| EAECC | 85 76 | STA \$76 | |
| EAEF | E6 6F | INC \$6F | |
| EAFO | A2 07 | LDX #\$07 | test RAM, beginning at page 7 |
| EAFF2 | 98 | TYA | |
| EAFF3 | 18 | CLC | |
| EAFF4 | 65 76 | ADC \$76 | |
| EAFF6 | 91 75 | STA (\$75),Y | |
| EAFF8 | C8 | INY | |
| EAFF9 | D0 F7 | BNE \$EAFF2 | |
| EAFFB | E6 76 | INC \$76 | |
| EAFFD | CA | DEX | |
| EAFFE | D0 F2 | BNE \$EAFF2 | |
| EB00 | A2 07 | LDX #\$07 | |
| EB02 | C6 76 | DEC \$76 | |
| EB04 | 88 | DEY | |
| EB05 | 98 | TYA | |
| EB06 | 18 | CLC | |
| EB07 | 65 76 | ADC \$76 | |
| EB09 | D1 75 | CMP (\$75),Y | |
| EB0B | D0 12 | BNE \$EB1F | RAM error |
| EB0D | 49 FF | EOR #\$FF | |
| EB0F | 91 75 | STA (\$75),Y | |
| EB11 | 51 75 | EOR (\$75),Y | |
| EB13 | 91 75 | STA (\$75),Y | |
| EB15 | D0 08 | BNE \$EB1F | RAM error |
| EB17 | 98 | TYA | |
| EB18 | D0 EA | BNE \$EB04 | |
| EB1A | CA | DEX | |
| EB1B | D0 E5 | BNE \$EB02 | continue test |
| EB1D | F0 03 | BEO \$EB22 | ok |
| EB1F | 4C 71 EA | JMP \$EA71 | to error display |
| EB22 | A2 45 | LDX #\$45 | |
| EB24 | 9A | TXS | initialize stack pointer |
| EB25 | AD 00 1C | LDA \$1C00 | |
| EB28 | 29 F7 | AND #\$F7 | turn LED off |
| EB2A | 8D 00 1C | STA \$1C00 | |
| EB2D | A9 01 | LDA #\$01 | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|--------------------------------------|
| EB2F | 8D 0C 18 | STA \$180C | CAL (ATN IN) trigger on pos edge |
| EB32 | A9 82 | LDA #\$82 | |
| EB34 | 8D 0D 18 | STA \$180D | interrupt possible through ATN IN |
| EB37 | 8D 0E 18 | STA \$180E | |
| EB3A | AD 00 18 | LDA \$1800 | |
| EB3D | 29 60 | AND #\$60 | read port B |
| EB3F | 0A | ASL A | isolate bits 5 & 6 (device #) |
| EB40 | 2A | ROL A | |
| EB41 | 2A | ROL A | rotate to bit positions 0 & 1 |
| EB42 | 2A | ROL A | |
| EB43 | 09 48 | ORA #\$48 | |
| EB45 | 85 78 | STA \$78 | |
| EB47 | 49 60 | EOR #\$60 | |
| EB49 | 85 77 | STA \$77 | erase bit 6, set bit 5 |
| EB4B | A2 00 | LDX #\$00 | device number + \$20 for LISTEN |
| EB4D | A0 00 | LDY #\$00 | |
| EB4F | A9 00 | LDA #\$00 | |
| EB51 | 95 99 | STA \$99,X | low-byte of buffer address |
| EB53 | E8 | INX | |
| EB54 | B9 E0 FE | LDA \$FEE0,Y | high byte of address from table |
| EB57 | 95 99 | STA \$99,X | save |
| EB59 | E8 | INX | |
| EB5A | C8 | INY | |
| EB5B | C0 05 | CPY #\$05 | |
| EB5D | D0 F0 | BNE \$EB4F | |
| EB5F | A9 00 | LDA #\$00 | |
| EB61 | 95 99 | STA \$99,X | |
| EB63 | E8 | INX | ptr \$A3/\$A4 to \$200, input buffer |
| EB64 | A9 02 | LDA #\$02 | |
| EB66 | 95 99 | STA \$99,X | |
| EB68 | E8 | INX | |
| EB69 | A9 D5 | LDA #\$D5 | |
| EB6B | 95 99 | STA \$99,X | |
| EB6D | E8 | INX | pointer \$A5/\$A6 to \$2D5, error |
| EB6E | A9 02 | LDA #\$02 | message pointer |
| EB70 | 95 99 | STA \$99,X | |
| EB72 | A9 FF | LDA #\$FF | |
| EB74 | A2 12 | LDX #\$12 | |
| EB76 | 9D 2B 02 | STA \$022B,X | fill channel table with \$FF |
| EB79 | CA | DEX | |
| EB7A | 10 FA | BPL \$EB76 | |
| EB7C | A2 05 | LDX #\$05 | |
| EB7E | 95 A7 | STA \$A7,X | erase buffer table |
| EB80 | 95 AE | STA \$AE,X | |
| EB82 | 95 CD | STA \$CD,X | erase side-sector table |
| EB84 | CA | DEX | |
| EB85 | 10 F7 | BPL \$EB7E | |
| EB87 | A9 05 | LDA #\$05 | buffer 5 |
| EB89 | 85 AB | STA \$AB | associate with channel 4 |
| EB8B | A9 06 | LDA #\$06 | buffer 6 |
| EB8D | 85 AC | STA \$AC | associate with channel 5 |
| EB8F | A9 FF | LDA #\$FF | |
| EB91 | 85 AD | STA \$AD | |
| EB93 | 85 B4 | STA \$B4 | |
| EB95 | A9 05 | LDA #\$05 | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|------------|------------------------------------|
| EB97 | 8D 3B 02 | STA \$023B | channel 5 WRITE flag erased |
| EB9A | A9 84 | LDA #\$84 | |
| EB9C | 8D 3A 02 | STA \$023A | channel 4 WRITE flag set |
| EB9F | A9 0F | LDA #\$0F | initialize channel allocation reg |
| EBA1 | 8D 56 02 | STA \$0256 | bit '1' equals channel free |
| EBA4 | A9 01 | LDA #\$01 | |
| EBA6 | 85 F6 | STA \$F6 | WRITE flag |
| EBA8 | A9 88 | LDA #\$88 | |
| EBA9 | 85 F7 | STA \$F7 | READ flag |
| EBAE | A9 F0 | LDA #\$E0 | 5 buffers free |
| EBAE | 8D 4F 02 | STA \$024F | initialize buffer allocation reg |
| EBB1 | A9 FF | LDA #\$FF | \$24F/\$250, 16 bit |
| EBB3 | 8D 50 02 | STA \$0250 | |
| EBB6 | A9 01 | LDA #\$01 | |
| EBB8 | 85 1C | STA \$1C | flags for WRITE protect |
| EBBA | 85 1D | STA \$1D | |
| EBBC | 20 63 CB | JSR \$CB63 | set vector for U0 |
| EBBF | 20 FA CE | JSR \$CEFA | initialize channel table |
| EBC2 | 20 59 F2 | JSR \$F259 | initialization for disk controller |
| EBC5 | A9 22 | LDA #\$22 | |
| EBC7 | 85 65 | STA \$65 | |
| EBC9 | A9 EB | LDA #\$EB | pointer \$65/\$66 to \$EB22 |
| EBCB | 85 66 | STA \$66 | |
| EBCD | A9 OA | LDA #\$OA | |
| EBCF | 85 69 | STA \$69 | step width 10 |
| EBD1 | A9 05 | LDA #\$05 | for sector assignment |
| EBD3 | 85 6A | STA \$6A | 5 read attempts |
| EBD5 | A9 73 | LDA #\$73 | prepare power-up message |
| EBD7 | 20 C1 E6 | JSR \$E6C1 | 73, 'cbm dos v2.6 1541' |
| EBDA | A9 1A | LDA #\$1A | bit 1, 3 & 4 to exit |
| EBDC | 8D 02 18 | STA \$1802 | data direction of port B |
| EBDF | A9 00 | LDA #\$00 | |
| EBE1 | 8D 00 18 | STA \$1800 | erase data register |
| EBE4 | 20 80 E7 | JSR \$E780 | check for auto-start |
| EBE7 | 58 | CLI | |
| EBE8 | AD 00 18 | LDA \$1800 | |
| EBEB | 29 E5 | AND #\$E5 | reset serial port |
| EBED | 8D 00 18 | STA \$1800 | |
| EBF0 | AD 55 02 | LDA \$0255 | command flag set? |
| EBF3 | F0 0A | BEO \$EBFF | no |
| EBF5 | A9 00 | LDA #\$00 | |
| EBF7 | 8D 55 02 | STA \$0255 | reset command flag |
| EBFA | 85 67 | STA \$67 | |
| EBFC | 20 46 C1 | JSR \$C146 | analyze and execute command |
| ***** | | | |
| | | | wait loop |
| EBFF | 58 | CLI | |
| EC00 | A5 7C | LDA \$7C | ATN signal discovered? |
| EC02 | F0 03 | BEO \$EC07 | no |
| EC04 | 4C 5B E8 | JMP \$E85B | to IEEE routine |
| EC07 | 58 | CLI | |
| EC08 | A9 0E | LDA #\$0E | 14 |
| EC0A | 85 72 | STA \$72 | as secondary address |
| EC0C | A9 00 | LDA #\$00 | |
| EC0E | 85 6F | STA \$6F | job counter |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|-------------------------------|
| EC10 | 85 70 | STA \$70 | |
| EC12 | A6 72 | LDX \$72 | |
| EC14 | BD 2B 02 | LDA \$022B,X | secondary address |
| EC17 | C9 FF | CMP #\$FF | channel associated? |
| EC19 | F0 10 | BEO \$EC2B | no |
| EC1B | 26 3F | AND #\$3F | |
| EC1D | 85 82 | STA \$82 | channel number |
| EC1F | 20 93 DF | JSR \$DF93 | get buffer number |
| EC22 | AA | TAX | |
| EC23 | BD 5B 02 | LDA \$025B,X | drive number |
| EC26 | 29 01 | AND #\$01 | |
| EC28 | AA | TAX | |
| EC29 | F6 6F | INC \$6F,X | increment job counter |
| EC2B | C6 72 | DEC \$72 | lo address |
| EC2D | 10 E3 | BPL \$EC12 | continue search |
| EC2F | A0 04 | LDY #\$04 | buffer counter |
| EC31 | B9 00 00 | LDA \$0000,Y | disk controller in action? |
| EC34 | 10 05 | BPL \$EC3B | no |
| EC36 | 29 01 | AND #\$01 | isolate drive number |
| EC38 | AA | TAX | |
| EC39 | F6 6F | INC \$6F,X | increment job counter |
| EC3B | 88 | DEY | |
| EC3C | 10 F3 | BPL \$EC31 | next buffer |
| EC3E | 78 | SEI | |
| EC3F | AD 00 1C | LDA \$1C00 | |
| EC42 | 29 F7 | AND #\$F7 | erase LED bit |
| EC44 | 48 | PHA | |
| EC45 | A5 7F | LDA \$7F | drive number |
| EC47 | 85 86 | STA \$86 | |
| -EC49 | A9 00 | LDA #\$00 | |
| EC4B | 85 7F | STA \$7F | drive 0 |
| EC4D | A5 6F | LDA \$6F | job for drive 0? |
| EC4F | F0 0B | BEO \$EC5C | no |
| EC51 | A5 1C | LDA \$1C | write protect for drive 0? |
| EC53 | F0 03 | BEO \$EC58 | no |
| EC55 | 20 13 D3 | JSR \$D313 | close all channels to drive 0 |
| EC58 | 68 | PLA | |
| EC59 | 09 08 | ORA #\$08 | set LED bit |
| EC5B | 48 | PHA | |
| EC5C | E6 7F | INC \$7F | increment drive number |
| EC5E | A5 70 | LDA \$70 | job for drive 1? |
| EC60 | F0 0B | BEO \$EC6D | no |
| EC62 | A5 1D | LDA \$1D | write protect for drive 1? |
| EC64 | F0 03 | REQ SEC69 | no |
| EC66 | 20 13 D3 | JSR \$D313 | close all channels to drive 1 |
| EC69 | 68 | PLA | |
| EC6A | 09 00 | ORA #\$00 | |
| EC6C | 48 | PHA | |
| EC6D | A5 86 | LDA \$86 | |
| EC6F | 85 7F | STA \$7F | get drive number back |
| EC71 | 68 | PLA | bit for LED |
| EC72 | AE 6C 02 | LDX \$026C | interrupt counter |
| EC75 | F0 21 | BEO \$EC98 | to zero? |
| EC77 | AD 00 1C | LDA \$1C00 | |
| EC7A | E0 80 | CPX #\$80 | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|---------------------------------|
| EC7C | D0 03 | BNE \$EC81 | |
| EC7E | 4C 8B EC | JMP \$EC8B | |
| EC81 | AE 05 18 | LDX \$1805 | erase timer interrupt |
| EC84 | 30 12 | BMI \$EC98 | |
| EC86 | A2 A0 | LDX #\$A0 | |
| EC88 | 8E 05 18 | STX \$1805 | set timer |
| EC8B | CE 6C 02 | DEC \$026C | decrement counter |
| EC8E | D0 08 | BNE \$EC98 | not yet zero? |
| EC90 | 4D 6D 02 | EOR \$026D | |
| EC93 | A2 10 | LDX #\$10 | |
| EC95 | 8E 6C 02 | STX \$026C | reset counter |
| EC98 | 8D 00 1C | STA \$1C00 | turn LED on/off |
| EC9B | 4C FF EB | JMP \$EBFF | back to wait loop |
| ***** | | | |
| | | LOAD "\$" | |
| EC9E | A9 00 | LDA #\$00 | |
| ECA0 | 85 83 | STA \$83 | secondary address 0 |
| ECA2 | A9 01 | LDA #\$01 | |
| ECA4 | 20 E2 D1 | JSR \$D1E2 | find channel and buffer |
| ECA7 | A9 00 | LDA #\$00 | |
| ECA9 | 20 C8 D4 | JSR \$D4C8 | initialize buffer pointer |
| ECAC | A6 82 | LDX \$82 | channel number |
| ECAE | A9 00 | LDA #\$00 | |
| ECB0 | 9D 44 02 | STA \$0244,X | pointer to end = zero |
| ECB3 | 20 93 DF | JSR \$DF93 | get buffer number |
| ECB6 | AA | TAX | |
| ECB7 | A5 7F | LDA \$7F | drive number |
| ECB9 | 9D 5B 02 | STA \$025B,X | bring in table |
| ECBC | A9 01 | LDA #\$01 | 1 |
| ECBE | 20 F1 CF | JSR \$CF1 | write in buffer |
| ECC1 | A9 04 | LDA #\$04 | 4, start address \$0401 |
| ECC3 | 20 F1 CF | JSR \$CF1 | write in buffer |
| ECC6 | A9 01 | LDA #\$01 | 2 times 1 |
| ECC8 | 20 F1 CF | JSR \$CF1 | |
| ECCR | 20 F1 CF | JSR \$CF1 | write in buffer as link address |
| ECCE | AD 72 02 | LDA \$0272 | drive number |
| ECD1 | 20 F1 CF | JSR \$CF1 | write in buffer as line number |
| ECD4 | A9 00 | LDA #\$00 | line number hi |
| ECD6 | 20 F1 CF | JSR \$CF1 | in buffer |
| ECD9 | 20 59 ED | JSR \$ED59 | directory entry in buffer |
| ECDC | 20 93 DF | JSR \$DF93 | get buffer number |
| ECDF | 0A | ASL A | |
| ECE0 | AA | TAX | |
| ECE1 | D6 99 | DEC \$99,X | decrement buffer pointer |
| ECE3 | D6 99 | DEC \$99,X | |
| ECE5 | A9 00 | LDA #\$00 | |
| ECE7 | 20 F1 CF | JSR \$CF1 | 0 as line end in buffer |
| ECEA | A9 01 | LDA #\$01 | |
| ECEC | 20 F1 CF | JSR \$CF1 | 2 times 1 as link address |
| ECEF | 20 F1 CF | JSR \$CF1 | |
| ECF2 | 20 CE C6 | JSR \$C6CE | directory entry in buffer |
| ECF5 | 90 2C | BCC \$ED23 | another entry? |
| ECF7 | AD 72 02 | LDA \$0272 | block number lo |
| ECFA | 20 F1 CF | JSR \$CF1 | in buffer |
| ECFD | AD 73 02 | LDA \$0273 | block number hi |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|------------------------------|
| ED00 | 20 F1 CF | JSR \$CFF1 | in buffer |
| ED03 | 20 59 ED | JSR \$ED59 | directory entry in buffer |
| ED06 | A9 00 | LDA #\$00 | |
| ED08 | 20 F1 CF | JSR \$CFF1 | zero as end marker in buffer |
| ED0B | D0 DD | BNE \$ECEA | buffer full? no |
| ED0D | 20 93 DF | JSR \$DF93 | get buffer number |
| ED10 | 0A | ASL A | |
| ED11 | AA | TAX | |
| ED12 | A9 00 | LDA #\$00 | |
| ED14 | 95 99 | STA \$99,X | buffer pointer to zero |
| ED16 | A9 88 | LDA #\$88 | set READ flag |
| ED18 | A4 82 | LDY \$82 | channel number |
| ED1A | 8D 54 02 | STA \$0254 | |
| ED1D | 99 F2 00 | STA \$00F2,Y | flag for channel |
| ED20 | A5 85 | LDA \$85 | data byte |
| ED22 | 60 | RTS | |

| | | | |
|------|----------|--------------|-----------------------------|
| ED23 | AD 72 02 | LDA \$0272 | block number lo |
| ED26 | 20 F1 CF | JSR \$CFF1 | write in buffer |
| ED29 | AD 73 02 | LDA \$0273 | block number hi |
| ED2C | 20 F1 CF | JSR \$CFF1 | in buffer |
| ED2F | 20 59 ED | JSR \$ED59 | 'Blocks free.' in buffer |
| ED32 | 20 93 DF | JSR \$DF93 | get buffer number |
| ED35 | 0A | ASL A | |
| ED36 | AA | TAX | |
| ED37 | D6 99 | DEC \$99,X | |
| ED39 | D6 99 | DEC \$99,X | buffer pointer minus 2 |
| ED3B | A9 00 | LDA #\$00 | |
| ED3D | 20 F1 CF | JSR \$CFF1 | |
| ED40 | 20 F1 CF | JSR \$CFF1 | three zeroes as program end |
| ED43 | 20 F1 CF | JSR \$CFF1 | |
| ED46 | 20 93 DF | JSR \$DF93 | get buffer number |
| ED49 | 0A | ASL A | times 2 |
| ED4A | A8 | TAY | |
| ED4B | B9 99 02 | LDA \$0099,Y | buffer pointer |
| ED4E | A6 82 | LDX \$82 | |
| ED50 | 9D 44 02 | STA \$0244,X | as end marker |
| ED53 | DE 44 02 | DEC \$0244,X | |
| ED56 | 4C 0D ED | JMP \$ED0D | |

transmit directory line

| | | | |
|------|----------|--------------|------------------------|
| ED59 | A0 00 | LDY #\$00 | |
| ED5B | B9 B1 02 | LDA \$02B1,Y | character from buffer |
| ED5E | 20 F1 CF | JSR \$CFF1 | write in output buffer |
| ED61 | C8 | INY | |
| ED62 | C0 1B | CPY #\$1B | 27 characters? |
| ED64 | D0 F5 | BNE \$ED5B | |
| ED66 | 60 | RTS | |

get byte from buffer

| | | | |
|------|----------|------------|----------------------|
| ED67 | 20 37 D1 | JSR \$D137 | get byte |
| ED6A | F0 01 | BEO \$ED6D | buffer pointer zero? |
| ED6C | 60 | RTS | |

Anatomy of the 1541 Disk Drive

| | | | | |
|-------|----|-------|--------------|----------------------------------|
| ED6D | 85 | 85 | STA \$85 | save data byte |
| ED6F | A4 | 82 | LDY \$82 | channel number |
| ED71 | B9 | 44 02 | LDA \$0244,Y | set end marker |
| ED74 | F0 | 08 | BEO SED7E | zero (LOAD \$)? |
| ED76 | A9 | 80 | LDA #\$80 | |
| ED78 | 99 | F2 00 | STA \$00F2,Y | set READ flag |
| ED7B | A5 | 85 | LDA \$85 | data byte |
| ED7D | 60 | | RTS | |
| ED7E | 48 | | PHA | |
| ED7F | 20 | EA EC | JSR SECEA | create directory line in buffer |
| ED82 | 68 | | PLA | |
| ED83 | 60 | | RTS | |
| ***** | | | | |
| ED84 | 20 | D1 C1 | JSR SC1D1 | V command, 'collect' |
| ED87 | 20 | 42 D0 | JSR SD042 | find drive number in input line |
| ED8A | A9 | 40 | LDA #\$40 | load BAM |
| ED8C | 8D | F9 02 | STA \$02F9 | |
| ED8F | 20 | B7 EE | JSR \$EEB7 | create new BAM in buffer |
| ED92 | A9 | 00 | LDA #\$00 | |
| ED94 | 8D | 92 02 | STA \$0292 | |
| ED97 | 20 | AC C5 | JSR SC5AC | load directory, find 1st flag |
| ED9A | D0 | 3D | BNE \$EDD9 | found? |
| ED9C | A9 | 00 | LDA #\$00 | |
| ED9E | 85 | 81 | STA \$81 | sector 0 |
| EDA0 | AD | 8E FE | LDA \$FE85 | 18 |
| EDA3 | 85 | 80 | STA \$80 | track 18 for BAM |
| EDA5 | 20 | E5 ED | JSR SEDE5 | mark dir blocks as allocated |
| EDA8 | A9 | 00 | LDA #\$00 | |
| EDAA | 8D | F9 02 | STA \$02F9 | |
| EDAD | 20 | FF EE | JSR \$EEFF | write BAM back to disk |
| EDB0 | 4C | 94 C1 | JMP \$C194 | done, prepare disk status |
| ***** | | | | |
| EDB3 | C8 | | INY | |
| EDB4 | B1 | 94 | LDA (\$94),Y | save track |
| EDB6 | 48 | | PHA | |
| EDB7 | C8 | | INY | |
| EDB8 | B1 | 94 | LDA (\$94),Y | and sector |
| EDBA | 48 | | PHA | |
| EDBB | A0 | 13 | LDA #\$13 | pointer to side-sector block |
| EDBD | B1 | 94 | LDA (\$94),Y | |
| EDBF | F0 | 0A | BEO \$EDCB | no track following? |
| EDC1 | 85 | 80 | STA \$80 | track and |
| EDC3 | C8 | | INY | |
| EDC4 | B1 | 94 | LDA (\$94),Y | |
| EDC6 | 85 | 81 | STA \$81 | sector of 1st side-sector block |
| EDC8 | 20 | E5 ED | JSR SEDE5 | mark side-sector blocks as |
| EDCB | 68 | | PLA | allocated |
| EDCC | 85 | 81 | STA \$81 | |
| EDCE | 68 | | PLA | get track and sector back |
| EDCF | 85 | 80 | STA \$80 | |
| EDD1 | 20 | E5 ED | JSR SEDE5 | mark blocks of file as allocated |
| EDD4 | 20 | 04 C6 | JSR SC604 | read next entry in directory |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|---------------------------------|
| EDD7 | F0 C3 | BEQ \$ED9C | end of directory? |
| EDD9 | A0 00 | LDY #\$00 | |
| EDDB | B1 94 | LDA (\$94),Y | file type |
| EDDD | 30 D4 | BMI \$EDB3 | bit 7 set, file closed? |
| EDDF | 20 B6 C8 | JSR \$C8B6 | file type to zero and write BAM |
| EDE2 | 4C D4 ED | JMP \$EDD4 | |
| ***** | | | |
| EDE5 | 20 5F D5 | JSR \$D55F | allocate file blocks in BAM |
| EDE8 | 20 90 EF | JSR \$EF90 | check track and sector number |
| EDEB | 20 75 D4 | JSR \$D475 | allocate block in BAM |
| EDEE | A9 00 | LDA #\$00 | read next block |
| EDF0 | 20 C8 D4 | JSR \$D4C8 | buffer pointer zero |
| EDF3 | 20 37 D1 | JSR \$D137 | get byte from buffer |
| EDF6 | 85 80 | STA \$80 | track |
| EDF8 | 20 37 D1 | JSR \$D137 | get byte from buffer |
| EDFB | 85 81 | STA \$81 | sector |
| EDFD | A5 80 | LDA \$80 | another block? |
| EDFF | D0 03 | BNE SEE04 | yes |
| EE01 | 4C 27 D2 | JMP \$D227 | close channel |
| EE04 | 20 90 EF | JSR \$EF90 | allocate block in BAM |
| EE07 | 20 4D D4 | JSR \$D44D | read next block |
| EE0A | 4C EE ED | JMP \$EDEE | continue |
| ***** | | | |
| EE0D | 20 12 C3 | JSR \$C312 | N command, 'header' |
| EE10 | A5 E2 | LDA \$E2 | get drive number |
| EE12 | 10 05 | BPL \$EE19 | drive number |
| EE14 | A9 33 | LDA #\$33 | not clear? |
| EE16 | 4C C8 C1 | JMP \$C1C8 | 33, 'syntax error' |
| EE19 | 29 01 | AND #\$01 | |
| EE1B | 85 7F | STA \$7F | drive number |
| EE1D | 20 00 C1 | JSR \$C100 | turn LED on |
| EE20 | A5 7F | LDA \$7F | drive number |
| EE22 | 0A | ASL A | times 2 |
| EE23 | AA | TAX | |
| EE24 | AC 7B 02 | LDY \$027B | comma position |
| EE27 | CC 74 02 | CPY \$0274 | compare with end name |
| EE2A | F0 1A | BEQ SEE46 | format without ID |
| EE2C | B9 00 02 | LDA \$0200,Y | first character of ID |
| EE2F | 95 12 | STA \$12,X | save |
| EE31 | B9 01 02 | LDA \$0201,Y | second character |
| EE34 | 95 13 | STA \$13,X | |
| EE36 | 20 07 D3 | JSR \$D307 | close all channels |
| EE39 | A9 01 | LDA #\$01 | |
| EE3B | 85 80 | STA \$80 | track 1 |
| EE3D | 20 C6 C8 | JSR \$C8C6 | format disk |
| EE40 | 20 05 F0 | JSR \$F005 | erase buffer |
| EE43 | 4C 56 EE | JMP SEE56 | continue as below |
| EE46 | 20 42 D0 | JSR \$D042 | load BAM |
| EE49 | A6 7F | LDX \$7F | drive number |
| EE4B | BD 01 01 | LDA \$0101,X | |
| EE4E | CD D5 FE | CMP \$FED5 | 'A', marker for 1541 format |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|------------------------------------|
| EE51 | F0 03 | BEQ \$EE56 | ok |
| EE53 | 4C 72 D5 | JMP \$D572 | 73, 'cbm dos v2.6 1541' |
| EE56 | 20 B7 FE | JSR \$EEB7 | create BAM |
| EE59 | A5 F9 | LDA SF9 | buffer number |
| EE5B | A8 | TAY | |
| EE5C | 0A | ASL A | |
| EE5D | AA | TAX | |
| EE5E | AD 88 FE | LDA \$FE88 | S90, start of disk name |
| EE61 | 95 99 | STA \$99,X | buffer pointer to name |
| EE63 | AE 7A 02 | LDX \$027A | |
| EE66 | A9 1B | LDA #\$1B | 27 |
| EE68 | 20 6E C6 | JSR \$C6FE | write filenames in buffer |
| EE6B | A0 12 | LDY #\$12 | position 18 |
| EE6D | A6 7F | LDX \$7F | drive number |
| EE6F | AD D5 FE | LDA \$FED5 | 'A', 1541 format |
| EE72 | 9D 01 01 | STA \$0101,X | |
| EE75 | 8A | TXA | |
| EE76 | 0A | ASL A | times 2 |
| EE77 | AA | TAX | |
| EE78 | B5 12 | LDA \$12,X | ID, first character |
| EE7A | 91 94 | STA (\$94),Y | in buffer |
| EE7C | C8 | INY | |
| EE7D | R5 13 | LDA \$13,X | and second character |
| EE7F | 91 94 | STA (\$94),Y | in buffer |
| EE81 | C8 | INY | |
| EE82 | C8 | INY | |
| EE83 | A9 32 | LDA #S32 | '2' |
| EE85 | 91 94 | STA (\$94),Y | in buffer |
| EE87 | C8 | INY | |
| EE88 | AD D5 FE | LDA \$FED5 | 'A' 1541 format |
| EE8B | 91 94 | STA (\$94),Y | in buffer |
| EE8D | A0 02 | LDY #\$02 | |
| EE8F | 91 6D | STA (\$6D),Y | and at position 2 |
| EE91 | AD 85 FE | LDA \$FE85 | 18 |
| EE94 | 85 80 | STA \$80 | track number |
| EE96 | 20 93 EF | JSR \$EF93 | mark block as allocated |
| EE99 | A9 01 | LDA #\$01 | 1 |
| EE9B | 85 81 | STA \$81 | sector number |
| EE9D | 20 93 EF | JSR \$EF93 | mark block as allocated |
| EEA0 | 20 FF EE | JSR \$EEFF | write BAM |
| EEA3 | 20 05 F0 | JSR \$F005 | pointer \$6D/\$6E to buffer, erase |
| EEA6 | A0 01 | LDY #\$01 | buffer |
| EEA8 | A9 FF | LDA #\$FF | |
| EEAA | 9A 6D | STA (\$6D),Y | track following is zero |
| EEAC | 20 64 D4 | JSR \$D464 | write BAM |
| EEAF | C6 81 | DEC \$81 | decrement sector number, 0 |
| EEB1 | 20 60 D4 | JSR \$D460 | read block |
| EER4 | 4C 94 C1 | JMP SC194 | prepare disk status |
| ***** | | | |
| EEB7 | 20 D1 F0 | JSR \$F0D1 | create RAM |
| EERA | A0 00 | LDY #\$00 | |
| EEFC | A9 12 | LDA #\$12 | 18 |
| EEBE | 91 6D | STA (\$6D),Y | pointer to directory track |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|---------------------------------|
| EEC0 | C8 | INY | |
| EEC1 | 98 | TYA | 1 |
| EEC2 | 91 6D | STA (\$6D),Y | pointer to directory sector |
| EEC4 | C8 | INY | |
| EEC5 | C8 | INY | |
| EEC6 | C8 | INY | |
| EEC7 | A9 00 | LDA #\$00 | |
| EEC9 | 85 6F | STA \$6F | |
| EECB | 85 70 | STA \$70 | 3 bytes = 24 bits for sectors |
| EECD | 85 71 | STA \$71 | |
| EECF | 98 | TYA | byte position |
| EED0 | 4A | LSR A | |
| EED1 | 4A | LSR A | divided by 4 = track number |
| EED2 | 20 4B F2 | JSR \$F24B | get number of sectors |
| EED5 | 91 6D | STA (\$6D),Y | and in BAM |
| EED7 | C8 | INY | |
| EED8 | AA | TAX | |
| EED9 | 38 | SEC | |
| EEDA | 26 6F | ROL \$6F | |
| EEDC | 26 70 | ROL \$70 | create bit model |
| EEDF | 26 71 | ROL \$71 | |
| EEE0 | CA | DEX | |
| EEE1 | D0 F6 | BNE \$EED9 | |
| EEE3 | B5 6F | LDA \$6F,X | 3 bytes |
| EEE5 | 91 6D | STA (\$6D),Y | the BAM in buffer |
| EEE7 | C8 | INY | |
| EEE8 | E8 | INX | |
| EEE9 | E0 03 | CPX #\$03 | |
| EEEB | 90 F6 | BCC \$EEE3 | |
| EEED | C0 90 | CPY #\$90 | position 144? |
| EEEF | 90 D6 | BCC \$EEC7 | no, next track |
| EEF1 | 4C 75 D0 | JMP \$D075 | calculate number of free blocks |
| ***** | | | |
| EEF4 | 20 93 DF | JSR \$DF93 | write BAM if needed |
| EEF7 | AA | TAX | get buffer number |
| EEF8 | BD 5B 02 | LDA \$025B,X | command for disk controller |
| EEFB | 29 01 | AND #\$01 | |
| EEFD | 85 7F | STA \$7F | isolate drive number |
| EEFF | A4 7F | LDY \$7F | |
| EF01 | B9 51 02 | LDA \$0251,Y | BAM-changed flag set? |
| EF04 | D0 01 | BNE \$EF07 | yes |
| EF06 | 60 | RTS | |
| EF07 | A9 00 | LDA #\$00 | |
| EF09 | 99 51 02 | STA \$0251,Y | reset BAM-changed flag |
| EF0C | 20 3A EF | JSR \$EF3A | set buffer pointer for BAM |
| EF0F | A5 7F | LDA \$7F | drive number |
| EF11 | 0A | ASL A | times 2 |
| EF12 | 48 | PHA | |
| EF13 | 20 A5 F0 | JSR \$FOA5 | verify RAM entry |
| EF16 | 68 | PLA | |
| EF17 | 18 | CLC | |
| EF18 | 69 01 | ADC #\$01 | increment track number |
| EF1A | 20 A5 F0 | JSR \$FOA5 | verify BAM entry |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|-----------------------------------|
| EF1D | A5 80 | LDA \$80 | track |
| EF1F | 48 | PHA | |
| EF20 | A9 01 | LDA #\$01 | |
| EF22 | 85 80 | STA \$80 | track 1 |
| EF24 | 0A | ASL A | |
| EF25 | 0A | ASL A | times 4 |
| EF26 | 85 6D | STA \$6D | |
| EF28 | 20 20 F2 | JSR \$F220 | verify BAM |
| EF2B | E6 80 | INC \$80 | increment track number |
| EF2D | A5 80 | LDA \$80 | |
| EF2F | CD D7 FE | CMP \$FED7 | and compare with max val + 1 = 36 |
| EF32 | 90 F0 | BCC \$EF24 | ok, next track |
| EF34 | 68 | PLA | |
| EF35 | 85 80 | STA \$80 | get track number back |
| EF37 | 4C 8A D5 | JMP SD58A | write BAM to disk |
| ***** | | | |
| EF3A | 20 0F F1 | JSR \$F10F | set buffer pointer for BAM |
| EF3D | AA | TAX | get 6 for drive 0 |
| EF3E | 20 DF F0 | JSR \$F0DF | |
| EF41 | A6 F9 | LDX \$F9 | allocate buffer |
| EF43 | BD E0 FE | LDA \$FEE0,X | buffer number |
| EF46 | 85 6E | STA \$6E | buffer address, hi byte |
| EF48 | A9 00 | LDA #\$00 | lo byte |
| EF4A | 85 6D | STA \$6D | pointer to \$6D/\$6E |
| EF4C | 60 | RTS | |
| ***** | | | |
| EF4D | A6 7F | LDX \$7F | get # of free blocks for dir |
| EF4F | BD FA 02 | LDA \$02FA,X | drive number |
| EF52 | 8D 72 02 | STA \$0272 | number of blocks, lo |
| EF55 | BD FC 02 | LDA \$02FC,X | |
| EF58 | 8D 73 02 | STA \$0273 | number of blocks, hi |
| EF5B | 60 | RTS | in buffer for directory |
| ***** | | | |
| EF5C | 20 F1 EF | JSR \$EFF1 | mark block as free |
| EF5F | 20 CF EF | JSR \$EFCF | set buffer pointer |
| EF62 | 38 | SEC | erase bit for sector in BAM |
| EF63 | D0 22 | BNF \$EF87 | |
| EF65 | B1 6D | LDA (\$6D),Y | block already free, then done |
| EF67 | 1D F9 EF | ORA \$EFE9 | bit model of BAM |
| EF6A | 91 6D | STA (\$6D),Y | set bit X, marker for free |
| EF6C | 20 88 EF | JSR \$EF88 | |
| EF6F | A4 6F | LDY \$6F | set flag for RAM changed |
| EF71 | 18 | CLC | |
| EF72 | B1 6D | LDY (\$6D),Y | |
| EF74 | 69 01 | ADC #\$01 | increment # of free blocks/track |
| EF76 | 91 6D | STA (\$6D),Y | |
| EF78 | A5 80 | LDA \$80 | track |
| EF7A | CD 85 FE | CMP \$FE85 | equal to 18? |
| EF7D | F0 3B | BEO \$EFA | then skip |
| EF7F | FE FA 02 | INC \$02FA,X | inc # of free blocks in disk |
| EF82 | D0 03 | BNE \$EF87 | |
| EF84 | FE FC 02 | INC \$02FC,X | increment number of blocks hi |

Anatomy of the 1541 Disk Drive

EF87 60 RTS

```
*****
EF88 A6 7F LDX $7F      set flag for 'BAM changed'
EF8A A9 01 LDA #$01      drive number
EF8C 9D 51 02 STA $0251,X flag = 1
EF8F 60 RTS
```

```
*****
EF90 20 F1 EF JSR $EFF1   mark block as allocated
EF93 20 CF EF JSR $EFCF   set buffer pointer
EF96 F0 36 REQ $EFCE    erase bit for sector in BAM
EF98 B1 6D LDA ($6D),Y  already allocated, then done
EF9A 5D E9 EF EOR $EFE9,X
EF9D 91 6D STA ($6D),Y
EF9F 20 88 EF JSR $EF88   erase bit for block
EFA2 A4 6F LDA $6F
EFA4 B1 6D LDA ($6D),Y
EFA6 38 SEC
EFA7 E9 01 SBC #$01      decrement # of blocks per track
EFA9 91 6D STA ($6D),Y
EFAB A5 80 LDA $80        track
EFAD CD 85 FE CMP $FE85  18?
EFB0 F0 0B BEQ $EFBD
EFB2 BD FA 02 LDA $02FA,X number of free blocks lo
EFR5 D0 03 BNE $EFBA
EFB7 DE FC 02 DEC $02FC,X decrement number of free blocks
EFBA DE FA 02 DEC $02FA,X
EFBD BD FC 02 LDA $02FC,X number of free blocks hi
EFC0 D0 0C BNE $EFCE    more than 255 blocks free?
EFC2 BD FA 02 LDA $02FA,X free blocks lo
EFC5 C9 03 CMP #$03
EFC7 B0 05 BCS $EFCE    smaller than 3?
EFC9 A9 72 LDA #$72
EFCB 20 C7 E6 JSR $E6C7  72, 'disk full'
EFCE 60 RTS
```

```
*****
EFCF 20 11 F0 JSR $F011   erase bit for sector in BAM entry
EFD2 98 TYA             find RAM field for this track
EFD3 85 6F STA $6F
EFD5 A5 81 LDA $81        sector
EFD7 4A LSR A
EFD8 4A LSR A            divide by 8
EFD9 4A LSR A
EFDA 38 SEC
EFDB 65 6F ADC $6F
EFDD A8 TAY             byte number in BAM entry
EFDE A5 81 LDA $81        sector number
EFE0 29 07 AND #$07
EFE2 AA TAX              bit number in BAM entry
EFE3 B1 6D LDA ($6D),Y  byte in BAM
EFE5 3D E9 EF AND $EFE9,X erase bit for corresponding
EFE8 60 RTS             sector
```

Anatomy of the 1541 Disk Drive

```
***** powers of 2
EFE9 01 02 04 08 10 20 40 80

***** write RAM after change
EFF1 A9 FF      LDA #$FF
EFF3 2C F9 02   BIT $02F9
EFF6 F0 0C      BEQ $F004
EFF8 10 0A      BPL $F004
EFFA 70 08      BVS $F004
EFFC A9 00      LDA #$00
EFFE 8D F9 02   STA $02F9      reset flag
F001 4C 8A D5   JMP SD58A      write block
F004 60         RTS

***** erase BAM buffer
pointer $6D/$6E to BAM buffer
F005 20 3A EF   JSR $EF3A
F008 A0 00      LDY #$00
F00A 98         TYA
F00B 91 6D      STA ($6D),Y      erase BAM buffer
F00D C8         INY
F00E D0 FB      BNE $F00B
F010 60         RTS

*****
F011 A5 6F      LDA $6F
F013 48         PHA
F014 A5 70      LDA $70
F016 48         PHA
F017 A6 7F      LDX $7F      drive number
F019 B5 FF      LDA $FF,X
F01B F0 05      BEQ $F022
F01D A9 74      LDA #$74
F01F 20 48 E6   JSR $E648      'drive not ready'
F022 20 0F F1   JSR $F10F      get buffer number for BAM
F025 85 6F      STA $6F
F027 8A         TXA
F028 0A         ASL A
F029 85 70      STA $70
F02B AA         TAX
F02C A5 80      LDA $80      track
F02F DD 9D 02   CMP $029D,X
F031 F0 0B      BEQ $F03E
F033 E8         INX
F034 86 70      STX $70
F036 DD 9D 02   CMP $029D,X
F039 F0 03      BEQ $F03E
F03B 20 5B F0   JSR $F05B
F03E A5 70      LDA $70
F040 A6 7F      LDX $7F      drive number
F042 9D 9B 02   STA $029B,X
F045 OA         ASL A
F046 0A         ASL A      times 4
F047 18         CLC
F048 69 A1      ADC #$A1
F04A 85 6D      STA $6D
```

| | | |
|------|-------|-----------|
| F04C | A9 02 | LDA #\$02 |
| F04E | 69 00 | ADC #\$00 |
| F050 | 85 6E | STA \$6E |
| F052 | A0 00 | LDY #\$00 |
| F054 | 58 | PLA |
| F055 | 85 70 | STA \$70 |
| F057 | 68 | PLA |
| F058 | 85 6F | STA \$6F |
| F05A | 60 | RTS |

| | | |
|------|----------|---|
| F05B | A6 6F | LDX \$6F |
| F05D | 20 DF F0 | JSR \$F0DF |
| F060 | A5 7F | LDA \$7F drive number |
| F062 | AA | TAX |
| F063 | 0A | ASL A |
| F064 | 1D 9B 02 | ORA \$029B,X |
| F067 | 49 01 | EOR #\$01 |
| F069 | 29 03 | AND #\$03 |
| F06B | 85 70 | STA \$70 |
| F06D | 20 A5 F0 | JSR \$F0A5 |
| F070 | A5 F9 | LDA \$F9 buffer number |
| F072 | 0A | ASL A |
| F073 | AA | TAX |
| F074 | A5 80 | LDA \$80 track |
| F076 | 0A | ASL A |
| F077 | 0A | ASL A times 4 |
| F078 | 95 99 | STA \$99,X equal pointer in BAM field |
| F07A | A5 70 | LDA \$70 |
| F07C | 0A | ASL A |
| F07D | 0A | ASL A |
| F07E | A8 | TAY |
| F07F | A1 99 | LDA (\$99,X) |
| F081 | 99 A1 02 | STA \$02A1,X |
| F084 | A9 00 | LDA #\$00 |
| F086 | 81 99 | STA (\$99,X) zero in buffer |
| F088 | F6 99 | INC \$99,X increment buffer pointer |
| F08A | C8 | INY |
| F08B | 98 | TYA |
| F08C | 29 03 | AND #\$03 |
| F08E | D0 EF | BNE \$F07F |
| F090 | A6 70 | LDX \$70 |
| F092 | A5 80 | LDA \$80 track |
| F094 | 9D 9D 02 | STA \$029D,X |
| F097 | AD F9 02 | LDA \$02F9 |
| F09A | D0 03 | BNE \$F09F |
| F09C | 4C 8A D5 | JMP SD58A write block |
| F09F | 09 80 | ORA #\$80 |
| F0A1 | 8D F9 02 | STA \$02F9 |
| F0A4 | 60 | RTS |
| F0A5 | A8 | TAY |
| F0A6 | B9 9D 02 | LDA \$029D,Y |
| F0A9 | F0 25 | BEO \$F0D0 |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|--------------------------|
| F0AB | 48 | PHA | |
| F0AC | A9 00 | LDA #\$00 | |
| F0AE | 99 9D 02 | STA \$029D,Y | |
| F0B1 | A5 F9 | LDA \$F9 | buffer number |
| F0B3 | 0A | ASL A | times 2 |
| F0B4 | AA | TAX | |
| F0B5 | 68 | PLA | |
| F0B6 | 0A | ASL A | |
| F0B7 | 0A | ASL A | |
| F0BB | 95 99 | STA \$99,X | |
| F0BA | 98 | TYA | |
| F0BB | 0A | ASL A | |
| F0BC | 0A | ASL A | |
| F0BD | AB | TAY | |
| F0BE | B9 A1 02 | LDA \$02A1,Y | |
| F0C1 | 81 99 | STA (\$99,X) | write in buffer |
| F0C3 | A9 00 | LDA #\$00 | |
| F0C5 | 99 A1 02 | STA \$02A1,Y | |
| F0C8 | F6 99 | INC \$99,X | increment buffer pointer |
| F0CA | C8 | INY | |
| F0CB | 9B | TYA | |
| F0CC | 29 03 | AND #\$03 | |
| F0CE | D0 EE | BNE \$F0BE | |
| F0D0 | 60 | RTS | |
| F0D1 | A5 7F | LDA \$7F | drive number |
| F0D3 | 0A | ASL A | |
| F0D4 | AA | TAX | |
| F0D5 | A9 00 | LDA #\$00 | |
| F0D7 | 9D 9D 02 | STA \$029D,X | |
| F0DA | E8 | INX | |
| F0DB | 9D 9D 02 | STA \$029D,X | |
| F0DE | 60 | RTS | |
| F0DF | B5 A7 | LDA SA7,X | |
| F0E1 | C9 FF | CMP #\$FF | |
| F0E3 | D0 25 | BNE \$F10A | |
| F0E5 | 8A | TXA | |
| F0F6 | 48 | PHA | |
| F0E7 | 20 8E D2 | JSR \$D28E | |
| F0EA | AA | TAX | |
| F0EB | 10 05 | BPL SF0F2 | |
| F0ED | A9 70 | LDA #\$70 | |
| F0EF | 20 C8 C1 | JSR SC1C8 | 70, 'no channel' |
| F0F2 | 86 F9 | STX SF9 | |
| F0F4 | 68 | PLA | |
| F0F5 | A8 | TAY | |
| F0F6 | 8A | TXA | |
| F0F7 | 09 80 | ORA #\$80 | |
| F0F9 | 99 A7 00 | STA \$00A7,Y | |
| F0FC | 0A | ASL A | |
| F0FD | AA | TAX | |
| F0FE | AD 85 FE | LDA \$FE85 | 18, directory track |
| F101 | 95 06 | STA \$06,X | save |
| F103 | A9 00 | LDA #\$00 | 0 |

Anatomy of the 1541 Disk Drive

| | | | |
|------------------------------------|----------|--------------|-----------------------------------|
| F105 | 95 07 | STA \$07,X | as sector |
| F107 | 4C 86 D5 | JMP \$D586 | write block |
| ***** | | | |
| ?10A | 29 0F | AND #\$0F | |
| ?10C | 85 F9 | STA \$F9 | buffer number |
| ?10E | 60 | RTS | |
| ***** get buffer number for BAM | | | |
| ?10F | A9 06 | LDA #\$06 | |
| ?111 | A6 7F | LDX \$7F | drive number |
| ?113 | D0 03 | BNE \$F118 | |
| ?115 | 18 | CLC | |
| ?116 | 69 07 | ADC #\$07 | gives 13 for drive 0 |
| ?118 | 60 | RTS | |
| ***** buffer number for BAM | | | |
| '119 | 20 0F F1 | JSR \$F10F | get buffer number |
| '11C | AA | TAX | |
| '11D | 60 | RTS | |
| ***** find and allocate free block | | | |
| '11E | 20 3E DE | JSR \$DE3E | get track and sector number |
| '121 | A9 03 | LDA #\$03 | |
| '123 | 85 6F | STA \$6F | counter |
| '125 | A9 01 | LDA #\$01 | |
| '127 | 0D F9 02 | ORA \$02F9 | |
| '12A | 8D F9 02 | STA \$02F9 | |
| '12D | A5 6F | LDA \$6F | save counter |
| '12F | 48 | PHA | |
| '130 | 20 11 F0 | JSR \$F011 | find BAM field for this track |
| '133 | 68 | PLA | |
| '134 | 85 6F | STA \$6F | get counter back |
| '136 | B1 6D | LDA (\$6D),Y | number of free blocks in track |
| '138 | D0 39 | BNE SF173 | blocks still free? |
| '13A | A5 80 | LDA \$80 | track |
| '13C | CD 85 FE | CMP \$FE85 | 18, directory track? |
| '13F | F0 19 | BEO \$F15A | yes, 'disk full' |
| '141 | 90 1C | BCC \$F15F | smaller, then next lower track |
| '143 | E6 80 | INC \$80 | increment track number |
| F145 | A5 80 | LDA \$80 | |
| F147 | CD D7 FE | CMP \$FED7 | 36, highest track number plus one |
| F14A | D0 E1 | BNE SF12D | no, continue searching this track |
| F14C | AE 85 FE | LDX \$FE85 | 18, directory track |
| F14F | CA | DEX | decrement |
| F150 | 86 80 | STX \$80 | save as track number |
| F152 | A9 00 | LDA #\$00 | |
| F154 | 85 81 | STA \$81 | begin with sector number zero |
| F156 | C6 6F | DEC \$6F | decrement counter |
| F158 | D0 D3 | BNE SF12D | not yet zero, then continue |
| F15A | A9 72 | LDA #\$72 | |
| F15C | 20 C8 C1 | JSR SC1C8 | 72, 'disk full' |
| F15F | C6 80 | DEC \$80 | decrement track number |
| F161 | D0 CA | BNE SF12D | not yet 0, continue in this track |
| F163 | AE 85 FE | LDX \$FE85 | 18, directory track |
| F166 | E8 | INX | increment |

Anatomy of the 1541 Disk Drive

| | | | |
|-----------|-----------|--------------|----------------------------------|
| F167 | 86 80 | STX S80 | save as track number |
| F169 | A9 00 | LDA #\$00 | |
| F16B | 85 81 | STA \$81 | begin with sector zero |
| F16D | C6 6F | DEC \$6F | decrement counter |
| F16F | D0 BC | BNE SF12D | not yet zero, then continue |
| F171 | F0 E7 | BEQ \$F15A | else 'disk full' |
| F173 | A5 81 | LDA \$81 | sector number |
| F175 | 18 | CLC | |
| F176 | 65 69 | ADC \$69 | plus step width (10) |
| F178 | 85 81 | STA \$81 | as new number |
| F17A | A5 80 | LDA \$80 | track number |
| F17C | 20 4B F2 | JSR SF24B | get maximum sector number |
| F17F | 8D 4E 02 | STA \$024E | |
| F182 | 8D 4D 02 | STA \$024D | and save |
| F185 | C5 81 | CMP \$81 | greater than selected sector #? |
| F187 | B0 0C | BCS \$F195 | yes |
| F189 | 38 | SEC | else |
| F18A | A5 81 | LDA \$81 | sector number |
| F1BC | ED 4E 02 | SBC \$024E | minus maximum sector number |
| F18F | 85 81 | STA \$81 | save as new sector number |
| F191 | F0 02 | RFO SF195 | zero? |
| F193 | C6 81 | DEC \$81 | else decrement sector no. by one |
| F195 | 20 FA F1 | JSR SF1FA | check RAM, find free sector |
| F198 | F0 03 | BEQ \$F19D | not found? |
| F19A | 4C 90 EF | JMP SEF90 | allocate block in BAM |
| F19D | A9 00 | LDA #\$00 | |
| F19F | 85 81 | STA \$81 | sector zero |
| F1A1 | 20 FA F1 | JSR SF1FA | find free sector |
| F1A4 | D0 F4 | BNE \$F19A | found? |
| F1A6 | 4C F5 F1 | JMP SF1F5 | no, 'dir sector' |
| ***** | | | find free sector and allocate |
| F1A9 | A9 01 | LDA #\$01 | |
| F1AB | 0D F9 02 | ORA \$02F9 | |
| F1B1 | A5 86 | LDA \$86 | |
| F1B3 | 48 | PHA | |
| F1B4 | 49 01 | LDA #\$01 | track counter |
| F1B6 | 85 86 | STA \$86 | |
| F1B8 | AD 85 FE | LDA SFE85 | 18, directory track |
| F1BB | 38 | SEC | |
| F1BC | E5 86 | SBC \$86 | minus counter |
| F1BE | 85 80 | STA \$80 | save as track number |
| F1C0 | 90 09 | BCC SF1CB | result <= zero? |
| F1C2 | F0 07 | BEQ SF1CB | then try top half of dir |
| F1C4 | 20 11 F0 | JSR SF011 | find BAM field for this track |
| F1C7 | B1 6D | LDA (\$6D),Y | no. of free blocks in this track |
| F1C9 | D0 1B | BNE SF1E6 | free blocks exist |
| F1CB | AD 85 FF | LDA SFE85 | 18, directory track |
| F1CE | 18 | CLC | |
| F1CF | 65 86 | ADC \$86 | plus counter |
| F1D1 | 85 80 | STA \$80 | save as track number |
| F1D3 | E6 86 | INC \$86 | increment counter |
| F1D5 | CD D7 FE | CMP SFED7 | 36, max track number plus one |
| F1D8 | 90 05 | BCC SF1DF | smaller, then ok |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|----------------------------------|
| F242 | 68 | PLA | |
| F243 | 85 6F | STA \$6F | |
| F245 | 60 | RTS | |
| F246 | A9 71 | LDA #\$71 | |
| F248 | 20 45 E6 | JSR \$E645 | 71, 'dir error' |
| ***** | | | |
| F24B | AE D6 FE | LDX \$FED6 | establish # of sectors per track |
| F24E | DD D6 FE | CMP \$FED6,X | 4 different values |
| F251 | CA | DEX | track number |
| F252 | B0 FA | BCS \$F24E | not greater? |
| F254 | BD D1 FE | LDA \$FED1,X | get number of sectors |
| F257 | 60 | RTS | |
| F258 | 60 | RTS | |
| ***** | | | |
| F259 | A9 6F | LDA #\$6F | initialize disk controller |
| F25B | 8D 02 1C | STA \$1C02 | bit 4 (write prot) & 7 (SYNC) |
| F25E | 29 F0 | AND #\$F0 | data direction register port B |
| F260 | 8D 00 1C | STA \$1C00 | |
| F263 | AD 0C 1C | LDA \$1C0C | port B, control port |
| F266 | 29 FE | AND #\$FE | PCR, control register |
| F268 | 09 0E | ORA #\$0E | |
| F26A | 09 E0 | ORA #\$E0 | |
| F26C | 8D 0C 1C | STA \$1C0C | |
| F26F | A9 41 | LDA #\$41 | |
| F271 | 8D 0B 1C | STA \$1C0B | timer 1 free running, enable |
| F274 | A9 00 | LDA #\$00 | port A latch |
| F276 | 8D 06 1C | STA \$1C06 | timer 1 lo latch |
| F279 | A9 3A | LDA #\$3A | |
| F27B | 8D 07 1C | STA \$1C07 | timer 1 hi latch |
| F27E | 8D 05 1C | STA \$1C05 | timer 1 hi |
| F281 | A9 7F | LDA #\$7F | |
| F283 | 8D 0E 1C | STA \$1C0E | erase IRQs |
| F286 | A9 C0 | LDA #\$C0 | |
| F288 | 8D 0D 1C | STA \$1C0D | |
| F28B | 8D 0E 1C | STA \$1C0E | IER, allow interrupts |
| F28E | A9 FF | LDA #\$FF | |
| F290 | 85 3E | STA \$3E | |
| F292 | 85 51 | STA \$51 | track counter for formatting |
| F294 | A9 08 | LDA #\$08 | 8 |
| F296 | 85 39 | STA \$39 | constants for block header |
| F298 | A9 07 | LDA #\$07 | 7 |
| F29A | 85 47 | STA \$47 | constants for data block |
| F29C | A9 05 | LDA #\$05 | |
| F29E | 85 62 | STA \$62 | |
| F2A0 | A9 FA | LDA #\$FA | pointer \$62/\$63 to SFA05 |
| F2A2 | 85 63 | STA \$63 | |
| F2A4 | A9 C8 | LDA #\$C8 | 200 |
| F2A6 | 85 64 | STA \$64 | |
| F2A8 | A9 04 | LDA #\$04 | |
| F2AA | 85 5E | STA \$5E | |
| F2AC | A9 04 | LDA #\$04 | |
| F2AE | 85 6F | STA \$6F | |

Anatomy of the 1541 Disk Drive

| | | | | |
|-------|----------|--------------|--|----------------------------------|
| ***** | | | | IRO routine for disk controller |
| F2B0 | BA | TSX | | |
| F2B1 | 86 49 | STX \$49 | | save stack pointer |
| F2B3 | AD 04 1C | LDA \$1C04 | | |
| F2B6 | AD 0C 1C | LDA \$1C0C | | erase interrupt flag from timer |
| F2B9 | 09 0E | ORA #\$0E | | |
| F2BB | 8D 0C 1C | STA \$1C0C | | |
| F2BE | A0 05 | LDY #\$05 | | |
| F2C0 | B9 00 00 | LDA \$0000,Y | | command for buffer Y? |
| F2C3 | 10 2E | BPL \$F2F3 | | no |
| F2C5 | C9 D0 | CMP #\$D0 | | exec. code for program in buffer |
| F2C7 | D0 04 | BNE SF2CD | | |
| F2C9 | 98 | TYA | | |
| F2CA | 4C 70 F3 | JMP \$F370 | | execute program in buffer |
| F2CD | 29 01 | AND #\$01 | | isolate drive number |
| F2CF | F0 07 | BEO \$F2D8 | | drive zero? |
| F2D1 | 84 3F | STY \$3F | | |
| F2D3 | A9 0F | LDA #\$0F | | else |
| F2D5 | 4C 69 F9 | JMP \$F969 | | 74, 'drive not ready' |
| F2D8 | AA | TAX | | |
| F2D9 | 85 3D | STA \$3D | | |
| F2DB | C5 3E | CMP \$3E | | |
| F2DD | F0 0A | BEO \$F2E9 | | motor running? |
| F2DF | 20 7E F9 | JSR \$F97E | | yes |
| F2E2 | A5 3D | LDA \$3D | | turn drive motor on |
| F2E4 | 85 3E | STA \$3E | | |
| F2E6 | 4C 9C F9 | JMP \$F99C | | set flag to job loop |
| F2E9 | A5 20 | LDA \$20 | | |
| F2EB | 30 03 | BMI \$F2F0 | | head transport programmed? |
| F2ED | 0A | ASL A | | |
| F2EE | 10 09 | BPL \$F2F9 | | |
| F2F0 | 4C 9C F9 | JMP \$F99C | | to job loop |
| F2F3 | 88 | DEY | | |
| F2F4 | 10 CA | BPL \$F2C0 | | check next buffer |
| F2F6 | 4C 9C F9 | JMP \$F99C | | to job loop |
| F2F9 | A9 20 | LDA #\$20 | | |
| F2FB | 85 20 | STA \$20 | | |
| F2FD | A0 05 | LDY #\$05 | | program head transport |
| F2FF | 84 3F | STY \$3F | | |
| F301 | 20 93 F3 | JSR \$F393 | | initialize buffer counter |
| F304 | 30 1A | BMI \$F320 | | set pointer in buffer |
| F306 | C6 3F | DEC \$3F | | command for buffer? |
| F308 | 10 F7 | BPL \$F301 | | decrement counter |
| F30A | A4 41 | LDY \$41 | | check next buffer |
| F30C | 20 95 F3 | JSR \$F395 | | buffer number |
| F30F | A5 42 | LDA \$42 | | set pointer in buffer |
| F311 | 85 4A | STA \$4A | | track difference for last job |
| F313 | 06 4A | ASL \$4A | | as counter for head transport |
| F315 | A9 60 | LDA #\$60 | | |
| F317 | 85 20 | STA \$20 | | set flag for head transport |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|---------------|-----------------------------------|
| F1DA | A9 67 | LDA #\$67 | |
| F1DC | 20 45 E6 | JSR \$E645 | 67, 'illegal track or sector' |
| F1DF | 20 11 F0 | JSR \$F011 | find BAM field for this track |
| F1E2 | B1 6D | LDA (\$S6D),Y | no. of free blocks in this track |
| F1E4 | F0 D2 | BEO \$F1BB | no more free blocks? |
| F1E6 | 68 | PLA | |
| F1E7 | 85 86 | STA \$86 | |
| F1E9 | A9 00 | LDA #\$00 | |
| F1EB | 85 81 | STA \$81 | sector 0 |
| F1ED | 20 FA F1 | JSR \$F1FA | find free sector |
| F1F0 | F0 03 | BEO \$F1F5 | not found? |
| F1F2 | 4C 90 EF | JMP \$EF90 | allocate block in BAM |
| F1F5 | A9 71 | LDA #\$71 | |
| F1F7 | 20 45 E6 | JSR \$E645 | 71, 'dir error' |
| ***** | | | |
| F1FA | 20 11 F0 | JSR \$F011 | find free sectors in actual track |
| F1FD | 98 | TYA | find BAM field for this track |
| F1FE | 48 | PHA | points to # of free blocks |
| F1FF | 20 20 F2 | JSR \$F220 | |
| F202 | A5 80 | LDA \$80 | verify BAM |
| F204 | 20 4B F2 | JSR \$F24B | track |
| F207 | 8D 4E 02 | STA \$024E | get max # of sectors of the track |
| F20A | 68 | PLA | save |
| F20B | 85 6F | STA \$6F | pointer |
| F20D | A5 81 | LDA \$81 | compare sector |
| F20F | CD 4E 02 | CMP \$024E | with maximum number |
| F212 | B0 09 | BCS \$F21D | greater than or equal to? |
| F214 | 20 D5 EF | JSR \$SEFD5 | get bit number of sector |
| F217 | D0 06 | BNE \$F21F | sector free? |
| F219 | E6 81 | INC \$81 | increment sector number |
| F21B | D0 F0 | BNE \$F20D | and check if free |
| F21D | A9 00 | LDA #\$00 | no sectors free |
| F21F | 60 | RTS | |
| ***** | | | |
| F220 | A5 6F | LDA \$6F | verify no. of free blocks in BAM |
| F222 | 48 | PHA | |
| F223 | A9 00 | LDA #\$00 | |
| F225 | 85 6F | STA \$6F | counter to zero |
| F227 | AC 86 FE | LDY \$FE86 | 4, no. of bytes per track in BAM |
| F22A | 88 | DEY | |
| F22B | A2 07 | LDX #\$07 | |
| F22D | B1 6D | LDA (\$S6D),Y | |
| F22F | 3D E9 EF | AND \$FE9,X | isolate bit |
| F232 | F0 02 | BEO \$F236 | |
| F234 | E6 6F | INC \$6F | increment counter of free sectors |
| F236 | CA | DEX | |
| F237 | 10 F4 | BPL \$F22D | |
| F239 | 88 | DEY | |
| F23A | D0 EF | BNE \$F22B | |
| F23C | B1 6D | LDA (\$S6D),Y | compare with number on diskette |
| F23E | C5 6F | CMP \$6F | |
| F240 | D0 04 | BNE \$F246 | not equal, then error |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|---------------------------------|
| F319 | B1 32 | LDA (\$32),Y | get track number from buffer |
| F31B | 85 22 | STA \$22 | |
| F31D | 4C 9C F9 | JMP SF99C | to job loop |
| F320 | 29 01 | AND #\$01 | isolate drive number |
| F322 | C5 3D | CMP \$3D | equal drive number of last job? |
| F324 | D0 E0 | BNE \$F306 | no |
| F326 | A5 22 | LDA \$22 | last track number |
| F328 | F0 12 | BEO \$F33C | equal zero? |
| F32A | 38 | SEC | |
| F32B | F1 32 | SBC (\$32),Y | equal track number of this job? |
| F32D | F0 0D | BEO \$F33C | yes |
| F32F | 49 FF | EOR #\$FF | |
| F331 | 85 42 | STA \$42 | |
| F333 | E6 42 | INC \$42 | |
| F335 | A5 3F | LDA \$3F | drive number |
| F337 | 85 41 | STA \$41 | |
| F339 | 4C 06 F3 | JMP \$F306 | |
| | | | |
| E33C | A2 04 | LDX #\$04 | |
| F33E | B1 32 | LDA (\$32),Y | track number of the job |
| F340 | 85 40 | STA \$40 | save |
| F342 | DD D6 FE | CMP \$FED6,X | compare with max track number |
| F345 | CA | DEX | |
| F346 | B0 FA | BCS \$F342 | |
| F348 | 8D D1 FE | LDA \$FED1,X | greater? |
| F34B | 85 43 | STA \$43 | get # of sectors per track |
| F34D | 8A | TXA | and save |
| F34E | 0A | ASL A | |
| F34F | 0A | ASL A | |
| F350 | 0A | ASL A | |
| F351 | 0A | ASL A | |
| F352 | 0A | ASL A | |
| F353 | 85 44 | STA \$44 | gives 0, 32, 64, 96 |
| F355 | AD 00 1C | LDA \$1C00 | |
| F358 | 29 9F | AND #\$9F | |
| F35A | 05 44 | ORA \$44 | generate control byte for motor |
| F35C | 8D 00 1C | STA \$1C00 | |
| F35F | A6 3D | LDX \$3D | |
| F361 | A5 45 | LDA \$45 | command code |
| F363 | C9 40 | CMP #\$40 | position head? |
| F365 | F0 15 | BEO \$F37C | yes |
| F367 | C9 60 | CMP #\$60 | command code for prg execution? |
| F369 | F0 03 | BEO \$F36E | yes |
| F36B | 4C B1 F3 | JMP \$F3B1 | read block header |
| | | | |
| F36E | A5 3F | LDA \$3F | execute program in buffer |
| F370 | 18 | CLC | buffer number |
| F371 | 69 03 | ADC #S03 | |
| F373 | 85 31 | STA \$31 | plus 3 |
| F375 | A9 00 | LDA #S00 | equals address of buffer |
| F377 | 85 30 | STA \$30 | |
| F379 | 6C 30 00 | JMP (\$0030) | execute program in buffer |
| | | | |
| | | | position head |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|-----------------------------------|
| F37C | A9 60 | LDA #\$60 | |
| F37E | 85 20 | STA \$20 | set flag for head transport |
| F380 | AD 00 1C | LDA \$1C00 | |
| F383 | 29 FC | AND #\$FC | turn stepper motors on |
| F385 | 8D 00 1C | STA \$1C00 | |
| F388 | A9 A4 | LDA #SA4 | 164 |
| F38A | 85 4A | STA \$4A | step counter for head transport |
| F38C | A9 01 | LDA #\$01 | |
| F38E | 85 22 | STA \$22 | track number |
| F390 | 4C 69 F9 | JMP \$F969 | ok |
| ***** | | | |
| F393 | A4 3F | LDY \$3F | initialize pointer in buffer |
| F395 | B9 00 00 | LDA \$0000,Y | buffer number |
| F398 | 48 | PHA | command code |
| F399 | 10 10 | BPL SF3AB | save |
| F39B | 29 78 | AND #\$78 | |
| F39D | 85 45 | STA \$45 | erase bits 0,1,2. and 7 |
| F39F | 98 | TYA | |
| F3A0 | 0A | ASL A | buffer number |
| F3A1 | 69 06 | ADC #\$06 | times two |
| F3A3 | 85 32 | STA \$32 | plus 6 |
| F3A5 | 98 | TYA | equals pointer to actual buffer |
| F3A6 | 18 | CLC | buffer number |
| F3A7 | 69 03 | ADC #\$03 | plus 3 |
| F3A9 | 85 31 | STA \$31 | equals buffer address hi |
| F3AB | A0 00 | LDY #\$00 | |
| F3AD | 84 30 | STY \$30 | buffer address lo |
| F3AF | 68 | PLA | get command code back |
| F3B0 | 60 | RTS | |
| ***** | | | |
| F3B1 | A2 5A | LDX #\$5A | read block header, verify ID |
| F3B3 | 86 4B | STX \$4B | 90 |
| F3B5 | A2 00 | LDX #\$00 | counter |
| F3B7 | A9 52 | LDA #\$52 | |
| F3B9 | 85 24 | STA \$24s | 82 |
| F3BB | 20 56 F5 | JSR SF556 | wait for SYNC |
| F3BE | 50 FE | BVC SF3BE | byte ready? |
| F3C0 | B8 | CLV | |
| F3C1 | AD 01 1C | LDA \$1C01 | data from read head |
| F3C4 | C5 24 | CMP \$24 | |
| F3C6 | D0 3F | BNE SF407 | 20, 'read error' |
| F3C8 | 50 FE | BVC SF3C8 | byte ready? |
| F3CA | B8 | CLV | |
| F3CB | AD 01 1C | LDA \$1C01 | data byte from disk(block header) |
| F3CE | 95 25 | STA \$25,X | save 7 bytes |
| F3D0 | E8 | INX | |
| F3D1 | E0 07 | CPX #\$07 | |
| F3D3 | D0 F3 | BNE SF3C8 | continue reading |
| F3D5 | 20 97 F4 | JSR SF497 | |
| F3D8 | A0 04 | LDY #\$04 | 4 bytes plus parity |
| F3DA | A9 00 | LDA #\$00 | |
| F3DC | 59 16 00 | FOR \$0016,Y | form checksum for header |
| F3DF | 88 | DEY | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|----------------------------------|
| F3E0 | 10 FA | BPL \$F3DC | |
| F3E2 | C9 00 | CMP #\$00 | parity ok? |
| F3E4 | D0 38 | BNE SF41E | 27, 'read error' |
| F3E6 | A6 3E | LDX \$3E | drive number |
| F3E8 | A4 18 | LDA \$18 | track number of header |
| F3EA | 95 22 | STA \$22,X | use as actual track number |
| F3EC | A5 45 | LDA \$45 | |
| F3EE | C9 30 | CMP #\$30 | code for 'preserve header' |
| F3F0 | F0 1E | BEO SF410 | preserve header |
| F3F2 | A5 3E | LDA \$3E | |
| F3F4 | 0A | ASL A | |
| F3F5 | A8 | TAY | |
| F3F6 | B9 12 00 | LDA \$0012,Y | |
| F3F9 | C5 16 | CMP \$16 | compare with ID1 |
| F3FB | D0 1E | BNE SF41B | |
| F3FD | B9 13 00 | LDA \$0013,Y | |
| F400 | C5 17 | CMP \$17 | compare with ID2 |
| F402 | D0 17 | BNE SF41B | <>, then 29, 'disk id mismatch' |
| F404 | 4C 23 F4 | JMP SF423 | |
| F407 | C6 4B | DEC \$4B | decrement counter for attempts |
| F409 | D0 B0 | BNE SF3BB | and try again |
| F40B | A9 02 | LDA #\$02 | else |
| F40D | 20 69 F9 | JSR SF969 | 20, 'read error' |
| ***** | | | |
| F410 | A5 16 | LDA \$16 | preserve block header |
| F412 | 85 12 | STA \$12 | ID1 |
| F414 | A5 17 | LDA \$17 | and ID2 |
| F416 | 85 13 | STA \$13 | preserve |
| F418 | A9 01 | LDA #\$01 | ok |
| F41A | 2C | .BYTE \$2C | |
| F41B | A9 0B | LDA #\$0B | 29, 'disk id mismatch' |
| F41D | 2C | .BYTE \$2C | |
| F41E | A9 09 | LDA #\$09 | 27, 'write error' |
| F420 | 4C 69 F9 | JMP SF969 | done |
| ***** | | | |
| F423 | A9 7F | LDA #S7F | |
| F425 | 85 4C | STA \$4C | |
| F427 | A5 19 | LDA \$19 | |
| F429 | 18 | CLC | |
| F42A | 69 02 | ADC #\$02 | |
| F42C | C5 43 | CMP \$43 | |
| F42E | 90 02 | BCC SF432 | |
| F430 | E5 43 | SBC \$43 | |
| F432 | 85 4D | STA \$4D | |
| F434 | A2 05 | LDX #\$05 | |
| F436 | 86 3F | STX \$3F | |
| F438 | A2 FF | LDX #\$FF | |
| F43A | 20 93 F3 | JSR SF393 | set buffer ptr for disk control. |
| F43D | 10 44 | BPL SF483 | |
| F43F | 85 44 | STA \$44 | |
| F441 | 29 01 | AND #\$01 | |
| F443 | C5 3E | CMP \$3E | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|------------|----------------------------|
| F4A9 | 20 E6 F7 | JSR \$F7E6 | |
| F4AC | A5 55 | LDA \$55 | |
| F4AE | 85 18 | STA \$18 | |
| F4B0 | A5 54 | LDA \$54 | |
| F4B2 | 85 19 | STA \$19 | |
| F4B4 | A5 53 | LDA \$53 | |
| F4B6 | 85 1A | STA \$1A | |
| F4B8 | 20 F6 F7 | JSR SF7E6 | |
| F4BB | A5 52 | LDA \$52 | |
| F4BD | 85 17 | STA \$17 | |
| F4BF | A5 53 | LDA \$53 | |
| F4C1 | 85 16 | STA \$16 | |
| F4C3 | 68 | PLA | |
| F4C4 | 85 31 | STA \$31 | |
| F4C6 | 68 | PLA | get pointer \$30/\$31 back |
| F4C7 | 85 30 | STA \$30 | |
| F4C9 | 60 | RTS | |

| | | | |
|------|----------|--------------|--------------------------------------|
| F4CA | C9 00 | CMP #\$00 | command code for 'read'? |
| F4CC | F0 03 | BEQ \$F4D1 | yes |
| F4CE | 4C 6E F5 | JMP \$F56E | continue checking command code |
| F4D1 | 20 0A F5 | JSR \$F50A | find beginning of data block |
| F4D4 | 50 FE | BVC \$F4D4 | byte ready? |
| F4D6 | B8 | CLV | |
| F4D7 | AD 01 1C | LDA \$1C01 | |
| F4DA | 91 30 | STA (\$30),Y | get data byte and write in buffer |
| F4DC | C8 | INY | 256 times |
| F4DD | D0 F5 | BNE SF4D4 | |
| F4DF | A0 BA | LDY #\$BA | |
| F4E1 | 50 FE | BVC \$F4E1 | byte ready? |
| F4E3 | B8 | CLV | |
| F4E4 | AD 01 1C | LDA \$1C01 | read bytes |
| F4E7 | 99 00 01 | STA \$0100,Y | from \$1BA to \$1FF |
| F4EA | C8 | INY | |
| F4EB | D0 F4 | BNE SF4E1 | |
| F4ED | 20 E0 F8 | JSR \$F8E0 | |
| F4F0 | A5 38 | LDA \$38 | |
| F4F2 | C5 47 | CMP \$47 | equal 7, beginning of data block |
| F4F4 | F0 05 | BEQ \$F4FB | yes |
| F4F6 | A9 04 | LDA #\$04 | 22, 'read error' |
| F4F8 | 4C 69 F9 | JMP \$F969 | error termination |
| F4FB | 20 E9 F5 | JSR \$F5E9 | calculate parity of data block |
| F4FE | C5 3A | CMP \$3A | agreement? |
| F500 | F0 03 | BEQ \$F505 | yes |
| F502 | A9 05 | LDA #\$05 | 23, 'read error' |
| F504 | 2C | .BYTE \$2C | |
| F505 | A9 01 | LDA #\$01 | ok |
| F507 | 4C 69 F9 | JMP \$F969 | prepare error message |
| F50A | 20 10 F5 | JSR \$F510 | find start of data block |
| F50D | 4C 56 F5 | JMP \$F556 | read block header wait for SYNC |

Anatomy of the 1541 Disk Drive

```
*****
F510 A5 3D      LDA $3D      read block header
F512 0A          ASL A      drive number
F513 AA          TAX
F514 B5 12      LDA $12,X    ID1
F516 85 16      STA $16      save
F518 B5 13      LDA $13,X    ID2
F51A 85 17      STA $17      save
F51C A0 00      LDY #$00
F51E B1 32      LDA ($32),Y  get track and
F520 85 18      STA $18
F522 C8          INY
F523 B1 32      LDA ($32),Y  sector number from buffer
F525 85 19      STA $19
F527 A9 00      LDA #$00
F529 45 16      FOR S16
F52B 45 17      EOR $17      calculate parity for block header
F52D 45 18      EOR $18
F52F 45 19      EOR $19
F531 85 1A      STA $1A      and save
F533 20 34 F9    JSR SF934
F536 A2 5A      LDX #$5A      90 attempts
F538 20 56 F5    JSR SF556  wait for SYNC
F53B A0 00      LDY #$00
F53D 50 FE      BVC SF35D   byte ready?
F53F B8          CLV
F540 AD 01 1C    LDA $1C01  read data from block header
F543 D9 24 00    CMP $0024,Y compare with saved data
F546 D0 06      BNE SF54E  not the same, try again
F548 C8          INY
F549 C0 08      CPY #$08    8 bytes read?
F54B D0 F0      BNE SF53D  no
F54D 60          RTS
F54E CA          DEX        decrement counter
F54F D0 E7      BNE SF538  not yet zero?
F551 A9 02      LDA #$02
F553 4C 69 F9    JMP SF969  20, 'read error'

*****
F556 A9 D0      LDA #$D0    wait for SYNC
F558 8D 05 18    STA $1805  208
F55B A9 03      LDA #$03    start timer
F55D 2C 05 18    BIT $1805  error code
F560 10 F1      BPL SF553  timer run down, then 'read error'
F562 2C 00 1C    BIT $1C00  SYNC signal
F565 30 F6      BMI SF55D  not yet found?
F567 AD 10 1C    LDA $1C01  read byte
F56A B8          CLV
F56B A0 00      LDY #$00
F56D 60          RTS
*****
F56E C9 10      CMP #$10    command code for 'write'
```

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|---------------------------|
| F445 | D0 3C | BNE \$F483 | |
| F447 | A0 00 | LDY #\$00 | |
| F449 | B1 32 | LDA (\$32),Y | |
| F44B | C5 40 | CMP \$40 | |
| F44D | D0 34 | BNE \$F483 | |
| F44F | A5 45 | LDA \$45 | command code |
| F451 | C9 60 | CMP #\$60 | |
| F453 | F0 0C | BEO SF461 | |
| F455 | A0 01 | LDY #\$01 | |
| F457 | 38 | SEC | |
| F458 | B1 32 | LDA (\$32),Y | |
| F45A | E5 4D | SBC \$4D | |
| F45C | 10 03 | BPL SF461 | |
| F45E | 18 | CLC | |
| F45F | 65 43 | ADC \$43 | |
| F461 | C4 4C | CMP \$4C | |
| F463 | B0 1E | BCS \$F483 | |
| F465 | 48 | PHA | |
| F466 | A5 45 | LDA \$45 | |
| F468 | F0 14 | BEO SF47E | |
| F46A | 68 | PLA | |
| F46B | C9 09 | CMP #\$09 | |
| F46D | 90 14 | RCC SF483 | |
| F46F | C9 0C | CMP #\$0C | |
| F471 | B0 10 | BCS \$F483 | |
| F473 | 85 4C | STA \$4C | |
| F475 | A5 3F | LDA \$3F | |
| F477 | AA | TAX | |
| F478 | 69 03 | ADC #\$03 | |
| F47A | 85 31 | STA \$31 | |
| F47C | D0 05 | BNE \$F483 | |
| F47E | 68 | PLA | |
| F47F | C9 06 | CMP #\$06 | |
| F481 | 90 F0 | BCC SF473 | |
| F483 | C6 3F | DEC \$3F | |
| F485 | 10 B3 | BPL SF43A | |
| F487 | 8A | TXA | |
| F488 | 10 03 | BPL SF48D | |
| F48A | 4C 9C F9 | JMP SF99C | to job loop |
| F48D | 86 3F | STX \$3F | |
| F48F | 20 93 F3 | JSR SF393 | get buffer number |
| F492 | A5 45 | LDA \$45 | command code |
| F494 | 4C CA F4 | JMP SF4CA | continue checking |
| F497 | A5 30 | LDA \$30 | |
| F499 | 48 | PLA | save pointer \$30/\$31 |
| F49A | A5 31 | LDA \$31 | |
| F49C | 48 | PHA | |
| F49D | A9 24 | LDA #\$24 | |
| F49F | 85 30 | STA \$30 | |
| F4A1 | A9 00 | LDA #\$00 | pointer \$30/\$31 to \$24 |
| F4A3 | 85 31 | STA \$31 | |
| F4A5 | A9 00 | LDA #\$00 | |
| F4A7 | 85 34 | STA \$34 | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|---------------------------------|
| F570 | F0 03 | BEO \$F575 | yes |
| F572 | 4C 91 F6 | JMP \$F691 | continue checking command code |
| ***** | | | |
| F575 | 20 E9 F5 | JSR \$F5E9 | write data block to disk |
| F57B | 85 3A | STA \$3A | calculate parity for buffer |
| F57A | AD 00 1C | LDA \$1C00 | and save |
| F57D | 29 10 | AND #\$10 | read port B |
| F57F | D0 05 | BNE \$F586 | isolate bit for 'write protect' |
| F581 | A9 08 | LDA #\$08 | not set, ok |
| F583 | 4C 69 F9 | JMP \$F969 | 26, 'write protect' |
| F586 | 20 8F F7 | JSR \$F78F | |
| F589 | 20 10 F5 | JSR \$F510 | find block header |
| F58C | A2 09 | LDX #\$09 | |
| F58E | 50 FE | BVC \$F58E | byte ready? |
| F590 | B8 | CLV | |
| F591 | CA | DEX | |
| F592 | D0 FA | BNE \$F58E | |
| F594 | A9 FF | LDA #\$FF | |
| F596 | 8D 03 1C | STA \$1C03 | port A (write/read head) to |
| F599 | AD 0C 1C | LDA \$1C0C | to output |
| F59C | 29 1F | AND #\$1F | |
| F59E | 09 C0 | ORA #\$C0 | change PCR to output |
| F5A0 | 8D 0C 1C | STA \$1C0C | |
| F5A3 | A9 FF | LDA #\$FF | |
| F5A5 | A2 05 | LDX #\$05 | |
| F5A7 | 8D 01 1C | STA \$1C01 | write SFF to disk 5 times |
| F5AA | B8 | CLV | |
| F5AB | 50 FF | BVC \$F5AB | as SYNC characters |
| F5AD | B8 | CLV | |
| F5AE | CA | DEX | |
| F5AF | D0 FA | BNE \$F5AB | |
| F5B1 | A0 RB | LDY #\$BB | |
| F5B3 | B9 00 01 | LDA \$0100,Y | bytes \$1BB to \$1FF to disk |
| F5B6 | 50 FE | BVC \$F5B6 | |
| F5B8 | R8 | CLV | |
| F5B9 | 8D 01 1C | STA \$1C01 | |
| F5BC | C8 | INY | |
| F5BD | D0 F4 | BNE \$F5B3 | |
| F5BF | B1 30 | LDA (\$30),Y | write data buffer (256 bytes) |
| F5C1 | 50 FE | BVC \$F5C1 | |
| F5C3 | B8 | CLV | |
| F5C4 | 8D 01 1C | STA \$1C01 | |
| F5C7 | C8 | INY | |
| F5C8 | D0 F5 | BNE \$F5BF | |
| F5CA | 50 FE | BVC \$F5CA | byte ready? |
| F5CC | AD 0C 1C | LDA \$1C0C | |
| F5CF | 09 E0 | ORA #\$E0 | PCR to input again |
| F5D1 | 8D 0C 1C | STA \$1C0C | |
| F5D4 | A9 00 | LDA #\$00 | |
| F5D6 | 8D 03 1C | LDA \$1C03 | port A (read/write head) to im |
| F5D9 | 20 F2 F5 | JSR \$F5F2 | |
| F5DC | A4 3F | LDY \$3F | |
| F5DE | B9 00 00 | LDA \$0000,Y | |

Anatomy of the 1541 Disk Drive

| | | | |
|--|----------|--------------|------------------------------|
| F5E1 | 49 30 | EOR #\$30 | convert command code 'write' |
| F5E3 | 99 00 00 | STA \$0000,Y | to 'verify' |
| F5E6 | 4C B1 F3 | JMP SF3B1 | |
| ***** calculate parity for data buffer | | | |
| F5E9 | A9 00 | LDA #\$00 | |
| F5EB | A8 | TAY | |
| F5EC | 51 30 | EOR (\$30),Y | |
| F5EE | C8 | INY | |
| F5EF | D0 FB | BNE SF5EC | |
| F5F1 | 60 | RTS | |
| F5F2 | A9 00 | LDA #\$00 | |
| F5F4 | 85 2E | STA S2E | |
| F5F6 | 85 30 | STA \$30 | |
| F5F8 | 85 4F | STA \$4F | |
| F5FA | A5 31 | LDA \$31 | |
| F5FC | 85 4E | STA \$4E | |
| F5FE | A9 01 | LDA #\$01 | |
| F600 | 85 31 | STA \$31 | |
| F602 | 85 2F | STA \$2F | |
| F604 | A9 BB | LDA #\$BB | |
| F606 | 85 34 | STA \$34 | |
| F608 | 85 36 | STA \$36 | |
| F60A | 20 E6 F7 | JSP SF7E6 | |
| F60D | A5 52 | LDA \$52 | |
| F60F | 85 38 | STA \$38 | |
| F611 | A4 36 | LDY \$36 | |
| F613 | A5 53 | LDA \$53 | |
| F615 | 91 2E | STA (\$2E),Y | |
| F617 | C8 | INY | |
| F618 | A5 54 | LDA \$54 | |
| F61A | 91 2E | STA (\$2E),Y | |
| F61C | C8 | INY | |
| F61D | A5 55 | LDA \$55 | |
| F61F | 91 2F | STA (\$2F),Y | |
| F621 | C8 | INY | |
| F622 | 84 36 | STY \$36 | |
| F624 | 20 E6 F7 | JSR SF7E6 | |
| F627 | A4 36 | LDY \$36 | |
| F629 | A5 52 | LDA \$52 | |
| F62B | 91 2E | STA (\$2E),Y | |
| F62D | C8 | INY | |
| F62E | A5 53 | LDA \$53 | |
| F630 | 91 2E | STA (\$2E),Y | |
| F632 | C8 | INY | |
| F633 | F0 0E | BEO SF643 | |
| F635 | A5 54 | LDA \$54 | |
| F637 | 91 2E | STA (\$2E),Y | |
| F639 | C8 | INY | |
| F63A | A5 55 | LDA \$55 | |
| F63C | 91 2E | STA (\$2E),Y | |
| F63E | C8 | INY | |
| F63F | 84 36 | STY \$36 | |
| F641 | D0 E1 | BNE SF624 | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----|-------|--------------|
| F643 | A5 | 54 | LDA \$54 |
| F645 | 91 | 30 | STA (\$30),Y |
| F647 | C8 | | INY |
| F648 | A5 | 55 | LDA \$55 |
| F64A | 91 | 30 | STA (\$30),Y |
| F64C | C8 | | INY |
| F64D | 84 | 36 | STY \$36 |
| F64F | 20 | E6 | JSR SF7E6 |
| F652 | A4 | 36 | LDY \$36 |
| F654 | A5 | 52 | LDA \$52 |
| F656 | 91 | 30 | STA (\$30),Y |
| F658 | C8 | | INY |
| F659 | A5 | 53 | LDA \$53 |
| F65B | 91 | 30 | STA (\$30),Y |
| F65D | C8 | | INY |
| F65E | A5 | 54 | LDA \$54 |
| F660 | 91 | 30 | STA (\$30),Y |
| F662 | C8 | | INY |
| F663 | A5 | 55 | LDA \$55 |
| F665 | 91 | 30 | STA (\$30),Y |
| F667 | C8 | | INY |
| F668 | 84 | 36 | STY \$36 |
| F66A | C0 | BB | CPY #\$BB |
| F66C | 90 | E1 | BCC SF64F |
| F66E | A9 | 45 | LDA #\$45 |
| F670 | 85 | 2E | STA \$2E |
| F672 | A5 | 31 | LDA \$31 |
| F674 | 85 | 2F | STA \$2F |
| F676 | A0 | BA | LDY #\$BA |
| F678 | B1 | 30 | LDA (\$30),Y |
| F67A | 91 | 2E | STA (\$2E),Y |
| F67C | 88 | | DEY |
| F67D | D0 | F9 | BNE SF678 |
| F67F | B1 | 30 | LDA (\$30),Y |
| F681 | 91 | 2E | STA (\$2E),Y |
| F683 | A2 | BB | LDX #\$BB |
| F685 | BD | 00 01 | LDA \$0100,X |
| F688 | 91 | 30 | STA (\$30),Y |
| F68A | C8 | | INY |
| F68B | F8 | | INX |
| F68C | D0 | F7 | BNE SF685 |
| F68E | 86 | 50 | STX \$50 |
| F690 | 60 | | RTS |

| | | | | |
|------|----|-------|--------------|----------------------------------|
| F691 | C9 | 20 | CMP #\$20 | command code for 'verify'? |
| F693 | F0 | 03 | BEQ SF698 | yes |
| F695 | 4C | CA F6 | JMP SF6CA | continue checking command code |
| F698 | 20 | E9 F5 | JSR SF5E9 | calculate parity for data buffer |
| F69B | 85 | 3A | STA S3A | and save |
| F69D | 20 | 8F F7 | JSR SF78F | |
| F6A0 | 20 | 0A F5 | JSR SF50A | find start of data block |
| F6A3 | A0 | BB | LDY #\$BB | |
| F6A5 | B9 | 00 01 | LDA \$0100,Y | data from buffer |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|-----------------------------|
| F6A8 | 50 FE | BVC SF6A8 | byte ready? |
| F6AA | B8 | CLV | |
| F6AB | 4D 01 1C | EOR \$1C01 | compare with data from disk |
| F6AE | D0 15 | BNE \$F6C5 | not equal, then error |
| F6B0 | C8 | INY | |
| F6B1 | D0 F2 | BNE \$F6A5 | |
| F6B3 | B1 30 | LDA (\$30),Y | data from buffer |
| F6B5 | 50 FE | BVC \$F6B5 | |
| F6B7 | B8 | CLV | |
| F6B8 | 4D 01 1C | EOR \$1C01 | compare with data from disk |
| F6BB | D0 08 | BNE \$F6C5 | not equal, then error |
| F6BD | C8 | INY | |
| F6BE | C0 FD | CPY #\$FD | |
| F6C0 | D0 F1 | BNE \$F6B3 | |
| F6C2 | 4C 18 F4 | JMP SF418 | error free termination |
| F6C5 | A9 07 | LDA #\$07 | |
| F6C7 | 4C 69 F9 | JMP \$F969 | 25, 'write error' |
| ***** | | | |
| F6CA | 20 10 F5 | JSR \$F510 | read block header |
| F6CD | 4C 18 F4 | JMP SF418 | done |
| ***** | | | |
| F6D0 | A9 00 | LDA #\$00 | |
| F6D2 | 85 57 | STA \$57 | |
| F6D4 | 85 5A | STA \$5A | |
| F6D6 | A4 34 | LDY \$34 | |
| F6D8 | A5 52 | LDA \$52 | |
| F6DA | 29 F0 | AND #\$F0 | isolate hi-nibble |
| F6DC | 4A | LSR A | |
| F6DD | 4A | LSR A | and rotate to lower nibble |
| F6DE | 4A | LSR A | |
| F6DF | 4A | LSR A | |
| F6E0 | AA | TAX | as index in table |
| F6E1 | BD 7F F7 | LDA \$F77F,X | |
| F6E4 | 0A | ASL A | |
| F6E5 | 0A | ASL A | times 8 |
| F6E6 | 0A | ASL A | |
| F6E7 | 85 56 | STA \$56 | |
| F6E9 | A5 52 | LDA \$52 | |
| F6EB | 29 0F | AND #\$0F | isolate lower nibble |
| F6ED | AA | TAX | as index in table |
| F6EE | BD 7F F7 | LDA \$F77F,X | |
| F6F1 | 6A | ROR A | |
| F6F2 | 66 57 | ROR \$57 | |
| F6F4 | 6A | ROR A | |
| F6F5 | 66 57 | ROR \$57 | |
| F6F7 | 29 07 | AND #\$07 | |
| F6F9 | 05 56 | ORA \$56 | |
| F6FB | 91 30 | STA (\$30),Y | in buffer |
| F6FD | C8 | INY | increment buffer |
| F6FE | A5 53 | LDA \$53 | |
| F700 | 29 F0 | AND #\$F0 | isolate upper nibble |
| F702 | 4A | LSR A | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|--------------------------|
| F703 | 4A | LSR A | |
| F704 | 4A | LSR A | shift to upper nibble |
| F705 | 4A | LSR A | |
| F706 | AA | TAX | as index in table |
| F707 | BD 7F F7 | LDA \$F77F,X | |
| F70A | 0A | ASL A | |
| F70B | 05 57 | ORA \$57 | |
| F70D | 85 57 | STA \$57 | |
| F70F | A5 53 | LDA \$53 | |
| F711 | 29 0F | AND #\$0F | lower nibble |
| F713 | AA | TAX | as index |
| F714 | BD 7F F7 | LDA \$F77F,X | |
| F717 | 2A | ROL A | |
| F718 | 2A | ROL A | |
| F719 | 2A | ROL A | |
| F71A | 2A | ROL A | |
| F71B | 85 58 | STA \$58 | |
| F71D | 2A | ROL A | |
| F71E | 29 01 | AND #\$01 | |
| F720 | 05 57 | ORA \$57 | |
| F722 | 91 30 | STA (\$30),Y | in buffer |
| F724 | C8 | INY | increment buffer |
| F725 | A5 54 | LDA \$54 | |
| F727 | 29 F0 | AND #\$F0 | isolate hi-nibble |
| F729 | 4A | LSR A | |
| F72A | 4A | LSR A | |
| F72B | 4A | LSR A | |
| F72C | 4A | LSR A | |
| F72D | AA | TAX | |
| F72E | BD 7F F7 | LDA \$F77F,X | |
| F731 | 18 | CLC | |
| F732 | 6A | ROR A | |
| F733 | 05 58 | ORA \$58 | |
| F735 | 91 30 | STA (\$30),Y | in buffer |
| F737 | C8 | INY | increment buffer pointer |
| F738 | 6A | ROR A | |
| F739 | 29 80 | AND #\$80 | |
| F73B | 85 59 | STA \$59 | |
| F73D | A5 54 | LDA \$54 | |
| F73F | 29 0F | AND #\$0F | lower nibble |
| F741 | AA | TAX | as index |
| F742 | BD 7F F7 | LDA \$F77F,X | |
| F745 | 0A | ASL A | |
| F746 | 0A | ASL A | |
| F747 | 29 7C | AND #\$7C | |
| F749 | 05 59 | ORA \$59 | |
| F74B | 85 59 | STA \$59 | |
| F74D | A5 55 | LDA \$55 | |
| F74F | 29 F0 | AND #\$F0 | isolate hi-nibble |
| F751 | 4A | LSR A | |
| F752 | 4A | LSR A | shift to lower nibble |
| F753 | 4A | LSR A | |
| F754 | 4A | LSR A | |
| F755 | AA | TAX | as index in table |
| F756 | BD 7F F7 | LDA \$F77F,X | |

Anatomy of the 1541 Disk Drive

| | | |
|------|----------|-----------------------------------|
| F759 | 6A | ROR A |
| F75A | 66 5A | ROR \$5A |
| F75C | 6A | ROR A |
| F75D | 66 5A | ROR \$5A |
| F75F | 6A | ROR A |
| F760 | 66 5A | ROR \$5A |
| F762 | 29 03 | AND #\$03 |
| F764 | 05 59 | ORA \$59 |
| F766 | 91 30 | STA (\$30),Y in buffer |
| F768 | C8 | INY increment buffer pointer |
| F769 | D0 04 | BNE SF76F |
| F76B | A5 2F | LDA \$2F |
| F76D | 85 31 | STA \$31 |
| F76F | A5 55 | LDA \$55 |
| F771 | 29 0F | AND #\$0F lower nibble |
| F773 | AA | TAX as index |
| F774 | BD 7F F7 | LDA \$F77F,X |
| F777 | 05 5A | ORA \$5A |
| F779 | 91 30 | STA (\$30),Y in buffer |
| F77B | C8 | INY increment buffer pointer |
| F77C | 84 34 | STY \$34 and save |
| F77E | 60 | RTS |

| | |
|------|-------------------------|
| F77F | 0A 0B 12 13 0E 0F 16 17 |
| F787 | 09 19 1A 1B 0D 1D 1E 15 |

| | | |
|------|----------|--------------|
| F78F | A9 00 | LDA #\$00 |
| F791 | 85 30 | STA \$30 |
| F793 | 85 2E | STA \$2E |
| F795 | 85 36 | STA \$36 |
| F797 | A9 BB | LDA #\$BB |
| F799 | 85 34 | STA \$34 |
| F79B | 85 50 | STA \$50 |
| F79D | A5 31 | LDA \$31 |
| F79F | 85 2F | STA \$2F |
| F7A1 | A9 01 | LDA #\$01 |
| F7A3 | 85 31 | STA \$31 |
| F7A5 | A5 47 | LDA \$47 |
| F7A7 | 85 52 | STA \$52 |
| F7A9 | A4 36 | LDY \$36 |
| F7AB | B1 2E | LDA (\$2E),Y |
| F7AD | 85 53 | STA \$53 |
| F7AF | C8 | INY |
| F7B0 | B1 2E | LDA (\$2E),Y |
| F7B2 | 85 54 | STA \$54 |
| F7B4 | C8 | INY |
| F7B5 | B1 2E | LDA (\$2E),Y |
| F7B7 | 85 55 | STA \$55 |
| F7B9 | C8 | INY |
| F7BA | 84 36 | STY \$36 |
| F7BC | 20 D0 F6 | JSR \$F6D0 |
| F7BF | A4 36 | LDY \$36 |
| F7C1 | B1 2E | LDA (\$2E),Y |

Anatomy of the 1541 Disk Drive

| | | |
|------|----------|--------------|
| F7C3 | 85 52 | STA \$52 |
| F7C5 | C8 | INY |
| F7C6 | F0 11 | BEO SF7D9 |
| F7C8 | B1 2E | LDA (\$2E),Y |
| F7CA | 85 53 | STA \$53 |
| F7CC | C8 | INY |
| F7CD | B1 2E | LDA (\$2E),Y |
| F7CF | 85 54 | STA \$54 |
| F7D1 | C8 | INY |
| F7D2 | B1 2E | LDA (\$2E),Y |
| F7D4 | 85 55 | STA \$55 |
| F7D6 | C8 | INY |
| F7D7 | D0 E1 | BNE SF7BA |
| F7D9 | A5 3A | LDA \$3A |
| F7DB | 85 53 | STA \$53 |
| F7DD | A9 00 | LDA #\$00 |
| F7DF | 85 54 | STA \$54 |
| F7E1 | 85 55 | STA \$55 |
| F7E3 | 4C D0 F6 | JMP SF6D0 |
| F7E6 | A4 34 | LDY \$34 |
| F7E8 | B1 30 | LDA (\$30),Y |
| F7EA | 29 F8 | AND #\$F8 |
| F7EC | 4A | LSR A |
| F7ED | 4A | LSR A |
| F7EE | 4A | LSR A |
| F7EF | 85 56 | STA \$56 |
| F7F1 | B1 30 | LDA (\$30),Y |
| F7F3 | 29 07 | AND #\$07 |
| F7F5 | 0A | ASL A |
| F7F6 | 0A | ASL A |
| F7F7 | 85 57 | STA \$57 |
| F7F9 | C8 | INY |
| F7FA | D0 06 | BNE SF802 |
| F7FC | A5 4E | LDA \$4E |
| F7FE | 85 31 | STA \$31 |
| F800 | A4 4F | LDY \$4F |
| F802 | B1 30 | LDA (\$30),Y |
| F804 | 29 C0 | AND #\$C0 |
| F806 | 2A | ROL A |
| F807 | 2A | ROL A |
| F808 | 2A | ROL A |
| F809 | 05 57 | ORA \$57 |
| F80B | 85 57 | STA \$57 |
| F80D | B1 30 | LDA (\$30),Y |
| F80F | 29 3E | AND #\$3E |
| F811 | 4A | LSR A |
| F812 | 85 58 | STA \$58 |
| F814 | B1 30 | LDA (\$30),Y |
| F816 | 29 01 | AND #\$01 |
| F818 | 0A | ASL A |
| F819 | 0A | ASL A |
| F81A | 0A | ASL A |
| F81B | 0A | ASL A |
| F81C | 85 59 | STA \$59 |

Anatomy of the 1541 Disk Drive

| | | |
|------|----------|--------------|
| F81E | C8 | INY |
| F81F | B1 30 | LDA (\$30),Y |
| F821 | 29 F0 | AND #\$F0 |
| F823 | 4A | LSR A |
| F824 | 4A | LSR A |
| F825 | 4A | LSR A |
| F826 | 4A | LSR A |
| F827 | 05 59 | ORA \$59 |
| F829 | 85 59 | STA \$59 |
| F82B | B1 30 | LDA (\$30),Y |
| F82D | 29 0F | AND #\$0F |
| F82F | 0A | ASL A |
| F830 | 85 5A | STA \$5A |
| F832 | C8 | INY |
| F833 | B1 30 | LDA (\$30),Y |
| F835 | 29 80 | AND #\$80 |
| F837 | 18 | CLC |
| F838 | 2A | ROL A |
| F839 | 2A | ROL A |
| F83A | 29 01 | AND #\$01 |
| F83C | 05 5A | ORA \$5A |
| F83E | 85 5A | STA \$5A |
| F840 | B1 30 | LDA (\$30),Y |
| F842 | 29 7C | AND #\$7C |
| F844 | 4A | LSR A |
| F845 | 4A | LSR A |
| F846 | 85 5B | STA \$5B |
| F848 | B1 30 | LDA (\$30),Y |
| F84A | 29 03 | AND #\$03 |
| F84C | 0A | ASL A |
| F84D | 0A | ASL A |
| F84E | 0A | ASL A |
| F84F | 85 5C | STA \$5C |
| F851 | C8 | INY |
| F852 | D0 06 | BNE SF85A |
| F854 | A5 4E | LDA \$4E |
| F856 | 85 31 | STA \$31 |
| F858 | A4 4F | LDY \$4F |
| F85A | B1 30 | LDA (\$30),Y |
| F85C | 29 E0 | AND #SE0 |
| F85E | 2A | ROL A |
| F85F | 2A | ROL A |
| F860 | 2A | ROL A |
| F861 | 2A | ROL A |
| F862 | 05 5C | ORA \$5C |
| F864 | 85 5C | STA \$5C |
| F866 | B1 30 | LDA (\$30),Y |
| F868 | 29 1F | AND #\$1F |
| F86A | 85 5D | STA \$5D |
| F86C | C8 | INY |
| F86D | 84 34 | STY \$34 |
| F86F | A6 56 | LDX \$56 |
| F871 | BD A0 F8 | LDA SF8A0,X |
| F874 | A6 57 | LDX \$57 |
| F876 | 1D C0 F8 | ORA SF8C0,X |

Anatomy of the 1541 Disk Drive

| | | |
|------|----------|--------------|
| F879 | 85 52 | STA \$52 |
| F87B | A6 58 | LDX \$58 |
| F87D | BD A0 F8 | LDA \$F8A0,X |
| F880 | A6 59 | LDX \$59 |
| F882 | 1D C0 F8 | ORA SF8C0,X |
| F885 | 85 53 | STA \$53 |
| F887 | A6 5A | LDX \$5A |
| F889 | BD A0 F8 | LDA \$F8A0,X |
| F88C | A6 5B | LDX \$5B |
| F88E | 1D C0 F8 | ORA \$F8C0,X |
| F891 | 85 54 | STA \$54 |
| F893 | A6 5C | LDX \$5C |
| F895 | BD A0 F8 | LDA \$F8A0,X |
| F898 | A6 5D | LDX \$5D |
| F89A | 1D C0 F8 | ORA \$F8C0,X |
| F89D | 85 55 | STA \$55 |
| F89F | 60 | RTS |

| | | |
|------|-------------------------|--|
| F8A0 | FF FF FF FF FF FF FF FF | |
| F8A8 | FF 80 00 10 FF C0 40 50 | |
| F8B0 | FF FF 20 30 FF F0 60 70 | |
| F8B8 | FF 90 A0 B0 FF D0 E0 FF | |

| | | |
|------|-------------------------|--|
| F8C0 | FF FF FF FF FF FF FF FF | |
| F8C8 | FF 08 00 01 FF 0C 04 05 | |
| F8D0 | FF FF 02 03 FF 0F 06 07 | |
| F8D8 | FF 09 0A 0B FF 0D 0E FF | |

| | | |
|------|----------|--------------|
| F8E0 | A9 00 | LDA #\$00 |
| F8E2 | 85 34 | STA \$34 |
| F8E4 | 85 2E | STA \$2E |
| F8E6 | 85 36 | STA \$36 |
| F8E8 | A9 01 | LDA #\$01 |
| F8EA | 85 4E | STA \$4E |
| F8EC | A9 BA | LDA #\$BA |
| F8EE | 85 4F | STA \$4F |
| F8F0 | A5 31 | LDA \$31 |
| F8F2 | 85 2F | STA \$2F |
| F8F4 | 20 E6 F7 | JSR \$F7E6 |
| F8F7 | A5 52 | LDA \$52 |
| F8F9 | 85 38 | STA \$38 |
| F8FB | A4 36 | LDY \$36 |
| F8FD | A5 53 | LDA \$53 |
| F8FF | 91 2E | STA (\$2E),Y |
| F901 | C8 | INY |
| F902 | A5 54 | LDA \$54 |
| F904 | 91 2E | STA (\$2E),Y |
| F906 | C8 | INY |
| F907 | A5 55 | LDA \$55 |
| F909 | 91 2E | STA (\$2E),Y |
| F90B | C8 | INY |
| F90C | 84 36 | STY \$36 |
| F90E | 20 E6 F7 | JSR \$F7E6 |

| | | |
|------|----------|------------------------|
| F911 | A4 36 | LDY \$36 |
| F913 | A5 52 | LDA \$52 |
| F915 | 91 2E | STA (\$2E),Y |
| F917 | C8 | INY |
| F918 | F0 11 | BEO \$F92B |
| F91A | A5 53 | LDA \$53 |
| F91C | 91 2E | STA (\$2E),Y |
| F91E | C8 | INY |
| F91F | A5 54 | LDA \$54 |
| F921 | 91 2E | STA (\$2E),Y |
| F923 | C8 | INY |
| F924 | A5 55 | LDA \$55 |
| F926 | 91 2E | STA (\$2E),Y |
| F928 | C8 | INY |
| F929 | D0 E1 | BNE \$F90C |
| F92B | A5 53 | LDA \$53 |
| F92D | 85 3A | STA \$3A |
| F92F | A5 2F | LDA \$2F |
| F931 | 85 31 | STA \$31 |
| F933 | 60 | RTS |
| | | |
| F934 | A5 31 | LDA \$31 |
| F936 | 85 2F | STA \$2F |
| F938 | A9 00 | LDA #\$00 |
| F93A | 85 31 | STA \$31 |
| F93C | A9 24 | LDA #\$24 |
| F93E | 85 34 | STA \$34 |
| F940 | A5 39 | LDA \$39 |
| F942 | 85 52 | STA \$52 |
| F944 | A5 1A | LDA \$1A |
| F946 | 85 53 | STA \$53 |
| F948 | A5 19 | LDA \$19 |
| F94A | 85 54 | STA \$54 |
| F94C | A5 18 | LDA \$18 |
| F94E | 85 55 | STA \$55 |
| F950 | 20 D0 F6 | JSR \$F6D0 |
| F953 | A5 17 | LDA \$17 |
| F955 | 85 52 | STA \$52 |
| F957 | A5 16 | LDA \$16 |
| F959 | 85 53 | STA \$53 |
| F95B | A9 00 | LDA #\$00 |
| F95D | 85 54 | STA \$54 |
| F95F | 85 55 | STA \$55 |
| F961 | 20 D0 F6 | JSR \$F6D0 |
| F964 | A5 2F | LDA \$2F |
| F966 | 85 31 | STA \$31 |
| F968 | 60 | RTS |
| | | |
| F969 | A4 3F | LDY \$3F |
| F96B | 99 00 00 | STA \$0000,Y |
| F96E | A5 50 | LDA \$50 |
| F970 | F0 03 | BEO \$F975 |
| F972 | 20 F2 F5 | JSR \$F5F2 |
| F975 | 20 8F F9 | JSR \$F98F |
| F978 | A6 49 | LDX \$49 |
| | | get stack pointer back |

Anatomy of the 1541 Disk Drive

| | | |
|------|----------|------------|
| F97A | 9A | TXS |
| F97B | 4C BE F2 | JMP SF2BE |
| F97E | A9 A0 | LDA #\$A0 |
| F980 | 85 20 | STA \$20 |
| F982 | AD 00 1C | LDA \$1C00 |
| F985 | 09 04 | ORA #\$04 |
| F987 | 8D 00 1C | STA \$1C00 |
| F98A | A9 3C | LDA \$3C |
| F98C | 85 48 | STA \$48 |
| F98E | 60 | RTS |
| F98F | A6 3E | LDX \$3E |
| F991 | A5 20 | LDA \$20 |
| F993 | 09 10 | ORA #\$10 |
| F995 | 85 20 | STA \$20 |
| F997 | A9 FF | LDA #\$FF |
| F999 | 85 48 | STA \$48 |
| F99B | 60 | RTS |
| F99C | AD 07 1C | LDA \$1C07 |
| F99F | 8D 05 1C | STA \$1C05 |
| F9A2 | AD 00 1C | LDA \$1C00 |
| F9A5 | 29 10 | AND #\$10 |
| F9A7 | C5 1E | CMP \$1E |
| F9A9 | 85 1E | STA \$1E |
| F9AB | F0 04 | BEO SF9B1 |
| F9AD | A9 01 | LDA #\$01 |
| F9AF | 85 1C | STA \$1C |
| F9B1 | AD FE 02 | LDA \$02FE |
| F9B4 | F0 15 | BEO SF9CB |
| F9B6 | C9 02 | CMP #\$02 |
| F9BB | D0 07 | BNE SF9C1 |
| F9BA | A9 00 | LDA #\$00 |
| F9BC | 8D FE 02 | STA \$02FE |
| F9BF | F0 0A | BEO SF9CB |
| F9C1 | 85 4A | STA \$4A |
| F9C3 | A9 02 | LDA #\$02 |
| F9C5 | 8D FE 02 | STA \$02FE |
| F9C8 | 4C 2E FA | JMP SF9C8 |
| F9CB | A6 3E | LDX \$3E |
| F9CD | 30 07 | BMI SF9D6 |
| F9CF | A5 20 | LDA \$20 |
| F9D1 | A8 | TAY |
| F9D2 | C9 20 | CMP #\$20 |
| F9D4 | D0 03 | BNE SF9D9 |
| F9D6 | 4C BE FA | JMP SF9D6 |
| F9D9 | C6 48 | DEC \$48 |
| F9DB | D0 1D | BNE SF9FA |
| F9DD | 98 | TYA |
| F9DE | 10 04 | BPL SF9E4 |
| F9E0 | 29 7F | AND #\$7F |
| F9E2 | 85 20 | STA \$20 |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|---------------------------------|
| F9E4 | 29 10 | AND #\$10 | |
| F9E6 | F0 12 | BEO \$F9FA | |
| F9E8 | AD 00 1C | LDA \$1C00 | |
| F9EB | 29 FB | AND #\$FB | drive motor on |
| F9ED | 8D 00 1C | STA \$1C00 | |
| F9F0 | A9 FF | LDA #\$FF | |
| F9F2 | 85 3E | STA \$3E | |
| F9F4 | A9 00 | LDA #\$00 | |
| F9F6 | 85 20 | STA \$20 | |
| F9F8 | F0 DC | BEO \$F9D6 | |
| F9FA | 98 | TYA | |
| F9FB | 29 40 | AND #\$40 | |
| F9FD | D0 03 | BNE SFA02 | |
| F9FF | 4C BE FA | JMP \$FABE | |
| FA02 | 6C 62 00 | JMP (\$0062) | |
| FA05 | A5 4A | LDA #\$4A | |
| FA07 | 10 05 | BPL \$FA0E | |
| FA09 | 49 FF | EOR #\$FF | |
| FA0B | 18 | CLC | |
| FA0C | 69 01 | ADC #\$01 | |
| FA0E | C5 64 | CMP \$64 | |
| FA10 | B0 0A | BCS \$FA1C | |
| FA12 | A9 3B | LDA #\$3B | |
| FA14 | 85 62 | STA \$62 | |
| FA16 | A9 FA | LDA #\$FA | pointer \$62/\$63 to \$FA3B |
| FA18 | 85 63 | STA \$63 | |
| FA1A | D0 12 | BNE \$FA2E | |
| FA1C | E5 5E | SBC \$5E | |
| FA1E | E5 5E | SBC \$5E | |
| FA20 | 85 61 | STA \$61 | |
| FA22 | A5 5E | LDA \$5E | |
| FA24 | 85 60 | STA \$60 | |
| FA26 | A9 7B | LDA #\$7B | |
| FA28 | 85 62 | STA \$62 | |
| FA2A | A9 FA | LDA #\$FA | pointer \$62/\$63 to \$FA7B |
| FA2C | 85 63 | STA \$63 | |
| FA2E | A5 4A | LDA \$4A | step counter for head transport |
| FA30 | 10 31 | BPL \$FA63 | |
| FA32 | E6 4A | INC \$4A | increment |
| FA34 | AE 00 1C | LDX \$1C00 | |
| FA37 | CA | DEX | |
| FA38 | 4C 69 FA | JMP \$FA69 | |
| ***** | | | |
| FA3B | A5 4A | LDA \$4A | step counter for head transport |
| FA3D | D0 EF | BNE \$FA2E | not yet zero? |
| FA3F | A9 4E | LDA #\$4E | |
| FA41 | 85 62 | STA \$62 | |
| FA43 | A9 FA | LDA #\$FA | pointer \$62/\$63 to \$FA4E |
| FA45 | 85 63 | STA \$63 | |
| FA47 | A9 05 | LDA #\$05 | |
| FA49 | 85 60 | STA \$60 | counter to 5 |
| FA4B | 4C BE FA | JMP \$FABE | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|-----------|---------------------------|
| FA4E | C6 60 | DEC \$60 | decrement counter |
| FA50 | D0 6C | BNE SFARE | not yet zero? |
| FA52 | A5 20 | LDA \$20 | |
| FA54 | 29 BF | AND #\$BF | erase bit 6 |
| FA56 | 85 20 | STA \$20 | |
| FA58 | A9 05 | LDA #\$05 | |
| FA5A | 85 62 | STA \$62 | |
| FA5C | A9 FA | LDA #\$FA | pointer \$62/\$63 to FA05 |
| FA5E | 85 63 | STA \$63 | |
| FA60 | 4C BE FA | JMP SFABE | |

| | | | |
|------|----------|------------|---------------------------------|
| FA63 | C6 4A | DEC S4A | step counter for head transport |
| FA65 | AE 00 1C | LDX \$1C00 | |
| FA68 | E8 | INX | |
| FA69 | 8A | TXA | |
| FA6A | 29 03 | AND #\$03 | |
| FA6C | 85 4B | STA \$4B | |
| FA6E | AD 00 1C | LDA \$1C00 | |
| FA71 | 29 FC | AND #\$FC | |
| FA73 | 05 4B | ORA \$4B | stepper motor off |
| FA75 | 8D 00 1C | STA \$1C00 | |
| FA78 | 4C BE FA | JMP SFABE | |

| | | | |
|------|----------|------------|---------------------------|
| FA7B | 38 | SEC | |
| FA7C | AD 07 1C | LDA \$1C07 | |
| FA7F | E5 5F | SBC \$5F | |
| FA81 | 8D 05 1C | STA \$1C05 | |
| FA84 | C6 60 | DEC \$60 | decrement counter |
| FA86 | D0 0C | RNE SF94 | not yet zero? |
| FA88 | A5 5E | LDA \$5E | |
| FA8A | 85 60 | STA \$60 | |
| FA8C | A9 97 | STA #\$97 | |
| FA8E | 85 62 | STA \$62 | |
| FA90 | A9 FA | LDA #\$FA | pointer \$62/\$63 to SF97 |
| FA92 | 85 63 | STA \$63 | |
| FA94 | 4C 2E FA | JMP SF94 | |

| | | | |
|------|-------|-----------|---------------------------|
| FA97 | C6 61 | DEC \$61 | |
| FA99 | D0 F9 | RNE SF94 | |
| FA9B | A9 A5 | LDA #\$A5 | |
| FA9D | 85 62 | STA \$62 | |
| FA9F | A9 FA | LDA #\$FA | pointer \$62/\$63 to SF95 |
| FAA1 | 85 63 | STA \$63 | |
| FAA3 | D0 EF | BNE SF94 | |

| | | | |
|------|----------|------------|--|
| FAA5 | AD 07 1C | LDA \$1C07 | |
| FAA8 | 18 | CLC | |
| FAA9 | 65 5F | ADC \$5F | |
| FAA9 | 8D 05 1C | STA \$1C05 | |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|----------|--------------|----------------------------------|
| FAAE | C6 60 | DEC \$60 | decrement counter |
| FAB0 | D0 E2 | BNE SFA94 | not yet zero? |
| FAB2 | A9 4E | LDA #\$4E | |
| FAB4 | 85 62 | STA \$62 | |
| FAB6 | A9 FA | LDA \$FA | pointer \$62/\$63 to \$FA4E |
| FAB8 | 85 63 | STA \$63 | |
| FABA | A9 05 | LDA #\$05 | |
| FABC | 85 60 | STA \$60 | counter to 5 |
| FABE | AD 0C 1C | LDA \$1C0C | |
| FAC1 | 29 FD | AND #\$FD | erase bit 1 |
| FAC3 | 8D 0C 1C | STA \$1C0C | |
| FAC6 | 60 | RTS | |
| ***** | | | |
| FAC7 | A5 51 | LDA \$51 | formatting |
| FAC9 | 10 2A | BPL SFAF5 | track number |
| FACB | A6 3D | LDX \$3D | fomating already in progress |
| FACD | A9 60 | LDA #\$60 | drive number |
| FACF | 95 20 | STA \$20,X | flag for head transport |
| FAD1 | A9 01 | LDA #\$01 | set |
| FAD3 | 95 22 | STA \$22,X | set destination track |
| FAD5 | 85 51 | STA \$51 | running track # for format |
| FAD7 | A9 A4 | LDA #\$A4 | 164 |
| FAD9 | 85 4A | STA \$4A | step counter for head transport |
| FADB | AD 00 1C | LDA \$1C00 | |
| FADE | 29 FC | AND #\$FC | stepper motor on |
| FAEO | 8D 00 1C | STA \$1C00 | |
| FAE3 | A9 0A | LDA #\$0A | 10 |
| FAE5 | 8D 20 06 | STA \$0620 | error counter |
| FAE8 | A9 A0 | LDA #\$40 | \$621/\$622 = 4000 |
| FAEA | 8D 21 06 | STA \$0621 | initialize track capacity |
| FAED | A9 0F | LDA #\$0F | 4000 < capacity < 2*4000 bytes |
| FAEF | 8D 22 06 | STA \$0622 | |
| FAF2 | 4C 9C F9 | JMP SF99C | back in job loop |
| ***** | | | |
| FAF5 | A0 00 | LDY #\$00 | |
| FAF7 | D1 32 | CMP (\$32),Y | |
| FAF9 | F0 05 | BEO \$FB00 | |
| FAFB | 91 32 | STA (\$32),Y | |
| FAFD | 4C 9C F9 | JMP SF99C | to job loop |
| ***** | | | |
| FB00 | AD 00 1C | LDA \$1C00 | |
| FB03 | 29 10 | AND #\$10 | write protect? |
| FB05 | D0 05 | BNE SFBOC | no |
| FB07 | A9 08 | LDA #\$08 | |
| FB09 | 4C D3 FD | JMP SFDD3 | 26, 'write protect on' |
| ***** | | | |
| FB0C | 20 A3 FD | JSR \$FDA3 | write \$FF to disk 10240 times |
| FB0F | 20 C3 FD | JSR \$FDC3 | code (\$621/\$622) times to disk |
| FB12 | A9 55 | LDA #\$55 | \$55 |
| FB14 | 8D 01 1C | STA \$1C01 | to write head |
| FB17 | 20 C3 FD | JSR \$FDC3 | and (\$621/\$622) times to disk |
| FB1A | 20 00 FE | JSR \$FE00 | switch to read |
| FB1D | 20 56 F5 | JSR \$F556 | set timer, find \$FF (SYNC) |
| FB20 | A9 40 | LDA #\$40 | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|------------|-------------------------------|
| FB22 | 0D 0B 18 | ORA \$180B | timer 1 free running |
| FB25 | 8D 0B 18 | STA \$180B | |
| FB28 | A9 62 | LDA #\$62 | 98 cycles, about 0.1 ms |
| FB2A | 8D 06 18 | STA \$1806 | |
| FB2D | A9 00 | LDA #\$00 | |
| FB2F | 8D 07 18 | STA \$1807 | |
| FB32 | 8D 05 18 | STA \$1805 | start timer |
| FB35 | A0 00 | LDY #\$00 | counter to zero |
| FB37 | A2 00 | LDX #\$00 | |
| FB39 | 2C 00 1C | BIT \$1C00 | SYNC found? |
| FB3C | 30 FB | BMI \$FB39 | no, wait |
| FB3E | 2C 00 1C | BIT \$1C00 | SYNC found? |
| FB41 | 10 FB | BPL \$FB3E | wait for SYNC |
| FB43 | AD 04 18 | LDA \$1804 | reset interrupt flag timer |
| FB46 | 2C 00 1C | BIT \$1C00 | SYNC found? |
| FB49 | 10 11 | BPL \$FB5C | not SYNC (\$55)? |
| FB4B | AD 0D 18 | LDA \$180D | interrupt flag register |
| FB4E | 0A | ASL A | shift timer flag |
| FB4F | 10 F5 | BPL \$FB46 | timer not run down yet? |
| FB51 | E8 | INX | increment counter |
| FB52 | D0 EF | BNE \$FB43 | |
| FB54 | C8 | INY | increment hi-byte of counter |
| FB55 | D0 EC | BNE \$FB43 | |
| FB57 | A9 02 | LDA #\$02 | overflow, then error |
| FB59 | 4C D3 FD | JMP \$FDD3 | 20, 'read error' |
| | | | |
| FB5C | 86 71 | STX \$71 | |
| FB5E | 84 72 | STY \$72 | |
| FB60 | A2 00 | LDX #\$00 | |
| FB62 | A0 00 | LDY #\$00 | |
| FB64 | AD 04 18 | LDA \$1804 | counter to zero again |
| FB67 | 2C 00 1C | BIT \$1C00 | reset timer 1 interrupt flag |
| FB6A | 30 11 | BMI \$FB7D | SYNC found? |
| FB6C | AD 0D 18 | LDA \$180D | yes |
| FB6F | 0A | ASL A | interrupt-flag register |
| FB70 | 10 F5 | BPL \$FB67 | timer flag to bit 7 |
| FB72 | E8 | INX | no, wait until timer run down |
| FB73 | D0 EF | BNE \$FB64 | increment counter |
| FB75 | C8 | INY | |
| FB76 | D0 EC | BNE \$FB64 | |
| FB78 | A9 02 | LDA #\$02 | overflow, then error |
| FB7A | 4C D3 FD | JMP \$FDD3 | 20, 'read error' |
| | | | |
| FB7D | 38 | SEC | |
| FB7E | 8A | TXA | |
| FB7F | E5 71 | SBC \$71 | difference between counter |
| FB81 | AA | TAX | |
| FB82 | 85 70 | STA \$70 | |
| FB84 | 98 | TYA | and value for \$FF-storage |
| FB85 | E5 72 | SBC \$72 | |
| FB87 | A8 | TAY | bring to \$70/\$71 |
| FB88 | 85 71 | STA \$71 | |
| FB8A | 10 0B | BPL \$FB97 | difference positive? |
| FB8C | 49 FF | EOR #\$FF | |
| FB8E | A8 | TAY | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|------------|----------------------------------|
| FB8F | 8A | TXA | |
| FB90 | 49 FF | EOR #\$FF | calculate abs. val of difference |
| FB92 | AA | TAX | |
| FB93 | E8 | INX | |
| FB94 | D0 01 | BNE \$FB97 | |
| FB96 | C8 | INY | |
| FB97 | 98 | TYA | |
| FB98 | D0 04 | BNE \$FB9E | |
| FB9A | E0 04 | CPX #\$04 | difference less than 4 * 0.1 ms |
| FB9C | 90 18 | BCC \$FB96 | yes |
| FB9E | 06 70 | ASL \$70 | |
| FBA0 | 26 71 | ROL \$71 | double difference |
| FBA2 | 18 | CLC | |
| FBA3 | A5 70 | LDA \$70 | |
| FBA5 | 6D 21 06 | ADC \$0621 | |
| F8A8 | 8D 21 06 | STA \$0621 | add to 4000 |
| FBAB | A5 71 | LDA \$71 | |
| FBAD | 6D 22 06 | ADC \$0622 | |
| FBB0 | 8D 22 06 | STA \$0622 | |
| FBB3 | 4C 0C FB | JMP \$FB0C | repeat until diff < 4 * 0.1 ms |
| FBB6 | A2 00 | LDX #\$00 | |
| FBB8 | A0 00 | LDY #\$00 | counter to zero |
| FBBB | B8 | CLV | |
| FBBB | AD 00 1C | LDA \$1C00 | SYNC? |
| FBBE | 10 0E | BPL \$FBCE | no |
| FBC0 | 50 59 | BVC \$FBBB | byte ready? |
| FBC2 | B8 | CLV | |
| FBC3 | E8 | INX | |
| FBC4 | D0 F5 | BNE \$FBBB | increment counter |
| FBC6 | C8 | INY | |
| FBC7 | D0 F2 | BNE \$FBBB | |
| FBC9 | A9 03 | LDA #\$03 | overflow, then error |
| FBCB | 4C D3 FD | JMP \$FDD3 | 21, read error |
| FBCE | 8A | TXA | |
| FBCF | 0A | ASL A | double counter |
| FBD0 | 8D 25 06 | STA \$0625 | |
| FBD3 | 98 | TYA | |
| FBD4 | 2A | ROL A | and to \$624/\$625 as track cap. |
| FBD5 | 8D 24 06 | STA \$0624 | |
| FBD8 | A9 BF | LDA #\$BF | |
| FBDA | 2D 0B 18 | AND \$180B | |
| FBDD | 8D 0B 18 | STA \$180B | |
| FBE0 | A9 66 | LDA #\$66 | 102 |
| FBE2 | 8D 26 06 | STA \$0626 | |
| FBE5 | A6 43 | LDX \$43 | number of sectors in this track |
| FBE7 | A0 00 | LDY #\$00 | |
| FBE9 | 98 | TYA | |
| FBEA | 18 | CLC | |
| FBEB | 6D 26 06 | ADC \$0626 | |
| FBEE | 90 01 | BCC \$FBF1 | |
| FBF0 | C8 | INY | |
| FBF1 | C8 | INY | |
| FBF2 | CA | DEX | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|-----------------------------------|
| FBF3 | D0 F5 | BNE \$FBEE | calculate # of bytes |
| FBF5 | 49 FF | EOR #\$FF | |
| FBF7 | 38 | SEC | |
| FBF8 | 69 00 | ADC #\$00 | |
| FBFA | 18 | CLC | |
| FBFB | 6D 25 06 | ADC \$0625 | |
| FBFE | B0 03 | BCS \$FC03 | |
| FC00 | CE 24 06 | DEC \$0624 | |
| FC03 | AA | TAX | |
| FC04 | 98 | TYA | |
| FC05 | 49 FF | EOR #\$FF | |
| FC07 | 38 | SEC | |
| FC08 | 69 00 | ADC #\$00 | |
| FC0A | 18 | CLC | |
| FC0B | 6D 24 06 | ADC \$0624 | result in A/X |
| FC0E | 10 05 | BPL SFC15 | |
| FC10 | A9 04 | LDA #\$04 | |
| FC12 | 4C D3 FD | JMP \$FDD3 | 22, 'read error' |
| | | | |
| FC15 | A8 | TAY | |
| FC16 | 8A | TXA | |
| FC17 | A2 00 | LDX #\$00 | |
| FC19 | 38 | SEC | total divided by number |
| FC1A | E5 43 | SBC \$43 | of sectors (\$43) |
| FC1C | B0 03 | BCS \$FC21 | |
| FC1E | 88 | DEY | |
| FC1F | 30 03 | BMI SFC24 | |
| FC21 | E8 | INX | |
| FC22 | D0 F5 | BNE \$FC19 | |
| FC24 | 8E 26 06 | STX \$0626 | compare no. of bytes per interval |
| FC27 | E0 04 | CPX #\$04 | with minimum value |
| FC29 | B0 05 | BCS \$FC30 | ok |
| FC2B | A9 05 | LDA #\$05 | |
| FC2D | 4C D3 FD | JMP \$FDD3 | 23, 'read error' |
| FC30 | 18 | CLC | remainder of division |
| FC31 | 65 43 | ADC \$43 | plus number of sectors |
| FC33 | 8D 27 06 | STA \$0627 | save |
| FC36 | A9 00 | LDA #\$00 | |
| FC38 | 8D 28 06 | STA \$0628 | counter for sectors |
| FC3B | A0 00 | LDY #\$00 | counter lo |
| FC3D | A6 3D | LDX \$3D | drive number |
| FC3F | A5 39 | LDA \$39 | constant 8, marker for header |
| FC41 | 99 00 03 | STA \$0300,Y | in buffer |
| FC44 | C8 | INY | |
| FC45 | C8 | INY | |
| FC46 | AD 28 06 | LDA \$0628 | sector number |
| FC49 | 99 00 03 | STA \$0300,Y | in buffer |
| FC4C | C8 | INY | |
| FC4D | A5 51 | LDA \$51 | track number |
| FC4F | 99 00 03 | STA \$0300,Y | in buffer |
| FC52 | C8 | INY | |
| FC53 | B5 13 | LDA \$13,X | ID 2 |
| FC55 | 99 00 03 | STA \$0300,Y | in buffer |
| FC58 | C8 | INY | |
| FC59 | B5 12 | LDA \$12,X | ID 1 |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|----------------------------------|
| FC5B | 99 00 03 | STA \$0300,Y | in buffer |
| FC5E | C8 | INY | |
| FC5F | A9 0F | LDA #\$0F | 15 |
| FC61 | 99 00 03 | STA \$0300,Y | in buffer |
| FC64 | C8 | INY | |
| FC65 | 99 00 03 | STA \$0300,Y | 15 in buffer |
| FC68 | C8 | INY | |
| FC69 | A9 00 | LDA #\$00 | |
| FC6B | 59 FA 02 | EOR \$02FA,Y | |
| FC6E | 59 FB 02 | EOR \$02FB,Y | |
| FC71 | 59 FC 02 | EOR \$02FC,Y | generate checksum |
| FC74 | 59 FD 02 | EOR \$02FD,Y | |
| FC77 | 99 F9 02 | STA \$02F9,Y | |
| FC7A | EE 28 06 | INC \$0628 | increment counter |
| FC7D | AD 28 06 | LDA \$0628 | counter |
| FC80 | C5 43 | CMP \$43 | compare with no. of sectors |
| FC82 | 90 BB | BCC \$FC3F | smaller, then continue |
| FC84 | 98 | TYA | |
| FC85 | 48 | PHA | |
| FC86 | E8 | INX | |
| FC87 | 8A | TXA | |
| FC88 | 9D 00 05 | STA \$0500,X | |
| FC8B | E8 | INX | |
| FC8C | D0 FA | BNE \$FC88 | |
| FC8E | A9 03 | LDA #\$03 | buffer pointer to \$300 |
| FC90 | 85 31 | STA \$31 | |
| FC92 | 20 30 FE | JSR \$FE30 | |
| FC95 | 68 | PLA | |
| FC96 | A8 | TAY | |
| FC97 | 88 | DEY | |
| FC98 | 20 E5 FD | JSR \$FDE5 | copy buffer data |
| FC9B | 20 F5 FD | JSR \$FDF5 | copy data in buffer |
| FC9E | A9 05 | LDA #\$05 | |
| FCA0 | 85 31 | STA \$31 | |
| FCA2 | 20 E9 F5 | JSR \$F5E9 | buffer pointer to \$500 |
| FCA5 | 85 3A | STA \$3A | calculate parity for data buffer |
| FCA7 | 20 8F F7 | JSR SF78F | and save |
| FCAA | A9 00 | LDA #\$00 | |
| FCAC | 85 32 | STA \$32 | |
| FCAE | 20 0E FE | JSR \$FE0E | |
| FCB1 | A9 FF | LDA #\$FF | |
| FCB3 | 8D 01 1C | STA \$1C01 | to write head |
| FCB6 | A2 05 | LDX #\$05 | write \$FF 5 times |
| FCB8 | 50 FE | BVC \$FCB8 | byte ready |
| FCBA | B8 | CLV | |
| FCBB | CA | DEX | |
| FCBC | D0 FA | BNE \$FCB8 | |
| FCBE | A2 0A | LDX #\$0A | 10 times |
| FCC0 | A4 32 | LDY \$32 | buffer pointer |
| FCC2 | 50 FE | BVC \$FCC2 | byte ready? |
| FCC4 | B8 | CLV | |
| FCC5 | B9 00 03 | LDA \$0300,Y | data from buffer |
| FCC8 | 8D 01 1C | STA \$1C01 | write |
| FCCB | C8 | INY | |
| FCCC | CA | DEX | 10 data written? |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|-----------------------------|
| FCCD | D0 F3 | BNE \$FCC2 | |
| FCCF | A2 09 | LDX #\$09 | 9 times |
| FCD1 | 50 FE | BVC \$FCD1 | byte ready? |
| FCD3 | B8 | CLV | |
| FCD4 | A9 55 | LDA #\$55 | \$55 |
| FCD6 | 8D 01 1C | STA \$1C01 | write |
| FCD9 | CA | DEX | |
| FCDA | D0 F5 | BNE \$FCD1 | 9 times? |
| FCDC | A9 FF | LDA #\$FF | \$FF |
| FCDE | A2 05 | LDX #\$05 | 5 times |
| FCE0 | 50 FE | BVC \$FCE0 | byte ready? |
| FCE2 | B8 | CLV | |
| FCE3 | 8D 01 1C | STA \$1C01 | to write head |
| FCE6 | CA | DEX | |
| FCE7 | D0 F7 | BNE \$FCE0 | |
| FCE9 | A2 BB | LDX #\$BB | |
| FCEB | 50 FE | BVC \$FCEB | |
| FCED | B8 | CLV | |
| FCEE | BD 00 01 | LDA \$0100,X | area \$1BB to \$1FF |
| FCF1 | 8D 01 1C | STA \$1C01 | save |
| FCF4 | E8 | INX | |
| FCF5 | D0 F4 | BNE \$FCEB | |
| FCF7 | A0 00 | LDY #\$00 | |
| FCF9 | 50 FE | BVC \$FCF9 | byte ready? |
| FCFB | B8 | CLV | |
| FCFC | B1 30 | LDA (\$30),Y | 256 bytes of data |
| FCFE | 8D 01 1C | STA \$1C01 | write byte to disk |
| FD01 | C8 | INY | |
| FD02 | D0 F5 | BNE \$FCF9 | |
| FD04 | A9 55 | LDA #\$55 | \$55 |
| FD06 | AE 26 06 | LDX \$0626 | (\$626) times |
| FD09 | 50 FE | BVC \$FD09 | |
| FD0B | B8 | CLV | |
| FD0C | 8D 01 1C | STA \$1C01 | write |
| FD0F | CA | DEX | |
| FD10 | D0 F7 | BNE \$FD09 | |
| FD12 | A5 32 | LDA \$32 | |
| FD14 | 18 | CLC | |
| FD15 | 69 0A | ADC #\$0A | plus 10 |
| FD17 | 85 32 | STA \$32 | |
| FD19 | CE 28 06 | DEC \$0628 | decrement sector number |
| FD1C | D0 93 | BNE \$FCB1 | |
| FD1E | 50 FE | BVC \$FD1E | byte ready? |
| FD20 | B8 | CLV | |
| FD21 | 50 FE | BVC \$FD21 | byte ready? |
| FD23 | B8 | CLV | |
| FD24 | 20 00 FE | JSR SFE00 | switch to reading |
| FD27 | A9 C8 | LDA #\$C8 | 200 |
| FD29 | 8D 23 06 | STA \$0623 | |
| FD2C | A9 00 | LDA #\$00 | |
| FD2E | 85 30 | STA \$30 | |
| FD30 | A9 03 | LDA #\$03 | buffer pointer to \$200 |
| FD32 | 85 31 | STA \$31 | |
| FD34 | A5 43 | LDA \$43 | number of sectors per track |
| FD36 | 8D 28 06 | STA \$0628 | |

Anatomy of the 1541 Disk Drive

| | | | |
|------|----------|--------------|----------------------------------|
| FD39 | 20 56 F5 | JSR \$F556 | wait for SYNC |
| FD3C | A2 0A | LDX #\$0A | 10 data |
| FD3E | A0 00 | LDY #\$00 | |
| FD40 | 50 FE | BVC \$FD40 | byte ready? |
| FD42 | B8 | CLV | |
| FD43 | AD 01 1C | LDA \$1C01 | read byte |
| FD46 | D1 30 | CMP (\$30),Y | compare with data in buffer |
| FD48 | D0 0E | BNE \$FD58 | not equal, error |
| FD4A | C8 | INY | |
| FD4B | CA | DEX | |
| FD4C | D0 F2 | BNE \$FD40 | |
| FD4E | 18 | CLC | |
| FD4F | A5 30 | LDA \$30 | |
| FD51 | 69 0A | ADC #\$0A | increment pointer by 10 |
| FD53 | 85 30 | STA \$30 | |
| FD55 | 4C 62 FD | JMP \$FD62 | |
| FD58 | CE 23 06 | DEC \$0623 | decrement counter for attempts |
| FD5B | D0 CF | BNE \$FD2C | not yet zero? |
| FD5D | A9 06 | LDA #\$06 | else error |
| FD5F | 4C D3 FD | JMP \$FDD3 | 24, 'read error' |
| FD62 | 20 56 F5 | JSR \$F556 | wait for SYNC |
| FD65 | A0 BB | LDY #\$BB | |
| FD67 | 50 FE | BVC \$FD67 | byte ready? |
| FD69 | B8 | CLV | |
| FD6A | AD 01 1C | LDA \$1C01 | read byte |
| FD6D | D9 00 01 | CMP \$0100,Y | compare with buffer contents |
| FD70 | D0 E6 | BNE \$FD58 | not equal, error |
| FD72 | C8 | INY | |
| FD73 | D0 F2 | BNE \$FD67 | next byte |
| FD75 | A2 FC | LDX #\$FC | |
| FD77 | 50 FE | BVC \$FD77 | byte ready? |
| FD79 | B8 | CLV | |
| FD7A | AD 01 1C | LDA \$1C01 | read byte |
| FD7D | D9 00 05 | CMP \$0500,Y | compare with buffer contents |
| FD80 | D0 D6 | BNE \$FD58 | not equal, then error |
| FD82 | C8 | INY | |
| FD83 | CA | DEX | next byte |
| FD84 | D0 F1 | BNE \$FD77 | |
| FD86 | CE 28 06 | DEC \$0628 | decrement sector counter |
| FD89 | D0 AE | BNE \$FD39 | not yet zero? |
| FD8B | E6 51 | INC \$51 | increment track number |
| FD8D | A5 51 | LDA \$51 | |
| FD8F | C9 24 | CMP #\$24 | compare with 36, highest trk# +1 |
| FD91 | B0 03 | BCS \$FD96 | greater, then formatting done |
| FD93 | 4C 9C F9 | JMP \$F99C | continue |
| FD96 | A9 FF | LDA #\$FF | |
| FD98 | 85 51 | STA \$51 | track number to \$FF |
| FD9A | A9 00 | LDA #\$00 | |
| FD9C | 85 50 | STA \$50 | |
| FD9E | A9 01 | LDA #\$01 | |
| FDA0 | 4C 69 F9 | JMP \$F969 | ok |

Anatomy of the 1541 Disk Drive

***** write \$FF 10240 times

| | | |
|---------------|------------|-----------------------------------|
| FDA3 AD 0C 1C | LDA \$1C0C | |
| FDA6 29 1F | AND #\$1F | switch PCR to writing |
| FDA8 09 C0 | ORA #\$C0 | |
| FDAA 8D 0C 1C | STA \$1C0C | |
| FDAD A9 FF | LDA #\$FF | |
| FDAF 8D 03 1C | STA \$1C03 | port A(read/write head) to output |
| FDB2 8D 01 1C | STA \$1C01 | write \$FF to disk |
| FDB5 A2 28 | LDX #\$28 | 40 |
| FDB7 A0 00 | LDY #\$00 | |
| FDB9 50 FE | BVC \$FDB9 | byte ready? |
| FDDB B8 | CLV | |
| FDCC 88 | DEY | |
| FDBD D0 FA | BNE \$FD89 | |
| FDBF CA | DEX | |
| FDC0 D0 F7 | BNE \$FD89 | |
| FDC2 60 | RTS | |

***** read/write (\$621/\$622) times

| | | |
|---------------|------------|-------------|
| FDC3 AE 21 06 | LDX \$0621 | |
| FDC6 AC 22 06 | LDY \$0622 | |
| FDC9 50 FE | BVC \$FDC9 | byte ready? |
| FDCB B8 | CLV | |
| FDCC CA | DEX | |
| FDCD D0 FA | BNE \$FDC9 | |
| FDCF 88 | DEY | |
| FDD0 10 F7 | BPL \$FDC9 | |
| FDD2 60 | RTS | |

***** attempt counter for formatting

| | | |
|---------------|-------------|------------------------------|
| FDD3 CE 20 06 | DEC \$0620 | decrement number of attempts |
| FDD6 F0 03 | BEO \$FDDDB | zero, then error |
| FDD8 4C 9C F9 | JMP \$F99C | continue |

***** flag for end of formatting

| | | |
|---------------|------------|----------------------------|
| FDDB A0 FF | LDY #\$FF | |
| FDDD 84 51 | STY \$51 | flag for end of formatting |
| FDDF C8 | INY | |
| FDE0 84 50 | STY \$50 | |
| FDE2 4C 69 F9 | JMP \$F969 | error termination |

***** copy buffer contents

| | | |
|---------------|--------------|----------------------|
| FDE5 B9 00 03 | LDA \$0300,Y | |
| FDE8 99 45 03 | STA \$0345,Y | |
| FDEB 88 | DEY | copy buffer contents |
| FDEC D0 F7 | BNE \$FDE5 | |
| FDEE AD 00 03 | LDA \$0300 | |
| FDF1 8D 45 03 | STA \$0345 | |
| FDF4 60 | RTS | |

| | | |
|---------------|--------------|---------------------------|
| FDF5 A0 44 | LDY #\$44 | |
| FDF7 B9 BB 01 | LDA \$01BB,Y | \$1BB to \$1FF |
| Fdfa 91 30 | STA (\$30),Y | write in buffer \$30/\$31 |
| FDFC 88 | DEY | |
| FDFD 10 F8 | BPL \$FDF7 | |

Anatomy of the 1541 Disk Drive

FDFF 60 RTS

```
*****
switch to reading
FE00 AD 0C 1C LDA $1C0C
FE03 09 E0 ORA #$E0 switch PCR to reading
FE05 8D 0C 1C STA $1C0C
FE08 A9 00 LDA #$00
FE0A 8D 03 1C STA $1C03 port A to input
FE0D 60 RTS

*****
write $55 10240 times
FE0E AD 0C 1C LDA $1C0C
FE11 29 1F AND #$1F
FE13 09 C0 ORA #$C0 switch PCR to writing
FE15 8D 0C 1C STA $1C0C
FE18 A9 FF LDA #$FF
FE1A 8D 03 1C STA $1C03 port A to output (write head)
FE1D A9 55 LDA #$55
FE1F 8D 01 1C STA $1C01 to port A (write head)
FE22 A2 28 LDX #$28
FE24 A0 00 LDY #$00
FE26 50 FE BVC $FE26 byte ready for write electronics
FE28 B8 CLV
FE29 88 DEY
FE2A D0 FA BNE $FE26 10240 times
FE2C CA DEX
FE2D D0 F7 BNE $FE26
FE2F 60 RTS

*****
FE30 A9 00 LDA #$00
FE32 85 30 STA $30
FE34 85 2E STA $2E
FE36 85 36 STA $36
FE38 A9 BB LDA #$BB
FE3A 85 34 STA $34
FE3C A5 31 LDA $31
FE3E 85 2F STA $2F
FE40 A9 01 LDA #$01
FE42 85 31 STA $31
FE44 A4 36 LDY $36
FE46 B1 2E LDA ($2E),Y
FE48 85 52 STA $52
FE4A C8 INY
FE4B B1 2E LDA ($2E).Y
FE4D 85 53 STA $53
FE4F C8 INY
FE50 B1 2E LDA ($2E),Y
FE52 85 54 STA $54
FE54 C8 INY
FE55 B1 2E LDA ($2E),Y
FE57 85 55 STA $55
FE59 C8 INY
FE5A F0 08 BEQ $FE64
FE5C 84 36 STY $36
```

Anatomy of the 1541 Disk Drive

| | | | |
|---|-------------------|-------------------------------------|---------------------------------|
| FE5E | 02 D0 F6 | JSR \$F6D0 | |
| FE61 | 4C 44 FE | | |
| FE64 | 4C D0 F6 | JMP SF6D0 | |
| ***** interrupt routine ***** | | | |
| FE67 | 48 | PHA | |
| FE68 | 8A | TXA | |
| FE69 | 48 | PHA | save registers |
| FE6A | 98 | TYA | |
| FE6B | 48 | PHA | |
| FE6C | AD 0D 18 | LDA \$180D | interrupt from serial bus |
| FE6F | 29 02 | AND #\$02 | |
| FE71 | F0 03 | BEQ \$FE76 | no |
| FE73 | 20 53 E8 | JSR SE853 | serve serial bus |
| FE76 | AD 0D 1C | LDA \$1C0D | interrupt from timer 1? |
| FE79 | 0A | ASL A | |
| FE7A | 10 03 | BPL \$FE7F | no |
| FE7C | 20 B0 F2 | JSR SF2R0 | IRO routine for disk controller |
| FE7F | 68 | PLA | |
| FE80 | A8 | TAY | |
| FE81 | 68 | PLA | get register back |
| FE82 | AA | TAX | |
| FE83 | 68 | PLA | |
| FE84 | 40 | RTI | |
| ***** constants for disk format ***** | | | |
| FE85 | 12 | 18, | track for BAM and directory |
| FE86 | 04 | start of BAM at position 4 | |
| FE87 | 04 | 4 bytes in BAM for each track | |
| FE88 | 90 | \$90 = 144, | end of BAM, disk name |
| ***** table of command words ***** | | | |
| FE89 | 56 49 44 4D 42 55 | 'V', 'I', 'D', 'M', 'B', 'U' | |
| FE8F | 50 26 43 52 53 4E | 'P', '&', 'C', 'R', 'S', 'N' | |
| ***** lo-bytes of command addresses ***** | | | |
| FE95 | 84 05 C1 F8 1B 5C | | |
| FE9F | 07 A3 F0 88 23 0D | | |
| ***** hi-bytes of command addresses ***** | | | |
| FEA1 | ED D0 C8 CA CC CB | | |
| FEA7 | E2 E7 C8 CA C8 EE | | |
| ***** bytes for syntax check ***** | | | |
| FEAD | 51 DD 1C 9E 1C | | |
| ***** file control methods ***** | | | |
| FEB2 | 52 57 41 4D | 'R', 'W', 'A', 'M' | |
| ***** file types ***** | | | |
| FEB6 | 44 53 50 55 4C | 'D', 'S', 'P', 'U', 'L' | |
| ***** names of file types ***** | | | |
| FEBB | 44 53 50 55 52 | 1st letters 'D', 'S', 'P', 'U', 'R' | |

Anatomy of the 1541 Disk Drive

FF0D 85 23 STA \$23
FF0F 60 RTS

FF10 AA ...
FFE1 ... AA

FFE2 52 53 52 AA
FFE6 C6 C8 8F F9

FFEA 5F CD USER vectors
FFEC 97 CD UA, U1, \$CD5F
FFEE 00 05 UB, U2, \$CD97
FFF0 03 05 UC, U3, \$0500
FFF2 06 05 UD, U4, \$0503
FFF4 09 05 UE, U5, \$0506
FFF6 0C 05 UF, U6, \$0509
FFF8 0F 05 UG, U7, \$050C
FFFFA 01 FF UH, U8, \$050F
 UI, U9, \$FF01
(NMI vector not used)

***** hardware vectors
FFFC 0A EA \$EAA0 RESET and UJ (U:) vector
FFFFE 67 FE \$FE67 IRQ vector

Anatomy of the 1541 Disk Drive

| | |
|----------------------------|--|
| FEC0 45 45 52 53 45 | 2nd letters 'E', 'E', 'R', 'S', 'E' |
| FEC5 4C 51 47 52 4C | 3rd letters 'L', 'O', 'G', 'R', 'L' |
| ***** | |
| FECA 08 00 00 | |
| ***** | |
| FECD 3F 7F BF FF | masks for bit command |
| ***** | |
| FED1 11 12 13 15 | number of sectors per track 17, 18, 19, 21 |
| ***** | |
| FED5 4A | contents for disk format 'A' marker for 1541 format |
| FED6 04 | 4 track numbers |
| FED7 24 | 36, highest track number + 1 |
| FED8 1F 19 12 | 31, 25, 18 tracks with change of number of sectors |
| ***** | |
| FEDB 01 FF FF 01 00 | control bytes for head position |
| ***** | |
| FEE0 03 04 05 06 07 | addresses of buffers high bytes |
| ***** | |
| FEE5 07 0E | |
| ***** | |
| FEE7 6C 65 00 JMP (\$0065) | for UI command |
| ***** | |
| FEEA 8D 00 1C STA \$1C00 | for diagnostic routine turn LED on |
| FEED 8D 02 1C STA \$1C02 | port to output |
| FEF0 4C 7D EA JMP \$EA7D | back to diagnostic routine |
| ***** | |
| FEF3 8A TXA | delay loop for serial bus |
| FEF4 A2 05 LDX #\$05 | |
| FEF6 CA DEX | |
| FEF7 D0 FD BNE \$FEF6 | |
| FEF9 AA TAX | |
| FEFA 60 RTS | |
| ***** | |
| FEFB 20 AE E9 JSR \$E9AE | data output to serial bus CLOCK OUT hi |
| FEFE 4C 9C E9 JMP \$E99C | DATA OUT lo |
| ***** | |
| FF01 AD 02 02 LDA \$0202 | UI vector |
| FF04 C9 2D CMP #\$2D | '-' |
| FF06 F0 05 BEQ \$FF0D | |
| FF08 38 SEC | |
| FF09 E9 2B SBC #\$2B | '+' |
| FF0B D0 DA BNE \$FEF7 | indirect jump over (\$65) |

Anatomy of the 1541 Disk Drive

FF0D 85 23 STA \$23
FF0F 60 RTS

FF10 AA ...
FFE1 ... AA

FFE2 52 53 52 AA
FFE6 C6 C8 8F F9

FFEA 5F CD USER vectors
FFEC 97 CD UA, U1, SCD5F
FFEE 00 05 UB, U2, \$CD97
FFFF 03 05 UC, U3, \$0500
FFF2 06 05 UD, U4, \$0503
FFF4 09 05 UE, U5, \$0506
FFF6 0C 05 UF, U6, \$0509
FFF8 0F 05 UG, U7, \$050C
FFFA 01 FF UH, U8, \$050F
UI, U9, SFF01
(NMI vector not used)

***** hardware vectors
FFFC 0A EA \$EAA0 RESET and UJ (U:) vector
FFFE 67 FE \$FE67 IRQ vector

Chapter 4: Programs and Tips for the 1541 Disk Drive**4.1 Utility Programs****4.1.1 Displaying all File Parameters**

The directory contains several important pieces of information about each file. Some information is not kept in the directory, such as the starting address of a program.

These and other file parameters can be easily found and displayed by the following program. The number and kind of file parameters are naturally dependent on the file type. A relative file, for instance, has no starting address. The following table presents the parameters displayed by this program.

| PARAMETER | | FILE TYPE | | | | | |
|----------------------|---|-----------|-----|-----|-----|-----|---|
| : | : | DEL | SEQ | PRG | USR | REL | : |
| : File closed? | : | X | X | X | X | X | : |
| : File protected? | : | X | X | X | X | X | : |
| : Allocated blocks | : | X | X | X | X | X | : |
| : Side-sector blocks | : | : | : | : | : | X | : |
| : Data blocks | : | : | : | : | : | X | : |
| : Records | : | : | : | : | : | X | : |
| : Start address | : | : | : | X | : | : | : |
| <hr/> | | | | | | | |
| : Free blocks, disk | : | X | X | X | X | X | : |
| : Allocated bl. disk | : | X | X | X | X | X | : |

This program is documented in detail so that the serious programmer can get a good overview of the file parameters. In addition, the variables used by the program are explained.

Variables used in the program:

Numerical Variables

T - Track of the actual block of the file entry in the directory

S - Sector of the actual block of the file entry in the directory

FL - Flag, set if the file name read from the diskette does not agree with the searched-for file

TY - File type of the given file (byte 0 of the entry)

Anatomy of the 1541 Disk Drive

FT - nibble of the file type (bits 0-3), contains the actual file type
LB - Low byte of the starting address
HB - High byte of the starting address
BL - Number of allocated blocks in the file
RL - Record length of a relative file
DT - Track of the first data block of a program file, which contains the starting address
DS - Sector of the first data block of a program file
SA - Starting address of a program file
BF - Number of free blocks on a disk
BA - Number of allocated blocks on a disk
BS - Number of side-sector blocks in a relative file
RC - Number of records in a relative file

String Variables

F\$ - Name of the file to search for
FF\$ - Contains the actual file name from the directory
FT\$ - File type
CLS - Indicates whether the file is closed or not
(contains "YES" or "NO")
PRS - Indicates whether the file is protected or not
(contains "YES" or "NO")
RES - contains CHR\$(18), REVERSE ON
RA\$ - contains CHR\$(146), REVERSE OFF

Program Documentation:

110 Set the color code of the screen
120 - 200 Program heading
210 - 230 Asks if the names should be listed out.
Sets flag FL to 1 and executes the routine at 280-490.
250 - 270 Input the filename. Asks for new input if the filename is greater than 16 characters.
280 - 490 Reads the file name from the directory and either displays it (FL=1) or compares it to the desired filename.
500 - 530 Reads byte 0 (file type) of the file entry of the desired file and stores it in TY. Also, the right half-byte is stored in FT.
540 - 590 Checks the file type and saves the text in FT\$, and checks for invalid file type.
600 - 610 Checks bit 7 of the file type byte (file closed?) and saves the result in CLS.
620 - 630 Checks bit 6 of the file type byte (file protected?) and saves the result in PRS.
640 - 690 Reads the number of allocated blocks in the file from bytes 28 and 29 of the file entry and saves it in BL.

700 - 730 If it is relative file, the record length is read from byte 21 and saved in RL
 740 - 880 If it is a program file, the starting address of the file is taken from the first data block and stored in SA.
 890 - 980 Free blocks on the disk are calculated by reading the first byte of the track-marked BAM section and added to BF. The allocated blocks are calculated by BA = 664 - BF
 990 - 1020 Here the number of side-sector blocks (BS) of a relative file is calculated with the help of the record length (RL) and the number of allocated blocks in the file (RC).
 1040-1230 Here the data can be sent to the screen or the printer as one chooses. The file parameters are shown in REVERSE.
 1240-1280 The parameters of another file can be output.

The program is written for a CBM 64. In spite of this, it can be run without major changes on a VIC 20. Only line 110, where the color of the screen is set, need be changed for the VIC 20.

BASIC Listing of the Program:

```

100 CLR
110 POKE 53280,2:POKE53281,2:PRINTCHR$(158);CHR$(147);
120 PRINT TAB(6);"===="
130 PRINT TAB(6);"DISPLAY ALL FILE PARAMETERS"
140 PRINT TAB(6);"===="
150 PRINT:PRINT
160 PRINT"WITH THIS PROGRAM, ALL PARAMETERS OF A"
170 PRINT"FILE CAN BE OUTPUT TO THE SCREEN OR TO"
180 PRINT"A PRINTER AT YOUR OPTION."
200 PRINT:PRINT
210 PRINT"LIST FILENAMES (Y/N)?"
220 GETX$ :IFX$<>"Y"ANDX$<>"N"THEN220
230 IF X$="Y"THENFL=1:GOSUB280
240 FL=0
250 INPUT"NAME OF THE FILE: ";F$
260 IFLEN(F$)<=16THEN280
270 PRINT"FILENAME TOO LONG!":GOTO250
280 OPEN 15,8,15,"I0":OPEN2,8,2,"#"
290 T=18:S=1
300 PRINT#15,"B-R";2;0;T;S
310 PRINT#15,"B-P";2;0
320 GET#2,X$:IFX$=""THENX$=CHR$(0)
325 T=ASC(X$)
330 GETX$ :IFX$=""THENX$=CHR$(0)
340 S=ASC(X$)
350 FORX=0TO7
360 PRINT#15,"B-P";2;X*32+5
370 FFS=""
380 FORY=0TO15
390 GET#2,X$:IFX$=""THENX$=CHR$(0)

```

Anatomy of the 1541 Disk Drive

```
400 IF ASC(X$)=160THEN430
410 FF$=FF$+X$
420 NEXT Y
430 IFF$=FF$THEN490
440 IFFLTHENPRINTFF$
450 NEXT X
460 IF T=0 THEN 480
470 GOTO 300
480 CLOSE2:CLOSE15
485 IFFL=0THENPRINT"FILENAME NOT FOUND!":GOTO210
490 IFFLTHENRETURN
500 PRINT#15,"B-P";2;X*32+2
510 GET#2,X$:IFX$=""THENX$=CHR$(0)
520 TY=ASC(X$)
530 FT=TYAND15
540 IFFT=0THENFTS="DELETED"
550 IFFT=1THENFTS="SEQUENTIAL"
560 IFFT=2THENFTS="PROGRAM"
570 IFFT=3THENFTS="USER"
580 IFFT=4THENFTS="RELATIVE"
590 IFFT>4THENPRINT"INVALID FILE TYPE!":GOTO200
600 IFTYAND128THENCLS="YES":GOTO620
610 CLS="NO"
620 IFTYAND64THENPRS="YES":GOTO640
630 PRS="NO"
640 PRINT#15,"B-P";2;X*32+30
650 GET#2,X$:IFX$=""THENX$=CHR$(0)
660 LB=ASC(X$)
670 GET#2,X$:IFX$=""THENX$=CHR$(0)
680 HB=ASC(X$)*256
690 BL=LB+HB
700 IFFT<>4THEN740
710 PRINT#15,"B-P";2;X*32+23
720 GET#2,X$:IFX$=""THENX$=CHR$(0)
730 RL=ASC(X$)
740 IFFT<>2THEN890
750 PRINT#15,"B-P";2;X*32+3
760 GET#2,X$:IFX$=""THENX$=CHR$(0)
770 DT=ASC(X$)
780 GET#2,X$:IFX$=""THENX$=CHR$(0)
790 DS=ASC(X$)
800 OPEN3,8,3,"#"
810 PRINT#15,"B-R";3;0;DT;DS
820 PRINT#15,"B-P";3;2
830 GET#3,X$:IFX$=""THENX$=CHR$(0)
840 LB=ASC(X$)
850 GET#3,X$:IFX$=""THENX$=CHR$(0)
860 HB=ASC(X$)*256
870 SA=LB+HB
880 CLOSE3
890 PRINT#15,"B-R";2;0;18;0
900 BF=0
910 FORI=4TO140STEP4
920 IFI=72THEN960
930 PRINT#15,"B-P";2;I
```

```

940 GET#2,X$:IFX$=""THENX$=CHR$(0)
950 BF=ASC(X$)+BF
960 NEXT
980 BA=664-BF
990 IFFT<>4THEN1040
1010 BS=BL/121:IFBS<>INT(BS)THENBS=INT(BS+1)
1020 RC=INT(((BL-BS)*254)/RL)
1040 PRINTCHR$(147);;"SCREEN OR PRINTER (S/P)?"
1050 GETX$:IFX$<>"S"ANDX$<>"P"THEN1050
1060 RES=CHR$(18):RAS=CHR$(146)
1070 IFX$="S"THENOPEN1,3:PRINT#1,CHR$(147)
1080 IFX$="P"THENOPEN1,4
1090 PRINT#1,"FILE PARAMETERS      ";RES:FS:ROS
1100 PRINT#1,"-----"
1110 PRINT#1,"FILE TYPE:          ";RES:FT$:RAS:PRINT#1
1120 PRINT#1,"FILE CLOSED:        ";RES:CLS:RAS:PRINT#1
1130 PRINT#1,"FILE PROTECTED:      ";RES:PRS:RAS:PRINT#1
1140 PRINT#1,"ALLOCATED BLOCKS:     ";RES:BL:RAS:PRINT#1
1150 IFFT<>4THEN1200
1160 PRINT#1,"RECORD LENGTH:        ";RES:RL:RAS:PRINT#1
1170 PRINT#1,"SIDE-SECTOR BLOCKS:   ";RES:BS:RAS:PRINT#1
1180 PRINT#1,"DATA BLOCKS:          ";RES:BL-BS:RAS:PRINT#1
1190 PRINT#1,"RECORDS:              ";RES:RC:RAS:PRINT#1
1200 IFFT=2THENPRINT#1."START ADDRFS$:           ";
    RES$;SA;RAS:PRINT#1
1210 PRINT#1,"FREE BLOCKS (DISK):  ";RES:BF:RAS:PRINT#1
1220 PRINT#1,"ALLOCATED BLOCKS (D):";RES:BA:RAS:PRINT#1
1230 CLOSE1
1240 PRINT"MORE (Y/N)?"
1250 CLOSE2:CLOSE15
1260 GETX$:IFX$<>"Y"ANDX$<>"N"THEN1260
1270 IFX$="Y"THEN100

```

4.1.2 Scratch-protect Files - File Protect

As already mentioned, it is possible to protect files on the VIC-1541 diskette and save this information in the directory. A file's type is contained in byte 0 of the file entry. Bit 6 denotes a protected file. If this bit is set to 1, the file can no longer be deleted with the **SCRATCH** command. But because the DOS has no command to set this bit an alternative way must be used to protect a file.

With the following program, you can:

- * display all files on the disk
- * protect files
- * unprotect files
- * erase files

This program can delete protected files as well as unprotected files. If you wish to delete a protected file,

Anatomy of the 1541 Disk Drive

you must confirm it. This program is also documented with a variable usage and descriptions so that you can use these techniques in your own programs.

List of Variables:

DF - Flag, set in the routine "read/search file" if the desired filename is found
FL - Set if the routine "read/search file" is only to be used for listing files
FT - Variable for storing the filetype
T - Track of the actual block of the file entry
S - Sector of the actual block of the file entry
TT - Track, in which the file entry block of the desired file is found
SS - Sector, in which the file entry block of the desired file is found
FFS - last filename read from the directory
F\$ - filename to search for

Program Documentation:

100 Set the screen color
110 - 230 Program header and option menu
240 - 260 Read the menu choice and call the appropriate subroutine
270 Back to the option menu
280 - 350 Subprogram "list all files"
310 Erase screen
320 Set flag FL to list files in the subroutine "read/search file"
350 Reset the flag and jump back
360 - 600 Subroutine "protect file"
390 Call subroutine "input filename"
400 Call the subroutine "read/search file"
410 - 450 Test if the file is found
460 - 480 Read file type and store in FT
490 - 500 Test if the file is already protected
510 Protect file (bit 6 to 1)
520 - 550 Transfer the file type to the buffer and write the block to disk
560 Close the channel
570 - 600 Message "File protected" and jump back
610 - 850 Subroutine "unprotect file"
640 Call subroutine "input filename"
650 Call subroutine "read/search file"
660 - 700 Test if file is found
710 - 730 Read file type and store in FT
740 - 750 Test if the file is already unprotected
760 Unprotect the file (bit 6 to 0)
770 - 800 Transfer the file type to the buffer and write the block to the disk
810 Close the file
820 - 850 End the subroutine

860 -1170 Subroutine "erase a file"
 890 Call the subroutine "input filename"
 900 Call the subroutine "read/search file"
 910 - 950 Test if the file is found
 960 - 980 Read the file type and save in FT
 990 Test if the file is protected
 1000-1030 Indicate that the file is protected, with the
 possibility to erase it anyway
 1040-1060 Ask if the file should really be erased
 1070 Bit 6 set back, if protected
 1080-1110 Transfer the file type to the buffer and write
 the block to the disk
 1120 Initialize the diskette
 1130 Erase the file
 1140-1170 End the subroutine
 1190-1560 Subroutine "read/search file"
 1220 Open the command and data channels
 1230-1240 Read directory and set buffer pointer
 1250-1320 Test if the disk contains a write protect. For
 this purpose, the directory is written back to the
 disk unchanged (line 1250). If the disk has a
 write protect tab on it, the error message 26,
 WRITE PROTECT ON will occur.
 1330 Initial values for the track and sector variables
 are set
 1340-1350 Read the file entry block and position the buffer
 pointer to the first byte
 1360-1390 Read the address of the next file entry block
 1400-1530 Loop to read filenames. The names are then either
 listed on the screen or compared to the desired
 filename, based on the value of flag FL
 1540-1560 If the variable T (track) contains zero, no more
 file entry blocks follow and the subroutine ends.

BASIC Listing of the Program:

```

100 POKE 53280,2:POKE53281,2:PRINTCHR$(158);CHR$(147);
110 PRINTTAB(8);"===="
120 PRINTTAB(8);"ERASE AND PROTECT FILES"
130 PRINTTAB(8);"===="
140 PRINT:PRINT
150 PRINT"WITH THIS PROGRAM, FILES CAN BE"
160 PRINT"PROTECTED, ERASED, AND UNPROTECTED"
180 PRINT:PRINT
190 PRINTTAB(6);"-1- LIST ALL FILES":PRINT
200 PRINTTAB(6);"-2- PROTECT A FILE":PRINT
210 PRINTTAB(6);"-3- UNPROTECT A FILE":PRINT
220 PRINTTAB(6);"-4- ERASE A FILE":PRINT
230 PRINTTAB(6);"-5- END THE PROGRAM":PRINT
240 GETX$:IFX$=="ORVAL(X$)<1ORVAL(X$)>5THEN240
250 IFVAL(X$)=5THENEND
260 ONVAL(X$)GOSUB280,360,610,860
270 GOTO 100
280 REM -----
290 REM LIST ALL FILES
  
```

Anatomy of the 1541 Disk Drive

```
300 REM -----
310 PRINTCHR$(147)
320 FL=1:GOSUB1190
330 PRINT:PRINT"RETURN FOR MORE"
340 INPUTX$ 
350 FL=0:RETURN
360 REM -----
370 REM PROTECT A FILE
380 REM -----
390 GOSUB1580
400 GOSUB1190
410 IFDF=1THEN460
420 PRINT"FILE NOT FOUND!":PRINT
430 PRINT"RETURN FOR MORE"
440 INPUTX$:CLOSE2:CLOSE15
450 RETURN
460 PRINT#15,"B-P";2;X*32+2
470 GET#2,X$:IFX$=""THENX$=CHR$(0)
480 FT=ASC(X$)
490 IF(FT AND 64)=0 THEN 510
500 PRINT"FILE IS ALREADY PROTECTED!":PRINT:GOTO430
510 FT=(FT OR 64)
520 PRINT#15,"B-P";2;X*32+2
530 PRINT#2,CHR$(FT);
540 PRINT#15,"B-P";2;0
550 PRINT#15,"U2";2;0;TT;SS
560 CLOSE2:CLOSE15
570 PRINT"FILE PROTECTED."
580 PRINT"RETURN FOR MORE"
590 INPUTX$ 
600 CLOSE2:CLOSE15:RETURN
610 REM -----
620 REM UNPROTECT A FILE
630 REM -----
640 GOSUB1580
650 GOSUB1190
660 IFDF=1THEN710
670 PRINT"FILE NOT FOUND!":PRINT
680 PRINT"RETURN FOR MORE"
690 INPUTX$:CLOSE2:CLOSE15
700 RETURN
710 PRINT#15,"B-P";2;X*32+2
720 GET#2,X$:IFX$=""THENX$=CHR$(0)
730 FT=ASC(X$)
740 IF (FT AND 64)=64THEN760
750 PRINT"FILE IS ALREADY UNPROTECTED!":PRINT:GOTO680
760 FT=(FTAND255-64)
770 PRINT#15,"B-P";2;X*32+2
780 PRINT#2,CHR$(FT);
790 PRINT#15,"B-P";2;0
800 PRINT#15,"U2";2;0;TT;SS
810 CLOSE2:CLOSE15
820 PRINT"FILE UNPROTECTED."
830 PRINT"RETURN FOR MORE"
840 INPUTX$
```

```

850 RETURN
860 REM -----
870 REM ERASE A FILE
880 REM -----
890 GOSUB1580
900 GOSUB1190
910 IFDF=1THEN960
920 PRINT"FILE NOT FOUND!":PRINT
930 PRINT"RETURN FOR MORE"
940 INPUTX$:CLOSE2:CLOSE15
950 RETURN
960 PRINT#15,"B-P";2;X*32+2
970 GET#2,X$:IFX$=""THENX$=CHR$(0)
980 FT=ASC(X$)
990 IF(FT AND 64)=0THEN1040
1000 PRINT"WARNING! FILE IS PROTECTED!"
1010 PRINT"UNPROTECT AND ERASE (Y/N)?"
1020 GETX$:IFX$<>"Y"ANDX$<>"N"THEN1020
1030 IFX$="N"THEN1170
1040 PRINT"ARE YOU SURE (Y/N)?"
1050 GETX$:IFX$<>"Y"ANDX$<>"N"THEN1050
1060 IFX$="N"THEN1170
1070 FT=(FT AND 255-64)
1080 PRINT#15,"B-P";2;X*32+2
1090 PRINT#2,CHR$(FT);
1100 PRINT#15,"B-P";2;0
1110 PRINT#15,"U2";2;0;TT;SS
1120 PRINT#15,"I0"
1130 PRINT#15,"S:"+FS
1140 PRINT"FILE ERASED."
1150 PRINT"RETURN FOR MORE"
1160 INPUTX$
1170 CLOSE2:CLOSE15:RETURN
1180 REM
1190 REM -----
1200 REM READ / SEARCH FILE
1210 REM -----
1220 OPEN15,8,15,"I0":OPEN2,8,2,"*"
1230 PRINT#15,"B-R";2;0;18;0
1240 PRINT#15,"B-P";2;0
1250 PRINT#15,"U2";2;0;18;0
1260 INPUT#15,X1$ 
1270 IF VAL(X1$)<>26 THEN 1330
1280 PRINT"PLEASE REMOVE THE WRITE PROTECT TAB FROM"
1290 PRINT"THE DISKETTE BEFORE USING THIS PROGRAM."
1300 PRINT"RETURN FOR MORE"
1310 INPUTX$ 
1320 CLOSE2:CLOSE15:RETURN
1330 T=18:S=1:TT=18:SS=1
1340 PRINT#15,"B-R";2;0;T;S
1345 TT=T:SS=S
1350 PRINT#15,"B-P";2;0
1360 GET#2,X$:IFX$=""THENX$=CHR$(0)
1370 T=ASC(X$)
1380 GET#2,X$:IFX$=""THENX$=CHR$(0)

```

Anatomy of the 1541 Disk Drive

```
1390 S=ASC(X$)
1400 FORX=0TO7
1410 PRINT#15,"B-P":2;X*32+2
1420 GET#2,X$:IFX$=""THENX$=CHR$(0)
1430 IFASC(X$)=0THEN1530
1440 PRINT#15,"B-P":2;X*32+5
1450 FF$=""
1460 FORY=0TO15
1470 GET#2,X$:IFX$=""THENX$=CHR$(0)
1480 IFASC(X$)=160THEN1500
1490 FF$=FF$+X$
1500 NEXTY
1510 IFFLTHENPRINTFF$:GOTO1530
1520 IFF$=FF$THENDF=1:GOTO1570
1530 NEXTX
1540 IFT<>0THEN1340
1550 CLOSE2:CLOSE15
1560 IFFL=0THENPRINT"FILENAME NOT FOUND!":FORI=1TO2000:
NEXT
1570 RETURN
1580 REM -----
1590 REM INPUT FILENAME
1600 REM -----
1610 PRINT:PRINT
1620 INPUT"FILENAME:":F$
1630 IFLEN(F$)<=16THEN1650
1640 PRINT"FILENAME TOO LONG!":GOTO1620
1650 DF=0:FL=0
1660 RETURN
```

This utility program was written for the CBM 64. This version can also be run on the VIC 20. Only line 100 which sets the screen color on the CBM 64 need be changed or ignored. If you value perfect video output, lines 110-230 can also be changed to accommodate the VIC 20's smaller screen size.

4.1.3 Backup Program - Copying a Diskette

The VIC 1541 disk drive does not allow disks to be duplicated since it is a single drive, as the double drives permit with the **COPY** or **BACKUP** commands of BASIC 4.0. With the 1541, each program to be copied must be transferred through the computer.

Here's an example of how you might copy a diskette using a single disk drive:

First, the BAM as well as the names and IDs of the disk to be copied are read into the computer. From the information in the BAM, you can determine which blocks of the original diskette are used. In order to save time, only the allocated

blocks are copied. Then a direct access file is opened and the first 169 (as many as will fit in the memory of the Commodore 64) allocated blocks are read. Then the user is asked to put a new diskette in the drive. The new diskette is then formatted with the name and ID of the original diskette. Now the previously read blocks are written to the diskette. The next 169 blocks of the original diskette are read into memory and written out to the destination diskette. This ends after four disk swaps, at which time the entire diskette will have been copied.

The program is written in BASIC except for the portion which reads and writes the direct access file. This part is written in machine language which is considerably faster than a GET# loop in BASIC. Because of the nature of the program, the number of diskette changes is dependent on the free storage in the computer. A VIC 20 with a 16K expansion requires 11 changes of original and destination diskettes.

Here is a time comparison between this program and duplication on a double drive with the same capacity. Our program requires about 20 minutes, while the CBM 4040 does it in about 3 minutes.

Duplicating a diskette with this program is quite simple. You need only follow the messages on the screen to insert the original or destination diskette. The program does the rest for you.

```

100 REM BACKUP PROGRAM C64 - VIC 1541
110 REM
120 POKE56,23:CLR:GOSUB640
130 OPEN1,8,15
140 DIM B%(35,23),S%(35),Z(7),A$(1)
150 A$(0)="DESTINATION":A$(1)="ORIGINAL":R=1
160 AD=23*256:GOSUB590
170 POKE250,0:POKE251,AD/256
180 GOSUB530:GOSUB290
190 PRINTNS"BLOCKS TO COPY":PRINT
200 T=1:S=0
210 FORI=1TO4:TT=T:SS=S:R=1:IFI=1THEN240
220 IFR=0ANDI=1THENGOSUB450:GOTO240
230 GOSUB590
240 POKE251,AD/256:FORJ=1TO169
250 IFB%(T,S)=0THENGOSUB570
260 S=S+1:IFS=S%(T)THENT=T+1:S=0:IFT=36THENJ=169
270 NEXT:IFRTHENR=0:T=TT:S=SS:GOTO220
280 NEXT:GOTO510
290 T=18:S=0:GOSUB570
300 NS=0:FORI=1TO35:S=0
310 NS=NS+S%(T)-PEEK(AD+4*T)
320 FORJ=1TO3
330 B=PEEK(AD+4*T+J)
340 FORI=0TO7

```

Anatomy of the 1541 Disk Drive

```
340 FOR I=0 TO 7
350 B%(T,S)=B AND Z(I):S=S+1
360 NEXT I,J
370 FOR S=S%(T) TO 23
380 B%(T,S)=-1 : NEXT S,T
390 FOR I=0 TO 15
400 A=PEEK(AD+144+I)
410 IFA<>160 THEN NS=N$+CHR$(A)
420 NEXT
430 I$=CHR$(PEEK(AD+162))+CHR$(PEEK(AD+163))
440 PRINT NS,I$:RETURN
450 PRINT "PLEASE INSERT NEW DISKETTE"
460 PRINT "AND PRESS RETURN":PRINT:POKE 198,0:CLOSE 2
470 GET A$:IF A$<>CHR$(13)THEN 470
480 PRINT #1,"NO:","NS","IS"
490 INPUT #1,A,B$,C,D:IF A THEN PRINT A, "BS","C","D":END
500 GOTO 630
510 CLOSE 2:CLOSE 1:END
520 REM SECTORS PER TRACK
530 FORT=1 TO 35
540 S%(T)=21:IFT>17 THEN S%(T)=19:IFT>24 THEN S%(T)=18:
IFT>30 THEN S%(T)=17
550 NEXT
560 FOR I=0 TO 7:Z(I)=2*I:NEXT:RETURN
570 IF R THEN PRINT #1,"U1 2 0" T;S:SYSIN:RETURN
580 PRINT #1,"B-P 2 0":SYSOUT:PRINT #1,"U2 2 0" T;S:RETURN
590 CLOSE 2:PRINT "PLEASE INSERT " AS(R) " DISKETTE."
600 PRINT "AND PRESS RETURN":PRINT:POKE 198,0
610 GET A$:IF A$<>CHR$(13)THEN 610
620 PRINT #1,"IO"
630 OPEN 2,8,2,"#":RETURN
640 FOR I = 828 TO 873 : REM READ MACHINE LANG. PROGRAM
650 READ X : POKE I,X : S=S+X : NEXT
660 DATA 162, 2, 32, 198, 255, 160, 0, 32, 207, 255, 145, 250
670 DATA 200, 208, 248, 230, 251, 32, 204, 255, 96, 198, 1, 162
680 DATA 2, 32, 201, 255, 160, 0, 177, 250, 32, 210, 255, 200
690 DATA 208, 248, 230, 251, 32, 204, 255, 230, 1, 96
700 IF S<>7312 THEN PRINT "ERROR IN DATA!!":END
710 IN=828:OUT=849:RETURN
```

4.1.4 Copying Individual Files to another Diskette

The following program permits you to copy individual files from one diskette to another. The files can be programs (PRG), sequential files (SEQ) or user files (USR). Relative files cannot be copied with this program; these can be copied with a BASIC program that reads all data records into a string array and then writes them back again into a new file.

In the first pass, the program reads the complete file into the memory of the Commodore 64. Then the destination

Next the complete file is written on the second disk. The computer has 49 Kbytes for data storage; you can handle up to 196 blocks on the diskette.

For reasons of speed, the reading and writing of the data is performed by a machine language program, which is stored in DATA statements.

The program is suited for copying sequential files as already mentioned, as well as programs of all kinds; the start address (of a machine language program) is not relevant.

```

100 REM FILE COPIER PROGRAM C64
110 REM
120 POKE 56,12 : CLR
130 GOSUB 1000
140 INPUT"FILENAME ";N$
150 PRINT"FILE TYPE ";
160 GETTS:IFTS<>"S"ANDTS<>"P"ANDT$<>"U"THEN160
170 PRINTT$:PRINT
180 PRINT"PLEASE INSERT ORIGINAL DISK"
190 PRINT"AND PRESS A KEY":PRINT
200 GETAS:IFA$=""THEN200
210 OPEN 2,8,2,N$+",+T$#
220 POKE 3,0:POKE 4,12:SYS 866
230 CLOSE 2
240 PRINT"PLEASE INSERT DESTINATION DISK"
250 PRINT"AND PRESS A KEY":PRINT
260 GETAS:IFA$=""THEN260
270 OPEN 2,8,2,N$+",+TS+",W"
280 POKE 3,0:POKE 4,12:SYS 828
290 CLOSE 2 : END
1000 FOR I = 828 TO 898
1010 READ X : POKE I,X : S=S+X : NEXT
1020 DATA 162, 2, 32, 201, 255, 198, 1, 160, 0, 56, 165, 3
1030 DATA 229, 5, 165, 4, 229, 6, 176, 13, 177, 3, 32, 210
1040 DATA 255, 230, 3, 208, 236, 230, 4, 208, 232, 230, 1, 76
1050 DATA 204, 255, 162, 2, 32, 198, 255, 160, 0, 32, 207, 255
1060 DATA 145, 3, 230, 3, 208, 2, 230, 4, 36, 144, 80, 241
1070 DATA 165, 3, 133, 5, 165, 4, 133, 6, 76, 204, 255
1080 IF S>8634 THEN PRINT "ERROR IN DATA !!":END
1090 RETURN

```

4.1.5 Reading the directory from within a program

Sometimes applications programs store user data in a file under a desired name. If you want to use this file again, but you cannot remember the file name, then you have a problem. If this happens, you must exit the program, search for the name in the directory, reload the program and start

Anatomy of the 1541 Disk Drive

again. To avoid this, you can include a directory listing routine in your program. If you forget the filename, you can display the directory with a function key, for example, without the need to leave the program. Here is a sample of such a routine:

```
100 PRINTCHR$(147);
110 OPEN15,8,15,"I0":OPEN2,8,2,"#
120 T=18:S=1
130 PRINT#15,"B-R";2;0;T;S
140 PRINT#15,"B-P";2;0
150 GET#2,X$:IFX$=""THENX$=CHR$(0)
160 T=ASC(X$)
170 GET#2,X$:IFX$=""THENX$=CHR$(0)
180 S=ASC(X$)
190 FORX=0TO7
200 PRINT#15,"B-P";2;X*32+5
210 FFS=""
220 FORY=0TO15
230 GET#2,X$:IFX$=""THENX$=CHR$(0)
240 IFASC(X$)=160THEN270
250 FFS=FF$+X$
260 NEXTY
270 IFA=0THENA=1:PRINTFF$::GOTO290
280 A=0:PRINTTAB(20);FFS
290 NEXTX
300 IFT<>0THEN130
310 CLOSE1:CLOSE2
320 PRINT"RETURN FOR MORE"
330 INPUTX$ 
340 END:REM IF SUBROUTINE, THEN RETURN HERE
```

In order to select the filename, the directory is printed on the screen. Should this program be used as a subroutine (called with GOSUB) line 340 must contain RETURN instead of END.

We used this routine in the utility programs in sections 4.1.1 and 4.1.2.

4.2 The Utility Programs on the TEST/DEMO Disk

There are many 1541 owners that know little about the programs contained on the Test/Demo disk. The main reason is that these programs are largely undocumented. The following descriptions of these programs should help you:

4.2.1 DOS 5.1

The DOS 5.1 simplifies the operation of the VIC-1541 DOS. It can run on the VIC-20 or Commodore 64. To load DOS 5.1 on the VIC-20, give the commands

```
LOAD"VIC-20 WEDGE",8
RUN
```

This is the loader for DOS 5.1 for the VIC 20.

If you want to use it on the Commodore 64, give the commands:

```
LOAD"C-64 WEDGE",8
RUN
```

This loads DOS 5.1 into the CBM 64.

What does this DOS 5.1 offer? It allows you to send convenient commands to the 1541 disk drive. If, for example, you want to display the directory on the screen, you use the DOS 5.1 command @\$ or >\$. This does not erase the program in memory.

The individual commands of the DOS 5.1

| Command | Function |
|------------------|--------------------------------|
| @\$ or >\$ | Display the directory |
| @V or >V | Same function as "VALIDATE" |
| @C:... or >C:... | Copy files (COPY) |
| @file or /file | Load program |
| @ or > | Read and display error message |
| @N:... or >N:... | Format a diskette |
| @I or >I | Initialize the disk |
| @R:... or >R:... | Rename a file (RENAME) |
| @S:... or >S:... | Erase a file (SCRATCH) |
| @#n or >#n | Change disk device to n |

Anatomy of the 1541 Disk Drive

4.2.2 COPY/ALL

With the program **COPY/ALL** files can be copied between disk drives with different addresses. A drive must be changed from device address 8 with the program **DISK ADDR CHANGE** before this can occur. After starting the program, the message:

```
disk copy all           jim butterfield  
from unit? 8
```

appears on the screen. Here you give the device address of the disk drive from which you wish to get the files. If this address is 8, just press RETURN. After this you give the corresponding drive number of this unit (always 0 for single drives). In this manner you also give the device address of the destination drive. Once this has occurred, the program asks

```
want to new the output disk  
?n
```

You are being asked if the destination diskette should be formatted. You answer with 'y' (yes) or 'n' (no).

Then you can choose the files you want to copy with the wildcard (*). If all files are supposed to be copied, just give the asterisk.

Now the program gives the message

```
hold down 'y' or 'n' key to select
```

The program displays the files on the original disk, which you can select with the 'y' key (yes) or 'n' (no). The files by which you pressed 'y' will be copied.

If, during the copying process, asterisks (***) appear behind the files, it means that an error has occurred.

If there is not enough room on the destination disk, "*** output disk full" and "do you have a new one" appears. The remaining files can be put on another formatted diskette. To do this, answer 'y' when ready.

At the conclusion of the copying process, the number of free blocks on the destination disk is displayed.

4.2.3 DISK ADDR CHANGE

With this program, the device address of a disk drive can be changed through software. After starting the program, turn all drives off except for the one you wish to change. Now enter the old and new device addresses.

After this, the address is changed and the other drive can be turned back on.

The following drives can be changed with this program:

| | |
|------|----------|
| 2031 | DOS V2.6 |
| 2040 | DOS V1.1 |
| 4040 | DOS V2.1 |
| 4040 | DOS V2.7 |
| 8050 | DOS V2.5 |
| 8050 | DOS V2.7 |
| 8250 | DOS V2.7 |

4.2.4 DIR

This is a small help program with the following possibilites:

d - display the directory on the screen

> - With this character, a disk command can be given in shortened form (for example, >N:TEST,KN to format a diskette)

q - exit the program

s - display the error channel

These possibilities are also found in DOS 5.1, along with other commands.

4.2.5 VIEW BAM

With this utility program you can view the usage of diskette blocks on the screen. This table displays the sectors in columns and the tracks in rows. Crosses indicate free blocks and reverse crosses indicate allocated blocks. 'n/a' means that these blocks do not exist on the track.

After outputting the table, the diskette name and the number of free blocks is displayed.

4.2.6 CHECK DISK

The utility program CHECK DISK tests every block on the diskette by writing to and reading from it. The current

Anatomy of the 1541 Disk Drive

block and the total number of tested blocks is displayed on the screen.

4.2.7 DISPLAY T&S

If you are interested in the construction of the individual blocks of the disk and want to display these on the screen, this utility program will help you. After starting the program you give the desired track and sector. This will then be sent to the printer or screen. The DISK-MONITOR contained in this book is a easier to use, because it allows you to change blocks and save them again.

4.2.8 PERFORMANCE TEST

This program makes it possible to test the mechanics of the VIC-1541 disk drive. To accomplish this, all the access commands are executed, in the following order:

1. Disk is formatted
2. A file is opened for reading
3. Data are written to this file
4. The file is closed again
5. This file is opened for reading
6. The data are read
7. The file is closed again
8. The file is erased
9. Track 35 is written
10. Track 1 is written
11. Track 35 is read
12. Track 1 is read

After each access of the disk the error channel is displayed. In this manner, it can be established which access of the disk is not executed properly.

When using this program, use only diskettes containing no important data because the entire diskette is erased during the testing.

4.3 BASIC-Expansion and Programs for easy Use of the 1541

4.3.1 Input strings of desired length from the disk

Reading data from the disk with the INPUT# statement has one major disadvantage - only data items having fewer than 88 characters can be read. This is because the input buffer of the computer is limited. In addition, not all characters can be read with the INPUT# statement. If a record contains a comma or colon, BASIC views it as a separating character and the remainder of the input is assigned to the next variable. If the INPUT# statement has only one variable, the remainder is ignored and the next INPUT# statement continues reading past the next carriage return (CHRS(13)). The alternative, to read the input with a GET# statement but results in much slower input.

To avoid these disadvantages, we can use a small machine language routine.

We will change the INPUT# statement, so that we can specify the number of characters to be read. To distinguish it from the normal INPUT# statement, we name the command INPUT*. The syntax looks like this:

```
INPUT* lfn, len, var
```

lfn is the logical file number of the previously OPENed file, len is the number of characters to be read, and var is the string variable into which the characters are to be read. A program excerpt might look like this:

```
100 OPEN 2,8,2,"FILE"
110 INPUT* 2,100,AS
```

This reads a string of 100 characters from the opened file into AS. This procedure is especially suited for relative files, because a complete record can be read with one command after positioning the record pointer. The partitioning of record into fields can be accomplished with the MIDS function. An elegant method of creating records is described in the next section.

With this procedure it is no longer necessary to end a record with a carriage return. You can especially make use of the maximum record length with relative files:

```
100 OPEN 1,8,15
110 OPFN 2,8,2, "REL-FILE,L,"+CHRS(20)
120 PRINT#1, "P"+CHRS(10)+CHRS(0)+CHRS(1)
130 PRINT#2, "12345678901234567890";
140 PRINT#1, "P"+CHRS(10)+CHRS(0)+CHRS(1)
```

Anatomy of the 1541 Disk Drive

```
150 INPUT* 2,20,AS
160 PRINT AS
```

12345678901234567890

Here is the assembler listing for the machine language program. It resides in the cassette buffer just like a loader program in BASIC for the Commodore 64 and VIC 20.

```
110: 033C      ;
      ; INPUT* LFN,LEN,AS
      ;
150: 033C      INPUT    EQU     $85
160: 033C      STAR     EQU     $AC
170: 033C      BASVEC   EQU     $308
180: 033C      CHRGET   EQU     $73
190: 033C      CHRGOT   EQU     CHRGET + 6
      ;
210: 033C      ;
      ; C64 VERSION
220: 033C      ;
      ;
380: 033C      CHKIN    EQU     $E11E
390: 033C      BASIN    EQU     $E112
400: 033C      CHKCOM   EQU     $AEFD
410: 033C      INTER    EQU     $A7AE
420: 033C      EXECOLD  EQU     $A7E7
430: 033C      INPUTOLD EQU     $ABB#F
440: 033C      FINDVAR  EQU     $B08B
450: 033C      STRRES   EQU     $B475
460: 033C      FRESTR   EQU     $B6A3
470: 033C      GETBYT   EQU     $B79E
      ;
      ; VIC 20 VERSION
      ;
240: 033C      CHKIN    EQU     $E11B
250: 033C      BASIN    EQU     $E10F
260: 033C      CHKCOM   EQU     $CEFD
270: 033C      INTER    EQU     $C7AE
280: 033C      EXECOLD  EQU     $C7E7
290: 033C      INPUTOLD EQU     $CBBF
300: 033C      FINDVAR  EQU     $D08B
310: 033C      STRRES   EQU     $D475
320: 033C      FRESTR   EQU     $D6A3
330: 033C      GETBYT   EQU     $D79E
      ;
      ; COMMON LABELS
      ;
490: 033C      VARADR   EQU     $49
500: 033C      CLRCH    EQU     $FFCC
510: 033C      PARA     EQU     $61
      ;
530: 033C      ;
      ORG     828
540: 033C A9 47  INIT    LDA     #<TEST
550: 033E A0 03      LDY     #>TEST
560: 0340 8D 08 03      STA     BASVEC
570: 0343 8C 09 03      STY     BASVEC+1
```

Anatomy of the 1541 Disk Drive

| | | |
|------|----------------------|---------------------------------------|
| 580: | 0346 60 | RTS |
| | ; | |
| 600: | 0347 20 73 C0 TEST | JSR CHRGET |
| 610: | 034A C9 85 | CMP #INPUT |
| 620: | 034C F0 06 | BEQ FOUND |
| 630: | 034E 20 79 00 | JSR CHRGOT |
| 640: | 0351 4C E7 A7 | JMP EXECOLD ; TO THE OLD ROUTINE |
| 650: | 0354 20 73 00 FOUND | JSR CHRGET |
| 660: | 0357 C9 AC | CMP #STAR ; NEW INPUT ROUTINE |
| 670: | 0359 F0 06 | BEO OKSTAR |
| 680: | 035B 20 BF AB | JSR INPUTOLD |
| 680: | 035E 4C AE A7 | JMP INTER |
| 690: | 0361 20 9B B7 OKSTAR | JSR GETBYT-3 ; GET FILE NUMBER |
| 700: | 0364 20 1E E1 | JSR CHKIN |
| 710: | 0367 20 FD AE | JSR CHKCOM |
| 720: | 036A 20 9E B7 | JSR GETBYT ; LENGTH |
| 730: | 036D 8A | TXA |
| 730: | 036E 48 | PHA ; NOTICE |
| 740: | 036F 20 FD AE | JSR CHKCOM |
| 750: | 0372 20 8B B0 | JSR FINDVAR ; SEARCH FOR VARIABLE |
| 760: | 0375 85 49 | STA VARADR |
| 760: | 0377 84 4A | STY VARADR+1 |
| 770: | 0379 20 A3 B6 | JSR FRESTR |
| 780: | 037C 68 | PLA ; LENGTH |
| 790: | 037D 20 75 B4 | JSR STRRES ; RESERVE PLACE FOR STRING |
| 800: | 0380 A0 02 | LDY #2 |
| 810: | 0382 B9 61 00 STORE | LDA PARA,Y |
| 820: | 0385 91 49 | STA (VARADR),Y |
| 830: | 0387 88 | DEY |
| 840: | 0388 10 F8 | BPL STORE |
| 850: | 038A C8 | INY ; Y=0 |
| 860: | 038B 20 12 E1 FETCH | JSR BASIN |
| 870: | 038E 91 62 | STA (PARA+1),Y |
| 880: | 0390 C8 | INY |
| 890: | 0391 C4 61 | CPY PARA |
| 900: | 0393 D0 F6 | BNE FETCH |
| 910: | 0395 20 CC FF | JSR CLRCH |
| 910: | 0398 4C AE A7 | JMP INTER ;TO INTERPRETER LOOP |

Here are the BASIC programs for entering the machine language program for the INPUT* statement.

INPUT* , 64 Version

```

100 FOR I = 828 TO 922
110 READ X : POKE I,X : S=S+X : NEXT
120 DATA 169, 71,160, 3,141, 8, 3,140, 9, 3, 96, 32

```

Anatomy of the 1541 Disk Drive

```
130 DATA 115, 0,201,133,240, 6, 32,121, 0, 76,231,167
140 DATA 32,115, 0,201,172,240, 6, 32,191,171, 76,174
150 DATA 167, 32,155,183, 32, 30,225, 32,253,174, 32,158
160 DATA 183,138, 72, 32,253,174, 32,139,176,133, 73,132
170 DATA 74, 32,163,182,104, 32,117,180,160, 2,185, 97
180 DATA 0,145, 73,136, 16,248,200, 32, 18,225,145, 98
190 DATA 200,196, 97,208,246, 32,204,255, 76,174,167
200 IF S <> 11096 THEN PRINT "ERROR IN DATA !!" : END
210 SYS 828 : PRINT "OK."
```

INPUT* , VIC 20 VERSION

```
100 FOR I = 828 TO 922
110 READ X : POKE I,X : S=S+X : NEXT
120 DATA 169, 71,160, 3,141, 8, 3,140, 9, 3, 96, 32
130 DATA 115, 0,201,133,240, 6, 32,121, 0, 76,231,199
140 DATA 32,115, 0,201,172,240, 6, 32,191,203, 76,174
150 DATA 199, 32,155,215, 32, 27,225, 32,253,206, 32,158
160 DATA 215,138, 72, 32,253,206, 32,139,208,133, 73,132
170 DATA 74, 32,163,214,104, 32,117,212,160, 2,185, 97
180 DATA 0,145, 73,136, 16,248,200, 32, 15,225,145, 98
190 DATA 200,196, 97,208,246, 32,204,255, 76,174,199
200 IF S <> 11442 THEN PRINT "ERROR IN DATA !!" : END
210 SYS 828 : PRINT "OK."
```

4.3.2 Easy Preparation of Data Records

If you have worked with relative files before, you know that a definite record length must be established. This record is usually divided into several fields which likewise begin at a definite position within the record, and have a set length.

If you create a new record, for example, a separate INPUT statement is generally used for each field. Before the complete record can be written, it must be assembled properly. Each field must be checked for proper length. If it is longer than then the planned length of the corresponding data field, the remainder must be truncated to the proper length. Here are two new BASIC commands that are excellently suited for this task. These new commands are written in machine language and are initialized with a SYS command. You can then use them as any other BASIC commands.

The first command has the name !STR\$ and serves to create a string with the length of the data record.

```
AS = !STR$(100," ")
```

creates a string with 100 blanks and puts it in the variable A\$.

The next command places our data field in the previously created string. For example, if you want to assign the variable N\$ containing the last name as a field of 25 characters at position 1 in the string A\$, our new command looks like this:

```
MIDS (A$,1,25) = N$
```

Here the MIDS command is used as a so-called pseudo-variable on the left side of the assignment statement. What happens here is as follows:

The variable N\$ replaces the first 25 characters of A\$. If the variable N\$ is longer than 25 characters, only the first 25 characters are replaced and the rest are disregarded. If N\$ is shorter than 25 characters, only as many characters are replaced as N\$ contains. The original characters in A\$ remain (blanks, in our case). That is exactly as we wanted. Now we can program the following:

```
200 INPUT "LAST NAME      "; L$  
210 INPUT "FIRST NAME    "; F$  
220 INPUT "STREET        "; S$  
230 INPUT "CITY          "; C$  
240 INPUT "STATE         "; T$  
250 INPUT "ZIP CODE      "; Z$  
260 A$ = !STR$ (92, " ")  
270 MIDS (A$,1,25) = L$  
280 MIDS (A$,26,20) = F$  
290 MIDS (A$,46,20) = S$  
300 MIDS (A$,66,15) = C$  
310 MIDS (A$,81,2) = T$  
320 MIDS (A$,83,9) = Z$  
330 PRINT#2, A$
```

Here is the machine language program for the Commodore 64

| | | | |
|------|------|------|----------|
| 135: | C800 | ORG | \$C800 |
| 140: | C800 | EQU | \$AEFA |
| 150: | C800 | EQU | \$AEF7 |
| 160: | C800 | EQU | \$AEFD |
| 170: | C800 | EQU | \$AD9E |
| 180: | C800 | EQU | \$AD8F |
| 190: | C800 | EQU | \$B6A3 |
| 200: | C800 | EQU | \$B3A2 |
| 205: | C800 | EQU | \$73 |
| 210: | C800 | EQU | CHRGET |
| 220: | C800 | EQU | CHRGET+6 |
| 226: | C800 | EQU | \$B79B |
| 229: | C800 | EQU | \$B1AA |
| 230: | C800 | EQU | \$64 |
| 231: | C800 | EQU | \$62 |
| | | ADR2 | \$FB |

Anatomy of the 1541 Disk Drive

```

232: C800          ADR1      EQU    $FB+2
233: C800          LEN1      EQU    3
234: C800          LEN2      EQU    4
235: C800          NUMBERF  EQU    5
236: C800          START     EQU    6
237: C800          TYPFLAG   EQU    13
238: C800          STRCODE   EQU    SC4
240: C800          ILLQUAN   EQU    $B248
241: C800          SYNTAX    EQU    $AF08
242: C800          POSCODE   EQU    $B9
243: C800          VECTOR    EQU    $30A
245: C800          TEMP      EQU    LEN1
248: C800 A9 0D      LDA      #<TESTIN
248: C802 A0 C8      LDY      #>TESTIN
248: C804 8D 0A 03   STA      VECTOR
248: C807 8C 0B 03   STY      VECTOR+1
248: C80A 4C 6B C8   JMP      MIDSTR
250: C80D A9 00      TESTIN   LDA      #0
250: C80F 85 0D      STA      TYPFLAG
250: C811 20 73 00   JSR      CHRGET
251: C814 C9 21      CMP      #"!"
251: C816 F0 06      BEQ      TEST2
251: C818 20 79 00   JSR      CHRGOT
251: C81B 4C 8D AE   JMP      SAE8D
252: C81E 20 73 00   TEST2   JSR      CHRGET
252: C821 C9 C4      CMP      #STRCODE
252: C823 F0 03      BEQ      STRING
253: C825 4C 08 AF   JMP      SYNTAX
;
;      ;  STRINGS FUNCTION
;
900: C828 20 73 00   STRING   JSR      CHRGET
900: C82B 20 FA AE   JSR      CHKOPEN ;OPEN PAREN
910: C82E 20 9E B7   JSR      GETBYT+3
920: C831 8A          TXA
920: C832 48          PHA      ;NOTICE LENGTH
930: C833 20 FD AE   JSR      CHKCOM
940: C836 20 9E AD   JSR      FRMEVL
950: C839 24 0D      BIT      TYPFLAG
960: C83B 30 0C      BMI      STR      ;STRING
970: C83D 20 AA B1   JSR      INTEGER
980: C840 A5 64      LDA      DESCRIPT ;HIGH BYTE
990: C842 D0 24      BNE      ILL      ;>255
1000: C844 A5 65     LDA      DESCRIPT+1 ; LOW BYTE,
                                         LENGTH
1010: C846 4C 52 C8   JMP      STR2
1020: C849 20 82 B7   STR     JSR      $B782 ;SETSTR
                                         TYPFLAG TO
                                         NUMERIC
1030: C84C F0 1A      BEQ      ILL      ;LENGTH 0
1040: C84E A0 00      LDY      #0
1050: C850 B1 22      LDA      ($22),Y ;FIRST CHAR
1060: C852 85 03      STR2   STA      TEMP
1070: C854 68          PLA
1080: C855 20 7D B4   JSR      $B47D ;LENGTH
                                         ;FRESTR

```

Anatomy of the 1541 Disk Drive

| | | | |
|-------|---------------|----------|--|
| 1090: | C858 A8 | | TAY |
| 1100: | C859 F0 07 | | BEO STR3 |
| 1110: | C85B A5 03 | | LDA TEMP |
| 1120: | C85D 88 | LOOP | DEY |
| 1120: | C85E 91 62 | | STA (STRADR),Y ; CREATE STRING |
| 1130: | C860 D0 FB | | BNE LOOP |
| 1140: | C862 20 CA B4 | STR3 | JSR \$B4CA ;BRING STRING IN DESCRIPTOR STACK |
| 1150: | C865 4C F7 AE | | JMP CHKCLOSE |
| 1160: | C868 4C 48 B2 | ILL | JMP ILLQUAN |
| | | | ; |
| | | | ; MID\$(STRINGVAR,POS,LEN) = STRING EXP |
| | | | ; MID\$(STRINGVAR,POS) = STRING EXP |
| | | | ; |
| 200: | C86B | MIDCODE | EOU \$CA |
| 210: | C86B | EXECUT | EOU \$308 ;VECTOR FOR STATEMENT EXECUTE |
| 240: | C86B | EXECOLD | EOU \$A7E7 |
| 250: | C86B | VARNAME | EOU \$45 |
| 255: | C86B | VARADR | EOU \$49 |
| 260: | C86B | DESCRPT | EOU \$64 |
| 270: | C86B | TESTSTR | EOU \$AD8F |
| 280: | C86B | GETVAR | EOU \$B08B |
| 290: | C86B | SETSTR | EOU \$AA52 |
| 325: | C86B | TEST | EOU \$AEFF |
| 330: | C86B | GETBYT | EOU \$B79E |
| 355: | 0003 | | ORG 3 |
| 360: | 0004 | LENGTH | DST 1 |
| 370: | 0005 | POSITION | DST 1 |
| 372: | 0007 | VARSTR | DST 2 |
| 375: | 0007 | COMP | EOU \$B2 |
| 378: | 0007 | POINT2 | EOU \$50 |
| | | | ; |
| 400: | C86B A9 76 | MIDSTR | LDA #<MIDTEST |
| 410: | C86D A0 C8 | | LDY #>MIDTEST |
| 420: | C86F 8D 08 03 | | STA EXECUT |
| 430: | C872 8C 09 03 | | STY EXECUT+1 |
| 440: | C875 60 | | RTS |
| 450: | C876 20 73 00 | MIDTEST | JSR CHRGET |
| 460: | C879 C9 CA | | CMP #MIDCODE ;CODE FOR MIDS |
| 470: | C87B F0 06 | | BEO MID ;? YES |
| 480: | C87D 20 79 00 | | JSR CHRGOT |
| 490: | C880 4C E7 A7 | | JMP EXECOLD ;EXECUTE NORMAL STATEMENT |
| 500: | C883 20 73 00 | MID | JSR CHRGET ;NEXT CHAR |
| 505: | C886 20 FA AE | | JSR CHKOPEN ;OPEN PAREN |
| 510: | C889 20 8B B0 | | JSR GETVAR ;GET VAR |
| 520: | C88C 85 64 | | STA DESCRIPT |
| 530: | C88E 84 65 | | STY DESCRIPT+1 |
| 535: | C890 85 49 | | STA VARADR |
| 535: | C892 84 4A | | STY VARADR+1 |
| 540: | C894 20 A3 B6 | | JSP FRESTR |
| 545: | C897 A0 00 | | LDY #0 |
| 545: | C899 B1 64 | | LDA (DESCRIPT),Y |

Anatomy of the 1541 Disk Drive

| | | | | | |
|------|--------------------|-------|-----|-------------|----------------------|
| 545: | C89B 48 | | PHA | | ; LENGTH |
| 545: | C89C F0 2E | | BEO | ILL | |
| 550: | C89E 20 52 AA | | JSR | SETSTR | ; PUT STRING IN RAM |
| 560: | C8A1 A0 01 | | LDY | #1 | |
| 560: | C8A3 B1 49 | | LDA | (VARADR),Y | |
| 560: | C8A5 85 05 | | STA | VARSTR | ; VAR ADDR |
| 570: | C8A7 C8 | | INY | | |
| 570: | C8A8 B1 49 | | LDA | (VARADR),Y | |
| 570: | C8AA 85 06 | | STA | VARSTR+1 | |
| 600: | C8AC 20 FD AE | | JSR | CHKCOM | |
| 610: | C8AF 20 9E B7 | | JSR | GETBYT | ; GET POS |
| 620: | C8B2 8A | | TXA | | |
| 630: | C8B3 F0 17 | | BEO | ILL | |
| 650: | C8B5 CA | | DEX | | |
| 650: | C8B6 86 04 | | STX | POSITION | |
| 660: | C8B8 20 79 00 | | JSR | CHRGOT | |
| 660: | C8BB C9 29 | | CMP | "")" | ; END OF EXPRESSION? |
| 665: | C8BD D0 04 | | BNE | NEXT | |
| 665: | C8BF A9 FF | | LDA | \$FFF | ; MAX LENGTH |
| 665: | C8C1 D0 0C | | BNE | STORE | |
| 670: | C8C3 20 FD AE NEXT | | JSR | CHKCOM | |
| 670: | C8C6 20 9E B7 | | JSR | GETBYT | ; GFT LEN |
| 680: | C8C9 8A | | TXA | | |
| 690: | C8CA D0 03 | | BNE | *+5 | |
| 700: | C8CC 4C 48 B2 ILL | | JMP | ILLOUAN | |
| 710: | C8CF 85 03 | STORE | STA | LENGTH | |
| 715: | C8D1 68 | | PLA | | |
| 715: | C8D2 38 | | SEC | | |
| 715: | C8D3 E5 04 | | SBC | POSITION | |
| 717: | C8D5 C5 03 | | CMP | LENGTH | |
| 717: | C8D7 B0 02 | | BCS | OK | |
| 717: | C8D9 85 03 | | STA | LENGTH | |
| 720: | C8DB 20 F7 AE OK | | JSR | CHKCLOSE | ; CLOSE PAREN |
| 730: | C8DE A9 B2 | | LDA | #COMP | |
| 770: | C8E0 20 FF AE | | JSR | TEST | |
| 780: | C8E3 20 9E AD | | JSR | FRMEVL | ; GET EXP |
| 790: | C8E6 20 A3 B6 | | JSR | FRESTR | |
| 800: | C8E9 A0 02 | | LDY | #2 | |
| 800: | C8EB B1 64 | | LDA | (DESCRPT),Y | |
| 800: | C8ED 85 51 | | STA | POINT2+1 | |
| 800: | C8EF 88 | | DEY | | |
| 800: | C8F0 B1 64 | | LDA | (DESCRPT),Y | |
| 800: | C8F2 85 50 | | STA | POINT2 | |
| 810: | C8F4 88 | | DEY | | |
| 810: | C8F5 B1 64 | | LDA | (DESCRPT),Y | |
| 820: | C8F7 F0 D3 | | BEO | ILL | ; 0 THEN ERROR |
| 840: | C8F9 C5 03 | | CMP | LENGTH | |
| 850: | C8FB B0 02 | | BCS | OK1 | |
| 860: | C8FD 85 03 | | STA | LENGTH | |
| 870: | C8FF A5 05 | OK1 | LDA | VARSTR | |
| 880: | C901 18 | | CLC | | |
| 880: | C902 65 04 | | ADC | POSITION | |
| 910: | C904 85 05 | | STA | VARSTR | |

```

910: C906 90 02          BCC *+4
920: C908 E6 06          INC VARSTR+1
940: C90A A4 03          LDY LENGTH
950: C90C 88      LOOP   DEY
950: C90D B1 50          LDA (POINT1),Y ;TRANSFER
                           CHARS FROM STRING
960: C90F 91 05          STA (VARSTR),Y ;EXP TO VAR
970: C911 C0 00          CPY #0
970: C913 D0 F7          BNE LOOP
980: C915 4C AE A7          JMP SA7AE ;TO INTERPRETER
                           LOOP

```

For those who have no monitor or assembler for the Commodore 64, we have written a loader program in BASIC.

```

100 FOR I = 51200 TO 51479
110 READ X : POKE I,X : S=S+X : NEXT
120 DATA 169, 13,160,200,141, 10, 3,140, 11, 3, 76,107
130 DATA 200,169, 0,133, 13, 32,115, 0,201, 33,240, 6
140 DATA 32,121, 0, 76,141,174, 32,115, 0,201,196,240
150 DATA 3, 76, 8,175, 32,115, 0, 32,250,174, 32,158
160 DATA 183,138, 72, 32,253,174, 32,158,173, 36, 13, 48
170 DATA 12, 32,170,177,165,100,208, 36,165,101, 76, 82
180 DATA 200, 32,130,183,240, 26,160, 0,177, 34,133, 3
190 DATA 104, 32,125,180,168,240, 7,165, 3,136,145, 98
200 DATA 208,251, 32,202,180, 76,247,174, 76, 72,178,169
210 DATA 118,160,200,141, 8, 3,140, 9, 3, 96, 32,115
220 DATA 0,201,202,240, 6, 32,121, 0, 76,231,167, 32
230 DATA 115, 0, 32,250,174, 32,139,176,133,100,132,101
240 DATA 133, 73,132, 74, 32,163,182,160, 0,177,100, 72
250 DATA 240, 46, 32, 82,170,160, 1,177, 73,133, 5,200
260 DATA 177, 73,133, 6, 32,253,174, 32,158,183,138,240
270 DATA 23,202,134, 4, 32,121, 0,201, 41,208, 4,169
280 DATA 255,208, 12, 32,253,174, 32,158,183,138,208, 3
290 DATA 76, 72,178,133, 3,104, 56,229, 4,197, 3,176
300 DATA 2,133, 3, 32,247,174,169,178, 32,255,174, 32
310 DATA 158,173, 32,163,182,160, 2,177,100,133, 81,136
320 DATA 177,100,133, 80,136,177,100,240,211,197, 3,176
330 DATA 2,133, 3,165, 5, 24,101, 4,133, 5,144, 2
340 DATA 230, 6,164, 3,136,177, 80,145, 5,192, 0,208
350 DATA 247, 76,174,167
360 IF S <> 31128 THEN PRINT "ERROR IN DATA !!": END
370 SYS 51200 : PRINT "OK."

```

4.3.3 Spooling - Printing Directly from the Disk

If you have a printer connected to your computer in addition to the disk drive, you can use a special characteristic of the the serial bus.

It is possible to send files directly from disk to the

Anatomy of the 1541 Disk Drive

printer, without the need to transfer it byte by byte with the computer. For example, if you have text saved as a sequential file, and you want to print it on the printer, the following program allows you to do so:

```
100 OPEN 1,4 : REM PRINTER
110 OPEN 2,8,2, "0:TEST" : REM TEXT FILE
120 GET#2, A$ : IF ST = 64 THEN 140
130 PRINT#1, AS; : GOTO 120
140 CLOSE 1 : CLOSE 2
150 END
```

Characters are sent from the disk to the printer until the end of file is recognized. Then the two files are closed and the program ended.

The following is done when spooling:

First both files are opened again. Then a command to receive data (Listen) is sent to the printer, while the disk drive receives the command to send data (Talk). Data are sent automatically from the disk to the printer until the end of file is reached. During this time, the computer can be used without interfering with the transfer of data. Only the use of peripheral devices is not possible during this time.

In practice, this is done with a small machine language program. When you want to start printing, you call the program and give the name of the file which you want to send.

SYS 828, "TEXT"

OPENS the file TEXT on the diskette and sends it to the printer. As soon as the transfer is begun, the computer responds with READY. again and you can use it, as long as no attempt is made to access the serial bus. You can prove that the computer is no longer needed for transfer by pulling out the bus cable to the disk, so that the diskette is connected only to the printer. When the spooling is done, the disk file is still open (the red LED is still lit). You can CLOSE the file and turn the printer off and then back on, and give the SYS command without a filename (the cable to the disk must be attached, of course).

SYS 828

With same command you can stop a transfer in progress. The machine language program in the form of a loader program for the Commodore 64 and the VIC 20 is found at the end.

Here are some hints for use:

We have successfully used the printer spooling with a Commodore 64 and a VIC 20 with a printer such as the the VIC

Anatomy of the 1541 Disk Drive

1525. Attempts using an Epson printer with a VIC interface as well as the VIC 1526 did not succeed. The serial bus, in contrast with the parallel IEEE bus, appears to be capable of spooling only with limitations. This is why it is necessary to turn the printer off after spooling, because it still blocks the bus. We would be happy if you would inform us of your experience with other printers.

```

;          ;
; 1541 - 64 SPOOL
;
110: 033C      CHRGOT    EQU $79
130: 033C      LISTEN    EQU $FFB1
140: 033C      ATNRES    EQU $EDBE      ;ATN HI
142: 033C      CLOCK     EQU $EE85      ;CLOCK HI
144: 033C      DATA      EQU $EE97      ;DATA HI
160: 033C      CLOSE     EQU $FFC3
170: 033C      CLALL     EQU $FFE7
175: 033C      SETFIL    EQU $FFBA
180: 033C      GETNAME   EQU $E254      ;GET FILENAME
190: 033C      OPEN      EQU $FFC0
200: 033C      CHKIN     EQU $FFC6
202: 033C      UNTALK    EQU $FFAB
204: 033C      UNLISTEN  EQU $FFAE
230: 033C      FNLEN     EQU $B7
240: 033C      INDEV     EQU $99      ;INPUT DEVICE
260: 033C      NMBFLS   EQU $98      ;NO. OF FILES
280: 033C      ERROR     EQU $AF08      ;SYNTAX ERROR
;
300: 033C      ORG 828
310: 033C 20 79 00  JSR CHRGOT      ;MORE CHARS
320: 033F F0 33  BEO OFF          ;SPOOL DONE
330: 0341 20 E7 FF  JSR CLALL
340: 0344 20 54 E2  JSR GETNAME
350: 0347 A6 B7  LDX FNLEN
360: 0349 F0 38  BEO SYNTAX
370: 034B A9 02  LDA #2
380: 034D A2 08  LDX #8
390: 034F A0 02  LDY #2
400: 0351 20 BA FF  JSR SETFIL
410: 0354 20 C0 FF  JSR OPEN      ;OPEN FILE
411: 0357 A9 04  LDA #4
412: 0359 20 B1 FF  JSR LISTEN    ;PRINTER
413: 035C 20 BE ED  JSR ATNRES
420: 035F A2 02  LDX #2
430: 0361 20 C6 FF  JSR CHKIN      ;DISK
435: 0364 20 BE ED  JSR ATNRES
435: 0367 20 85 EE  JSR CLOCK
435: 036A 20 97 EE  JSR DATA
510: 036D A9 00  LDA #0
520: 036F 85 99  STA INDEV
530: 0371 85 98  STA NMBFLS
540: 0373 60  RTS
550: 0374 A9 01  OFF
560: 0376 85 98  LDA #1
                           STA NMBFLS

```

Anatomy of the 1541 Disk Drive

| | | |
|------|----------------------|--------------|
| 570: | 0378 20 AE FF | JSR UNLISTEN |
| 580: | 037B 20 AB FF | JSR UNTALK |
| 620: | 037E A9 02 | LDA #2 |
| 630: | 0380 4C C3 FF | JMP CLOSE |
| 640: | 0383 4C 08 AF SYNTAX | JMP ERROR |

Here is the BASIC loader program for the Commodore 64.

```
100 FOR I = 828 TO 901
110 READ X : POKE I,X : S=S+X : NEXT
120 DATA 32,121, 0,240, 51, 32,231,255, 32, 84,226
130 DATA 166,183,240, 56,169, 2,162, 8,160, 2, 32
140 DATA 186,255, 32,192,255,169, 4, 32,177,255, 32
150 DATA 190,237,162, 2, 32,198,255, 32,190,237, 32
160 DATA 133,238, 32,151,238,169, 0,133,153,133,152
170 DATA 96,169, 1,133,152, 32,174,255, 32,171,255
180 DATA 169, 2, 76,195,255, 76, 8,175
190 IF S <> 9598 THEN PRINT "ERROR IN DATA !!": END
200 PRINT "OK."
```

For the VIC 20, use the following program:

```
100 FOR I = 828 TO 901
110 READ X : POKE I,X : S=S+X : NEXT
120 DATA 32,121, 0,240, 51, 32,231,255, 32, 81,226
130 DATA 166,183,240, 56,169, 2,162, 8,160, 2, 32
140 DATA 186,255, 32,192,255,169, 4, 32,177,255, 32
150 DATA 197,238,162, 2, 32,198,255, 32,197,238, 32
160 DATA 132,239, 32,160,228,169, 0,133,153,133,152
170 DATA 96,169, 1,133,152, 32,174,255, 32,171,255
180 DATA 169, 2, 76,195,255, 76, 8,207
190 IF S <> 9648 THEN PRINT "ERROR IN DATA !!": END
200 PRINT "OK."
```

4.4 Overlay Technique and Chaining Machine Language Programs

A proven programming technique involves the creation of a menu program which then loads and executes other programs based on the user's choice. There are two variations: preserving or clearing the old variables in the chained program.

It is possible to pass the old variables if the calling program is as large or larger than the chained program. If a program is chained from another program, the pointer to the end of the previous program remains intact, and the new program loads over the old.

In this example, we would get the following result:

```

100 REM PROGRAM 1
110 REM THIS PROGRAM IS LARGER THAN THE SECOND
120 A = 1000
130 LOAD "PROGRAM 2",8

100 REM PROGRAM 2
110 PRINT A

1000

```

If the chained program is larger than the original program, part of the variables are overwritten and contain meaningless values. Moreover, when the variables that the program destroyed are assigned new values, part of the program is also destroyed.

There are two characteristics of passing variables from the previous program that should be noted - for strings and for functions.

Any string variables that are defined as constants enclosed in quotes in the first program, will have a problem. The string variable pointer points to the actual text in the program. If, for example, a string is defined in the first program with the following assignment

```
100 AS = "TEXT"
```

the variable pointer points to the actual text within line number 100. When chaining, the next program does not change this pointer. New text is now at the original location, so the variable has unpredictable contents. We can easily work around this, however. We need only ensure that the text is copied from the program into string storage where text variables are normally stored. You can do this as follows:

```
100 AS = "TEXT" + "
```

Anatomy of the 1541 Disk Drive

By concatenating an empty string, you force the contents of the variable to be copied to the string storage area.

Similar considerations apply to function definitions, because here also the pointer points to the definition within the program. Here you must define the function again in the second program, for example:

```
100 DEF FN A(X) = 0.5 * EXP (-X*X)
```

If you want to chain a program, you can continue to use the old variables provided the second program is not longer than the first. If the chained program is longer, and we do not want to preserve the old variables, there is a trick we can use.

We need only set the end-of-program pointer to the end of the new program immediately after loading. This can be done with two POKE commands:

```
POKE 45, PEEK(174) : POKE 46, PEEK (175) : CLR
```

The CLR command is absolutely necessary. This line should be the first line in the chained program. This allows us to chain a large program without transfer of variables. Another, not so elegant method involves writing the load command in the keyboard buffer so the program will automatically be loaded in the direct mode. To do this, we write the LOAD and RUN commands on the screen and fill the keyboard buffer with 'HOME' and carriage returns. An END statement must come after this in the program. The control system then gets the contents of the keyboard buffer in the direct mode and reads the LOAD and RUN commands that control the loading and execution of the program. Because this occurs in the direct mode, the end address of the program is automatically set, the variables are erased and the program is started with the RUN. The disadvantage of this method is that since the LOAD command must appear on the video screen, any display will be destroyed. In practice it looks like this:

```
1000 PRINT CHR$(147)"LOAD"CHR$(34)"PROGRAM 2"CHR$(34)",8"
1010 PRINT : PRINT : PRINT : PRINT
1020 PRINT "RUN"
1030 POKE 631,19 : POKE 632,13 : POKE 633,13
1040 POKE 634,13 : POKE 635,13 : POKE 636,13
1050 POKE 198,6 : END
```

You can see that this procedure is more complicated than the previous one; it is only mentioned for the sake of completeness. With the first procedure, only the LOAD command need be programmed in line 1000:

```
1000 LOAD "PROGRAM 2",8
```

There is another technique for chaining machine language programs.

If a machine language program is to be used from a BASIC program, it must usually be loaded at the beginning of the BASIC program. You must take note of two things:

First of all, you must make sure that the machine language program loads to a specific place in memory. If you load a program without additional parameters, the control system treats it as a BASIC program and loads it at the starting address of the BASIC RAM, generally at 2049 (Commodore 64). Machine language programs can only be run, however, when they are loaded at the address for which they were written. This absolute loading can be accomplished by adding the secondary address 1:

```
LOAD "MACH-PRG",8,1
```

But remember that when loading a program from within another program, BASIC attempts to RUN the program from the beginning. This leads to an endless loop when loading machine language programs, because the operating system thinks that a new BASIC program has been chained:

```
100 LOAD "MACH-PRG",8,1
```

Here we can make use of the fact that the variables are preserved when chaining. If we program the following, we have reached our goal:

```
100 IF A=0 THEN A=1 : LOAD "MACH-PRG",8,1  
110 ...
```

When the program is started with RUN, A has the value zero and the assignment after the THEN is executed, A contains the value 1 and the machine language program is then LOADED. When the program begins again after LOADING the program MACH-PRG, A has the value 1 so the next line is executed.

The procedure is similar if you have several machine language programs to load.

```
100 IF A=0 THEN A=1 : LOAD "PROG 1",8,1  
110 IF A=1 THEN A=2 : LOAD "PROG 2",8,1  
120 IF A=2 THEN A=3 : LOAD "PROG 3",8,1  
130 ...
```

The first time through, PROG 1 will be loaded, the next time, PROG 2, and so on. Once all the programs are loaded, execution continues with line 130.

4.5 Merge - Appending BASIC Programs

Certainly you have thought about the possibility of combining two separate BASIC programs into one. Without further details this is not possible, because loading the second program would overwrite the first. With the knowledge of how BASIC programs are stored in memory and on the diskette, you can develop a simple procedure to accomplish this task.

BASIC programs are stored in memory as follows:

```
NL NH      pointer to the next program line, lo hi  
LL LH      line number, lo hi  
XX YY ZZ    ..... tokenized BASIC statements  
00          end-of-line marker
```

At the end of the program are two additional zero bytes:
00 00 a total of 3 zero bytes

Programs are also saved in this format. Where the program starts and ends lies in two pointers in page zero:

```
PRINT PEEK(43) + 256 * PEEK(44)
```

gives the start of BASIC, 2049 for the Commodore 64,

```
PRINT PEEK(45) + 256 * PEEK(46)
```

points to the byte behind the three zero bytes.

Because a program is always loaded at the start of BASIC, contained in the pointer at 43/44, one can cause a second program to load at the end of the first. In practice, we must proceed as follows:

First we load the first program into memory.

```
LOAD "PROGRAM 1",8
```

Now get the value of the ending address of the program.

```
A = PEEK(45) + 256 * PEEK(46)
```

This value is decremented by two so that the two zero bytes at the end of the program are known.

```
A = A - 2
```

Now, note the original value of the start of BASIC.

```
PRINT PEEK(43), PEEK(44)
```

Next, set the start of BASIC to this value.

POKE, A AND 255 : POKE 44, A / 256

Now, LOAD the second program.

LOAD "PROGRAM 2",8

If you set the start of BASIC back to the original value, 1 and 8 for the Commodore 64 (as shown above with the PRINT commands), you have the complete program in memory and can view it with LIST or save it with SAVE.

POKE 43,1 : POKE 44,8

The following should be noted when using this method:

The appended program may contain only line numbers that are greater than the largest line number of the first program. Otherwise these line numbers can never be accessed with GOTO or GOSUB and the proper program order cannot be guaranteed.

This procedure is especially well suited for constructing a subroutine library for often used routines, so they need not be typed in each time. It will work out best if you reserve specific line numbers for the subroutines, such as 20000-25000, 25000-30000, and so on. If you want to merge several programs in this manner, you must first load the program with smallest line numbers, and then the program with the next highest numbers, etc.

4.6 Disk Monitor for the Commodore 64 and VIC 20

In this section we present a very useful tool for working with your disk drive, allowing you to load, display, modify, and save desired blocks on the diskette.

For reasons of speed, the program is written entirely in machine language. The following commands are supported:

- * Read a block from the disk
- * Write a block to the disk
- * Display a block on the screen
- * Edit a block on the screen
- * Send disk commands
- * Display disk error messages
- * Return to BASIC

The program announces its execution (automatically by the BASIC load program) with

```
DISK-MONITOR V1.0  
>
```

and waits for your input. If you enter '@', the error message from the disk will be displayed, for example

```
00, ok,00,00
```

If you want to send a command to the disk, enter an '@' followed by the command.

You can initialize a diskette with

```
>@I
```

You can send complete disk commands in this manner, that you would otherwise send with

```
OPEN 15,8,15  
PRINT# 15,"command"  
CLOSE 15
```

For example, you can erase files, format disks, and so on.

The most important function of the disk monitor is the direct access of any block on the diskette. For this, you use the commands R and W. R stands for READ and reads a desired block, W stands for WRITE and writes a block to the disk. You need only specify the track and sector you want to read. These must be given in hexadecimal, exactly as the output is given on the screen. If, for example, you want to read track 18, sector 1 (the first directory block), enter the following command:

```
>R 12 01
```

Each input must be given as a two-digit hex number, separated from each other with a blank.

In order to display the block, use the command M. We receive the following output:

```
DISK-MONITOR V1.0
>M
>:00 12 04 82 11 01 47 52 41 .....GRA
>:08 46 49 4B 20 41 49 44 2E FIX AID.
>:10 53 52 43 A0 A0 00 00 00 SRC ...
>:18 00 00 00 00 00 00 15 00 .....
>:20 00 00 82 13 00 48 50 4C .....HPL
>:28 4F 54 2E 53 52 43 A0 A0 OT.SRC
>:30 A0 A0 A0 A0 00 00 00 ...
>:38 00 00 00 00 00 05 00 .....
>:40 00 00 82 13 03 56 50 4C .....VPL
>:48 4F 54 2E 53 52 43 A0 A0 OT.SRC
>:50 A0 A0 A0 A0 00 00 00 ...
>:58 00 00 00 00 00 09 00 .....
>:60 00 00 82 13 09 4D 45 4D .....MEM
>:68 2E 53 52 43 A0 A0 A0 A0 .SRC
>:70 A0 A0 A0 A0 00 00 00 ...
>:78 00 00 00 00 00 06 00 .....
>:80 00 00 82 13 08 4D 45 4D .....MEM
>:88 2E 4F 42 4A A0 A0 A0 A0 .OBJ
etc.
```

Let's take a closer look at the output. The first hex number after the colon gives the address of the following 8 bytes in the block, 00 indicates the first byte in the block (the numbering goes from 00 to FF (0-255)). 8 bytes follow the address (4 on the VIC 20). In the right half are the corresponding ASCII characters. If the code is not printable (\$00 to \$1F and \$80 to \$9F), a period is printed. When you give the command M, as above, the entire block is displayed. Because the block does not fit on the screen completely, it is possible to display only part of it. You can give an address range that you would like to display. If you only want to see the first half, enter:

```
>M 00 7F
```

The second half with:

```
>M 80 FF
```

With the VIC 20, you can view quarters of the block. If you now wish to change some data, you simply move the cursor to the corresponding place, overwrite the appropriate byte, and press RETURN. The new value is now stored and the right half is updated with the proper ASCII character.

To write the modified block back to the diskette, you use the command W. Here also you must give the track and sector

Anatomy of the 1541 Disk Drive

numbers in hexadecimal.

>W 12 01

writes the block back to track 18, sector 1, from where we had read the block previously.

If you want to get back to BASIC, enter **X** and the computer will respond with **READY..** If you then want to use the disk monitor again, you need not load it again. Just type **SYS 49152** for the C64 or **SYS 6690** for the VIC 20.

A warning:

Be sure to make a copy of any diskette that you work with in this way. Should you make an error when editing or writing a block, you can destroy important information on the disk so that it can no longer be used in the normal manner. You should make it a rule to only work with a copy.

Here you find an assembler listing of the program. After this are the BASIC loader programs for the Commodore 64 and VIC 20.

| | | | | |
|-----------|--|---------|-----|--------------------------------|
| | | | | ; |
| | | | | ; disk monitor vic 20 / cbm 64 |
| | | | | ; |
| 190: C000 | | PROMPT | EQU | ">" |
| 200: C000 | | NCMDS | EQU | 6 ;NUMBER OF COMMANDS |
| 210: C000 | | INPUT | EQU | \$FFCF |
| 220: C000 | | TALK | EQU | \$FFB4 |
| 230: C000 | | SECTALK | EQU | \$FF96 |
| 240: C000 | | IEEEIN | EQU | SFFA5 |
| 250: C000 | | UNTALK | EQU | SFFAB |
| 260: C000 | | LISTEN | EQU | SFFB1 |
| 270: C000 | | SECLIST | EQU | SFF93 |
| 280: C000 | | IEEEOUT | EQU | SFFA8 |
| 290: C000 | | UNLIST | EQU | SFFAE |
| 300: C000 | | WRITE | EQU | SFFD2 |
| 310: C000 | | OPEN | EQU | SFFC0 |
| 320: C000 | | CLOSE | EQU | SFFC3 |
| 330: C000 | | SETPAR | EQU | SFFBA |
| 340: C000 | | SETNAM | EQU | SFFBD |
| 350: C000 | | CHKIN | EQU | SFFC6 |
| 360: C000 | | CKOUT | EQU | SFFC9 |
| 370: C000 | | CLRCH | EQU | SFFCC |
| 380: C000 | | CR | EQU | 13 |
| 390: C000 | | QUOTE | EQU | \$22 |
| 400: C000 | | QUOTFLG | EQU | \$D4 |
| 410: 0200 | | | ORG | \$200 ;BASIC INPUT BUFFER |
| 420: 0201 | | SAVX | BYT | 0 |
| 430: 0202 | | WRAP | BYT | 0 |
| 440: 0203 | | BAD | BYT | 0 |

Anatomy of the 1541 Disk Drive

| | | | | |
|-------|-------------------|--------|-----|--------------------------------------|
| 450: | 0204 | FROM | BYT | 0 |
| 460: | 0205 | TO | BYT | 0 |
| 470: | 0205 | STATUS | EQU | \$90 |
| 480: | 0205 | SA | EQU | \$B9 ;SECONDARY ADDRESS |
| 490: | 0205 | FA | EQU | \$BA ;DEVICE # |
| 500: | 0205 | FNADR | EQU | \$BB ;FILENAME ADR |
| 510: | 0205 | FNLEN | EQU | \$B7 ;LEN OF FILENAME |
| 520: | 0205 | TMPC | EQU | \$97 |
| 610: | C000 | COUNT | EQU | 8 ;# OF BYTES PER LINE |
| 620: | C000 | READY | EQU | \$E37B ;\$E467 FOR VIC |
| 630: | C000 A2 00 | INIT | LDX | #0 |
| 640: | C002 BD 85 C2 | MSGOUT | LDA | MESSAGE,X |
| 650: | C005 20 D2 FF | | JSR | WRITE |
| 660: | C008 E8 | | INX | |
| 670: | C009 E0 12 | | CPX | *ASCDMP-MESSAGE |
| 680: | C00B D0 F5 | | BNE | MSGOUT |
| 690: | C00D A2 0D | START | LDX | #CR |
| 700: | C00F A9 3E | | LDA | #PROMPT |
| 710: | C011 20 EB C0 | | JSR | WRTWHR |
| 710: | C014 A9 00 | | LDA | #0 |
| 710: | C016 8D 01 02 | | STA | WRAP |
| 720: | C019 20 33 C1 | ST1 | JSR | RDOC ;READ INPUT LINE |
| 730: | C01C C9 3E | | CMP | #PROMPT |
| 740: | C01E F0 F9 | | BEQ | ST1 |
| 750: | C020 C9 20 | | CMP | " " ;READ OVER BLANK |
| 760: | C022 F0 F5 | | BEQ | ST1 |
| 770: | C024 A2 05 | S0 | LDX | #NCMDS-1 ;COMPARE WITH COMMAND TABLE |
| 780: | C026 DD 6A C0 S1 | | CMP | CMDS,X |
| 790: | C029 D0 0C | | BNE | S2 |
| 800: | C02B 8E 00 02 | | STX | SAVX ;# OF CMDS IN TABLE |
| 840: | C02E BD 70 C0 | | LDA | ADRH,X |
| 850: | C031 48 | | PHA | ;JUMP ADDR TO STACK |
| 860: | C032 BD 76 C0 | | LDA | ADRL,X |
| 870: | C035 48 | | PHA | |
| 880: | C036 60 | | RTS | |
| 890: | C037 CA S2 | | DEX | |
| 900: | C038 10 EC | | BPL | S1 ;LOOP OF ALL CMDS |
| 910: | C03A 4C 0D C0 | | JMP | START |
| | | ; | | |
| | | ; | | ; SUBROUTINE TO DISPLAY |
| | | ; | | THE DISK CONTENTS |
| 960: | C03D 85 97 DM | | STA | TMPC |
| 970: | C03F 20 62 C0 DM1 | | JSR | SPACE |
| 980: | C042 B9 E0 C2 | | LDA | BUFFER,Y ;GET BYTE FROM BUFFER |
| 990: | C045 20 DC C0 | | JSR | WROB |
| 1000: | C048 C8 | | INY | |
| 1000: | C049 D0 03 | | BNE | DM2 |
| 1000: | C04B EE 01 02 | | INC | WRAP |
| 1010: | C04E C6 97 DM2 | | DEC | TMPC |
| 1020: | C050 D0 ED | | BNE | DM1 |

Anatomy of the 1541 Disk Drive

```

1030: C052 60          RTS
                  ; READ BYTES AND WRITE TO MEMORY
1060: C053 20 FE C0 BYT   JSR RDOB
1070: C056 90 03         BCC BY3      ;BLANK?
1080: C058 99 E0 C2       STA BUFFER,Y ;WRITE BYTE IN
                           BUFFER

1090: C05B C8           BY3      INY
1100: C05C C6 97         DEC      TMPC
1110: C05E 60             RTS
1120: C05F 20 62 C0 SPAC2   JSR SPACE
1130: C062 A9 20         LDA      #"
1140: C064 2C             BYT      $2C
1150: C065 A9 0D CRLF    LDA      #CR
1160: C067 4C D2 FF       JMP     WRITE

;
; COMMAND AND ADDRESS TABLE
1190: C06A 3A           CMDS    ASC  ':' :EDIT MEM CONTENTS
1200: C06B 57             ASC     'W' :WRITE BLOCK
1210: C06C 52             ASC     'R' :READ BLOCK
1220: C06D 4D             ASC     'M' :DISPLY BYTES
1230: C06E 40             ASC     '@' :DISK COMMAND
1240: C06F 58             ASC     'X' :EXIT
1250: C070 C0           ADRH    EQU    >ALTM-1
1260: C071 C1             EOU    >DIRECT-1
1270: C072 C1             EOU    >DIRECT-1
1280: C073 C0             EOU    >DSPLYM-1
1290: C074 C1             EOU    >DISK-1
1300: C075 E3             EOU    >READY-1
1310: C076 C0           ADRL    EOU    <ALTM-1
1320: C077 90             EOU    <DIRECT-1
1330: C078 90             EOU    <DIRECT-1
1340: C079 7B             EOU    <DSPLYM-1
1350: C07A 3E             EOU    <DISK-1
1360: C07B 7A             EOU    <READY-1
1370: C07C A0 00 DSPLYM   LDY    #0
1380: C07E 8C 03 02       STY    FROM
1370: C081 88             DEY
1370: C082 8C 04 02       STY    TO
1370: C085 20 CF FF       JSR    INPUT
1370: C088 C9 0D           CMP    #CR
1370: C08A F0 17           BEQ    DSP1
1380: C08C 20 FE C0       JSR    RDOB      ;READ START
                                           ADDRESS

1390: C08F 90 12           BCC    DSP1
1400: C091 8D 03 02       STA    FROM
1410: C094 20 CF FF       JSR    INPUT
1410: C097 C9 0D           CMP    #CR
1410: C099 F0 08           BEQ    DSP1
1420: C09B 20 FE C0       JSR    RDOB      ;READ END ADR
1430: C09E 90 03           BCC    DSP1
1440: C0A0 8D 04 02       STA    TO
1450: C0A3 AC 03 02 DSP1   LDY    TO
1460: C0A6 20 C6 C2 DSP2   JSR    TESTEND
1470: C0A9 20 D6 C2       JSR    ALTRIT
1470: C0AC 98             TYA

```

Anatomy of the 1541 Disk Drive

```

1480: C0AD 20 DC C0          JSR   WROB      ; ADDRESS
1490: C0B0 20 62 C0          JSR   SPACE     ; OMIT FOR VIC
1500: C0B3 A9 08          LDA   #COUNT    ; 8 OR 4
1510: C0B5 20 3D C0          JSR   DM        ; DISPLAY
1520: C0B8 20 97 C2          JSR   ASCDMP    ; ASCII DUMP
1530: C0BB 4C A6 C0          JMP   DSP2      ; ABS JUMP
1550: C0BE 4C 0D C0 BEQS1    JMP   START
                                ; EDIT MEMORY; READ ADDRESS AND DATA
1570: C0C1 20 FE C0 ALTM    JSR   RDOB      ; READ ADDR
1580: C0C4 90 F8          BCC   BEQS1
1590: C0C6 A8          TAY
1600: C0C7 A9 08          LDA   #COUNT    ; # OF BYTES
1610: C0C9 85 97          STA   TMPC
1610: C0CB 20 33 C1          JSR   RDOC      ; OMIT FOR VIC
1620: C0CE 20 33 C1 A5      JSR   RDOC
1620: C0D1 20 53 C0          JSR   BYT
1630: C0D4 D0 F8          BNE   A5
1640: C0D6 20 97 C2          JSR   ASCDMP
1650: C0D9 4C 0D C0          JMP   START
                                ;
                                ; WRITE BYTE AS HEX NUMBER
1710: C0DC 48          WROB   PHA
1720: C0DD 4A          LSR   A
1730: C0DE 4A          LSR   A
1740: C0DF 4A          LSR   A
1750: C0E0 4A          LSR   A
1760: C0E1 20 F4 C0          JSR   ASCII     ; CONVERT TO
                                                ASCII
1770: C0E4 AA          TAX
1780: C0E5 68          PLA
1790: C0E6 29 0F          AND   #$SOF
1800: C0E8 20 F4 C0          JSR   ASCII
                                ; WRITE CHARACTERS IN X AND A
1820: C0EB 48          WRTWHR  PHA
1830: C0EC 8A          TXA
1840: C0ED 20 D2 FF          JSR   WRITE
1850: C0F0 68          PLA
1860: C0F1 4C D2 FF          JMP   WRITE
1870: C0F4 18          ASCII   CLC
1880: C0F5 69 F6          ADC   #$F6
1890: C0F7 90 02          BCC   ASC1
1900: C0F9 69 06          ADC   #6
1910: C0FB 69 3A          ASC1   ADC   #$3A
1920: C0FD 60          RTS
                                ; READ HEX BYTE AND PUT IN A
1950: C0FE A9 00          RDOB   LDA   #0
1960: C100 8D 02 02          STA   BAD    ; READ NEXT CHAR
1970: C103 20 33 C1          JSR   RDOC
1980: C106 C9 20          RDOB1  CMP   #
1990: C108 D0 09          BNE   RDOB2
2000: C10A 20 33 C1          JSR   RDOC ; READ NEXT CHAR
2010: C10D C9 20          CMP   #
2020: C10F D0 0F          BNE   RDOB3
2030: C111 18          CLC   ; CY=0
2040: C112 60          RTS

```

Anatomy of the 1541 Disk Drive

| | | | | | | | |
|-------|------|----|----|----|-------------|-------|----------------------|
| 2050: | C113 | 20 | 28 | C1 | RDOB2 | JSR | HEXIT |
| 2060: | C116 | 0A | | | | ASL | A |
| 2070: | C117 | 0A | | | | ASL | A |
| 2080: | C118 | 0A | | | | ASL | A |
| 2090: | C119 | 0A | | | | ASL | A |
| 2100: | C11A | 8D | 02 | 02 | | STA | BAD |
| 2110: | C11D | 20 | 33 | C1 | | JSR | RDOC |
| 2120: | C120 | 20 | 28 | C1 | RDOB3 | JSR | HEXIT |
| 2130: | C123 | 0D | 02 | 02 | | ORA | BAD |
| 2140: | C126 | 38 | | | | ' SEC | ;CY=1 |
| 2150: | C127 | 60 | | | | RTS | |
| 2160: | C128 | C9 | 3A | | HEXIT | CMP | #\$3A |
| 2170: | C12A | 08 | | | | PHP | |
| 2180: | C12B | 29 | 0F | | | AND | #\$0F |
| 2190: | C12D | 28 | | | | PLP | |
| 2200: | C12E | 90 | 02 | | | BCC | HEX09 :0-9 |
| 2210: | C130 | 69 | 08 | | | ADC | #8 :PLUS 9 (C-1) |
| 2220: | C132 | 60 | | | HEX09 | RTS | |
| 2230: | C133 | 20 | CF | FF | RDOC | JSR | INPUT ;READ CHAR |
| 2240: | C136 | C9 | 0D | | | CMP | #CR ;CR? |
| 2250: | C138 | D0 | F8 | | | BNE | HEX09 ;NO, RETURN |
| 2260: | C13A | 68 | | | | PLA | |
| 2270: | C13B | 68 | | | | PLA | |
| 2280: | C13C | 4C | 0D | C0 | | JMP | START |
| | | | | | ; | | |
| | | | | | ; | | |
| | | | | | ; | | |
| | | | | | DOS SUPPORT | | |
| 2320: | C13F | 20 | CF | FF | DISK | JSR | INPUT |
| 2330: | C142 | C9 | 0D | | | CMP | #CR |
| 2340: | C144 | D0 | 27 | | | BNE | DSKCMD ;DISK COMMAND |
| 2350: | C146 | A9 | 00 | | | LDA | #0 |
| 2350: | C148 | 85 | 90 | | | STA | STATUS ;ERASE STATUS |
| 2360: | C14A | 20 | 65 | C0 | | JSR | CRLF |
| 2370: | C14D | A9 | 08 | | | LDA | #8 |
| 2380: | C14F | 85 | BA | | | STA | FA ;DISK ADDR |
| 2390: | C151 | 20 | B4 | FF | | JSR | TALK |
| 2400: | C154 | A9 | 6F | | | LDA | #\$15+\$60 ;SA 15 |
| 2410: | C156 | 85 | B9 | | | STA | SA |
| 2420: | C158 | 20 | 96 | FF | | JSR | SECTALK ;SEC ADDR |
| 2430: | C15B | 20 | A5 | FF | ERRIN | JSR | IIEEEIN |
| 2440: | C15E | 24 | 90 | | | BIT | STATUS |
| 2440: | C160 | 70 | 05 | | | BVS | ENDDSK |
| 2450: | C162 | 20 | D2 | FF | | JSR | WRITE |
| 2460: | C165 | D0 | F4 | | | BNE | ERRIN |
| 2470: | C167 | 20 | AB | FF | ENDDSK | JSR | UNTALK |
| 2480: | C16A | 4C | 0D | C0 | | JMP | START |
| 2490: | C16D | C9 | 24 | | DSKCMD | CMP | #'\$ |
| 2500: | C16F | F0 | 1D | | | BEO | ERRI ;CATALOG |
| 2510: | C171 | 48 | | | | PHA | |
| 2510: | C172 | A9 | 08 | | | LDA | #8 |
| 2520: | C174 | 85 | BA | | | STA | FA |
| 2530: | C176 | 20 | B1 | FF | | JSR | LISTEN |
| 2540: | C179 | A9 | 6F | | | LDA | #\$15+\$60 |
| 2550: | C17B | 85 | B9 | | | STA | SA |
| 2560: | C17D | 20 | 93 | FF | | JSR | SECLIST |

Anatomy of the 1541 Disk Drive

| | | | |
|-------|---------------|-------------------------|--|
| 2560: | C180 68 | PLA | |
| 2570: | C181 20 A8 FF | JSR IEEEOUT | |
| 2580: | C184 20 CF FF | JSR INPUT | |
| 2590: | C187 C9 0D | CMP #CR | |
| 2600: | C189 D0 F6 | BNE CMDOUT | |
| 2610: | C18B 20 AE FF | JSR UNLIST | |
| 2630: | C18E 4C 0D C0 | JMP START | |
| 2640: | ERR1 | JSR RDOC | |
| 2640: | C191 20 33 C1 | JSR RDOC | |
| 2640: | DIRECT | JSR RDOB ;READ TRACK | |
| 2650: | C194 20 FE C0 | BCC ERR1 | |
| 2660: | C197 90 F5 | STA TRACK | |
| 2670: | C199 8D 27 C2 | JSR RDOC | |
| 2670: | C19C 20 33 C1 | JSR RDOB | |
| 2680: | C19F 20 FE C0 | BCC ERR1 | |
| 2690: | C1A2 90 EA | STA SECTOR | |
| 2690: | C1A4 8D 2A C2 | JSR OPNDIR | |
| 2690: | C1A7 20 49 C2 | LDA SAVX | |
| 2690: | C1AA AD 00 02 | CMP #1 | |
| 2690: | C1AD C9 01 | BEQ DIRWRITE | |
| 2690: | C1AF F0 1E | LDA #'1 | |
| 2700: | C1B1 A9 31 | JSR SENDCMD ;SEND BLOCK | |
| 2710: | C1B3 20 ED C1 | READ COMMAND | |
| 2720: | C1B6 A2 0D | LDX #13 | |
| 2730: | C1B8 20 C6 FF | JSR CHKIN | |
| 2740: | C1BB A2 00 | LDX #0 | |
| 2750: | C1BD 20 CF FF | DIRIN | |
| 2760: | DIRIN | JSR INPUT | |
| 2760: | C1C0 9D E0 C2 | STA BUFFER,X | |
| 2770: | C1C3 E8 | INX | |
| 2770: | C1C4 D0 F7 | BNE DIRIN | |
| 2780: | C1C6 20 CC FF | JSR CLRCH | |
| 2790: | C1C9 20 6E C2 | ENDDIR | |
| 2790: | ENDDIR | JSR CLSDIR | |
| 2790: | C1CC 4C 0D C0 | JMP START | |
| 2800: | C1CF 20 2C C2 | DIRWRITE | |
| 2800: | DIRWRITE | JSR BUFPNTR ;SET BUFFER | |
| | | POINTER | |
| 2810: | C1D2 A2 0D | LDX #13 | |
| 2820: | C1D4 20 C9 FF | JSR CKOUT | |
| 2830: | C1D7 A2 00 | LDX #0 | |
| 2840: | C1D9 BD E0 C2 | DIROUT | |
| 2850: | DIROUT | JSR BUFFER,X | |
| 2860: | C1DC 20 D2 FF | JSR WRITE | |
| 2860: | C1DF E8 | INX | |
| 2860: | C1E0 D0 F7 | BNE DIROUT | |
| 2870: | C1E2 20 CC FF | JSR CLRCH | |
| 2880: | C1E5 A9 32 | LDA #'2 | |
| 2890: | C1E7 20 ED C1 | JSR SENDCMD ;SEND BLOCK | |
| | | WRITE COMMAND | |
| 2900: | C1EA 4C C9 C1 | JMP ENDDIR | |
| 2910: | C1ED 8D 20 C2 | STA CMDSTR+1 | |
| 2910: | SENDCMD | LDX #15 | |
| 2920: | C1F0 A2 0F | LDA TRACK | |
| 2920: | C1F2 AD 27 C2 | JSR NUMBASC | |
| 2920: | C1F5 20 78 C2 | STX TRACK | |
| 2920: | C1F8 8E 27 C2 | STA TRACK+1 | |
| 2930: | C1FB 8D 28 C2 | LDA SECTOR | |
| 2930: | C1FE AD 2A C2 | JSR NUMBASC | |
| 2930: | C201 20 78 C2 | STX SECTOR | |
| 2930: | C204 8E 2A C2 | | |

Anatomy of the 1541 Disk Drive

| | | | | | | | |
|-------|------|----|----|----|---------|------|----------------|
| 2930: | C207 | 8D | 2B | C2 | | STA | SECTOR+1 |
| 2940: | C20A | A2 | 0F | | | LDX | #15 |
| 2940: | C20C | 20 | C9 | FF | | JSR | CKOUT |
| 2950: | C20F | A2 | 00 | | | LDX | #0 |
| 2960: | C211 | BD | 1F | C1 | COMDOUT | LDA | CMDSTR,X |
| 2970: | C214 | 20 | D2 | FF | | JSR | WRITE |
| 2980: | C217 | E8 | | | | INX | |
| 2980: | C218 | E0 | 0D | | | CPX | #BUFPNT-CMDSTR |
| 2990: | C21A | D0 | F5 | | | BNE | COMDOUT |
| 3000: | C21C | 4C | CC | FF | | JMP | CLRCH |
| 3010: | C21F | 55 | 31 | 3A | CMDSTR | ASC | 'U1:13 0 ' |
| | | 31 | 33 | 20 | | | |
| | | 30 | 20 | | | | |
| 3020: | C227 | 00 | 00 | 20 | TRACK | BYT | 0,0,\$20 |
| 3030: | C22A | 00 | 00 | | SECTOR | BYT | 0,0 |
| 3040: | C22C | A2 | 0F | | BUFPNT | LDX | #15 |
| 3050: | C22E | 20 | C9 | FF | | JSR | CKOUT |
| 3060: | C231 | A2 | 00 | | | LDX | #0 |
| 3070: | C233 | BD | 41 | C2 | PNTOUT | LDA | BUFTXT,X |
| 3080: | C236 | 20 | D2 | FF | | JSR | WRITE |
| 3090: | C239 | E8 | | | | INX | |
| 3090: | C23A | E0 | 08 | | | CPX | #OPNDIR-BUFTXT |
| 3100: | C23C | D0 | F5 | | | BNE | PNTOUT |
| 3110: | C23E | 4C | CC | FF | | JMP | CLRCH |
| 3120: | C241 | 42 | 2D | 50 | BUFTXT | ASC | 'B-P 13 0' |
| | | 20 | 31 | 33 | | | |
| | | 20 | 30 | | | | |
| 3130: | C249 | A9 | 0F | | OPNDIR | LDA | #15 |
| 3130: | C24B | A8 | | | | TAY | |
| 3140: | C24C | A2 | 08 | | | LDX | #8 |
| 3150: | C24E | 20 | BA | FF | | JSR | SETPAR |
| 3160: | C251 | A9 | 00 | | | LDA | #0 |
| 3170: | C253 | 20 | BD | FF | | JSR | SETNAM |
| 3180: | C256 | 20 | CO | FF | | JSR | OPEN |
| 3190: | C259 | A9 | 0D | | | LDA | #13 |
| 3190: | C25B | A8 | | | | TAY | |
| 3200: | C25C | A2 | 08 | | | LDX | #8 |
| 3210: | C25E | 20 | BA | FF | | JSR | SETPAR |
| 3220: | C261 | A9 | 01 | | | LDA | #1 |
| 3230: | C263 | A2 | 6D | | | LDX | #<DADR |
| 3240: | C265 | A0 | C2 | | | LDY | #>DADR |
| 3250: | C267 | 20 | BD | FF | | JSR | SETNAM |
| 3260: | C26A | 4C | CO | FF | | JMP | OPEN |
| 3270: | C26D | 23 | | | DADR | .BYT | '# |
| 3280: | C26E | A9 | 0D | | CLSDIR | LDA | #13 |
| 3290: | C270 | 20 | C3 | FF | | JSR | CLOSE |
| 3300: | C273 | A9 | 0F | | | LDA | #15 |
| 3310: | C275 | 4C | C3 | FF | | JMP | CLOSE |
| 3230: | C278 | A2 | 30 | | NUMBASC | LDX | '0 |
| 3330: | C27A | 38 | | | | SEC | |
| 3340: | C27B | E9 | 0A | | NUMB1 | SBC | #10 |
| 3350: | C27D | 90 | 03 | | | BCC | NUMB2 |
| 3360: | C27F | E8 | | | | INX | |
| 3370: | C280 | B0 | F9 | | | BCS | NUMB1 |
| 3380: | C282 | 69 | 3A | | NUMB2 | ADC | #\$3B ;'9' + 1 |

Anatomy of the 1541 Disk Drive

| | | | | |
|-------|------|------------------|---------|---------------------------------------|
| 3390: | C284 | 60 | | RTS |
| 3400: | C285 | 0D | MESSAGE | EQU CR |
| 3410: | C286 | 44 49 53 | | ASC 'DISK-MONITOR V1.0' |
| | | 4B 2D 4D | | |
| | | 4F 4E 49 | | |
| | | 54 4F 52 | | |
| | | 20 56 31 | | |
| | | 2E 30 | | |
| 3430: | C297 | 98 | ASCDMP | TYA |
| 3440: | C298 | 38 | | SEC |
| 3440: | C299 | E9 08 | | SBC #COUNT |
| 3440: | C29B | A8 | | TAY |
| 3450: | C29C | 20 62 C0 | | JSR SPACE |
| 3460: | C29F | A9 12 | | LDA #18 :RVS ON |
| 3470: | C2A1 | 20 D2 FF | | JSR WRITE |
| 3480: | C2A4 | A2 08 | | LDX #COUNT |
| 3490: | C2A6 | B9 E0 C2 AC2 | | LDA BUFFER,Y |
| 3500: | C2A9 | 29 7F | | AND #\$7F |
| 3510: | C2AB | C9 20 | | CMP #' |
| 3520: | C2AD | B0 04 | | BCS AC3 |
| 3530: | C2AF | A9 2E | | LDA #'. |
| 3540: | C2B1 | D0 03 | | BNE AC4 |
| 3550: | C2B3 | B9 E0 C2 AC3 | | LDA BUFFER,Y |
| 3560: | C2B6 | 20 D2 FF AC4 | | JSR WRITE |
| 3570: | C2B9 | A9 00 | | LDA #0 |
| 3570: | C2BB | 85 D4 | | STA QUOTFLG |
| 3580: | C3BD | C8 | | INY |
| 3580: | C2BE | CA | | DEX |
| 3590: | C2BF | D0 E5 | | BNE AC2 |
| 3600: | C2C1 | A9 92 | | LDA #146 :RVS OFF |
| 3610: | C2C3 | 4C D2 FF | | JMP WRITE |
| 3620: | C2C6 | AD 01 02 TESTEND | | LDA WRAP |
| 3620: | C2C9 | D0 06 | | BNE ENDEND |
| 3630: | C2CB | CC 04 02 | | CPY TO |
| 3640: | C2CE | B0 01 | | BCS ENDEND |
| 3650: | C2D0 | 60 | | RTS |
| 3660: | C2D1 | 68 | ENDEND | PLA |
| 3660: | C2D2 | 68 | | PLA |
| 3660: | C2D3 | 4C 0D C0 | | JMP START |
| 3670: | C2D6 | 20 65 C0 ALTRIT | | JSR CRLF |
| 3680: | C2D9 | A9 3A | | LDA #': |
| 3690: | C2DB | A2 3E | | LDX #PROMPT |
| 3700: | C2DD | 4C EB C0 | | JMP WRTWHR |
| 3730: | C2E0 | | BUFFER | DST 256 ;256 BYTE BUFFER FOR BLOCK |

Here is the BASIC program for entering the disk monitor if you do not have an assembler.

Anatomy of the 1541 Disk Drive

DISK-MONITOR, C64 VERSION

```
100 FOR I = 49152 TO 49887
110 READ X : POKE I,X : S=S+X : NEXT
120 DATA 162, 0,189,133,194, 32,210,255,232,224, 18,208
130 DATA 245,162, 13,169, 62, 32,235,192,169, 0,141, 1
140 DATA 2, 32, 51,193,201, 62,240,249,201, 32,240,245
150 DATA 162, 5,221,106,192,208, 12,142, 0, 2,189,112
160 DATA 192, 72,189,118,192, 72, 96,202, 16,236, 76, 13
170 DATA 192,133,151, 32, 98,192,185,224,194, 32,220,192
180 DATA 200,208, 3,238, 1, 2,198,151,208,237, 96, 32
190 DATA 254,192,144, 3,153,224,194,200,198,151, 96, 32
200 DATA 98,192,169, 32, 44,169, 13, 76,210,255, 58, 87
210 DATA 82, 77, 64, 88,192,193,193,192,193,227,192,144
220 DATA 144,123, 62,122,160, 0,140, 3, 2,136,140, 4
230 DATA 2, 32,207,255,201, 13,240, 23, 32,254,192,144
240 DATA 18,141, 3, 2, 32,207,255,201, 13,240, 8, 32
250 DATA 254,192,144, 3,141, 4, 2,172, 3, 2, 32,198
260 DATA 194, 32,214,194,152, 32,220,192, 32, 98,192,169
270 DATA 8, 32, 61,192, 32,151,194, 76,166,192, 76, 13
280 DATA 192, 32,254,192,144,248,168,169, 8,133,151, 32
290 DATA 51,193, 32, 51,193, 32, 83,192,208,248, 32,151
300 DATA 194, 76, 13,192, 72, 74, 74, 74, 74, 32,244,192
310 DATA 170,104, 41, 15, 32,244,192, 72,138, 32,210,255
320 DATA 104, 76,210,255, 24,105,246,144, 2,105, 6,105
330 DATA 58, 96,169, 0,141, 2, 2, 32, 51,193,201, 32
340 DATA 208, 9, 32, 51,193,201, 32,208, 15, 24, 96, 32
350 DATA 40,193, 10, 10, 10, 10,141, 2, 2, 32, 51,193
360 DATA 32, 40,193, 13, 2, 2, 56, 96,201, 58, 8, 41
370 DATA 15, 40,144, 2,105, 8, 96, 32,207,255,201, 13
380 DATA 208,248,104,104, 76, 13,192, 32,207,255,201, 13
390 DATA 208, 39,169, 0,133,144, 32,101,192,169, 8,133
400 DATA 186, 32,180,255,169,111,133,185, 32,150,255, 32
410 DATA 165,255, 36,144,112, 5, 32,210,255,208,244, 32
420 DATA 171,255, 76, 13,192,201, 36,240, 29, 72,169, 8
430 DATA 133,186, 32,177,255,169,111,133,185, 32,147,255
440 DATA 104, 32,168,255, 32,207,255,201, 13,208,246, 32
450 DATA 174,255, 76, 13,192, 32, 51,193, 32,254,192,144
460 DATA 245,141, 39,194, 32, 51,193, 32,254,192,144,234
470 DATA 141, 42,194, 32, 73,194,173, 0, 2,201, 1,240
480 DATA 30,169, 49, 32,237,193,162, 13, 32,198,255,162
490 DATA 0, 32,207,255,157,224,194,232,208,247, 32,204
500 DATA 255, 32,110,194, 76, 13,192, 32, 44,194,162, 13
510 DATA 32,201,255,162, 0,189,224,194, 32,210,255,232
520 DATA 208,247, 32,204,255,169, 50, 32,237,193, 76,201
530 DATA 193,141, 32,194,162, 15,173, 39,194, 32,120,194
540 DATA 142, 39,194,141, 40,194,173, 42,194, 32,120,194
550 DATA 142, 42,194,141, 43,194,162, 15, 32,201,255,162
560 DATA 0,189, 31,194, 32,210,255,232,224, 13,208,245
570 DATA 76,204,255, 85, 49, 58, 49, 51, 32, 48, 32, 0
580 DATA 0, 32, 0, 0,162, 15, 32,201,255,162, 0,189
590 DATA 65,194, 32,210,255,232,224, 8,208,245, 76,204
600 DATA 255, 66, 45, 80, 32, 49, 51, 32, 48,169, 15,168
610 DATA 162, 8, 32,186,255,169, 0, 32,189,255, 32,192
```

```

620 DATA 255,169, 13,168,162, 8, 32,186,255,169, 1,162
630 DATA 109,160,194, 32,189,255, 76,192,255, 35,169, 13
640 DATA 32,195,255,169, 15, 76,195,255,162, 48, 56,233
650 DATA 10,144, 3,232,176,249,105, 58, 96, 13, 68, 73
660 DATA 83, 75, 45, 77, 79, 78, 73, 84, 79, 82, 32, 86
670 DATA 49, 46, 48,152, 56,233, 8,168, 32, 98,192,169
680 DATA 18, 32,210,255,162, 8,185,224,194, 41,127,201
690 DATA 32,176, 4,169, 46,208, 3,185,224,194, 32,210
700 DATA 255,169, 0,133,212,200,202,208,229,169,146, 76
710 DATA 210,255,173, 1, 2,208, 6,204, 4, 2,176, 1
720 DATA 96,104,104, 76, 13,192, 32,101,192,169, 58,162
730 DATA 62, 76,235,192
740 IF S <> 90444 THEN PRINT "ERROR IN DATA !!": END
750 SYS 49152

```

DISK-MONITOR, VIC 20 VERSION

In order to allow this program to be run on the VIC 20, it was split into two parts. Enter each program separately, saving the first under the name "DOS LOADER.1" and second under "DOS LOADER.2". To load the disk monitor, load the first program and start it with RUN. If all data are correct, the second program will automatically be loaded and the disk monitor started.

```

100 POKE 55, 6690 AND 255 : POKE 56, 6690 / 256 : CLR
105 FOR I = 6690 TO 7056 : REM DOS LOADER.1
110 READ X : POKE I,X : S=S+X : NEXT
120 DATA 162, 0,189,164, 28, 32,210,255,232,224, 18,208
130 DATA 245,162, 13,169, 62, 32, 7, 27,169, 0,141, 1
140 DATA 2, 32, 79, 27,201, 62,240,249,201, 32,240,245
150 DATA 162, 5,221,140, 26,208, 12,142, 0, 2,189,146
160 DATA 26, 72,189,152, 26, 72, 96,202, 16,236, 76, 47
170 DATA 26,133,151, 32,132, 26,185, 0, 29, 32,248, 26
180 DATA 200,208, 3,238, 1, 2,198,151,208,237, 96, 32
190 DATA 26, 27,144, 3,153, 0, 29,200,198,151, 96, 32
200 DATA 132, 26,169, 32, 44,169, 13, 76,210,255, 58, 87
210 DATA 82, 77, 64, 88, 26, 27, 27, 26, 27,228,223,175
220 DATA 175,157, 90,102,160, 0,140, 3, 2,136,140, 4
230 DATA 2, 32,207,255,201, 13,240, 23, 32, 26, 27,144
240 DATA 18,141, 3, 2, 32,207,255,201, 13,240, 8, 32
250 DATA 26, 27,144, 3,141, 4, 2,172, 3, 2, 32,229
260 DATA 28, 32,245, 28,152, 32,248, 26,169, 4, 32, 95
270 DATA 26, 32,182, 28, 76,200, 26, 76, 47, 26, 32, 26
280 DATA 27,144,248,168,169, 4,133,151, 32, 79, 27, 32
290 DATA 117, 26,208,248, 32,182, 28, 76, 47, 26, 72, 74
300 DATA 74, 74, 74, 32, 16, 27,170,104, 41, 15, 32, 16
310 DATA 27, 72,138, 32,210,255,104, 76,210,255, 24,105
320 DATA 246,144, 2,105, 6,105, 58, 96,169, 0,141, 2
330 DATA 2, 32, 79, 27,201, 32,208, 9, 32, 79, 27,201
340 DATA 32,208, 15, 24, 96, 32, 68, 27, 10, 10, 10, 10
350 DATA 141, 2, 2, 32, 79, 27, 32, 68, 27, 13, 2, 2
360 DATA 56, 96,201, 58, 8, 41, 15, 40,144, 2,105, 8

```

Anatomy of the 1541 Disk Drive

```
370 DATA 96, 32,207,255,201, 13,208,248,104,104, 76, 47
380 DATA 26, 32,207,255,201, 13,208, 39,169, 0,133,144
390 DATA 32,135, 26,169, 8,133,186, 32,180,255,169,111
400 DATA 133,185, 32,150,255, 32,165,255, 36,144,112, 5
410 DATA 32,210,255,208,244, 32,171,255, 76, 47, 26,201
420 DATA 36,240, 29, 72,169, 8,133
430 IF S <> 35614 THEN PRINT "ERROR IN DATA !!" : END
440 LOAD "DOS LOADER.2",8

100 CLR : FOR I = 7057 TO 7422 : REM DOS LOADER.2
110 READ X : POKE I,X : S=S+X : NEXT
120 DATA 186, 32,177,255,169,111,133,185, 32,147,255,104
130 DATA 32,168,255, 32,207,255,201, 13,208,246, 32,174
140 DATA 255, 76, 47, 26, 76, 47, 26, 32, 79, 27, 32, 26
150 DATA 27,144,245,141, 70, 28, 32, 79, 27, 32, 26, 27
160 DATA 144,234,141, 73, 28, 32,104, 28,173, 0, 2,201
170 DATA 1,240, 30,169, 49, 32, 12, 28,162, 13, 32,198
180 DATA 255,162, 0, 32,207,255,157, 0, 29,232,208,247
190 DATA 32,204,255, 32,141, 28, 76, 47, 26, 32, 75, 28
200 DATA 162, 13, 32,201,255,162, 0,189, 0, 29, 32,210
210 DATA 255,232,208,247, 32,204,255,169, 50, 32, 12, 28
220 DATA 76,232, 27,141, 63, 28,162, 15,173, 70, 28, 32
230 DATA 151, 28,142, 70, 28,141, 71, 28,173, 73, 28, 32
240 DATA 151, 28,142, 73, 28,141, 74, 28,162, 15, 32,201
250 DATA 255,162, 0,189, 62, 28, 32,210,255,232,224, 13
260 DATA 208,245, 76,204,255, 85, 49, 58, 49, 51, 32, 48
270 DATA 32, 0, 0, 32, 0, 0,162, 15, 32,201,255,162
280 DATA 0,189, 96, 28, 32,210,255,232,224, 8,208,245
290 DATA 76,204,255, 66, 45, 80, 32, 49, 51, 32, 48,169
300 DATA 15,168,162, 8, 32,186,255,169, 0, 32,189,255
310 DATA 32,192,255,169, 13,168,162, 8, 32,186,255,169
320 DATA 1,162,140,160, 28, 32,189,255, 76,192,255, 35
330 DATA 169, 13, 32,195,255,169, 15, 76,195,255,162, 48
340 DATA 56,233, 10,144, 3,232,176,249,105, 58, 96, 13
350 DATA 68, 73, 83, 75, 45, 77, 79, 78, 73, 84, 79, 82
360 DATA 32, 86, 49, 46, 48,152, 56,233, 4,168, 32,132
370 DATA 26,169, 18, 32,210,255,162, 4,185, 0, 29, 41
380 DATA 127,201, 32,176, 4,169, 46,208, 3,185, 0, 29
390 DATA 32,210,255,169, 0,133,212,200,202,208,229,169
400 DATA 146, 76,210,255,173, 1, 2,208, 6,204, 4, 2
410 DATA 176, 1, 96,104,104, 76, 47, 26, 32,135, 26,169
420 DATA 58,162, 62, 76, 7, 27
430 IF S <> 39496 THEN PRINT "ERROR IN DATA !!" : END
440 SYS 6690
```

Chapter 5: The Larger CBM Disks**5.1 IEEE-Bus and Serial Bus**

Standard Commodore 64's and VIC 20's have a serial bus over which they communicate with peripheral devices such as the VIC 1541 disk drive as well as printers and plotters.

The principle of the bus makes it possible to chain peripherals. Each device has its own device address over which one can communicate with it. The standard address of the disk is 8, a printer is usually 4. The device address is identical to the primary address in the OPEN command. For instance,

```
OPEN 1,4
```

opens a channel to the printer. In order to open several disk files at once, another address, the secondary address, serves to distinguish them. The disk has 16 secondary addresses at its disposal, from 0 to 15. Three secondary addresses are reserved, while the other 13 can be freely used:

Secondary address 0 is used for loading programs.

Secondary address 1 is used for saving programs.

Secondary address 15 is the command and error channel.

The secondary addresses from 2 to 14 can be used for opening files as desired.

The transfer of information between the Commodore 64 and the VIC 1541 occurs serially over this bus. Serial means that the data is sent a bit at a time over just one wire. Data within the computer and disk drive are stored and manipulated in 8 bit groups called bytes. When a byte is sent serially, each individual bit must be sent over the data line. In order that the sender and receiver can stay in step, a so-called 'handshake' line is needed. If we look at the pin-out of the serial bus, we find 6 wires:

| Pin | Function |
|-----|----------|
| 1 | SRQ IN |
| 2 | ground |
| 3 | ATN |
| 4 | CLOCK |
| 5 | DATA |
| 6 | RESET |

If the computer wants to send data to the disk drive, the

Anatomy of the 1541 Disk Drive

ATN (attention) line is set. When this signal is high, all peripherals on the bus stop their work and read the next byte. The data is sent bit-wise over the DATA line. So that the receivers know when the next bit comes, a signal is also sent along the CLK (clock) line. This transmitted byte is the device address. If this value does not correspond with the device address of a receiving peripheral, the rest of the data is ignored. If, however, the device is addressed, a secondary address may be transmitted. Along with the device address (0 to 31), the device is informed by means of the other three bits whether it is supposed to receive data (LISTEN) or send data (TALK). Following this, data is sent from the computer or from the addressed device.

The RESET line resets all attached devices when the computer is turned on. Over the SRO IN (service request) line, peripheral devices can inform the bus controller (in our case, the computer), if data is ready, for example. However, this line is not checked by the control system in the Commodore computers.

If one wants to attach several disk drives to the same computer, each must have a different peripheral address. If this is done only occasionally, the program **DISK ADDR CHANGE** can be used, as described in section 4.2.3. The new address (9 for example), remains only until the device is turned off. If the change should be permanent, it can be changed with DIP switches in the drive.

The principle of transfer of data over the IEEE 488 bus is similar to the serial bus function. The important difference is that the data is transmitted over 8 data lines in parallel, not serial. In addition, more handshake lines are needed, so the IEEE bus requires a 24-line cable. The main advantage of the IEEE 488 bus is its ability to transmit a byte at a time, resulting in a higher rate of transfer. Measurements indicate that the IEEE-bus is about 5 times faster than the serial bus: 1.8 Kbyte/second vs. 0.4 Kbyte/second. Loading a 10K program with the VIC 1541 takes about 25 seconds; on the identical 2031, it takes less than 6. This reason alone is enough to warrant outfitting your computer with an IEEE bus.

At the same time, it is possible to use all the other peripherals that the large CBM computers can access.

5.2 Comparison of all CBM Disk Drives

In the following table you find the technical data of all CBM disk drives compared.

The Technical Data of all Commodore Disk Drives

| Model | 1541 | 2031 | 4040 | 8050 | 8250 |
|------------------------------|-------|-------|-------------|-----------------|--------|
| DOS version(s) | 2.6 | 2.6 | 2.1/ 2.7 | 2.5/ 2.7 | 2.7 |
| Drives | 1 | 1 | 2 | 2 | 2 |
| Heads per drive | 1 | 1 | 1 | 1 | 2 |
| Storage capacity | 170 K | 170 K | 340 K | 1.05 M | 2.12 M |
| Sequential files | 168 K | 168 K | 168 K | 521 K | 1.05 M |
| Relative files | 167 K | 167 K | 167 K | 183 K/ 518 K | 1,04 M |
| Buffer storage (KB) | 2 | 2 | 4 | 4 | 4 |
| Tracks | 35 | 35 | 35 | 77 | 77 |
| Sectors per track | 17-21 | 17-21 | 17-21 | 23-29 | 23-29 |
| Bytes per block | 256 | 256 | 256 | 256 | 256 |
| Free blocks | 664 | 664 | 1328 | 4104 | 8266 |
| Directory and BAM (track) | 18 | 18 | 18 | 38/39 | 38/39 |
| Directory entries | 144 | 144 | 144 | 224 | 224 |
| Transfer rate (KB/s) | | | | | |
| internal | 40 | 40 | 40 | 40 | 40 |
| over ser./IEEE bus | 0.4 | 1.8 | 1.8 | 1.8 | 1.8 |
| Access time (ms) | | | | | |
| Track to track | 30 | 30 | 30 | 5 | 5 |
| Average time | 360 | 360 | 360 | 125 | 125 |
| Revolutions/minute | 300 | 300 | 300 | 300 | 300 |

Overview of the "large" CBM drives

The VIC 1541 disk drive has the smallest storage capacity of the CBM disks, but it is also the only drive that can be connected directly to the Commodore 64 and VIC 20 over the serial bus.

The functions, construction, and operation are identical to those of the CBM 2031 drive. The only difference from the VIC 1541 is the parallel IEEE bus instead of the serial bus.

Anatomy of the 1541 Disk Drive

This results in an increase in the transfer rate to the computer of a factor of 5. To connect a Commodore 64 or VIC 20, one needs an IEEE interface, as with all other CBM drives. The storage format of the 2031 is compatible to the 1541; both have 170K per disk. Diskettes can be written with one device and read with the other. This is true for the next drive in the line, the CBM 4040. The 4040 is a double drive with 170K per drive.

The advantage of a double drive lies not only in the increased storage capacity, but also in the ability to transfer data from drive to drive. It is possible to copy complete programs and files using the existing 1541 command.

```
OPEN 1,8,15, "C1:TEST=0:TEST"  or
```

```
COPY "TEST".D0 TO "TEST",D1
```

copies the file TEST from drive 0 to drive 1 with the same name. In this manner one can concatenate several files on different drives. The most important capability of double drives is the ability to duplicate entire diskettes. This is accomplished by a command from the computer; the drive automatically formats the disk and then makes a track by track copy from one drive to the other. The command to do this is worded:

```
OPEN 1,8,15, "D1=0"  or
```

```
BACKUP D0 TO D1
```

The process takes less than 3 minutes on the 4040; during this time the computer may be used since the disk drive performs the entire operation by itself.

The two other CBM drives, the CBM 8050 and the CBM 8250 operate in double density (77 tracks). Disks written with the 1541 or 4040 are not compatible with the 8050/8250. Programs and data can be copied with the COPY/ALL program, which transfers from one format to another. This is the reason these drives have greater storage capacity: 1 MB for the 8050 and 2 MB for the 8250. The doubled capacity of the 8250 comes about because both sides of the disk are used (double-sided); it has two reads/write heads per drive. In order to be able to use the whole capacity for relative files (see section 3.4), a so-called 'super side-sector' was introduced, which contains pointers to 127 groups of 6 side-sector blocks each. Through this, a relative file can (theoretically) hold 23 MB of data. These drives can be connected to a Commodore 64 or VIC 20 over an IEEE bus, so that these computers can also access several megabytes.

An additional advantage of the large CBM drives is their larger buffer storage. It is possible to have more files open simultaneously than on the VIC 1541. Up to 5 sequential

files or 3 relative files may be open at any one time, as well as combinations of the two, of course.

With the 8050/8250 format, tracks 38 and 39 are used for the BAM and directory. The disk name and format marker are in track 39 sector 0.

```
>:00 26 00 43 00 00 00 43 42 &.C...CB
>:08 4E 20 38 30 35 30 A0 A0 M 8050
>:10 A0 A0 A0 A0 A0 A0 A0 A0
>:18 30 31 A0 32 43 A0 A0 A0 01 2C
```

The track/sector pointer to the first BAM block (track 38 sector 0) is in bytes 0 and 1. Byte 2 contains the format marker 'C'. Bytes 3 through 5 are unused. The disk name is in 6 to 21, filled with shifted spaces, in our case **CBM 8050**. Bytes 24 and 25 contain the id '01', while bytes 26 and 27 contain the DOS format **2C**.

The BAM no longer occupies just one block, but is dispersed over track 38; sectors 0 and 3 are used in the 8050, the 8250 used sectors 6 and 9 in addition. Because more sectors are used per track, the BAM entry for each track has been enlarged to 5 bytes. The first byte still contains the number of free sectors per track and the following bytes contain the bit model of the free and allocated sectors (0 = sector allocated, 1 = sector free). Here we have the contents of track 38 sector 0

```
>:00 26 03 43 00 01 33 1D FF
>:08 FF FF 1F 1D FF FF FF 1F
>:10 1D FF FF FF 1F 1D FF FF
>:18 FF 1F 1D FF FF FF 1F 1D
>:20 FF FF FF 1F 1D FF FF FF
>:28 1F 1D FF FF FF 1F 1D FF
>:30 FF FF 1F 1D FF FF FF 1F
>:38 1D FF FF FF 1F 1D FF FF
>:40 FF 1F 1D FF FF FF 1F 1D
>:48 FF FF FF 1F 1D FF FF FF
>:50 1F 1D FF FF FF 1F 1D FF
>:58 FF FF 1F 1D FF FF FF 1F
>:60 1D FF FF FF 1F 1D FF FF
>:68 FF 1F 1D FF FF FF 1F 1D
>:70 FF FF FF 1F 1D FF FF FF
>:78 1F 1D FF FF FF 1F 1D FF
>:80 FF FF 1F 1D FF FF FF 1F
>:88 1D FF FF FF 1F 1D FF FF
>:90 FF 1F 1D FF FF FF 1F 1D
>:98 FF FF FF 1F 1D FF FF FF
>:A0 1F 1D FF FF FF 1F 1D FF
>:A8 FF FF 1F 18 FC F3 EF 1F
>:B0 00 00 00 00 00 00 00 00
>:B8 00 00 00 00 00 00 00 0F
>:C0 F4 93 46 1A 18 6C FB FF
>:C8 1F 00 00 00 00 00 00 00
```

Anatomy of the 1541 Disk Drive

```
>:D0 00 00 00 00 00 00 00 00  
>:D8 05 00 00 4D 04 1B FF FF  
>:E0 FF 07 1B FF FF FF 07 1B  
>:E8 FF FF FF 07 1B FF FF FF  
>:F0 07 1B FF FF FF 07 1B FF  
>:F8 FF FF 07 1B FF FF FF 07
```

Bytes 0 and 1 point to the next BAM block, track 38 sector 3. Byte 2 contains the format marker 'C' again. The track numbers belonging to this BAM section are in bytes 4 and 5; here tracks 1 through 51. At position 6 we find the 5 byte entry for each track. The next BAM block is constructed similarly. The last BAM block always points to the first directory block: track 39 sector 1.

Four BAM blocks are needed for the 8250: track 38 sector 0 contains the tracks 1 to 51, track 38 sector 3 contains 52 to 100, track 38 sector 6 contains track 101 through 150 and track 38 sector 9 pertains to tracks 151 to 154.

The directory track, track 39, contains 28 free blocks; up to $28 \times 8 = 224$ directory entries can be stored, in contrast to 144 for the 1541/4040. The construction of the directory is alike for all formats. The following table illustrates the track/sector layout:

| | 1541 / 4040 | 8050 / 8250 | |
|-------------|-----------------|-------------------|---------|
| Tracks | 1 - 17 : 0 - 20 | 1 - 39 : 0 - 28 | sectors |
| | 18- 24 : 0 - 18 | 40 - 53 : 0 - 26 | |
| | 25- 30 : 0 - 17 | 54 - 64 : 0 - 24 | |
| | 31- 35 : 0 - 16 | 65 - 77 : 0 - 22 | |
| | | 8250 only | |
| | | 78 -116 : 0 - 28 | |
| | | 117 -130 : 0 - 26 | |
| | | 131 -141 : 0 - 24 | |
| | | 142 -154 : 0 - 22 | |
| Blocks | 683 | 2083 : 4186 | |
| Free blocks | 664 | 2052 : 4133 | |

Anatomy of the 1541 Disk Drive

OTHER BOOKS AVAILABLE:

The Anatomy of the Commodore 64 - is our insider's guide to your favorite computer. This book is a must for those of you who want to delve deep into your micro. This 300+ page book is full of information covering all aspects of the '64. Includes fully commented listing of the ROMs so you can investigate the mysteries of the BASIC interpreter, kernel and operating system. It offers numerous examples of machine language programming and several samples that make your programming sessions more enjoyable and useful.

ISBN# 0-916439-00-3 Available now: \$19.95

The Anatomy of the 1541 Disk Drive - unravels the mysteries of working the the Commodore 1541 disk drive. This 320+ page book starts by explaining program, sequential and relative files. It covers the direct access commands, diskette structure, DOS operation and utilities. The fully commented ROM listings are presented for the real "hackers". Includes listings for several useful utilities including BACKUP, COPY, FILE PROTECTOR, DIRECTORY. This is the authoritative source for 1541 disk drive information.

ISBN# 0-916439-01-1 Available now: \$19.95

Tricks & Tips for the Commodore 64 - presents a collection of easy-to-use programming techniques and hints. Chapters cover advanced graphics, easy data entry, enhancements for advanced BASIC, CP/M, connecting to the outside world and more. Other tips include sorting, variable dumps, and POKEs that do tricks. All-in-all a solid set of useful features.

ISBN# 0-916439-03-8 Available June 29th: \$19.95

Machine Language Book of the Commodore 64 - is aimed at the owner who wants to progress beyond BASIC and write faster, more memory efficient programs in machine language. The book is specifically geared to the Commodore 64. Learn all of the 6510 instructions as they apply to the '64. Access ROM routines, I/O, extend BASIC, more. Included are listings of three full length programs: an ASSEMBLER; a DISASSEMBLER; and an amazing 6510 SIMULATOR so the reader can "see"the operation of the '64.

ISBN# 0-916439-02-X Available now: \$14.95
Optional program diskette: \$14.95

OTHER TITLES COMING SOON!!!

THE ANATOMY OF THE 1541 DISK DRIVE

This in depth guide for the Commodore 1541 disk drive owner unravels the mysteries of using the 1541 for programs, sequential and **relative** files with plenty of working examples. This book includes several useful utilities — DISK MONITOR, FILE PROTECTOR, BACKUP, MERGE and more. The Anatomy also discusses the internals of the **Disk Operating System** with the complete fully commented ROM listings.

ISBN 0-916439-01-1

YOU CAN COUNT ON
Abacus
Software



P.O. Box 7211 Grand Rapids, MI 49510 616/241-5510