





Comprehensive User's Manual

Rev. IV For Firmware Version 6.0



Safety and Equipment Protection

WARNING!

ELECTRICAL POWER CAN RESULT IN DEATH, PERSONAL INJURY OR CAN CAUSE DAMAGE TO EQUIPMENT. If the instrument is driven by an external power source, disconnect the instrument from that power source before attempting any repairs.

WARNING!

BATTERIES ARE DANGEROUS. IF HANDLED IMPROPERLY, THEY CAN RESULT IN DEATH, PERSONAL INJURY OR CAN CAUSE DAMAGE TO EQUIPMENT. Batteries can be hazardous when misused, mishandled, or disposed of improperly. Batteries contain potential energy, even when partially discharged.

WARNING!

ELECTRICAL SHOCK CAN RESULT IN DEATH OR PERSONAL INJURY. Use extreme caution when handling cables, connectors, or terminals; they may yield hazardous currents if inadvertently brought into contact with conductive materials, including water and the human body.

CAUTION

Be aware of protective measures against environmentally caused electric current surges and follow the previous warnings and cautions, the following safety activities should be carefully observed.

Children and Adolescents

NEVER give batteries to young people who may not be aware of the hazards associated with batteries and their improper use or disposal.

Jewelry, Watches, Metal Tags

To avoid severe burns, NEVER wear rings, necklaces, metal watch bands, bracelets, or metal identification tags near exposed battery terminals.

Heat Fire

NEVER dispose of batteries in fire or locate them in excessively heated spaces. Observe the temperature limit listed in the instrument specifications.

Charging

NEVER charge "dry" cells or lithium batteries that are not designed to be charged.

NEVER charge rechargeable batteries at currents higher than recommended ratings.

NEVER recharge a frozen battery. Thaw it completely at room temperature before connecting charger.

Unvented Container

NEVER store or charge batteries in a gas-tight container. Doing so may lead to pressure buildup and explosive concentrations of hydrogen.

Short Circuits

NEVER short circuit batteries. High current flow may cause internal battery heating and/or explosion.

Damaged Batteries

Personal injury may result from contact with hazardous materials from a damaged or open battery. NEVER attempt to open a battery enclosure. Wear appropriate protective clothing, and handle damaged batteries carefully.

<u>Disposal</u>

ALWAYS dispose of batteries in a responsible manner. Observe all applicable federal, state, and local regulations for disposal of the specific type of battery involved.

NOTICE

Stevens makes no claims as to the immunity of its equipment against lightning strikes, either direct or nearby.

The following statement is required by the Federal Communications Commission:

WARNING

This equipment generates, uses, and can radiate radio frequency energy and, if not installed in accordance with the instructions manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at their own expense will be required to take whatever measures may be required to correct the interference.

USER INFORMATION

Stevens makes no warranty as to the information furnished in these instructions and the reader assumes all risk in the use thereof. No liability is assumed for damages resulting from the use of these instructions. We reserve the right to make changes to products and/or publications without prior notice.



Regulatory

Declaration of Conformity

The Manufacturer of the Products covered by this Declaration is



Water Monitoring Systems, Inc.

12067 NE Glenn Widing Dr. #106 Portland, Oregon 97220 USA 503-445-8000

The Directive covered by this Declaration2004/108/EC Electromagnetic Compatibility directive

The Product Covered by this Declaration

HydraProbe Soil Measurement Sensor

The basis on which Conformity is being Declared

The manufacturer hereby declares that the products identified above comply with the protection requirements of the EMC directive for and following standards to which conformity is declared: EN61326-1:2006

Electrical requirements for measurement, control, and laboratory use EMC requirements Class A equipment – Conducted Emissions and Radiated Emissions

1907/2006/EC REACH

Stevens Water Monitoring Systems, Inc. certifies that the Stevens HydraProbe, including all models and components, are compliant with the European Union Regulation (EC) 1907/2006 governing the Registration, Evaluation, Authorization, and Restriction of Chemicals (REACH) and do not contain substances above 0.1% weight of a Substance of Very High Concern (SVHC) listed in Annex XIV as of June 15th, 2019.

The technical documentation required to demonstrate that the products meet the requirements of the EMC directive has been compiled and is available for inspection by the relevant enforcement authorities.











Preface

This manual is a comprehensive guide to the Stevens HydraProbe Soil Sensor. Contained within this manual is a theoretical discussion of soil physics that explains the theory behind how electromagnetic soil sensors work as well as a discussion about vadose zone hydrology. References to peer reviewed scientific publications are provided to give the user further background on these topics. Because soil moisture monitoring is becoming increasingly important to researchers across a broad number of fields including hydrology, agronomy, soil physics, and geotechnical engineering, we feel it is necessary to include advanced theoretical discussions with references to help the scientists and engineers understand the measurement technology in a manner that is unbiased and referenced.

Easy to Use

Despite this sophistication, the Stevens HydraProbe Soil Sensor is very easy to use. You may skip to Chapter 2 to learn about the installation and reference Appendix A for SDI-12 probes and Appendix B for RS-485 Probes for wiring and communication. Calibration is not necessary for most soils and the default settings will accommodate most users and applications.



Supporting Documents

Document Number	<u>Document</u>	
HP003A	HydraProbe Quick Start, SDI-12	
HP004A	Soil Data Guide	
HP005A	HydraProbe Install and Troubleshooting Guide	
HP006A	HydraProbe Quick Start, RS-485	
HP007A	Regulatory Information	
HP008A	HydraProbe Comprehensive Manual	
HP009A	Soil Geomorphology Guide for Soil Sensors	
HP010A	Lightning Protection for Meteorological Stations	



Comprehensive Stevens HydraProbe User's Manual

Table of Contents

1	In	ntroduction	7	
	1.1	Applications		8
	1.2	Calibrations		8
	1.3	Dielectric Permittivity		
	1.4	Structural Components		
	1.5	Accuracy and Precision		
	1.6	Electromagnetic Compatibility		
	1.7	Configurations and Physical Specification		
	1.8	Soil Data Accessories and other Products		
	1.	.8.1 Portable soil sensors		
	1.	.8.2 Tempe Cell		
	1.9	1		
2		nstallation	14	
	2.1	Precautions		14
	2.2	Topographical Station Placement Considerations		14
	2.3	Soil Sensor Depth Selection		
	2.4	Installation of the HydraProbe in Soil		
	2.	.4.1 Checklist before you go into the field		
	2.	.4.2 Test the probes and logger in the office before going into the field		
	2.	.4.3 Labeling		
	2.	.4.4 Installing the HydraProbe in the Soil		18
	2.	.4.5 Soil Sensor Orientation		19
	2.5	Wiring to a Logger Station		20
	2.	.5.1 Sensor Setup		20
	2.6	Backfilling the Hole		20
	2.	.6.1 Test Before you Backfill		20
	2.7	Lightning		21
3	$\mathbf{T}_{\mathbf{I}}$	roubleshooting and Soil Considerations	23	
	3.1	Troubleshooting at the logger end and out of the ground		23
	3.	.1.1 Check Wiring and Power		23
	3.	.1.2 Communicate with the Sensor at the Logger End		23
	3.	.1.3 Check the Logger Configuration		
	3.	.1.4 Remove the Suspect Probe from the Soil		24
	3.2	Soil Hydrology		24
	3.	.2.1 Evapotranspiration		25
	3.	.2.2 Hydrology and Soil Texture		25
	3.	.2.3 Soil Bulk Density		25
	3.	.2.4 Shrink/Swell Clays		26
	3.	.2.5 Rock and Pebbles		26
	3.	.2.6 Bioturbation		
	3.	.2.7 Salt Affected Soil and the Loss Tangent		27
DC	C# HP	A800		



	3.2.8	Ped Wetting	• • • • • • • • • • • • • • • • • • • •	27
	3.2.9	Frozen Soil		28
4	Theory	of Operation, Dielectric Permittivity, and Soil Physics	29	
		oduction		
	4.2 Elec	tromagnetic Soil Water Methods and Soil Physics		29
	4.2.1	Real, Imaginary and Complex Numbers		29
	4.2.2	Dielectric Theory		29
	4.2.3	Behavior of Water and Soil in an Electric Field		31
	4.2.4	Molecular Relaxations		
	4.2.5	Temperature and the Permittivity		32
	4.3 Type	es of Commercial Electromagnetic Soil Sensors		
	4.3.1	Time Domain Reflectometry and Transmission (TDR and TDT)		
	4.3.2	Topp Equation		
	4.3.3	Frequency Domain and Frequency Capacitance Reflectometry		34
	4.3.4	Other Reflectometer In Situ Soil Sensors		
	4.3.5	The HydraProbe, a Ratiometric Coaxial Impedance Dielectric Reflectom		
	4.3.6	Advantages of using the real dielectric permittivity over the apparent per	mittivity	35
	4.3.7	The HydraProbe is Easy to Use		36
5		rements, Parameters, and Data Interpretation		
		Sensor Types		
		Matric Potential and Soil Moisture Units		
	5.2.1	Soil Moisture Units		
		Moisture Measurement Considerations for Irrigation		
	5.3.1	Fill Point Irrigation Scheduling		
	5.3.2	Mass Balance Irrigation Scheduling		
	5.3.3	Soil Moisture Calibrations		
		Salinity and the HydraProbe EC Parameters		
	5.4.1	Soil Salinity		
	5.4.2	Bulk EC versus Pore Water EC		
	5.4.3	Bulk EC and EC Pathways in Soil		
	5.4.4	Application of Bulk EC Measurements		
	5.4.5	Total Dissolved Solids (TDS)		47
		3	48	
-		• • • • • • • • • • • • • • • • • • • •	51	
		\mathcal{C}	54	
		alibration Procedure for the SDI-12 HydraProbe		
		alibration Settings Procedure for the RS-485 HydraProbe		58
_	-		60	
Αŗ	opendix E-	References	61	





1 Introduction

The Stevens HydraProbe Soil Sensor, or the HydraProbe, measures soil temperature, soil moisture, soil electrical conductivity (EC), and the complex dielectric permittivity. Designed for many years of service buried in soil, the HydraProbe uses quality material in its construction. Marine grade stainless steel, PVC housing, and a high-grade epoxy potting protects the internal electrical component from the corrosive and reactive properties of soil. Most of the HydraProbes installed more than a decade ago are still in service today.

The HydraProbe is not only a practical measurement device; it is also a scientific instrument. Trusted by farmers to maximize crop yields, using HydraProbes in an irrigation system can prevent runoff that may be harmful to aquatic habitats, conserve water where it is scarce, and save money on pumping costs. Researchers can rely on the HydraProbe to provide accurate and precise data for many years of service. The inter-sensor variability is low, allowing direct comparison of data from multiple probes in a soil column or in a watershed.

The HydraProbe bases its measurements on the physics and behavior of a reflected electromagnetic radio wave in soil to determine the dielectric permittivity. From the complex dielectric permittivity, the HydraProbe can simultaneously measure soil moisture and electrical conductivity. The complex dielectric permittivity is related to the electrical capacitance and electrical conductivity. The HydraProbe uses patented algorithms to convert the signal response of the standing radio wave into the dielectric permittivity and thus the soil moisture and bulk soil electrical conductivity.



HydraProbe installation at a typical USDA NRCS SNOTEL Site. Picture compliments of USDA NRCS in Salt Lake City, Utah.





1.1 Applications

The US Department of Agriculture Soil Climate Analysis Network (SCAN) has depended on the HydraProbe in hundreds of stations around the United States and Antarctica since the early 1990s. The Bureau of Reclamation's Agrimet Network, NOAA, and other mesonets and research watersheds around the world trust the measurements the HydraProbe provides. Applications of the HydraProbe include:

Agriculture Irrigation
Viticulture Sports Turf

Research Soil Phytoremediation
Water Shed Modeling Evapotranspiration Studies

Land ReclamationLand Slide StudiesShrink/Swell ClaysFlood ForecastingSatellite Ground TruthingWetland DelineationPredicting WeatherPrecision Agriculture

1.2 Calibrations

The HydraProbe has three factory calibrations that provide excellent performance in a variety of soils regardless of organic content or texture. The three calibrations are: GENERAL (G) good for most all soils composed of sand, silt, and clay; ORGANIC (O); and ROCKWOOL (R). The factory GENERAL soil calibration is the default calibration and is suitable for most all mineral soils. (See Chapter 5.4.3 and Appendix C for more information)

1.3 Dielectric Permittivity

The complex dielectric permittivities are provided for custom calibrations and other applications. (See <u>Chapter 4.2.2</u> for more information)

1.4 Structural Components

There are three main structural components to the HydraProbe: the tine assembly, body, and cable. The marine grade stainless steel tine assembly is the four metal rods that extend out of the base plate ground plane and is the wave guide. Each tine is 58 mm long by 3 mm wide. The base plate is 25 mm in diameter. Electromagnetic waves at a radio frequency are transmitted and received by the center tine. The head, or body of the probe, contains the circuit boards, microprocessors, and other electrical components. The outer casing is PVC and the internal electronics are permanently potted with a rock-hard epoxy resin giving the probes a rugged construction. The cable has a direct burial casing and contains the power, ground, and data wires that are all soldered to the internal electronics.







1.5 Accuracy and Precision

The HydraProbe provides accurate and precise measurements. Table 1.1 below shows the accuracy.

<u>Parameter</u>	Pro/ ET Version	
Real Dielectric	Range: 1 to 80 where 1 = air, 80 = distilled water	
Permittivity (isolated)	-Accuracy: < +/- 0.5% Or +/- 0.25 dielectric units	
Imaginary Permittivity	Range: 0 to 80 where $1 = air$, $80 = distilled$ water	
	Accuracy: +/- 0.1 up 0.25 S/m and +/-7 at or above	
	0.5 S/m	
Soil Moisture for	Range: From complete dry to full saturation (0% to	
inorganic mineral soils	100% of saturation)	
	Accuracy ¹ : +/-0.01 WFV for most soils (θ m ³ ,m ⁻³)	
	$+/- \le 0.03$ for fine textured soil	
Bulk Electrical	Range: 0 to 1.5 S/m	
Conductivity (EC)	Accuracy ² : +/- 2.0% or 0.02 S/m whichever is greater	
Temperature	Range: -10 to 60° C	
	ET Range: -30 to 65° C	
	Accuracy: +/- 0.3° C	
Inter-Sensor Variability	+/- 0.012 WFV	
Pore Water EC	Hilhorst Equation	

Table 1.1 Accuracy and Precision of the HydraProbes' Parameters.

.6 Electromagnetic Compatibility CE

The Stevens HydraProbe is a soil sensor that uses low power RF energy. The intended use of the HydraProbe is to be buried in soil underground to depths ranging from 5 cm to 2 meters deep.

The HydraProbe meets and conforms to the conducted emissions criterion specified by EN 61326-1:2006 and FCC 15.107:2010 in accordance with method CISPR 11:2009 and ANSI C63.4:2009

The HydraProbe meets the non-intentional radiator emissions, (group A) specified by EN 61326-1:2006, FCC 15.109(g) and (CISPR 22:1997):2010 in accordance with method CISPR 11:2009 and ANSI C63.4:2009 when the probe is NOT buried as specified. Test results are available upon request. The HydraProbe is RoHS.

1.7 Configurations and Physical Specification

The HydraProbe is available in available in both SDI-12 and RS-485, with standard cable lengths of 7.5, 15, and 30 meters.

The two digital formats, SDI-12 and RS-485, incorporate a microprocessor to process the information from the probe into useful data. This data is then transmitted digitally to a receiving instrument. SDI-12 and RS-485 are



¹Soil Moisture accuracy can vary with soil properties.

²Accuracy and range of Bulk EC depends on soil properties and distribution of ions present.





two different methods of transmitting digital data. In both versions there are electrical and protocol specifications that must be observed to ensure reliable data collection.

All configurations provide the same measurement parameters with the same accuracy. The underlying physics behind how the HydraProbe works and the outer construction are also the same for each configuration. Table 1.2 provides a physical description of the HydraProbe.

Feature	Attribute
Probe Length	12.4 cm (4.9 inches)
Diameter	4.2 cm (1.6 inches)
Sensing Volume ¹	Length 5.7 cm (2.2 inches)
(Cylindrical measurement region)	Diameter 3.0 cm (1.2 inches)
Weight	200g (cable 80 g/m)
Power Requirements	7 to 20 VDC (12 VDC typical)
Storage Temperature Range	-40 to 75°C

Table 1.2 HydraProbe Physical Description (All Versions)

¹The cylindrical measurement region or sensing volume is the soil that resides between the stainless-steel tine assembly. The tine assembly is often referred to as the wave guide, and probe signal averages the soil in the sensing volume.

1.8 Soil Data Accessories and other Products

1.8.1 Portable soil sensors



Figure 1.1. The portable HydraGO-FLEX and HydraGO-S allow for wireless on the go measurements of soil moisture. Connect via Bluetooth with a smartphone and the HydraGO App.

There are two portable HydraProbe soil sensor systems, the HydraGO-FLEX and the HydraGO-S. Each model of the HydraGO has Bluetooth and can connect to a mobile device. The HydraGO App will work with either Android or Apple iOS devices. The HydraGO-S provides GPS data from the device's GPS which has a typical accuracy of 5 to 10 meters depending on the device. The HydraGO FLEX has an internal survey grade GPS, DOC# HP008A





which has sub-meter accuracy depending on satellite conditions. The HydraGO-S has a HydraProbe mounted to a shaft for quick soil measurements. The HydraGO-FLEX includes a detachable HydraProbe that comes in two models. One model of the HydraGO Probe has a flexible cable good for spot measurements, down holes, or on-the-go surface measurements. The second model has a direct buriable grade cable so that the probe can remain buried underground.

1.8.2 Tempe Cell

The Stevens Tempe Cell System can employ various methods to eliminate the uncertainties from soil moisture measurements to achieve the highest level of accuracy. This system uses an enhanced gravimetric method to measure soil moisture to obtain the actual volumetric water content. The volumetric water content determined gravimetrically can help develop a custom soil moisture calibration equation or to validate the soil moisture value output from a sensor. In addition to the soil-specific calibration and validation, an algorithm can be developed to determine the soil's matric potential using the HydraProbe up to 2 bars of tension. The Stevens Tempe Cell is ideal for mesonets, climate reference networks, and soil monitoring stations. See Appendix C.



Figure 1.2A. The Tempe Cell for custom calibrations, soil water retention curve





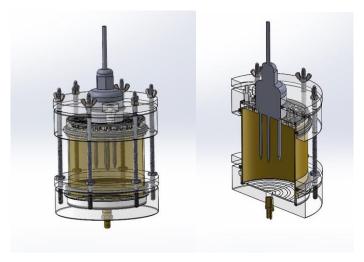


Figure 1.2B. Cross sectional diagram of Tempe Cell.

Water is infiltrated from the bottom which pushes the air out the top ensuring full saturation of the soil core.

1.9 HydraProbe Versions

- **Professional** A scientific instrument designed for long-term climate references, research, and applications requiring high accuracy and quantitative data assessments.
- Extended Temperature (ET) Professional Has the same functionality as the professional version but can operate and measure temperature down to -30° Celsius and is suitable for artic and cold climate deployments.

Parameter	Unit
Soil Moisture	Water fraction by volume
Bulk EC Temperature Corrected	S/m
Temperature	C
Temperature	F
Bulk EC	S/m
Real Dielectric Permittivity	-
Imaginary Dielectric Permittivity	-
Pore Water EC	S/m
Dielectric Loss Tangent	-

Table 1.3. HydraProbe Parameters





Manufacturer Part #	Description	
56012-02	SDI-12, Professional, w/25 ft. cable	
56012-02-30	SDI-12, Professional (Extended Temp), w/25 ft. cable	
56012-04	SDI-12, Professional, w/50 ft. cable	
56012-04-30	SDI-12, Professional (Extended Temp), w/50 ft. cable	
56012-06	SDI-12, Professional, w/100 ft. cable	
56012-06-30	SDI-12, Professional (Extended Temp), w/100 ft. cable	

Table 1.4 Stevens part numbers for SDI-12 HydraProbes

Manufacturer Part #	Description	
56485-02	RS485, Professional, w/25 ft. cable	
56485-02-30	RS485, Professional (Extended Temp), w/25 ft. cable	
56485-04	RS485, Professional, w/50 ft. cable	
56485-04-30	RS485, Professional (Extended Temp), w/50 ft. cable	
56485-06	RS485, Professional, w/100 ft. cable	
56485-06-30	RS485, Professional (Extended Temp), w/100 ft. cable	

Table 1.5 Stevens part numbers for RS485 HydraProbes

HydraProbe Accessories		
93633-007	HydraGO-S Portable Soil Sensor	
93633-009	HydraGO FLEX Portable Soil Sensor with GPS	
51169-100	Tempe Cell Basic Kit	
93723	SDI-12 / RS-485 Multiplexer, 12 Position	
93539	Cable, RS-485 Probe, 5 conductor (1000' spool)	
93924	Cable, SDI-12 Probe, 3 conductor (2500' spool)	

Table 1.6 Stevens part numbers for accessories





2 Installation

2.1 Precautions

To avoid damage to the HydraProbe. DO NOT:

- Subject the probe to extreme heat over 70 degrees Celsius (160 degrees Fahrenheit).
- Subject the probe to fluids with a pH less than 4.
- Subject the probe to strong oxidizers like bleach, or strong reducing agents.
- Subject the probe to polar solvents such as acetone.
- Subject the probe to chlorinated solvents such as dichloromethane.
- Subject the probe to strong magnetic fields.
- Use excessive force to drive the probe into the soil as the tines could bend. If the probe has difficulty going into the soil due to rocks, simply relocate the probe to an area slightly adjacent.
- Remove the HydraProbe from the soil by pulling on the cable.

While the direct burial cable is very durable, it is susceptible to abrasion and cuts by shovels. Use extra caution not to damage the cable or probe if the probe needs to be excavated for relocation.

Do not place the probes in a place where they could get run over by tractors or other farm equipment. The HydraProbe may be sturdy enough to survive getting run over by a tractor if it is buried; however, the compaction of the soil column from the weight of the vehicle will affect the hydrology and thus the soil moisture data.

DO NOT place more than one probe in a bucket of wet sand while logging data. More than one HydraProbe in the same bucket while powered may create an electrolysis effect that may damage the probe.

2.2 Topographical Station Placement Considerations

The land topography often dictates the soil hydrology. Depending on what you'd like to measure, the placement of the HydraProbe should be in the most useful area to measure.

Some factors to consider prior to HydraProbe placement are tree canopy, slope, surface water bodies, and geology. Tree canopy may affect the influx of precipitation/irrigation. Upper slopes may be better drained than depressions. There may be a shallow water table near a creek or lake. Hill sides may have seeps or springs.







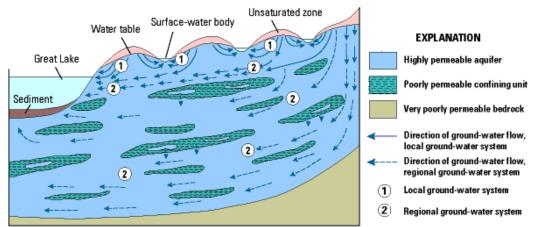
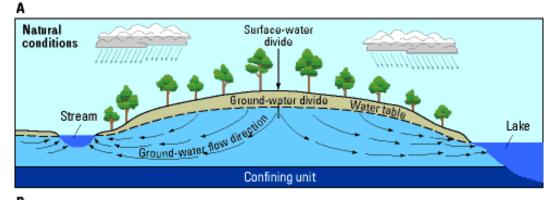


Figure 2.1 Ground water pathways and Surface water. Taken from USGS Report 00-4008.



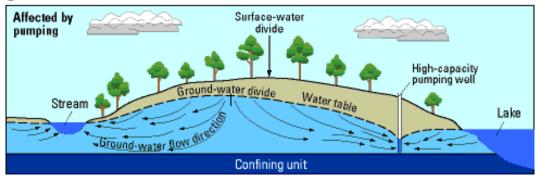


Figure 2.2 Ground water flow direction and surface water body. Taken from USGS report 00-4008.

Figures 2.1 and 2.2 illustrate subsurface water movement in the water table. The HydraProbe data is most meaningful in the unsaturated zone where soil moisture values will fluctuate. If the water table rises to the depth of the HydraProbe, the HydraProbe soil moisture measurements will be at saturation and will be indicative of the porosity. If you are interested in groundwater level measurements in wells, a water depth sensor might provide the necessary information.





2.3 Soil Sensor Depth Selection

Like selecting a topographical location, selecting the sensor depth depends on the interest of the user. Farmers may be interested in the root zone depth while soil scientists may be interested in the soil horizons.

For those in agriculture, two to three HydraProbes may be installed in the root zone and one HydraProbe may be installed beneath the root zone; this would also be dependent upon the crop and root zone depth. The amount of water that should be maintained in the root zone can be calculated by the method described in <u>section 5</u>. The probe beneath the root zone is important for measuring excessive irrigation and downward water movement.



Figure 2.3 Six HydraProbes installed into 6 distinct soil horizons.

The soil horizons often dictate the depths of the Stevens HydraProbe placement. Soil scientists and groundwater hydrologists are often interested in studying soil horizons. The HydraProbe is ideal for this application because of the accuracy and precision of the volumetric water fraction calibrations. Soil horizons are distinct layers of soil that form naturally in undisturbed soil over time. The formation of soil horizons is called soil geomorphology and the types of horizons are indicative of the soil order (see table 2.1). Like other natural processes, the age of the horizon increases with depth. The reason why it is so useful to have a HydraProbe in each horizon is because different horizons have different hydrological properties. Some horizons will have high hydraulic conductivities and thus have greater and more rapid fluctuations in soil moisture. Some horizons will have greater bulk densities with lower effective porosities and thus have lower saturation values. Some horizons will have clay films that will retain water at field capacity longer than other soil horizons. Knowledge of the soil horizons in combination with the HydraProbe's accuracy will allow the user to construct a more complete picture of the movement of water in the soil. The horizons that exist near the surface can be 6 to 40 cm in thickness. In general, with increasing depth, the clay content increases, the organic matter decreases, and the base saturation increases. Soil horizons can be identified by color, texture, structure, pH, and the visible appearance of clay films.

More information about soil horizons is provided by the USDA National Resource Conservation Service's website for a Soil's Profile under their Soil Education section.





More information about the soil horizons in your area can be found on the USDA's soil survey page.

Soil Horizon	Property
0	Decaying plants on or near surface
A	Top Soil, Organic Rich
В	Subsoil, Most Diverse Horizon and the Horizon with the most sub classifications
Е	Leached Horizon (light in color)
С	Weathered/aged parent material

Table 2.1 Basic description of soil horizons.

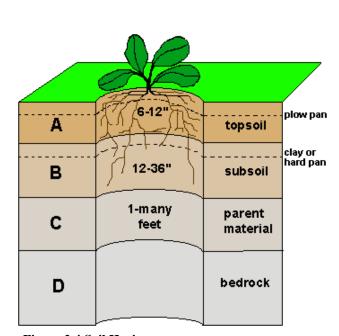


Figure 2.4 Soil Horizons.



Figure 2.5 Illustration of soil horizons. In this frame, the soil horizons are very distinct and show the geological history of the soil.





2.4 Installation of the HydraProbe in Soil

2.4.1 Checklist before you go into the field

Here is a list of helpful and recommended items to take into the field:

Notepad and pen Gloves Shovel Water/food

Knife Muncell Color book Water bottle (for cleaning)

Trowel Wrench Rags and towels
Tape measure Toe tags for labeling probes Handheld voltmeter

Zip ties Wire cutter and wire strippers Marker flags

Screw drivers Needle nose plyers

2.4.2 Test the probes and logger in the office before going into the field

We recommend setting up and running the system with the logger and the sensors before installing in the field. This allows users to become familiar with the system and identify any issues that may arise. The HydraProbes can be placed in water to test functionality. See <u>Appendix A</u> for SDI-12 communication and <u>Appendix B</u> for RS-485 communication or the quick start guides to take readings and test probes.

2.4.3 Labeling

We recommend labeling the sensor at the head prior to installation for quick identification before going in the hole. The cable at the logger end should also be labeled. The serial number and address should be documented. The serial number is printed on the label or use the SDI-12 "aI!" (aaaXR_SN for RS485) command to get the serial number.

2.4.4 Installing the HydraProbe in the Soil

The most important factor when installing the HydraProbe is that the soil should be undisturbed, and the base plate of the probe needs to be flush with the soil. Once the soil is disturbed from its pedology or equilibrated state, the porosity will increase which will in turn affect the way water is held and moves through the soil. To install the probe into the soil, first select the depth (see Chapter 2.3 for depth selection). We recommend the use of a post-hole digger or spade to dig the hole. If a pit has been prepared for a soil survey, the HydraProbes can be installed into the wall of the survey pit before it is filled in. Use a paint scraper to smooth the surface of the soil where it is to be installed. The soil must be flush with the base plate. If there is a gap, the HydraProbe signal will average the gap into the soil measurement and create errors.

If it is not possible to install the probe in undisturbed soil such as a bore hole application. The soil will settle over time and the soil around the probe will once again reach an equilibrium. If possible, the soil should be put back into the bore hole the way it came out so that the sensor is surrounded with the same material that exists at that specific depth.









Figure 2.6 HydraProbe Installed in undisturbed soil.

Push the tines of the HydraProbe into the soil until the base plate is flush with the soil. The tines should be parallel with the surface of the ground. Do not rock the probe back and forth because this will disturb the soil and create a void space around the tines.

It is imperative that the bulk density of the soil in the probe's measurement volume remain unchanged from the surrounding soil. If the bulk density changes, the volumetric soil moisture measurement and the soil electrical conductivity will change.

2.4.5 Soil Sensor Orientation

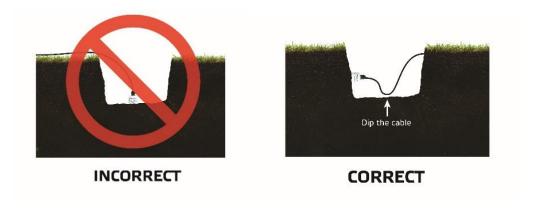


Figure 2.7 Horizontal placement sensor and dipping the cable is recommended

We recommend keeping the tine assembly horizontal with the ground particularly near the surface. A drain loop can be put in the cable to prevent water from running down the cable to the probe's sensing area.





2.5 Wiring to a Logger Station

Connect the red wire to a +12 volt DC power supply and connect the black wire to the ground for all HydraProbe models. The measurement duty cycle is 2 seconds.

Wiring and power for HydraProbes		
Power Requirements	9 to 20 VDC (12VDC Ideal)	
Red Wire	+Volts Power Input	
Black Wire	Ground	
Green Wire	Data Signal A inverting signal (-)	
White Wire	Data Signal B non-inverting signal (+)	
Blue Wire	SDI-12	
Power Consumption RS-485	<10 mA Idle 30 mA Active for 2s	
Power Consumption SDI-12	<1 mA Idle 10 mA Active for 2s	

Table 2.2 Wiring connections and power considerations.

You may also want to run the HydraProbe cable through a metal conduit like the one shown in figure 2.3 to add extra protection to the cable.

Once the probes are wired to the logger, test the communication between the logger and all the probes. This can be achieved by current reading features in the logger or in SDI-12 transparent mode. See Appendix A for SDI-12 commands or Appendix B for RS-485 commands.

2.5.1 Sensor Setup

We recommend for most applications of the HydraProbe to use the default factory settings and the factory soil moisture calibration which accommodates most all soil types. The default soil moisture calibration is called GENERAL and most users will not need to change it. If you have unique soil that requires a one of the other factory calibrations or a site-specific calibration, see <u>Appendix C</u>.

2.6 **Backfilling the Hole**

2.6.1 Test Before you Backfill

When the probes are securely installed in the undisturbed soil, test the communication between the logger and the probes. You can do this by the current reading features in the logger or in SDI-12 transparent mode. See <u>Appendix A</u> for SDI-12 commands or <u>Appendix B</u> for RS-485 commands.

Backfilling Precautions. The horizons and soil become physically homogenized after soil is removed from the ground and piled up next to the hole. The bulk density decreases considerably because the soil structure has been disturbed. After the probes are installed into the wall of the pit, the pit needs to be backfilled with the soil that came out it. It is impossible to put the horizons back the way they have formed naturally, but the original bulk density can be approximated by compacting the soil. For every 24 cm (1 foot) of soil put back into the pit, the soil should be compacted. Compaction can be done by trampling the soil with feet and body weight. Mechanical compactors can also be used, though typically they are not required. Extra care must be taken not to disturb the







probes that have exposed heads, cables and conduits when compacting the soil. If the probes were installed in a post hole, a piece of wood can be used to pack the soil.

If the soil is not trampled down while it is being backfilled, the compaction and bulk density of the backfill will be considerably less than the native undisturbed soil around it. After a few months, the backfilled soil will begin to compact on its own and return to a steady state bulk density. The HydraProbe will effectively be residing in two soil columns. The tines will be in the undisturbed soil column, and the head, cable and conduit will be in the backfill column that is undergoing movement. The compaction of the backfilled soil may dislodge the probe and thus affect the measurement volume of the probe. After the probes are installed, avoid foot traffic and vehicular traffic in the vicinity of the probes.

2.7 Lightning

Lightning strikes will cause damage or failure to the HydraProbe or any other electrical device, even though it is buried. We recommend surge protection or base station grounding in areas prone to lightning.

If lightning hits a logger station, the voltage surge propagating underground can cause serious damage to soil sensors. Underground voltage surges are called earth surge transients and the station needs to be protected both above and below ground.

Attach a dual lightning dissipator to the top of the lightning rod 3 to 6 meters above the ground surface for maximum protection from lightning. Using at least 1 cm thick copper cable, connect the dissipator to a series of buried copper rods 2 cm in diameter. The buried copper rods should be at least 2 meters long buried horizontally 1.5 to 2 meters deep. Figures 2.8 and 2.9 show grounding of the soil monitoring location and the logger station. More information can be found in the Soil Sensor Lightning Protection Guide located on the Stevens Water website.

Place a series of grounding rods 2 to 4 meters away from the soil probes 2 meters deep and clamp and connect them with a copper cable. Circle the soil sensors with the grounding rods in a way so that electrical surges propagating through the ground will go around the soil sensors.

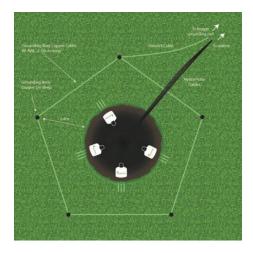


Figure 2.8 Place grounding rods around the perimeter of the soil monitoring area





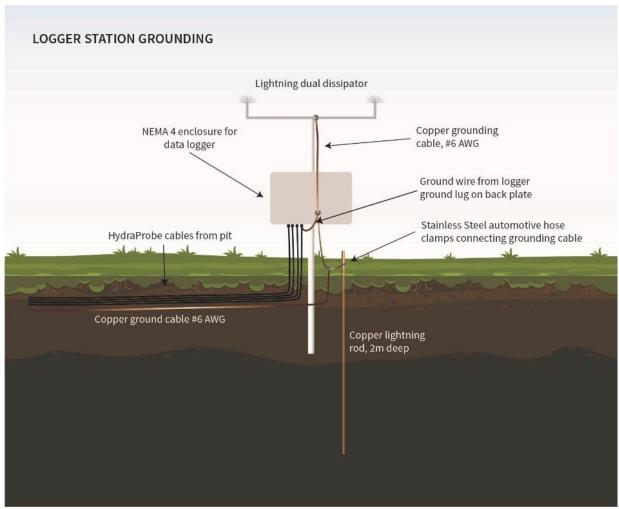


Figure 2.9 Ground the logger station with dual dissipators and ground rod





3 Troubleshooting and Soil Considerations

This section discusses troubleshooting and how the nature of soil can affect data. There are generally three main reasons why a probe may appear to be malfunctioning:

- 1) Improper logger setup or improper wiring
- 2) Soil hydrology may produce some unexpected results
- 3) Power failure

HydraProbes have a longevity in soil and a long warranty period; therefore, we recommend recording the serial numbers of the probes for support purposes before installation.

3.1 Troubleshooting at the logger end and out of the ground

This section summarizes the steps you should take if the HydraProbe is unresponsive or outputs suspect data. If the probes are in the ground, it is best to try to troubleshoot at the logger end before digging the probes up. Keep in mind that digging the probes out of the ground can be labor intensive and may disturb the other probes in the soil column. If a probe must be dug out of the ground, it can be tested in water to determine if it is functioning properly.

3.1.1 Check Wiring and Power

If you are unable to get a response from the HydraProbe, first physically check wire connections from the probe to the logger. Verify the cable has no cuts or abrasions. Use a handheld voltmeter to check the voltage on the battery and the SDI-12 bus. The voltmeter can also be connected in series with the ground wire to measure the current draw from the sensors. When idle, each HydraProbe draws 1 mA.

3.1.2 Communicate with the Sensor at the Logger End

If the logger has a current reading feature, run this feature from a device that interfaces with the logger. Try to reproduce what was observed in the logged data.

If the logger has an SDI-12 transparent mode, issue SDI-12 commands to the sensors on the bus. The "aI!" command can give the serial number. Use the "aM!" "aD0!" "aD1!" and "aD2!" commands to take a reading. Tables 3.1 and 3.2 are a summary of the commands. Isolating the suspect sensor and testing it by itself may also help.

Command Feature	SDI-12 Command
Change Address	aAb!
Get Probe's Serial Number and ID	aI!
Take a Reading	aM! Follow by aD0!, aD1!,aD2!

Table 3.1 Common SDI-12 Commands







SDI-12 Measurements										
aM!	Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7	Value 8	Value 9	
Parameter	Soil	Bulk EC	Temp	Temp	Bulk EC	Real	Imaginary	Pore	Dielectric Loss	
	Moisture	(Temp				Dielectric	Dielectric	Water EC	Tangent	
		Corrected)				Permittivity	Permittivity			
Unit	Water	S/m	C	F	S/m	-	-	S/m	-	
	Fraction by									
	Volume									

Table 3.2 Default M parameters for SDI-12 Probes. For RS-485 Probes, please see appendix A and B or quick start guides.

3.1.3 Check the Logger Configuration

If the connections are sound, check the logger's setup and configuration. The logger is often the power source for the probes. You may also want to cycle the power to the probe and the logger by disconnecting and reconnecting power. Refer to the manufacturer of the logger for tech support with the logger.

3.1.4 Remove the Suspect Probe from the Soil

If the problem cannot be resolved by checking the logger and the wiring, the probes must be dug out of the ground and cleaned off.

To verify that a HydraProbe is functioning properly, perform the following commands:

- 1. Place the HydraProbe in distilled water in a plastic container.
 - o Make sure the entire probe is submerged.
- 2. In transparent mode type "1M!"
- 3. Followed by "**1D1!**" (for a probe address of 1 for this example).

The typical response of a HydraProbe that is functioning properly should be 1+16.1+0.01+78.826.

In this example, the "1D1!" corresponds to parameters 4, 5, and 6, from table 3.2. The temperature is 16.1 degrees C, the bulk EC is 0.01 S/m and the real dielectric permittivity is 78.826. According to factory specifications, the dielectric constant should be from 75 to 85 and the EC should be less than 0.05 S/m in distilled water. If distilled water is not available, the user may use tap water for this procedure. Please note that tap water may contain trace levels of material that may affect the dielectric permittivity readings. Isopropyl alcohol with a dielectric constant of 18.6 at 20 degrees C can also be used. Please refer to the quick start guide or Appendix A for SDI-12 and Appendix B for RS-485.

3.2 Soil Hydrology

Sometimes the soil moisture data may look incorrect when in fact the HydraProbes are accurately measuring the soil moisture gradient. Soil hydrology is complex and can be modeled by Darcy's Law and Richard's Equation. These involved theories are beyond the scope of this manual.

Please note that the soil that resides between the tine assembly is where the measurements are taken. If there is a void space in the soil between the tines, this will affect the hydrology where the HydraProbe is taking measurements. If the void space is saturated with water, it will increase the soil moisture measurement. If the void DOC# HP008A







space is not fully saturated, the soil will appear dryer. Figure 3.1 shows the measurement volume where the HydraProbe takes measurements and a void space between the tine assembly. These void spaces can occur from a poor installation such as rocking the probe side to side or not fully inserting the probe into the soil.



Figure 3.1 Measurement volume with a void space between the tine assembly.

Void spaces between the tine assembly can also occur from changing soil conditions. Factors such as shrink/swell clays, tree roots, or pebbles may introduce a void space. The following sections describe some of these and other factors.

3.2.1 Evapotranspiration

Water in the soil will be pulled downward by gravity. However, during dry periods or in arid regions, the net movement of water is up toward the surface. Water will move upward in the soil column by a phenomenon called Evapotranspiration (ET). ET is the direct evaporation out of the soil plus the amount of water being pulled out of the soil by plants. Factors such as wind, temperature, humidity, solar radiation, and soil type play a role in the rate of ET. If ET exceeds precipitation, there will likely be a net upward movement of water in the soil. With the net upward movement of soil water, ET forces dissolved salts out of solution and creates saline soil conditions.

3.2.2 Hydrology and Soil Texture

Sandy soils drain better than soils that are clay rich. In general, the smaller the soil particle size distribution, the slower it will drain. Sometimes silt may have the same particle size distribution as clay but clay will retain more water for longer periods of time than silt. This can be explained by the size and shape of the soil particles. Clay particles are planar whereas silt particles are spherical. Water gets stuck between the planar plate shaped clay particles and slows the flow of water.

3.2.3 Soil Bulk Density

In general, the greater the soil density the less water it will hold. The less water soil holds, the slower water will move through it in wet conditions. There will often be soil horizons that will be denser than others giving the soil different hydrological properties with depth. Occasionally, water will stop or slow down and rest on a dense, less





permeable layer of soil. This phenomenon is called perched water. If two HydraProbes 20 cm apart have very different soil moisture readings, chances are that one of the probes is residing in perched water.

There is also a relationship between soil bulk density and the complex dielectric permittivity. The soil dry bulk density (ρ_b) can be described by equation [3.1].

$$\rho_b = m/V$$
 [3.1]

Where m is the mass of the dry soil in grams and V is the volume in cubic centimeters. The bulk density is associated with the density of a soil ped or a soil core sample. The particle density (ρ_p) is the density of an individual soil particle such as a grain of sand can be approximated to be is 2.65 g/cm³ for many types of soils in equation [3.2]. The two densities should not be confused with one another. Because the dielectric permittivity of dry soil is a function of both the bulk and particle densities (ρ_b , ρ_p), the soil density often creates the need for soil specific calibrations on some occasions. The relationship between porosity, bulk and particle density can be described by equation [3.2].

$$\varphi = 1 - \frac{\rho_b}{\rho_p} \quad [3.2]$$

3.2.4 Shrink/Swell Clays

Shrink/swell clays belong to the soil taxonomic order vertisol and are composed of smectite clays. These clays have a large ion exchange capacity and will shrink and swell seasonally with water content. The seasonal expansion and contraction homogenizes the top soil and the subsoil. As the clay shrinks during a drying period, the soil will crack open and form large crevasses or fissures. If a fissure forms in the measurement volume of the HydraProbe, the probe will signal average the air gap caused by the fissure into the reading and potentially generate biased results. If the fissure fills with water, the soil moisture measurement will be high, if the fissure is dry, the soil moisture measurement will be lower than expected. If the HydraProbe measurements are being affected by shrink/swell clays, it is recommended to relocate the probe to an adjacent location.

3.2.5 Rock and Pebbles

Often it will be obvious if a rock is encountered during an installation. Never use excessive force to insert the probe into the soil. Some soils will have a distribution of pebbles. If a pebble finds its way between the probe's tines, it will create an area in the measurement volume that will not contain water. The probe will signal average the pebble and thus lower the soil moisture measurement. If the pebble is an anomaly, relocating of the probe would provide more representative soil measurements. However, if it is revealed from the soil survey that there exists a random distribution of pebbles, a pebble between the tines may provide realistic measurements because of the way pebbles influence soil hydrology.

3.2.6 Bioturbation

Organisms such as plants and burrowing animals can homogenize soil and dislodge soil probes. A tree root can grow between the tines affecting the measurements and, in some cases, tree roots can bring a buried soil probe to DOC# HP008A





the soil surface. Burrowing mammals and invertebrates may decide that the HydraProbe's tine assembly makes an excellent home. If the HydraProbe's tine assembly becomes home to some organism, the soil moisture measurements may be affected. After the animal vacates, the soil will equilibrate, and the soil measurements will return to representative values.

While the HydraProbe cable is direct burial grade and is resistant to animal bites, the cable leading to the probe may be a tasty treat for some animals. If communication between the logger and the probe fails, check the cable for damage. A metal conduit like the one shown in figure 2.3 is recommended.

3.2.7 Salt Affected Soil and the Loss Tangent

The HydraProbe is less affected by salts and temperature than TDR or other FDR soil sensors because of the delineation of the dielectric permittivity and operational frequency at 50 MHz. While the HydraProbe performs relatively well in salt affected soils, salts that are dissolved in the soil water will influence both dielectric permittivity and thus the measurements. The salt content will increase the imaginary dielectric permittivity and thus the soil electrical conductivity. See Chapter 5.5. The HydraProbe will not measure electrical conductivity or soil moisture beyond 1.5 S/m

In general, if the electrical conductivity reaches 1 S/m, the soil moisture measurements will be significantly affected. The imaginary dielectric constant will have an influence on the real dielectric constant because dissolve cations will inhibit the orientation polarization of water. When addressing the HydraProbe's performance in salt affected soil, it is useful to use the loss tangent equation [3.3].

$$Tan \ \delta = \frac{\varepsilon_i}{\varepsilon_r}$$
 [3.3]

The loss tangent (Tan δ) is the imaginary dielectric constant divided by the real dielectric constant. If Tan δ becomes greater than 1.5 than the HydraProbes calibration becomes unreliable. It is interesting to note that the HydraProbe will still provide accurate dielectric constant measurements up to 1.5 S/m. If the salt content reaches a point where it is affecting the calibrations, the user can use a custom calibration that will still provide realistic soil moisture measurements in the most salt affected soils. See Appendix C for custom calibrations.

3.2.8 Ped Wetting

A soil ped is a single unit of soil structure. Ped shapes include granular, platy, blocky, and prismatic. Ped sizes can range from 1mm granules to 10 cm prisms. The preferential pathway water travels through soil is between the peds. This is evident by clay film coatings that develops around a ped. The clay film precursors become dissolved in the pore water, as the pore water subsides, the clay film precursors fall out of solution and adhere to and surface of the peds creating the clay film. The clay film will often delay the infiltration of water into the ped thus as the wetting front move down into the soil, the regions between the peds will be the preferential water pathway. As the wetting front moves through the soil column, the soil moisture measurements may be temporarily biased by the peds. For example, if the soil probe's measurement volume is residing entirely in a single ped, the probe would not detect the wetting front until the water infiltrates the ped. Likewise, if the sensing volume is residing between several peds, the soil moisture measurements will reflect the movement of water between the







peds. During installation, if a horizon has thick clay films around the peds, you may want to use daily averages of soil moisture reading to accommodate soil moisture variations in the peds.

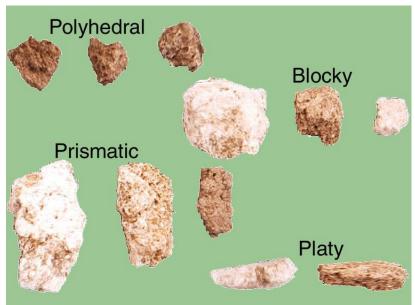


Figure 3.2 Soil Ped Types.

3.2.9 Frozen Soil

The HydraProbe can be used to determine if soil is frozen. Once ice reaches 0° Celsius, it will begin to thaw, and the real dielectric permittivity will increase from 2.5 to 5. The temperature alone may not indicate whether the soil is frozen. As the soil begins to thaw, the soil moisture and the real dielectric permittivity should return to values similar to what they were before the soil froze.





4 Theory of Operation, Dielectric Permittivity, and Soil Physics

4.1 Introduction

Analytical measurements of soil moisture are represented by several different technologies on the market. Since it is difficult to know the differences between soil sensor technologies; what we describe here is the theory behind in situ electromagnetic soil sensors. In situ soil sensors employ electromagnetic waves in the radio frequencies between 20 and 1000 MHz (dielectric permittivity-based sensors) to estimate soil volumetric soil moisture. The physics behind how soil moisture sensors work is similar to that of how electromagnetic signals travel and propagate up and down transition lines where the wave guide is the metal portion of the soil probe and the circuit load is the soil. As the radio signal travels and propagates through the soil, the water content and the soil properties change the radio signal's time of travel, frequency, phase shift, and amplitude. These alternations in the electromagnetic waves and then characterized and measured to estimate soil moisture.

4.2 Electromagnetic Soil Water Methods and Soil Physics

The behavior of electromagnetic waves from 1 to 1000 MHz in soil can be used to measure or characterize the complex dielectric permittivity. Dielectric permittivity was first mathematically quantified by Maxwell's equations in the 1870s. In the early 1900s, research with radio frequencies led to modern communication and the arrival of the television in the 1950s. In 1980, G. C. Topp (Topp 1980) proposed a method and a calibration to predict soil moisture based on the electrical properties of the soil known as the Topp Equation. Today, there are dozens of different kinds of soil moisture sensors commercially available that in one way or another base their soil moisture estimation on the dielectric permittivity. Among all of the electronic soil sensors commercially available, measurement involving the complex dielectric permittivity remains the most practical way to determine soil water content from an in situ sensor or portable device. Electromagnetic soil sensors use an oscillating radio frequency and the resultant signal is related to the dielectric permittivity of the soil where the in situ soil particle/water/air matrix is the dielectric. Subsequent calibrations then take the raw sensor response to a soil moisture estimation.

4.2.1 Real, Imaginary and Complex Numbers

Because radio signals are waves of electric fields that have energy and because these waves separate to form phase shifts and standing waves; mathematical tools need to be employed to properly understand these phenomena. Electromagnetic fields and waves are mathematically expressed as differential equations such as Maxwell's equations, which are difficult to solve even with computers. A common tool used in the solution to these mathematical constructs is the imaginary number, j, where $j = \sqrt{-1}$. A real number is a number that doesn't have j in it, and a complex number has a real part and an imaginary part containing j. The two components of a complex number don't necessarily mix together. For in situ soil moisture sensors, the real component is energy storage and the imaginary component represents energy leaving the system.

4.2.2 Dielectric Theory

Complex dielectric permittivity describes a material's ability to permit an electric field. As an electromagnetic wave propagates through matter, the oscillation of the electric field is perpendicular to the oscillation of the magnetic field and these oscillations are perpendicular to the direction of propagation. The dielectric permittivity







of a material is a complex number containing both real and imaginary components and is dependent on frequency, temperature, and the properties of the material. This can be expressed by,

$$\kappa^* = \varepsilon_r - j\varepsilon_i \tag{4.1}$$

where K^* is complex dialectic permittivity, ε_r is the real dielectric permittivity, and ε_i is the imaginary dielectric permittivity (Topp 1980). As the radio wave propagates and reflects through soil, the properties and water content of the soil will influence the wave. The water content, and to a lesser extent the soil properties, will alter and modulate the electromagnetic radio signal as it travels through the soil by changing the frequency, amplitude, impedance, and the time of travel. The dielectric permittivity can be determined by measuring these modulations to the radio frequency as it propagates through the soil. In general, the real component represents energy storage in the form of rotational or orientation polarization which is indicative of soil water content. The real dielectric constant of water is 78.54 at 25 degrees Celsius and the real dielectric permittivity of dry soil is typically 2.5 to 4. Changes in the real dielectric permittivity are directly related to changes in the water content and all electromagnetic soil sensors base their moisture calibrations on either a measurement or estimation of the real dielectric permittivity of the soil particle/water/air matrix. (Jones 2005, Blonquist 2005). The imaginary component of the dielectric permittivity,

$$\varepsilon_{i} = \varepsilon_{rel} + \frac{\sigma_{dc}}{2\pi f \varepsilon_{v}}$$
 [4.2]

represents the energy loss where ε_{rel} is the molecular relaxation, f is the frequency, ε_{v} permittivity of a vacuum which is a constant, and σ_{dc} is DC electrical conductivity. In many soils, ε_{rel} is relatively small and a measurement of the imaginary component yields a good estimation of the electrical conductivity from 1 to 75 MHz (Hilhorst 2000). In sandy soils, the molecular relaxation can be negligible. The HydraProbe estimates electrical conductivity by measuring the imaginary and rearranging equation [4.2] based on the assumption that the relaxations are near zero.

The storage of electrical charge is capacitance in Farads and is related to the real component (non-frequency dependent) by

$$C = g \boldsymbol{\varepsilon} \, \boldsymbol{\varepsilon}_{V} \tag{4.3}$$

Where g is a geometric factor and ε is the dielectric constant. If the electric field of the capacitor is oscillating (i.e. electromagnetic wave), the capacitance also becomes a complex number and can be describe in a similar fashion as the complex dielectric permittivity in equations [4.1] and [4.2] (Kelleners 2004).

The apparent dielectric permittivity ε_a , is a parameter that contains both the real and the imagery dielectric permittivities and is the parameter used by most soil sensors to estimate soil moisture.

$$\varepsilon_{a} = \left\{1 + \left[1 + \tan^{2}(\varepsilon_{i}/\varepsilon_{r})\right]^{1/2}\right\}\varepsilon_{r}/2$$
 [4.4]





From equation [4.4], the apparent dielectric permittivity is a function of both real and imaginary components (Logsdon 2005). High values of ε_i will inflate the ε_a which may cause errors in the estimation of soil moisture content. In an attempt to shrink the errors in the moisture calibration from the ε_i , some soil sensors such as time domain reflectometry will operate at high frequencies giving the ε_a more real character. In practice, soils high in salt content will inflate the soil moisture measurement because ε_a will increase due to the DC conductivity component of ε_i . Also, the ε_i is much more sensitive to temperature changes than ε_r creating diurnal temperature drifts in the soil moisture data (Blonquist 2005, Seyfried 2007). The soil moisture sensors that can best isolate the real component and delineate it from the imaginary such as the HydraProbe will be the most accurate and will have a lower inter-sensor variability.

4.2.3 Behavior of Water and Soil in an Electric Field

Water is a polar molecule, meaning that one part of the water molecule caries a negative charge while the other half of the molecule caries a positive charge. While water is very polar, soils are rather non-polar. The polarity of water causes a rotational dipole moment in the presence of an electromagnetic wave while soil remains mostly uninfluenced. This means that water will rotate and reorientate with the rise and fall of the oscillating electric field i.e. electromagnetic wave while soil remains mostly stationary. From 1 to 1000 MHz, the water rotational dipole moment of water will occur at the same frequency of the electromagnetic wave. It is this rotational dipole moment of water that is responsible for water's high dielectric constant¹ of about 80. Dry Soil will have a dielectric constant of about from about 2.5 to 4. Large changes in the dielectric permittivity are directly correlated to changes in soil moisture. Figure 4.1 shows the polarity of a water molecule and how it can reorient itself in response to electromagnetic oscillations of static electric field.

¹Terminology note. The term "real dielectric constant" generally refers to a physical property that is constant at a specified condition such as pure water at a specified temperature. The term "real dielectric permittivity" or "real permittivity" refers to the real dielectric constant of a media that is undergoing change, has variability and has complex components such as soil.



Figure 4.1 A water molecule in the liquid phase reorienting i.e. rotational dipole moment.

Figure 4.2 illustrates the different kinds of polarizations exhibited by most materials. Soils will have space charge and atomic polarizations while water will re-orientate.

4.2.4 Molecular Relaxations.

The imaginary permittivity in equation [4.2] contains two parts, the frequency and electrical conductivity component, and the molecular relaxation component, ε_{rel} . Molecular relaxations are lag times. It is the time it takes for the molecule to achieve its dipole moment after encountering the electric field and the time it takes to relax to a free random motion after the electric field subsides. Relaxations can be significant in some soil because some clay mineralogy can adhere to the water molecular causing the lag time. This is particularly true with potassium saturated smectite clays which can cause significant errors in the water content estimation of a clay. Soils with high salinities and high molecular relaxations have high energy loses and are often called lossy soils.





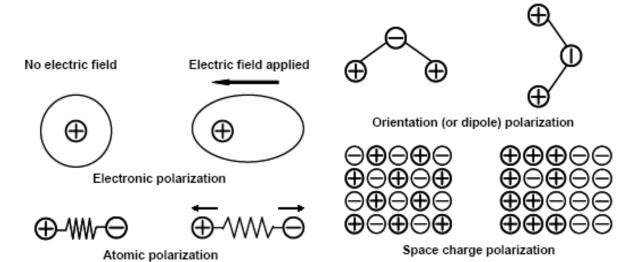


Figure 4.2 Illustration of polarization. The real dielectric permittivity of soil is mostly due to orientation polarization of water (Taken from Lee et al. 2003)

4.2.5 Temperature and the Permittivity

Both the real and imaginary dielectric permittivities will be influenced by temperature. The imaginary component is much more sensitive to changes in temperature than the real component. (Seyfried 2007).

The real dielectric permittivity of water will have a slight dependence on temperature. As the temperature increases, molecular vibrations will increase. These molecular vibrations will impede the rotational dipole moment of liquid water in the presence of an osculating electric field; consequently, the real dielectric permittivity of water will decrease as the temperature increases. The empirical relationship with temperature found in the literature is show in equation [4.5] (Jones 2005)

$$\varepsilon_{r.w}(T) = 78.54[1-4.579X10^{-3} (T-298) + 1.19 X10^{-5} (T-298)^2 - 2.8X10^{-8} (T-298)^3]$$
 [4.5]

While the HydraProbe has temperature corrections for the electrical components on the circuit board, the factory calibrations do not apply a temperature correction to the measured soil moisture values. Water in liquid form will have its dielectric constant decrease with increasing temperature but in soil, water's dielectric dependency with temperature is more complicated due to bound water affects. As temperature changes, the molecular vibrations of the water and cations that are bonded to soil particles at a microscopic level can affect the dipole moments in the presence of a radio frequency. In practical terms, temperature correction to soil moisture calibrations is highly soil dependent. In some soils, the real dielectric can trend downward with increasing temperature as it does in liquid form, or it can trend upward with increasing temperature (Seyfried 2007).

The imaginary permittivity is highly temperature dependent and the temperature dependence is similar to that of the bulk electrical conductivity.





4.3 Types of Commercial Electromagnetic Soil Sensors

There are dozens of different kinds of electronic soil sensors commercially available and it can be confusing to understand the different technologies. Table 4.1 summarizes the types of sensing methods.

Method	Physical Measurement	Basis for Soil Moisture	Typical Frequency
TDR	Time of travel of a reflected wave	Apparent Permittivity	1000 MHz Or Pulse
TDT	Time of travel along a path length	Apparent Permittivity	150 to 2000 MHz
Capacitance	Shift in Frequency	Apparent Permittivity	150 to 200 MHz
(Frequency)	(Resonance Frequency)		
Capacitance (Charge)	Capacitor Charging time	Capacitance	NA
Simplified Impedance	Difference in reflected amplitudes	Apparent Permittivity	75 MHz
Ratiometric	Ratio of reflected amplitudes to	Real Dielectric	50MHz
amplitude Impedance	measure the impedance.	Permittivity	

Table 4.1 Summary of commercially available soil sensing methods

4.3.1 Time Domain Reflectometry and Transmission (TDR and TDT)

TDR was first used in the mid twentieth century to detect the location of breaks along cables. Both time domain reflectometry (TDR) and time domain transmission (TDT) use the time of travel of the radio wave to measure the apparent permittivity (Blonquist 2005-A). The primary difference between TDR and TDT is TDR characterizes the reflected wave where as TDT characterizes the travel time on a wave guide of a set path length.

There are a variety of TDR soil sensors on the market. Some provide an analysis of a waveform while other capture the time of a return pulse across a transistor.

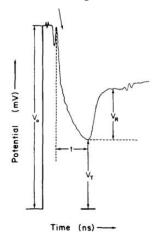


Figure 4.3 TDR Waveform

Figure 4.3 is an example of a TDR Waveform. It is a plot of voltage on the y axis and time on the x axis. If the length of the waveguide is known, the time of travel can be determined by be the time when the return signal V_R increases. The height of V_R is proportional to the soil electrical conductivity. Waveforms in soil can often be hard to interpret because there can be multiple arrival times (overtones) or large amounts of noise. Some TDRs have algorithms that analyze the waveform to determine the best arrival time while TDT simply measures the time of a voltage spike to reduce the cost of the circuitry and signal processing.

As can be shown in figure 4.3, a pulse is sent out, it is reflected back to the source, and the time of travel is measured. The amount of water in the soil will slow the radio signal down. The mathematical relationship between the time of travel, t, and the apparent permittivity, ε_a , is shown in [4.6a] and [4.6b], where [4.6a] is for TDR and





[4.6b] is for TDT. In equations [4.6 a&b] L is the length of the waveguide, c, is the speed of light and they are different by a factor of 2 because TDT is not a reflection.

$$t = \frac{2L\sqrt{\varepsilon_a}}{c}$$
 [4.6a]
$$t = \frac{L\sqrt{\varepsilon_a}}{c}$$
 [4.6b]

Note that both TDR and TDT base the soil moisture calibration on the apparent dielectric permittivity which is a mixture of both real and imaginary components as can be shown in equation [4.4]. Large imaginary permittivities, such as those found in saline soils or lossy soils, can distort the waveform causing errors.

4.3.2 Topp Equation

In 1980 the Topp equation was published (Topp 1980) which is an empirical relationship between soil moisture and the apparent permittivity. Many reflectometers today use the Topp equation as their soil moisture calibration and is shown in equation [4.7]. The Topp equation is reasonably accurate in a wide variety of soils assuming the TDR has an interpretable waveform or a sound measurement of the permittivity. In equation [4.7], θ is soil moisture and ϵ_A is the apparent permittivity from equation [4.6] and [4.4 a &b].

$$\theta = -5.3x10^{-2} + 2.92x10^{-2}\varepsilon_A - 5.5x10^{-4}\varepsilon_A^2 - 4.3x10^{-6}\varepsilon_A^3$$
 [4.7]

4.3.3 Frequency Domain and Frequency Capacitance Reflectometry

There are a lot of soil sensors on the market that are called "frequency domain reflectometers" (FDR); however, this is somewhat of a misnomer. The term "frequency domain" in physics refers to a spectrum of many frequencies where many different frequencies are transmitted and a broad range of frequencies of the return signals are measured. The change in frequency between the transmitted frequency and the reflected signal is called the resonance frequency. To keep costs down and simplify the circuitry, most soil sensors that are labeled FDRs only transmit a single frequency from 100 to 200 MHz and measure only one resonance frequency.

Capacitive properties of soil can be measured from the change in frequency from a reflected radio wave or resonance frequency (Kelleners 2004). While there are a small number of FDRs on the market the sweep frequencies to gain more insight in the dielectric permittivity of the soil, most simply measure a single resonance frequency using a raw voltage response on a circuit board. From the resonance frequency, the capitative properties of the soil can be determined with the relationship described in equation [4.8] which is in turn related to water content.

$$F = \frac{1}{2\pi\sqrt{LC}} \tag{4.8}$$

In equation [4.8] F is response frequency, L is a length term, and C is capacitive properties of soil.

4.3.4 Other Reflectometer In Situ Soil Sensors

The capacitance of a parallel plate capacitor can be measured from the time it takes to charge the capacitor. Some commercially available soil sensors can measure the capacitance of the soil from the time of charge and then calibrate for soil moisture.





Another method for determining the apparent permittivity is measuring the difference between the incident amplitude and the reflected amplitude on a transmission line to get an impedance of the load. This methodology is termed "simplified impedance" (Gaskin 1996).

4.3.5 The HydraProbe, a Ratiometric Coaxial Impedance Dielectric Reflectometer

The Stevens HydraProbe is different from other soil sensing methods. It characterizes the ratio of the amplitudes of reflected radio waves at 50 MHz with a coaxial wave guide. A numerical solution to Maxwell's equations first calculates the complex impedance of the soil and then delineates the real and imaginary dielectric permittivity (Seyfried 2004, Campbell 1990). The mathematical model that delineates the real and imaginary component from the impedance of the reflected signal resides in the microprocessor inside the digital HydraProbe. These computations are based on the work of J. E. Campbell at Dartmouth College (Campbell 1988, Campbell 1990, Kraft 1988).

The HydraProbe from an electric and mathematical perspective can be referred to as a ratiometric coaxial impedance dielectric reflectometer and works similar to a vector network analyzer at a single frequency. The term "ratiometric" refers to the process by which the ratio of the reflected signal over incident signal is calculated first which eliminates any variability in the circuit boards from one probe to the next. This step is performed several times on a standing wave at multiple points of the standing wave. The term "coaxial" refers to the metal wave guild that get inserted into the soil. It has three outer tines with a single tine in the middle that both receives and emits a radio frequency at 50 MHz. "Impedance" refers to the intensity of the reflected signal, and "dielectric reflectometer" refers to a reflected signal that is used to measure a dielectric.

$$\frac{Z_p}{Z_c} = \frac{1+\Gamma}{1-\Gamma} \qquad [4.9a] \qquad \qquad \Gamma = \frac{V_r}{V_i} \qquad [4.9b]$$

$$Z_p = \frac{Z_0}{\sqrt{\kappa^*}} \coth\left(\frac{\omega\sqrt{\kappa^*}L_g j}{c}\right)$$
 [4.10]

Equations [4.9a], [4.9b] and [4.10] summarize the HydraProbe's mathematical process for measuring the real and imaginary as separate parameters. In a standing wave at 50 MHz, the ratios of the reflected to the incident signal strengths are measured for several geometric points along the transmission line, Γ . This ratio approach eliminates inner sensor variability. The ratios are then used to compute the complex impedances on the transmissions line, Z_p and Z_c . Equation [4.10] then takes the impedances, and the geometry for transmission line, to get both components of the complex dielectric permittivity, κ^* , which are the real component for the permittivity, ϵ_r , and the imaginary permittivity, ϵ_i , as described in equation [4.1].

4.3.6 Advantages of using the real dielectric permittivity over the apparent permittivity

Unlike most other soil sensors, the HydraProbe measures both the real and the imaginary components of the dielectric permittivity as separate parameters. The HydraProbe bases the soil moisture calibration on the real dielectric permittivity while most other soil moisture technologies base their soil moisture estimation on the apparent permittivity which is a combination of the real and imaginary components as defined in equation [4.4] (Logsdon 2010). Basing the soil moisture calibration on the real dielectric permittivity instead of the apparent DOC# HP008A





permittivity has many advantages. Because the HydraProbe separates the real and imaginary components, the HydraProbe's soil moisture calibrations are less affected by soil salinity, temperature, soil variability, and inter sensor variability than most other electronic soil sensors.

4.3.7 The HydraProbe is Easy to Use

Despite the complexities of the mathematics the HydraProbe performs, the duty cycle including the warmup time, the processing of the signals, and the mathematical operations being performed by the microprocessor takes under two seconds. The user can connect the sensor to a logger or other reading device with plug-&-play ease while maintaining a high level of confidence in the data.







5 Measurements, Parameters, and Data Interpretation

5.1 Soil Sensor Types

There are two families of in situ soil moisture sensors. There are the electronic soil moisture sensors that use electromagnetic waves to estimate the volumetric water content often expressed as a percentage or water fraction such as the HydraProbe, TDRs, FDRs etc. and there are the soil sensors that measure the soil's matric potential such as tensiometers, gypsum blocks, heat capacitance probes, and other porous media methods. While soil moisture can be expressed as a gravimetric water fraction, the volumetric water fraction $(\theta, m^3 m^{-3})$ is used to take into account the soil's bulk density which can vary widely. The soil's matric potential is related to soil moisture. It is the amount of negative pressure or suction it takes to pull water out of soil. The negative sign in the pressure is often left out. Both soil moisture and matric potential are important in the understanding of soil water dynamics. A simple way to think of the difference is that the matric potential tells you when a plant is thirsty and the soil moisture tells you how much water you need.

5.2 Soil Matric Potential and Soil Moisture Units

Capillary matric potential sometimes referred to as tension or pressure head (ψ, hPa) is the cohesive attractive force between a soil particle and water in the pore spaces in the soil particle/water/air matrix. Typical ranges are 0 to -10,000,000 hPa where 0 is near saturation and -10,000,000 hPa is dryness. The drier the soil, the more energy it takes to pull water out of it. Capillary forces are the main force moving water in soil and it typically will move water into smaller pores and into drier region of soil. This process is also called wicking.

Because of the wide pressure ranges that can be observed from very wet to very dry conditions, matric potential is often express as the common log of the pressure in hPa. The log of the pressure is called pF. For example, 1,000,000 hPa is equal to a pF of 6.

Matric potential is highly texture dependent. Clay particles have a larger surface area and thus will have a higher affinity for water than that of silt or sandy soils. The most common methods for measuring or inferring the matric potential including granular matrix sensors such as gypsum electrical resistance blocks, and tensiometers which measure pressure directly.

Heat dissipation type matric potential sensors measure the matric potential indirectly by measuring the heat capacitance of a ceramic that is in equilibrium with the soil. With heat up and cool down cycles of heating elements in the ceramic, the heat capacitance can be calculated which in turn is calibrated to the matric potential. Heat capacitance based matric potential sensors offer advantages in accuracy, range, and maintenance over other technologies.

Matric potential is important for irrigation scheduling because it can represent the soil water that would be available to a crop. Many unsaturated flow models require a soil water retention curve where water fraction by volume is plotted with the matric potential in a range of moisture conditions (Figure 5.1). A soil water retention curve can help understand the movement and distribution of water such as infiltration rates, evaporation rates, and water retentions (Warrick 2003). Table 5.1 shows the general values of matric potential under different hydrological thresholds and soil textures.







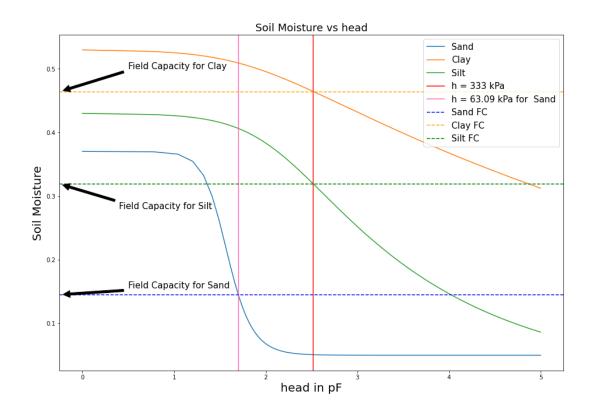


Figure 5.1 Soil Water Retention Curve. Soil moisture wfv vs. Soil matric potential (head).

Soil Condition		Matric Potential						Soil Moisture %	
	Bar	kPa	hPa	PSI	ATM	pF	Sand	Silt	Clay
Saturation	0	0	0	0	0		37%	45%	55%
Field Capacity*	0.33	33	330	4.7862	0.326	2.52	10-15%	32%	44%
Permanent Wilting Point	15	1500	15000	217.55	14.80	4.18	4%	15%	21%

Table 5.1 Soil Water Retention Curve. Soil matric potential verse soil moisture for typical soils.

5.2.1 Soil Moisture Units

The HydraProbe provides accurate soil moisture measurements in units of water fraction by volume (wfv or m³m³) and is symbolized with the Greek letter theta "θ". Multiplying the water fraction by volume by 100 will equal the volumetric percent of water in soil. For example, a water content of 0.20 wfv means that a 1000 cubic centimeters soil sample contains 200 cubic centimeters water or 20% by volume. Full saturation (all the soil pore spaces filled with water) occurs typically between 0.35-0.55 wfv for mineral soil and is quite soil dependent.

^{*}Note that the field capacity of sand is typically 5 to 20 bar.





There are several other units used to measure soil moisture: % water by weight, % available (to a crop), inches of water to inches of soil, % of saturation, and tension (or pressure). It is important to understand different ways to express soil moisture and the conversion between units can be highly soil dependent.

Because the bulk density of soil is so highly variable, soil moisture is most meaningful as a water fraction by volume or volumetric percent. If weight percent were used, it would represent a different amount of water from one soil texture to the next and it would be very difficult to make comparisons.

5.3 Soil Moisture Measurement Considerations for Irrigation

Soil moisture values are particularly important for irrigation optimization and to the health of a crop. There are two different approaches for determining an irrigation schedule from soil moisture data, the fill point method and the mass balance method. Other common irrigation scheduling methods that do not include soil moisture sensors use evapotranspiration (ET). ET is the rate of water leaving the soil by the combination of direct evaporation of water out of the soil and the amount of water being transpired by the crop. ET can be thought of as negative precipitation. ET is determined from calculations based on metrological conditions such as air temperature, solar radiation, and wind. The most common ET irrigation scheduling determination is called the Penman-Monteith Method publish in FAO-56 1998 Food and Agriculture Organization of the UN. The FAO 56 method is also a mass balance approach where the amount of water that is leaving the soil can be determined and matched by the irrigation schedule. In practice to ensure the success of the crop, ET methods in combination with soil sensor data can be used by irrigators to best manage irrigation.

5.3.1 Fill Point Irrigation Scheduling

The fill point method is qualitative in that the irrigator looks at changes in soil moisture. With experience and knowledge of the crop, an irrigation schedule can be developed to fill the soil back up to a fill point. The fill point is an optimal soil moisture value that is related to the soil's field capacity. The fill point for a particular sensor is determined by looking at soil moisture data containing several irrigation events. This can be an effective and simple way to optimize irrigation. Because it is qualitative, accuracy of the soil moisture sensor is less important because the fill point is determined by looking at changes in soil moisture and not the actual soil moisture itself. This in some ways can be more efficient because lower cost soil moisture sensors can be used without calibration. While the fill point method can be easy to implement and is widely used for many crops, the mass balance method however can better optimize the irrigation, better control salinity build up, and minimize the negative impacts of over irrigation.

5.3.2 Mass Balance Irrigation Scheduling

The mass balance method or sometimes called scientific irrigation scheduling is an irrigation schedule determined by calculating how much the water is needed based on accurate soil moisture readings and from the soil properties. Equations [5.1], [5.2], and [5.3] can help to determine how much water to apply. The following are terms commonly used in soil hydrology:

• Soil Saturation, (θ_{SAT}) refers to the situation where all the soil pores are filled with water. This occurs below the water table and in the unsaturated zone above the water table after a heavy rain or irrigation event. After the rain event, the soil moisture (above the water table) will decrease from saturation to field capacity. Saturation can range from 35% to 55% depending on texture, organic matter, and bulk density.





- Field Capacity (θ_{FC} in equations below) refers to the amount of water left behind in soil after gravity drains saturated soil. Field capacity is an important hydrological parameter for soil because it can help determine the flow direction. Soil moisture values above field capacity will drain downward recharging the aquifer/water table. Also, if the soil moisture content is over field capacity, surface run off and erosion can occur. If the soil moisture is below field capacity, the water will stay suspended in between the soil particles from capillary forces. The water will basically have a net upward movement at this point from evaporation or evapotranspiration. $\theta_{FC} = 0.33$ bar in most soils.
- Permanent Wilting Point (θ_{PWP} in equations below) refers to the amount of water in soil that is unavailable to the plant. $\theta_{PWP} = 15$ bar in most soils.
- The Allowable Depletion (θ_{AD} in the equations below) is calculated by equation [5.1]. The allowable depletion represents the amount of soil moisture that can be removed by the crop from the soil before the crop begins to stress.
- Lower Soil Moisture Limit (θ_{LL} from [5.3]) is the soil moisture value below which the crop will become stressed because it will have insufficient water. When the lower limit is reached, it is time to irrigate.
- The Maximum Allowable Depletion (MAD) is the fraction of the available water that is 100% available to the crop. MAD can depend on soil or crop type.
- Available Water Capacity (θ_{AWC}) is the amount of water in the soil that is available to the plant.

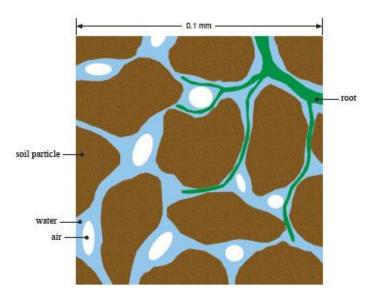


Figure 5.2 Unsaturated soil is composed of solid particles, organic material, and pores.

The pore space will contain air and water.

The lower soil moisture limit is a very important value because dropping to or below this value will affect the health of the crops. Equations [5.1], [5.2], and [5.3] and the example below show how to calculate the lower soil moisture limit and the soil moisture target for irrigation optimization.

$$\theta_{AD} = (\theta_{FC} - \theta_{PWP}) \times MAD$$
 [5.1]





$$\theta_{AWC} = \theta_{FC} - \theta_{PWP}$$

$$\theta_{LL} = \theta_{FC} - \theta_{AD}$$
[5.2]
$$[5.3]$$

Figure 5.3 can be used to help determine the soil moisture targets based on soil texture. Soil texture is determined by the percentages of sand, silt, and clay using figure 5.4. Note that figures 5.3, and 5.4 and table 5.1 general trends. The actual MAD and field capacity and permanent wilting point may vary with region, soil morphologies, and the crop.

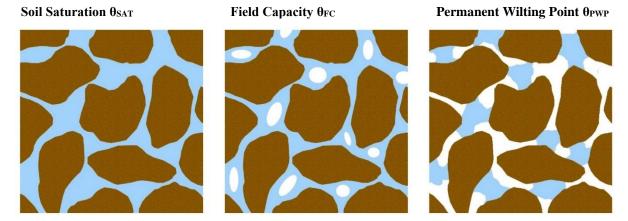


Figure 5.3 Hydrological conditions of soil.

Crop	Maximum Allowable	Effective Root
	Depletion (MAD)	Depth (Inches)
Grass	50%	7
Table beet	50%	18
Sweet Corn	50%	24
Strawberry	50%	12
Winter Squash	60%	36
Peppermint	35%	24
Potatoes	35%	35
Orchard Apples	75%	36
Leafy Green	40%	18
Cucumber	50%	24
Green Beans	50%	18
Cauliflower	40%	18
Carrot	50%	18
Blue Berries	50%	18

Table 5.2 Typical Maximum Allowable Depletion based on crop. Effective Root Zone Depth. Taken from Smesrud 1998. Note that these values may be region or crop type specific.





Soil Moisture Target

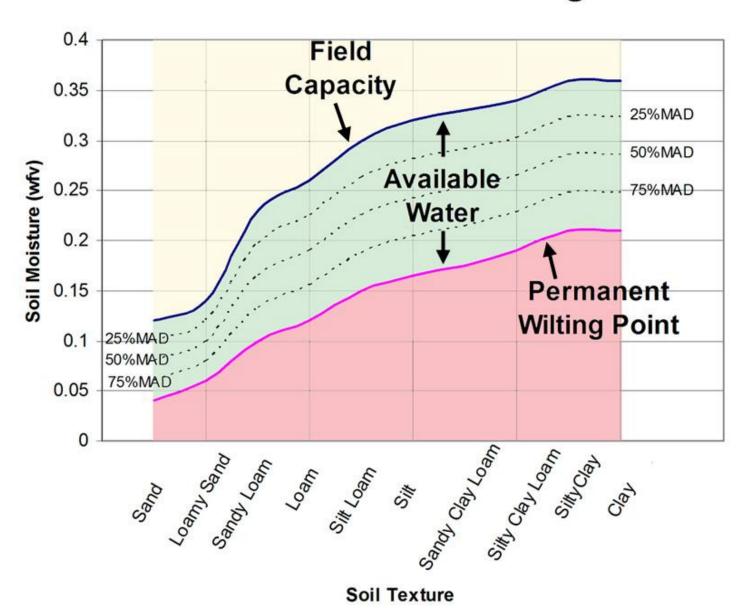



Figure 5.4 Soil textures and the available water.

<u>Texture</u>	Clay	Silty Clay	Clay Loam	<u>Loam</u>	Sandy Loam	Loamy Sand	Sand
MAD	0.3	0.4	0.4	0.5	0.5	0.5	0.6

Table 5.3 Maximum allowable depletions for different soil textures.





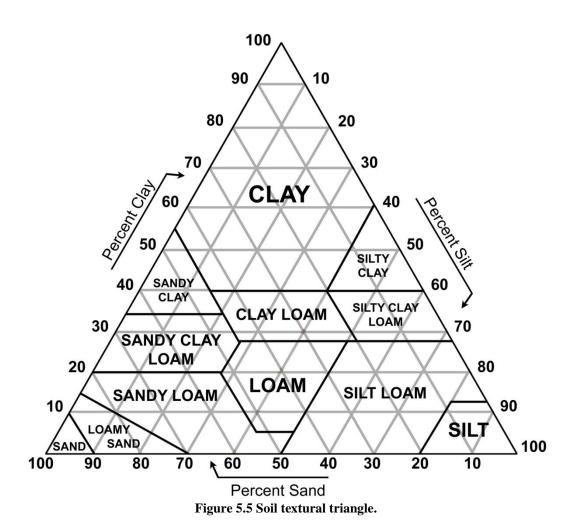

Example of irrigation scheduling based on soil moisture values:

How much water should be applied? The soil is a silt, the MAD is 50%, and the soil moisture is 16% throughout the root zone which is down to 24 cm. The sprinkler is 75% efficient.

Answer:

From tables 5.1 and 5.2 the MAD = 0.5, From Figure 5.3 (or a soil survey) $\theta_{PWP} = 16\%$ and the field capacity, θ_{FC} is 32%. Therefore, using equations 5.1 to 5.3, the optimal soil moisture is 24 to 32%. $\theta_{FC} - \theta = 32\%$ - 16% = 16%. If the MAD is 50%, then 8% would be half of the available water capacity. Subtracting 8% from the field capacity of 32% will give a lower limit of 24%. Because the soil moisture is 16%, it is 8% lower than the optimal 24%. Therefore, the soil needs to be irrigated to increase the soil moisture by 8% down to 24 cm, 8% X 24 cm = 2 cm of water needed to be added. If the sprinkler is 75% efficient than approximately 2 cm/0.75 = 2.66 cm of water should be applied. Note the rate of water coming out of the sprinkler should not exceed the infiltration rate of the soil and the run time of the sprinklers would depend on the specification of the sprinkler.





5.3.3 Soil Moisture Calibrations

The soil moisture calibration is an estimation of the soil moisture from a mathematical equation that contains the real dielectric permittivity (Topp 1980). The HydraProbe has 3 factory calibrations to choose from and custom calibration features in case a specific site calibration is necessary. The factory GENERAL or GEN calibration is the best general-purpose calibration available and is the HydraProbe's default calibration. The GEN calibration is based on research conducted by the US Department of Agriculture, Agricultural Research Service (Seyfried 2005) and is the standard calibration for the US Department of Agriculture's SNOTEL, SCAN networks and NOAA's Climate Reference Network. The factory default GEN calibration is equation [A2] in Appendix C where A = 0.109, B = -0.179 and ϵ_r is the raw real dielectric permittivity.

It is recommended to keep the HydraProbe set to the default calibration. If the soil requires a custom calibration or if further validation of the calibration is needed, the real dielectric permittivity (Parameter 6 on "aM!, aC!) can be logged until a new calibration can be developed. See <u>Appendix C</u> for more information about calibration validation and development.

5.3.3.1 Other Factory Calibrations

In addition to the factory general calibration, the HydraProbe has an organic soil calibration, O, and a rockwool calibration, R. See Appendix C for information on the calibration settings. You may want to validate the factory calibration to make sure it has suitable accuracy for a specific soil. If the factory calibration is off, you can develop a new soil specific calibration. A new soil specific calibration can be developed through gravimetric analyses. We recommend logging the real dielectric permittivity (Parameter 6 on "aM!, aC!). If a new calibration is developed, the historical data set can be recalibrated if the data set contains the raw real dielectric permittivity value. Individual sensors do not need their own calibration. Because all HydraProbes measure the same way with extremely low variability from sensor to sensor, the same calibration formula can be applied to any HydraProbe.

5.4 Soil Salinity and the HydraProbe EC Parameters

Soil bulk electrical conductivity (EC) is important for assessing the salinity of the soil and soil pore water. Temperature corrected EC is the second parameter in "aM!,aC!" and the raw un-corrected electrical conductivity and is the 5th parameter in "aM!, aC!" in the SDI-12 parameter sets. Electrical conductivity also referred to as specific conductance and is measured in Siemens/meter (S/m). Siemens is inversely related to resistance in Ohms (Siemens = 1/Ohms) and represents a materials ability to conduct an electric current. There are several related units for EC. Table 5.4 summarizes the unit conversion.

The electrical conductivity parameters are calculated from the imaginary dielectric permittivity by rearranging equation [4.2]. The calculation of EC assumes that the molecular relaxations are negligible or very small. This assumption provides a good approximation for EC in sandy or silty soils where molecular relaxations are minimal. The approximation of EC from the imaginary permittivity in clay rich soils however will be less accurate due to the possible presence of molecular relaxations. While the accuracy of the EC parameters in soil is highly soil dependent, the HydraProbe's EC measurements in slurry extracts, water samples, and aqueous solutions will be accurate (<+/- 1 to 5%) up to 0.3 S/m. Because EC can be sensitive to changes in temperature, a temperature correction is provided.







	<u>S/m</u>	dS/m	mS/m	μS/m	S/cm	dS/cm	mS/cm	μS/cm
Convert to \longrightarrow								
Convert From ↓								
S/m	1	10	1000	1E6	0.01	0.1	10	10000
dS/m	0.1	1	100	1E5	.001	0.01	1	1000
mS/m	0.001	0.01	1	1000	1E-5	0.0001	0.01	10
μS/m	1E-6	1E-5	0.001	1	1E-8	1E-7	0.00001	0.01
S/cm	100	1000	1E5	1E8	1	10	1000	1E6
dS/cm	10	100	10000	1E7	0.1	1	100	1E5
mS/cm	0.1	1	100	100000	0.001	0.01	1	1000
μS/cm	0.0001	0.001	0.1	100	1E-6	1E-5	0.001	1

Table 5.4 Convert EC units on the left to the EC units on top by multiplying by the factor. For example 2 dS/m X 0.1 = 0.2 S/m

5.4.1 Soil Salinity

The soil salinity is salt build up in the soil and can be caused by poor drainage, poor irrigation water quality, and saltwater intrusion in coastal areas. Salt or specifically the dissolved ions in solution are the primary component of the soil matrix that conducts electricity. While the EC parameter is highly dependent on the level of soil salinity, it will also rise and fall with soil moisture. The buildup of salinity in the soil is typically not beneficial to crops, grasses, or the microbial community in the soil. The soil salinity can affect the soil hydrology. Plant diseases, pathogens, reduced crop yields, or even crop failures may occur from excessive soil salinity. Monitoring the soil salinity will help ensure the health of crops.

Soil salinity consists of dissolved salts such as sodium chloride, calcium chloride, and magnesium chloride. The salts may not only be chlorides but carbonates as well. Fertilizers such as nitrates do not have a strong conductivity. The EC measured in a soil is primarily going to be attributed to the sodium and soil moisture.

5.4.2 Bulk EC versus Pore Water EC

The EC in soil is more complex than it is in a water sample and can be difficult and confusing to interpret. The bulk soil electrical conductivity σ_b is the EC of the undisturbed soil/water/air matrix and is the parameter measured by the HydraProbe. It is important not to confuse the bulk EC with the soil pore water EC, σ_p . The soil pore water EC is the electrical conductivity of the water in the pore spaces of the soil. Because the pore water EC may be difficult to directly measure, a soil slurry can be prepared by taking one-part dry soil and two parts distilled water and measuring the EC of the water extract from the slurry. The EC of the extract (EC_e or σ_e) is the parameter traditionally found in soil science or agriculture literature because it's easy to measure and provides an "apples to apples" comparison of soil salinity conditions. The HydraProbe can be used to measure the EC_e if properly placed in the watery extract.







5.4.3 Bulk EC and EC Pathways in Soil

Soil is a matrix that is basically composed of solid material, water in the pore spaces, and air. In situ soil sensors (soil sensors in the ground) measure the dc bulk electrical conductivity (σ_b) which is the electrical conductivity of the soil/water/air matrix combined. Figure [5.6] shows the three pathways the electrical conductivity can propagate in soil. The bulk density, the porosity, the tortuosity, the water content, and the dissolved ion concentration working in concert with the different pathways, dramatically influences the bulk electrical conductivity of a soil.

Pathway 1 is the electrical pathway that goes from water to the soil and back through the water again. The electrical conductivity contribution of pathway 1 is a function of the conductivity of the water and soil. As water increases, the electrical conductivity of the soil.

Pathway 2 is the pathway that is attributed to the electrical conductivity of the just the water in the soil pores. Increasing the dissolved salts will increase the conductivity of pathway 2; however, like pathway 1, increases in the soil water content will increase the size of the pathway thus increasing the overall bulk electrical conductivity. There are two factors influencing the electrical conductivity of pathway 2, namely the dissolved salt concentration and the size of the pathway attributed to the amount of water in the soil.

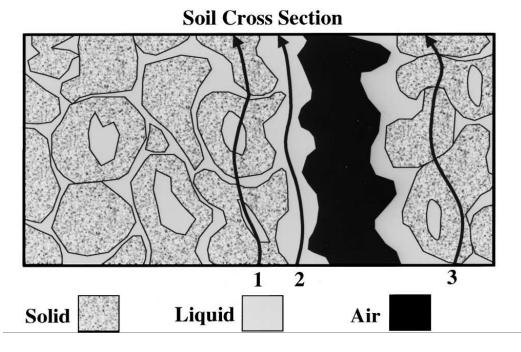


Figure 5.6 Three Pathways of electric conductivity in soil matrix. 1, water to solid, 2 soil moisture, 3 solid. Taken from Corwin et al. (2003).

Pathway 3 is the electrical conductivity of the soil particles. Like the other pathways, the contribution of pathway 3 is influenced by several factors that include bulk density, soil type, oxidation/reduction reactions, and translocation of ions.





The bulk EC measurements provided by the HydraProbe contains the electrical conductivity of the dynamic soil matrix which is the sum of the electrical conductivities from all of the different pathways. No in situ soil sensor can directly distinguish the difference between the different pathways nor can any conventional in situ soil sensor distinguish the difference between sodium chloride and any other number of ions in the solution that all have some influence on electrical conductivity of the soil/water/air matrix.

5.4.4 Application of Bulk EC Measurements

While it is difficult to make direct comparisons with the bulk EC, you can identify certain benchmarks. For example, if the soil moisture reaches a threshold such as field capacity, the bulk EC can be recorded at that threshold to make comparison. This would be useful in situations where soil salinity is a problem and monitoring is necessary.

In some circumstances, the pore water EC can be estimated from knowledge about the dielectric permittivity of the soil (Hilhorst 1999). Equation [5.4] allows the user to make comparable pore water EC estimates from bulk EC measurement in most soils.

$$\sigma_p = \frac{\varepsilon_{rp}\sigma_b}{\varepsilon_{rb}-\varepsilon_{rb}}$$
 [5.4]

Where σp is the pore water EC, εrp is the real dielectric content of water (≈ 80), σb is the bulk EC measured with the HydraProbe in soil, and εrb is the real dielectric permittivity of the soil measure with the HydraProbe. εrb_O is an offset, and 3.4 can be used as the offset for most inorganic soils.

5.4.5 Total Dissolved Solids (TDS)

The total dissolved solids (in g/L or ppm) of a water sample can be estimated from the electrical conductivity. To assess the TDS in soil you need to first obtain the pore water EC from either equation 5.6 or from a slurry water extract. TDS calculated from EC may be less meaningful for soil pore water than a water sample or dry down weight analyses. There could also be other constituents dissolved in the water that do not contribute to the EC of the water such as nitrates, phosphates, and other factors that exist in soil but do not occur in a water sample. Another source of error with TDS estimation from EC is the fact that different salts have different EC strengths and solubility. Calcium chloride will be underrepresented in a TDS calculation because it has a lower EC value and will fall out of solution much quicker than sodium chloride (McBride 1994). Despite the challenges associated with estimating TDS from EC, equation [5.5] can be used to with the HydraProbe's EC measurements to estimate the TDS in a water or slurry extract sample.

Water Salinity (g/L)
$$\approx$$
 EC (S/m) x 6.4 [5.5]

To verify the TDS estimation from EC or perhaps correct equation [5.5] for a specific water sample, you can dry down a water sample and obtain the weight of the material left behind for a true gravimetric measurement of TDS. Note that if the HydraProbe EC measurement is used to estimate the TDS, the stainless-steel tines need to be completely submerged in the water sample or the water extract of the slurry.





Appendix A– HydraProbe SDI-12 Communication (6.0 Firmware)

SDI-12 communication protocol allows compatible devices to communicate with each other. More information about SDI-12 can be found at http://www.sdi-12.org/. 4.1, 4.0, 3.0, 2.8 and 2.7 firmware versions have a different array of commands. Contact Stevens Water for more information.

Model Numbers

Version Part # Suffix			
Professional, w/25 ft. cable			
02-30 Professional (Extended Temp), w/25 ft. cab			
Professional, w/50 ft. cable			
04-30 Professional (Extended Temp), w/50 ft. c			
06 Professional, w/100 ft. cable			
06-30 Professional (Extended Temp), w/100 ft.			

Power

Power Requirements	9 to 20 VDC (12VDC Ideal)
Power Consumption	<1 mA Idle, 10 mA for 2s Active

Wiring

Red Wire	+ Power Input	
Black Wire	Ground	
Blue Wire	SDI-12 Data Signal	

Addressing

The first character of any command or response on SDI-12 is the sensor address. A lowercase 'a' is used to represent the address. Each SDI-12 sensor must have its own unique address. The default address is "0". Use SDI-12 "Transparent Mode" to issue commands.

SDI-12 Command	Response	Description
		Change Sensor Address
aAb!	b	a – Sensor Address
		b – New Sensor Address

Identification

A request for identification will return the sensor address, part number, firmware version, sensor version, calibration, and serial number.

SDI-12 Command	Response	Description
o.I.I	a12STEVENSWnnnnv.vvvcSNxxxxxxxx	Send Identification
aI!		a – Sensor address





	12 – SDI-12 protocol version
	STEVENSW – Manufacturer
	nnnnn – Part number
	v.vvv – Firmware version
	c – Calibration
	xxxxxxxx – Serial number

Measurements

SDI-12 Command	Response	Description
		Request Measurement
		a – Sensor address
aM!	ottte	ttt - seconds (000 - 999) until the
alvi:	atttn	measurement is ready
		n – number of data fields (1-9) in the
		measurement
		Send Measurement Readings
aD0!	a <f><i><g></g></i></f>	F – Soil Moisture
aD0:	a~r~\r^\	I – Bulk EC (Temp Corrected)
		G – Temperature (C)
		Send Measurement Readings
aD1!	a <h><j><l></l></j></h>	H – Temperature (F)
aD1:	a\H\\J\\L\	J – Bulk EC
		L – Real Dielectric Permittivity
		Send Measurement Readings
aD2!	a <m><k><0></k></m>	M – Imaginary Dielectric Permittivity
aD2!	a\lvI\K\O	K – Pore Water EC
		O – Dielectric Loss Tangent
		Request Measurement
		ttt - seconds (000 - 999) until the
aM1!	atttn	measurement is ready
		n – number of data fields (1-9) in the
		measurement
		Send Measurement Readings
		L – Real Dielectric Permittivity
aD0!	a <l><m><n></n></m></l>	M – Imaginary Dielectric Permittivity
		N – Imaginary Dielectric Permittivity
		(Temperature Corrected)
		Send Measurement Readings
aD1!	a <o><p></p></o>	O – Dielectric Loss Tangent
		P – Diode Temperature







The following tables list the values and units:

Selector Order	Parameter	Unit
F	Soil Moisture	Water fraction by Volume (wfv)
G	Soil Temperature	Celsius (C)
Н	Soil Temperature	Fahrenheit (F)
I	Bulk EC	Siemens/Meter (S/m)
	(Temperature Corrected)	
J	Bulk EC	Siemens/Meter (S/m)
K	Pore Water EC	Siemens/Meter (S/m)
L	Real Dielectric Permittivity	-
M	Imaginary Dielectric Permittivity	-
N	Imaginary Dielectric Permittivity	-
	(Temperature corrected)	
О	Dielectric Loss Tangent	-
P	Diode Temperature	Celsius (C)

SDI-12 Measurement Sets (Professional and Extended Temperature Version)									
<u>Command</u> <u>P1 P2 P3 P4 P5 P6 P7 P8 P9</u>									
aM! and aC!	F	I	G	Н	J	L	M	K	О
aM1! and aC1!	L	M	N	О	P				

Pore Water Offset

SDI-12 Command	Response	Description
aXR_PWOS!	a <current offset=""></current>	Read Pore Water Offset
aXW_PWOS_ <new Offset>!</new 	a <new offset=""></new>	Write Pore Water Offset
aXD_PWOS!	a+3.4	Reset Pore Water Offset to default 3.4







Appendix B- HydraProbe RS-485 Communication (6.0 Firmware)

RS-485 is a serial communication standard. RS-485 is a good option compared to SDI-12 if you need longer cabling. RS-485 can operate with up to 3000 ft of cable. The disadvantage compared to SDI-12 is that RS-485 does draw more power. Broadcast address: "///" if there is a single probe on the bus. 4.1, 4.0, 3.0, 2.8 and 2.7 firmware versions have a different array of commands. Contact Stevens Water for more information.

Model Numbers

Version Part # Suffix				
02	Professional, w/25 ft. cable			
02-30	Professional (Extended Temp), w/25 ft. cable			
04	Professional, w/50 ft. cable			
04-30	Professional (Extended Temp), w/50 ft. cable			
06	Professional, w/100 ft. cable			
06-30	Professional (Extended Temp), w/100 ft. cable			

Power

Power Requirements	9 to 20 VDC (12VDC Ideal)				
Power Consumption	<10 mA Idle, 30 mA for 2s Active				

Wiring

Red Wire	+ Power Input			
Black Wire	Ground			
Green Wire	Data inverting Signal Negative (-) A			
White Wire	Data non-inverting Signal Positive (+) B			

Communication Settings

Baud Rate	9600
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

All commands sent must end with a "Carriage Return" "Line Feed" pair.

Addressing

Lowercase 'aaa' is used to represent the address. The default address is "000".

RS-485 Command	Response	Description	Access Level
aaaXR_AD	<current address=""></current>	Read Address	Read Only
aaaXW_AD_ <new address=""></new>	<new address=""></new>	Write Address	Write Only





Identification

RS-485 Command	Response	Description	Access Level
aaaXR_SN	aaa <serial number=""></serial>	Read Serial Number	Read Only
aaaXR_FV	aaa <firmware version=""></firmware>	Read Firmware Version	Read Only
aaaXR_MN	aaa <model number=""></model>	Read Model Number	Read Only

Measurement

RS-485 Command	Response	Description	Access Level	
aaaTR	-	Request Measurement	Read Only	
aaaT<0-1>	aaa <values></values>	Read Measurement Set 0 or 1	Read Only	
aaaXR T<0-1>	aaa <values></values>	Read Parameters in	Read Only	
aaa/K_1~0-1/	aaaXR_1<0-1> aaa <values></values>		Read Only	
		Read Quick Mode Selection		
aaaXR_QM	aaa <x 0=""></x>	X – Quick Mode Disabled	Read Only	
_ `		0 – Quick Mode Enabled		
aaaXW_QM_X	aaaX	Disable Quick Mode	Read Only	
aaaXW_QM_0	aaa0	Enable Quick Mode	Write Only	

The following tables list the values and units:

Selector Order	Parameter	Unit
F	Soil Moisture	Water fraction by Volume (wfv)
G	Soil Temperature	Celsius (C)
Н	Soil Temperature	Fahrenheit (F)
I	Bulk EC	Siemens/Meter (S/m)
	(Temperature Corrected)	
J	Bulk EC	Siemens/Meter (S/m)
K	Pore Water EC	Siemens/Meter (S/m)
L	Real Dielectric Permittivity	-
M	Imaginary Dielectric Permittivity	-
N	Imaginary Dielectric Permittivity	-
	(Temperature corrected)	
O	Dielectric Loss Tangent	-
Р	Diode Temperature	Celsius (C)

RS485 Measurement Sets (Professional and Extended Temperature Version)									
Command	<u>P1</u>	<u>P2</u>	<u>P3</u>	<u>P4</u>	<u>P5</u>	<u>P6</u>	<u>P7</u>	<u>P8</u>	<u>P9</u>
T0, Transmit Set 0	F	I	G	Н	J	L	M	K	0
T1, Transmit Set 1	L	M	N	О	P				





Pore Water Offset

RS-485 Command	Response	Description	Access Level
aaaXR_PWOS	aaa <current offset=""></current>	Read Pore Water Offset	Read Only
aaaXR_PWOS_ <new offset=""></new>	aaa <new offset=""></new>	Write Pore Water Offset	Write Only
aaaXD_PWOS	aaa+3.4	Reset Pore Water Offset to default 3.4	Write Only







Appendix C- Custom Calibration Programming

The following extended commands will change the coefficients in one of two general formulas that translate the real dielectric permittivity to soil moisture. In many cases, the HydraProbe will not need to be recalibrated in most mineral soils. The default General calibration has been heavily reviewed and will provide reasonable accuracy for most applications.

If a custom calibration is required, we recommend developing the new calibration in spreadsheets using multiple replicates before reprograming the sensor. Validation of the factory calibration can be performed with a Tempe Cell or gravimetric analyses. Development of a custom calibration needs to balance the need for more accuracy and the labor it takes to develop, and curve fit a new calibration.

The HydraProbe has a total of three factory calibrations built into the firmware for various soil conditions. While these three calibrations will accommodate most soils, sometimes you will need to create your own calibration and have the HydraProbe output the results using the custom calibration.

The default soil moisture calibration is called GENERAL or GEN. The GENERAL soil calibration has been heavily tested, widely used in many soil types, and is suitable for most agricultural and mineral soils consisting of sand, silt, and clay. We recommend keeping the HydraProbe set to the GENERAL soil calibration. Other factory calibrations include O (organic soil), and R (rock wool). A custom calibration can be entered using either CUS 1 or KUS 2 modes. In CUS1 Mode, you can enter four coefficients for a 3rd order polynomial (equation [C1]) and in KUS 2 Mode, you may select two coefficients for a semi-linear square root formula (equation [C2]). The calibrations curves are polynomials that calculate the soil moisture from the real dielectric permittivity. Soil moisture calibrations will typically take one of two different general formulas. There are two general formulas that will mathematically have the appearance of equation [C1] or [C2]

$$\theta = A + B\varepsilon_r + C\varepsilon_r^2 + D\varepsilon_r^3$$
 [C1]
$$\theta = E\sqrt{\varepsilon_r} + F$$
 [C2]

where θ is moisture, ε_r is the real dielectric permittivity, and A, B, C, and D are coefficients. This procedure will allow the user to select their A, B, C, and D values for equation [C1]. The coefficients E, and F are the user defined variables for KUS 2 in equation [C2].

A custom calibration or a statistical data validation for an existing soil moisture calibration is labor intensive. You will need to experimentally solve equation [C1] or [C2] from data obtained from the soil. Gravimetric soil moisture values will need to be obtained for a range of soil moisture conditions. The volumetric soil moisture value will need to be calculated from the gravimetric soil moisture values. Gravimetric soil moistures need to be converted to volumetric values with either the dry bulk density of the soil or the know the volume of the soil sample. The user will then need to mathematically curve-fit one of the two polynomials using the real dielectric permittivity and the volumetric soil moisture values for the range. The relationship between volumetric soil moisture and gravimetric soil moisture is described by equation [C3].

$$\theta_v = \theta_g \frac{\rho_b}{\rho_w}$$
 [C3]





The coefficients for equations [C1] and [C2] can be programmed into the firmware of the HydraProbe. Below is a procedure for programming a custom calibration on a RS-485 or SDI-12 HydraProbe.

Development of a new calibration involves collecting soil samples and drying them down in a gravimetric analysis. Take great care to obtain data points that are representative of the field conditions. We recommend to first post process the new calibration and compare it to the General factory calibration for a period before programming it onto the sensor. We also recommend logging the real dielectric permittivity so that new calibrations can be applied to the data set.

Calibration	Application	Formula
G	Most all soils (probe default)	C2
0	Highly organic soils, peat, fine compost	C1, C = 0 and D = 0
R	Rock wool	C1, C = 0 and D = 0
С	Custom 1	C1
K	Kustom 2	C2

Table C1. Factory calibration modes.

Calibration	Formula	<u>A</u>	<u>B</u>	<u>C</u>	<u>D</u>	<u>E</u>	<u>F</u>
G	C2	NA	NA	NA	NA	0.109	-0.179
О	C1	-0.02134	0.013148	0	0	NA	NA
R	C1	-0.02134	0.013148	0	0	NA	NA
C (CUS1)	C1	0	0.0224	-0.00047	0.00000514	NA	NA
K (KUS2)	C2	NA	NA	NA	NA	0.109	-0.179

Table C2. Coefficients for factory calibrations.

Note that the General (G) calibration was published in the Vadose Zone Journal (Seyfried 2005), The default coefficients for Custom 1 are a general soil moisture calibration published in the Soil Science Society of America Journal (Logsdon 2010) and were curve fit for a potassium rich smectite. The O and R calibration coefficients are based on gravimetric analysis of common samples.







Custom Calibration Procedure for the SDI-12 HydraProbe

Note: We recommend to first post process a new calibration for a period of time before programming the coefficients into sensors. We also recommend logging the real dielectric permittivity so that a data set can be recalibrated if needed.

SDI-12 Command	Response	Description	
		Get Current soil type	
		G – General	
aVD SOIL!	a <g c="" k="" o="" r=""></g>	O – Organic	
aXR_SOIL!	a <g c="" k≥<="" o="" r="" td=""><td>R – Rockwool</td></g>	R – Rockwool	
		C – Custom 1	
		K – Custom 2	
		Write New Soil Type	
		G – General	
aVW SOIL Navy Sail Tyma	a <g c="" k="" o="" r=""></g>	O –Organic	
aXW_SOIL_ <new soil="" type="">!</new>		R – Rock Wool	
		C – Custom 1	
		K – Custom 2	
aXR_COEFA!	a <a>	Read coefficient A	
aXR_COEFB!	a 	Read coefficient B	
aXR_COEFC!	a <c></c>	Read coefficient C	
aXR_COEFD!	a <d></d>	Read coefficient D	
aXR_COEFE!	a <e></e>	Read coefficient E	
aXR_COEFF!	a <f></f>	Read coefficient F	
aXR_COEF!	a <a><c><d><e><f></f></e></d></c>	Read all coefficients	
aXW_COEFA_ <a>!	a <a>	Write coefficient A	
aXW_COEFB_ !	a 	Write coefficient B	
aXW_COEFC_ <c>!</c>	a <c></c>	Write coefficient C	
aXW_COEFD_ <d>!</d>	a <d></d>	Write coefficient D	
aXW_COEFE_ <e>!</e>	a <e></e>	Write coefficient E	
aXW_COEFF_ <f>!</f>	a <f></f>	Write coefficient F	
aXD_COEF!	a <a><c><d><e><f></f></e></d></c>	Reset all coefficient to default	

Table C3. SDI-12 commands for setting calibration and custom calibration.

Example 1. SDI-12 Procedure for custom calibration

To program a probe with an address of 0 using the CUSTOM 1 formula, you would enter this command. The probe responses are shown in **bold.**





The CUSTOM 1 formula uses four coefficients, so we will need to assign the values to them. To assign a value of -10.0 to the first coefficient, a value of 5.0 to the second, 0.3 to the third and 0.0005 to the fourth we would enter these commands. The probe responses are shown in **bold.**

0XW_COEFA_-10.0!

0-10.00000000

0XW_COEFB_5.0!

0+05.00000000

0XW_COEFC_0.3!

0+00.30000001

0XW COEFD 0.0005!

0+00.00050000

To verify that your settings have been programmed into the probe, enter the following query commands. The probe should respond as shown in **bold.**:

OXR SOIL!

0C

OXR COEF!

 $0\hbox{-}10.00000000+05.00000000+0.30000001+0.00050000+00.10900000-00.17900000$

The values that the probe returns may be slightly different than the values you entered. This is an artifact of the conversion from decimal to binary and then back again. The difference, for our purposes, is negligible. The last two numbers returned are coefficients E and F which are not used in the CUSTOM1 formula.







Custom Calibration Settings Procedure for the RS-485 HydraProbe

Note: We recommend to first post process a new calibration for a period of time before programming the coefficients into sensors. We also recommend logging the real dielectric permittivity so that a data set can be recalibrated if needed.

RS-485 Command	Response	Description	Access Level
aaaXR SOIL	aaa <g c="" k="" o="" r=""></g>	Get current calibration soil type	Read Only
	 3/3/10 3/11	G – General	
		O – Organic	
		R – Rockwool	
		C – Custom 1	
		K – Custom 2	
aaaXW SOIL <new soil<="" td=""><td>aaa<g c="" k="" o="" r=""></g></td><td>Write calibration soil type</td><td>Write Only</td></new>	aaa <g c="" k="" o="" r=""></g>	Write calibration soil type	Write Only
Type>		G – General	
		O – Organic	
		R-Rockwool	
		C – Custom 1	
		K – Custom 2	
aaaXR_COEFA	aaa <a>	Read coefficient A	Read Only
aaaXR_COEFB	aaa 	Read coefficient B	Read Only
aaaXR_COEFC	aaa <c></c>	Read coefficient C	Read Only
aaaXR_COEFD	aaa <d></d>	Read coefficient D	Read Only
aaaXR_COEFE	aaa <e></e>	Read coefficient E	Read Only
aaaXR_COEFF	aaa <f></f>	Read coefficient F	Read Only
aaaXR_COEF	aaa <a><c><d></d></c>	Read all coefficients	Read Only
	<e><f></f></e>		
aaaXW_COEFA_ <a>	aaa <a>	Write coefficient A	Write Only
aaaXW_COEFB_ 	aaa 	Write coefficient B	Write Only
aaaXW_COEFC_ <c></c>	aaa <c></c>	Write coefficient C	Write Only
aaaXW_COEFD_ <d></d>	aaa <d></d>	Write coefficient D	Write Only
aaaXW_COEFE_ <e></e>	aaa <e></e>	Write coefficient E	Write Only
aaaXW_COEFF_ <f></f>	aaa <f></f>	Write coefficient F	Write Only
aaaXD_COEF	aaa <a><c><d></d></c>	Reset all coefficient to default	Write Only
	<e><f></f></e>		

Example 2. RS-485 Procedure for custom calibration

To program a probe with an address of 000 to use the KUSTOM 2 formula, you would enter this command: 000XW_SOIL_K<CR><LF>

The KUSTOM 2 formula uses two coefficients, E and F, so we will need to assign values to them. To assign a value of 0.3 the first coefficient and a value of -0.6 to the second, we would enter these two commands:





000XW_COEF_E_0.3<CR><LF> 000XW_COEF_F_-0.6<CR><LF>

To verify that your settings have been programmed into the probe, enter the following query commands. The probe should respond as shown in **bold**:

000XR_COEF<CR><LF>

000+00.00000000+00.02240000-00.00047000+00.00000514+00.30000001-00.60000002

The values that the probe returns may be slightly different than the values you entered. This is an artifact of the conversion from decimal to binary and then back again. The difference, for our purposes, is negligible. The first four numbers returned are coefficients A-D which are not used in the KUSTOM2 formula.

A Note About Scientific Notation

The probe can accept values for coefficients in a form of scientific notation. The decimal number is followed by the letter "E" and then the power of ten that is to be applied. For example:

-0.0007345 can also be entered as -7.345E-4 and 12345.678 can also be entered as 1.2345678E+4







Appendix D - Useful links

Stevens Water Monitoring Systems, Inc. www.stevenswater.com

The Soil Science Society of America http://www.soils.org/

The US Department of Agriculture NRCS Soil Climate Analyses Network (SCAN) http://www.wcc.nrcs.usda.gov/scan/

The US Department of Agriculture NRCS Snotel Network http://www.wcc.nrcs.usda.gov/snow/

The US Bureau of Reclamation Agricultural Weather Network (AgriMet) http://www.usbr.gov/pn/agrimet/

Free Nationwide Soil Survey Information! https://websoilsurvey.sc.egov.usda.gov/App/HomePage.htm







Appendix E- References

- Blonquist, J. M., Jr., S. B. Jones, D.A. Robinson, Standardizing Characterization of Electromagnetic Water Content Sensors: Part 2. Evaluation of Seven Sensing Systems. Vadose Zone J. 4:1059-1069 (2005)
- Birkeland, P. W. Soils and Geomorphology 3rd Ed. Oxford University Press 1999
- Campbell, J. E. 1990. Dielectric Properties and Influence of Conductivity in Soils at One to Fifty Megahertz. Soil Sci. Soc. Am. J. 54:332-341.
- Corwin, D. L., S. M. Lesch. 2003. Application of Soil Electrical Conductivity to Precision Agriculture: Theory and Principles, and Guidelines. Agron. J. 95:455-471 (2003)
- Crop and Evapotranspiration-Guidelines for Computing Crop Water Retirements Irrigation and Drainage FAO-56, Food and Agriculture Organization of the United Nations, (1988).
- Hamed, Y., M. Person, and R. Berndton. 2003. Soil Solution Electrical Conductivity Measurements Using Different Dielectric Techniques. Soil Sci. Soc. AM. J. 67 No.4: 1071-1078
- Jones, S. B., J. M. Blonquist, Jr., D.A. Robinson, V. Philip Rasmussen, and D. Or. Standardizing Charaterization of Electromagnetic Water Content Sensors: Part 1. Methodology. Vadose Zone J. 4:1028-1058 (2005)
- Lee, J. H., M. H. Oh, J. Park, S. H. Lee, K. H. Ahn, Dielectric dispersion characteristics of sand contaminated be heavy metal, landfill leachates and BTEX (02-104) J. Hazardous Materials B105 (2003) pp. 83-102.
- Logsdon, S. D., T. R. Green, M. Seyfried, S. R. Evett, and J. Bonta, Hydra Probe and Twelve-Wire Probe Comparisons on Fluids and Cores. Soil Sci. Soc. AM. Vol. 74 No. 1, 2010.
- McBride, M. B. Environmental Chemistry of Soils. Oxford University Press 1994.
- Seyfried, M. S. and M. D. Murdock. 2004. Measurement of Soil Water Content with a 50-MHz Soil Dielectric Sensor. Soil Sci. Soc. Am. J. 68:394-403.
- Seyfried, M. S., L. E. Grant, = E. Du, and K. Humes. 2005. Dielectric Loss and Calibration of the HydraProbe Soil Water Sensor. Vadose Zone Journal 4:1070-1079 (2005)
- Seyfried, M.S., and L.E.Grant. 2007. Temperature Effects on soil dielectric properties measured at 50MHz. Vadose Zone J. 6:759-765. (2007)
- Topp, G. C., J. L. Davis, and A. P. Annan. 1980. Electromagnetic Determination of Soil Water Content: Measurement in Coaxial Transmission Line. Water Resources. Res. 16:574-582
- Whalley, W. R. 1993. Considerations on the use of time-domain reflectometry (TDR) for measuring soil water content. J. Soil Sci. 44:1-9.

