EC 升级操作步骤：
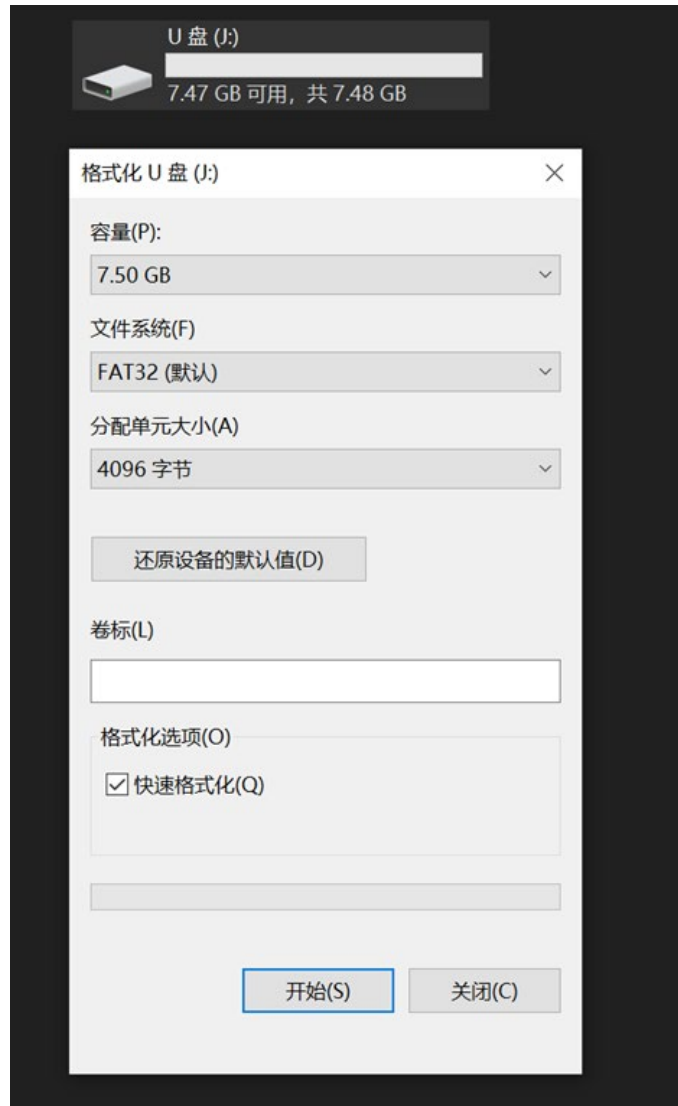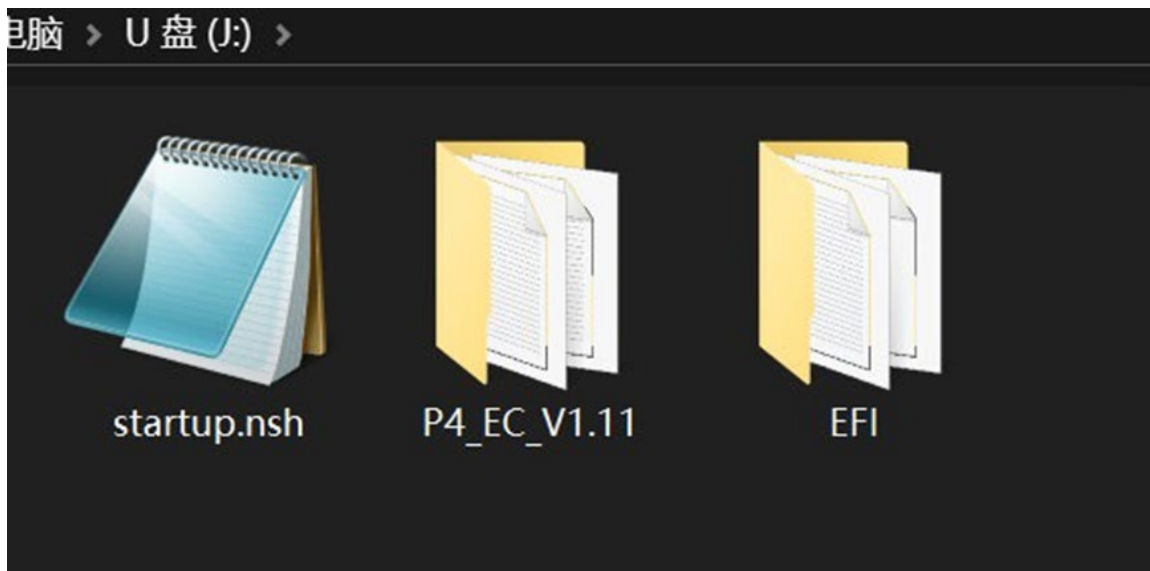
1、 解压缩 P4(hx370_hx365)_BIOS.V2.07_EC.V1.11.rar，它包含了 BIOS 固件和 EC 固件。
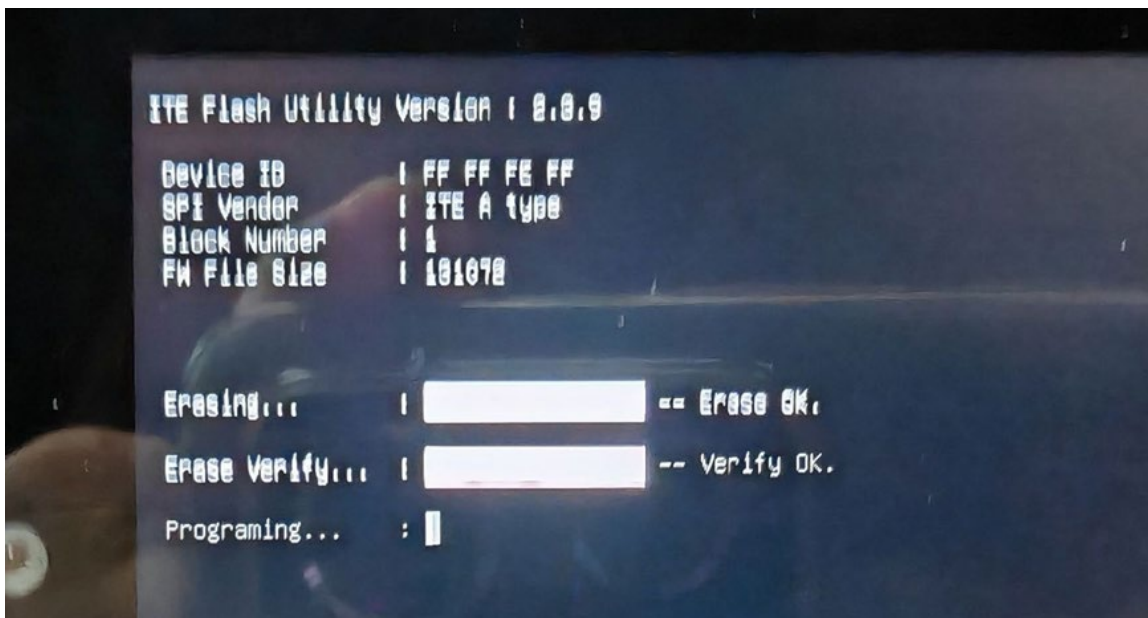
2、将 U 盘格式化为 FAT32 格式。

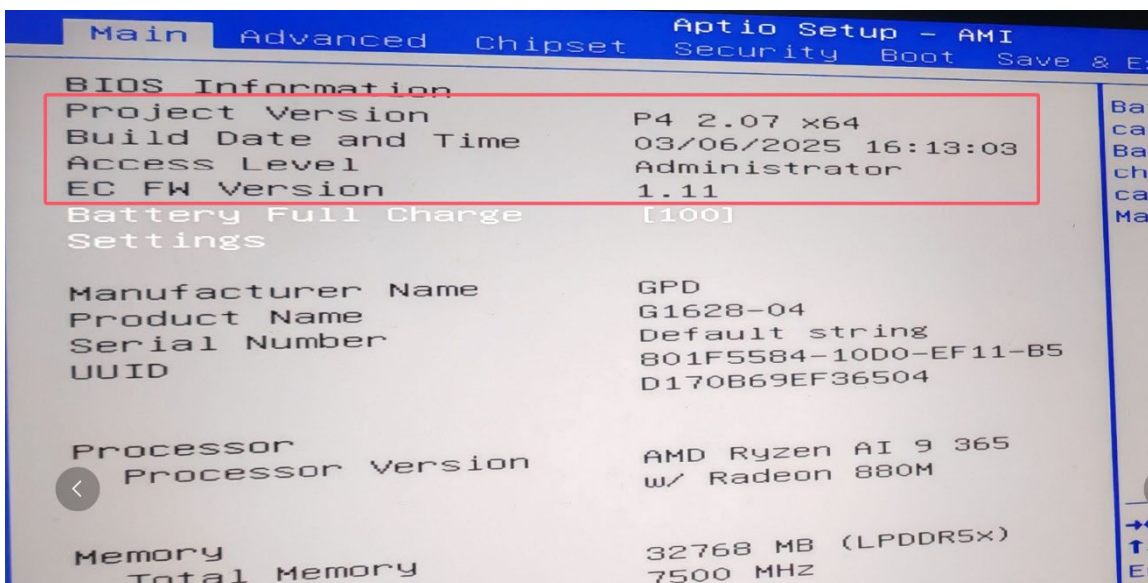3、进入 P4_EC.V1.11 文件夹，将以下文件和文件夹内容复制到 U 盘根目录

4、插入 U 盘，并重启系统，同时按 Fn+F7，选择快捷引导中的 U 盘名。
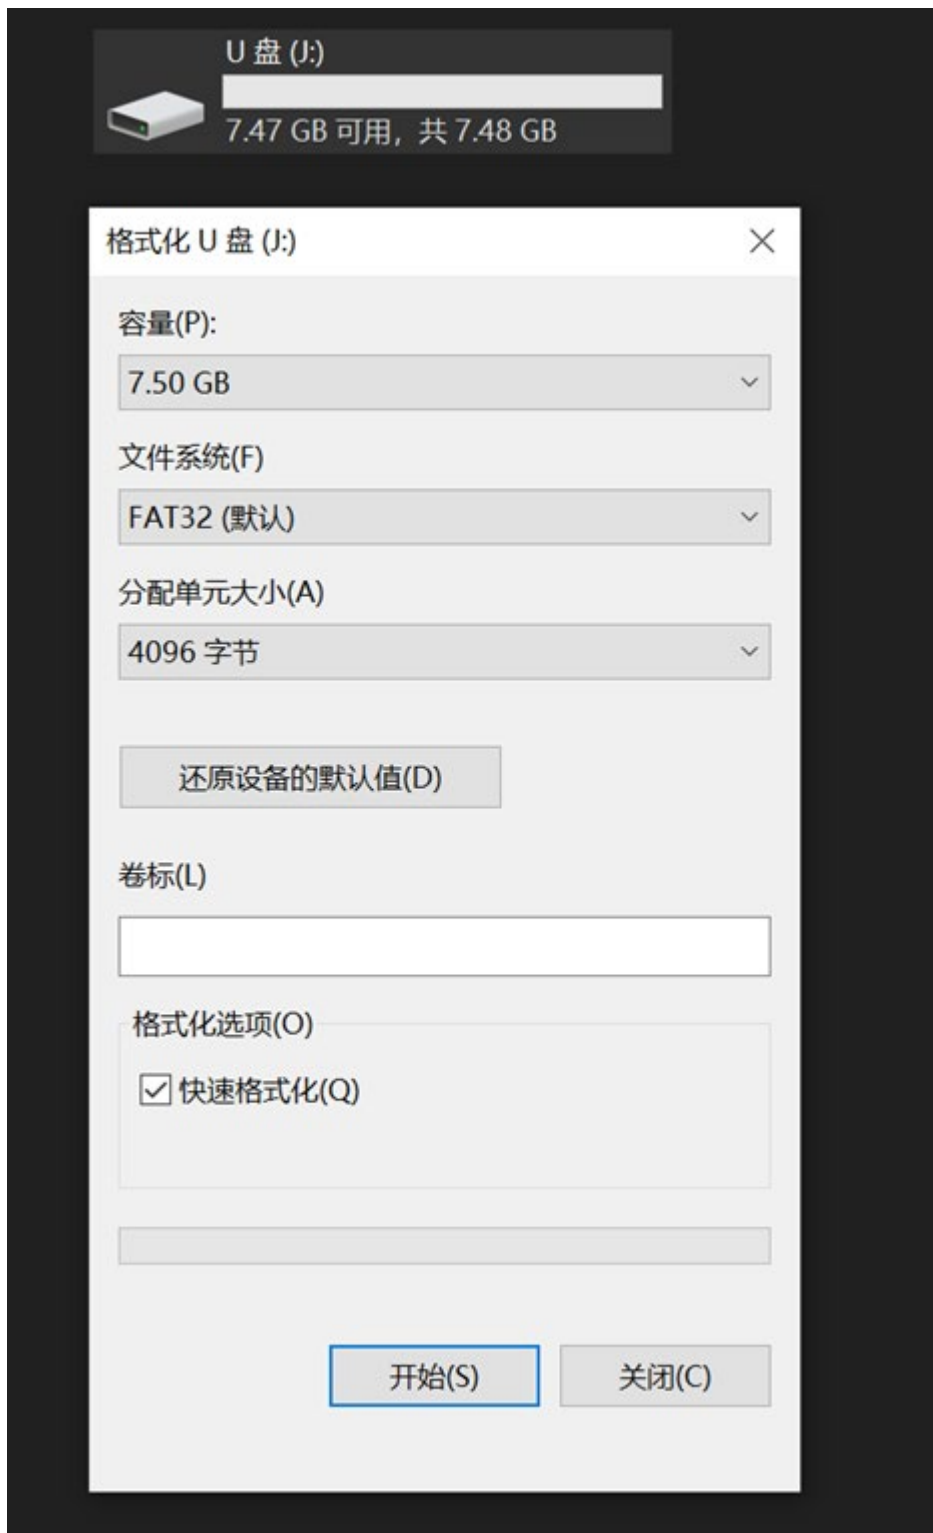

5、升级过程是自动执行的。升级结束后，会自动关机。

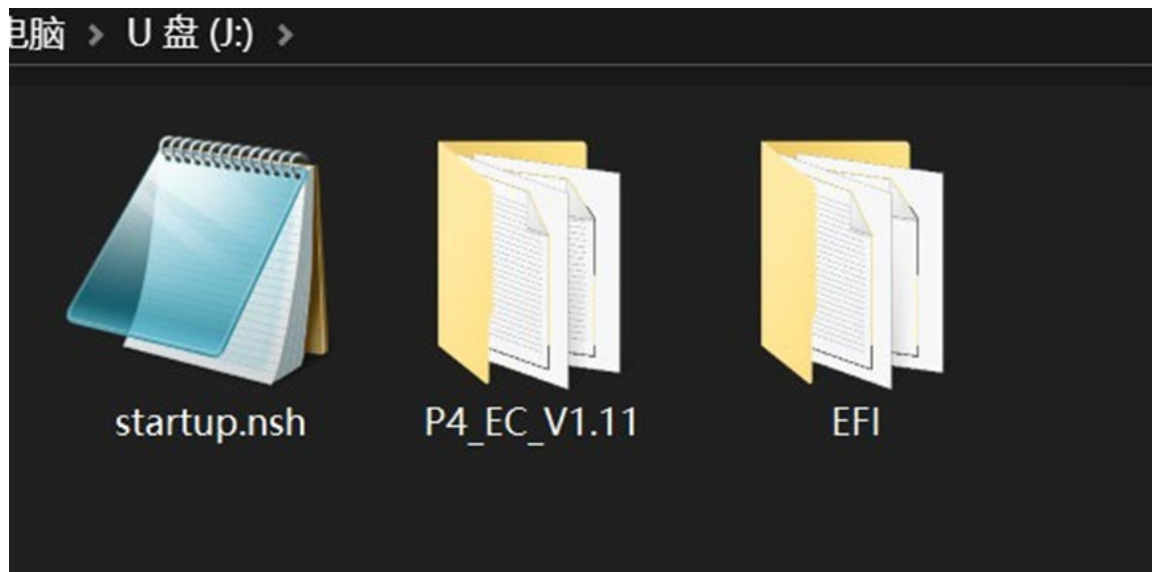6、手动开机，按 del 键进入 BIOS，确认 BIOS 版本是 2.07，EC 版本是 1.11，就证明升级成功。

EC Upgrade Instructions:

1. Unzip the P4(hx370_hx365)_BIOS.V2.07_EC.V1.11.rar file. It contains the BIOS firmware and EC firmware.
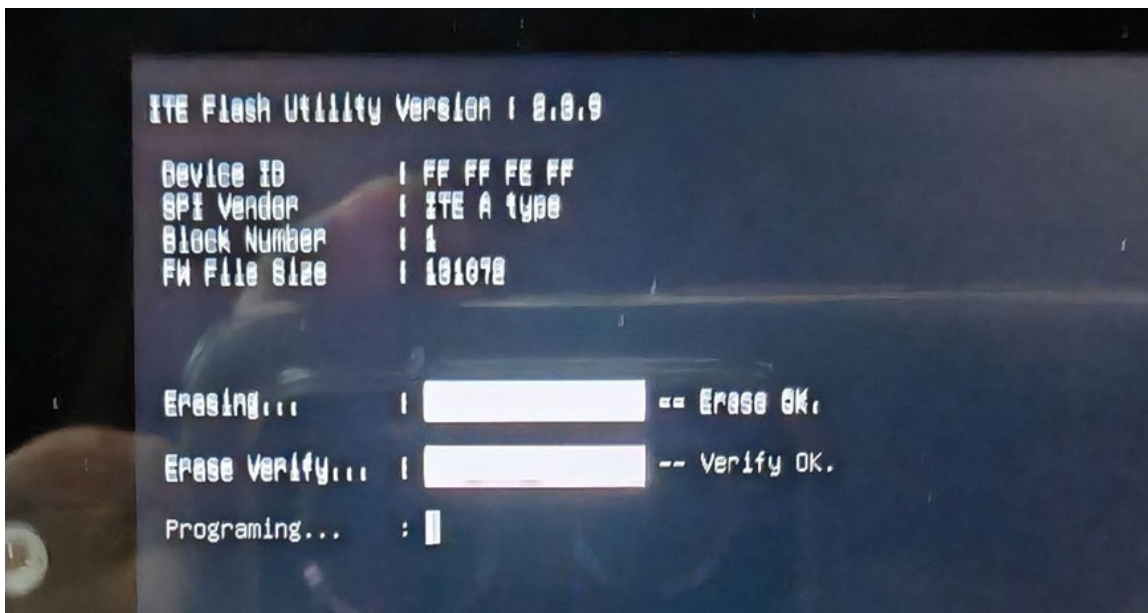
2. Format a USB drive to FAT32.

3. Enter the P4_EC.V1.11 folder and copy the following files and folder contents to the root directory of the USB drive.

电脑 > U 盘 (J:) >

startup.nsh   P4_EC_V1.11   EFI

4. Insert the USB drive and restart the system. Simultaneously press Fn+F7 to select your USB drive from the quick boot menu.

Please select boot device:

Windows Boot Manager (WD Blue SN580 2TB)
UEFI: Generic Flash Disk 8.07
UEFI: PXE IPv4 Realtek PCIe 2.5GBE Family Controller
UEFI: PXE IPv6 Realtek PCIe 2.5GBE Family Controller
Enter Setup

↑ and ↓ to move selection
ENTER to select boot device
ESC to boot using defaults

5. The upgrade process will execute automatically. After the upgrade is complete, the system will automatically shut down.

ITE Flash Utility Version : 8.8.9

Device ID   : FF FF FE FF
SPI Vendor   : ITE A type
Block Number   : 1
FW File Size   : 181072

Erasing... | | == Erase OK.

Erase Verify... | | -- Verify OK.

Programing...   : █

6、Manually power on the device and press the Del key to enter the BIOS. Confirm that the BIOS version is 2.07 and the EC version is 1.11 to verify a successful upgrade.