Exercise 1

In this course we will be working with the STM32F302R8 32-bit ARM microcontroller embedded on an STM Nucleo64 development board. Pin-out diagrams for the development board as well as the datasheet and reference manual for the microcontroller are available on DTU Inside. The STM32 is connected to an mbed expansion board which contains a number of peripherals we will be playing around with later on.

Getting Ready

Before starting the exercises, the following must be completed:

- 1. Install PuTTY 0.7.
- 2. Install EmBitz 1.11.
- 3. Install the USB Driver (run stlink winusb install.bat)
- 4. Connect the Nucleo STM32F302R8 board to your PC through a mini-USB cable.

PuTTY will be used for serial communication with the board, while programming and debugging will be done using EmBitz. Both pieces of software are available on DTU Inside in the course folder. The versions we provide might not be completely up to date, but it simplifies bug-fixing if all students use the same version which is known to work.


Exercise 1.1 - Getting Started with the STM32

With everything ready we will begin by setting up a project for the STM32 chip.

Begin by starting up EmBitz.

Note that this guide has been written for EmBitz 1.11, your mileage might vary if using other versions.

- Select File New Project...
- Select the STmicro-ARM template and click Go
- Click Next
- Choose a project title and file path to your liking
- Click Next
- Make sure the compiler is set to ARM GCC Compiler (EmBitz bare-metal) and click Next with everything else as default.
- Select Cortex M4 (F3xx F4xx) and click Next
- Select STM32f30x (F30x F31x) and click Next
- Choose STM32F302R8 for the processor, leave everything else as default and click Finish
- Click OK on the two pup-up windows (debug interface options and ST-link settings) to close them.

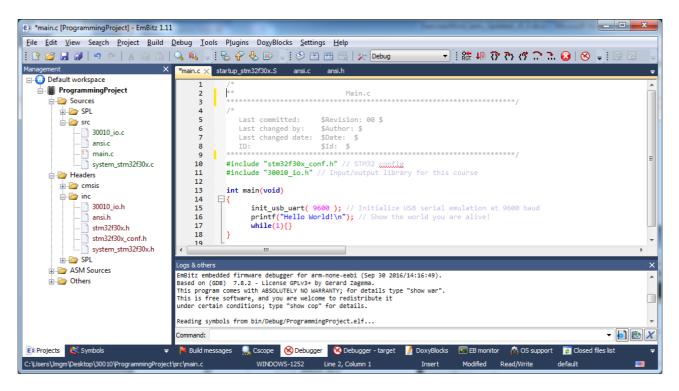

The project has now been created and we are ready to create our first program. In the sidebar to the left you should now see a list of folders pertaining to your project as shown in the figure above. If this is not the case, make sure that the Projects tab is selected instead of the Symbols tab in the bottom left. At the moment we are interested in the folder called Sources which contains two sub-folders called SPL and src. SPL holds the source files for a hardware library that will make things a bit easier down the line, but we can ignore it for now. The src folder contains the source files for our project and this is where we will be spending most of our time. At the moment src holds two auto-generated files: $system_stm32f32x.c$ which is used for chip configuration, and main.c which will hold our initial program.

• Open main.c

At the moment, all our program does is to load a header file containing some configuration parameters and start an endless loop. Let's change that!

• Change the contents of main.c to the following:

```
#include "stm32f30x_conf.h" // STM32 config
#include "30010_io.h" // Input/output library for this course

int main(void)
{
   init_usb_uart( 9600 ); // Initialize USB serial emulation at 9600 baud
   printf("Hello World!\n"); // Show the world you are alive!
   while(1){}
}
```

This first line includes $stm32f30x_conf.h$ - the same configuration library as before - which will simplify future hardware interfacing. The second line includes $30010_io.h$ which is a special IO library made for this course that enables us to get started quickly. Without it you would have to do a lot of work to configure the serial port before being able to communicate with the PC.

init_usb_uart(9600) initializes the USART2 port to 9600 baud, 8 data bits, no parity bit, and 1 stop bit. The built-in debugger has a USB serial emulator that is connected to USART2 thus enabling easy communication with the PC. The printf() function normally writes to stdout but has been overwritten to write to USART2 for convenience.

Contrary to most programs that run on a PC, we don't want the main function to ever return as this would do nothing but confuse the microcontroller. Therefore, an endless while loop is included to stop that from happening.

• Build the program by pressing F7 or clicking on the Build button shown in the figure below.



This will immediately fail!

This is because we first need to add 30010 io.c and 30010 io.h to the project.

- Download 30010_io.c and 30010_io.h from the DTU Inside folder and copy 30010_io.c to <PROJECT LOCATION>/src and 30010 io.h to <PROJECT LOCATION>/inc.
- Include these files one by one by right clicking on the project in the sidebar and selecting Add Files...
- After selecting each file, a window will pop up. Make sure both Debug and Release are check marked on this window.

Now we should be ready.

Build the program once again.

If everything was done correctly the program should now build without issue; We are ready for the next step!

Exercise 1.2 - Uploading Code to the STM32

To upload the program to the microcontroller simply press F8 or click the button marked "Start/Stop Debugger" in the previous figure.

Upload the program to the STM32.

This also starts the built-in debugger which pauses the program at the beginning. Pressing F5 or clicking on the button marked "Run" will un-pause the program and enable debugging. Alternatively, pressing F8 stops the debugger and allows the program to run freely. Both methods work for now and we will get back to debugging shortly.

• Start the program running on the microcontroller.

The program will now print "Hello world!" to the PC, but we can't actually see it yet. For that we need PuTTY.

- Start the Device Manager (Enhedshåndtering) on your PC.
- Under Ports (COM & LPT) should be an entry called STMicroelectronics STLink Virtual COM Port (COMx) where the "x" represents a number. Note this number down.
- Startup PuTTY.
- Select Serial for the connection type.
- Write COMx in the Serial line field where "x" is the number from before.
- Click Open.

A blank terminal window should now pop up. If you get a message saying that the selected serial port doesn't exist, make sure you wrote down the correct number from the device manager and try again. If it still doesn't work, try closing PuTTY and unplugging the USB cable and plugging it in again.

Press the Reset button on the STM32 development board.

Hopefully you should see "Hello World!" being written in the terminal. If this doesn't work you can try reuploading the program to the microcontroller. If that doesn't help you should go back and make sure you have followed the previous steps correctly.

Exercise 1.3 - Debugging with the STM32

The on-board debugger allows for line-by-line stepwise execution of the program while it is running on the microcontroller. The table below shows an overview of the available debugging commands which can be found in the Debug drop-down menu. Breakpoints can also be set while the debugger is not running.

Command	Description	Shortcut
Reset	Resets the program to the starting point.	
Run	Lets the program run freely.	F5
Stop	Pauses the program at whichever instruction is currently being	
	executed.	
Next Line	Executes on line at a time.	F10
Step Into	Steps into subroutines, otherwise works as Next Line.	F11
Step Out	Executes the rest of the subroutine, steps out and stops.	Shift+F11
Next Instruction	Executes the next machine code instruction (similar to Next Line).	Ctrl+F10
Step Instruction	Steps into machine code (similar to Step Into).	Ctrl+F11
Run to Cursor Line	Executes the program until it reaches the line the cursor is currently on.	F4
Insert Breakpoint	Inserts a breakpoint at the current line. When the program is set to run	F9
	it will pause every time it reaches a breakpoint.	
Remove All	Self-explanatory.	Ctrl+Shift+F9
Breakpoints		

Let's test the debugger out.

Replace the code of your main file with the following.

```
#include "stm32f30x conf.h" // STM32 config
#include "30010 io.h" // Input/output library for this course
int8 t power(int8 t a, int8 t exp) {
// calculates a^exp
    int8 t i, r = a;
    for (i = 1; i \le exp; i++)
        r *= a;
        return(r);
}
int main(void)
    {
        int8 t a;
        init usb uart( 9600 ); // Initialize USB serial at 9600 baud
        printf("\n\n x x^2 x^3 x^4\n")
        for (a = 0; a < 10; a++)
            printf("%8d%8d%8d\n",a, power(a, 2), power(a, 3), power(a, 4));
        while (1) { }
}
```

• Try to build the program.

It won't compile! Looks like there are some syntax errors...

Fix the syntax errors and try again.

You should now see a table with values of x; x^2 ; x^3 ; x^4 for x=1::10 printed in the terminal. But something is definitely not right! Some of the printed values are negative. Why is that?

Beyond the negative values, the numbers are also not calculated correctly as is evident from looking at 2², for example. Let's try using the debugger to fix the problem. In this simple case, you could probably fix the problems without the need of a debugger, but once things get a bit more complicated it will be EXTREMELY useful to know how to use it. So, please, follow the steps and use the debugger. It's for your own good!

- Start the debugger by pressing F8 or stop and restart it from the debugging menu if it is already running.
- Move the cursor to the first line in the power () function (the line starting with int8_t i) and select Debug Run to cursor line (F4).

It would be nice to know what is going on with i and r, so let's add them to a watch list.

- Select Debug Edit watches...
- Click Add and enter the name of the first variable, i.e., i.
- Do the same thing for r.
- Close the watch editor and open the watch list by selecting Debug Debugging Windows Watches.
- Step through the program using F10 until you reach the line after return (r);.

In the Watches window you can see the values of your watches written in red when they are changed and in black otherwise.

- Press F10 again to enter the main () function.
- Press F10 again. This will execute the power () function, including all the remaining calls to power ().
- Reset the simulation using Debug Reset.
- Place your cursor on the line containing init usb uart (9600); and press F4.
- Press F11 (step into). This will cause you to enter the init_usb_uart() function.
- Press Shift+F11 to get out of this strange place and return to the comfort of the main() function!
- Press F10 until the first two lines containing only zeros and ones have been written to the console.

You can use breakpoints to stop at a specific point in the code whenever it is executed. Let's do that for the power () function.

- Place the cursor on the line containing for $(i = 1; i \le \exp; i++)$ and press F9 to place a breakpoint. Alternatively, you can click on the margin just to the right of the line number.
- Press F5 to run the program until the breakpoint is reached.
- Use these debugging tools to see what happens with i and r and fix the problem!

Now you should be all set to start playing with the STM32F302R8 processor. Time to do some proper programming!

Exercise 1.4 - ANSI Escape Codes

We will be using ANSI escape codes to control the output in PuTTY and create elements of a graphical user interface (GUI). On DTU Inside you will find a list of ANSI escape codes as well as an overview of codepage 850 which will be the foundation of our GUI (ansi_codes.pdf). On DTU Inside in the folder for this exercise you will also find a C-file (ansi.c) containing three functions that can be used for changing the color of both background and text in PuTTY:

```
fgcolor (uint8_t fg) is used to change the color of characters. bgcolor (uint8_t bg) is used to change the color of the background. color (uint8_t fg, uint8_t bg) is used to change the colors of characters and the background.
```

The available colors are defined as:

Value	Color (fg+bg)	Value	Color (fg only)
0	Black	8	Dark Gray
1	Red	9	Light Red
2	Green	10	Light Green
3	Brown	11	Yellow
4	Blue	12	Light Blue
5	Purple	13	Light Purple
6	Cyan	14	Light Cyan
7	Light Gray	15	White

Before getting started we must configure PuTTY for codepage 850.

- Open PuTTY and configure the serial port as before, but don't click Open yet!
- Expand the "Window" section to the left and select "Translation".
- Under "Remote character set" write CP850.
- Click on "Session" on the left.
- In the "Saved Sessions" text field write "30010" or similar and click save. You can now easily reload the current settings in the future by pressing the "Load" button with "30010" highlighted.
- Click Open.

Now we can go to EmBitz and start programming! Using the three provided functions as inspiration as well as the list of ANSI functions, please do the following:

- Write a function that clears the terminal (you can call it clrscr()).
- Write a function that clears the rest of the current line (you can call it clreol()).
- Write a function that takes two parameters (x and y) and moves the cursor to position (x,y)(you can call it gotoxy (...)).
- Write a function that takes one parameter to turn on/off underline (you can call it underline (uint8 t on)).
- Write similar functions for blink and reverse colored text (you can call them blink (...) and inverse (...)).

Exercise 1.5 - Integer Number Representations

For the finale of exercise 1, we'll be taking a break from programming to do some exercises relating to different number representations.

Decimal	Unsigned	Signed-Magnitude	One's Complement	Two's Complement	Biased
Representation	Representation	Representation	Representation	Representation	Representation
+8	1000	1	1	1	1111
+7	0111	0111	0111	0111	1110
+6	0110	0110	0110	0110	1101
+5	0101	0101	0101	0101	1100
+4	0100	0100	0100	0100	1011
+3	0011	0011	0011	0011	1010
+2	0010	0010	0010	0010	1001
+1	0001	0001	0001	0001	1000
+0	0	0000	0000	0000	0111
-0	_	1000	1111	1	1
-1	_	1001	1110	1111	0110
-2	_	1010	1101	1110	0101
-3	_	1011	1100	1101	0100
-4	_	1100	1011	1100	0011
-5	_	1101	1010	1011	0010
-6	_	1110	1001	1010	0001
-7	_	1111	1000	1001	0000
-8			_	1000	_

Note: two's complement is calculated as one's complement plus 1.

1. Express the decimal numbers 56, 178, 1002, and 7586 in binary form using the Unsigned, Signed-magnitude, One's-complement, Two's-complement, and Biased representations. Also note the number of bits (8 or 16) needed for the representations.

	Unsigned	Signed-Magnitude	Ones Complement	Twos Complement	Biased
56	00111000 (8)	00111000 (8)	00111000 (8)	00111000 (8)	10110111 (8)
178					
1002					
7586					

- **2.** Add the numbers 56 + 178, and 1002 + 7586 using the binary representation. Verify that the binary result is equivalent to that found by computing the decimal summation.
- **3.** Express the decimal number -56, -178, -1002, and -7586 in binary form using the Unsigned, Signed-magnitude, One's-complement, Two's-complement, and Biased representations. Also note the number of bits (8 or 16) needed for the representations.

	Unsigned	Signed-Magnitude	Ones Complement	Twos Complement	Biased
-56		10111000 (8)	11000111 (8)	11001000 (8)	01000111 (8)
-178	_				
-1002	_				
-7586	_				

4. Calculate the negative of the numbers 56, 178, 1002, and 7586 in binary form (8 or 16 bits) using the two's-complement representations. I.e., invert every single bit and add binary one:

	56	178	1002	7586
Positive number	00111000 (8)			
One's Complement (neg.)	11000111 (8)			
+1	+1			
Two's Complement (neg.)	11001000 (8)			


5. Subtract two numbers by using the following "trick": A-B is the same as A+(-B). This means that if we invert B (by using two's complement), we can just add the two numbers A and (-B).

Exercise 2

With all these different basic control functions having been written earlier, it's time to put them to good use!

Exercise 2.1 - Drawing Windows

Write a function that takes two coordinates ((x1,y1) and (x2,y2)), a string, and a style parameter and draws a window in the terminal (you can call it window(..)). The windows could look as shown below, but you may make other variations if you like. At least two different styles should be implemented.

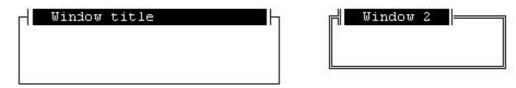

HINT: strings in C are simply character arrays terminated by the null character ($\setminus 0$). You can use that to find the length of a string.

• Using the provided functions as well as the ones you have made in Exercise 1, draw a number of windows in different shapes and colors in the terminal.


The functions that you have created to control the terminal using escape codes could potentially be used in many different programs. As such, it makes sense to put them all in a separate C-file and then importing that into the project. This not only makes maintaining the code base easier, it also makes the main-file of our program a lot easier on the eyes. One thing to keep in mind, however, is that if you use this new C-file in a lot of different programs and then modify it to suit a new project, old projects might not be compilable anymore. It is fairly common that a software update fixes one problem but introduces a host of new ones for this very reason.

Exercise 2.2 - Multiple Files

We'll start by creating a new C-file in EmBitz.

- Create a new empty file by selecting File New -Empty File (Ctrl+Shift+N).
- Click Yes when asked whether to include the new file into the current project.
- Save the file in <PROJECT LOCATION>/src and call it ansi.c.
- Create a similar file in <PROJECT LOCATION>/inc and call it ansi.h.

When you're done your program structure should look like the figure on the right.

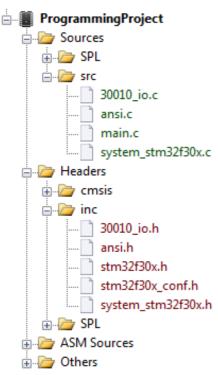

The ansi.c should contain the functions that you've created to control the terminal.

• Copy all your ANSI related functions to ansi.c (remember any necessary #includes).

The header file, ansi.h, should contain types, constants, and function declarations related to ANSI based terminal control. As an example, for the supplied color functions it would look like:

```
void fgcolor(uint8_t foreground);
void bgcolor(uint8_t background);
void color(uint8 t foreground, uint8 t background);
```

Sometimes it is necessary to include the same header file multiple times which can slow down compilation times as well as cause errors in some instances. These issues can be avoided by using the following template:

```
#include <...>; // Whatever needs to be included

#ifndef _ANSI_H_
#define _ANSI_H_

#define ... // Whatever needs to be defined

void addWhateverFunctionsYouNeed( type parameter );

#endif /* ANSI H */
```

This piece of code tells the compiler to only include the function definitions once in the project. It is good common practice to always follow this example when creating new header files and it will make a significant difference when working with large projects. If you've been following along closely you will notice that the library that was included in Exercise 1 (30010_io.h and 30010_io.c) follows the same structure of having a source and a header file.

Optionally, you can now spend some time writing functions that moves the cursor up, down, left, and right. It will be quite useful later on! Otherwise, it is time to do some exercises related to bit manipulation.

Exercise 2.3 - Bit Manipulation Questions

This exercise is meant for training the use of the hexadecimal and binary number systems and should therefore be done individually.

0x00 What is 0x14 in binary?	
0x01 What is 0xE6 in binary?	
0x02 What is 0x58 in binary?	
0x03 What is 10110111b in hexadecimal?	
0x04 What is 10011111b in hexadecimal?	
0x05 What is 00111101b in hexadecimal?	-
0x06 How do you turn ON bits 4 and 7 in a byte?	
0x07 How do you turn OFF bits 2 and 5 in a byte?	
0x08 How do you write -1 in binary, assuming size of a byte?	
0x09 How do you write -2 in binary, assuming size of a byte?	
0x0A What is 00001000b in decimal, assuming unsigned notation?	
0x0B What is 00001000b in decimal, assuming signed notation?	
0x0C What is 11111110b in decimal, assuming unsigned notation?	
0x0D What is 11111110b in decimal, assuming signed notation?	
0x0E What is the highest value you can store in a signed byte?	
(write it in decimal and binary notation)	
0x0F What is the highest value you can store in a unsigned byte?	
(write it in decimal and binary notation)	
0x10 What is the lowest value you can store in a signed byte?	
(write it in decimal and binary notation)	
0x11 What is the lowest value you can store in a unsigned byte? (write it in decimal and binary notation)	
0x12 How do you tell if a signed byte is positive or negative?	
0x13 How do you change the sign of a binary number?	
0x14 How do you multiply a binary number by two?	
0x15 How do you divide a binary number by two?	
0x16 When dividing by two, how is rounding performed?	