AWaDH
Agriculture and Water
Technology Development Hub

EXPERIMENT – 1.4

BREATHING LED WITH DEV BOARD/NODE

What will you learn from this module:

Breathe the led using Development Kit/Node.

Requirements:

- nRF connect desktop software.
- nRF Command line tools.
- Visual studio code.
- USB cable.
- nRF52832 Development Board/Node.
- WS2812 Ring Led.

Prerequisites:

- Basic knowledge of C/C++
- Basic knowledge of communication protocol.
- Basic project setup.

Setup and Configuration:

- Open VS Code and go to **Browse samples [1]** and search **WS2812 [2]**.

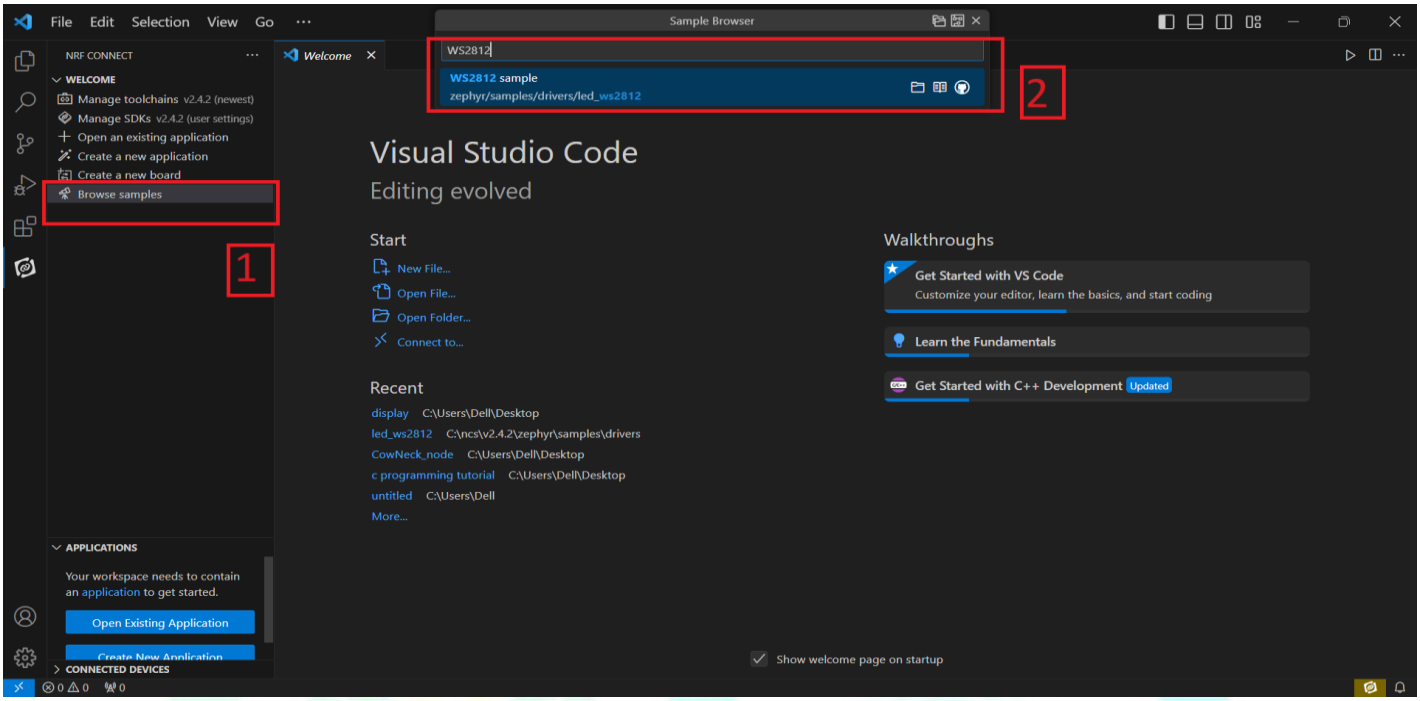

- Click on **Create new build configuration [1]**. Here you can change the board version, if you are using nRF52832, then select **nrf52dk_nrf52832 [2]** or you can change from dropdown menu for another version like nRF52833 etc.
- After that click on the Configuration and select **prj.conf [3]** from dropdown menu and then **click on the Build Configuration [4]**.

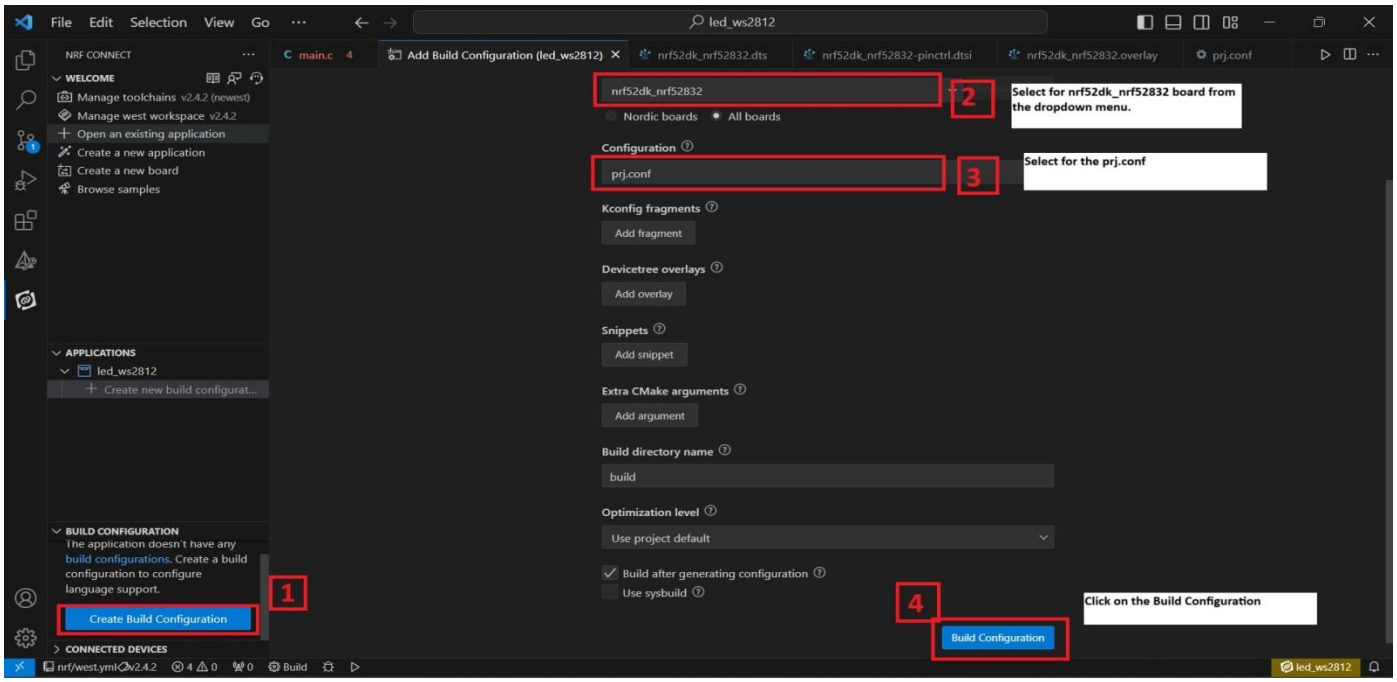

- Go to **source file [2]**, click **source file** > click on **Application** > click on **src** > click on **main.c [3]**.
- After Click on **main.c** file and you will see the code on your screen**[4]**.

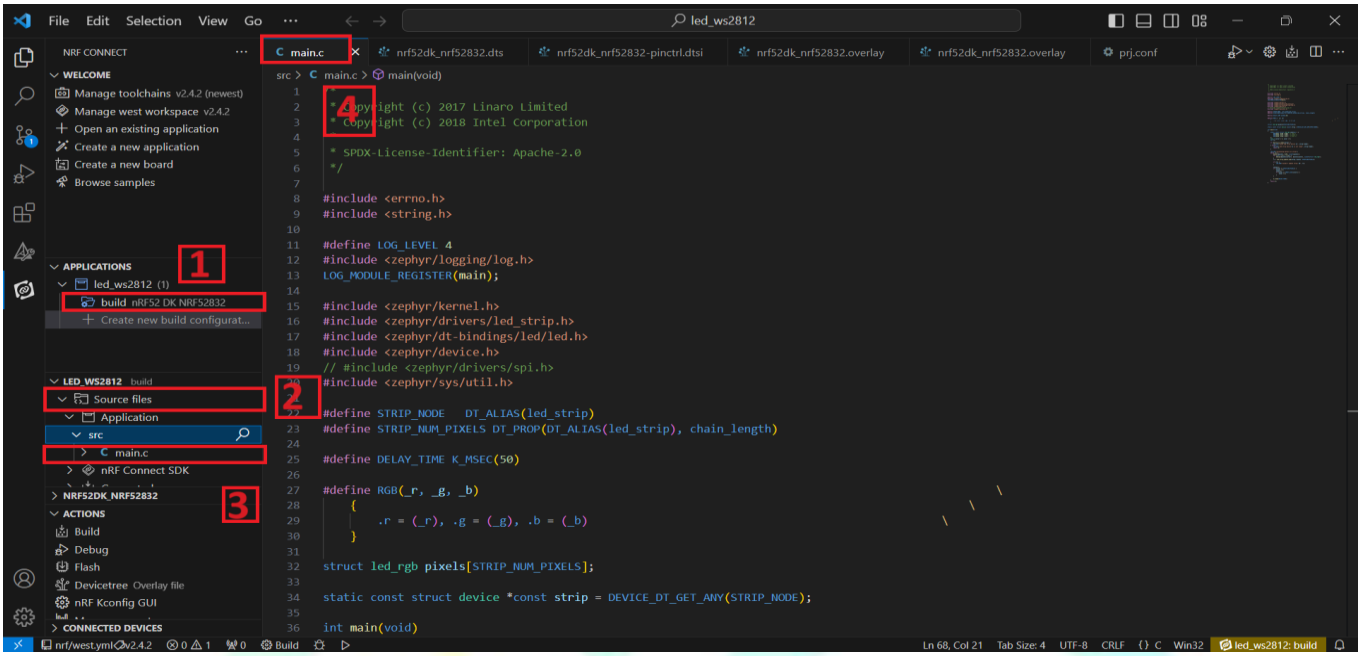

- To configure prj.conf click on the **Config files [1]** > click on the **Kconfig** > click on the **prj.conf[2]** and the **prj** configuration will appear on the screen **[3]** as shown in figure.

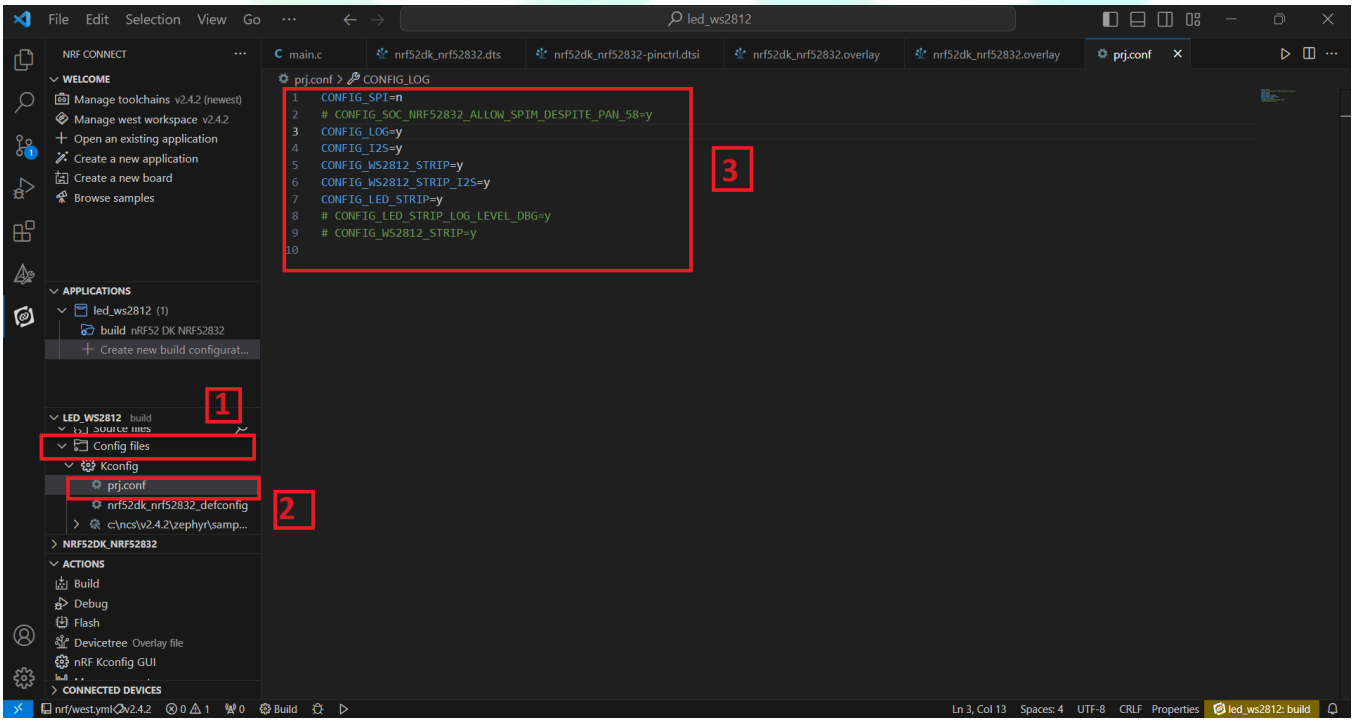

- For configure WS2812 led you need to enable i2s in overlay files, click on the **Config files [1]** > click on the **Devicetree [2]** > click on the **nrf52dk_nrf52832.overlay [3]**.
- The overlay file will appear on the screen **[4]** as shown in the picture given below.

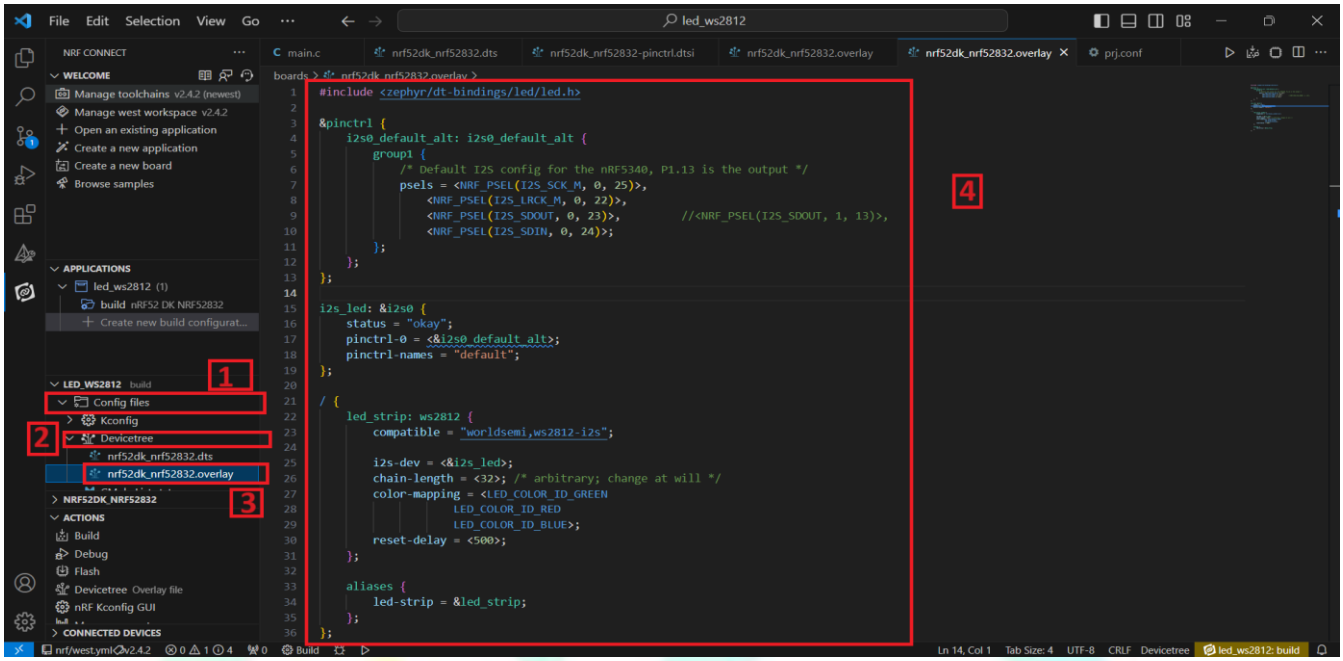

- Click on **Build [1]** configuration again and check the **CONNECTED DEVICES [2].**
- If device id is visible, then **Flash [3]** the code in Development Kit.
- If **flashed successfully [4]** message is displayed on serial terminal, then flash process is complete.

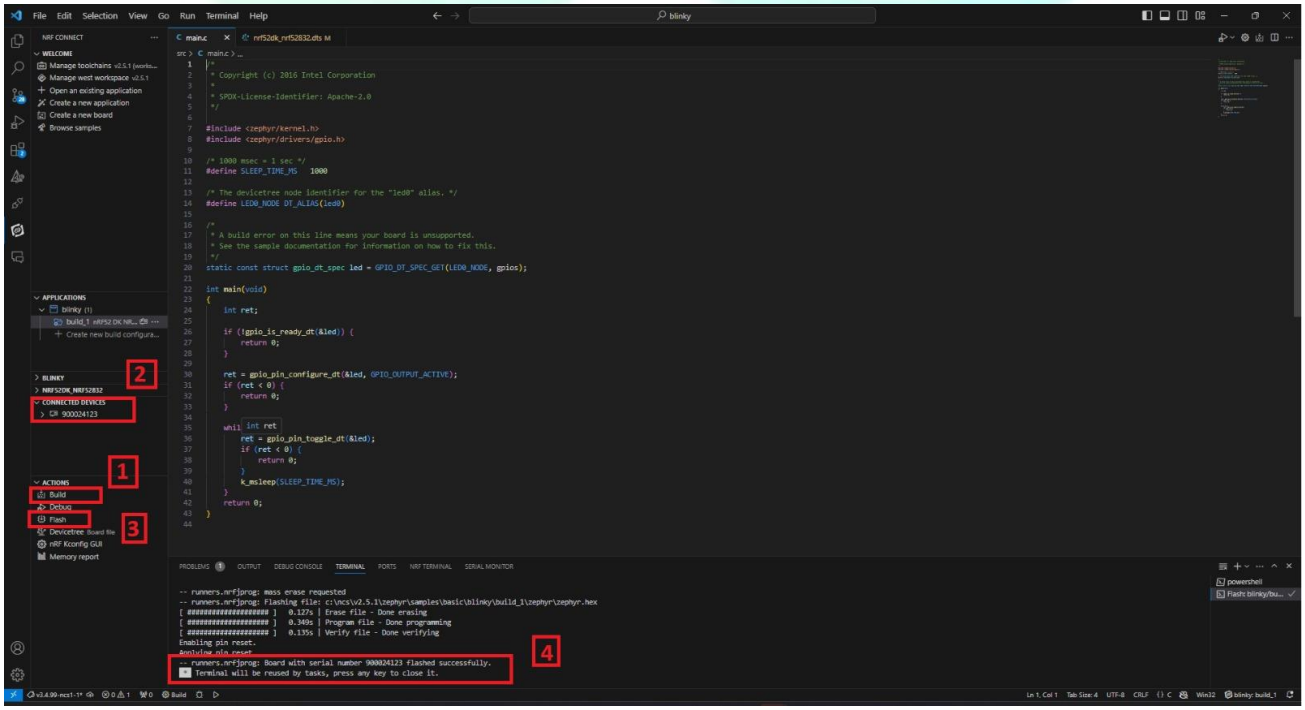

❖ PIN CONFIGURATION OF WS2812 LED WITH THE BOARD

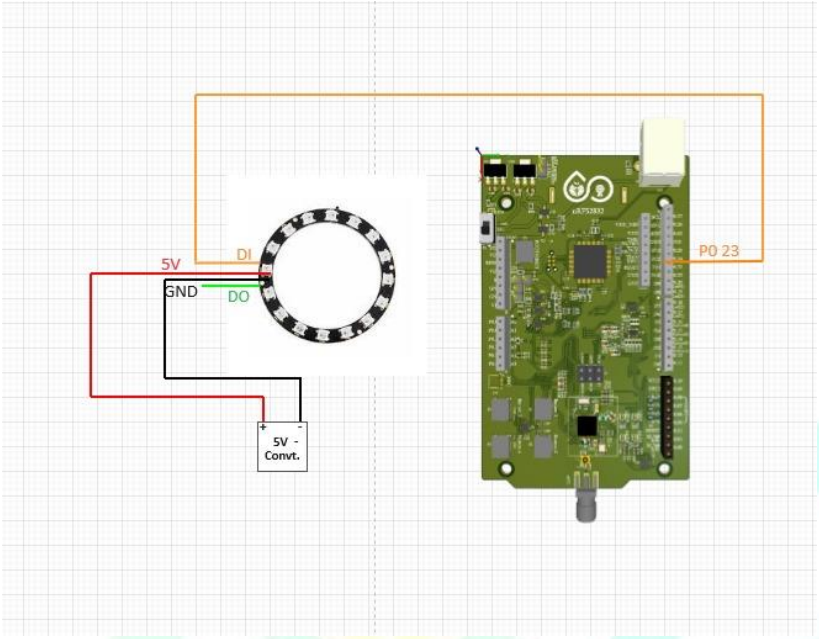

LED Pins -> Board Pins
DI -> PO.23
5V -> +ve(External 5V conv.)
GND -> -ve(External 5V conv.)

❖ OUTPUT

A “breathing LED” is a phenomenon where an LED’s brightness smoothly changes from dark to bright and back to dark, continuing to do so and giving the illusion of led “breathing”.