Data Transmission

Data Transmission

Terminology (1)

- Transmitter
- Receiver
- Medium
 - —Guided medium
 - e.g. twisted pair, optical fiber
 - —Unguided medium
 - e.g. air, water, vacuum

Terminology (2)

- Direct link
 - —No intermediate devices
- Point-to-point
 - —Direct link
 - —Only 2 devices share link
- Multi-point
 - —More than two devices share the link


Terminology (3)


- Simplex
 - —One direction
 - e.g. Television
- Half duplex
 - —Either direction, but only one way at a time
 - e.g. police radio
- Full duplex
 - —Both directions at the same time
 - e.g. telephone

Frequency, Spectrum and Bandwidth


- Time domain concepts
 - —Analog signal
 - Various in a smooth way over time
 - —Digital signal
 - Maintains a constant level then changes to another constant level
 - —Periodic signal
 - Pattern repeated over time
 - —Aperiodic signal
 - Pattern not repeated over time

Analogue & Digital Signals

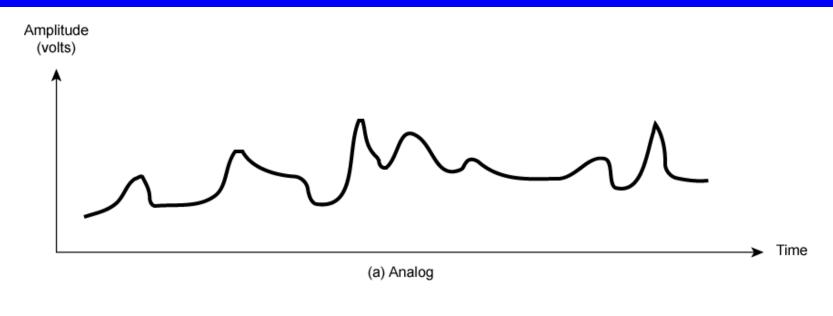


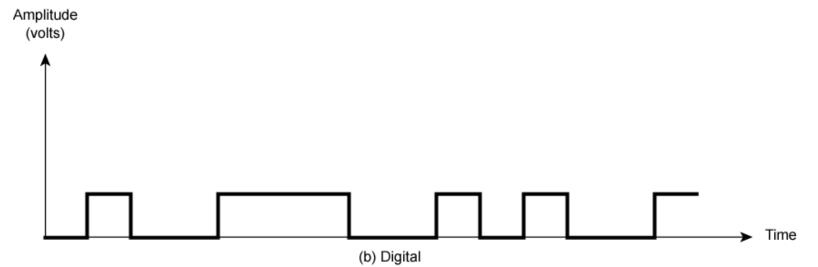

Periodic Signals

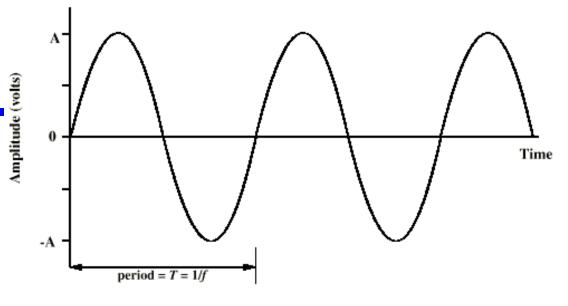



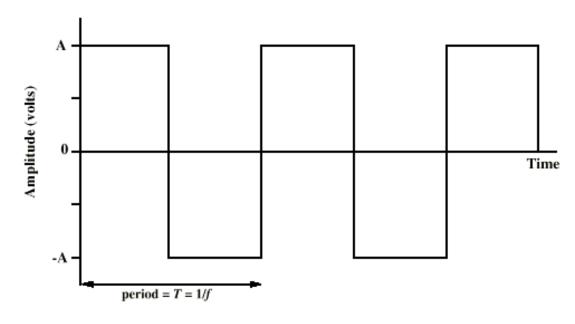



(b) Square wave


Sine Wave


- Peak Amplitude (A)
 - —maximum strength of signal
 - -volts
- Frequency (f)
 - —Rate of change of signal
 - -Hertz (Hz) or cycles per second
 - —Period = time for one repetition (T)
 - -T = 1/f
- Phase (φ)
 - —Relative position in time

Varying Sine Waves $s(t) = A \sin(2\pi ft + \Phi)$

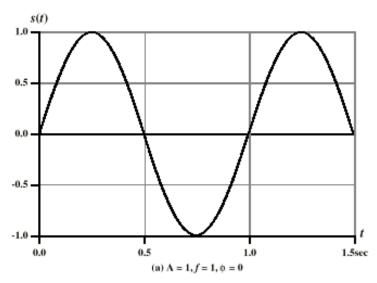

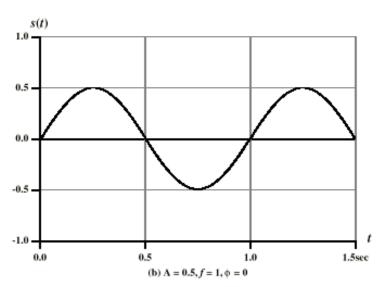

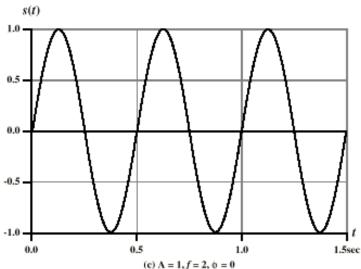

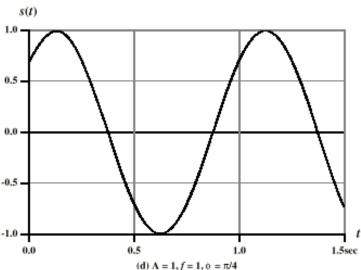

Wavelength

- Distance occupied by one cycle
- Distance between two points of corresponding phase in two consecutive cycles
- \(\lambda\)
- Assuming signal velocity v

$$-\lambda = \nu T$$


$$-\lambda f = V$$

 $-c = 3*10^8 \text{ ms}^{-1} \text{ (speed of light in free space)}$

Frequency Domain Concepts


- Signal usually made up of many frequencies
- Components are sine waves
- Can be shown (Fourier analysis) that any signal is made up of component sine waves
- Can plot frequency domain functions

Addition of Frequency Components (T=1/f)

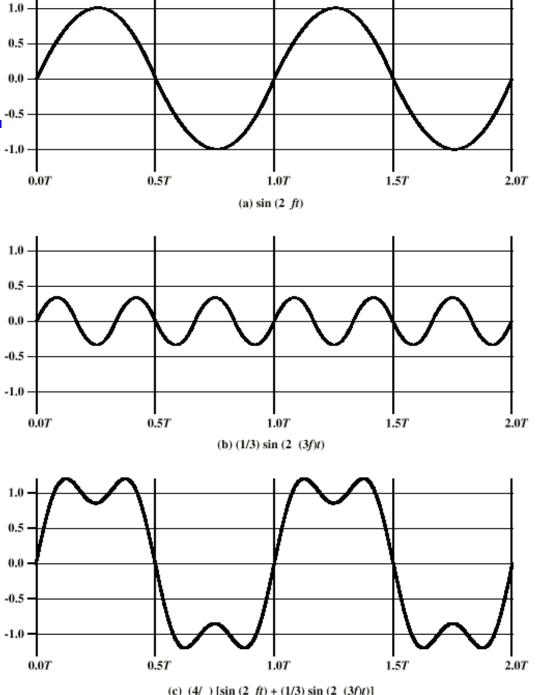

(c) $(4/) [\sin (2 \ ft) + (1/3) \sin (2 \ (3f)t)]$


Frequency Domain Representations

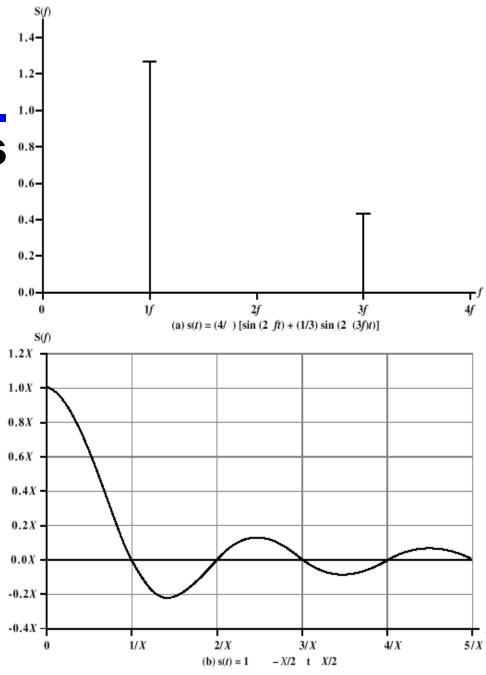


Spectrum & Bandwidth

- Spectrum
 - —range of frequencies contained in signal
- Absolute bandwidth
 - —width of spectrum
- Effective bandwidth
 - —Often just bandwidth
 - Narrow band of frequencies containing most of the energy

Signal with DC Component

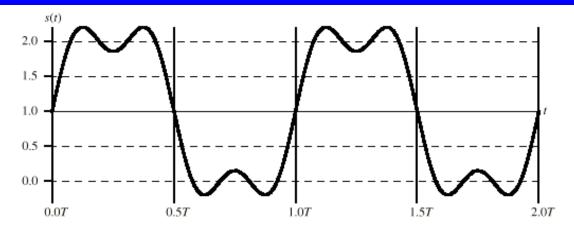

(a) $s(t) = 1 + (4/) [\sin(2 ft) + (1/3) \sin(2 (3f)t)]$

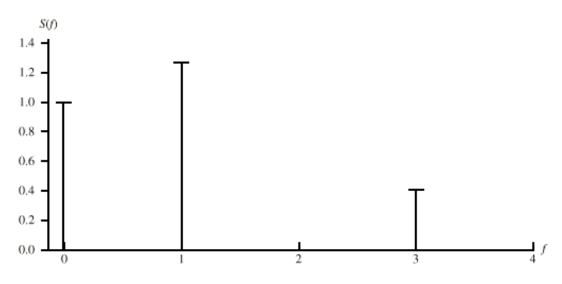

Data Rate and Bandwidth

- Any transmission system has a limited band of frequencies
- This limits the data rate that can be carried


Analog and Digital Data Transmission

- Data
 - Entities that convey meaning
- Signals
 - -Electric or electromagnetic representations of data
- Transmission
 - Communication of data by propagation and processing of signals

Analog and Digital Data

- Analog
 - —Continuous values within some interval
 - -e.g. sound, video
- Digital
 - —Discrete values
 - —e.g. text, integers

Acoustic Spectrum (Analog)

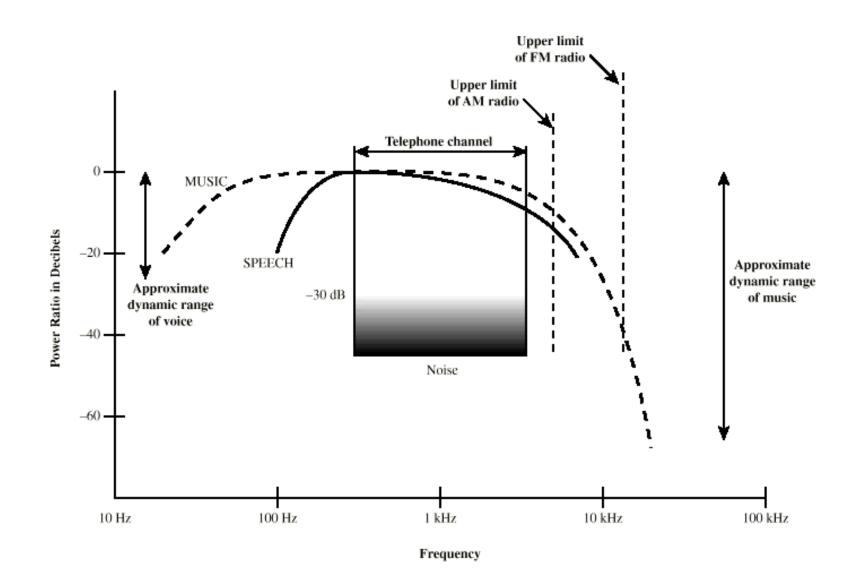


Analog and Digital Signals

- Means by which data are propagated
- Analog
 - —Continuously variable
 - —Various media
 - wire, fiber optic, space
 - —Speech bandwidth 100Hz to 7kHz
 - —Telephone bandwidth 300Hz to 3400Hz
 - —Video bandwidth 4MHz
- Digital
 - —Use two DC components

Advantages & Disadvantages of Digital

- Cheaper
- Less susceptible to noise
- Greater attenuation
 - —Pulses become rounded and smaller
 - —Leads to loss of information

Attenuation of Digital Signals

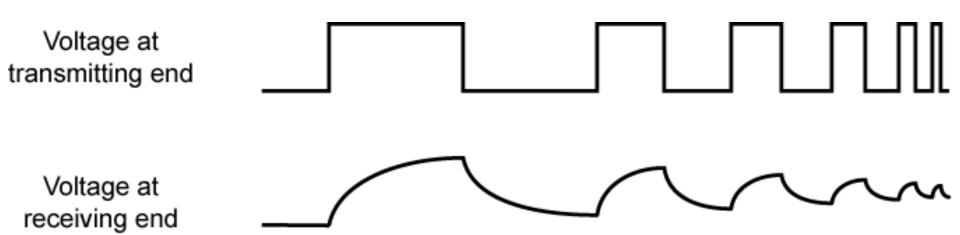

Components of Speech

- Frequency range (of hearing) 20Hz-20kHz
 - —Speech 100Hz-7kHz
- Easily converted into electromagnetic signal for transmission
- Sound frequencies with varying volume converted into electromagnetic frequencies with varying voltage
- Limit frequency range for voice channel
 - -300-3400Hz

Conversion of Voice Input into Analog Signal




In this graph of a typical analog signal, the variations in amplitude and frequency convey the gradations of loudness and pitch in speech or music. Similar signals are used to transmit television pictures, but at much higher frequencies.

Binary Digital Data

- From computer terminals etc.
- Two dc components
- Bandwidth depends on data rate

Conversion of PC Input to Digital Signal



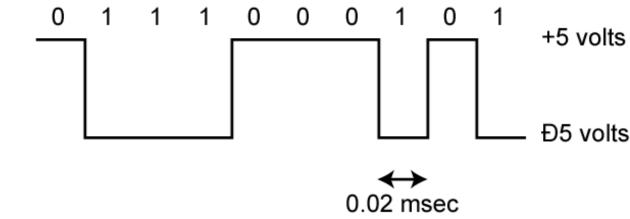


User input at a PC is converted into a stream of binary digits (1s and 0s). In this graph of a typical digital signal, binary one is represented by Đ5 volts and binary zero is represented by +5 volts. The signal for each bit has a duration of 0.02 msec, giving a data rate of 50,000 bits per second (50 kbps).


Data and Signals

- Usually use digital signals for digital data and analog signals for analog data
- Can use analog signal to carry digital data
 - —Modem
- Can use digital signal to carry analog data
 - —Compact Disc audio

Analog Signals Carrying Analog and Digital Data

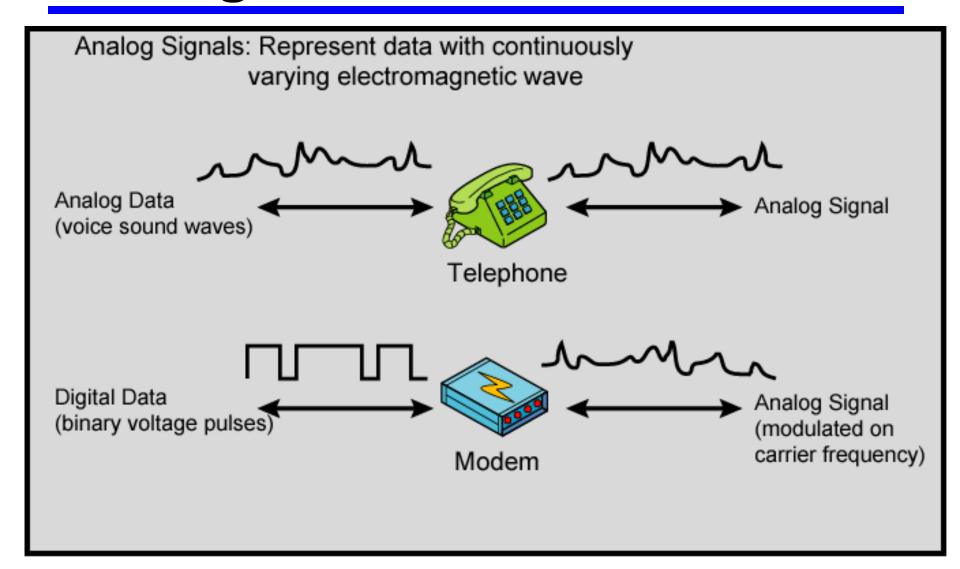

Digital Signals Carrying Analog and Digital Data

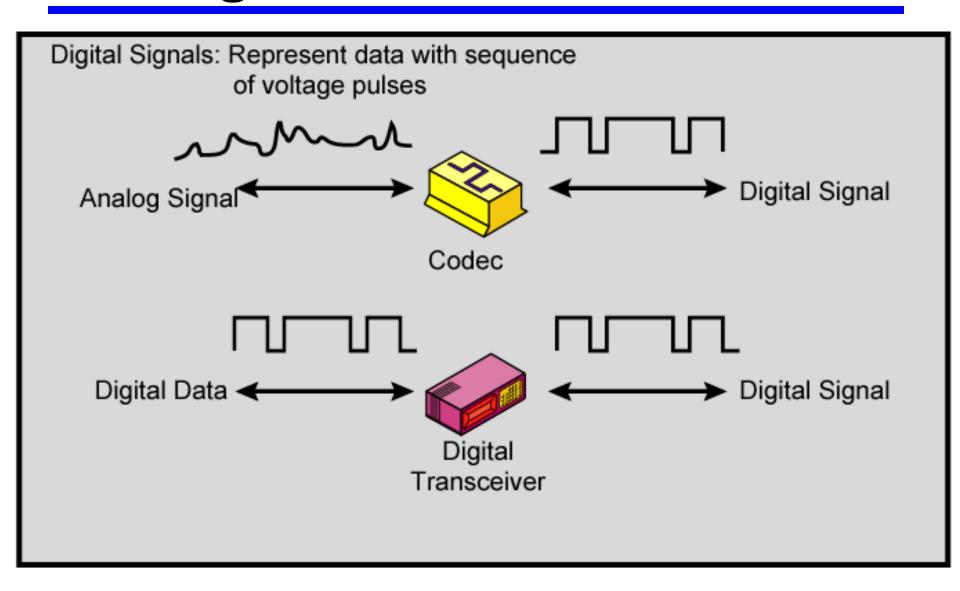

Analog Transmission

- Analog signal transmitted without regard to content
- May be analog or digital data
- Attenuated over distance
- Use amplifiers to boost signal
- Also amplifies noise

Digital Transmission

- Concerned with content
- Repeaters used
- Repeater receives signal
- Extracts bit pattern
- Retransmits
- Attenuation is overcome
- Noise is not amplified

Advantages of Digital Transmission

- Digital technology
 - Low cost LSI/VLSI technology
- Data integrity
 - Longer distances over lower quality lines
- Capacity utilization
 - High bandwidth links economical
 - High degree of multiplexing easier with digital techniques
- Security & Privacy
 - Encryption
- Integration
 - Can treat analog and digital data similarly

Transmission Impairments

- Signal received may differ from signal transmitted
- Analog degradation of signal quality
- Digital bit errors
- Caused by
 - —Attenuation and attenuation distortion
 - —Delay distortion
 - —Noise

Attenuation

- Signal strength falls off with distance
- Depends on medium
- Received signal strength:
 - —must be enough to be detected
 - —must be sufficiently higher than noise to be received without error
- Attenuation is an increasing function of frequency

Delay Distortion

- Only in guided media
- Propagation velocity varies with frequency

Noise (1)

- Additional signals inserted between transmitter and receiver
- Thermal
 - —Due to thermal agitation of electrons
 - —Uniformly distributed
 - —White noise
- Intermodulation
 - Signals that are the sum and difference of original frequencies sharing a medium

Noise (2)

- Crosstalk
 - —A signal from one line is picked up by another
- Impulse
 - —Irregular pulses or spikes
 - —e.g. External electromagnetic interference
 - —Short duration
 - —High amplitude

Channel Capacity

- Data rate
 - —In bits per second
 - —Rate at which data can be communicated
- Bandwidth
 - —In cycles per second of Hertz
 - —Constrained by transmitter and medium

Nyquist Bandwidth

- If rate of signal transmission is 2B then signal with frequencies no greater than B is sufficient to carry signal rate
- Given bandwidth B, highest signal rate is 2B
- Given binary signal, data rate supported by B Hz is 2B bps
- Can be increased by using M signal levels
- C= 2B log₂M