

#### COMPUTER ORGANIZATION AND DE

The Hardware/Software Interface



## **Chapter 1**


# Computer Abstractions and Technology

## **The Computer Revolution**

- Progress in computer technology
  - Underpinned by Moore's Law
- Makes novel applications feasible
  - Computers in automobiles
  - Cell phones
  - Human genome project
  - World Wide Web
  - Search Engines
- Computers are pervasive



# Classes of Computers Server computer




- Personal computers
  - General purpose, variety of software
  - Subject to cost/performance tradeoff
- Server computers
  - Network based
  - High capacity, performance, reliability
  - Range from small servers to building sized

## **Classes of Computers**

- Supercomputers
  - High-end scientific and engineering calculations
  - Highest capability but represent a small fraction of the overall computer market
- Embedded computers
  - Hidden as components of systems
  - Stringent power/performance/cost constraints

#### The PostPC Era

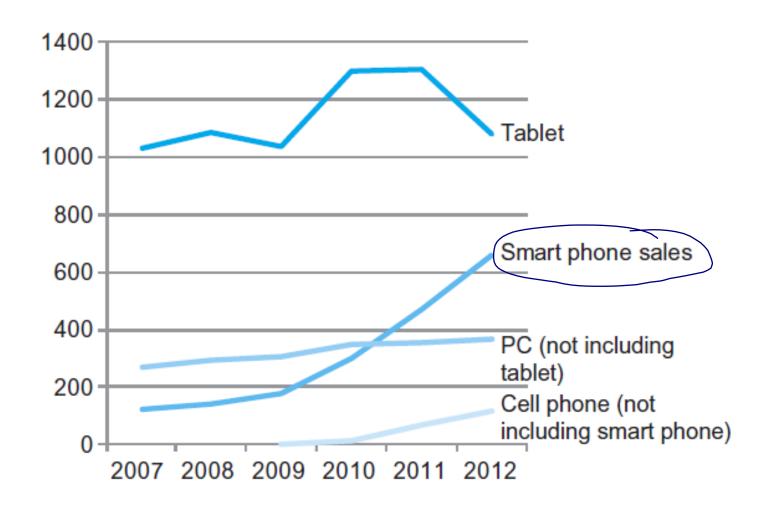



#### The PostPC Era

- Personal Mobile Device (PMD)
  - Battery operated
  - Connects to the Internet
  - Hundreds of dollars
  - Smart phones, tablets, electronic glasses
- Cloud computing
  - Warehouse Scale Computers (WSC)
  - Software as a Service (SaaS)
  - Portion of software run on a PMD and a portion run in the Cloud
  - Amazon and Google



## What You Will Learn

- How programs are translated into the machine language
  - And how the hardware executes them
- The hardware/software interface
- What determines program performance
  - And how it can be improved
- How hardware designers improve performance
- What is parallel processing



## **Understanding Performance**

- Algorithm
  - Determines number of operations executed
- Programming language, compiler, architecture
  - Determine number of machine instructions executed per operation
- Processor and memory system
  - Determine how fast instructions are executed
- I/O system (including OS)
  - Determines how fast I/O operations are executed

## **Eight Great Ideas**

Design for *Moore's Law* 



- Use abstraction to simplify design
- Make the *common case fast*



- Performance via pipelining
- Performance via prediction
- Hierarchy of memories
- **Dependability** via redundancy




















## **Below Your Program**

- Application software
  - Written in high-level language
- System software

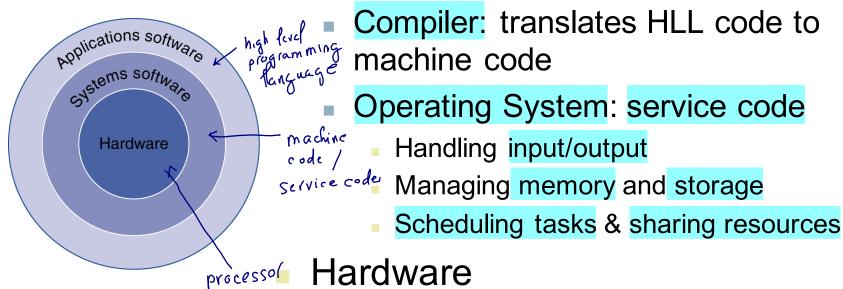

Processor, memory, I/O controllers




## **Levels of Program Code**

- High-level language
  - Level of abstraction closer to problem domain
  - Provides for productivity and portability
- Assembly language
  - Textual representation of instructions
- Hardware representation
  - Binary digits (bits)
  - Encoded instructions and data

High-level language program (in C)

Assembly language program (for MIPS)

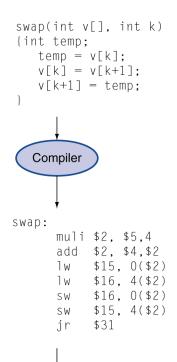




Assembler




## Components of a Computer

#### **The BIG Picture**





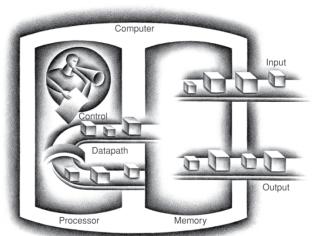

- Same components for all kinds of computer
  - Desktop, server, embedded
- Input/output includes
  - User-interface devices
    - Display, keyboard, mouse
  - Storage devices
    - Hard disk, CD/DVD, flash
  - Network adapters
    - For communicating with other computers




#### **Touchscreen**


- PostPC device
- Supersedes keyboard and mouse
- Resistive and Capacitive types
  - Most tablets, smart phones use capacitive
  - Capacitive allows multiple touches simultaneously




## Through the Looking Glass

- LCD screen: picture elements (pixels)
  - Mirrors content of frame buffer memory

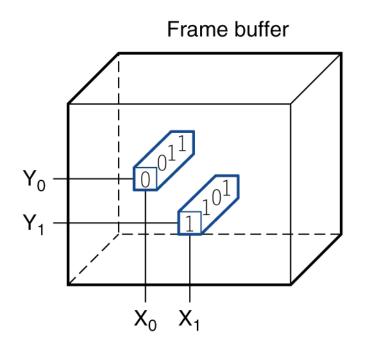

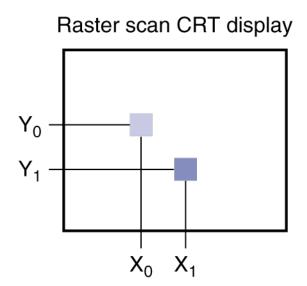

# **Opening the Box**

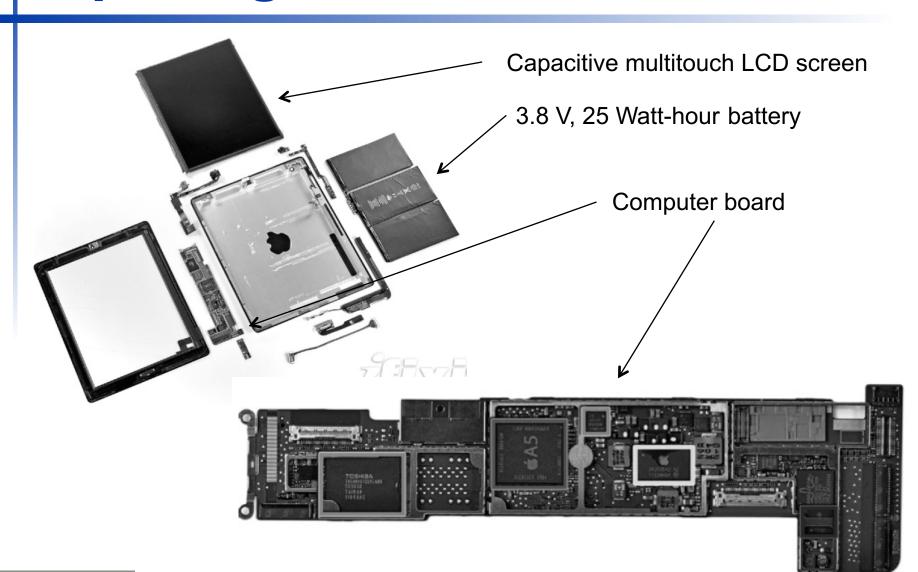


## Inside the Processor (CPU)

- Datapath: performs operations on data
- Control: sequences datapath, memory, ...
- Cache memory
  - Small fast SRAM memory for immediate access to data

#### Inside the Processor

Apple A5

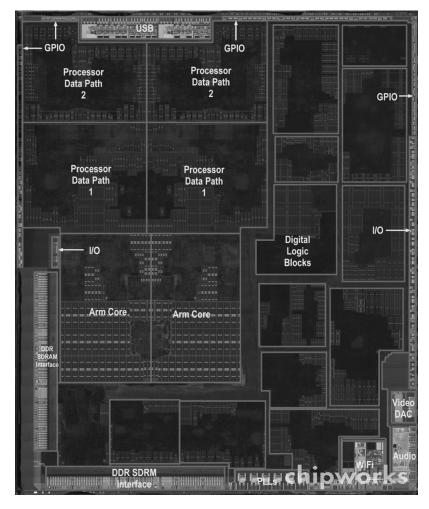



### **Abstractions**

#### **The BIG Picture**

- Abstraction helps us deal with complexity
  - Hide lower-level detail
- Instruction set architecture (ISA)
  - The hardware/software interface
- Application binary interface
  - The ISA plus system software interface
- Implementation
  - The details underlying and interface



#### A Safe Place for Data

- Volatile main memory
  - Loses instructions and data when power off
- Non-volatile secondary memory
  - Magnetic disk
  - Flash memory
  - Optical disk (CDROM, DVD)









#### **Networks**


- Communication, resource sharing, nonlocal access
- Local area network (LAN): Ethernet
- Wide area network (WAN): the Internet
- Wireless network: WiFi, Bluetooth





## **Technology Trends**

- Electronics technology continues to evolve
  - Increased capacity and performance
  - Reduced cost

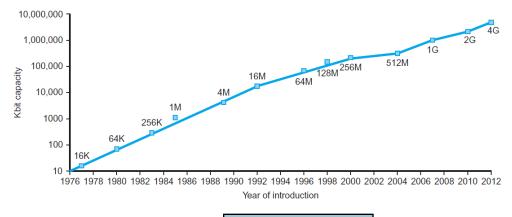

DRAM capacity


**Technology** Relative performance/cost Year 1951 Vacuum tube 1965 **Transistor** 35 900 1975 Integrated circuit (IC) 1995 Very large scale IC (VLSI) 2,400,000 2013 Ultra large scale IC 250,000,000,000



## Semiconductor Technology

- Silicon: semiconductor
- Add materials to transform properties:
  - Conductors
  - Insulators
  - Switch


## **Manufacturing ICs**

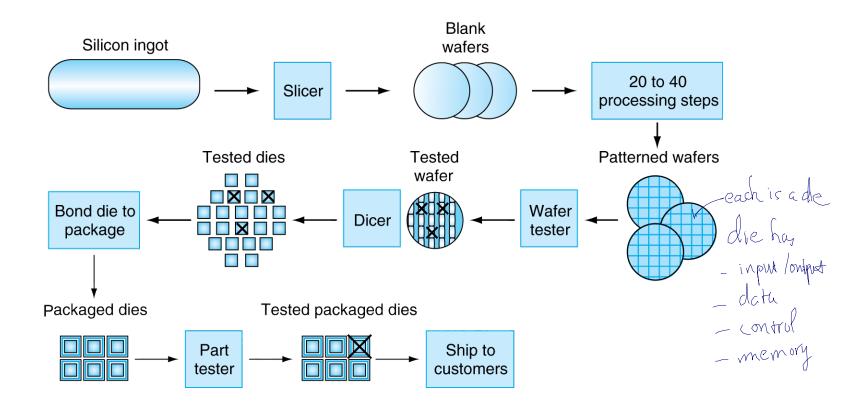

Yield: proportion of working dies per wafer



### **Intel Core i7 Wafer**

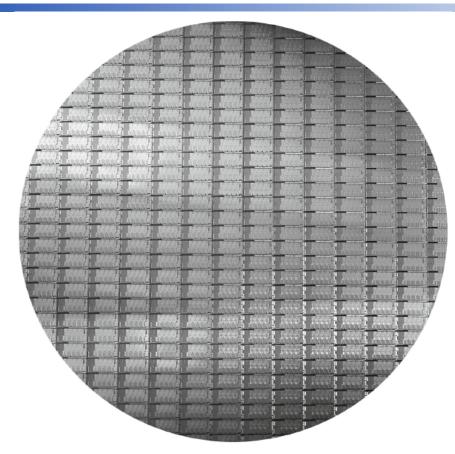

- 300mm wafer, 280 chips, 32nm technology
- Each chip is 20.7 x 10.5 mm



## **Integrated Circuit Cost**

Cost per die = 
$$\frac{\text{Cost per wafer}}{\text{Dies per wafer} \times \text{Yield}}$$

Dies per wafer  $\approx \text{Wafer area/Die area}$ 

Yield =  $\frac{1}{(1+(\text{Defects per area} \times \text{Die area/2}))^2}$ 

- Nonlinear relation to area and defect rate
  - Wafer cost and area are fixed
  - Defect rate determined by manufacturing process
  - Die area determined by architecture and circuit design

