CSE 151A HW 01

Karlo Godfrey Escalona Gregorio PID: A16536865

Contents

1	Pref	ace	1
2	ISA 2.1	Design R-type: Fixed Point	1 2 2 3 6 8 8 9 10 10
	2.3 2.4	OP3-type	13 14 14 15 16
	2.5	2.4.4 Miscellaneous Notes about D-type Instructions B-type	16 17 17 18 18 18
3	Ass	embler	20
4	Instr	ruction Memory	20
5	Prog	gram Counter	20
6	Prog	gram Counter Adder	20
7	Regi	ister File	20
8	Data	n Memory	21
9	ALU		21
10	A111	Control	21

11 Multiple Operands	21
12 FPU	21
13 FPU Control	21
14 Pipelining and Hazard Control	21

1 Preface

This project explores a custom implementation of a subset of the ARM instruction set. A custom instruction set inspired by the ARM architecture is designed with a custom assembler. The architecture is implemented in hardware as an RTL model, whose functionality is verified.

The assembler is implemented in Python, and the RTL model is implemented using SystemVerilog.

It should be noted that this architecture is an educational project inspired by ARM-style RISC design using the ARM7TDMI-S data sheet as reference. It is not ARM-compatible and does not use proprietary ARM encoding or IP.

2 ISA Design

All instruction words are designed to be 32 bits wide. Each instruction has 4 condition bits that will determine whether or not the instruction executes based on CPSR condition flags (N, Z, C, V). This makes it simpler to write conditional statements for simple instructions. A list of the condition codes is listed below.

Field List								
Condition	Instruction	Flags Set	Explanation					
Code	Suffix	(NZCV)						
0000	unused	N/A	unused					
0001	AL	flags ignored	Always Executed					
0010	LE	Z set OR (N not	Less Than or Equal					
		equal to V)						
0011	GT	Z clear AND (N	Greater Than					
		equals V)						
0100	LT	N not equal to V	Less Than					
0101	GE	N equals V	Greater Or Equal					
0110	LS	C clear or Z set	Unsigned Lower or Same					
0111	HI	C set and Z clear	Unsigned Higher					
1000	VC	V clear	No Overflow					
1001	VS	V set	Overflow					
1010	PL	N clear	Positive or Zero					
1011	MI	N set	Negative					
1100	CC	C clear	Unsigned Lower					
1101	CS	C set	Unsigned Higher or Equal					
1110	NEQ	Z clear	Not Equal					
1111	EQ	Z set	Equal					

2.1 R-type: Fixed Point

2.1.1 Overview

The R-type instructions are used for fixed-point arithmetic data-processing instructions. A summary of the format can be seen in Figure 1, and explanations of the fields can be seen under the figure.

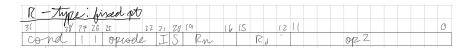


Figure 1: R-type format for fixed-point instructions.

	Field List						
Field	Bits	Description					
cond	[31:28]	State of CPSR condition codes (based on NZCV flags)					
type	[27:26]	Encoding specific to instruction type					
opcode	[25:22]	Determines the operation performed on operands					
I	21	Determines whether or not op2 is an immediate (I = 0 means					
		op2 is not an immediate, but a shift register)					
S	20	Determines whether or not to alter condition codes (S = 0					
		means do not alter)					
R_n	[19:16]	First source register					
R_d	[15:12]	Destination register					
op2	[11:0]	Varying field depending on the instruction					

R-type instructions have a varying op2 field that can be used depending on whether or not the instruction uses an immediate. For each of the R-type instructions, a closer look will be given in their individual instruction sections.

	Field List									
Instruction	Bits	Bits Description								
shift	[11:4]	Used for instructions using two source registers. The amount to shift the value in R_m								
R_m	[3:0]	Used for instructions using two source registers. The second source register								
rotate	[11:8]	Used for instructions using one source register and one immediate. Rotates the immediate a specific number of positions								
imm	[7:0]	A constant used with another shift register to produce the result								

Instructions take the following form:

```
(mneumonic).x-(instruction suffix) (rd), (rn), (rm)
```

where in each parentheses:

- mneumonic the type of instruction (e.g. add, sub, etc.)
- instruction suffix the instruction suffix that details the condition that the instruction is executed under
- rd destination register
- rn source register 1
- rm source register 2/immediate

A list of suported instructions is listed below. It should be noted that because of some complex instructions, the ALU is pipelined to [insert how many stages here] stages.

	Instructions					
Field	opcode	Description				
add.x	0000	Adds two fixed-point values				
sub.x	0001	Subtracts two fixed-point values				
mul.x	0010	Multiplies two fixed-point values				
div.x	0011	Divides two fixed-point values				
not.x	0100	Takes the bitwise NOR of two operands)				
and.x	0101	Takes the bitwise AND of two operands)				
or.x	0110	Takes the bitwise OR of two operands)				
convf.x	0111	Convert value to fixed-point format				

2.1.2 add/sub

The add and sub instructions add or subtract two numbers and store them into a destination register. The following snippet shows the cases for add, but sub follows a similar format.

```
// add the values stored in r1 and r2 and store them
    into r3
add.x-al r3, r1, r2
// add 8 to the value stored in r1 and store them into r3
add.x-al r3, r1, #8
```

```
// add the values stored in r1 and r2 and store them
  into r3, and use the result to set NCZV flags
adds.x-al r3, r1, r2
```

The op2 field in the instruction format for add/sub takes on different forms depending on the value of of bit 25 (I). For I=0, the op2 field operates under the assumption that the 3rd operand is stored in a register. For I=1, the op2 field operates under the assumption that the 3rd operand is an immediate value.

3rd Operand: Register

When the 3rd operand is a register, the value in the register can be manipulated through shifting before carrying out addition or subtraction.

```
// add the values stored in r1 and r2 (whose value is
    shifted logically to the left by a value specified in
    r4) and store them into r3
add r3, r1, r2, lsl r4
// add the values stored in r1 and r2 (whose value is
    shifted logically to the left by 8) and store them
    into r3
add r3, r1, r2, lsl #8
```

The op2 field specifications are as follows:

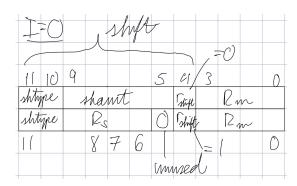


Figure 2: op2 field when the 3rd operand is a register. The top field is the format when the 3rd operand is shifted by a constant. The bottom field is the format when the 3rd operand is shifted by an amount specified in a register.

Field List for op2 (shifted by immediate)								
Field	Bits	Description						
shtype	[11:10]	The shift type performed on the 3rd operand						
shamt	[9:5]	The amount that the 3rd operand is shifted by						
r_{shift}	4	4 The bit that specifies whether the shifting operand is a reg-						
		ister or an immediate (value after Isl)						
R_m	[3:0]	The register holding the second operand						

Field List for $op2$ (shifted by register value)						
Field Bits Description						
shtype	[11:10]	The shift type performed on the 3rd operand				
$R_{\scriptscriptstyle S}$	[9:6]	The register that contains the amount that the 3rd operand				
		is shifted by				
unused	5	unused				
r_{shift}	4	The bit that specifies whether the shifting operand is a reg-				
		ister or an immediate (value after Isl)				
R_m	[3:0]	The register holding the second operand				

The shift type (shtype) determines what kind of shift the second operand goes through. The specifications for the shift type are as follows:

Description of Shift Types							
Shift Type	Encode Description						
ror	00	Rotate right					
asr	01	Arithmetic shift right					
Isr	10	Logical shift right					
Isl	11	Logical shift left					

For carrying out the operation without any shifting, it is sufficient to just not include a mention of the shift. It will assume IsI #0, which will not perform any shift.

3rd Operand: Immediate When the 3rd operand is an immediate, the values the immediate can take a variety of values.

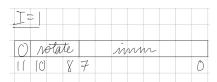


Figure 3: op2 format for when the 3rd operand is an immediate.

The 8-bit immediate field can be used to values from 0 to 255. Since each register is 16-bits, an 8-bit immediate isn't enough to reach the full value range that can be held by the register. With the rotate field, the rest of the bits in each register can be set, and a wider range of immediates can be used.

rola	te																	
0)										7	G	S	4	3	7	1	0	
	(0									7	6	5	4	3	2	
Z	3	,	Z	(0									7	6	S	4	
3	5	-	4	3	2		0									7	6	
4	7	2	6	5	4	3	2	(0									
Ś				7	6	5	4	3	2	(0							
6						7	6	5	A	3	2	(0					
7								7	6	5	4	3	2	(0			
		\neg																

Figure 4: How the value of rotation affects which bits are selected to be affected

Not all immediates can be represented in one instruction, but a register can take any immediate value by setting the upper byte and lower byte individually.

```
// the following sets r2 to 0xffff
add.x-al r2, r1, #0x00ff
add.x-al r2, r1, #0xff00
```

2.1.3 mul/div

The mul instruction can multiply two numbers and store them into a destination register.

```
// multiply the values stored in r1 and r2 and store the
   product into r3 and r4
mul.x-al r3, r4, r1, r2
// divide the values stored in r1 and r2 and store the
   quotient into r3 and the remainder in r4
div.x-al r3, r4, r1, r2
// integer division of r1 and r2 and store the quotient
   into r3
divi.x-al r3, r1, r2
```

The op2 format for mul is shown below. For full context, part of the rest of the instruction encoding is also shown.



Figure 5: *op*2 encoding for the mul instruction

Field List for op2 (mul)							
Field Bits Description							
R_{du}	[15:12]	Register to hold the upper byte of the product (technically					
		not part of $op2$					
R_{dl}	[11:8]	Register to hold the lower byte of the product					
unused	[7:4]	unused					
R_m	[3:0]	The register holding the second operand					

Because the product of 2 16-bit numbers is 32-bit, two registers are necessary to hold the entire product.

The op2 format for div is shown below. For full context, part of the rest of the instruction encoding is also shown.

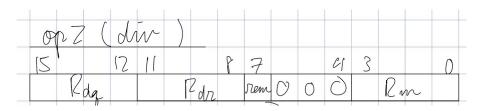


Figure 6: op2 encoding for the div/divi instructions.

Field List for op2 (div)							
Field Bits Description							
R_{dq}	[15:12]	Register to hold the quotient (technically not part of $op2$)					
R_{dr}	[11:8]	Register to hold the remainder					
rem	7	Bit to decide whether or not to keep the remainder (rem = 1 means keep the remainder)					
unused	[6:4]	unused					
R_m	[3:0]	The register holding the second operand					

One register is used to store the quotient, and 1 register is used to store the remainder of the division. For integer division (divi), the rem bit is set to 1, and the bit values of R_{dr} are all set to 1.

Some things to note about mul/div:

- · Immediates cannot be used.
- · NCZV flags can be set with mul and div.

2.1.4 not

The not instruction can take the bitwise not of what is stored in the source register.

```
// take the bitwise not of r1 and store into r2 not.x-al\ r2, r1
```

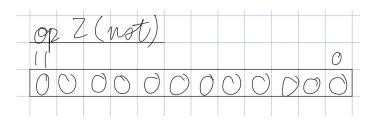


Figure 7: op2 encoding for the not instruction

Uniquely, op2 is set to all 0s, since not is a unary operator.

2.1.5 and/or

The not instruction can take the bitwise not of what is stored in the source register.

```
// take the bitwise and of r1 and r2 and store into r3
and.x-al r3, r1, r2
// take the bitwise and of r1 and #0x00ff and store into
r3
and.x-al r2, r1, #0x00ff
// take the bitwise or of r1 and r2 and store into r3
or.x-al r3, r1, r2
// take the bitwise or of r1 and #0x00ff and store into
r3
or.x-al r2, r1, #0x00ff
```

The encoding done for op2 is identical to that of add/sub instructions, so shifting operations can be applied to the 3rd operand (given that it is a register), if desired (see section 2.1.2 for more details).

2.1.6 conv2x

Will be updated if I get to floating-point instructions

2.1.7 Miscellaneous Notes: R-type Fixed-Point Instructions

A few things to note about R-type instructions:

- The assembler does not check for the validity of the immediate used for instructions that use immediates.
- Immediates must be done for the 3rd operand, so ensure that you do not use them for the first operand. conv2x
- To update NCZV flags after add, sub, append an 's' after the mneumonic (i.e. adds, subs).
- and, or, not instructions can also be used on floating point data.

2.2 R-type: Floating Point

Note: This section will be implemented if time allows for it.

2.2.1 Overview

The RF-type instructions are used for floating-point arithmetic data-processing instructions, using the IEEE-754 floating-point standard format. A summary of the format can be seen in Figure 3, and explanations of the fields can be seen under the figure.

R-type: 1	lsatin	ry pt																		
3(28	77 26	25 24 23	20	[9		16	15		12	[[9	8				4	3			0
cond	1 1	opiode	20	10	-n			Rd		1-1	mode	X	X	X	×	X		Rn	r	

Figure 8: RF instruction type format.

		Field List
Field	Bits	Description
cond	[31:28]	State of CPSR condition codes (based on NZCV flags)
type	[27:26]	Encoding specific to instruction type
opcode	[25:22]	Determines the operation performed on operands
unused	21	unused
S	20	Determines whether or not to alter condition codes (S = 0
		means do not alter)
R_n	[19:16]	First source register
R_d	[15:12]	Destination register
r_{mode}	[11:9]	Specifies the rounding mode of the floating point operation.
		See the underlying table for details.
unused	[8:4]	unused (might do flags for invalid operations)
R_m	[3:0]	Varying field depending on the value of opcode

	r_{mode}						
r _{mode}	Description						
000	Operation rounds toward 0						
001	Operation rounds toward nearest, ties away from 0						
010	Operation rounds toward nearest, ties to even						
011	Operation rounds toward +∞						
100	Operation rounds toward -∞						

Instructions take the following form:

```
(mneumonic).f-(instruction suffix) (rd), (rn), (rm),
# (r_mode)
```

where in each parentheses:

- mneumonic the type of instruction (e.g. add, sub, etc.)
- instruction suffix the instruction suffix that details the condition that the instruction is executed under
- rd destination register
- rn source register 1
- rm source register 2
- r_{mode} the rounding mode for the floating point operation

Instructions take the following form:

```
(mneumonic).f-(instruction suffix) (rd), (rn), (rm),
# (r_mode)
```

where in each parentheses:

- mneumonic the type of instruction (e.g. add, sub, etc.)
- instruction suffix the instruction suffix that details the condition that the instruction is executed under
- · rd destination register
- rn source register 1
- rm source register 2
- r_{mode} the rounding mode for the floating point operation

A list of suported instructions is listed below.

	Instructions					
Field	opcode	Description				
add.f	1000	Adds two floating-point values				
sub.f	1001	Subtracts two floating-point values				
mul.f	1010	Multiplies two floating-point values				
div.f	1011	Divides two floating-point values				
cmp.f	1100	Compares two floating-point values)				
conv2f.f	1101	Convert value to IEEE-754 floating-point standard format)				
sqrt.f	1110	Takes square root of a floating-point value)				
rec.f	1111	Takes reciprocal of a floating-point value				

A few things to note about RF-type instructions:

- The instructions cannot be used to set CPSR condition codes, and are undefined for immediate type instructions.
- To choose the rounding mode for the floating point operations, after the '.f' market, use '#' followed by the value of r_{mode} to specify the rounding operation (e.g. add.f-al r1, r2, r3, #4 to round toward $-\infty$).
- Rounding mode is underfined for cmp instruction. Just only use the two operands being compared
- Note the lack of immediate operations. To use immediate values, use fixedpoint representation to create the immediate value with addi, and then convx2f.

2.3 OP3-type



	Instructions
Instruction	Description
mac	Multiply-accumulate 3 registers
vadd	Add two registers in accordance to the bits set in the 3rd register
vsub	Subtract two registers in accordance to the bits set in the 3rd register
vsel	Select bits between two registers in accordance to the bits set in the 3rd register

2.4 D-type

2.4.1 Overview

The D-type instructions are used for loading and storing data from and into memory.



Figure 9: D instruction type format.

		Field List
Field	Bits	Description
cond	[31:28]	State of CPSR condition codes (based on NZCV flags)
type	[27:26]	Encoding specific to instruction type
opcode	[25:23]	Encoding specific to instruction
U	22	Determines whether the offset is added or subtracted (U = 1
		means that the offset is added, U = 0 means that the offset
		is subtracted)
1	21	Determines whether or not the the offset is an immediate
		value or a register (I = 1 means that it is an immediate value,
		I = 0 means that the offset is stored in a register)
unused	20	unused (set to 0 by default)
R_n	[19:16]	Address register used to interact with memory
R_d	[15:12]	Destination register
offset	[11:0]	Offset used to calculate where to load/store data. For a reg-
		ister offset, the register would be the least significant 4 bits

Instructions take the following form:

```
(mneumonic)-(instruction suffix) (rd), [(rn), (offset)]
```

where in each parentheses:

- mneumonic the type of instruction (e.g. add, sub, etc.)
- instruction suffix the instruction suffix that details the condition that the instruction is executed under
- rd Register in register file to load or store to

- rn Register holding the address to interact with in data memory
- · offset offset used to calculate where to load/store data

A list of suported instructions is listed below.

		Instructions
Instruction	opcode	Description
ldw	000	Loads a 16-bit word from data memory into a register in the
		register file
ldb2l	001	Loads a byte from data memory into the lower byte of a reg-
		ister in the register file
ldb2h	010	Loads a byte from data memory into the upper byte of a
		register in the register file
stw	100	Stores a 16-bit word from a register in the register file into
		data memory
stb2l	101	Stores a byte from a register in the register file into data
		memory
stb2h	110	Stores a byte from a register in the register file into data
		memory

2.4.2 ldr

Load instructions are used to load data from data memory into the register file. Users have the option of loading an entire 16-bit word or just a byte, which can be written into the upper or lower byte of a register. Additionally, it is possible to choose whether or not the offset is defined by an immediate or by a register.

```
// load a 16-bit word from data memory, 2 bytes upstream
ldw r2, [r1, #2]
// Load a 16-bit word from memory, 2 bytes downstream
ldw r2, [r1, #-2]
// Load a 16-bit word from memory, offset according to
    the value stored in r3
ldw r2, [r1, r3]
// Load the byte stored at address r1 into the lower
    byte of the register r2
ldb2l r2, [r1, #0]
// Load the byte stored at address r1 into the upper
    byte of the register r2
```

The value of the offset can be determined by a register or by an immediate value. These follow the same format as the 3rd operand in R-type instructions like add and sub (See Section 2.1.2).

2.4.3 str

Store instructions are used to store data from the register file into data memory. Users have the option of storing an entire 16-bit word or just a byte, which can be read from the upper or lower byte of a register. Additionally, it is possible to choose whether or not the offset is defined by an immediate or by a register.

```
// load a 16-bit word from data memory, 2 bytes upstream
stw r2, [r1, #2]
// Load a 16-bit word from memory, 2 bytes downstream
stw r2, [r1, #-2]
// Load a 16-bit word from memory, offset according to
    the value stored in r3
stw r2, [r1, r3]
// Load the byte stored at address r1 into the lower
    byte of the register r2
stb21 r2, [r1, #0]
// Load the byte stored at address r1 into the upper
    byte of the register r2
```

The value of the offset can be determined by a register or by an immediate value. These follow the same format as the 3rd operand in R-type instructions like add and sub (See Section 2.1.2).

2.4.4 Miscellaneous Notes about D-type Instructions

- To specify loading a byte, add a 'b' after the mneumonic (ldrb, strb), otherwise it will default to loading/storing a word.
- To specify whether an offset is added or subtracted, use positive offset values for adding, and negative offset values for subtracting (e.g. ldr r0, [r1, #8] for the address r1 + 8, ldr r0, [r1, #-8] for the address r1 8).
- To specify whether an offset is an immediate value or a register, use '#' to specify the offset, or 'r' to specify a register (e.g. ldr r0, [r1, #8] for an offset or ldr r0, [r1, r2] for a register).
- The hardware uses little-endian formatting.

2.5 B-type

2.5.1 Overview

B-type instructions are used for procedure calls. The ISA uses relative branching.



Figure 10: B instruction type format for BX instruction

	Field List (BX)					
Field	Bits	Description				
cond	[31:28]	State of CPSR condition codes (based on NZCV flags)				
type	[27:26]	Encoding specific to instruction type				
R	26	Determines whether the instruction is a BX instruction vs B				
		or BL instructions (R = 0 means that it is a BX instruction,				
		while R = 1 means that it is either a B or a BL instruction)				
R_b	[3:0]	Address of the register containing the address to branch to				

B+ B4 -	25		0
cond 00	R L	Offset	

Figure 11: B instruction type format for B and BL instruction

		Field List (B or BL)
Field	Bits	Description
cond	[31:28]	State of CPSR condition codes (based on NZCV flags)
type	[27:26]	Encoding specific to instruction type
R	26	Determines whether the instruction is a BX instruction vs B or BL instructions ($R = 0$ means that it is a BX instruction, while $R = 1$ means that it is either a B or a BL instruction)
L	25	Determines whether the instruction is a B instruction vs a BL instruction ($L=0$ means that it is a B instruction, while $L=1$ means that it is a BL instruction)
offset	[24:0]	Relative address of the label to branch to

Instructions take the following form:

```
(mneumonic) - (instruction suffix) (label)
```

where in each parentheses:

- mneumonic the type of instruction (e.g. add, sub, etc.)
- instruction suffix the instruction suffix that details the condition that the instruction is executed under
- label the label or register containing program counter value to branch to

Instructions				
Field	Description			
bx	Branches to an address specified by a register			
b	Branch to a label			
bl	Branch and link			

2.5.2 bx

Branch and exchange is a branching instruction that branches to an address stored in a register. It is commonly used to return from a procedure using the link register (r14).

```
// Return from procedure bx lr
```

2.5.3 b

The general branch instruction branches to an address stored in a label. For conditional branching, NCZV flags must be set by a previous instruction.

```
// go to label
b label
// go to label if registers r1 and r2 are equal
subs r0, r1, r2
beq label
```

2.5.4 bl

The branch and link instruction stores the address of the next instruction before branching to a label.

```
// go to label and save the location of the instruction
   after the label
bl label
```

2.6 Miscellaneous Notes

• Labels must be alone on its own line. In other words, this is allowed:

```
label:
add.x-al r1, r2, r3

But this is not:

label: add.x-al r1, r2, r3
```

Labels don't have a specific syntax defined. As long as the label is before
a ':', it is a valid label. Using multiple colons for a label will cause some
undefined behavior.

3 Assembler

The assembler is implemented as a two-pass assembler in Python. In the first pass, labels are assigned location counter (LC) values to represent where they will be stored in instruction memory. For an instruction memory of 256 addresses, 8 bits are used to represent the addresses. These values are stored in a symbol table implemented as a hash table. In the second pass, all instructions are put into their machine code counterpart in the following format (similar to .bin files):

```
0x##: ## ## ##
```

The number before the colon is a hexadecimal representation of the LC value, and the numbers after it are the hexadecimal representation of the instruction encoding. A binary version of this is also produced. Consider the following example instruction:

```
addi.x-al r0, #9
```

A few things to note about the assembler:

- Multiple labels of the same have undefined behavior. Since the symbol table
 was implemented as a Python dictionary, the most recent definition of the
 label will probably be what defines the label.
- There is nothing to check for invalid syntax. The programmer takes responsibility for making sure everything is correct.

4 Instruction Memory

5 Program Counter

6 Program Counter Adder

7 Register File

There are a total of 16 16-bit registers in the register file, including link register, program counter, and zero/discard register. 16-bit registers were chosen, due to the goal of designing a processor that performs floating point operations, which are too complex to be done in 1 clock cycle for 32-bit operands. 16-bit operands can get very close to IEE-754 compliance. The remaining 12 registers are general-purpose.

	Register File					
Register	Purpose					
r0	Zero Register/Discard Register					
r1-r13	General Purpose					
r14	Link Register					
r15	Program Counter (PC)					

- 8 Data Memory
- 9 ALU
- 10 ALU Control
- 11 Multiple Operands
- 12 FPU
- 13 FPU Control
- 14 Pipelining and Hazard Control