

Technical brochure

Thermostatic expansion valves T2 / TE2





Technical leaflet

Thermostatic expansion valves, type T 2 and TE 2

Contents		Page
	Introduction	
	Features	
	Technical data	
	Superheat	3
	Ordering:	
	Components with flare × flare connection	4
	Flare connections	4
	Orifice assembly with filter	4
	Components with flare × solder connection	4
	Solder adaptor	5
	Orifice assembly with filter for solder adapter	5
	Capacity:	
	R22	6
	R407C	
	R134a	8
	R404A / R507	9
	Design - Function	10
	Identification	
	Dimensions and weights	11



Technical leaflet

Thermostatic expansion valves, type T 2 and TE 2

Introduction



Thermostatic expansion valves regulate the injection of refrigerant liquid into evaporators. Injection is controlled by the refrigerant superheat. Therefore the valves are especially suitable for

liquid injection in "dry" evaporators where the superheat at the evaporator outlet is proportional to the evaporator load.

Features

- Large temperature range
 Equally applicable to freezing, refrigeration
 and air conditioning applications.
- Interchangeable orifice assembly
 - easier stocking
 - easy capacity matching
 - better service.
- Rated capacities from 0.5 to 15.5 kW (0.15 to 4.5 TR) for R22.
- Can be supplied with MOP
 (Max. Operating Pressure)

 Protects the compressor motor against excessive evaporating pressure during normal operation.
- Stainless steel bulb
 Fast and easy to install.
 Good temperature transfer from pipe to bulb.
- Valves for special temperature ranges can be supplied.

Technical data

Max. temperature

Bulb, when valve is installed: 100°C Bulb, element not mounted: 60°C

Min. temperature T 2 \rightarrow TE 2: -60°C

Max. test pressure PT = 38 bar

Max. working pressurePS/MWP = 34 bar

MOP-points

mor points				
Refrigerant	Range N $-40^{\circ}\text{C} \rightarrow +10^{\circ}\text{C}$	Range NM $-40^{\circ}\text{C} \rightarrow -5^{\circ}\text{C}$	Range NL –40°C → –15°C	Range B −60°C → −25°C
	MOP-point in ev	vaporating temperatu	re t _e and evaporatin	g pressure p _e
	+15°C / +60°F	0°C / +32°F	–10°C / +15°F	−20°C / −4°F
R22	100 psig/6.9 bar	60 psig/4.0 bar	35 psig/3.5 bar	20 psig/1.5 bar
R407C	95 psig/6.6 bar			
R134a	55 psig/5.0 bar	30 psig/3.1 bar	15 psig/2.1 bar	
R404A/R507	120 psig/9.3 bar	75 psig/6.2 bar	50 psig/4.4 bar	30 psig/3.1 bar

Superheat

SS = static superheat
OS = opening superheat
SH = SS + OS = total superheat

Q_{nom} = rated capacity Q_{max} = maximum capacity

Static superheat SS can be adjusted with setting spindle.

The standard superheat setting SS is 5 K for valves without MOP and 4 K for valves with MOP. The opening superheat OS is 6 K from when opening begins to where the valve gives its rated capacity $Q_{\tiny{nom}}$

Example

 $\begin{array}{ll} \text{Static superheat} & \text{SS} = 5 \text{ K} \\ \text{Opening superheat} & \text{OS} = 6 \text{ K} \\ \text{Total superheat} & \text{SH} = 5 + 6 = 11 \text{ K} \\ \end{array}$



Ordering, components with flare \times flare connection

Thermostatic element with sensor band, without orifice, filter cone, nuts



Refrigerant	Valve	Pressure	Capillary	Conr	nection			Code	e no.		
	type	equalization ¹)	tube	Inlet ×	outlet 1)	Rang –40 to	_	Range NM –40 to –5°C	Range NL -40 to -15°C	Ran -60 to	,
			m	in. × in.	mm×mm	Without MOP	With MOP	With MOP	With MOP	Without MOP	With MOP
R22/R407C ²⁾	TX 2	Int.	1.5	$^{3}/_{8} \times ^{1}/_{2}$	10 × 12	068Z3206	068Z3208	068Z3224	068Z3226	068Z3207	068Z3228
	TEX 2	Ext.	1.5	$^{3}/_{8} \times ^{1}/_{2}$	10 × 12	068Z3209	068Z3211	068Z3225	068Z3227	068Z3210	068Z3229
R407C	TZ 2	Int.	1.5	$^{3}/_{8} \times ^{1}/_{2}$	10 × 12	068Z3496	068Z3516				
	TEZ 2	Ext.	1.5	$^{3}/_{8} \times ^{1}/_{2}$	10 × 12	068Z3501	068Z3517				
R134a	TN 2	Int.	1.5	$^{3}/_{8} \times ^{1}/_{2}$	10 × 12	068Z3346	068Z3347	068Z3393	068Z3369		
	TEN 2	Ext.	1.5	$^{3}/_{8} \times ^{1}/_{2}$	10 × 12	068Z3348	068Z3349	068Z3392	068Z3370		
R404A/	TS 2	Int.	1.5	$^{3}/_{8} \times ^{1}/_{2}$	10 × 12	068Z3400	068Z3402	068Z3406	068Z3408	068Z3401	068Z3410
R507	TES 2	Ext.	1.5	$^{3}/_{8} \times ^{1}/_{2}$	10 × 12	068Z3403	068Z3405	068Z3407	068Z3409	068Z3404	068Z3411

See the section "Flare connections".

Flare connections





Code no.	opper tubing le diameter	Reducer for c with outsic	Connection for copper tubing with outside diameter					
	mm	in.	mm	in.				
011L1101			6	1/4				
011L1135			10	3/8				
011L1103			12	1/2				
011L1107	6	1/4						

Example

A TE 2 thermostatic expansion valve consists of two elements + flare nuts if required:

- 1 thermostatic element
- 1 orifice assembly and flare nuts

When ordering one thermostatic expansion valve, TEX 2 with orifice 01, five code numbers are required:

1-off thermostatic element,
 1-off orifice assembly 01,
 1-off ³/₈ in. flare nut,
 1-off ¹/₂ in. flare nut,
 1-off ¹/₄ in. flare nut,
 011L1103
 011L1101

Orifice assembly with filter



Range N: −40 to +10°C

	F	Rated capaci	ty in tons (TF	R)		Rated capacity in kW					
Orifice no.	R22	R407C	R134a	R404A R507	R22	R407C	R134a	R404A R507	Code no. ²)		
0X	0.15	0.16	0.11	0.11	0.50	0.50	0.40	0.38	068-2002		
00	0.30	0.30	0.25	0.21	1.0	1.1	0.90	0.70	068-2003		
01	0.70	0.80	0.50	0.45	2.5	2.7	1.8	1.6	068-2010		
02	1.0	1.1	0.80	0.60	3.5	3.8	2.6	2.1	068-2015		
03	1.5	1.6	1.3	1.2	5.2	5.6	4.6	4.2	068-2006		
04	2.3	2.5	1.9	1.7	8.0	8.6	6.7	6.0	068-2007		
05	3.0	3.2	2.5	2.2	10.5	11.3	8.6	7.7	068-2008		
06	4.5	4.9	3.0	2.6	15.5	16.7	10.5	9.1	068-2009		

Range B: −60 to −25°C

narige b. oot	0 23 C				
	Rated capaci	ty in tons (TR)	Rated cap	acity in kW	
Orifice no.	R22	R22 R404A R22 R507		R404A R507	Code no.²)
0X	0.15	0.11	0.50	0.38	068-2002
00	0.20	0.21	0.70	0.70	068-2003
01	0.30	0.45	1.0	1.6	068-2010
02	0.60	0.60	2.1	2.1	068-2015
03	0.80	1.0	2.8	3.5	068-2006
04	1.2	1.4	4.2	4.9	068-2007
05	1.5	1.7	5.2	6.0	068-2008
06	2.0	1.9	7.0	6.6	068-2009

The rated capacity is based on: Evaporating temperature $t_e = +5^{\circ}\text{C}$ for range N and $t_e = -30^{\circ}\text{C}$ for range B Condensing temperature $t_c = +32^{\circ}\text{C}$ Refrigerant temperature ahead of valve $t_i = +28^{\circ}\text{C}$

²) For R407C plants, please select valves from the dedicated R407C program

²)These orifice assemblies cannot be used together with solder adapters. Please see adapter information on next page.



Ordering, components with flare \times solder connection

Thermostatic element with sensor band, without orifice, filter cone, nuts

Refrigerant	Valve	Pressure	Capillary	Connection					Code no.			
	type	equalization ³)	tube	Inlet Flare	Outlet ODF solder		Rang –40 to	ge N +10℃	Range NL -40 to -15°C	Range B −60 to −25°C		
			m	in./mm	in.	mm	Without MOP	MOP +15°C	Mop –10°C	Without MOP	MOP –20°C	
	TX 2	Int.	1.5	3/8	1/2		068Z3281	068Z3287		068Z3357	068Z3319	
D22/D40764)	TX 2	Int.	1.5	10		12	068Z3302	068Z3308	068Z3366	068Z3361	068Z3276	
R22/R407C ⁴⁾	TEX 2	Ext.	1.5	3/8	1/2		068Z3284	068Z3290		068Z3359	068Z3320	
	TEX 2	Ext.	1.5	10		12	068Z3305	068Z3311	068Z3367	068Z3363	068Z3277	
	TZ 2	Int.	1.5	3/8	1/2			068Z3329				
D4076	TZ 2	Int.	1.5	10		12	068Z3502	068Z3514				
R407C	TEZ 2	Ext.	1.5	3/8	1/2		068Z3446	068Z3447				
	TEZ 2	Ext.	1.5	10		12	068Z3503	068Z3515				
	TN 2	Int.	1.5	3/8	1/2		068Z3383	068Z3387				
R134a	TN 2	Int.	1.5	10		12	068Z3384	068Z3388				
K134a	TEN 2	Ext.	1.5	3/8	1/2		068Z3385	068Z3389				
	TEN 2	Ext.	1.5	10		12	068Z3386	068Z3390				
	TS 2	Int.	1.5	3/8	1/2		068Z3414	068Z3416	068Z3429	068Z3418	068Z3420	
R404A/	TS 2	Int.	1.5	10		12	068Z3435	068Z3423	068Z3436	068Z3425	068Z3427	
R507	TES 2	Ext.	1.5	3/8	1/2		068Z3415	068Z3417	068Z3430	068Z3419	068Z3421	
	TES 2	Ext.	1.5	10		12	068Z3422	068Z3424	068Z3437	068Z3426	068Z3428	

 $^{^{3}}$) TE valves with inch outlet have $^{1}/_{4}$ inch pressure equalization. TE valves with mm outlet have 6 mm pressure equalization.

Solder adaptor



The adaptor is for use with thermostatic expansion valves T 2 and TE 2 with flare \times solder connections. When the adaptor is fitted correctly it meets the sealing requirements of DIN 8964.

The adaptor offers the following advantages:

- The orifice assembly can be replaced.
- The filter can be cleaned or replaced.

When using the solder adapter, a special orifice assembly is required. Please use the following tables to select both the appropriate adapter and orifice asembly.

Only in this way can the sealing requirements of DIN 8964 be fulfilled.

Solder adaptor for filter drier (FSA) may not be used in the T 2 inlet.

Solder adaptor without orifice assembly and filter

Code no.
068-2062
068-2063
068-2060
068-2061

Filter for solder adaptor

Description	Code no.
Filter excl. orifice assembly	068-0015

Flare connections See previous page.

Orifice assembly with filter for solder adaptor

Orifice no.	Code no.
0X	068-2089
00	068-2090
01	068-2091
02	068-2092
03	068-2093
04	068-2094
05	068-2095
06	068-2096

For capacities see previous page.

 $^{^{\}scriptscriptstyle 4}$) For R407C plants, please select valves from the dedicated R407C program



Capacity in kW for range N: -40° C to $+10^{\circ}$ C

R22

Value to see	Orifice			Pressur	e drop ac	ross valve	e ∆p bar					Pressur	e drop ac	ross valve	e ∆p bar		
Valve type	no.	2	4	6	8	10	12	14	16	2	4	6	8	10	12	14	16
			Eva	porating	g temper	ature +1	0°C			Evaporating temperature 0°C							
TX 2/TEX 2-0.15	0X	0.37	0.48	0.55	0.60	0.63	0.65	0.65	0.67	0.37	0.48	0.55	0.59	0.63	0.65	0.66	0.66
TX 2/TEX 2-0.3	00	0.87	1.1	1.2	1.3	1.4	1.4	1.4	1.5	0.84	1.0	1.2	1.3	1.3	1.4	1.4	1.4
TX 2/TEX 2-0.7	01	2.2	2.8	3.2	3.4	3.6	3.7	3.8	3.8	1.9	2.4	2.7	3.0	3.1	3.2	3.3	3.3
TX 2/TEX 2-1.0	02	3.0	4.0	4.7	5.1	5.4	5.6	5.8	5.8	2.6	3.4	4.0	4.3	4.6	4.8	4.9	5.0
TX 2/TEX 2-1.5	03	5.4	7.2	8.3	9.1	9.7	10.0	10.2	10.3	4.6	6.1	7.1	7.8	8.2	8.5	8.7	8.8
TX 2/TEX 2-2.3	04	8.1	10.8	12.5	13.8	14.5	15.0	15.4	15.5	6.9	9.1	10.5	11.5	12.2	12.7	13.0	13.2
TX 2/TEX 2-3.0	05	10.2	13.6	15.7	17.2	18.3	18.9	19.3	19.5	8.8	11.6	13.3	14.6	15.5	16.1	16.4	16.6
TX 2/TEX 2-4.5	06	12.6	16.7	19.3	21.0	22.3	23.1	23.5	23.7	10.8	14.2	16.3	17.8	18.9	19.6	20.0	20.2
			Eva	porating	g temper	ature –1	0°C					Evapor	ating ten	nperatur	e –20°C		
TX 2/TEX 2-0.15	0X	0.37	0.47	0.53	0.57	0.60	0.63	0.64	0.64		0.44	0.50	0.54	0.57	0.59	0.61	0.61
TX 2/TEX 2-0.3	00	0.79	0.96	1.1	1.2	1.2	1.3	1.3	1.3		0.88	1.0	1.1	1.1	1.2	1.2	1.2
TX 2/TEX 2-0.7	01	1.6	2.0	2.3	2.5	2.6	2.7	2.8	2.8		1.7	1.9	2.0	2.2	2.3	2.3	2.3
TX 2/TEX 2-1.0	02	2.2	2.9	3.3	3.6	3.8	4.0	4.1	4.1		2.4	2.7	2.9	3.1	3.2	3.3	3.3
TX 2/TEX 2-1.5	03	3.9	5.1	5.9	6.4	6.8	7.1	7.3	7.3		4.2	4.8	5.2	5.5	5.8	5.9	6.0
TX 2/TEX 2-2.3	04	5.8	7.6	8.7	9.5	10.1	10.5	10.8	10.9		6.2	7.1	7.7	8.2	8.5	8.7	8.8
TX 2/TEX 2-3.0	05	7.4	9.6	11.0	12.0	12.8	13.3	13.6	13.8		7.9	9.0	9.8	10.3	10.8	11.0	11.2
TX 2/TEX 2-4.5	06	9.1	11.8	13.5	14.7	15.6	16.2	16.6	16.8		9.6	11.0	11.9	12.6	13.1	13.5	13.7
			Eva	porating	g temper	ature –3	0°C		,			Evapor	ating ten	nperatur	e –40°C	,	
TX 2/TEX 2-0.15	0X		0.40	0.45	0.49	0.52	0.55	0.56	0.57			0.42	0.45	0.48	0.50	0.52	0.53
TX 2/TEX 2-0.3	00		0.79	0.90	0.96	1.0	1.1	1.1	1.1			0.80	0.86	0.92	0.95	0.98	0.99
TX 2/TEX 2-0.7	01		1.4	1.5	1.7	1.8	1.8	1.9	1.9			1.3	1.4	1.4	1.5	1.5	1.6
TX 2/TEX 2-1.0	02		1.9	2.2	2.7	2.5	2.6	2.6	2.7			1.7	1.9	2.0	2.0	2.1	2.1
TX 2/TEX 2-1.5	03		3.4	3.9	4.2	4.4	4.6	4.7	4.8			3.1	3.4	3.5	3.7	3.8	3.8
TX 2/TEX 2-2.3	04		5.0	5.7	6.2	6.5	6.8	7.0	7.1			4.6	4.9	5.2	5.4	5.6	5.7
TX 2/TEX 2-3.0	05		6.4	7.2	7.8	8.3	8.6	8.8	9.0			5.8	6.3	6.6	6.9	7.1	7.2
TX 2/TEX 2-4.5	06		7.8	8.8	9.6	10.1	10.5	10.8	11.0			7.1	7.7	8.1	8.4	8.7	8.8

Capacity in kW for range B: -60° C to -25° C

Valve type	Orifice			Pressur	e drop ac	ross valve	e ∆p bar					Pressur	e drop ac	ross valve	Δp bar		
valve type	no.	2	4	6	8	10	12	14	16	2	4	6	8	10	12	14	16
			Eva	aporating	g temper	ature –2	5°C		,	Evaporating temperature –30°C							
TX 2/TEX 2-0.2	00	0.69	0.83	0.94	1.0	1.1	1.1	1.1	1.2	0.66	0.79	0.89	0.96	1.0	1.1	1.1	1.1
TX 2/TEX 2-0.3	01	1.2	1.5	1.7	1.9	2.0	2.0	2.1	2.1	1.1	1.4	1.5	1.7	1.8	1.8	1.9	1.9
TX 2/TEX 2-0.6	02	1.7	2.1	2.4	2.6	2.8	2.9	2.9	3.0	1.5	1.9	2.2	2.3	2.5	2.6	2.6	2.7
TX 2/TEX 2-0.8	03	3.0	3.8	4.3	4.7	5.0	5.2	5.3	5.3	2.7	3.4	3.9	4.2	4.4	4.6	4.7	4.8
TX 2/TEX 2-1.2	04	4.4	5.6	6.4	6.9	7.3	7.6	7.8	7.9	3.9	5.0	5.7	6.2	6.5	6.8	7.0	7.1
TX 2/TEX 2-1.5	05	5.6	7.1	8.1	8.7	9.3	9.6	9.9	10.0	5.0	6.4	7.2	7.8	8.3	8.6	8.8	9.0
TX 2/TEX 2-2.0	06	6.8	8.7	9.8	10.7	11.3	11.8	12.1	12.3	6.1	7.8	8.8	9.6	10.1	10.5	10.8	11.0
			Eva	aporating	g temper	ature –4	0°C	•		Evaporating temperature -50°C							
TX 2/TEX 2-0.2	00	0.60	0.71	0.80	0.86	0.92	0.95	0.98	0.99	0.54	0.65	0.72	0.78	0.82	0.85	0.87	0.88
TX 2/TEX 2-0.3	01	0.90	1.1	1.3	1.4	1.4	1.5	1.5	1.6	0.74	0.92	1.0	1.1	1.2	1.2	1.3	1.3
TX 2/TEX 2-0.6	02	1.2	1.6	1.7	1.9	2.0	2.1	2.1	2.1	1.0	1.3	1.4	1.5	1.6	1.7	1.7	1.7
TX 2/TEX 2-0.8	03	2.2	2.8	3.1	3.4	3.5	3.7	3.8	3.8	1.8	2.3	2.6	2.7	2.9	3.0	3.1	3.1
TX 2/TEX 2-1.2	04	3.2	4.0	4.6	4.9	5.2	5.4	5.6	5.7	2.6	3.3	3.7	4.0	4.2	4.4	4.5	4.6
TX 2/TEX 2-1.5	05	4.1	5.1	5.8	6.3	6.6	6.9	7.1	7.2	3.4	4.2	4.7	5.1	5.4	5.6	5.8	5.9
TX 2/TEX 2-2.0	06	5.0	6.3	7.1	7.7	8.1	8.4	8.7	8.8	4.1	5.1	5.8	6.2	6.6	6.9	7.1	7.2
			Eva	aporating	g temper	ature -6	0°C										
TX 2/TEX 2-0.2	00	0.50	0.60	0.66	0.71	0.75	0.77	0.79	0.80								
TX 2/TEX 2-0.3	01	0.64	0.79	0.88	0.95	1.0	1.0	1.1	1.1								
TX 2/TEX 2-0.6	02	0.9	1.1	1.2	1.3	1.4	1.4	1.4	1.4								1
TX 2/TEX 2-0.8	03	1.6	1.9	2.2	2.3	2.4	2.5	2.6	2.6								
TX 2/TEX 2-1.2	04	2.2	2.8	3.1	3.4	3.6	3.7	3.8	3.9								1
TX 2/TEX 2-1.5	05	2.9	3.6	4.0	4.3	4.6	4.8	4.9	5.0								
TX 2/TEX 2-2.0	06	3.5	4.4	4.9	5.3	5.6	5.8	6.0	6.1								1

Correction for subcooling Δt_{sub}

Note: Insufficient subcooling can produce flash gas. The evaporator capacities used must be corrected if subcooling deviates from 4 K. The corrected capacity can be obtained by

dividing the required evaporator capacity by the correction factor below. Selections can then be made from the tables above.

Δt_u	4 K	10 K	15 K	20 K	25 K	30 K	35 K	40 K	45 K	50 K
Correction factor	1.00	1.06	1.11	1.15	1.20	1.25	1.30	1.35	1.39	1.44

Example
Refrigerant = R22
Evaporator capacity $Q_e = 5 \text{ kW}$ Subcooling = 10 K

Correction factor from table = 1.06Corrected capacity = 5:1.06=4.72 kW



Capacity in kW for range N: -40°C to +10°C

R407C

Valve type	Orifice		Pressure drop across valve Δp bar								Pressure	e drop ac	ross valve	∆p bar			
valve type	no.	2	4	6	8	10	12	14	16	2	4	6	8	10	12	14	16
			Eva	porating	temper	ature +1	0°C					Evapo	rating te	mperatu	re 0°C		
TZ 2/TEZ 2 - 0.16	0X	0.40	0.50	0.56	0.61	0.63	0.64	0.63	0.64	0.40	0.50	0.56	0.60	0.63	0.64	0.64	0.63
TZ 2/TEZ 2 - 0.30	00	0.90	1.1	1.2	1.3	1.4	1.4	1.4	1.4	0.87	1.0	1.2	1.3	1.3	1.4	1.4	1.3
TZ 2/TEZ 2 - 0.80	01	2.3	2.9	3.3	3.4	3.6	3.6	3.7	3.6	2.0	2.5	2.8	3.0	3.1	3.1	3.2	3.2
TZ 2/TEZ 2 - 1.1	02	3.1	4.1	4.8	5.2	5.4	5.5	5.6	5.6	2.7	3.5	4.1	4.3	4.6	4.7	4.8	4.8
TZ 2/TEZ 2 - 1.6	03	5.6	7.4	8.5	9.2	9.7	9.8	9.9	9.9	4.8	6.3	7.2	7.9	8.2	8.3	8.4	8.4
TZ 2/TEZ 2 - 2.5	04	8.4	11.1	12.8	13.9	14.5	14.7	14.9	14.9	7.2	9.4	10.7	11.6	12.2	12.4	12.6	12.7
TZ 2/TEZ 2 - 3.2	05	10.6	14.0	16.0	17.4	18.3	18.5	18.7	18.7	9.2	11.9	13.6	14.7	15.5	15.8	15.9	15.9
TZ 2/TEZ 2 - 4.9	06	13.1	17.2	19.7	21.2	22.3	22.6	22.8	22.8	11.2	14.6	16.6	18.0	18.9	19.2	19.4	19.4
		Evaporating temperature –10°C										Evapor	ating ten	nperatur	e –20°C		
TZ 2/TEZ 2 - 0.16	0X	0.38	0.48	0.54	0.57	0.60	0.62	0.62	0.61		0.45	0.51	0.54	0.56	0.57	0.59	0.57
TZ 2/TEZ 2 - 0.30	00	0.82	1.0	1.1	1.2	1.2	1.3	1.3	1.2		0.90	1.0	1.1	1.1	1.2	1.2	1.1
TZ 2/TEZ 2 - 0.80	01	1.7	2.0	2.3	2.5	2.6	2.6	2.7	2.7		1.7	1.9	2.0	2.2	2.2	2.2	2.2
TZ 2/TEZ 2 - 1.1	02	2.3	3.0	3.3	3.6	3.8	3.9	4.0	3.9		2.4	2.7	2.9	3.1	3.1	3.2	3.1
TZ 2/TEZ 2 - 1.6	03	4.1	5.2	6.0	6.4	6.8	7.0	7.1	6.9		4.3	4.8	5.2	5.4	5.6	5.7	5.6
TZ 2/TEZ 2 - 2.5	04	6.0	7.8	8.8	9.5	10.1	10.3	10.5	10.4		6.3	7.2	7.7	8.1	8.2	8.4	8.3
TZ 2/TEZ 2 - 3.2	05	7.7	9.8	11.1	12.0	12.8	13.0	13.2	13.1		8.1	9.1	9.8	10.2	10.5	10.6	10.5
TZ 2/TEZ 2 - 4.9	06	9.5	12.0	13.6	14.7	15.6	15.9	16.1	16.0		9.8	11.1	11.9	12.5	12.7	13.0	12.9
			Eva	porating	temper	ature –3	0°C					Evapor	ating ten	nperatur	e –40°C		
TZ 2/TEZ 2 - 0.16	0X		0.41	0.45	0.49	0.51	0.53	0.53	0.53			0.42	0.44	0.46	0.48	0.48	0.49
TZ 2/TEZ 2 - 0.30	00		0.81	0.90	1.0	1.0	1.1	1.0	1.0			0.80	0.84	0.90	0.90	0.90	0.90
TZ 2/TEZ 2 - 0.80	01		1.4	1.5	1.7	1.8	1.7	1.8	1.8			1.3	1.4	1.3	1.4	1.4	1.5
TZ 2/TEZ 2 - 1.1	02		1.9	2.2	2.7	2.5	2.5	2.5	2.5			1.7	1.9	1.9	1.9	2.0	1.9
TZ 2/TEZ 2 - 1.6	03		3.5	3.9	4.2	4.3	4.4	4.5	4.5			3.1	3.3	3.4	3.5	3.5	3.5
TZ 2/TEZ 2 - 2.5	04		5.1	5.8	6.1	6.4	6.5	6.7	6.6			4.6	4.8	5.0	5.1	5.2	5.2
TZ 2/TEZ 2 - 3.2	05		6.5	7.3	7.7	8.1	8.3	8.4	8.4			5.8	6.2	6.3	6.6	6.6	6.6
TZ 2/TEZ 2 - 4.9	06		8.0	8.9	9.5	9.9	10.1	10.3	10.2			7.1	7.5	7.8	8.0	8.1	8.1

Correction for subcooling Δt_{sub}

Note: Insufficient subcooling can produce flash gas. The evaporator capacities used must be corrected if subcooling deviates from 4 K. The corrected capacity can be obtained by

dividing the required evaporator capacity by the correction factor below. Selections can then be made from the tables above.

Δt_u	4 K	10 K	15 K	20 K	25 K	30 K	35 K	40 K	45 K	50 K
Correction factor	1.00	1.08	1.14	1.21	1.27	1.33	1.39	1.45	1.51	1.57



Capacity in kW for range N: −40°C to +10°C

R134a

Capacity III KW 101 Tange N. –40 C to +10 C											
Valve type	Orifice	Pre	ssure dro	p across	valve ∆p	bar	Pre	ssure dro	p across	valve ∆p	bar
valve type	no.	2	4	6	8	10	2	4	6	8	10
		Evapora	ating ten	peratur	e +10°C		Εν	/aporatir	ng tempe	erature 0	°C
TN 2/TEN 2 - 0.11	0X	0.34	0.43	0.47	0.50	0.51	0.33	0.42	0.46	0.47	0.49
TN 2/TEN 2 - 0.25	00	0.71	0.86	0.93	0.97	0.98	0.65	0.78	0.86	0.89	0.91
TN 2/TEN 2 - 0.5	01	1.5	1.9	2.1	2.2	2.2	1.3	1.6	1.7	1.8	1.8
TN 2/TEN 2 - 0.8	02	2.0	2.6	3.0	3.1	3.2	1.7	2.2	2.4	2.6	2.6
TN 2/TEN 2 - 1.3	03	3.6	4.7	5.3	5.6	5.8	3.0	3.9	4.4	4.6	4.7
TN 2/TEN 2 - 1.9	04	5.4	7.0	7.8	8.3	8.6	4.5	5.7	6.4	6.8	7.0
TN 2/TEN 2 - 2.5	05	6.9	8.9	9.9	10.8	10.9	5.7	7.3	8.1	8.6	8.8
TN 2/TEN 2 - 3.0	06	8.4	10.8	12.1	12.8	13.2	7.0	8.9	10.0	10.5	10.8
		Evapor	ating ten	nperatur	e –10°C	Evaporating temperature -20°C					
TN 2/TEN 2 - 0.11	0X	0.30	0.38	0.43	0.44	0.44	0.28	0.35	0.39	0.41	0.42
TN 2/TEN 2 - 0.25	00	0.59	0.70	0.77	0.81	0.82	0.53	0.62	0.69	0.72	0.73
TN 2/TEN 2 - 0.5	01	1.0	1.3	1.4	1.5	1.5	0.81	1.00	1.1	1.2	1.2
TN 2/TEN 2 - 0.8	02	1.4	1.8	2.0	2.1	2.1	1.1	1.4	1.5	1.6	1.7
TN 2/TEN 2 - 1.3	03	2.5	3.1	3.5	3.7	3.8	2.0	2.5	2.8	2.9	3.0
TN 2/TEN 2 - 1.9	04	3.6	4.6	5.1	5.4	5.6	2.9	3.6	4.0	4.3	4.4
TN 2/TEN 2 - 2.5	05	4.6	5.8	6.5	6.9	7.1	3.7	4.6	5.1	5.4	5.5
TN 2/TEN 2 - 3.0	06	5.7	7.1	8.0	8.4	8.6	4.5	5.6	6.2	6.6	6.8
		Evapor	ating ten	nperatur	e –30°C		Eva	porating	g temper	ature -4	0°C
TN 2/TEN 2 - 0.11	0X	0.25	0.32	0.35	0.37	0.38	0.23	0.28	0.32	0.33	0.34
TN 2/TEN 2 - 0.25	00	0.48	0.55	0.61	0.64	0.64	0.44	0.50	0.54	0.56	0.57
TN 2/TEN 2 - 0.5	01	0.66	0.80	0.88	0.93	0.95	0.54	0.65	0.72	0.76	0.77
TN 2/TEN 2 - 0.8	02	0.90	1.1	1.2	1.3	1.3	0.74	0.89	0.98	1.0	1.0
TN 2/TEN 2 - 1.3	03	1.6	2.0	2.2	2.3	2.3	1.3	1.6	1.8	1.9	1.9
TN 2/TEN 2 - 1.9	04	2.3	2.9	3.2	3.3	3.4	1.9	2.3	2.6	2.7	2.7
TN 2/TEN 2 - 2.5	05	3.0	3.6	4.0	4.2	4.3	2.4	2.9	3.2	3.5	3.5
TN 2/TEN 2 - 3.0	06	3.6	4.4	4.9	5.2	5.3	3.0	3.6	4.0	4.2	4.3

Correction for subcooling Δt_{sub}

Note: Insufficient subcooling can produce flash gas. The evaporator capacities used must be corrected if subcooling deviates from 4 K. The corrected capacity can be obtained by

dividing the required evaporator capacity by the correction factor below. Selections can then be made from the tables above.

Δt_u	4 K	10 K	15 K	20 K	25 K	30 K	35 K	40 K	45 K	50 K
Correction factor	1.00	1.08	1.13	1.19	1.25	1.31	1.37	1.42	1.48	1.54



Capacity in kW for range N: −40°C to +10°C

R404A / R507

Valve type	Orifice		Pressure drop across valve Δp bar									Pressur	e drop ac	ross valve	Δp bar		
valve type	no.	2	4	6	8	10	12	14	16	2	4	6	8	10	12	14	16
			Eva	porating	g temper	ature +1	0°C					Evapo	rating te	mperatu	re 0°C		
TS 2/TES 2 - 0.11	0X	0.28	0.35	0.40	0.42	0.43	0.43	0.42	0.41	0.30	0.37	0.41	0.42	0.43	0.43	0.43	0.41
TS 2/TES 2 - 0.21	00	0.67	0.82	0.90	0.94	0.96	0.96	0.93	0.90	0.68	0.80	0.87	0.90	0.92	0.93	0.91	0.87
TS 2/TES 2 - 0.45	01	1.7	2.1	2.3	2.4	2.5	2.5	2.4	2.3	1.5	1.9	2.0	2.1	2.2	2.2	2.2	2.1
TS 2/TES 2 - 0.6	02	2.3	3.0	3.4	3.6	3.7	3.7	3.7	3.6	2.1	2.6	3.0	3.1	3.2	3.3	3.2	3.1
TS 2/TES 2 - 1.2	03	4.2	5.4	6.0	6.4	6.6	6.7	6.6	6.4	3.7	4.7	5.3	5.6	5.8	5.8	5.7	5.6
TS 2/TES 2 - 1.7	04	6.2	8.1	9.1	9.7	10.0	10.0	9.8	9.6	5.5	7.1	7.9	8.3	8.6	8.6	8.5	8.3
TS 2/TES 2 - 2.2	05	7.9	10.2	11.4	12.2	12.5	12.6	12.3	12.0	7.0	8.9	10.0	10.5	10.8	10.9	10.8	10.4
TS 2/TES 2 - 2.6	06	9.7	12.5	14.0	14.9	15.3	15.3	15.1	14.7	8.6	10.9	12.2	12.9	13.2	13.3	13.1	12.7
		Evaporating temperature –10°C								,	Evapor	ating ten	nperatur	e –20°C			
TS 2/TES 2 - 0.11	0X	0.30	0.37	0.40	0.42	0.42	0.42	0.41	0.41		0.35	0.38	0.40	0.39	0.40	0.39	0.38
TS 2/TES 2 - 0.21	00	0.65	0.76	0.82	0.84	0.87	0.87	0.85	0.83		0.70	0.75	0.77	0.79	0.79	0.79	0.76
TS 2/TES 2 - 0.45	01	1.3	1.6	1.7	1.8	1.8	1.9	1.8	1.8		1.3	1.5	1.5	1.5	1.5	1.5	1.5
TS 2/TES 2 - 0.6	02	1.8	2.2	2.5	2.6	2.7	2.7	2.7	2.6		1.9	2.0	2.1	2.2	2.2	2.2	2.1
TS 2/TES 2 - 1.2	03	3.1	4.0	4.5	4.7	4.8	4.8	4.8	4.7		3.3	3.7	3.8	3.9	3.9	3.9	3.8
TS 2/TES 2 - 1.7	04	4.7	6.0	6.6	7.0	7.1	7.2	7.1	6.9		4.9	5.4	5.6	5.8	5.8	5.7	5.6
TS 2/TES 2 - 2.2	05	5.9	7.6	8.4	8.8	9.0	9.1	9.0	8.7		6.2	6.9	7.2	7.3	7.3	7.2	7.1
TS 2/TES 2 - 2.6	06	7.3	9.3	10.3	10.8	11.0	11.1	11.0	10.7		7.6	8.4	8.8	8.9	8.9	8.8	8.6
			Eva	porating	g temper	ature –3	0°C					Evapor	ating ten	nperatur	e –40°C		
TS 2/TES 2 - 0.11	0X			0.35	0.37	0.36	0.37	0.36	0.35			0.32	0.33	0.33	0.33	0.32	0.32
TS 2/TES 2 - 0.21	00			0.67	0.70	0.70	0.70	0.69	0.67			0.60	0.61	0.62	0.61	0.60	0.59
TS 2/TES 2 - 0.45	01			1.2	1.2	1.2	1.2	1.2	1.2	1		0.92	0.96	0.97	0.96	0.94	0.91
TS 2/TES 2 - 0.6	02			1.6	1.7	1.7	1.7	1.7	1.6	l		1.3	1.3	1.3	1.3	1.3	1.2
TS 2/TES 2 - 1.2	03			2.9	3.0	3.1	3.1	3.0	2.9	1		2.3	2.4	2.4	2.4	2.3	2.2
TS 2/TES 2 - 1.7	04			4.3	4.5	4.5	4.5	4.5	4.4	1		3.3	3.5	3.5	3.5	3.4	3.3
TS 2/TES 2 - 2.2	05			5.5	5.7	5.7	5.7	5.7	5.5	1		4.3	4.4	4.5	4.4	4.4	4.2
TS 2/TES 2 - 2.6	06			6.7	6.9	7.0	7.0	6.9	6.8			5.2	5.4	5.5	5.4	5.3	5.2

Capacity in kW for range B: −60°C to −25°C

Valve type	Orifice			Pressur	e drop ac	ross valve	≙ ∆p bar					Pressur	e drop ac	ross valve	∆p bar		
valve type	no.	2	4	6	8	10	12	14	16	2	4	6	8	10	12	14	16
			Eva	porating	g temper	ature –2	5°C					Evapor	ating ten	nperatur	e –30°C		
TS 2/TES 2 - 0.21	00	0.57	0.67	0.72	0.73	0.74	0.85	0.74	0.71	0.53	0.64	0.67	0.70	0.70	0.70	0.69	0.67
TS 2/TES 2 - 0.45	01	0.98	1.2	1.3	1.5	1.4	1.4	1.4	1.31	0.88	1.07	1.2	1.2	1.2	1.2	1.2	1.2
TS 2/TES 2 - 0.6	02	1.3	1.7	1.8	1.9	1.9	1.9	1.9	1.9	1.2	1.5	1.6	1.7	1.7	1.7	1.7	1.6
TS 2/TES 2 - 1.0	03	2.4	3.0	3.3	3.4	3.5	3.5	3.4	3.3	2.1	2.7	2.9	3.0	3.1	3.1	3.0	2.9
TS 2/TES 2 - 1.4	04	3.5	4.4	4.8	5.0	5.1	5.1	5.1	4.9	3.1	3.9	4.3	4.5	4.5	4.5	4.5	4.4
TS 2/TES 2 - 1.7	05	4.4	5.6	6.1	6.4	6.5	6.5	6.4	6.3	3.9	4.9	5.5	5.7	5.7	5.7	5.7	5.5
TS 2/TES 2 - 1.9	06	5.4	6.8	7.5	7.8	7.9	7.9	7.9	7.6	4.8	6.1	6.7	6.9	7.0	7.0	6.9	6.8
	Evaporating temperature –40°C										Evapor	ating ten	nperatur	e –50°C			
TS 2/TES 2 - 0.21	00		0.56	0.60	0.61	0.62	0.61	0.60	0.59		0.49	0.53	0.54	0.54	0.53	0.52	0.50
TS 2/TES 2 - 0.45	01		0.85	0.92	0.96	0.97	0.96	0.94	0.91		0.51	0.57	0.60	0.60	0.60	0.60	0.59
TS 2/TES 2 - 0.6	02		1.2	1.3	1.3	1.3	1.3	1.3	1.2		0.91	0.99	1.0	1.0	1.0	0.98	0.95
TS 2/TES 2 - 1.0	03		2.1	2.3	2.4	2.4	2.4	2.3	2.2		1.6	1.8	1.8	1.8	1.8	1.8	1.7
TS 2/TES 2 - 1.4	04		3.0	3.3	3.5	3.5	3.5	3.4	3.3		2.4	2.6	2.7	2.7	2.7	2.6	2.6
TS 2/TES 2 - 1.7	05		3.9	4.3	4.4	4.5	4.4	4.4	4.2		3.0	3.3	3.4	3.5	3.4	3.4	3.3
TS 2/TES 2 - 1.9	06		4.7	5.2	5.4	5.5	5.5	5.3	5.2		3.7	4.0	4.2	4.2	4.2	4.1	4.0
			Eva	porating	g temper	ature –6	0°C	,									
TS 2/TES 2 - 0.21	00			0.46	0.48	0.47	0.45	0.45	0.43								
TS 2/TES 2 - 0.45	01			0.58	0.60	0.60	0.58	0.56	0.54								
TS 2/TES 2 - 0.6	02			0.78	0.80	0.80	0.78	0.75	0.72								
TS 2/TES 2 - 1.0	03			1.4	1.4	1.4	1.4	1.4	1.3	1							
TS 2/TES 2 - 1.4	04			2.0	2.1	2.1	2.1	2.0	2.0	1							
TS 2/TES 2 - 1.7	05			2.6	2.7	2.7	2.7	2.6	2.5	1							
TS 2/TES 2 - 1.9	06			3.2	3.3	3.3	3.3	3.2	3.1	1							

Correction for subcooling Δt_{sub}

Note: Insufficient subcooling can produce flash gas. The evaporator capacities used must be corrected if subcooling deviates from 4 K. The corrected capacity can be obtained by

dividing the required evaporator capacity by the correction factor below. Selections can then be made from the tables above.

Δt_u	4 K	10 K	15 K	20 K	25 K	30 K	35 K	40 K	45 K	50 K
Correction factor	1.00	1.10	1.20	1.29	1.37	1.46	1.54	1.63	1.70	1.78

Technical leaflet

Thermostatic expansion valves, type T 2 and TE 2

Design Function

General

T 2 and TE 2 valves have an interchangeable orifice assembly.


For the same valve type and refrigerant, the associated orifice assembly is suitable for all versions of valve body and in all evaporating temperature ranges.

The charge in the thermostatic element depends on the evaporating temperature range. The valves can be equipped with internal (T 2) or external (TE 2) pressure equalization.

External pressure equalization should always be used on systems with liquid distributors. The double contact bulb gives fast and precise reaction to temperature changes in the evaporator. It also makes fitting the bulb quick and easy.

The valves are able to withstand the effects that normally occur with hot gas defrosting.

To ensure long operating life, the valve cone and seat are made of a special alloy with particularly good wear qualities.

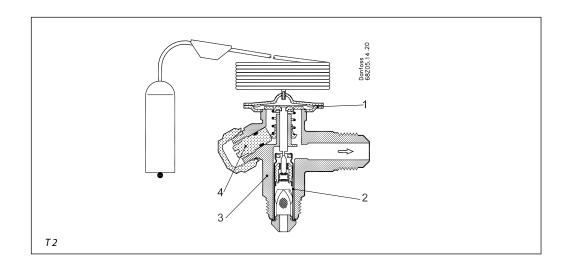

- 1. Thermostatic element
- (diaphragm)
 2. Interchangeable orifice assembly
- 3. Valve body
- Superheat setting spindle (see instructions)



Identification

The thermostatic element is fitted with a laser engraving on top of the diaphragm.

This engraving gives valve type (with code number), evaporating temperature range, MOP point, refrigerant, and max. working pressure, PS/MWP.

The code refers to the refrigerant for which the valve is designed:

X = R22/R407C¹⁾ Z = R407C N = R134a S = R404A/R507


Orifice assembly for T 2 and TE 2


The orifice assembly is marked with the orifice size (e.g. 06) and week stamp + last number in the year (e.g. 174).


The orifice assembly number is also given on the lid of its plastic container.

Capillary tube label for T 2 and TE 2

The label gives the orifice size (04) and consists of the lid of the orifice assembly plastic container. It can easily be fastened around the expansion valve capillary tube to clearly identify the valve size.

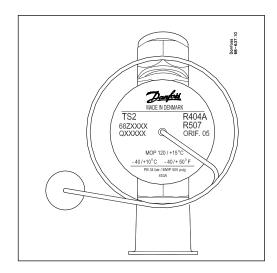


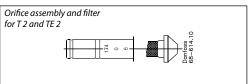

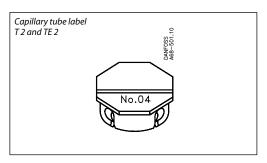

Dimensions and weights

T 2 and TE 2

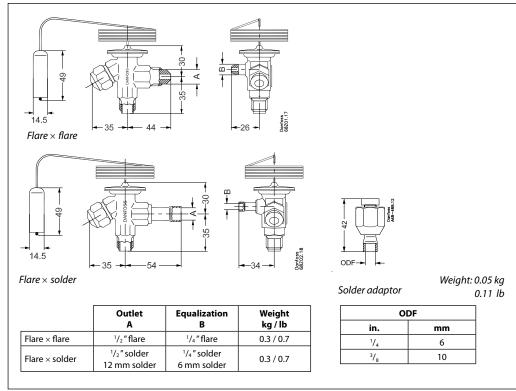

¹⁾ For R407C plants, please select valves from the dedicated R407C program



Technical leaflet Thermostatic expansion valves, type T 2 and TE 2

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.

All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.