


2" MINIMUM GAP FOR EVERY 4' OF WINDOW

C. <u>DO NOT APPLY A CONTINUOUS SEALANT BEAD</u>


TO ALLOW FOR PROPER DRAINAGE.

ACROSS BOTTOM SILL FLANGE.

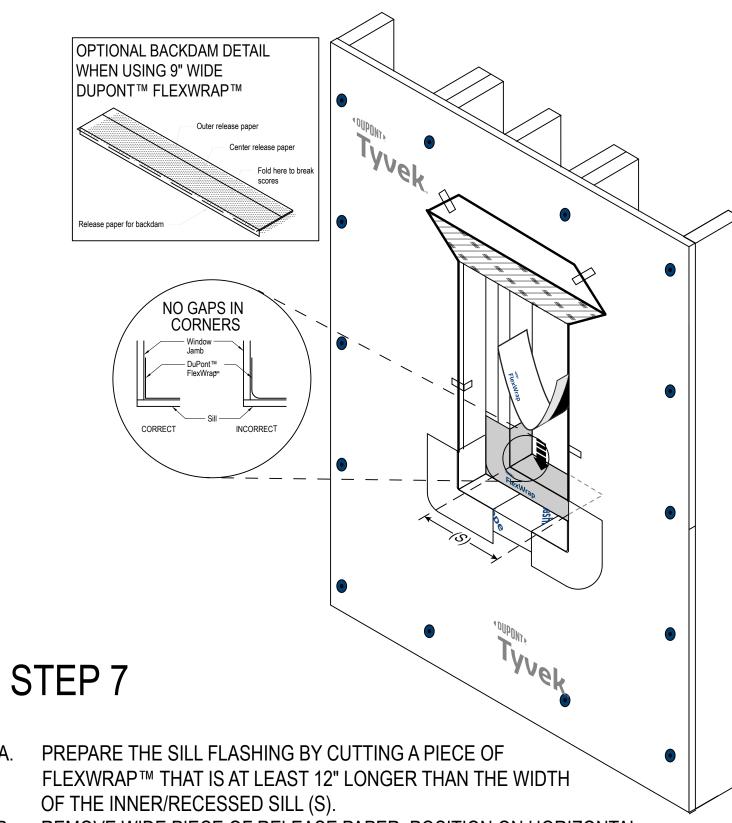


- A. PREPARE THE SILL FLASHING BY CUTTING A PIECE OF FLEXWRAP™ THAT IS AT LEAST 12" LONGER THAN THE WIDTH OF THE INNER/RECESSED SILL (S).
- B. REMOVE WIDE PIECE OF RELEASE PAPER. POSITION ON HORIZONTAL SILL BY ALIGNING THE INSIDE EDGE OF THE NARROW RELEASE PAPER WITH THE FACE OF THE FRAMING TO ENSURE 2"-3" OF THE FLEXWRAP™ WILL BE ADHERED TO THE FACE OF THE FRAMING WITH A MINIMUM OF 6" UP EACH JAMB.
- C. ADHERE INTO ROUGH OPENING. **DO NOT STRETCH** MATERIAL ALONG THE SILL OR JAMB.


NOTE: FLEXWRAP™ SHOULD NOT EXTEND/TRANSITION ONTO THE OUTER SILL.

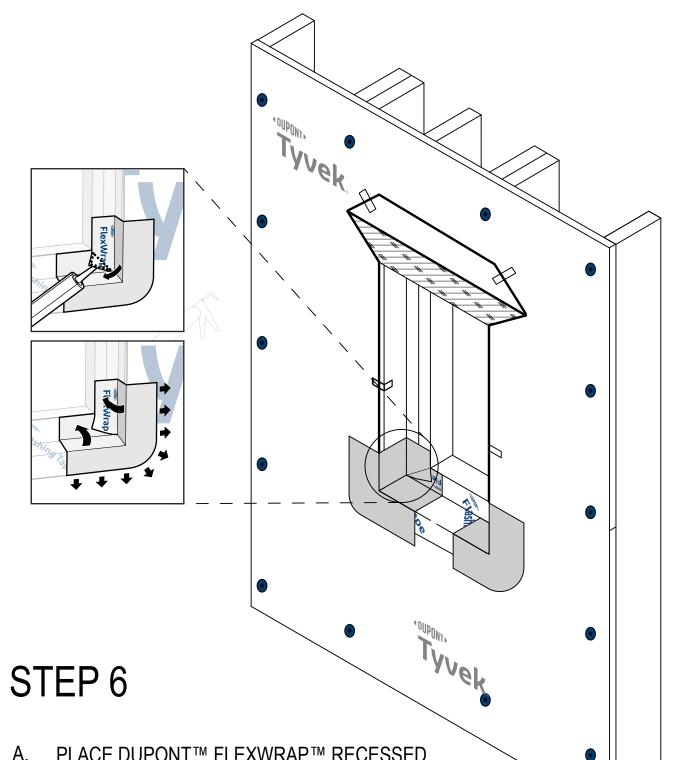


- A. PLACE DUPONT™ FLEXWRAP™ RECESSED WINDOW CORNERS INTO CORNER OF RECESS SO EXPOSED BUTYL IS AGAINST FACE OF RECESSED WINDOW FRAME AND ADHERE 2"-3" ONTO THE FACE OF THE WALL
- B. APPLY A CHEMICALLY-COMPATIBLE SEALANT BEHIND THE LOOSE TRIANGULAR FLAP OF THE FLEXWRAP™ RECESSED WINDOW CORNER PIECE AND PRESS FLAP INTO SEALANT. C. REPEAT STEPS A THROUGH B FOR OPPOSITE CORNER.

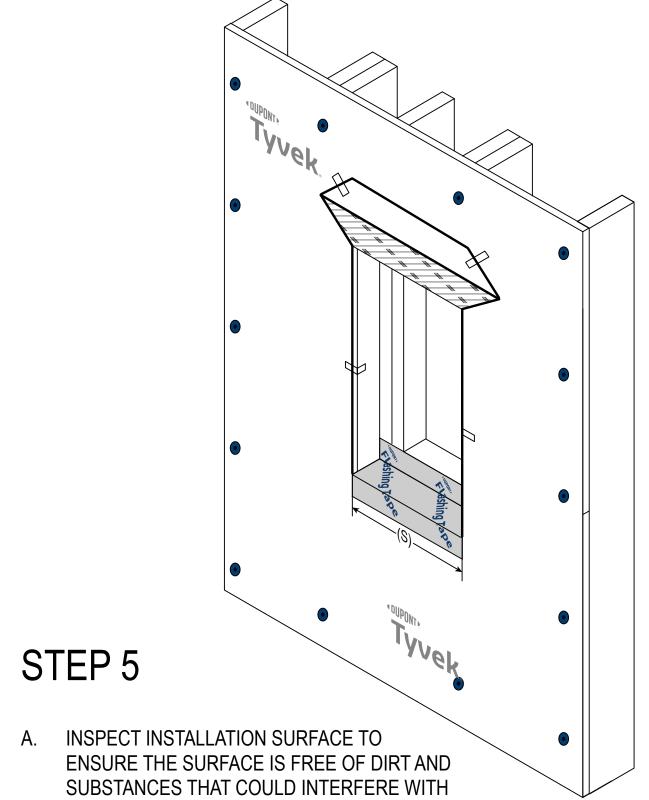


- ADHESION AS WELL AS ANY SHARP PROTRUSIONS. B. CUT DUPONT™ FLASHING TAPE OR DUPONT™ STRAIGHTFLASH™ THE LENGTH OF THE OUTER SILL (S). REFER TO TABLE 1 BELOW FOR INFORMATION ON FLASHING WIDTH NEEDED BASED ON FRAMING DIMENSIONS.
- C. FOLD THE DUPONT™ FLASHING TAPE OR STRAIGHTFLASH™ LENGTHWISE USING THE MEASUREMENTS X, Y, AND Z SHOWN IN TABLE 1 BELOW.
- D. REMOVE RELEASE PAPER AND INSTALL.

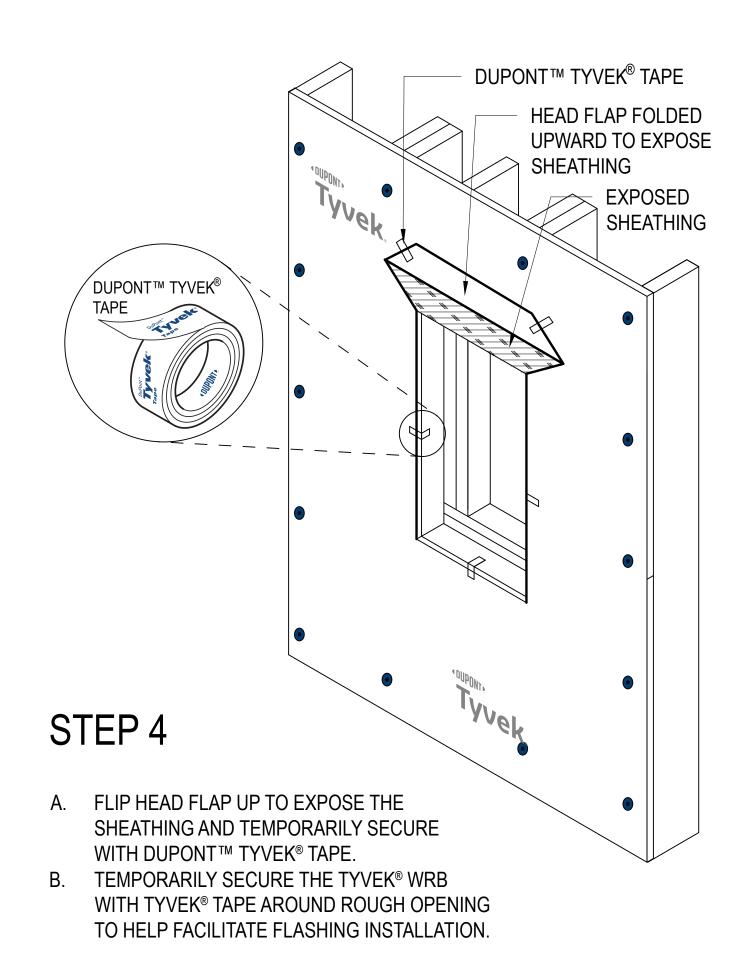

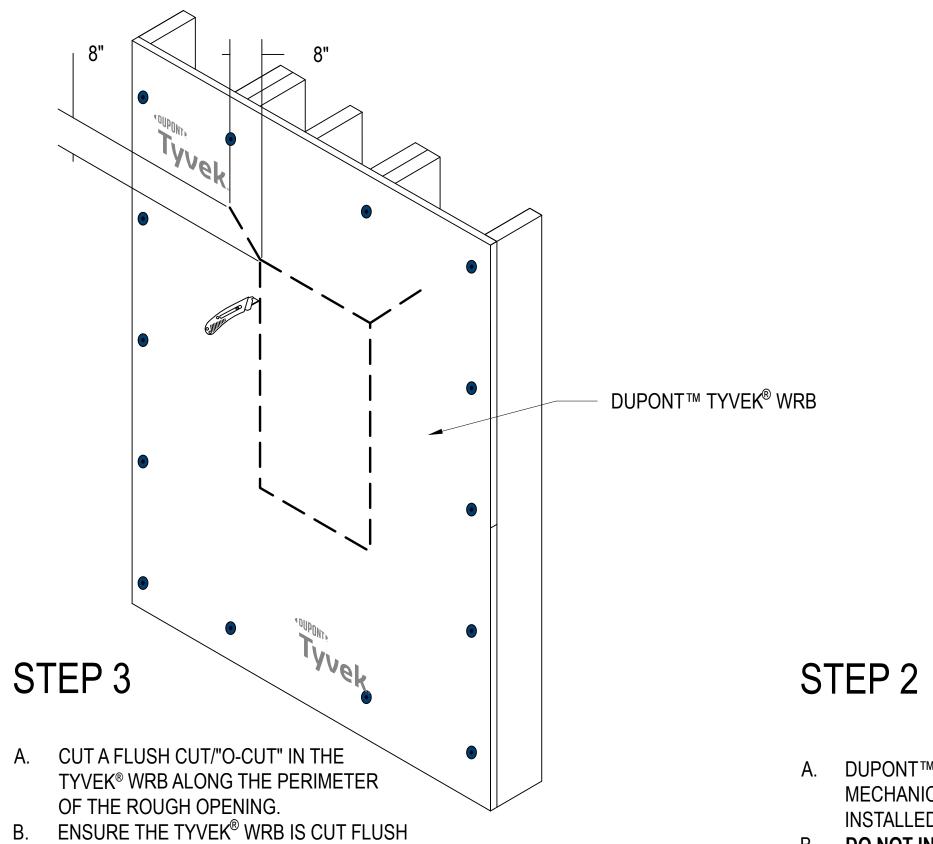


- A. CUT A FLUSH CUT/"O-CUT" IN THE
- WITH THE SHEATHING AND IS NOT WRAPPED INTO THE ROUGH OPENING. C. CUT A HEAD FLAP AT A 45-DEGREE ANGLE TO EXPOSE 8" OF SHEATHING TO ALLOW FOR HEAD FLASHING INSTALLATION.

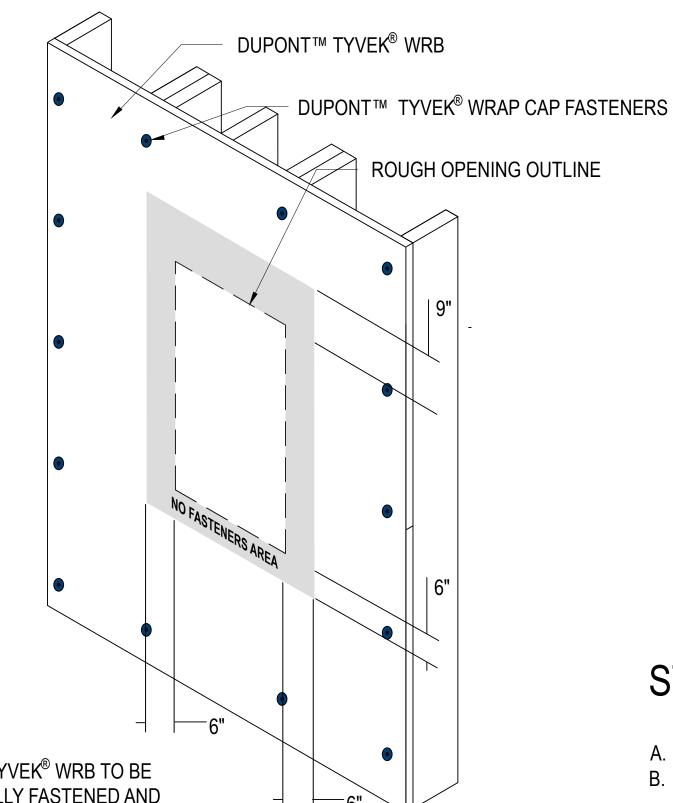

A. DUPONT™ TYVEK® WRB TO BE MECHANICALLY FASTENED AND INSTALLED OVER SHEATHING.

B. **DO NOT INSTALL** FASTENERS WITHIN 6" OF THE SILLS AND JAMBS OF THE OPENING AND

WITHIN 9" OF THE HEAD OPENING.

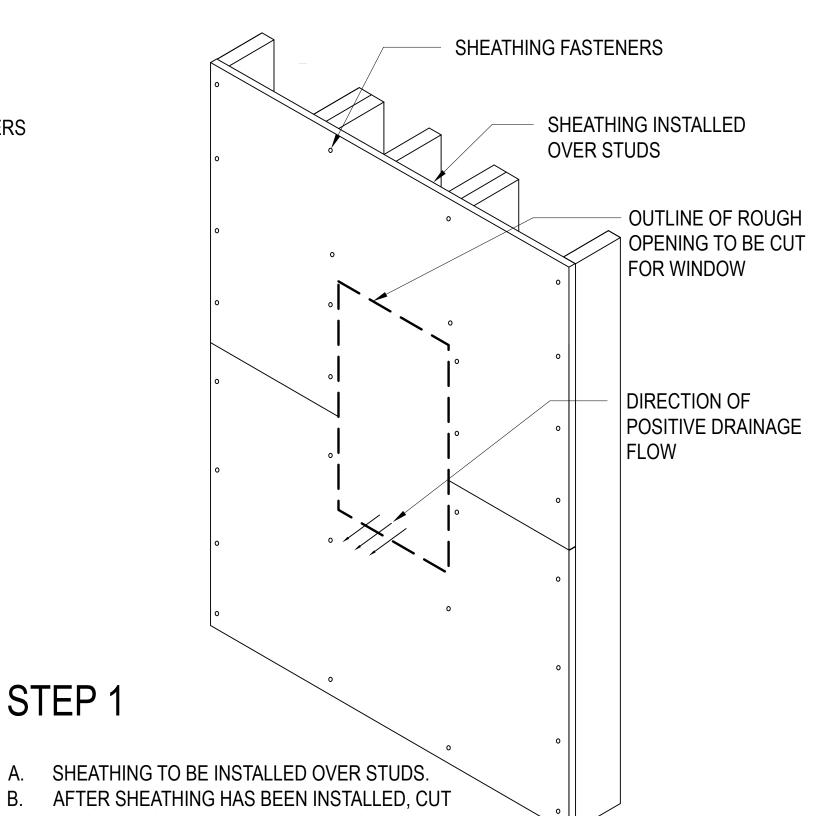

B. AFTER SHEATHING HAS BEEN INSTALLED, CUT AN OPENING IN THE SHEATHING ALONG THE PERIMETER OF THE ROUGH OPENING FOR THE WINDOW.

STEP 1

- C. ENSURE THE SHEATHING IS CUT FLUSH WITH OR SLIGHTLY BELOW THE SILL FRAMING TO ALLOW FOR POSITIVE DRAINAGE.
- D. FRAMING IS ONLY SHOWN SCHEMATICALLY. SEE DRAWINGS BY OTHERS FOR DETAILED INFORMATION.

Integral Flanged Window with Shallow (Up to 4")
Recessed Opening
Installed AFTER the DuPont™ Tyvek® WRB Installation Sequence


**DRAWING:** MF-OP-2150-MA Page 1 of 2


1/20/2025 SCALE: Not to Scale


TABLE 1: SILL/HEAD FLASHING FOR SHALLOW RECESSED WINDOW CONDITION

	X	Υ	Z	
6" <b>DUPONT™ FLASHING TAPE</b> (single stud)	2"	1"	3"	
6" <b>DUPONT™ FLASHING TAPE</b> (single stud)	2"	2"	2"	
6" <b>DUPONT™ FLASHING TAPE</b> (double stud)	2"	2"	2"	
9" <b>DUPONT™ FLASHING TAPE</b> (double stud)	3"	3"	3"	
9" <b>DUPONT™ FLASHING TAPE</b> (double stud)	3"	4"	2"	

INSTALLATION IS APPLICABLE FOR SINGLE-FAMILY RESIDENTIAL & WOOD-FRAMED MULITI-FAMILY AND LIGHT COMMERCIAL BUILDINGS WHEN PERFORMANCE REQUIREMENTS DO NOT EXCEED ASTM E1677 (65 MPH EQUIVALENT STRUCTURAL LOAD AND 50 MPH (6.24 PSF) EQUIVALENT WIND-DRIVEN RAIN WATER INFILTRATION WHEN TESTED IN ACCORDANCE WITH ASTM E331, ASTM E1105, OR SIMILAR), AND WINDOW/DOOR DESIGN RATINGS THAT DO NOT EXCEED DP45. SEE APPLICABLE STRUCTURES AND PERFORMANCE CRITERIA IN THE APPLICABLE DUPONT INSTALLATION GUIDELINE FOR MORE INFORMATION REGARDING BUILDING TYPES AND BUILDING ENVELOPE PERFORMANCE. ALWAYS CHECK BUILDING.DUPONT.COM FOR THE LATEST VERSIONS OF DUPONT INSTALLATION GUIDELINES AND OTHER PRODUCT LITERATURE.

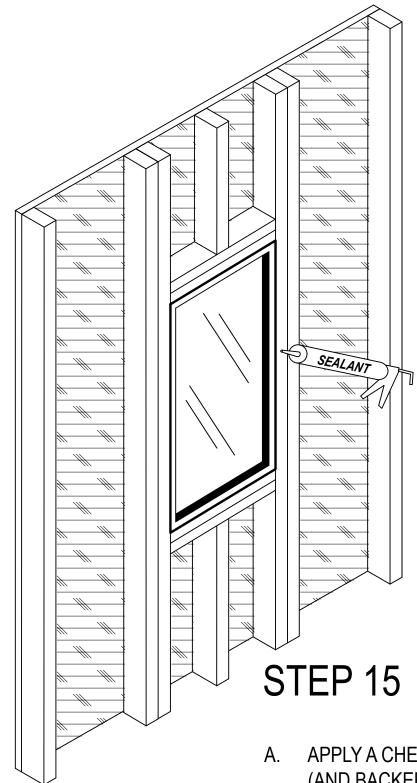

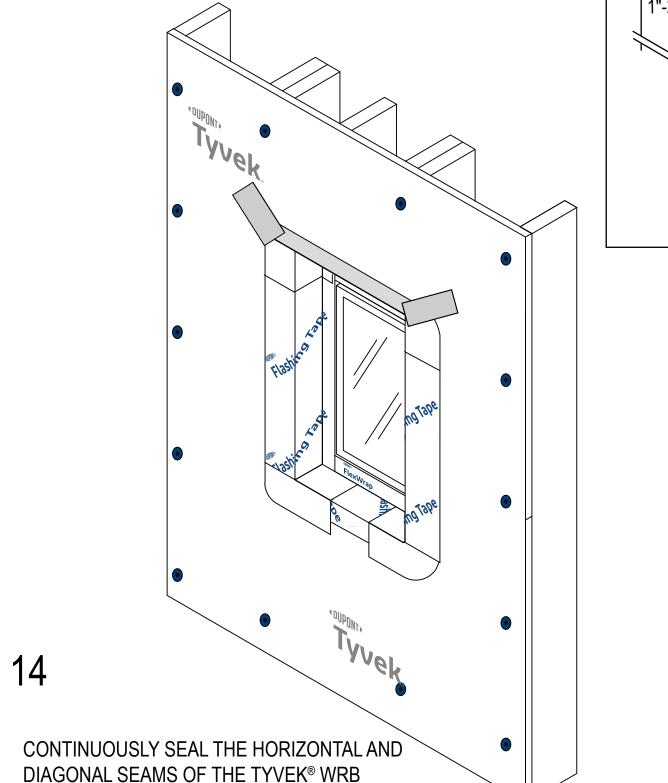

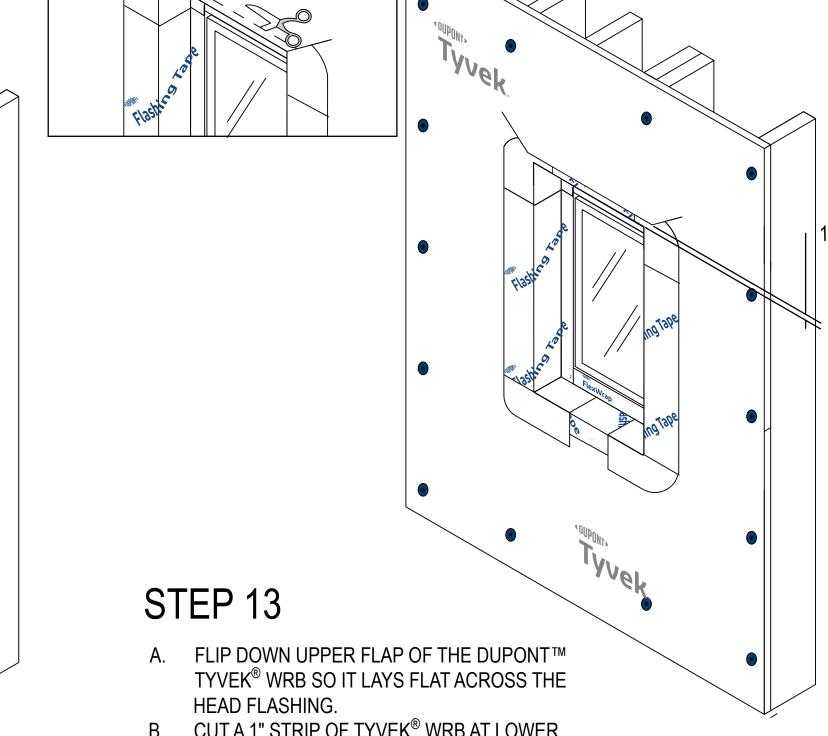

A. APPLY A CHEMICALLY-COMPATIBLE SEALANT (AND BACKER ROD AS NECESSARY) AROUND THE THE WINDOW OPENING AT THE INTÉRIOR. IT IS ALSO ACCEPTABLE TO USE GREAT STUFF PRO™ WINDOW AND DOOR POLYURETHANE FOAM SEALANT, OR A CHEMICALLY-COMPATIBLE FOAM.


DIAGONAL SEAMS OF THE TYVEK® WRB HEAD FLAP WITH DUPONT™ FLASHING TAPE OR DUPONT™ STRAIGHTFLASH™. INSTALL FASTENERS AS NEEDED THROUGH FLASHING FOR INCREASED HOLDING POWER.

SKIP SEALING WITH A MAXIMUM OF TWO (2) GAPS FOR EVERY 3' OF WINDOW IS ACCEPTABLE FOR ADDITIONAL DRAINAGE <u>IF AN AIR BARRIER IS NOT REQUIRED</u>.

HEAD FLASHING.


B. CUT A 1" STRIP OF TYVEK® WRB AT LOWER HORIZONTAL EDGE OF HEAD FLAP.

C. WHEN TRIMMING THE TYVEK® WRB, **DO NOT CUT** OR DAMAGE THE HEAD FLASHING THAT HAS BEEN INSTALLED BEHIND IT.

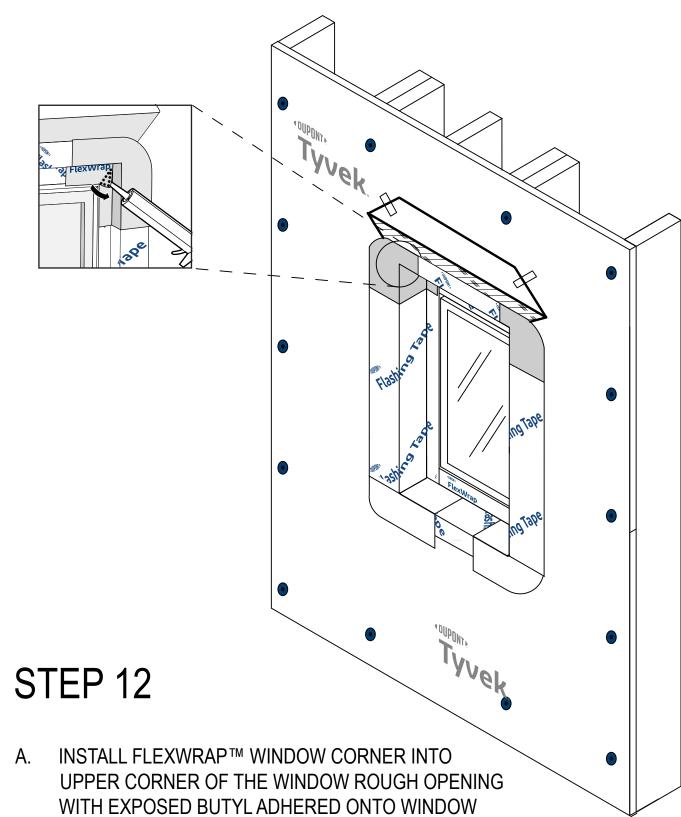


WITH EXPOSED BUTYL ADHERED ONTO WINDOW FLANGES IN SIMILAR MANNER USED FOR LOWER CORNER PIECES (STEP 6).

- B. APPLY A CHEMICALLY-COMPATIBLE SEALANT INTO FLEXWRAP™ RECESSED WINDOW
- CORNER FLAP. C. REPEAT STEPS A THROUGH B FOR OPPOSITE CORNER.

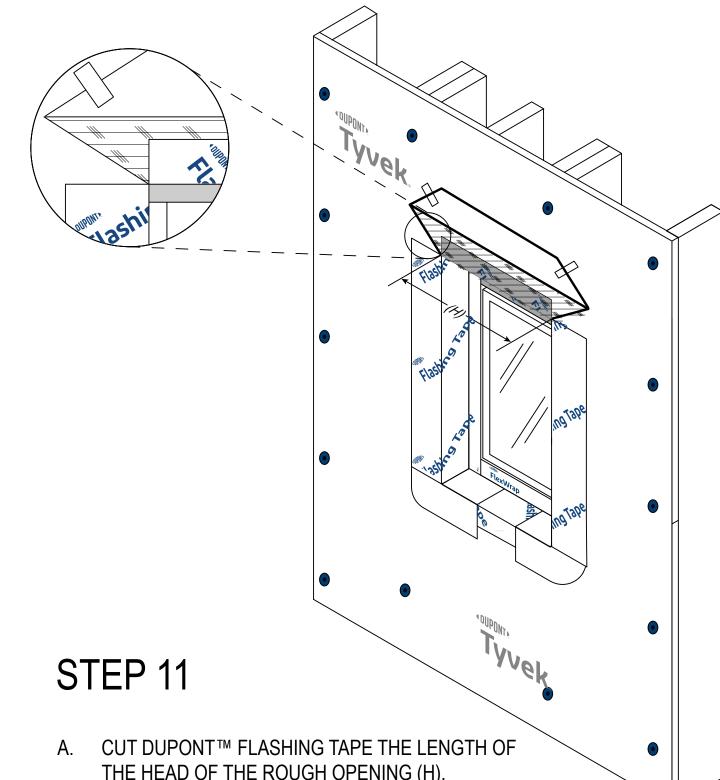


- THE HEAD OF THE ROUGH OPENING (H).
- B. FOLD DUPONT™ FLASHING TAPE LENGTHWISE TO CREATE A SHARP CREASE IN THE RELEASE PAPER USING MEASUREMENTS (X,Y, AND Z) SHOWN IN TABLE 2 BELOW.
- C. REMOVE RELEASE PAPER AND INSTALL DUPONT™ FLASHING TAPE STARTING FROM WINDOW HEAD AND ENDING ON EXTERIOR SHEATHING.

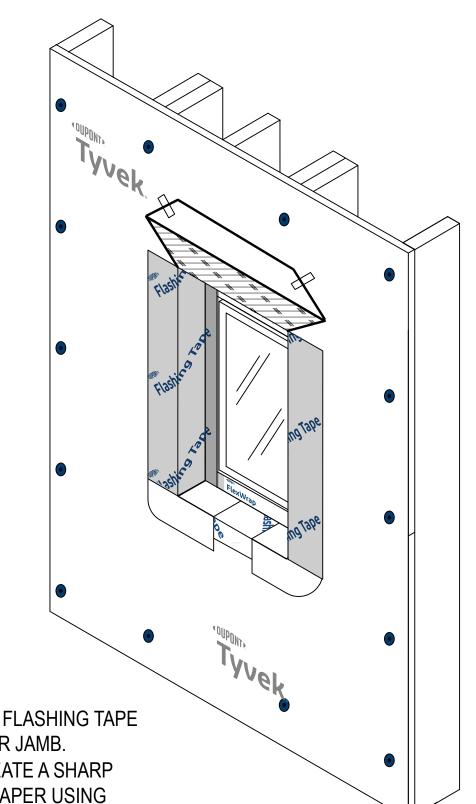

STEP 10

- A. CUT A PIECE OF DUPONT™ FLASHING TAPE THE LENGTH OF THE OUTER JAMB.
- B. FOLD LENGTHWISE TO CREATE A SHARP CREASE IN THE RELEASE PAPER USING MEASUREMENTS (X,Y, AND Z) SHOWN IN TABLE 2 BELOW.
- C. REMOVE THE FIRST PIECE OF RELEASE PAPER TO EXPOSE THE BUTYL THAT WILL BE INSTALLED ONTO THE WINDOW FLANGE BY TEARING ALONG THE CREASE. **DO NOT CUT** RELEASE PAPER WITH SHARP OBJECT AS THIS COULD RESULT IN DAMAGE TO THE BUTYL AND COMPROMISE THE PROTECTION PROVIDED BY THE DUPONT™FLASHING TAPE.
- D. STARTING AT THE TOP CORNER OF WINDOW, ADHERE EXPOSED BUTYL ADHESIVE ONTO WINDOW FLANGE. E. ONCE BUTYL IS ADHERED TO THE WINDOW FLANGE,
- REMOVE THE REMAINING RELEASE PAPER.
- F. REPEAT STEPS A THROUGH E FOR OPPOSITE JAMB.

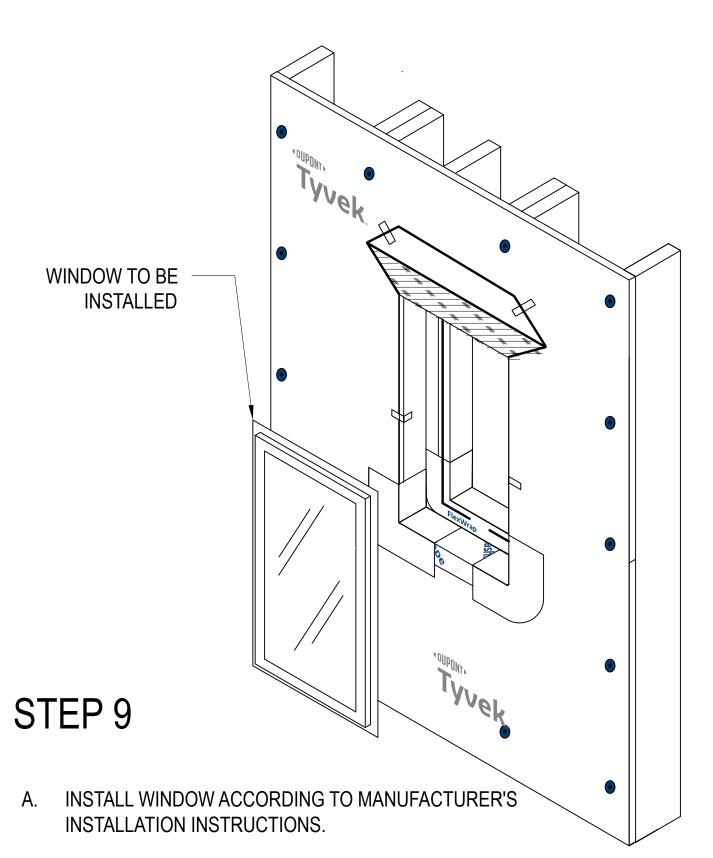

Integral Flanged Window with Shallow (Up to 4")
Recessed Opening
Installed AFTER the DuPont™ Tyvek® WRB Installation Sequence

**DRAWING:** MF-OP-2150-MA Page 2 of 2

1/20/2025 SCALE: Not to Scale

TABLE 2: JAMB FLASHING FOR SHALLOW RECESSED WINDOW CONDITION

	X	Υ	Z
6" <b>DUPONT™ FLASHING TAPE</b> (single stud)	2"	1"	3"
6" <b>DUPONT™ FLASHING TAPE</b> (single stud)	2"	2"	2"
6" <b>DUPONT™ FLASHING TAPE</b> (double stud)	2"	2"	2"
9" <b>DUPONT™ FLASHING TAPE</b> (double stud)	3"	3"	3"
9" <b>DUPONT™ FLASHING TAPE</b> (double stud)	3"	4"	2"

NOTES:

INSTALLATION IS APPLICABLE FOR SINGLE-FAMILY RESIDENTIAL & WOOD-FRAMED MULITI-FAMILY AND LIGHT COMMERCIAL BUILDINGS WHEN PERFORMANCE REQUIREMENTS DO NOT EXCEED ASTM E1677 (65 MPH EQUIVALENT STRUCTURAL LOAD AND 50 MPH (6.24 PSF) EQUIVALENT WIND-DRIVEN RAIN WATER INFILTRATION WHEN TESTED IN ACCORDANCE WITH ASTM E331, ASTM E1105, OR SIMILAR), AND WINDOW/DOOR DESIGN RATINGS THAT DO NOT EXCEED DP45. SEE APPLICABLE STRUCTURES AND PERFORMANCE CRITERIA IN THE APPLICABLE DUPONT INSTALLATION GUIDELINE FOR MORE INFORMATION REGARDING BUILDING TYPES AND BUILDING ENVELOPE PERFORMANCE. ALWAYS CHECK BUILDING.DUPONT.COM FOR THE LATEST VERSIONS OF DUPONT INSTALLATION GUIDELINES AND OTHER PRODUCT LITERATURE.

