


### STEP 9


A. APPLY A CHEMICALLY-COMPATIBLE SEALANT
(AND BACKER ROD AS NECESSARY) AROUND
THE DOOR OPENING AT THE INTERIOR.
IT IS ALSO ACCEPTABLE TO USE GREAT STUFF PRO™
WINDOW AND DOOR POLYURETHANE FOAM SEALANT,
OR A CHEMICALLY-COMPATIBLE FOAM.

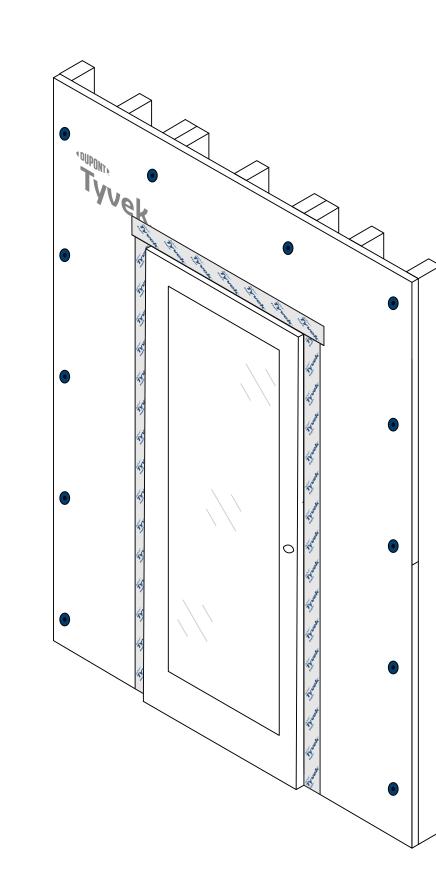

### STEP 8


A. STARTING AT THE JAMBS AND THEN THE HEAD,
TERMINATE THE TYVEK® WRB USING DUPONT™
TYVEK® TAPE, DUPONT™ FLASHING TAPE, OR
STRAIGHTFLASH™.

NOTE: FOR A MORE ROBUST TERMINATION, SEAL WITH
DUPONT™ FLASHING TAPE OR STRAIGHTFLASH™.
INSTALL MECHANICAL FASTENERS THROUGH FLASHING
AS NEEDED FOR INCREASED HOLDING POWER.

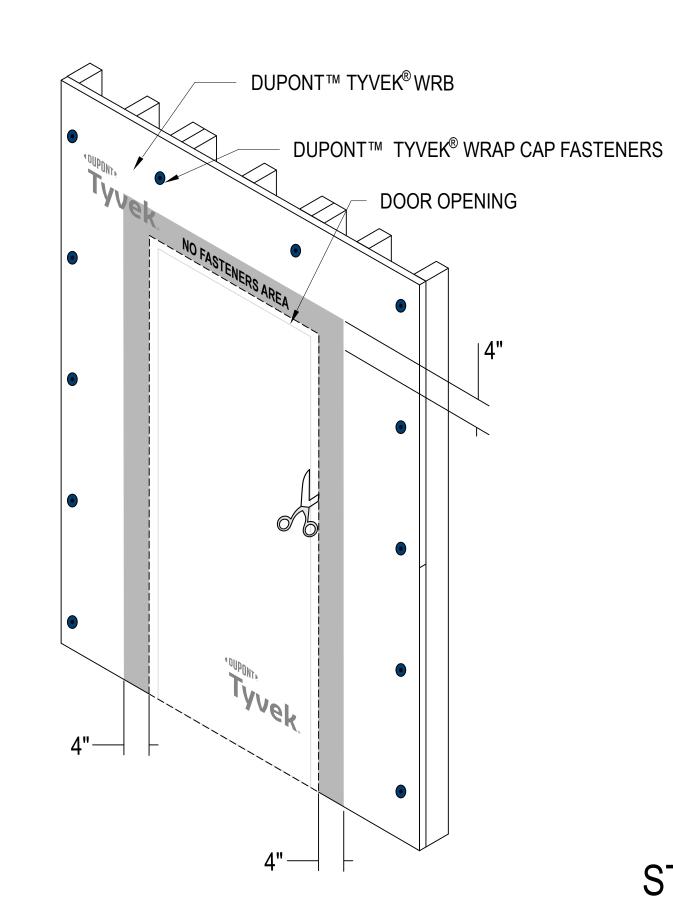

## STEP 7


- A. DUPONT™ TYVEK® WRB TO BE MECHANICALLY FASTENED AND INSTALLED OVER SHEATHING.
- B. **DO NOT INSTALL** FASTENERS WITHIN 4" OF THE DOOR FRAME AT THE JAMBS AND HEAD.
- C. MARK A PERIMETER ON THE TYVEK® WRB AROUND THE THE OPENING 1"-2" FROM THE JAMBS AND HEAD OF THE DOOR FRAME. CUT THE TYVEK® WRB ALONG PERIMETER TO EXPOSE DOOR. **DO NOT CUT** THROUGH THE DUPONT SELF-ADHERED FLASHING PRODUCTS UNDERNEATH.

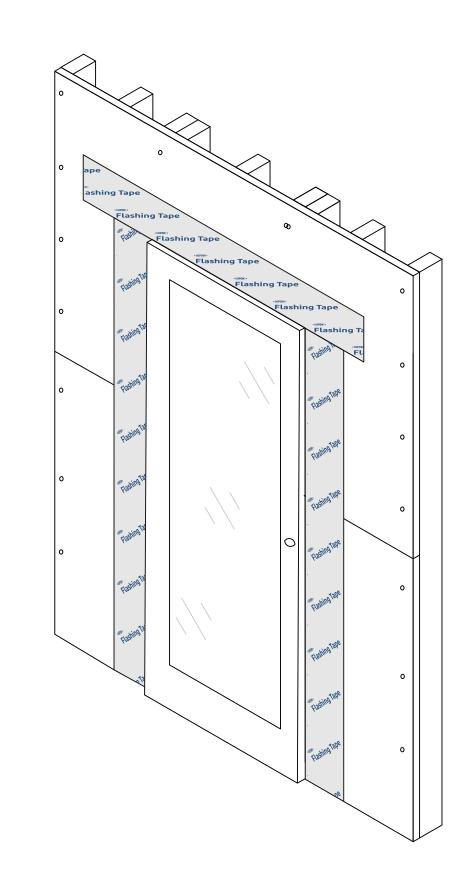

## STEP 6


- A. CUT A PIECE OF DUPONT™ FLASHING TAPE OR STRAIGHTFLASH™ FOR HEAD FLASHING.
- B. HEAD FLASHING TO EXTEND BEYOND OUTER EDGES OF JAMB FLASHING.
- C. REMOVE RELEASE PAPER AND INSTALL COMPLETELY COVERING DOOR MOUNTING FLANGE AND ADHERING TO THE EXPOSED SHEATHING.

  NOTE: AN ADHESIVE/PRIMER IS REQUIRED FOR WOODBASED SHEATHING, WHEN APPLYING FLASHING DURING ADVERSE WEATHER CONDITIONS.

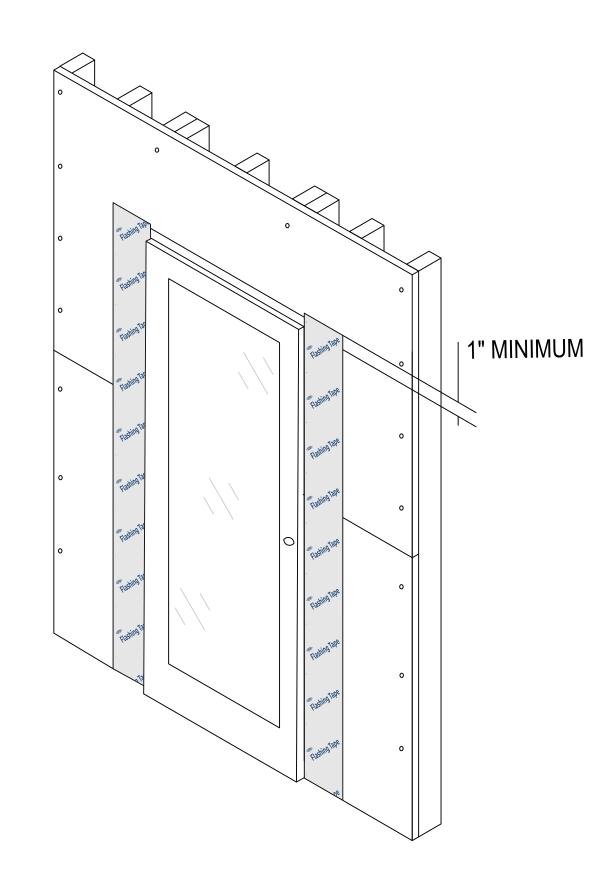


## STEP 5

A. CUT TWO PIECES OF DUPONT™ FLASHING TAPE
OR DUPONT™ STRAIGHTFLASH™ FOR JAMB
FLASHING EXTENDING 1" ABOVE THE DOOR HEAD
FLANGE. REMOVE RELEASE PAPER AND PRESS
TIGHTLY ALONG SIDES OF THE DOOR FRAME.
NOTE: AN ADHESIVE/PRIMER IS REQUIRED FOR
WOOD-BASED SHEATHING WHEN APPLYING FLASHING
DURING ADVERSE WEATHER CONDITIONS.

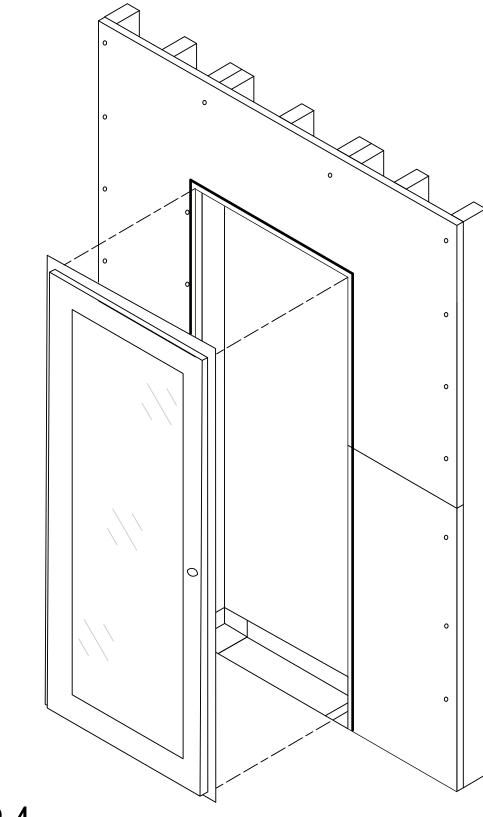


## STEP 4

A. INSTALL DOOR ACCORDING TO MANUFACTURER'S INSTALLATION INSTRUCTIONS.

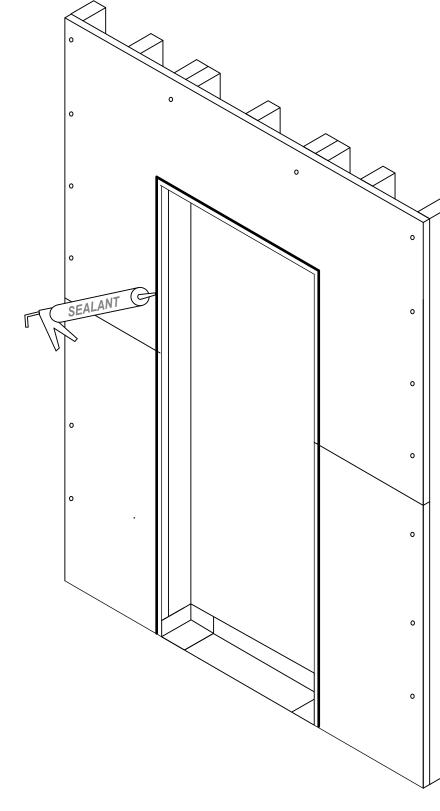


## STEP 3

A. APPLY A CHEMICALLY-COMPATIBLE SEALANT AROUND THE THE DOOR OPENING ON THREE SIDES (JAMBS AND HEAD) AS SHOWN ABOVE.

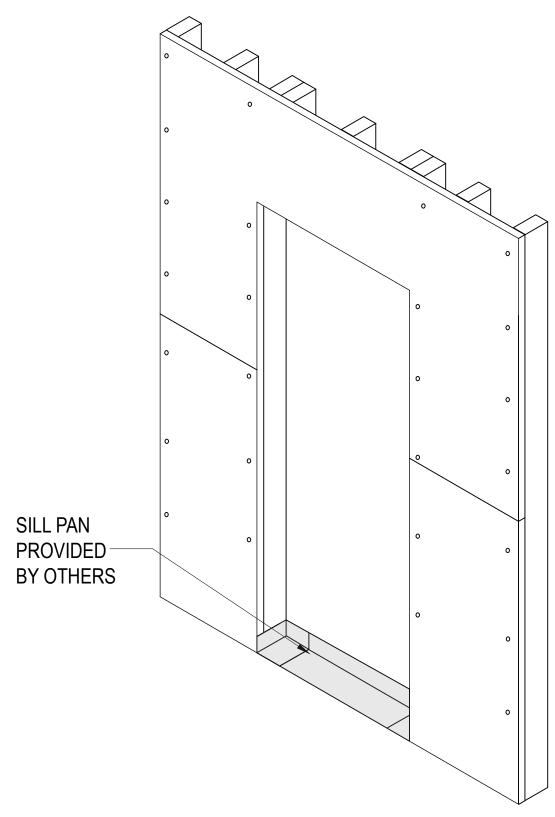


## STEP 2

- A. PREPARE THE SILL FLASHING AND/OR THRESHOLD PER MANUFACTURER'S RECOMMENDATION AND SEAL THE CORNER PAN FLASHING WITH SEALANT (IF APPLICABLE).
- B. SHIM, LEVEL AND ANCHOR PAN/THRESHOLD PER MANUFACTURER'S INSTRUCTIONS.

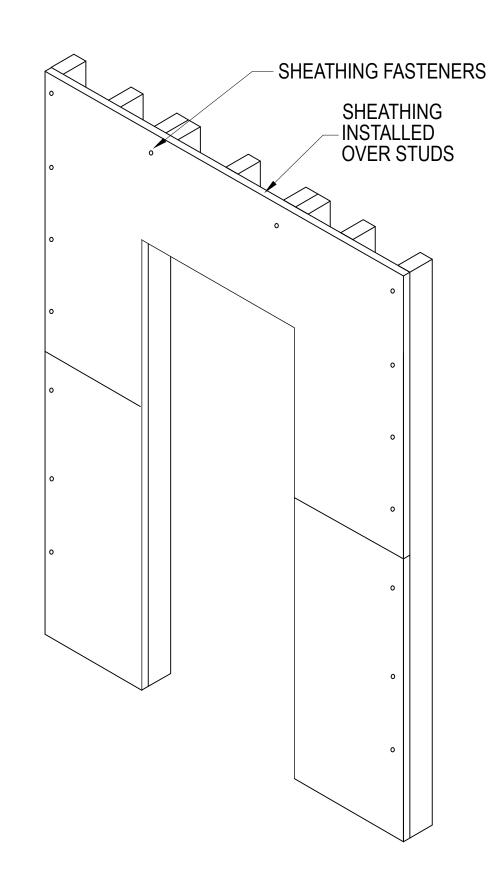

# STEP 1

- A. SHEATHING TO BE INSTALLED OVER STUDS.
   B. AFTER SHEATHING HAS BEEN INSTALLED, CUT AN OPENING IN THE SHEATHING ALONG THE PERIMETER OF THE ROUGH OPENING FOR THE DOOR.
- C. FRAMING IS ONLY SHOWN SCHEMATICALLY.
  SEE DRAWINGS BY OTHERS FOR DETAILED INFORMATION.

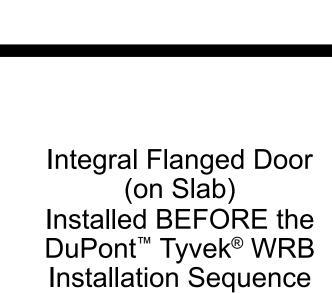

DRAWING: MF-OP-3120S-MA

REVISION DATE
1/20/2025

SCALE: Not to Scale



#### NOTES:

INSTALLATION IS APPLICABLE FOR SINGLE-FAMILY RESIDENTIAL & WOOD-FRAMED MULITI-FAMILY AND LIGHT COMMERCIAL BUILDINGS WHEN PERFORMANCE REQUIREMENTS DO NOT EXCEED ASTM E1677 (65 MPH EQUIVALENT STRUCTURAL LOAD AND 50 MPH (6.24 PSF) EQUIVALENT WIND-DRIVEN RAIN WATER INFILTRATION WHEN TESTED IN ACCORDANCE WITH ASTM E331, ASTM E1105, OR SIMILAR), AND WINDOW/DOOR DESIGN RATINGS THAT DO NOT EXCEED DP45. SEE *APPLICABLE STRUCTURES AND PERFORMANCE CRITERIA* IN THE APPLICABLE DUPONT INSTALLATION GUIDELINE FOR MORE INFORMATION REGARDING BUILDING TYPES AND BUILDING ENVELOPE PERFORMANCE.

ALWAYS CHECK <u>BUILDING.DUPONT.COM</u> FOR THE LATEST VERSIONS OF DUPONT INSTALLATION GUIDELINES AND OTHER PRODUCT LITERATURE.