




A. INSTALL DOOR ACCORDING TO MANUFACTURER'S INSTALLATION INSTRUCTIONS.

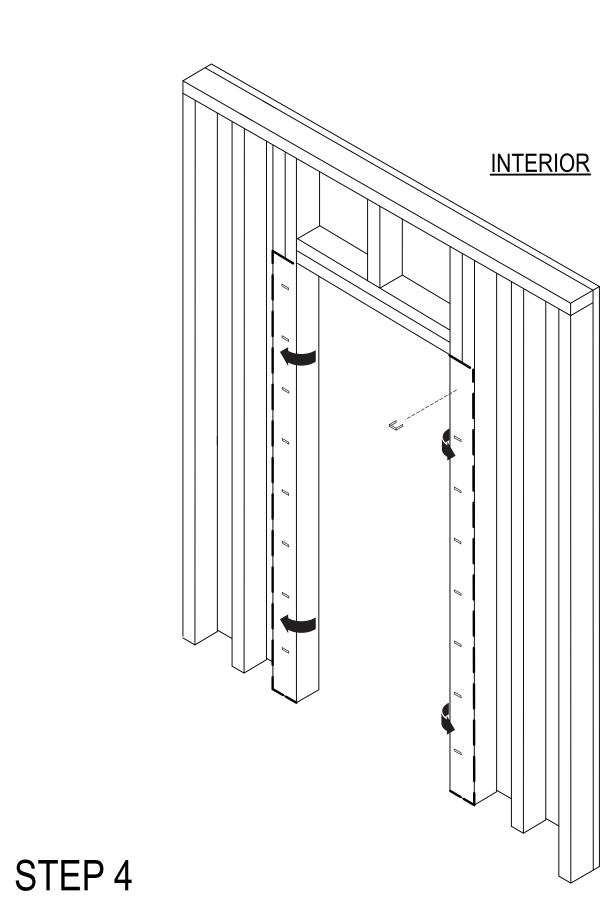

A. FOLD SIDE FLAPS INTO ROUGH OPENING, SECURE TO INSIDE WALL, AND CUT OFF EXCESS FLAPS IF DESIRED.

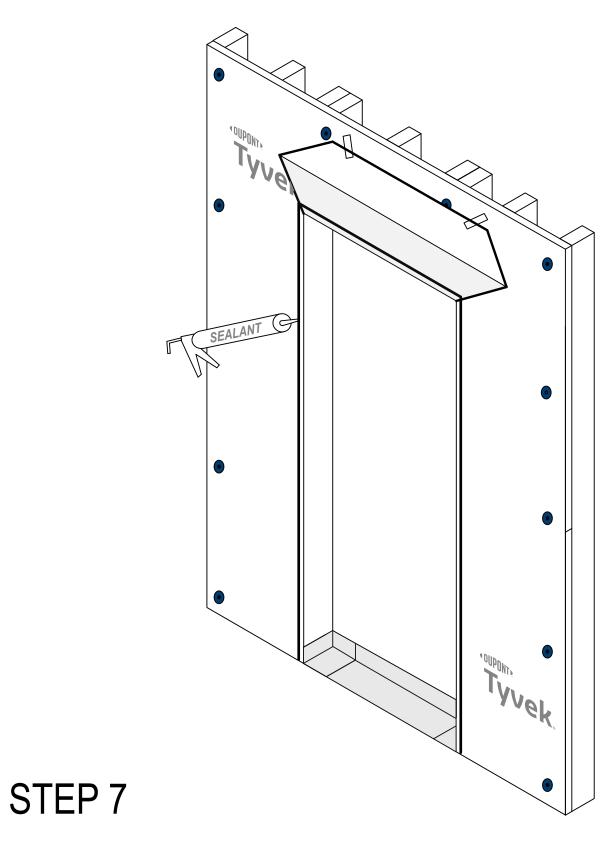


A. APPLY A CHEMICALLY-COMPATIBLE SEALANT AROUND THE THE DOOR OPENING ON THREE SIDES(JAMBS AND HEAD) AS SHOWN ABOVE.

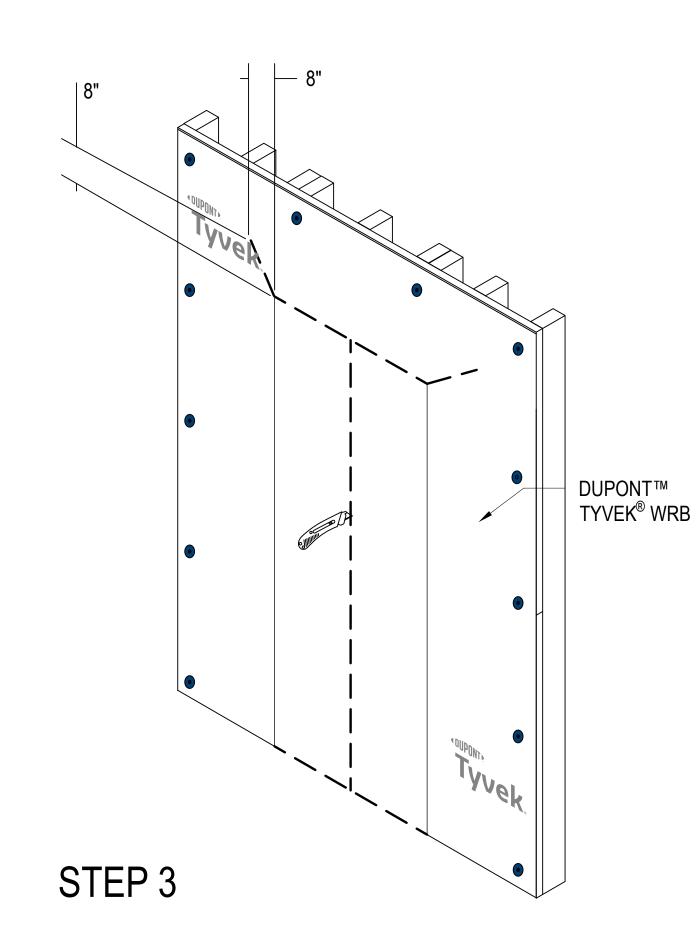


A. CUT AN "I-CUT" IN THE TYVEK® WRB.

B. CUT TWO 45 DEGREE SLITS EXTENDING A MINIMUM OF 8" FROM THE CORNERS OF THE HEAD OPENINGS TO EXPOSE SHEATHING OR FRAMING MEMBERS TO ALLOW HEAD FLASHING INSTALLATION.

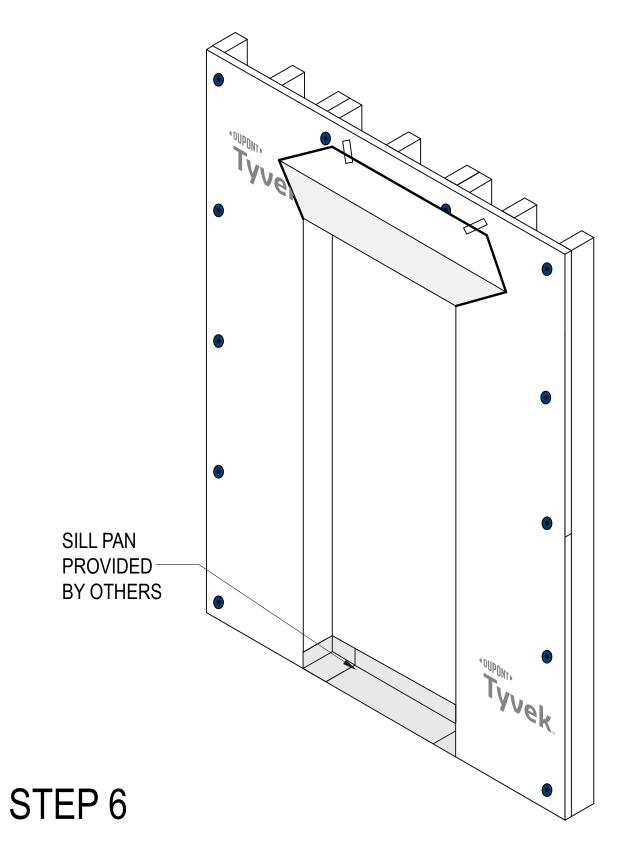


A. PREPARE THE SILL FLASHING AND/OR THRESHOLD PER MANUFACTURER'S RECOMMENDATION AND SEAL THE CORNER PAN FLASHING WITH SEALANT (IF APPLICABLE).

B. SHIM, LEVEL AND ANCHOR PAN/THRESHOLD PER MANUFACTURER'S INSTRUCTIONS.

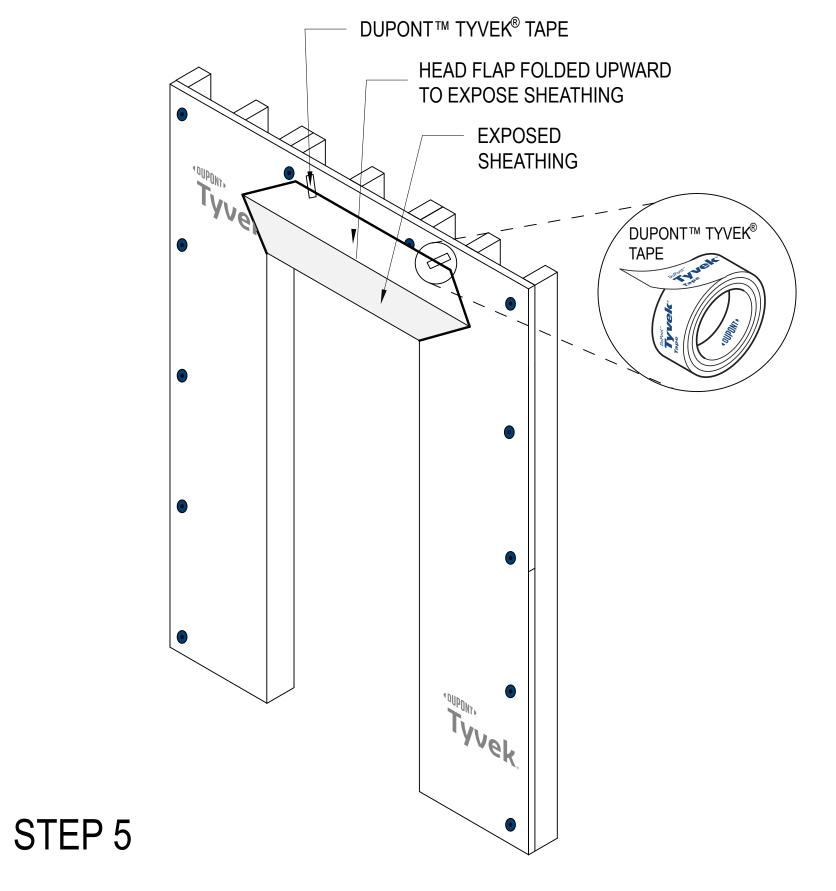

A. FLIP HEAD FLAP UP TO EXPOSE THE SHEATHING AND TEMPORARILY SECURE WITH DUPONT™ TYVEK® TAPE.

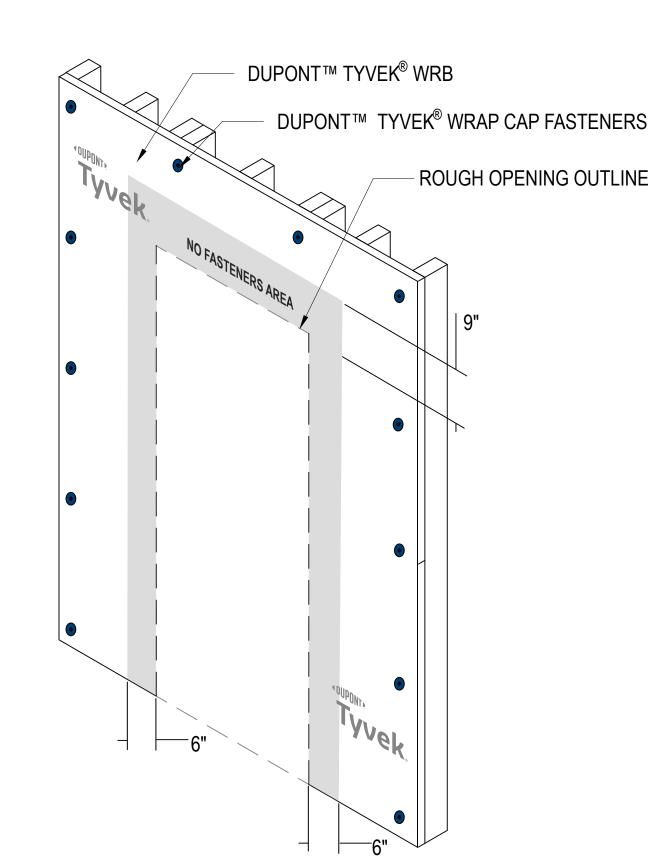


A. DUPONT™ TYVEK® WRB TO BE
MECHANICALLY FASTENED AND INSTALLED
OVER SHEATHING.

STEP 2

OVER SHEATHING.

B. **DO NOT INSTALL** FASTENERS WITHIN 6" OF THE SILLS AND JAMBS OF THE OPENINGS AND WITHIN 9" OF THE HEAD OPENINGS.

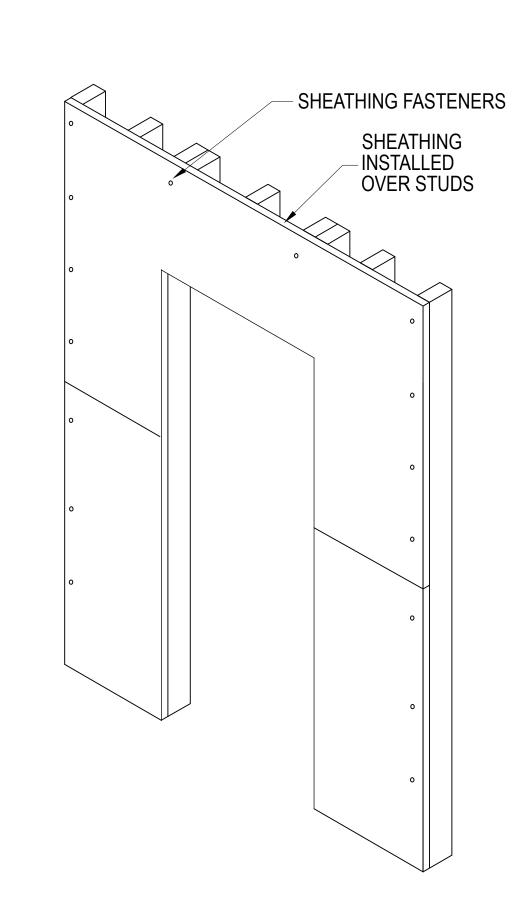

A. SHEATHING TO BE INSTALLED OVER STUDS.

STEP 1

B. AFTER SHEATHING HAS BEEN INSTALLED, CUT
AN OPENING IN THE SHEATHING ALONG THE
PERIMETER OF THE ROUGH OPENING FOR

THE DOOR.

C. FRAMING IS ONLY SHOWN SCHEMATICALLY.
SEE DRAWINGS BY OTHERS FOR DETAILED INFORMATION.

Integral Flanged Door (on Slab) Installed AFTER the DuPont™ Tyvek® WRB Installation Sequence

DRAWING: MF-OP-3110S-MA Page 1 of 2


REVISION DATE
1/20/2025

SCALE: Not to Scale





NOTES:

INSTALLATION IS APPLICABLE FOR SINGLE-FAMILY RESIDENTIAL & WOOD-FRAMED MULITI-FAMILY AND LIGHT COMMERCIAL BUILDINGS WHEN PERFORMANCE REQUIREMENTS DO NOT EXCEED ASTM E1677 (65 MPH EQUIVALENT STRUCTURAL LOAD AND 50 MPH (6.24 PSF) EQUIVALENT WIND-DRIVEN RAIN WATER INFILTRATION WHEN TESTED IN ACCORDANCE WITH ASTM E331, ASTM E1105, OR SIMILAR), AND WINDOW/DOOR DESIGN RATINGS THAT DO NOT EXCEED DP45. SEE *APPLICABLE STRUCTURES AND PERFORMANCE CRITERIA* IN THE APPLICABLE DUPONT INSTALLATION GUIDELINE FOR MORE INFORMATION REGARDING BUILDING TYPES AND BUILDING ENVELOPE PERFORMANCE. ALWAYS CHECK <u>BUILDING.DUPONT.COM</u> FOR THE LATEST VERSIONS OF DUPONT INSTALLATION GUIDELINES AND OTHER PRODUCT LITERATURE.

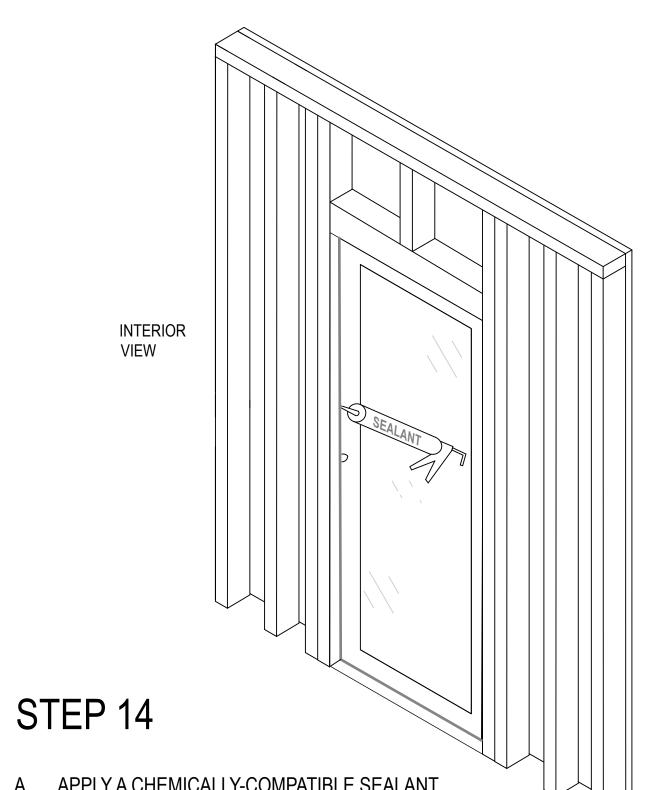

A. APPLY A CHEMICALLY-COMPATIBLE SEALANT (AND BACKER ROD AS NECESSARY) AROUND THE DOOR OPENING AT THE INTERIOR. IT IS ALSO ACCEPTABLE TO USE GREAT STUFF PRO™ WINDOW AND DOOR POLYURETHANE FOAM SEALANT, OR A CHEMICALLY-COMPATIBLE FOAM.

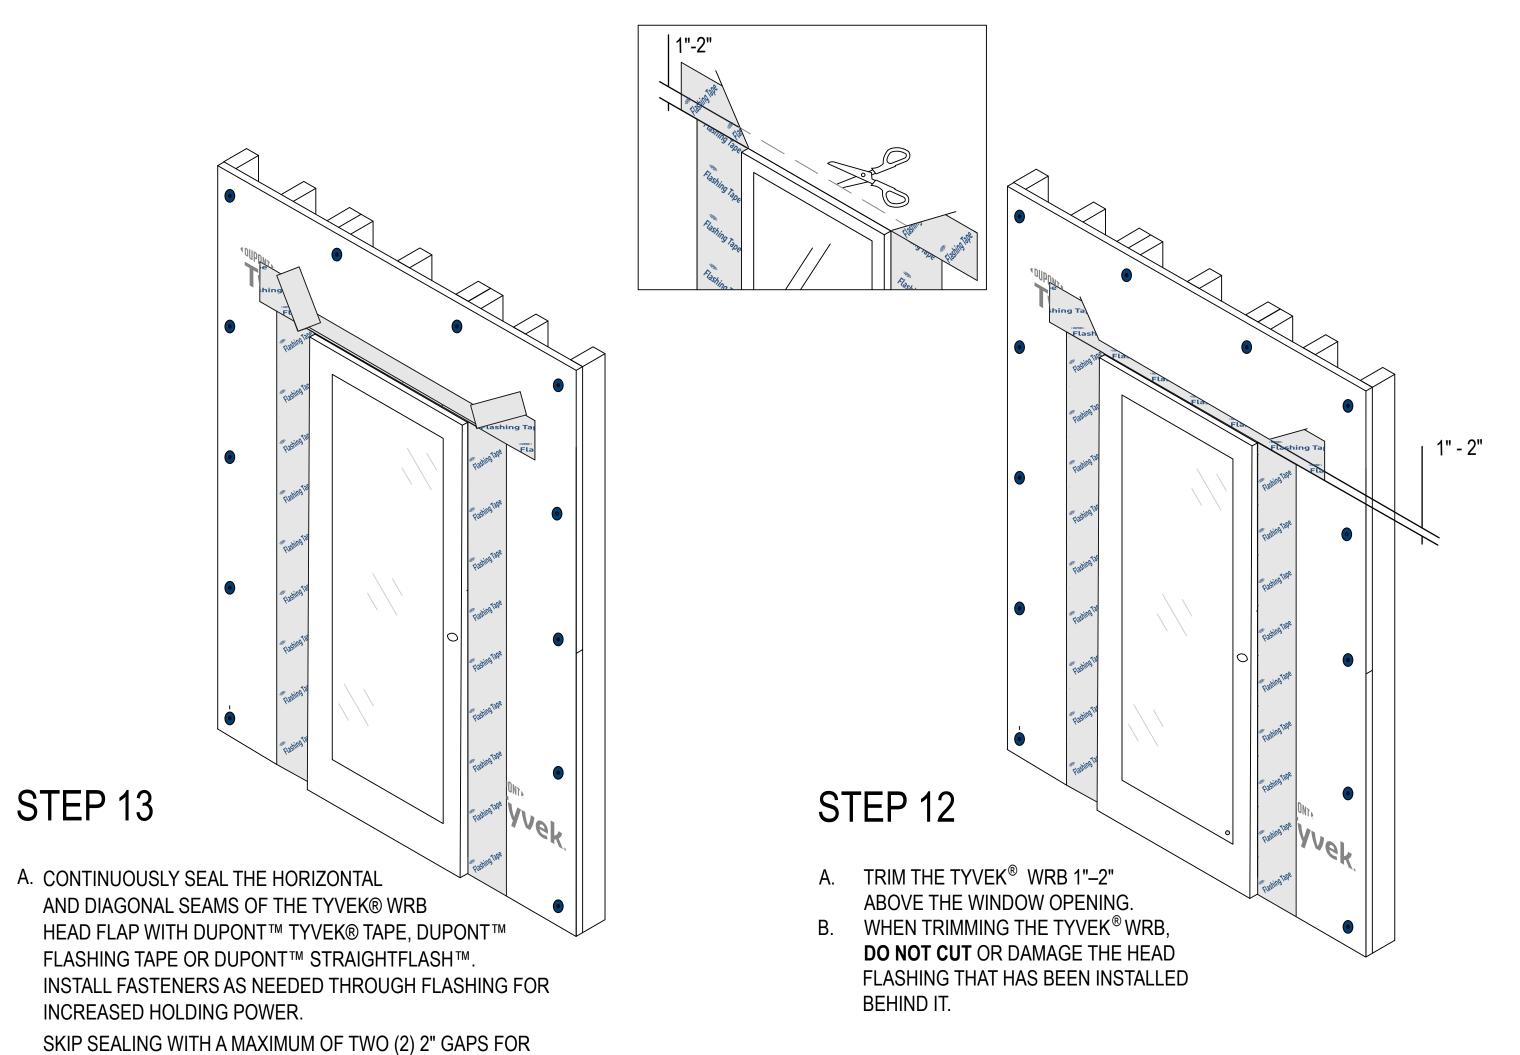

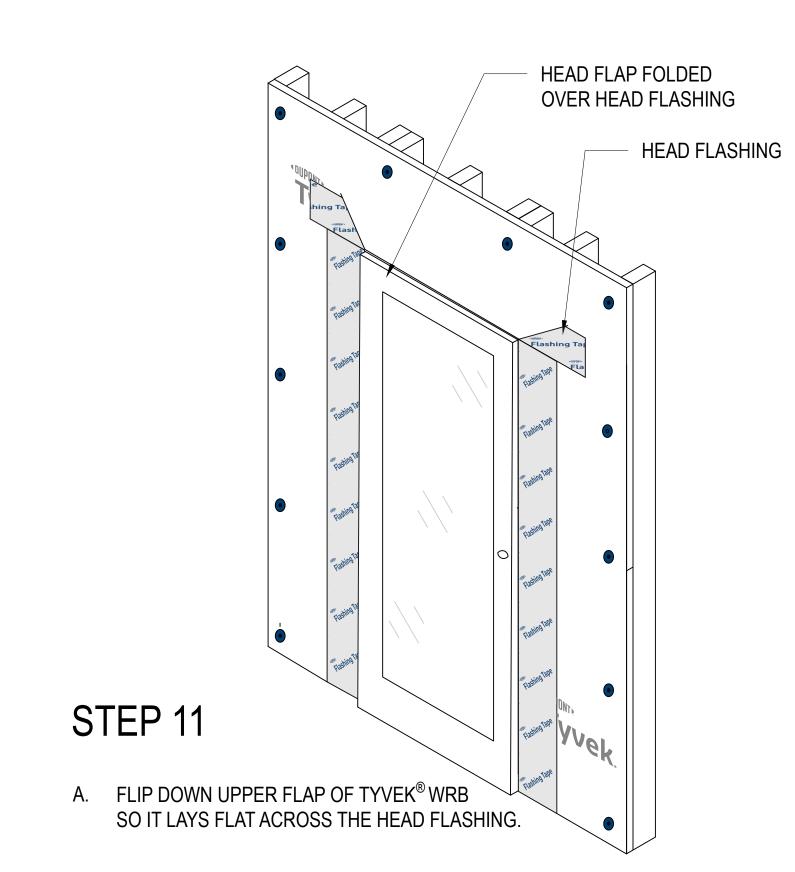

STEP 10


A. CUT A PIECE OF DUPONT™ FLASHING TAPE OR STRAIGHTFLASH™ FOR HEAD FLASHING.

EVERY 3' OF WINDOW IS ACCEPTABLE FOR ADDITIONAL

DRAINAGE <u>IF AN AIR BARRIER IS NOT REQUIRED</u>.

B. HEAD FLASHING TO EXTEND BEYOND OUTER EDGES OF JAMB FLASHING.
C. REMOVE RELEASE PAPER AND INSTALL FLASHING COMPLETELY COVERING DOOR MOUNTING FLANGE AND ADHERING TO THE EXPOSED SHEATHING.
NOTE: AN ADHESIVE/PRIMER IS REQUIRED FOR WOODBASED SHEATHING ONLY WHEN APPLYING FLASHING

DURING ADVERSE WEATHER CONDITIONS.

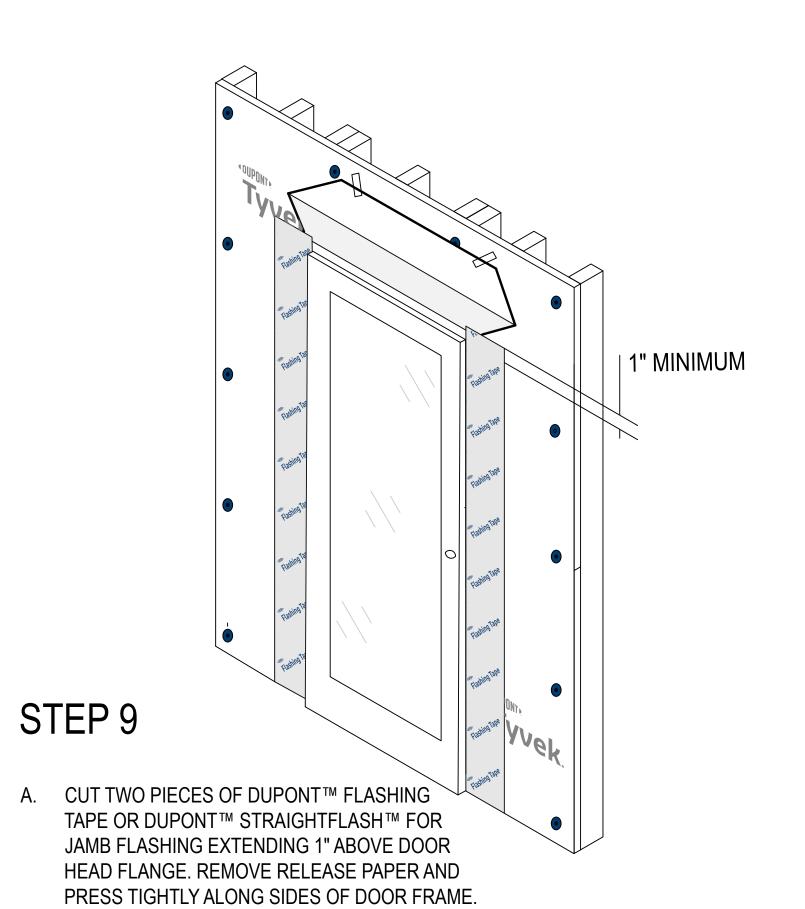

Integral Flanged Door (on Slab) Installed AFTER the DuPont™ Tyvek® WRB Installation Sequence

DRAWING: MF-OP-3110S-MA Page 2 of 2

REVISION DATE
1/20/2025

SCALE: Not to Scale



NOTES:

INSTALLATION IS APPLICABLE FOR SINGLE-FAMILY RESIDENTIAL & WOOD-FRAMED MULITI-FAMILY AND LIGHT COMMERCIAL BUILDINGS WHEN PERFORMANCE REQUIREMENTS DO NOT EXCEED ASTM E1677 (65 MPH EQUIVALENT STRUCTURAL LOAD AND 50 MPH (6.24 PSF) EQUIVALENT WIND-DRIVEN RAIN WATER INFILTRATION WHEN TESTED IN ACCORDANCE WITH ASTM E331, ASTM E1105, OR SIMILAR), AND WINDOW/DOOR DESIGN RATINGS THAT DO NOT EXCEED DP45. SEE *APPLICABLE STRUCTURES AND PERFORMANCE CRITERIA* IN THE APPLICABLE DUPONT INSTALLATION GUIDELINE FOR MORE INFORMATION REGARDING BUILDING TYPES AND BUILDING ENVELOPE PERFORMANCE.

ALWAYS CHECK <u>BUILDING.DUPONT.COM</u> FOR THE LATEST VERSIONS OF DUPONT INSTALLATION GUIDELINES AND OTHER PRODUCT LITERATURE.