
Pocket Checklist

F-14A/B AIRCRAFT

REV: 20210820

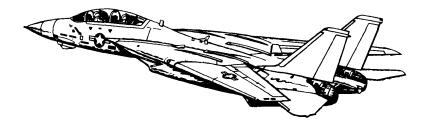

Procedures

Systems

AWG-9 Radar

TCS LANTIRN

A/G Weapons

A/A Weapons



Contents

1	PROCEDURES	1
	1.1 PILOT - PRE-START	1
	1.2 PILOT - ENGINE START	2
	1.3 PILOT - POST-START	3
	1.4 RIO - PRE-START	5
	1.5 RIO - POST-START - SHORE	5
	1.6 RIO - POST-START - CARRIER	7
	1.7 PRE-TAXI	9
	1.8 TAKEOFF - SHORE	9
	1.9 TAKEOFF - CARRIER	10
	1.10 LANDING - OVERHEAD PATTERN	11
	1.11 LANDING - CHECKLIST	12
	1.12 AIRSTART	13
_	0.40====0	
2	SYSTEMS	15
	2.1 AFCS - SAS	15
	2.2 AFCS - AUTOPILOT	15
	2.3 APC / AUTOTHROTTLE	17
	2.4 ACLS	17
	2.5 WING-SWEEP	17
	2.6 NAVIGATION	18
	2.7 COMMUNICATION	18
	2.8 DATALINK / IFF	18
	2.9 ALR-67 RWR - OVERVIEW	19
	2.10 ALR-67 RWR - THREAT SYMBOLOGY	19
	2.11 ALE-39 COUNTERMEASURES DISPENSER	21
	2.12 ALQ-100 / ALQ-126 DECM	21
3	AWG-9 RADAR	23
-	3.1 MAIN MODES - OVERVIEW	23
	3.2 MAIN MODES	23
	3.3 PULSE MODE - PULSE SEARCH	24
	3.4 PULSE MODE - PSTT	25
		0

3.5	PULSE DOPPLER MODE - PULSE DOPPLER SEARCH	26
3.6	PULSE DOPPLER MODE - RWS	28
3.7	PULSE DOPPLER MODE - TWS	29
3.8	PULSE DOPPLER MODE - TWS MAN	31
3.9	PULSE DOPPLER MODE - TWS AUTO	32
3.1	0 PULSE DOPPLER MODE - PDSTT	33
3.1	1 ACM MODES - OVERVIEW	34
3.1	2 TID SYMBOLOGY	35
4 TC	S / ALQ-100	41
	OVERVIEW	
•••	<u> </u>	
5 LA	NTIRN	43
5.1	OVERVIEW	43
5.2	DISPLAY	43
5.3	CONTROL PANEL	43
5.4	CONTROLS	43
5.5	STARTUP	43
5.6	MASTER MODES	43
6 A/C	G WEAPONS	45
6.1	A/G WEAPON SETTINGS - OVERVIEW	45
6.2	SELECTIVE ORNANCE JETTISON	46
6.3	M61 GUN	46
6.4	FFAR / ZUNI ROCKETS	47
6.5	UNGUIDED BOMB - CCIP	47
6.6	UNGUIDED BOMB - CCRP	48
6.7	GBU-10 / 12 / 16 / 24	49
6.8	TALD DECOYS	50
7 Δ /4	A WEAPONS	51
71		51
7.2		51
7.3		52
7.4		52
	AIM-9 SIDEWINDER - OVERVIEW	_
	AIM-9 SIDEWINDER - SILENT	54

7.7	AIM-9 SIDEWINDER - RADAR	54
7.8	AIM-7 SPARROW - OVERVIEW	55
7.9	AIM-7 SPARROW - STT	56
7.10	AIM-54 PHOENIX - OVERVIEW	57
7.11	AIM-54 PHOENIX - PD-STT	59
7.12	AIM-54 PHOENIX - TWS / MULTI	59



PROCEDURES | F-14A/B | REV: 20210820

PROCEDURES

1.1 PILOT - PRE-START

1.	Parking Break	ENGAGED
2.	Ground Power	connected
3.	Compressed Air	connected
4.	ICS	HOT MIC
5.	TO RIO	"Begin Start-Up"
6.	ICS	Comm Check
7.	MASTER TEST Selector	 (a) LTS Warning Lights Caution Lights Checked Advisory Lights Checked (b) FIRE DET/EXT L FIRE GO illuminated R FIRE GO illuminated (c) INST RPM EGT 96% EGT FF 10500 pph AOA 18 ± 5 Wing Sweep 45 ± 2.5
		• FUEL QTY
8.	Ejection Seat	Armed
9.	RIO	Canopy Closed
10.	Oxygen	ON (FWD)
11	Emergency Wing Sweep	OVERSWEEP

PILOT - ENGINE START

1.	AIR SOURCE	OFF
2.	Hydraulics	(a) HYD TRANSFER PUMP SHUTOFF (b) Emerg. Hyd AUTO (LOW)
3.	L&R MASTER GEN	NORM
4.	RIO	"Ready to Start"
5.	Right Engine Start-Up	(a) Engine Crank R (b) R Eng N2 20% (c) R Throttle IDLE (d) TIT < 890 C during start
6.	Stabilized Parameters	 RPM
7.	Left Engine Start- Up	(a) Engine Crank L (b) L Eng N2 20% (c) L Throttle IDLE (d) TIT < 890 C during start
8.	Stabilized Parameters	 RPM
9.	HYD TRANSFER PUMP	NORM
10.	HYD PRESSURE	3000 psi
11.	AIR SOURCE	BOTH ENG
12.	Ground Power	disconnected
13.	Compressed Air	disconnected

1.3 PILOT - POST-START

1.	TO RIO	"Both Engines Running"
2.	Displays Control Panel	• VDI ON • HUD ON • HSD ON • HDS MODE TID (monitor INS)
3.	RIO	 Select Align Quality INS GO NOW: shortest but least precise alignment INS GO COARSE: does not meet Launch Criteria for AIM-7 / AIM-54 INS GO MIN WPN LAUNCH: allows AIM-7 / AIM-54 launch INS GO FINE fine align (8 min)
4.	ACM Panel	• GUN RATE
5.	Gun Rounds	Set
6.	ANTI-SKID SPOILER BK	OFF
7.	Emergency Wing Sweep	(a) Handle
8.	AFCS Panel - SAS STAB AUG	• PITCH ON • ROLL ON • YAW ON
9.	WING/EXT TRANS	AUTO
10.	UHF 1 Function Selector	ВОТН
11.	TACAN Function Selector	T/R
12.	ARA-63 ICLS RE- CEIVER	ON

PROCEDURES /	F-14A/B	REV: 20210820	

13.	Radar Altimeter	(a) Control Knob one click CW to turn on (b) Display 6000 ft (warm up) (c) Display 0 ft (ready)
14.	Standby ADI	erect at least 2 min before T/O
15.	KY-28 Crypt. Key	Set (refer to GROUND SETTINGS kb)
16.	RIO	set D/L frequency
17.	Lights	As desired

1.4 RIO - PRE-START

1.	Oxygen	ON (FWD)
2.	PILOT	• Ground Power connected • Compressed Air connected
3.	ICS	Comm Check
4.	Lights	As required
5.	LTS Test	Coordinate with Pilot
6.	Ejection Seats	ARMED
7.	Canopy	CLOSED
8.	TO PILOT	"Ready to Start"

1.5 RIO - POST-START - SHORE

1.	PILOT	• Enginesstarted
		AIR SOURCEBOTH ENG
2.	INS STARTUP	(a) LIQUID COOLING ON (FWD)
		(b) WCS SwitchSTANDBY
		(c) IR/TV Power STBY/IR/TV
		(d) TID/DDD illuminated after 40 s
3.	Kneeboard	Retrieve Coordinates, Elevation, Magnetic Variation from GROUND SETTINGS Page
WA	RNING Input Coords B	BEFORE selecting GND ALIGN if using ASH
4.	Start INS Align	(a) Nav ModeGND ALIGN
		(b) CAP
		• Category NAV • MESSAGE OWN AC
		(c) Keyboard
		 CLEAR, LAT, latitude, ENTER
		 LONG, longitude, ENTER
		 ALT, altitude, ENTER
		(d) CAP MESSAGE MAG HDG VAR
		(e) Keyboard HDG , mag var, ENTER
		(f) Align Progress Monitor
5.	U/VHF Mode	T/R G

6.	Datalink	(a) Kneeboard TACTICAL DL (b) DL Power ON (FWD) (c) DL Mode TAC (AFT) (d) DL Freq. Set
7.	TACAN	T/R
8.	RWR Panel	(a) Display Type NORM (b) PWR ON (c) TEST SPL (d) MODE LMT
9.	DECM	STBY, then ACT
10.	IFF	(a) MASTER
11.	Altimeter	Reset
12.	CAP	Enter Data (WP, FP, etc.)
13.	Displays	• DDD
14.	Hand Control Panel	Set
15.	AN/ALE-39	Set (as required) • AUTO (CHAFF)/MAN • MAN
16.	Flare Mode	PILOT
17.	Complete INS Align	Duration Full Fine
		(a) Align Complete Caret \rightarrow Diamond (b) NAV Mode INS NAV
18.	Standby ADI	Erect at least 2 min before T/O
19.	TO PILOT	"Ready to Taxi"
Onc	e Airborne	
20.	IR/TV Power	ON
21.	WCS Switch	WCS XMT

1.6 RIO - POST-START - CARRIER

1.	PILOT	• Enginesstarted • AIR SOURCEBOTH ENG
2.	INS STARTUP	(a) LIQUID COOLING ON (FWD) (b) WCS Switch STANDBY (c) IR/TV Power STBY/IR/TV (d) TID/DDD illuminated after 40 states
3.	Datalink	(a) Kneeboard
4.	Start INS Align	(a) DL FREQ Set (b) DL Mode CAINS/WAYPT (c) Nav Mode CVA
5.	U/VHF Mode	T/R G
6.	TACAN	T/R
7.	RWR Panel	(a) Display Type NORM (b) PWR ON (c) TEST SPL (d) MODE LMT
8.	DECM	STBY, then ACT
9.	IFF	(a) MASTERSTBY (b) CODEas required
10.	Altimeter	Reset
11.	CAP	Enter Data (WP, FP, etc.)
12.	Displays	• DDD
13.	Hand Control Panel	Set
14.	AN/ALE-39	Set (as required) • AUTO (CHAFF)/MAN • MAN
15.	Flare Mode	PILOT
16.	Complete INS Align	Duration Full Fine
		(a) Align Complete Caret → Diamond(b) NAV Mode

PR	OCEDURES	F-14A/B REV	V: 20210820
17.	Datalink	(a) DL Mode (b) DL Freq.	• •
18.	Standby ADI	Erect at least 2 min before T/O	
19.	TO PILOT	"Ready to Taxi"	

	(b) DL Freq. Set
18. Standby ADI	Erect at least 2 min before T/O
19. TO PILOT	"Ready to Taxi"
Once Airborne	
20. IR/TV Power	ON
21. WCS Switch	WCS XMT

PROCEDURES F-14A/B REV: 20210820

1.7 PRE-TAXI

1.	ANTI-SKID SPOILER BK	OFF
2.	HOOK BYPASS	As Required
3.	Nose Strut	RETRACTED
4.	HUD MODE	ТО
5.	Parking Brake	Released (IN)
6.	NWS	ENGAGED
7.	Path	verify clear


1.8 TAKEOFF - SHORE

After Lining Up On Runway		
1.	Wing Sweep	(a) EM WING SWEEP FWD, then IN (b) MASTER RESET PRESS (c) Wings Verify thumb controller (d) WING SWEEP AUTO (e) Wings Verify at 20 deg
2.	ANTI SKID SPOILER BK	BOTH (UP)
3.	FLAPS	UP
4.	Trim	0 deg
5.	NWS	DISENGAGED
6.	Takeoff	(a) Throttle MIL (90% RPM) (b) Stick Back at 130 KIAS (c) Rotation approx 140 KIAS (d) GEAR UP < 250 KIAS

1.9 TAKEOFF - CARRIER

	Lineup	 Wait behind JBD until Catapult is clear Follow Taxi Directors Instructions to line up on Catapult
1.	Wing Sweep	(a) EM WING SWEEP FWD, then IN (b) MASTER RESET PRESS (c) Wings Verify thumb controller (d) WING SWEEP AUTO (e) Wings Verify at 20 deg
2.	FLAPS	DOWN
3.	Launch Bar Preparation	(a) Nose Strut KNEEL when directed (b) Throttle UP when directed (c) Taxi launch bar into shuttle (d) Throttle IDLE when directed
4.	Trim	2-3 deg nose up
5.	Speed Brakes	IN
6.	Final Checks	(a) ThrottleMIL when directed
		(b) Control Wipeout
		 (b) Control Wipeout Stick Full Forward Stick Full Aft Stick Full Left Stick Full Right Rudder Full Left Rudder Full Right
		 Stick Full Forward Stick Full Aft Stick Full Left Stick Full Right Rudder Full Left
7.	Catapult Shot	Stick Full Forward Stick Full Aft Stick Full Left Stick Full Right Rudder Full Left Rudder Full Right Ender Full Right Column Checked

1.10 LANDING - OVERHEAD PATTERN

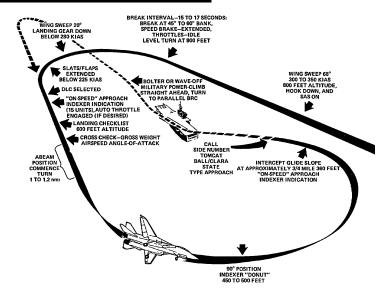

1. I	nitial Approach	WING SWEEP68 deg
		• HOOKDOWN
		• SAS ON
		• HUDLDG
		• Airspeed300-350 KIAS
		• Altitude800 ft
2.	nitial Break	Break Interval 15-17 s
		• BANK45-60 deg
		SPEED BRAKE EXTEND
		• ThrottleIDLE
		• G 3-4 G
		Altitude800 ft
3. E	Break Turn	• Wing Sweep AUTO < 280 KIAS
		• Landing Gear DOWN < 280 KIAS
		• FLAPS DOWN < 225 KIAS
4.	Downwind	DLC Selected once flaps out
		• AOA ON-SPEED
		LANDING CHECKLIST
		Altitudedescend to 600 ft

PROCEDURES F-14A/B REV: 20210820

5.	Final Turn	180 Deg Position • Abeam Pos	1-1.2 nmi
		• AOA	DONUT
		Altitude	400-500 ft
6.	Intercept Glides-	Distance	3/4 Mile
	lope	Altitude	360 ft
		• AOA	ON-SPEED

1.11 LANDING - CHECKLIST

1.	Wing Sweep	20 deg AUTO
2.	Wheels	• Lights 3 DOWN • Transition Light OUT
3.	SAS	ON
4.	FLAPS	DOWN
5.	DLC	Checked
6.	Hook	HOOK DOWN Transition Light OUT
7.	Harness	Locked
8.	Speedbrakes	EXT
9.	Brakes	Check
10.	Fuel	Check

1.12 AIRSTART

• Spooldown	Before significant spooldown (a) Non-Running ENGIDLE or above If no relight occurs (b) Non-Running ENG OFF then IDLE If still no relight occurs (c) ENG MODE
Cross-Bleed Restart	With one ENG running, if Spooldown fails (a) Non-Running ENG OFF (b) FUEL SHUT OFF check (c) Running throttle 80%+ (d) BACK UP IGNITION ON (e) ENG CRANK non-running eng (f) Non-Running ENG IDLE If no start occurs (g) Non-Running ENG OFF then IDLE If still no start (h) ENG MODE SEC (i) Non-Running ENG OFF then IDLE
Windmill Restart	(a) Airspeed
Post Restart	(a) BACK UP IGNITION OFF (b) ENG MODE PRI

SYSTEMS

2.1 AFCS - SAS

• SAS	Stability Augmentation System
	 Not Fly-by-Wire Automatic control surface commands generated by analog computer to im- prove stability
• Control	Three individual channels (Pitch, Roll, Yaw)
Autopilot Emer-	Paddle on Stick
gency Disengage Paddle	Disengages Autopilot ModesDeactivates Pitch, Roll SAS Channels

2.2 AFCS - AUTOPILOT

Attitude Hold	Basic Attitude Hold
	 Maintains existing pitch & roll Attitude can be changed with stick input If engaged outside limits will automatically move within range
	• Limits
	- Pitch: 30 deg
	- Roll: 60 deg
	Engagement
	(a) SAS Switches ON (FWD)
	(b) Alt. Hold Mode OFF
	(c) VEC/PCD/ACLOFF
	(d) Heading ModeOFF
	(e) Autopilot Switch ENGAGE (FWD)

 Altitude Hold 	Barometric Altitude Hold
	 Maintains current barometric altitude
	• Limits
	Vertical velocity: < 100 ft/s
	Engagement
	(a) SAS SwitchesON (FWD) (b) Autopilot Switch ENGAGE (FWD) (c) Alt. Hold Mode ALT (FWD) (d) A/P REF Light Wait until appears (e) NWS Button Press
 Heading Hold 	Magnetic Heading Hold
	 Maintains current magneatic heading
	• Limits
	Bank angle < 5 deg
	Engagement
	(a) SAS Switches ON (FWD) (b) Autopilot Switch ENGAGE (FWD) (c) Heading Mode
Ground Track	Autopilot follows ground track
	 Similar to heading hold Compensates for wind drift Uses INS data instead of magnetic bearing
	• Limits
	Bank angle < 5 deg
	• Engagement
	(a) SAS Switches
• VEC/PCD	Datalink Vector / Precision Course Direction
	Allows Link 4 controller to remotely direct the aircraft
	- Not Modelled in DCS

9	STEMS	F-14A/B REV: 20210820
•	ACL	Automatic Carrier Landing
		 See relevant section
•	Autopilot Emer-	Paddle on Stick
	gency Disengage Paddle	Disengages Autopilot ModesDeactivates Pitch, Roll SAS Channels
2.3	APC / AUTOTHROT	TLE
•	APC	Approach Power Compensator
		Automatic throttle controlMaintains ON SPEED AoA
•	Conditions	Engagement is inhibited / APC is disengaged if conditions not met Throttles
	E	There ille Marcha AUTO (EMD)
•	Engage	Inrottle ModeAUTO (FWD)
2.4	Disengage ACLS WING-SWEEP	Cage/Seam Button
2.4	Disengage ACLS	Cage/Seam Button In Flight Limited between 20 deg & 68 deg On Ground can Oversweep to 75 deg
2.4 2.5	Disengage ACLS WING-SWEEP	Cage/Seam Button In Flight Limited between 20 deg & 68 deg On Ground can Oversweep to 75 deg Hydromechanically Controlled
2.4	Disengage ACLS WING-SWEEP	Cage/Seam Button In Flight Limited between 20 deg & 68 deg On Ground can Oversweep to 75 deg
2.4	Disengage ACLS WING-SWEEP	Cage/Seam Button In Flight Limited between 20 deg & 68 deg On Ground can Oversweep to 75 deg Hydromechanically Controlled Automatically through CADC Manually with emergency wing-sweep
2.4	Disengage ACLS WING-SWEEP	Cage/Seam Button In Flight Limited between 20 deg & 68 deg On Ground can Oversweep to 75 deg Hydromechanically Controlled Automatically through CADC Manually with emergency wing-sweep handle 15 deg / s at 1 g loading
2.4	Disengage ACLS WING-SWEEP Overview	Cage/Seam Button In Flight Limited between 20 deg & 68 deg On Ground can Oversweep to 75 deg Hydromechanically Controlled
2.4	Disengage ACLS WING-SWEEP Overview	 In Flight Limited between 20 deg & 68 deg On Ground can Oversweep to 75 deg Hydromechanically Controlled Automatically through CADC Manually with emergency wing-sweep handle 15 deg / s at 1 g loading Mechanically linked to ensure symmetry AUTO CADC controls wing position as function
2.4	Disengage ACLS WING-SWEEP Overview	Cage/Seam Button In Flight Limited between 20 deg & 68 deg On Ground can Oversweep to 75 deg Hydromechanically Controlled Automatically through CADC Manually with emergency wing-sweep handle 15 deg / s at 1 g loading Mechanically linked to ensure symmetry AUTO CADC controls wing position as function of current Mach via wing-sweep program
2.4	Disengage ACLS WING-SWEEP Overview	Cage/Seam Button In Flight Limited between 20 deg & 68 deg On Ground can Oversweep to 75 deg Hydromechanically Controlled - Automatically through CADC - Manually with emergency wing-sweep handle 15 deg / s at 1 g loading Mechanically linked to ensure symmetry AUTO - CADC controls wing position as function of current Mach via wing-sweep program MAN - Pilot manually chooses desired wing

• Emergency Mode	 Emergency Wing-Sweep Handle 	
	 Moved with wing sweep program by spider detent under normal operation Can be forced out of spider detent and moved manually 	
 Oversweep 	 Selected via Emergency Wing-Sweep Han- dle 	
	(a) Em. Wing-Sweep	
	(b) HZ TAIL AUTHIlluminated	
	(c) Em. Wing-Sweep	
 Return to CADC 	 After Emergency Mode / Oversweep 	
Control	(a) Em. Wing-SweepSpider Detent (Fwd on startup)	
	(b) MASTER RESETPress	

Indicated Mach	Max Forward Wing Position
0.4	20 deg
0.7	25 deg
0.8	50 deg
0.9	60 deg
1.0	68 deg

- 2.6 NAVIGATION
- 2.7 COMMUNICATION
- 2.8 DATALINK / IFF

2.9 ALR-67 RWR - OVERVIEW

2.10 ALR-67 RWR - THREAT SYMBOLOGY

1		
AIRCRAFT		

21	MiG-21bis
23	MiG-23MLD
24	Su-24M/MR
25	MiG-25PD
29	MiG-29A/G/S
	Su-27 Su-33
	J-11A
30	Su-30
31	MiG-31
34	Su-34
37	AJS-37
39	Su-25TM
50	A-50
52	B-52
AN	AN-26B
	AN-30M
AP	AH-64D
B1	B-1B
BE	Tu-95
	Tu-142M
BF	Tu-22M3
BJ	Tu-160
E2	E-2D
E3	E-3C
F4	F-4E
F5	F-5E
НХ	Ka-27
IL	IL-76MD
	IL-78M
KC	KC-135

KJ	KJ-2000
M2	Mirage 2000-C Mirage 2000-5
S3	S-3B
SH	SH-60B
ТО	Tornado
TR	C-130 C-17A
	AIR DEFENSE
2	S-75 TR SNR (SA-2) "Fan Song"
3	S-125 TR SNR-125 (SA- 3) "Low Blow"
6	Kub SA-6
7	HQ-7 TR
_ 8	OSA (SA-8)
10	S-300PS 30N6 TR (SA- 10)
11	Buk (SA-11)
12	S-300V
15	Tor 9A331 (SA-15)
19	Tunguska 2C6M (SA-19)
Α	Gepard M-163 Vulcan ZSU-23-4 Shilka
ВВ	S-300PS 64H6E SR (SA- 10/Big Bird)
BF	Rapier Blindfire TR
CS	S-300PS 5N66M SR (SA-10/Clam Shell)
DE	Sborka (Dog Ear)
FF	S-125 P-19 SR (SA- 3/Flat Face)
GR	Roland SR

НА	Hawk SR	
HK	Hawk TR	
HQ	HQ-7 SR	
PT	Patriot	
RO	Roland	
RP	Rapier SR	
S	1L13 55G6 EWR	
SD	Buk TR (SA-11/Snow Drift)	
SN	PRW-11 (Side Net)	
	MISSILES	
M	AIM-54 AIM-120 MICA-EM R-37 R-77 SD-10	
ATC		
T	Airport ATC Radar	

- 2.11 ALE-39 COUNTERMEASURES DISPENSER
- 2.12 ALQ-100 / ALQ-126 DECM

AWG-9 RADAR


MAIN MODES - OVERVIEW

	Pulse		Pulse Doppler			
	Pulse Search	P-STT	PD Search	RWS	TWS	PD-STT
Range	60 nm	50 nm	110 nm	90 nm	90 nm	90 nm
AIM-7	BRSIT	CW	BRS	SIT	-	PD
AIM-54	BRSIT	ACT	BRS	SIT	Multi TGT	PD/ACT

MAIN MODES

• Pulse	Basic Pulse w/o doppler filtering
	Cannot be notchedGround ClutterRudimentary Ground mapping
	Pulse Sub-Modes
	Pulse SearchPulse-STT
 Pulse Doppler 	Doppler filter -> no ground returns
	 Susceptible to notching No ground clutter Greater range Advanced sub modes AIM-54 Guidance
	Pulse Doppler Sub-Modes
	PD SearchRWSTWSPD-STT


PULSE MODE - PULSE SEARCH 3.3

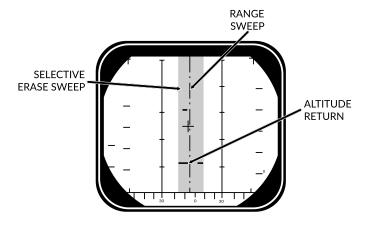

SEARCH (±10° SCAN)


Pulse Search	Basic Mode, AWG-9 does not use pulse doppler filtering • Advantages
	All aspect target detectionCannot be notchedRudimentary ground mapping
	 Disadvantages
	Cannot discern ground returns and targetsLower range
• DDD	Range/Azimuth
	 Visual representation of radar and erase sweeps
• TID	No Information from PulseCannot guide AIM-54

PULSE MODE - PSTT

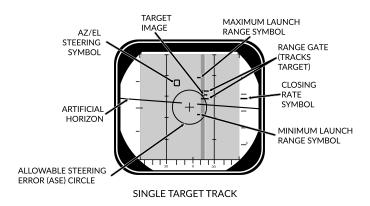

Pulse STT	Lock Target w/o doppler filtering • Advantages
	 Cannot be notched
	 Disadvantages
	 Susceptible to ground clutter
 Lock Target 	Conditions
	Pulse Search Mode selectedRDR HCU Mode selected
	Lock Target
	(a) Hold HCU Half-action(b) Slew to desired Target(c) HCU Full-Action to lock
	Unlock Target
	(d) HCU Half-action
• DDD	Track Indications
	 ANT TRK light RDROT light Tracking gates Closure rate Attack Symbology


3.5 PULSE DOPPLER MODE - PULSE DOPPLER SEARCH

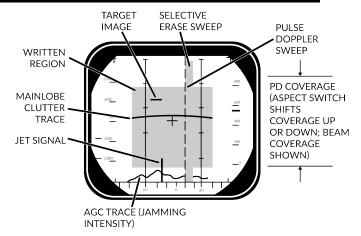

SEARCH (±40° SCAN)

 Pulse Doppler Search 	"Early Warning" Mode, Longest Range, cannot display rangeAdvantages
	Longest RangeDoppler Filtering"Look Down Shoot Down"
	 Disadvantages
	Can be notchedNo range information
• DDD	 Closure Rate/Azimuth Visual representation of radar and erase sweeps
 Doppler Filters 	Main Lobe Clutter (MLC) Filter
	Own GS +/- 133 knotsRemoves main ground returnSource of notching
	Zero Doppler Filter
	 Negative own GS +/- 100 knots Removes Radar reflection from ground directly beneath own AC

MLC Switch	 IN: Enables MLC filter AUTO: Enables MLC filter if look-up angle less than 3 deg OUT: Disables MLC filter
Vc Switch	Changes closure rate DDD scale • X-4: -800 to 4000 knots • NORM: -200 to 1000 knots • VID: -50 to 250 knots
ASPECT Switch	Changes closure rate processing scale NOSE: -600 to 1800 knots BEAM: -1200 to 1200 knots TAIL: -1800 to 600 knots

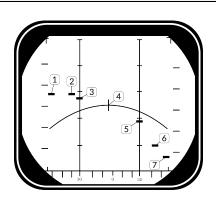

	Look Angle	Line of Sight Rate	Target Heading
1	60 deg	1490	180 deg
2	45 deg	1500	120 deg
3	30 deg	1428	100 deg
4	0 deg	1200	90 deg
5	30 deg	672	80 deg
6	45 deg	210	60 deg
7	60 deg	-300	0 deg

3.6 PULSE DOPPLER MODE - RWS

 Range While Search 	FM Ranging, used for getting good A/A picture before selecting TWS • FM Ranging
	 Pulse Doppler with ranging TID shows momentary tracks with ranges Processing reduces max range
	 Advantages
	 Long Range Doppler Filtering "Look Down Shoot Down" Signal Processing
	 Disadvantages
	 Can be notched
• DDD	 Closure Rate/Azimuth Visual representation of radar and erase sweeps
• TID	Momentary Tracks Management tracks
	Max concurrent tracks: 48Cannot lock targets from TID
• Filtering	Same as Pulse Doppler Search

3.7 PULSE DOPPLER MODE - TWS

Track While Scan	Builds Track Files, high situational awareness, multi-target AIM-54 launch • Track Files
	 AWG-9 builds Trackfiles for contacts Can launch multiple AIM-54 Processing reduces max range Can lock targets from TID
	FM Ranging
	 Pulse Doppler with ranging TID shows momentary tracks with ranges Processing reduces max range
	Advantages
	Doppler FilteringMulti-Target AIM-54
	 Disadvantages
	Lowest RangeCan be notched
• DDD	 Closure Rate/Azimuth Visual representation of radar and erase sweeps
• TID	Tracksfiles
	Max concurrent tracks: 24
- Eiltoring	Max displayed tracks: 18 Same as Bules Departer Secret
• Filtering	Same as Pulse Doppler Search
Scan Volume	 Trackfiles require update every 2.5 s -> 20 deg 4 bar (if selected) 40 deg 2 bar (else)
TID Mode Selector	 GND STAB: Ground Stabilized, True North is up on TID A/C STAB: Aircraft Stabilized ATTAK: same as A/C STAB with superimposed attack steering symbology TV: Displays TCS on TID, dispays LANTIRN on TID if equipped

AWG-9 RADAR	F-14A/B REV: 20210820
TID Display Selector Buttons Trock Hold & Col.	 RID DISABLE: Not simulated ALT NUM: Enables display of track altitudes on left side of track symbols SYM ELEM: Enables display of all supplementary symbology of tracks and waypoints DATA LINK: Enables display of D/L contacts JAM STROBE: Enables display of jam strobes NON-ATTK: enables/disables display of targets not possible to engage (friendlies) LAUNCH ZONE: Enables display of weapon launch zones VEL VECTOR: Enables display of velocity vectors
Track Hold & Collision Steering	 TRACK HOLD Normally: Tracks maintained for 14 s after last observation Track Hold: maintained for 2 min after last observation CLSN Button
	 begins collision steering to currently tracked target enables Steering Centroid if in TWS LD CLSN presents azimuth steering only CLSN presents both azimuth and elevation steering
TWS AUTO / MAN	 TWS MAN: Manual azimuth/elevation control, target designation by RIO TWS AUTO: Automatic prioritization of targets and azimuth elevation control

3.8 PULSE DOPPLER MODE - TWS MAN


• TWS MAN	Target Selection: Manual
	Scan Azimuth/Elevation: Manual
 Target Selection 	 Conditions
	TWS MAN Radar Mode selectedTID CURSOR TID Mode selected
	Hook Target
	(a) Hold HCU Half-Action(b) Slew TID Cursor over desired Tgt(c) HCU Full-Action to select Tgt
	TID Symbology
	 Range (RA) Bearing (BR) Altitude (AL) Magnetic course (MC)
	Lock Target
	(d) Press PD STT or Pulse STT buttons
	Deselect Target
	(e) press HCU Half-Action
AIM-54 Launch	Automatically selects TWS AUTOPrevents selection of TWS MAN

3.9 PULSE DOPPLER MODE - TWS AUTO

TWS AUTO	 Target Selection: prioritizes contacts based off range, aspect, closure Scan Azimuth/Elevation: Geometric center of targets in scan volume
 Centroid / Steer- 	Steering Centroid
ing Cues	 facilitates steering cues HUD, VDI, TID, DDD Appears as X on TID Takes Gimbal limits into account Weights individual Tracks based on parameters
	Illumination Centroid
	 Not Visible Controls azimuth and elevation of scan pattern Takes scan volume into account
 Pilot Steering 	 Conditions
Cues	 A-A HUD Mode selected Master Arm ON (UP) AIM-54 or AIM-7 selected TWS-AUTO selected

AWG-9 RADAR F-14A/B REV: 20210820

3.10 PULSE DOPPLER MODE - PDSTT

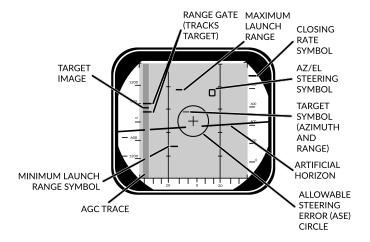

SINGLE TARGET TRACK

 Pulse Doppler STT 	Lock Target with doppler filtering • Advantages
	 Ground Clutter filtering
	 Disadvantages
	 Susceptible to notching
 Lock Target 	• Conditions
	Pulse Doppler Mode selected (PD Search, RWS, TWS)RDR HCU Mode selected
	Lock Target
	(a) Hold HCU Half-action(b) Slew to desired Target(c) HCU Full-Action to lock
	Unlock Target
	(d) HCU Half-action
• DDD	Track Indications
	ANT TRK light
	RDROT light
	 Tracking gates
	- Closure rate
	 Attack Symbology

— 33 —

3.11 ACM MODES - OVERVIEW

	PLM	VSL	PAL	MRL
Range	5 nm	5 nm	15 nm	5 nm
Description	Boresight	Vertical	Horizontal	RIO
Weapons		Gun +	- All Missiles	

• PLM	Pilot Lockon Mode Highest Priority ACM Search Pattern - Small Boresight - Range: 5 nm
• VSL	 Vertical Scan Lockon HI Search Pattern Width: 5 deg Vertical: +15 to +55 deg Range: 5 nm
	 LO Search Pattern Width: 5 deg Vertical: -15 to +25 deg Range: 5 nm RIO/PILOT Controlled
• PAL	Pilot Automatic Lockon Search Pattern Width: +/- 20 deg Vertical: 8-bar Range: 15 nm
• MRL	Manual Rapid Lockon RIO Controlled Search Pattern HCU Controlled Range: 5 nm

3.12 TID SYMBOLOGY

GENERAL		
Center Dot	•	Basic Component of Symbols Marks coordinates of symbol
Own AC	\bigcirc	Symbol representing own aircraft
		 Ground Stabilized: Moves Aircraft Stabilized: Stationary Outside TID: line drawn from TID center towards symbol
TID Cursor		Hook Cursor
		 Controlled by HCU in TID mode
		Half-Action
		 Enables display of symbol Enables HCU stick to move cursor
		• Full-Action
		Hooks closest symbolIf no symbol near, cursor dropped at location
TWS Steering Centroid	X	Steering centroid of TWS tracks
		 Selected by WCS for weapons engagement
ONBOARD SENS	ORS	Symbol Above Dot
Unknown	•	Unknown Sensor TrackAll Returns in RWS
Hostile		 Sensor Track designated Hostile by RIO
Friend	•	 Sensor Track designated Friendly by RIO
Angle-Tracked Radar		Radar Angle Tracking
Target	\•	 Jamming Target

Angle-Tracked Radar Target with Altitude Difference Ranging		 Radar Angle Tracking Jamming Target Alt. diff. ranging
TCS-Angle Tracked Target	•>	TCS Angle Tracking
TCS-Angle Tracked Target with Altitude Difference Ranging		TCS Angle Tracking Alt. diff. ranging
D/L TARGETS	S	Symbol Below Dot
Unknown	•	D/L Track designated Un- known by Source
Hostile	•	D/L Track designated Hostile by Source
Friendly		 D/L Track designated Friendly by Source
MANUAL REF PO	INTS	
Home base		 Waypoint Representing Home Base Carrier Airfield
Waypoint	· ·	 Nav Waypoint Supplanted by Number 1, 2, or 3
Defended Point		Waypoint to Defend
Fixed Point	X	Generic Waypoint
Hostile Area		Waypoint Indicating Hostile Area
Surface Target		Waypoint Indicating Surface Target
IP		Initial Point
		 Waypoint for A/G engage- ment
D/L REF POIN	TS	
Home Base		 D/L Waypoint Representing Home Base

AWG-9 RADAR REV: 20210820 Waypoint • D/L Generic Waypoint Data Link Fixed • D/L Waypoint Representing **Point Fixed Point** • D/L Waypoint Representing a Surface Target **Surface Target** POS SYMB MODIFIERS Additional Symbology on TWS Mandatory Attack **Track** - Horizontal bar through center dot Selected by RIO - Only 1 target can be designated - Guaranteed WCS priority number **Data Link Destroy** Additional Symbology on D/L **Track** - Horizontal bar through center dot Selected by Source - No effect on WCS prioritization **Do Not Attack** Additional Symbology on TWS or D/L Track Vertical bar through center dot If Set by RIO - Removes WCS prioritization **Multiple Targets** Additional Symbology on TWS or D/L Track Horizontal bar on left side of symbol

• Indicates Multiple Targets

Data Link Challenge		 Additional Symbology on D/L Track
		 Small V with center at center dot
		 Command to Visually Identify
Track Extrapolated	\\hat{\chi}\	 Additional Symbology on TWS or D/L Track
		 Small X with center at center dot
		 No Update within 8 seconds
		 Track deleted after 14 seconds
		Or after 2 min if track hold
Altitude Numerics	4/•\	 Altitude to Nearest Ten Thousand
		- example: 35000-45000
Firing Order Numer-	/^\4	 Indicates AIM-54 Prioritization
ics		Numbers 1-6Only in TWS
Time-to-Impact (TTI)	\^\li6	After AIM-54 Launch
		 Prioritization replaced with estimated TTI
		Flashes after Pitbull
Velocity Vector		 Additional Symbology from center Dot
		Direction represents track heading
		- Length represents speed
		Varies with Mode
		 Ground Stabilized: true heading and ground speed Aircraft Stabilized: relative heading and velocity

Launch Zone Vectors		Additional Symbology for AIM-54 Selected manually by RIO Or 60 seconds from max launch TUMR Time-Until-Minimum-Range Max: 180 seconds, 1.5 inches TUOR Time-Until-Optimal-Range Start of bar is 8 seconds from optimum TUIR
		- Time-Until-In-Range
Jamming Strobe		 Line from own AC towards Jammer
Radar Antenna Scan Pattern Azimuth Limits	XXX)	 Limits of Current Scan Azimuth Single Line in STT
Data Link Jamming Strobe		 Line from D/L point towards Jammer
Data Link Pointer		 Additional Symbology on D/L Track — Circle — Indicates operator concern
Data Link Priority Kill		 Additional Symbology on D/L Track Square Indicates target must be destroyed No effect on WCS prioritization

AWG-9 RADAR F-14A/B REV: 20210820

ATTACK DISPLAY SYMBOLOGY

Artificial Horizon		Represents Pitch and Roll
Steering Guidance Symbol		Represents Steering Error
Зушьог		 Should be placed as near as possible to center of ASE circle
Allowable Steering Error Circle	$ \bigcirc $	Indicates Allowable Steering Error for Missile Launch
		 Size Varies with Geometry, Mode, Missile
Breakaway Indica- tion	\times	Appears when Target Range Less than Minimum for Se- lected Weapon

TCS - LANTIRN

- 4 TCS / ALQ-100
- 4.1 **OVERVIEW**

- 5 LANTIRN
- 5.1 **OVERVIEW**
- 5.2 DISPLAY
- 5.3 CONTROL PANEL
- 5.4 CONTROLS
- 5.5 STARTUP
- 5.6 MASTER MODES

6 A/G WEAPONS

6.1 A/G WEAPON SETTINGS - OVERVIEW

• WPN TYPE	Selects Weapon Type
	 Configures WCS for selected weapon Refer to Kneeboard for list of mounted weapons Mk-81 / 82 / 83 have both L and H option refering to high and low drag
DLVY MODE	 STP-SGL - Single weapon per press STP-PRS - Single pair per press RPL-SGL - QTY of weapons per press RPL-PRS - QTY of pairs per press
DLVY OPTNS	 INTERVAL - Interval in ms QTY - Number of stores to be released
MECH FUZE	 NOSE - Arms nose fuze SAFE - Inhibits arming of fuzes NOSE/TAIL - Arms both fuzes
• ELEC FUZE	 SAFE - Inhibits electrical bomb fuzing VT - Sets air-burst mode at preset burst height for compatible stores INST - Sets instantaneous burst mode DLY 1 - Sets preset time delay 1 DLY 2 - Sets preset time delay 2
• STA SEL	 Selects Stations for Employment/Jettison Set to SEL to activate a pylon Stations 1 & 8 should be set to B for selection Station 1 & 8 SW was used for Sidewinder jettison, is now inoperable
• TANK JETT	Allows Drop Tank Jettison
SEL JETT	JETT - Selective jettisonSAFE - Inhibits jettisonAUX - Backup mode
JETT OPTIONS	 MER TER - Jettisons ejector racks WPNS - Jettisons weapons only

ATTK MODE

- CCMPTR TGT
 - Computer Target Similar to CCRP
- CMPTR IP
 - Computer initial point
 - Extended CMPTR TGT mode using known IP
 - For use when target hard to spot visually but close to landmark
- CMPTR PLT
 - Computer Pilot similar to CCIP
- MAN
 - Manual HUD displays pipper
 - Backup mode
- D/L BOMB
 - Data-Link Bomb Automatic mode steered by D/L cues
 - Not Implemented in DCS

6.2 SELECTIVE ORNANCE JETTISON

1.	Pilot Conditions	(a) MASTER ARMON
2.	RIO Conditions	(a) Desired StationsSelected
		(b) JETT OPTIONS As Desired
3.	Jettison	(a) SEL JETT GuardFlipped
		(b) SEL JETT SwitchJETT

6.3 M61 GUN

1.	Pilot Conditions	(a) MASTER ARMON
		(b) HUD
		(c) WEAPON SELECTOR GUNS
		(d) Wing SweepBOMB
2.	Employment	(a) Dive 20-30 deg
		(b) Pipper on target
		(c) TRIGGER FIRE
•	Note: TCS	TCS slaved to radar impact point
		Bio can select NAR or WIDE

F-14A/B REV: 20210820

6.4 FFAR / ZUNI ROCKETS

1.	RIO Conditions	(a) WPN TYP	LAU-10
		(b) Attack Mode	Pilot Attack
		(c) Deliver Mode	RPL-SGL
		(d) Mechanical Fuze	NOSE
		(e) Electronic Fuze	INST
		(f) Delivery Options	As Desired
		(g) Stations	Armed
2.	Pilot Conditions	(a) MASTER ARM	ON
		(b) HUD	A/G
		(c) WEAPON SELECTOR	OFF
		(d) Stations	verify selected
		(e) Wing Sweep	BOMB
3.	Employment	(a) Dive	20-30 deg
		(b) Pipper	on target
		(c) TRIGGER	FIRE

6.5 UNGUIDED BOMB - CCIP

1.	RIO Conditions	(a) WPN TYP MK-XX (b) Attack Mode Pilot Attack (c) Deliver Mode STP-PRS (d) Mechanical Fuze NOSE (e) Electronic Fuze INST (f) Delivery Options As Desired (g) Stations Armed
2.	Pilot Conditions	(a) MASTER ARM ON (b) HUD A/G (c) WEAPON SELECTOR OFF (d) Stations verify selected (e) Wing Sweep BOMB
3.	Employment	(a) Dive 40 deg (b) Pipper on target (c) STORE RELEASE Press and Hold

A/G WEAPONS F-14A/B REV: 20210820

6.6 UNGUIDED BOMB - CCRP

1. RIO Conditions	(a) WPN TYP MK-82 (b) Attack Mode Target Attack (c) Deliver Mode STP-PRS (d) Mechanical Fuze NOSE (e) Electronic Fuze INST (f) Delivery Options As Desired (g) Stations Armed
2. Pilot Conditions	(a) MASTER ARM ON (b) HUD A/G (c) WEAPON SELECTOR OFF (d) Stations verify selected (e) Wing Sweep BOMB
3. Designation	(a) Slew Diamond
4. Employment	(a) Flight Path

6.7 GBU-10 / 12 / 16 / 24

1. LANTIRN PREP	(a) Target Pod PowerPOD
LANTINI FREF	Warm up takes approx. 8 min Automatically switches to STANDBY
	 (b) Laser Code
	(c) LANTIRN ModeOPERATE
	STANDBY caution will flash for 30 sThen switches to OPER
	(d) VIDEO Switch
2. RIO Conditions	(a) WPN TYP
	(f) Delivery Options As Desired (g) Stations Armed
3. Pilot Conditions	(a) MASTER ARM ON (b) HUD A/G (c) WEAPON SELECTOR OFF (d) VDI Mode TV (e) Stations verify selected (f) Wing Sweep BOMB
4. Slew LANTIRN	Slave to WYPT Left-4-Way RIGHT QSNO (Snowplow) S4 HAT Down Toggle FOV LANTIRN Toggle FOV Slew LANTIRN Stick Area Track Left-4-Way UP Point Track Left-4-Way Down Undesignate LANTIRN Undesignate

A/G WEAPONS F-14A/B REV: 20210820

4.	Designate	 (a) Designate Trigger Full-Action Time-to-Go calculated Slant Range calculated
		Once Time-to-Realease (TREL) is 0
		(b) Auto-Lase If selected: lases 10s to impact (c) Manual Lase Trigger Full-Action (d) While Lasing L blinks
5. Er	mployment	Once Time-to-Realease (TREL) is 0 (a) STORE RELEASE Press and Hold (b) Flight Path Gentle right-hand turn (to prevent masking)

6.8 TALD DECOYS

1.	RIO Conditions	(a) WPN TYPTALD(b) Deliver ModeSTP-SGL(c) Delivery OptionsAs Desired(d) StationsArmed
2.	Pilot Conditions	(a) MASTER ARM ON (b) HUD A/G (c) WEAPON SELECTOR OFF (d) HSD Mode TID (e) Stations verify selected
3.	Employment	(a) Flight Path High / Fast (b) RWR Monitor to locate emitters (c) STORE RELEASE Press and Hold

A/A WEAPONS

M61 GUN - OVERVIEW

GUN RATE	Cycles Gun Rate
Button	HIGH - 6000 rpmLOW - 4000 rpm
A/A Gun Modes	• RTGS
	 Real-Time Gunsight Mode Selected automatically with guns If No WCS Data Available displays bullet location at 2000 ft with diamond and 1000 ft with pipper If WCS Data Available pipper displays bullet location at targets current range out to 4000 ft
	MANUAL
	Fixed manual pipperAdjust with GUN ELEV knobPress CAGE/SEAM to select
• CAGE/SEAM Button	Cycles RTGS / MANUAL Gun Modes
ROUNDS Knob	Allows selection of remaining gun rounds

M61 GUN - MANUAL

1.	Conditions	• MASTER ARM	ON
		• HUD	
		• Gun Rate	HIGH
		Gunsight Lead	as required
		WEAPON SELECTOR	GUNS
2.	Employment	(a) Gun Mode	MANUAL
		(b) Pipper	on target
		(c) Trigger	FIRE

M61 GUN - RTGS / NO RADAR

1.	Conditions	• MASTER ARM	ON
		• HUD	A/A
		• Gun Rate	HIGH
		WEAPON SELECTOR	GUNS
2.	Employment	(a) Gun Mode	RTGS
		(b) Pipper	on target
		(c) Trigger	FIRE

M61 GUN - RTGS / RADAR

1.	Conditions	• MASTER ARM	ON
		• HUD	A/A
		• Gun Rate	HIGH
		WEAPON SELECTOR	GUNS
2.	Employment	(a) Gun Mode	RTGS
		(b) Radar	STT
		(c) Pipper	on target
		(d) Trigger	FIRE

7.5 AIM-9 SIDEWINDER - OVERVIEW

Missile Prepara-	MSL PREP
tion	 AIM-9 seeker must be cooled
	 Either press SW COOL button
	Or activation of ACM
 Seeker Head 	• SEAM
Modes	 Sidewinder Expanded Acquisition Mode
	 Double-D search pattern invisible to pilot
	 4.5 sec search time
	 Allows AIM-9 to be uncaged and track target
	 40 deg track limit
	 Allows WCS to slave AIM-9 to radar
	track
	 Boresight
	 AIM-9 locked to ADL
	2.5 deg FOV
	 Selected if MODE/STP set to BRSIT
	 And ACM not active
 MODE/STP 	• NORM
Switch	 Allows SEAM seeker mode
	BRSIT
	 Forces Boresight seeker mode
	 Overridden if ACM active
CAGE/SEAM	Uncages Seeker
Button	Starts 4.5 second search
	 If no IR source found cages again
	Slaves Seeker
	If radar STT locked
	- II Tauai STT luckeu

7.6 AIM-9 SIDEWINDER - SILENT


1.	Conditions	MASTER ARM	ON
		• HUD	
		• SW COOL	ON
		• MODE/STP	As Desired
		WEAPON SELECTOR	SW
2.	Employment	(a) CAGE/SEAM	Uncage Seeker
		(b) IR-Lock	Good Tone
		(c) Trigger	FIRE

7.7 AIM-9 SIDEWINDER - RADAR

1.	Conditions	• MASTER ARMON
		• HUDA/A
		• SW COOLON
		• MODE/STP NORM
		WEAPON SELECTORSW
2.	Employment	(a) Radar STT
		(b) CAGE/SEAM Slave Seeker
		(c) IR-LOCKGood Tone
		(d) Steering center T-shaped cue with ASE
		(e) TriggerFIRE

7.8 AIM-7 SPARROW - OVERVIEW

 Missile Prepara- 	MSL PREP
tion	 AIM-7 must be tuned to AWG-9
	 Either press MSL PREP button
	Or activation of ACM
 Launch Modes 	Normal
	 Standard operation, STT target designated before launch AIM-7 uses SARH all the way to target WCS can use CS or PD for guidance set with MSL OPTIONS Switch
	Boresight
	 Uses CS flood antenna of AWG-9 Missile will track strongest return in Flood area Automatically activated if STT broken Selected if MODE/STP set to BRSIT
	- Or if no STT available
	- Shown Below
MSL SPD GATE	NOSE QTR
Switch	 Standard setting in DCS
	All Others
	 Not simulated
MSL OPTIONS	• NORM
Switch	 WCS uses dedicated CW antenna for AIM-7 guidance
	• SP PD
	 WCS uses PD from main flood antenna for AIM-7F/M guidance
MODE/STP	• NORM
Switch	 Sets normal launch mode logic
	• BRSIT
	Forces Boresight launch mode
	- 1 cross Borosigni launon mode

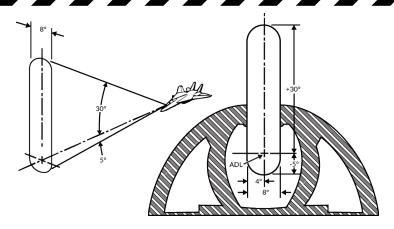

AIM-7 SPARROW - STT 7.9

1. Conditions	• MASTER ARM ON • HUD A/A • MSL PREP ON • MODE/STP NORM
	WEAPON SELECTORSP
2. RIO Condi	MSL SPD GATE NOSE QTR MSL OPTIONS As Desired
3. Employmen	(a) RadarSTT
	Target < 20 deg from ADLASE center T-shaped cue within
	(c) Trigger Press and Hold (until weapon release)
	(d) Radar Maintain Lock (until impact)

7.10 AIM-54 PHOENIX - OVERVIEW

Missile Preparation Launch Modes	 Weapon Cooling AIM-54 requires liquid cooling RIO enabled LIQUID COOLING switch MSL PREP AIM-54 must be tuned to AWG-9 Either press MSL PREP button Or activation of ACM PDSTT SARH
	 AIM-54 uses SARH all the way to target Faster update rate than TWS Slightly increased effective range as compared to a TWS launch TWS SARH/ARH Allows 6 AIM-54 launches at 6 targets Missile is initially SARH guided When within AIM-54 seeker range AWG-9 sends activation command Not Fire and Forget: Requires automatic activation command ACM Active Activated when BRSIT selected Or when ACM active with no radar track Missile commanded active before
MSL SPD GATE	launch NOSE QTR
Switch	 Standard setting in DCS
	All Others
	 Not simulated
MSL OPTIONS Switch	 NORM Normal guidance (SARH or SARH/ARH) PH ACT
	 WCS immediately sends AIM-54 activa- tion command on launch

Reverts to SARH if no target detectedMust be selected before launch

A/A WEAPONS	F-14A/B REV: 20210820
• TGTS Switch	 SMALL - 6nm activation range NORM - 10nm activation range LARGE - 13nm activation range
MODE/STP Switch	NORM Normal operation
	BRSIT
	 Commanded active before launch Missile follows ADL and locks strongest return
TWS Symbology	Refer to TID Symbology Section • Pre-Launch
	 Prioritization numbers assigned to tracks automatically or manually Blinking indicates optimal launch parameters
	Post-Launch
	 Target prioritization number replaced with TTI Other prioritization numbers collapsed by one

Launch To Eject

(LTE) Time

Tracks under missile attack brightenedTTI blinks when missile active

• Normal Operation - 3-4 seconds

• When in ACM - 1 second

7.11 AIM-54 PHOENIX - PD-STT

1.	Conditions	 MASTER ARM ON HUD A/A MSL PREP ON MODE/STP NORM WEAPON SELECTOR PH
2.	RIO Conditions	 LIQUID COOLING ON (FWD) MSL SPD GATE NOSE QTR MSL OPTIONS As Desired TGTS Switch As Desired
3.	Employment	(a) Radar STT (b) Steering
		• Target < 20 deg from ADL
		ASE center T-shaped cue within
		(c) TriggerPress and Hold (until weapon release)
		(d) Radar Maintain Lock (until impact)

7.12 AIM-54 PHOENIX - TWS / MULTI

1. Conditions	• MASTER ARMON
	• HUDA/A
	• MSL PREPON
	• MODE/STPNORM
	WEAPON SELECTORPH
2. RIO Conditions	LIQUID COOLING ON (FWD)
	MSL SPD GATENOSÈ QTR
	MSL OPTIONS As Desired
	TGTS Switch As Desired
	WCS Mode TWS MAN/AUTO
4. Employment	(a) Radar TWS
	(b) TriggerPress and Hold
	(until weapon release)
	(c) Repeat for remaining targets
	(d) Radar Maintain Track
	(until active)

