# RUPRECHT-KARLS-UNIVERSITÄT HEIDELBERG



## Arthur Heimbrecht

Extending a GCC Back-End for the Plasticity Processing Unit in HICANN-DLS

KIRCHHOFF-INSTITUT FÜR PHYSIK

# Department of Physics and Astronomy University of Heidelberg

## **Bachelor Thesis**

in Physics submitted by

## Arthur Heimbrecht

born in Speyer

# Extending a GCC Back-End for the Plasticity Processing Unit in HICANN-DLS

This Bachelor Thesis has been carried out by Arthur Heimbrecht at the

KIRCHHOFF INSTITUTE FOR PHYSICS
RUPRECHT-KARLS-UNIVERSITÄT HEIDELBERG
under the supervision of
Prof. Dr. Karlheinz Meier

# Extending a GCC Back-End for the Plasticity Processing Unit in HICANN-DLS

As part of the Human Brain Project, BrainScaleS System is a unique project on many levels. This includes a processor solely used by the HICANN-DLS, which manages synaptic weights for every neuron built into one of the many wafers through a special I/O bus. To accelerate the speed at which this so called plasticity processor unit or "nux" computes all synaptic weights of every neuron used, the processor has an extended instruction set architecture that supports vector registers and single input multiple data.

This report deals with the task of adding built-in functions to an existing back-end of GCC, specifically the one already used by nux, in order to extend the already implemented set of functions according to the user's needs.

Erweiterung eines GCC Back-Ends für die PPU in HICANN-DLS

Deutsche Sprach ist schwere Sprach

# Contents

1.	Introduction	1
2.	2.3.1. Back-End and Code Generation	3 3 5 14 17 19 20 21
3.	3.1. Adding the s2pp Option Flag and nux Target 3.2. Creating Macros 3.3. Registers	24 25 29 32 40 42 51
4.	Results and Applications	54
5.	Discussion and Outlook	58
Αp	ppendix	61
Α.	A.1. Acronyms	<b>61</b> 61 64 64
Bil	bliography	67

## 1. Introduction

As neuromorphic computing regularly becomes a popular scientific topic, various applications for such systems emerge and make use of advantages that analogue hardware has over traditional computers . In order to do this, one must get familiar with the system that is used as it often differs in many ways from common computer architectures. Thus programing for such systems can feel odd at times as users need to abandon some familiar techniques and acquire new skills instead. This is a hurdle for many users when developing new experiments and initially takes a significant amount of time.

paper on current neuromorphic computing

An example of this is the current way of programming for the plasticity processing unit of the High Input Count Neural Network - Digital Learning System (HICANN-DLS). The HICANN-DLS is a small scale system that features analogue emulation of neurons and synapses in networks. The Plasiticty Processing Unit (PPU), as part of HICANN-DLS, can be used for implementing plasticity rules for such networks. It resembles a processor architecture which was modified for this task. Implementing such plasticity rules differs from conventional high-level programming styles. When creating code for the PPU, users are pretty much pushed back to the origins of computing; Instead of assigning values like  $\tt d = \tt a + \tt b$ , one must first read the variables from memory, then operate on their values and finally write back the result to memory. Therefore coding for the PPU works on a low level which brings its own challenges to the user.

Ultimately, the more a system abandons conventional elements of programming, the more problems can emerge from this. Not only will fewer users take the initiative of writing code for such systems, but also can code get confusing, hard to debug and at worst even inefficient.

Compilers usually save users from these problems by offering high-level languages Over decades compilers have been developed and became standard tool for programmers. At the same time compilers became more and more a black box that transforms a program into an executable file. For this reason it may be difficult for some users to abandon their convenience and go back to low-level programming.

Though the PPU is not completely without compiler support, its distinct features are only usable on a low level. As these features are necessary to implement plasticity rules on the HICANN-DLS this can easily cause inconveniences for users. Users repeatedly mix high-level and low-level programming which is an atypical style of programming. It can lead to different problems as users have to adapt to this and at worst this can even lead to ineffective programs. As performance is important for neuromorphic programming, users may need an unreasonable amount of time and work to achieve simple results with this.

#### 1. Introduction

Full compiler support doe not exist for the PPU because of its modified processor architecture, which was developed solely for neuromorphic hardware. It can be classified as an application specific instruction set architecture which is an intermediate form between general purpose processors and application specific integrated circuits. It offers a partly customized instruction set that is optimized for its applications.

The HICANN-DLS already is an experimental platform, which is used by several users, even though of PPU-related challenges. Applications like in-the-loop training or stimulated time dependent plasticity have been developed and mostly do not involve the PPU. Even when taking the effort of learning to code for the PPU, users are constantly challenged by missing programming features such as creating parameterized functions. This leads to repetitive code or difficulties when involving calibration into code.

Offering more tools for the PPU could reduce the effort of developing for the PPU, while at the same time increasing capabilities of programs. Besides allowing full high-level programming, compiler support could also offer tools like code optimization and debugging features. This work therefore aims to achieve compiler support for the PPU's hardware with as many features as possible. some point compiler support may also facilitate automatic code generation as a prereqimplementation of very high-level uisite languages. Users then could create plasticity rules in existing program environments from where code is translated into PPU programs. This creates the need for optimization of PPU code, like those built into virtually every compiler.

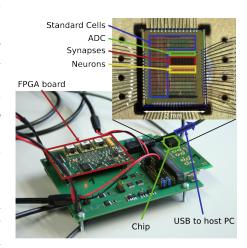


Figure 1.1.:
Set-Up of a HICANN-DLS Test
System (from Friedmann et al.)

This thesis will focus on achieving aforementioned compiler support and briefly explain the process itself. As fundamental knowledge of both processors and compilers is needed along the way, the second chapter will start with a very basic introduction to both topics. This involves basic information for the PPU as well as GNU Compiler Collection (GCC) and should explain the basic concepts to an extend which is sufficient. Afterwards, the process of extending the compiler is explained, followed by a presentation of results as well as first test cases. The thesis will conclude in a resume and give an outlook to future applications and development of the compiler and the PPU.

Ultimately this work wants to simplify PPU programming overall and give users tools at hand that allow for novel experiments and encourage further development of the whole system.

# Fundamentals and Applications of Computer Architectures and Compiler Design

### 2.1. Hardware Implementation of Neural Networks

This thesis mainly focuses on a processor that is an essential part of the **HICANN-DLS** chip. The following chapter will deal with the HICANN-DLS as a whole and then look into the **PPU** in detail while also addressing processor architecture in general.

The HICANN-DLS was built to emulate neural networks at high speeds with low power consumption. In contrast to many other systems it is a **spike based** system. This means that neuronal activities do not follow discrete time steps and neurons send out spikes when activated.

other systems

Neurons are interconnected through dendrites, synapses and axons where synapses can be of different coupling strength. This means that a neuron is activated only for a short time, called a spike, and sends out this spike through its axon to neurons that are connected via synapses. Between those spikes the neuron is resting and not sending any signals while still receiving input spikes from other neurons. Synapses can work quite differently but have in common that there is a certain weight associated to them, which we will call synaptic weight. The synaptic weight either amplifies or attenuates the pre-synaptic signal. The signal is then passed through the dendrite of the post-synaptic neuron to the soma where all incoming signals are integrated. If the integrated signals reach a certain threshold the neuron spikes and sends this signal to other neurons [13].

The HICANN-DLS system implements a simplified neural model in analog electronics in order to emulate neuronal networks in a biologically plausible parameter range.

Figure 2.1.: The synaptic array consists of pre-synaptic inputs (left), neurons (bottom) and 1024 synapses. All synapses along a column are connected to the respective neuron. Pre-synaptic inputs send their signal to all synapses along their respective row.

At its core it has a so called **synaptic array** (see figure 2.1) that connects 32 neurons which are located on a single chip to 32 different pre-synaptic inputs). They enclose a 2D field which is the synaptic array as it mainly consists of synapse circuits. All neurons reach into the array through input lines that are organized in columns. The pre-synaptic inputs respectively have wires that resemble rows in the array. At each intersection of those rows and columns, a synapse is placed that thereby connects a neuron and a

pre-synaptic input. Overall this gives 1024 synapses that interconnect neurons with the synaptic input.

A Field Programmable Gate Array (FPGA) is connected to all pre-synaptic inputs and routes external spikes to these inputs. Synapses are realized as small repetitive circuits that contain 16 bits of data (see figure 2.2). 6 bits of those are used as **synaptic** weight and the spare two upper bits of that byte are used for calibration. Each synapse also holds a 6-bit wide internal decoder address. Decoder Address and synaptic weight can both be changed from outside.

The synapse array can also be used in 16-bit mode for higher weight accuracy, that combines the weights of two synapses to a 12-bit weight.

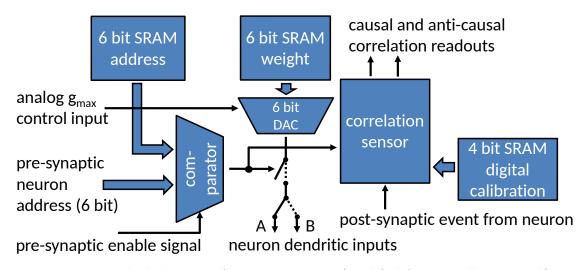


Figure 2.2.: Block diagram of a synapse circuit (modified from *Friedmann et al.*).

The FPGA sends a 6-bit address whenever it sends a spike to a pre-synaptic input which then is compared by each synapse to the decoder addresses they hold themselves. In case the addresses match, each synapse multiplies an output signal with the weight it stores and sends the result along a column where it reaches the neuron. Along those columns signals from different synapses are collected. Inside the neurons the resulting current input is integrated and if it exceeds a certain threshold the neuron spikes. If the neuron is spiking it sends an output signal to the FPGA which is responsible for spike routing in the first place. All of this is done continuously and does not follow discrete time steps, as mentioned earlier. Along each column sits a Correlation Analog Digital Converter (CADC) that measures correlation of postand pre-synaptic spikes and can be accessed by the PPU similar to the synaptic array.

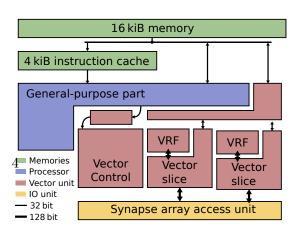


Figure 2.3.:

Block diagram of the nux architecture (modified from *Friedmann et al.*).

The PPU is the processing unit of HICANN-DLS and is equipped with a Vector Extension (VE) that is called synaptic plasiticity processor (s2pp). It is also connected to the digital information is the synapse array.

The following naming convention will be used throughout this thesis:

**PPU** is the processor which is part of HICANN-DLS and mainly responsible for plasticity.

**nux** refers to the architecture of the PPU, see figure 2.3.

**s2pp** describes the PPU's VE and is part of the nux architecture.

Digital configuration of the synapses and writing PPU programs to the memory is handled by an FPGA, that has access to every interface of a HICANN-DLS chip.

It was developed to handle plasticity and can apply different plasticity rules to synapses during or in between experiments. This is done much faster by the PPU than by the FPGA which is important for achieving experimental speeds that are 10<sup>3</sup> times faster than their biological counterparts. In general the PPU is meant to handle plasticity of the synapses during experiments while the FPGA should be used to initially set up an experiment, manage spike input and record data.

# 2.2. Processor Architectures and the Plasticity Processing Unit

Although the main goal of HICANN-DLS is to provide an alternative analog architecture, there are advantages to classic computing which are needed for some applications and almost all contemporary processors are built using the so called von-Neumann architecture (figure 2.4).

add reference

The main advantage of digital systems over analog systems, such as the human brain, is the ability to do numeric and logical operations at much higher speeds and precision as well as the availability of existing digital interfaces. For this reason "normal" processors are responsible for handling experiment data as well as configuration of an experiment in the HICANN-DLS. We will now shortly get in touch with basics of such processors and explain common terms while referring to the PPU at times when it is convenient.

The PPU, which was designed by *Friedmann et al.*, is a custom processor, that is based on the Power Instruction Set Architecture (PowerISA), which was developed by IBM since 1990. Specifically the PPU uses POWER7 which was released in 2010 as a successor of the original POWER architecture. It runs at 100 MHz clock frequency.

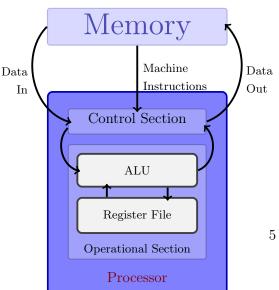


Figure 2.4.:
Structure of a Processor in von-Neumann Architecture

#### 2. Fundamentals and Applications of Computer Architectures and Compiler Design

In general a microprocessor can be seen as a combination of two units which are an operational section and a control section. The control section is responsible for fetching instructions and operands, interpreting them, controlling their execution and reading/writing to the main memory or other buses. The operational section on the other hand creates results from instructions and operands as it performs

logic or arithmetic operation on these, as instructed by the control section. Prominent parts of the operational section are the **Arithmetic Logic Unit (ALU)** and the **Register File (RF)**.

The RF can be seen as short-term memory of the processor. It consists of several repeated elements, called **registers**, that save data and have share the same size which is determined by the architecture; the 32-bit architecture of nux for instance has 32-bit wide registers.

Typically the number and purpose of registers varies for different architectures. Common purposes of registers are:

General Purpose Register (GPR) These registers can store values for various causes but in most cases are soon to be used by the ALU. Most registers on a processor are typically GPRs. Any register that is not a GPR is called a **Special Purpose** Register (SPR)

**Linker Register (LR)** This register marks the jump point of function calls. After a function completes, the program jumps to the address in the link register.

**Conditional Register (CR)** This register's value is set by an instruction that compares one or two values in GPRs. Its value can condition some instructions if they are executed or not.

The ALU uses values which are stored in the RF to perform the aforementioned logic or arithmetic operations and saves the results there as well.

Some architectures also have an accumulator that is often part of the ALU. Intermediate results can be stored there because access to the accumulator is the fastest possible but it can only holds a single value at a time.

Memory of a von-Neumann machine contains both, the program and data. Usually this memory is displayed as equal-sized blocks of information with addresses as in figure 2.5.

Because the smallest amount of information which we are interested in is usually a byte, each address is equivalent to one byte in memory. The program is normally in a different location in memory than data and the processor goes through the program step

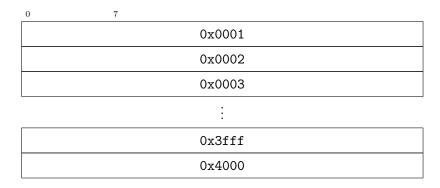


Figure 2.5.: Illustration of Word Sizes for 32-bit Words

by step. Each of these steps is called a machine instruction, which consists of several elements that occupy a fixed amount of memory (see figure 2.6).



Figure 2.6.: Representation of a Machine Instruction in Memory

An instruction like in figure 2.6 is called a **machine instruction** and combines several elements. A program is simply a list of these instructions in memory that belong to the **instruction set**. Each machine instruction requires a fixed amount of memory and consists of an opcode and multiple operands. The **opcode** is the first part of the instruction and is typically an 8-bit number that identifies the operation.

Opcodes are often represented by an alias string like add, that is called a **mnemonic**. The opcode is followed by several addresses that refer to the location a value can be taken from or where it should be stored. These addresses are called **operands** and can either be a memory address or a register number. The ALU reads this the opcode and operands and performs a set of so called **micro instructions** accordingly.

During a single clock cycle a chip can perform a single micro instruction. An example for micro instructions in an add instruction (d = add(a,b)) would be:[2, p. 23ff.]

Listing 2.1: example of micro instructions

```
    1. fetch instruction from memory
    2. decode instruction
    3. fetch first operand a
    4. fetch second operand b
    5. perform operation on operands
    6. store result
```

inhaltlicher zusammen-

The complexity of an instruction set is important for performance. As complex instruction sets feature highly specialized circuits and microinstructions, they are able to complete complex computation in only a few clock cycles. But most often a complex

#### 2. Fundamentals and Applications of Computer Architectures and Compiler Design

instruction set would often rely a small set of basic arithmetic instructions and rarely use complex ones. Because every micro instruction must be represented by a circuit in the ALU, a smaller instruction set would safe space and be easier to design. In general developing a processor architecture involves factors like: available chip space, instruction set and design complexity, energy consumption and maximum clock frequency. Because of this, processors can be classified in two main groups:

give reason for clock frequency

Complex Instruction Set Computing (CISC) e.g. x86, MC68000, and i8080

Reduced Instruction Set Computing (RISC) e.g. Performance Optimization With Enhanced RISC (POWER), ARM and MIPS

The latter usually has an instruction set that is reduced to simple instructions like add or sub and connects these to create more complex instructions. This is similar to how micro instructions work and makes programs on a RISC processor more complicated, which also affects developers directly. The architecture also features more registers than CISC and instruction pipelining, which will be discussed later on.

The PPU is a RISC architecture so we will focus more on RISC's key features throughout this chapter.

Programs that only consist of machine instructions a called **assembly** which is the lowest level of representation of a program that is still is human-readable. Assembly instructions follow the same scheme as machine instructions do:

31		23	15	7	0
	mnemonic operand		operand	operand	
31		23	15	7	0
	addi	r1 register address	r2 register address	5 immediate operand	

Figure 2.7.: Representation of Assembly Instruction addi as a Machine Instruction in Memory. It adds an immediate value to register r2 and writes the result in r1. Table A.2 shows a list of important instructions in the PowerISA.

Listing 2.2: Assembly in Written Form

#### 1 addi r1, r2, 5

In RISC architectures instructions typically consist of 3 operands and are usually between registers only (except for load/store memory instructions). Instructions that have less operands are usually mapped on different instructions. Its operand can be of two different types which are all shown in figure 2.7. They either represent a specific register (r1 = register 1) or an immediate value (5 = the integer 5). RISC architectures often also support only one load (memory to register) and one store (register to memory) instruction, which qualifies them as load/store architectures. In order to access memory, operands must be used indirectly:

A memory address is given by an immediate value that is saved to a register. A memory instruction then uses the value that is saved in the register instead of the register address as in listing 2.3.

Listing 2.3: Example Code for Load and Store Instruction. The contents of memory address 0x0000 are loaded into register r0 and then stored at address 0x1000. See table A.2 for information on used mnemonics.

```
1 li r1, 0x0000
2 lw r0, 0(r1)
3 li r1, 0x1000
4 stw r1, 0(r1)
```

It takes up to several hundred cycles for instructions to access memory which effectively stalls the processor until the memory instruction has finished.

$$speed(accumulator) > speed(register) \gg speed(memory)$$

Therefore a user should try to avoid memory access as much as possible and use registers instead.

As address size is limited by the register size, the maximum amount of memory that can be used is:

$$2^{n}byte \xrightarrow{n=32 \text{ bit}} 2^{32}byte \approx 4 * 10^{9}byte = 4GiB$$
 (2.1)

Since instructions on RISC are all very simple, they also follow the scheme in listing 2.1. The processor therefore start "pipelining" instructions, which means starting the next machine instruction as the previous machine instruction just performed the first micro instruction after one clock cycle. Ideally, this will increase the performance by a factor that is equal to the number of micro instructions in a machine instruction.

It must be noted though, that the processor has to implement detection of **hazards**, which are data dependencies between instructions; e.g. one instruction needs the result of another. Such an instruction is then postponed to a delay-slot and other instructions that do not cause hazards are executed instead. The result is reordering of instructions on a processor level.

Processors sometimes have so called **co-processors** for complex instructions that are not included in the instruction set, but are still useful. An example would be multiplication on most RISCs, which would need many cycles when split in add instructions. A co-processor can perform this in just a few cycles. In such a case the control section recognizes the mult opcode and passes it to the co-processor instead of the ALU.

This can be extended to whole units similar to the ALU existing in parallel. One example would be a **Ploating Point Unit (FPU)** which is nowadays standard for most processors and handles all instructions on floating point numbers. For this reason has the FPU its own **Floating Point Registers (FPRs)** in a separate register file.

A different kind of extension are vector extensions that do the same as the FPU but for vectors instead of floats and allows for **Single Input Multiple Data (SIMD)** processing. This is mostly wanted for highly parallel processes such as graphic rendering or audio and video processing. Early supercomputers such as the Cray-1 also made use of vector processing to gain performance by operating on multiple values simultaneously through a single register. This could either be realized through a fully parallel architecture or more easily through pipelining instructions for vector elements. The latter one is

reference

keep this?

reference

#### 2. Fundamentals and Applications of Computer Architectures and Compiler Design

possible since there are typically no dependencies, hence no hazards, between single elements in the same vector. Nowadays basically all common architectures support vector processing. A few examples are:

- x86 with SSE-series and AVX
- PowerPC with AltiVec and SPE
- IA-32 with MMX
- ARM with NEON
- AMD K6-2 with 3DNow!

The s2pp **VE** on the nux architecture is the PPU's distinct feature that allows for **SIMD** operations on synaptic weights. The VE is only weakly coupled to the General Purpose Processor (GPP) of the PPU. Both parts can operate in parallel while interaction is highly limited. To handle the vector unit the instruction set was extended by 53 new vector instructions that partly share their opcodes with existing AltiVec instructions. This renders no problem since the nux does not recognize AltiVec opcodes and most likely is not going to in the future. The Vector Register File (VRF) contains 32 new vector registers which are each 128-bit wide [11]. This allows for either use of vectors with 8 halfword (see figure 2.8) sized elements or 16 byte sized elements which are 128 bits long as seen in figure 2.9.

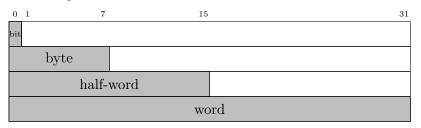


Figure 2.8.: Illustration of Word Sizes for 32-bit Words

But we take also a special interest in the AltiVec vector extension itself which was developed by Apple, IBM and Motorola in the mid 1990's and is also known as Vector Media eXtension (VMX) and Velocity Engine for the POWER architecture. The AltiVec extension provides a similar single-precision floating point and integer SIMD instruction set. Its vector registers can either hold sixteen 8-bit char (V16QI), eight 16-bit short (V8HI), four 32-bit int (V4SI) or single precision float (V4SF), each signed and unsigned.

It resembles most characteristics of the s2pp vector extension, like a similar VRF, and is already implemented in the PowerPC back-end of GCC, but both VEs also feature differences.

The s2pp VE features a vector accumulator of 128 bits width and a Vector Conditional Register (VCR) which holds 3 bits for each half byte of the vector, making 96 bit in total. The bits represent the result of a previous comparison instruction for vector elements. If the first bit is set, the compared element was larger than 0, if it was less than 0 the

0	7	15	3	1		63	3				127	7
(		rter eger										V16QI
0	7	15	3	1		63	3				127	,
	HI		Half Integer									} V8HI
0	7	15	3	1		63	3				127	,
		SI			igle eger							V4SI
0	7	15	3	1		63	3				127	,
		SF			igle oat							V4SF

Figure 2.9.: Vector structures are 128 bits wide and split into common word sizes.

second bit is set and if the element is equal to 0, the third bit is set. For more information see the nux manual [3, p. 23].

Instructions on the s2pp VE can be specified to operate only on those elements of a vector, that meet the condition in the corresponding bits in the VCR, while the AltiVec VE utilizes the CR of the PowerPC architecture. This does not allow for selective operations on individual elements through the CR, but allows for checking if all elements meet the condition in a single instruction. If element-wise selection is needed, AltiVec offers this through vector masks.

The AltiVec VE has two register that are not featured on s2pp. The Vector Status and Control Register (VSCR) is responsible for detecting saturation in vector operations and decides which floating point mode is used. The Vector Save/Restore register (VRSAVE) assists applications and operation systems by indicating for each Vector Register (VR) if it is currently used by a process and thus must be restored in case of an interrupt. Both of these registers are not available in the s2pp VE but would likely not be needed for simple arithmetic tasks which the PPU is meant to perform.

We already stated that all instructions of VEs must first pass the control unit, which detects vector instructions and then passes them to the VE. These instructions then go into an instruction cache for vector instructions. On nux the instructions then shortly stay in a reservation station that is specific for each kind of operation and thus allows for little out-of-order operation for instructions in these reservation stations which is illustrated in figure 2.10. This allows for performing some arithmetic operations on a vector during the process of accessing a different vector in memory. This results in a faster processing speed as pipelining for each instruction is also supported. Though the limiting factor for this remains the VRF's single port for reading and writing. An even more limiting factor is the shared memory interface of the s2pp and GPP.

Normally processors themselves do not keep track of memory directly. This is usually done by a **Memory Management Unit (MMU)** or a Memory Controller (MC). It handles memory access by the processor and can provide a set of virtual memory addresses which it translates into physical addresses. Most modern MMUs also incorporate a cache that stores memory instructions while another memory instruction is performed. It detects dependencies within this cache, which can be resolved there. Ultimately, this

add instruciton cache?

#### 2. Fundamentals and Applications of Computer Architectures and Compiler Design

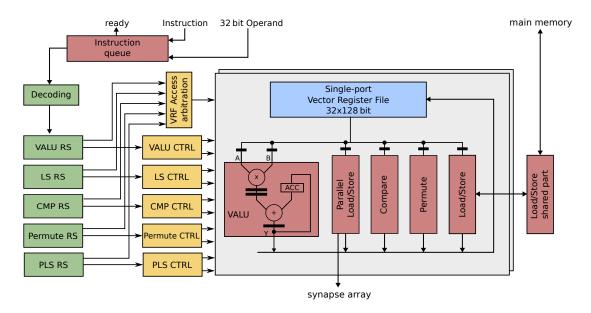


Figure 2.10.: Detailed structure of the s2pp vector extension (taken from *Friedmann* et al.).

results in faster transfer of data because the MMU can return results, it knows from the cache, without accessing the memory.

Not all MMUs support this though, which might lead to certain problems when handling memory. If instructions are reordered due to pipelining while dependencies on the same memory address are not detected correctly, an instruction may write to memory before a different one could load the previous value it needed from there. Another reason could be delayed instructions, which were mentioned earlier. For this reason memory barriers exist.

A memory barrier is an instruction that is equal to a guard, placed in code, that waits until all load and store instructions issued to the MMU are finished. It therefore splits the code into instructions issued before the memory barrier and issued after the memory barrier. This prohibits any instruction from being executed on the wrong side of the barrier due to reordering and thereby generally prevents conflicting memory instructions.

This kind of memory barrier is called sync which is used in listing 2.4. This and other memory barriers are also described in table A.2.

Listing 2.4: The memory barrier ensures that the first store has been performed before the second store is issued.

```
1 stw r7,data1(r9) #store shared data (last)
2 sync #export barrier
3 stw r4,lock(r3) #release lock
```

Using sync can result in up to a few hundred cycles of waiting for memory access to finish and therefore this should only be done if necessary.

The PPU's memory is 16 kiB which is accompanied by 4 kiB of instruction

cache. Together with the PPU this is called the plasticity sub-system. The MMU of this system is very simple as it does not cache memory instructions and also has matching virtual and physical addresses, thus memory barriers can become necessary at times.

add description to instruction cache

Another feature of the PPU is the ability to read out spike counts and similar information through a bus which is accessible through the memory interface of the MMU. It uses the upper 16 bits of a memory address for routing These are available because the memory is only 16 kiB large which is equivalent to 16-bit addresses. A pointer to a virtual memory address allows to read for example spike counts during an experiment. This is done the same way for the whole chip configuration such as analog neuron parameters.

The memory bus is also accessible by the FPGA. This is needed for writing programs into the memory as well as getting results during, or after experiments. It also allows for communication between a "master" FPGA and a "slave" PPU.

A bus is the connection between parts of a processor and used for data transfer. Bus speeds are very high as they transport data in parallel such as the contents of a register. Thus most buses should be as wide as a register of the processor. But as buses of such width need much space, some architectures use narrower buses with fewer bits than a register and instead use two instructions to transfer the contents of a full register. The upper half of the width is called **high order bits** and the bottom half is called **low order bits** for big-endian architectures. Systems of this sort are described as 32/16-bit architecture, which means that registers are 32 bit wide while buses are only 16 bit wide. As the higher order bits of registers are not as often used as the lower order ones, it is often enough to move the lower 16 bits. This results in less performance loss than one would initially expected.

keep this?

One of the main feature of the PPU though is access to the synaptic array which is offered through an extra bus, which can be seen in figure 2.10.

When using vector instruction for nux, one must always keep in mind that the weights in the synaptic array only consist of the latter 6 or 12 bits which are in a vector register and are right aligned.

Figure 2.11 displays the representation of values in the synapses and in vectors. The weight is the sum of the values where the bits are set to one. In contrast to this, the sign-bit changes its meaning when used in the vector unit and becomes a factor instead of a summand. This is the reason why a user must shift the vector's elements when reading/writing to the synapse array, as only then do special attributes of instructions work properly.

An example would be instructions that rely on **saturation** which predefines a minimum and maximum value. In case, the result is out-of-range, the instruction will return either the minimum or the maximum (whichever is closer). For this to work properly the bit representation must match the intended one, which is the above mentioned fractional representation, and the values must also be correctly aligned.

An overview of all vector opcodes is provided in the nux manual [3, ch. 5], which is

2. Fundamentals and Applications of Computer Architectures and Compiler Design

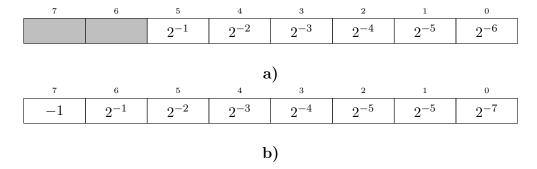


Figure 2.11.: Comparison of 2.11a Representation of Weights in Synapses and 2.11b Fractional Representation of Vector Components for Fixed-Point Saturational Arithmetic

recommended as accompanying literature besides this thesis. In general these vector opcodes are divided into 6 groups of instructions:

modulo halfword/byte instructions apply a modulo operation after every instruction which causes wrap around in case of an overflow at the most significant bit position. Each instruction is provided as halfword (modulo  $2^{16}$ ) and as byte instruction (modulo  $2^{8}$ ).

saturation fractional halfword/byte instructions allow for the results only to be in the range  $[-1, 1-2^{-7}]$  for byte elements and  $[-1, 1-2^{-15}]$  for half-word elements.

**permute instructions** perform operations on vectors that handle elements of vectors as a series of bits.

**load/store instructions** move vectors between vector registers and memory or the synapse array.

## 2.3. Basic Compiler Structure

At its core every compiler translates a source-language into a target-language as figure 2.12 illustrates. Most often it translates a high-level, human readable programming language into a machine language that consists of basic instructions that build complicated structures. In doing so, compilers may be the essential part in every-day lives of programmers everywhere. Thereby compilers played a key role in development of computers in general.

What differs compilers from interpreters is the separation of **compile-time** and **run-time**. As interpreters combine these two and translate a program at

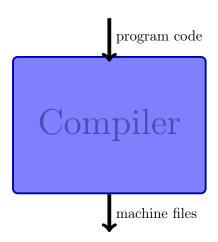


Figure 2.12.:
Compiler Representation

14

run-time, a compiler reads the source-language file completely (often several times) and only then creates the executable files which are executed after the process has finished. The advantages of this are simple: While a compiler takes some time at first until the program can be started, the resulting executable is next to always

faster and more efficient. This is due to the possibility of optimizing code during the compilation process and the chance of reading through the source file several times if this is needed (with each time the code is read being called a **pass**). Of course there do exist many different compilers today and what matters to the user is typically the combination of the amount of time it takes to compile a program and the performance of that program.

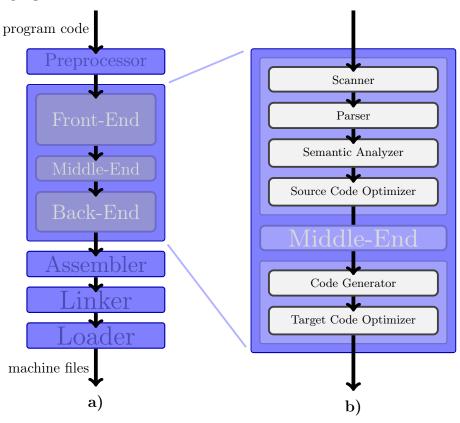


Figure 2.13.: Overviews of Compilation Stages

The compilation tree in 2.13a has different contributors besides the compiler. The compiler in 2.13b goes through different phases, that belong to the front- or back-end.

A compiler is not the only contributor to translation of a program into an executable program although it is the most prominent one. Figure 2.13a illustrates the chain of tools that is involved into this process: First the **preprocessor** modifies the source

before it is processed by the compiler and removes comments, substitutes macros and also includes other files into the source before it passes the new program code to the compiler. The compiler then passes its output to the **assembler** which translates the output of the compiler which is written in a language called **assembly** into actual machine code by substituting the easy-to-read string alternatives with actual opcodes. At last the **linker** combines the resulting "object-files" that the assembler emitted with standard library functions, that are already compiled, and other resources. The result is a single file that is almost executable. The only task which is left for the **loader** is assigning a base address to the relative memory references of the "relocatable" file. The code is now fully written in machine language and ready for operation.

Figure 2.13b shows the separation of a compiler into **front-end**, **back-end** and an optional **middle-end**. This is done to make a compiler portable, which means allowing the compiler to work for different source-languages which are implemented in the front-end and target-languages which must be specified in the back-end. Therefore if one wants to compile two different programs e.g. one in C the other in FORTRAN, it is necessary to change the front-end but not the back-end because the machine or **target** stays the same. The middle-end in this regard is not always needed but could be responsible for optimizations that are both source-independent and target-independent.

Of course the different parts of the compiler have to communicate through a language that all parts can understand or speak. Such a language is called **Intermediate Representation (IR)** and also used during different phases of the compilation process. It may differ in its form but always stays a representation of the original program code.

The different phases of a compilation process are illustrated to the far right of figure 2.12. First the preprocessed source code is given to the **scanner** that performs lexical analysis, which is combining sequences of characters and attributes such as "number" or "plus-sign" to so called tokens. Next the **parser** takes the sequence of tokens and builds a syntax tree that represents the structure of a program and is extended by the **semantic analyzer** which adds known attributes at compile-time like "integer" or "array of integers" and checks if the resulting combinations of attributes are valid. This already is the first form of IR. The **source code optimizer** which is the last phase of the front-end takes the syntax tree and takes a first shot at optimizing the code. Typically only light optimization is possible at this point such as pre-computing simple arithmetic instructions. After the source code optimizer is done the syntax tree is converted into different IR in order to be passed to the back-end.

The **code generator** takes this IR and translates it to machine code that fits the target — typically this is assembly. At last the **target code optimizer** tries to apply target-specific optimization until the target code can be emitted.

During these phases the compiler also generates a symbol and literal table. A **symbol table** is, as the name states, an overview of all symbols that are used in the program, it contains the symbols name and the attribute of the semantic analyzer. A **literal table** in contrast holds constants (i.e. strings) and makes them globally available by reference, as does the symbol table. This information is used by the code generator and various

optimization processes.

#### 2.3.1. Back-End and Code Generation

The last two phases of the compiler, which are part of the back-end, are the most interesting in respect to this thesis. Usually the processes of code generation and target optimization in the back-end are entangled as optimization can take place at different phases of code generation. Thus we first take a look at code generation in the back-end.

As we learned already, the source program reaches the back-end in form of IR. Often the IR is already linearized and thereby again in a form that can be seen as sequence of instructions. Because of this the IR may also be referred to as Intermediate Code. The process of generating actual machine code from this is again split into different phases:

- instruction selection
- instruction scheduling
- register allocation

At first the back-end recognizes sets of instructions in intermediate code that can be expressed as an equivalent machine instruction. Depending on the complexity of the instruction set a single machine instruction can combine several IR instructions. This may involve additional information that the front-end aggregated and added to the IR as attributes. Single machine instruction can combine several of these IR instructions. At the end of this, a compiler typically emits a sequence of assembly instructions which we will explain later on. In order to fulfill this task the compiler needs the specifications of the target it compiles for. This is called a target description and can contain things like specifications of the register-set, restrictions and alignment in memory and availability of extensions and functionalities. The compiler also needs knowledge of the instruction set of a target, which is determined by the Instruction Set Architecture (ISA) and is a list of instructions which are available and also their functionality. The compiler picks instructions according to their functionality from this list and substitutes the IR with this. Ideally a back-end thus could support different back-ends just by exchanging the machine description and the ISA as the basic methods of generating code are the same for most targets.

After the IR is converted into machine instructions the back-end now rearranges the sequence of instruction. This needs to be done as different instructions take different amounts of time to be executed. If a subsequent instruction depends on the result of a previous instruction the compiler now has two alternative approaches to solve this. First it can simply stall the programs execution as long as the instruction is executed and feed the next instruction into the processor only when the dependency is solved. This means that the compiler adds nops before every instruction that needs to wait for an operand as nop tells the processor to wait until the previous instruction has finished. For critical memory usage the compiler can also insert syncs as memory barriers before hazardous

memory instructions. Alternatively it can stall only the instruction which depends on the result which is currently computed but perform instructions that do not depend on the result in the mean time. By doing so the scheduler increases performance noticeably and thus can be seen as part of the optimization process. On RISC architectures this is especially important as load and store instructions can take a few hundred clock cycles more than normal register instructions and pipelining depends mainly on the instruction sequence. Thus the scheduler is also involved parallelization of code. As a result of this a compiler would usually accumulate all load instructions at he beginning of a procedure and start computing on registers that already have a value while the others are still loaded. This is done vice versa at the end of a procedure for storing the results in memory. This process of course needs the compiler to know the amount of time it takes for an instruction to be executed and works hand in hand with hazard detection on processor level.

At last he compiler handles register allocation which also includes memory handling. Typically the previous processes expect an ideal target machine which provides and endless amount of registers. As in reality the processor only has k registers the register allocator reduces the number of "virtual registers" or "pseudoregisters" that are requested to the available number of "hard registers" k. For this to be possible the compiler decides whether a value can live throughout a procedure in a register or must be placed into memory because there are not enough registers available. This results in the allocator adding load and store instructions to the machine code in order to temporarily save those registers in memory which is called "spilling". It is obvious that this can hurt performance and therefore the compiler tries to keep spilling of registers to a minimum and also insert spill code at places where it delays other instructions as little as possible. At he end of register allocation the compiler assigns hard registers to the virtual registers which are now only k at a time.

During and after code generation the compiler also applies optimizations to the machine code. Any optimization to the code though must take three things into consideration, which are safety, profitability and risk/effort. The first thing which always must be fulfilled, is safety. Only if the compiler can guarantee that an optimization does not change the result of the transformed code compared to the original code it may use this optimization! Only if this applies the compiler may check for the profit of an optimization which most often is a gain in performance but could also be the size of the program. At last the effort or time it takes for the compiler to perform this optimization and the risk of generating actually bad or inefficient code should be taken into account as well. If optimization passes these three aspects it may be applied to the code. In the end there exist some simple optimizations that always pass this test like the deletion of unnecessary actions or unreachable code, e.g. functions that are never called. Another example would be the reordering of code like the scheduler did before or the elimination of redundant code, which applies if the same value is computed at different points and thus the first result simply can be saved in a register. If a compiler knows the specific costs of instructions, it can also try to substitute general instruction with more specialized but faster instructions, like substituting a multiplication with 2 by shifting a value one position to the left. There exist many more ways of optimization but we only want to explain one

Listing 2.5: Exemplatory Assembly invkation

more kind of optimization which is called peephole optimization.

In **peephole optimization** the compiler only looks at small amounts of code at a time through a "peephole" and tries to find a substitution for the specific sequence of instructions it "sees". If the sequence can be substituted the peephole optimizer does so, otherwise the peephole is moved one step and the new sequence is evaluated. These substitutions must be specified by hand and are highly target-dependent in contrast to the optimizations which were mentioned before that are target-independent.

#### 2.3.2. Inline Assembly

Following a short introduction in the previous section, we want to spend a little time on assembly as it is useful to know how to program in assembly while using C. This is called **inline assembly** and uses the function asm.

Listing 2.5 would generate the instruction add in the assembly output of the compiler which would be followed by three operands.

First one must write an assembler template that is based on assembly. The integer in %n indicates the order, in which the operands are specified after the assembler template.

Output operands are specified after the first: as a list of comma separated constraints and variables. "=r" is such a constraint, that determines that the operand is to be stored in a register (r for register operand) and that the register is to be written (= this is called a modifier). The variable in parentheses must be declared in before and must be of matching type (float would not be allowed in this case).

The second: separates the input operands, which are specified the same way. r again stands for a register operand and the variable is in parentheses, the different operands are separated by commas. The third: separates operands from clobbered (=temporarily used) registers which would also be in quotes, but these are optional arguments and not needed in this case. volatile means that the compiler must not delete the following instructions due to optimization.

asm (:::memory); is a special operand and would indicate a memory barrier to the compiler, ergo the machine instructions previous to this line and the one following may not be interchanged.

keep this?

#### 2.3.3. Intrinsics

Intrinsics are sometimes also called built-in functions and resemble an intermediate form of inline assembly and a high-level programming language. This means that by calling an

intrinsic function, we tell the compiler to use a certain machine instruction that typically shares its name with the intrinsic. What differs an intrinsic from <code>asm()</code> is that we do not need to specify constraints or registers classes but only need to keep an eye on the type of arguments. One could easily mistake them for normal library functions but they are directly integrated into the back-end of a compiler and thus independent of the programming language. In order to implement intrinsics into a back-end, the compiler needs certain knowledge of what the <code>asm</code> instruction does and what kind of operands it needs.

A typical field of application for intrinsics would be vectorization and parallelization of code through processor extensions. Sometimes this is the sole option of using the machine instructions associated with them.

#### 2.3.4. GNU Compiler Collection

The GCC is a compiler suite that supports different programming languages and targets. Though normally it is seen as a build of GCC supports a variety of front-ends while it was built for a specific target. This target in most cases is the processor architecture on which the user runs the compiler. But GCC also supports the idea of a cross-compiler, which is the concept of compiling code on one machine but running the code on another machine that may be based on a different architecture. One build of GCC does not support different back-ends though and therefore GCC must be built individually for every back-end, it wants to compile code for. This is realized through a modular structure which follows the idea of a front-end, middle-end and back-end as was described in section 2.3 although some information that belongs to a back-end is also needed at the front-end, hence the compiler is built back-end specific but supports a wide variety of back-ends to choose from.

GCC itself is programmed in C++ and part of the GNU project of the Free Software Foundation. It is wide-spread and one of the most popular compilers especially among academic institutions and small scale developers. Every major UNIX distribution and many minor ones include GCC as a standard compiler.[14] As an open source project there is a constant development to the compiler bugs get constantly fixed.

There is one major competitor though which stands besides GCC as an open source compiler suite. This competitor is Clang, which works with Low Level Virtual Machine (LLVM). Both support running the same source code on multiple machines while LLVM actually runs intermediate code rather than actual machine code and uses GCC to generate this intermediate code for some front-ends. There are ongoing discussions on which compiler is better suited for which application but regarding performance, GCC takes the slight edge. [12] [10] These results have to be viewed with care though, as they are based on different processor architectures but it seems like both compilers provide similar performance. In this thesis GCC was chosen over LLVM for two main reasons. One is that after all GCC follows more the traditional concept of a compiler that generates machine code at the end and also I was far more familiar with GCC than with LLVM when this decision had to be made. The other is that GCC support for the PPU existed to a minimum before and a cross-compiler already existed.

At the time of writing GCC is at stable release version 6.3 with version 7 in the works but we will use an older version which is used internally by the working group which is version 4.9.2. Additionally binutils 2.25 will be used, which was patched by Simon Friedmann and since includes the opcodes and mnemonics which are supported by nux.

We take a special interest in the PowerPC back-end of GCC which is called RISC system/6000 (rs/6000) and is equivalent to POWER. According to GCCs Internals manual [7], which we will refer to as the sole source of information in this regard, the back-end of GCC has the following structure:

Each architecture has a directory with its respective name gcc/config/target/, i.d. gcc/config/rs6000/, that contains a minimum amount of files. These are the machine description target.md which is an overview of machine instructions with additional information to each instruction and the header files target.h and target-protos.h and source file target.c that handle the target description through macros and functions. Every back-end needs these files in the GCC source and the final back-end is build from these files through the macros and functions just mentioned. To notice a back-end in the first place the back-ends directory gcc/config/target/ — must be added to the file gcc/config/config.gcc which also includes a list of all files in the aforementioned directory. Most back-ends include additional files which makes a back-ends complex structure clearer but these are not mandatory and we will address these later.

Instead we address one of the most important functions which unfortunately is also one of the least documented though most complicated ones. The function/process is called "reload" and is used as part of the register allocation process. [5] Specifically reload is meant to do register spilling. Over the lifetime of GCC until 4.9.2 it became more and more complex and basically does everything associated with register allocation. This involves moving the contents of different registers and memory around, and locating the right registers in the first place. Over the years it thus became one of the main sources of errors when constructing a back-end and was meant to be replaced several times. As of now reload is being replaced by LRA (local register allocator) but GCC 4.9.2 is not impacted by this and thus we will use reload.

To address possible errors in reload later on we now get to know one form of IR in GCC that is Register Transfer Language (RTL).

#### Insn Definition and Register Transfer Language

Register Transfer Language (RTL), which is not to be mixed up with Register Transfer Level, is a form of IR the back-end uses to generate machine code. Usually GCC uses the IR GIMPLE which looks like stripped down C code with 3 argument expressions, temporary variables and goto control structures. The back-end transforms this into a less readable IR that inherits GIMPLEs structure but brings it to a machine instruction level. It is inspired by Lisp and for this thesis mainly used as template when defining insns. An insn (short for instruction) has several properties like a name, an RTL template, a condition template, an output template and attributes. [7, ch. 16.2] It is used for combining RTL IR with actual machine instructions.

Normal RTL can be split into two phases which are non-strict RTL and strict RTL.

Listing 2.6: Definition of Unspecific add Insn

```
1
   (define_insn "add<mode>3"
     [(set (match_operand:VI2 0 "register_operand" "=v")
3
           (plus:VI2 (match_operand:VI2 1 "register_operand" "v")
                      (match_operand:VI2 2 "register_operand" "v")))]
4
5
     "<VI_unit>"
6
     "vaddu < VI_char > m %0, %1, %2"
     [(set_attr "type" "vecsimple")])
                       Listing 2.7: Definition of Specific add Insn
   (define_insn "*altivec_addv4sf3"
1
2
     [(set (match_operand:V4SF 0 "register_operand" "=v")
3
           (plus: V4SF (match_operand: V4SF 1 "register_operand" "v")
4
                       (match_operand: V4SF 2 "register_operand" "v")))]
5
     "VECTOR_UNIT_ALTIVEC_P (V4SFmode)"
6
     "vaddfp %0,%1,%2"
     [(set_attr "type" "vecfloat")])
7
```

Non-strict occurs only before reload and is very deliberate in specifying its operands. Operands usually are virtual registers that have a unique number. Strict RTL has passed reload and no longer contains virtual registers but only references existing hard registers or memory. Though this thesis will only feature RTL templates in insn definitions such as listings 2.6 and 2.7.

define\_insn defines an RTL equivalent to a machine instruction, which we called insn. The name of the first insn in listing 2.6 is add<mode>3 (3 for three operands) where <mode> is to be replaced by a set of values that describe modes. [7, ch. 16.9]

A mode is the form of an operand, e.g. si for single integer, qi for quarter integer (quarter the bits of a single integer), sf for single float or v16qi for a vector of 16 elements which are quarter integers each. [7, ch. 13.6] There are many more modes that follow the same scheme. In this case the mode is not defined explicitly but uses an iterator that creates a define\_insn for every valid mode that is specified. [7, ch. 16.23] The second define\_insn shows this with a specific mode.

Next follows the RTL template which is in square brackets. All RTL templates need a side effect expression as a base which describes what happens to the operands that follow. In our case set means that the value which is specified by the second expression is stored into the place specified by the first expression. [7, ch. 13.15] The first expression that follows is a specified operand. match\_operand tells the compiler that what follows is a new operand. VI2 belongs to the mode iterator we saw earlier and is to be substituted by the equivalent mode to <mode> in caps, which can be seen in listing 2.7. All modes VI2 are to be substituted by the same real mode. After the mode comes the index of an operand which starts at 0 for every define\_insn. The following string describes a

predicate which tells the compiler more about the operand and which constraints it must fulfill. Operands typically end in <code>\_operand</code> and a single predicate is meant to group several different operand types. In this case any register would be a valid operand. [7, ch. 16.7] The next string specifies the operands further and is meant to fine tune the predicate. It is called a constraint and matches the description in section 2.3.2. = again means that the register must be writable and <code>v</code> stands for an AltiVec vector register.[7, ch. 16.8] This pattern is repeated for every operand and only changes slightly. Though the second expression of the <code>set</code> side effect has an additional pair of parentheses because of the <code>plus</code> statement. This is an arithmetic expression and tells the compiler that the following operands are part of an operation that results in a new value. It is also followed by a mode that specifies the mode of the result.[7, ch. 13.9]

The RTL template is matched by the compiler against the RTL it generated from GIMPLE and if the template matches the RTL is substituted by the output template that follows.

After the RTL template is finished, the condition specifies if the insn may be used. It is a C expression and must render true in order to allow the matching RTL pattern to be applied. In this case the condition is also depending on the mode iterator which substitutes <VI\_unit > for equivalent code to that of the next define\_insn with a matching mode. [7, ch. 16.2]

The output template usually is similar to the assembler template in inline assembly. The string contains the mnemonic of a machine instruction and the operands which are numbered according to the indexes of the RTL template. Again this is depending on the mode iterator and <VI\_char> will be substituted by a character that belongs to a machine mode. [7, ch. 16.2]

At last the insn is completed by its attributes which hold further information about the insn that is used by the compiler internally like effects of an insn on certain registers and similar properties. We are less interested in this, as attributes are optional and we do not add attributes to the back-end. [7, ch. 16.19]

 $PPC \ must \ handle \ syncing \ in \ compiler \ when \ I/O \ is \ added \ explain \ stack \ and \ frame \ pointer \ PPU \ instruction \ set$ 

## 3. Extending the GCC Back-End

Since we now are familiar with the basics of processors, the PPU, compilers and GCC we can put this knowledge to use and start extending the GCC back-end. There is a number of files we will systematically edit and keep referencing to as they are important parts of the rs6000 back-end and were changed in the process of extending the back-end.

rs6000.md is the machine description of the back-end in general and contains insn definitions for all scalar functions

rs6000.h is a header file which contains macros and declarations for registers

rs6000.c is the source file which implements the back-end's functions

rs6000.opt lists the options and flags for the target

rs6000-builtins.def contains the definitions of intrinsics

rs6000-cpus.def lists sub-targets that belong to the rs6000 family

rs6000-c.c links built-ins and overloaded built-ins

rs6000-opts.h contains a set of enumerations that represent option values for the backend

rs6000-protos.h makes functions in rs6000.c globally available

rs6000-tables.opt lists values to a CPU enumeration

driver-rs6000.c a collection of driver details for different targets

ppc-asm.h sets macros for the use of asm

s2pp.md is a new machine description of s2pp and contains insn definitions

s2pp.h is the header file that defines aliases for built-ins

constraints.md contains definitions of constraints

predicates.md contains definitions of predicates

vector.md defines general vector insns

sysv4.h initializes a variety of option flags and sets default values

t-fprules sets soft-float as default for certain targets

It is recommended to have chapter 5 of the nux manual [3, ch. 5] at hand, as it contains an overview of existing s2pp vector instructions.

During the course of extending the GCC back-end a few things became clear:

Due to the limited documentation of the back-end itself, one must rely on comments in code and the GCC internals manual [7] As a full implementation for a vector extension already exists, the AltiVec extension should be used as a guideline for a new extension. Still, it should be avoided to change exiting code as much as possible. Code is often referred to from different places in the back-end and modifying existing code can therefore easily lead to compiler errors. Especially since the back-end is not extended completely right away but rather step by step. This applies particularly to functions that are implemented for AltiVec only. It is recommended to rather duplicate functions and distinguish them before they are called, than doing so inside a function call. This will make it easier to find bugs, as usually the function that generates an error is indicated in the error message. Also there do exist enough differences between these two vector extensions, that combining functions would not save work in the end.

Therefore we will occasionally point out when functions or other code can be inherited from AltiVec and which modifications are needed.

## 3.1. Adding the s2pp Option Flag and nux Target

Extending the rs6000 back-end starts by adding the nux processor to the list of targets and also want to include mandatory flags with this. Ideally the user only has to add the option flag -mcpu=nux when compiling in order to produce machine code for the nux. The flags which have to be set when using the nux are:

- -msdata=none disables the use of a "small data section" which is like a data section but has a register constantly referring to it and thus has faster access than the normal data section. Globals, statics and small variables that are often used are preferably stored there. It is turned off because the base pointer is not initialized by the linker and the effect of a small data section would likely be small for the PPU [3, 9, 1].
- -mstrict-align aligns all variables in memory which means that a variable always starts at a memory address which is a multiple of its size. E.g. a vector has always an address that is dividable by 16 bytes or 128 bits. Memory management is far easier for aligned variables.
- -msoft-float tells the compiler that there is no FPU and all floating point operations have to simulated by software.
- -mno-relocatable states that the program code has a fixed memory address that may not be altered.

But first there should be an option flag that activates nux' VE like -maltivec does for the AltiVec VE. We chose the name -ms2pp for this new option flag and will define an option mask along with it. In rs6000.opt and we simply need to add:

```
1 ms2pp
2 Target Report Mask(S2PP) Var(rs6000_isa_flags)
3 Use s2pp instructions
```

This adds ms2pp to the list of option flags and the next lines defines a macro, that is associated with it. Target means that the option is target specific, therefore only certain architectures support the option flag. Report means that the option is to be printed when -fverbose-asm is is set. Mask(S2PP) initializes a bitmask that is available through OPTION\_MASK\_S2PP. That macro is attached to rs6000\_isa\_flags, which specified by Var. It simultaneously specifies a macro TARGET\_S2PP that is set to 1. [7, ch. 8]

When this is done we need to specify

```
1 #define MASK_S2PP OPTION_MASK_S2PP
```

in rs6000.h as macros with MASK\_ are a standard from earlier versions of GCC.

Although this option flag shall later enable s2pp support, we need the aforementioned flags as well to compiler nux programs. For this reason we add a processor type which combines those flags. There exist several lists that contain available targets and we need to add nux to these. First we create the inline assembly (see section 2.3.2) flag which tells the assembler which system architecture is used. As nux is based on POWER7 we copy the flag -mpower7 in driver-rs6000.def:

Listing 3.1: rs6000.h

```
1
       #define ASM_CPU_SPEC \
2
3
           %{mcpu=power7: %(asm_cpu_power7)} \
4
           %{mcpu=nux: %(asm_cpu_power7)} \
5
6
                             Listing 3.2: driver-rs6000.c
1
       static const struct asm_name asm_names[] = {
2
3
           { "power7",
                           "%(asm_cpu_power7)" },
4
5
           { "nux",
                      "%(asm_cpu_power7)" },
6
```

This will set the assembler -mpower7 when using -mcpu=nux.

The nux target should also be recognized by preceding phases of the compiler and set option flags accordingly. These options flags can be set in rs6000-cpus.def.

This uses the macro RS6000\_CPU (NAME, CPU, FLAGS) and adds nux to the processor\_target\_table[]. Since we saw earlier that option flags usually set masks, we set the respective masks directly. The masks we chose will tell the compiler that the processor is a POWER7 architecture and uses soft-float, strict-align and no-relocatable(negated relocatable) as well as the new s2pp mask.

Unfortunately we could not set the -msdata=none flag before since the -msdata flag is initialized differently. Also since it is not simply set "on" or "off" but accepts several values, it is handled in sysv4.h. rs6000\_sdata will be set according to the string that follows -msdata=.

```
1
   #define SUBTARGET_OVERRIDE_OPTIONS
2
3
    if (rs6000 sdata name)
4
5
           if (!strcmp (rs6000_sdata_name,
                                              "none"))
 6
         rs6000_sdata = SDATA_NONE;
 7
8
9
         error ("bad value for -msdata=%s", rs6000_sdata_name);
10
         }
11
     else if (OPTION_MASK_S2PP \
              && OPTION_MASK_SOFT_FLOAT \
12
13
              && OPTION_MASK_STRICT_ALIGN \
              && !OPTION_MASK_RELOCATABLE)
14
15
         {
16
         rs6000_sdata = SDATA_NONE;
17
         rs6000_sdata_name = "none";
18
19
   else if (DEFAULT_ABI == ABI_V4)
20
```

It is not possible to detect in this file, if the nux flag is set. We therefore need a little work-around that helps setting the value of rs6000\_sdata. If -msdata is not set, i.e. only -mcpu=nux is set, the compiler will use if-clauses that determine which value is assigned to rs6000\_sdata. We add a case that checks for all flags, that are set by -mcpu=nux and set rs6000\_sdata to SDATA\_NONE if this applies. Hence the target options will also set rs6000\_sdata as we wish which is to SDATA\_NONE.

There exists a case for which this condition applies even when nux is not set as target but all flags are set by hand. If one chooses an explicit value for -msdata this case does not apply though and the value of -msdata is set accordingly.

This is somewhat not the ideal but a trade-off with as few side effects as possible.

Already this would allow for the use of -mcpu=nux as target and -ms2pp as option flag. But since the flags we used are basically mandatory to the s2pp extension we also want to check for these flags before starting compilation. First though for each flag are needed which the back-end can identify. This is done in rs6000-c.c where global macros can be defined:

```
9 if ((flags & OPTION_MASK_STRICT_ALIGN) != 0)
10 rs6000_define_or_undefine_macro (define_p, "_STRICT_ALIGN");
11 if ((flags & OPTION_MASK_RELOCATABLE) != 0)
12 rs6000_define_or_undefine_macro (define_p, "_RELOCATABLE");
13 if (rs6000_sdata != SDATA_NONE)
14 rs6000_define_or_undefine_macro (define_p, "_SDATA");
15 ...
```

If flags and the respective option mask are set, rs6000\_define\_or\_undefine\_macro will define a macro what is specified by the second argument. Whether a macro is defined or undefined depends on the boolean define\_p, which is set by the compiler.

We can use these new macros to check if flags are set. This needs a new file, that will also be needed later on as a header file for s2pp. s2pp,h must be indexed in gcc/config.gcc under extra\_headers.

```
powerpc*-*-*)
3
       cpu_type=rs6000
4
       extra_headers="ppc-asm.h altivec.h spe.h ppu_intrinsics.h paired.h
           spu2vmx.h vec_types.h si2vmx.h htmintrin.h htmxlintrin.h s2pp.h"
5
       need_64bit_hwint=yes
       case x$with_cpu in
7
       xpowerpc64|xdefault64|x6[23]0|x970|xG5|xpower[345678]|xpower6x|xrs64a
           |xcell|xa2|xe500mc64|xe5500|Xe6500
8
       cpu_is_64bit=yes
9
       ;;
10
       esac
11
       extra_options="${extra_options} g.opt fused-madd.opt rs6000/rs6000-
           tables.opt"
12
       ;;
13
```

This is done for GCC to invoke the header file as it is not referenced elsewhere. s2pp.h can now be used to check the compiler flags.

```
1 /* _S2PP_H */
2 #ifndef _S2PP_H
3 #define _S2PP_H 1
5 #if !defined(__S2PP__)
6 #error Use the "-ms2pp" flag to enable s2pp support
7 #endif
8 #if !defined(_SOFT_FLOAT)
9 #error Use the "-msoft-float" flag to enable s2pp support
11 #if !defined(_STRICT_ALIGN)
12 #error Use the "-mstrict-align" flag to enable s2pp support
13 #endif
14 #if defined(_RELOCATABLE)
15 #error Use the "-mno-relocatable" flag to enable s2pp support
16 #endif
17 #if defined(_SDATA)
18 #error Use the "-msdata=none" flag to enable s2pp support
19 #endif
```

20 ...

one example for repetitive use?

If for example \_\_S2PP\_\_ is not defined but s2pp.h included, the compiler will emit an error that tells the user to set the target flag. Since hard floats are not supported on nux regardless of s2pp.h we add nux to the list of soft-float CPUs in t-fprules.

```
1 SOFT_FLOAT_CPUS = e300c2 401 403 405 440 464 476 ec603e 801 821 823 860 nux
```

## 3.2. Creating Macros

Since the preliminary requirements are now met, we start adding fundamental macros a vector attribute for specifying vectors in program code.

Attributes are used to specify various variables and can be used for example to control alignment [7, ch. 16.19].

First a new vector unit is needed. It will be called VECTOR\_S2PP and added to the enumeration rs6000\_vector in rs6000-opts.h.

```
enum rs6000_vector {
2
         VECTOR_NONE,
                                /* Type is not a vector or not supported */
3
         VECTOR_ALTIVEC,
                                /* Use altivec for vector processing */
4
         VECTOR_VSX,
                                /* Use VSX for vector processing */
                                /* Use ISA 2.07 VSX for vector processing */
5
         VECTOR_P8_VECTOR,
6
         VECTOR_PAIRED,
                                /* Use paired floating point for vectors */
7
         VECTOR_SPE,
                                /* Use SPE for vector processing */
8
         VECTOR_S2PP,
                                /* Use s2pp for vector processing */ //s2pp-
             mark
9
         VECTOR_OTHER
                                /* Some other vector unit */
10
   };
```

To put this to use, we will create macros in rs6000.h which compare vector units to the newly created VECTOR\_S2PP.

VECTOR\_UNIT\_S2PP\_P(MODE) and VECTOR\_MEM\_S2PP\_P(MODE) are identical as we will create identical entries for rs6000\_vector\_unit[] and rs6000\_vector\_mem[]. This is a relict from AltiVec implementation as vector units in memory may differ in certain cases.

mention VSX?

We will also add checking for specific vector modes which are supported by s2pp. The hardware only supports two types of vectors which are vectors with byte elements (V16QI) and vectors with halfword elements (V8HI).

Next we need to find conditions which easily apply to TARGET\_S2PP as they already do for TARGET\_ALTIVEC. There exist only five such cases, rs6000\_builtin\_vectorization\_cost, rs6000\_special\_adjust\_field\_align\_p and expand\_block\_clear handle alignment of vectors. Alignment refers to the position of data blocks in memory; 16-bit alignment means that variables may only start at addresses that represent multiples of 16 bits. AltiVec vectors and s2pp are aligned the same way as we want to reduce misalignment of 128-bit vectors to a minimum.

rs6000\_common\_init\_builtins initializes common built-ins (which we will later refer to) and is needed by all extensions that use built-ins. In these cases we can simply expand the condition for TARGET\_S2PP.

Other conditions that will later be expanded for TARGET\_S2PP need further modification and thus are not mentioned here.

We must do the same for VECTOR\_UNIT\_S2PP\_P and other macros that have AltiVec counterparts: In reg\_offset\_addressing\_ok\_p cases for V16QImode and V8HImode return false if VECTOR\_MEM\_S2PP\_P or the AltiVec version apply. In rs6000\_legitimize\_reload\_address and rs6000\_legitimate\_address\_p offset addresses are handled they same way they are for AltiVec. In rs6000\_secondary\_reload indirect addressing is enforced. In print\_operand operand modifier y is validated for s2pp as well. rs6000\_vector\_mode\_supported\_p returns true is a mode is supported by s2pp.

All of these cases handle addressing of vectors in memory which is equivalent in AltiVec and s2pp. It is therefore quite simple to support this for s2pp.

Since we established vector modes and vector units by now, we need to connect these in rs6000\_init\_hard\_regno\_mode\_ok. In case TARGET\_S2PP is set VECTOR\_S2PP is assigned to modes V16QImode and V8HImode.

```
1
2
     if (TARGET_S2PP)
3
         {
4
          rs6000_vector_unit[V8HImode] = VECTOR_S2PP;
          rs6000_vector_mem[V8HImode] = VECTOR_S2PP;
5
          rs6000_vector_align[V8HImode] = align32;
6
          rs6000_vector_unit[V16QImode] = VECTOR_S2PP;
7
          rs6000_vector_mem[V16QImode] = VECTOR_S2PP;
8
9
          rs6000_vector_align[V16QImode] = align32;
10
         }
11
```

Also preferred modes when vectorizing a non-vector modes in rs6000\_preferred\_simd\_mode

```
1 ...
2 if (TARGET_S2PP)
3 switch (mode)
```

By now we can define a vector attribute as we mentioned before. GCC already supports a vector attribute which is also used by AltiVec. Thus we can add s2pp to the rs6000\_attribute\_table and rs6000\_opt\_masks[] array with the same values as for AltiVec but changing the keyword.

```
static const struct attribute_spec rs6000_attribute_table[] =
1
2
3
        /* \ \{ \ name \ , \ min\_len \ , \ max\_len \ , \ decl\_req \ , \ type\_req \ , \ fn\_type\_req \ , \ handler
             affects_type_identity } */
4
5
        { "altivec", 1, 1, false, true,
            rs6000_handle_altivec_attribute,
6
7
        { "s2pp",
                     1, 1, false, true, false, rs6000_handle_s2pp_attribute,
8
          false },
9
10
   struct rs6000_opt_mask {
                              /* option name */
11
      const char *name;
12
      HOST_WIDE_INT mask;
                                  /* mask to set */
13
      bool invert;
                              /* invert sense of mask */
14
     bool valid_target;
                                  /* option is a target option */
15
   };
16
17
   static struct rs6000_opt_mask const rs6000_opt_masks[] =
18
      { "altivec",
                              OPTION_MASK_ALTIVEC,
19
                                                             false, true },
20
21
      { "s2pp",
                         OPTION_MASK_S2PP,
                                                    false, true },
22
```

We also add the function rs6000\_handle\_s2pp\_attribute which is copied form AltiVec but stripped off unsupported vector modes.

This would make these attributes already usable but we also define built-ins in rs6000 -c.c that shorten the attribute from \_\_vector=\_\_attribute\_\_((s2pp(vector\_\_))) to \_\_vector:

```
1 void
2 rs6000_cpu_cpp_builtins (cpp_reader *pfile)
3 {
4    ...
5    if (TARGET_S2PP){
6        builtin_define ("__vector=_attribute__((s2pp(vector__)))");
7        if (!flag_iso){
8            builtin_define ("vector=vector");
9            init_vector_keywords ();
```

Additionally we indicate to the front-end that special attributes are handled by the back-end.

```
1 static bool
2 rs6000_attribute_takes_identifier_p (const_tree attr_id)
3 {
4    if (TARGET_S2PP)
5      return is_attribute_p ("s2pp", attr_id);
6    else
7      return is_attribute_p ("altivec", attr_id);
8 }
```

### 3.3. Registers

This section will describe, how s2pp registers are added to the back-end. Also, we will add constraints and predicates (see section 2.3.4) for these registers.

There are three types of registers in the s2pp VE:

32 vector registers these are normal registers that hold vector values

1 accumulator which is used for chaining arithmetic instructions and cannot be accessed directly

1 conditional register which holds conditional bits and also cannot be accessed directly

During extension of the GCC back-end, it became apparent that a reserved vector register, that is all zeros the entire time, will be necessary for some implementations of the back-end. This became necessary since the nux instruction set does not include logical vector instructions. Normally the instructions XOR and OR are used by the back-end to implement simple register features. OR is used for moving around the content of a register as ORing the same first register to a second register will simply copy the contents of the first register. On the other side, does XORing the same register result in writing all zeros to the return register.2.3.2

Since these instructions are not available, "nulling" a register becomes a problem. Therefore we reserve the first register and splat zeros into it. Moving this register, will have the same effect as XORing a register. As OR is also not available, we use an alternative instruction, which is fxvselect. fxvselect selects either elements of the second or the third operand depending on the condition register and its forth operand. [3, ch. 5] Having identical second and third operands thus will simply generate the same vector as return value. By setting the forth operand 0, fxvselect will always choose elements from the second operand. This gives us a simple work-around as fxvselect also takes only one

clock cycle for execution. An alternative idea would be subtracting the same register from one another with fxvsubm, which also nulls the return operand. This would take more clock cycles though and is unfavorable, as we do not know how often registers need to be nulled. Ultimately it is a trade-off between having one less register at hand and wasting clock cycles continuously. The latter could get easily more of a problem than the first one and therefore we will implement the first alternative.

When talking about reserved registers must also think about saved, call-used and fixed registers:

fixed registers serve only one purpose and are not available for allocation at all!

**call-used registers** are used for returning results of functions. They are not available to general register allocation but are used when calling functions.

saved registers are available globally and may hold values throughout function calls.

Usually about half of all registers is declared call-used and the other half saved. We will stick to this convention but in the future it might be interesting to optimize this.

Register indexes are declared in rs6000.md:

```
1
    (define_constants
2
      [(FIRST_GPR_REGNO
                               0)
3
4
       (LAST_GPR_REGNO
                               31)
5
       (FIRST_FPR_REGNO
                               32)
6
       (LAST_FPR_REGNO
                               63)
       (FIRST_S2PP_REGNO
7
                               33)
       (LAST_S2PP_REGNO
8
                               63)
9
       (S2PP_COND_REGNO
                               32)
10
       (S2PP_ACC_REGNO
                               64)
11
       (LR_REGNO
                               65)
12
```

We reuse the reserved vector register's index 32 (this register is null) for the conditional register and use the free index for the accumulator. Registers which may be available on the same processor must not share and index! As the GPRs need the first 32 registers numbers (0-31) and there is never an FPU on nux, we want to use the 32 registers normally reserved to FPRs.

We must define which purpose the registers will serve in the back-end. This is declared by macros that are assigned a register number like in rs6000.md.

```
10
11
   #define FUNCTION_VALUE_REGNO_P(N)
12
     ((N) == GP_ARG_RETURN
13
        | | ((N) >= FP\_ARG\_RETURN \&\& (N) <= FP\_ARG\_MAX\_RETURN
14
           && TARGET_HARD_FLOAT && TARGET_FPRS)
15
        16
17
           && TARGET_ALTIVEC && TARGET_ALTIVEC_ABI)
18
        || ((N) >= S2PP_ARG_RETURN && (N) <= S2PP_ARG_MAX_RETURN
19
           && TARGET_S2PP)
20
21
22
   #define FUNCTION_ARG_REGNO_P(N)
     ((unsigned) (N) - GP_ARG_MIN_REG < GP_ARG_NUM_REG
23
        || ((unsigned) (N) - ALTIVEC_ARG_MIN_REG < ALTIVEC_ARG_NUM_REG
24
            && TARGET_ALTIVEC && TARGET_ALTIVEC_ABI)
25
        || ((unsigned) (N) - FP_ARG_MIN_REG < FP_ARG_NUM_REG
26
            && TARGET_HARD_FLOAT && TARGET_FPRS)
27
28
        || ((unsigned) (N) - S2PP_ARG_MIN_REG < S2PP_ARG_NUM_REG
29
            && TARGET_S2PP)
        )
30
31
```

Of course we again need to go through all files and find usage of those macros. The only use the macros though is in the prologue and the epilogue, which will be discussed in the next section.

After we declared all register indexes, we must also specify them further. Each register type (or register class) needs and entry to the enumeration reg\_class and a definition of identical register names in REG\_CLASS\_NAMES.

```
enum reg_class
                                               #define REG_CLASS_NAMES
1
                                           13
 2
   {
                                           14
                                                  {
3
                                           15
4
      GENERAL_REGS,
                                           16
                                                  "GENERAL_REGS",
 5
      S2PP_C_REG,
                                           17
                                                  "S2PP_C_REG",
6
      S2PP_REGS,
                                           18
                                                  "S2PP_REGS",
7
      FLOAT_REGS,
                                           19
                                                  "FLOAT_REGS"
                                           20
                                                  "S2PP_ACC_REG",
8
      S2PP_ACC_REG,
9
                                           21
                                                  "ALTIVEC_REGS",
      ALTIVEC_REGS,
10
                                           22
      . . .
                                                  . . .
11
      ALL_REGS }
                                           23
                                                  "ALL_REGS"}
12
   . . .
```

in columns?

Then we need to specify the contents of our new register classes in REG\_CLASS\_CONTENTS.

```
1  /* GENERAL_REGS. */
2  { Oxffffffff, Ox00000000, Ox00000008, Ox00020000, Ox00000000 }, \
3  /* S2PP_C_REG. */
4  { Ox00000000, Ox00000001, Ox00000000, Ox00000000 }, \
5  /* S2PP_REGS. */
```

Each hexnumber in these arrays can be viewed as a bit mask where the least significant bit is the first register, the next higher order bit the second register and so on. As a number is 32-bit, it masks 32 registers. Subsequent numbers start where the previous one ended, therefore are registers 32 through 63 (32 is the 33rd register) masked by the second number.

Therefore does <code>0xfffffffe</code> mask all registers except for the 32nd which is masked by <code>0x00000001</code>.

One can see that FPRs are masked completely as FLOAT\_REGS between definition of s2pp registers. Subsequent entries must not me subsets of previous masks but may extend these. Also should higher order bits follow lower order bits. Since we also added a register index which was not masked before, we also have to change some subsequent masks accordingly.

There exist macros for register classes as well, which we also need to implement. Although we only need this for general s2pp registers.

As all registers are specified we now have to decide on short names, that are used in assembly. Normally these are the same as the constraints that refer to these registers and an integer.

The constraints are:

```
kv for S2PP_REGS, the vector registers
kc for S2PP_C_REG, the conditional register
ka for S2PP_ACC_REG, the accumulator
```

k was chosen as the first character of s2pp constraints because there are very few letters left which are not used as constraints already. k is the first of those and can be somewhat associated with the nux ("nuks"). The second character is the respective first letter of a register type.

Register names are defined in rs6000.h.

```
1 #define ADDITIONAL_REGISTER_NAMES \backslash 2 { 3 ...
```

```
4 {"kc", 32}, {"kv0", 33}, {"kv1", 34}, {"kv2", 35}, \
5 ...
6 {"kv27", 60}, {"kv28", 61}, {"kv29", 62}, {"kv30", 63}, \
7 {"kc", 64}, {"ka", 65}
8 }
```

The strings are names for registers and the integers are their indexes.

After we defined these names we can also define the according constraints in constraints.md

The first string is the register constraint's name and the second string will be assigned a register class later in rs6000.c. The last string is only for documentary purposes.[7, ch. 16.8]

Before we can assign register classes though, we must modify an enumeration in  ${\tt rs6000}$  .

The last step towards completing the register implementation is assigning register classes and register types to indexes in rs6000\_init\_hard\_regno\_mode\_ok.

Register types are also defined in rs6000.c and help classifying register classes. The s2pp registers we defined in this section qualify as standard and vector register type and thus are added to these macros.

```
11 #define IS_STD_REG_TYPE(RTYPE) IN_RANGE(RTYPE, GPR_REG_TYPE,
       S2PP_REG_TYPE)
12
  #define IS_FP_VECT_REG_TYPE(RTYPE) IN_RANGE(RTYPE, VSX_REG_TYPE,
13
       S2PP_REG_TYPE)
14
15
   static void
16
   rs6000_init_hard_regno_mode_ok (bool global_init_p)
17
18
19
     for (r = 32; r < 64; ++r)
20
       rs6000_regno_regclass[r] = FLOAT_REGS;
21
     if (TARGET_S2PP){
22
23
       for (r = 32+1; r < 64; ++r)
         rs6000_regno_regclass[r] = S2PP_REGS;
24
25
       rs6000_regno_regclass[32] = NO_REGS;
26
27
28
     reg_class_to_reg_type[(int)S2PP_REGS] = S2PP_REG_TYPE;
29
30
     if (TARGET_S2PP)
31
       {
32
       reg_class_to_reg_type[(int)FLOAT_REGS] = NO_REG_TYPE; //S2PP_REG_TYPE
       reg_class_to_reg_type[(int)S2PP_REGS] = S2PP_REG_TYPE; //
33
           S2PP\_REG\_TYPE;
34
       rs6000_regno_regclass[S2PP_COND_REGNO] = S2PP_C_REG;
35
       rs6000_regno_regclass[S2PP_ACC_REGNO] = S2PP_ACC_REG;
36
       reg_class_to_reg_type[(int)S2PP_C_REG] = S2PP_C_REG_TYPE; //
           S2PP_REG_TYPE;
37
       reg_class_to_reg_type[(int)S2PP_ACC_REG] = S2PP_ACC_REG_TYPE; //
           S2PP\_REG\_TYPE;
38
39
     if (TARGET_S2PP)
40
41
       rs6000_vector_unit[V8HImode] = VECTOR_S2PP;
42
       rs6000_vector_mem[V8HImode] = VECTOR_S2PP;
43
       rs6000_vector_align[V8HImode] = align32;
44
       rs6000_vector_unit[V16QImode] = VECTOR_S2PP;
45
       rs6000_vector_mem[V16QImode] = VECTOR_S2PP;
46
47
       rs6000_vector_align[V16QImode] = align32;
48
       }
49
     if (TARGET_S2PP){
50
       rs6000_constraints[RS6000_CONSTRAINT_kv] = S2PP_REGS;
51
52
       rs6000_constraints[RS6000_CONSTRAINT_kc] = S2PP_C_REG;
53
       rs6000_constraints[RS6000_CONSTRAINT_ka] = S2PP_ACC_REG;
54
     }
55
     . . .
56
   }
```

#### 3. Extending the GCC Back-End

Every index in rs6000\_regno\_regclass[] is given a register class which corresponds to a register with the same index and also each register class is assigned a register type in reg\_class\_to\_reg\_type[].

What is left to do, is fixing the registers:

```
static void
2 rs6000_conditional_register_usage (void)
3 {
4
     if ((TARGET_SOFT_FLOAT || !TARGET_FPRS) && !TARGET_S2PP)
5
6
       for (i = 32; i < 64; i++)
7
         fixed_regs[i] = call_used_regs[i]
8
                        = call_really_used_regs[i] = 1;
9
10
     if (TARGET_S2PP){
       fixed_regs[32] = call_used_regs[32] = call_really_used_regs[32] = 1;
11
12
       fixed_regs[64] = call_used_regs[64] = call_really_used_regs[64] = 1;
13
     }
14
15 }
```

We need to prevent the back-end form fixing the FPRs even though TARGET\_SOFT\_FLOAT is set and fix the registers 32 and 64 (kc and ka).

We can also add debugging information for s2pp registers in rs6000\_debug\_reg\_global. Although this is not necessary, it can be helpful at times, when using the -mdebug flag.

As all measures of adding the registers to rs6000.c are fulfilled one must add those registers to the list of possible asm operands in ppx-asm.c.

```
1 #ifdef __S2PP__
2 #define k00 0
3 #define k0 1
4 ...
5 #define k29 30
6 #define k30 31
7 #endif
```

This tells the compiler to substitute k0 for 1 as only integers without constraints are valid machine operands.

All that is missing now, are s2pp specific predicates in predicates.md. We can copy these from respective AltiVec predicates and change both the vector specific macros and the predicates' names.

```
1 ...
2 (define_predicate "s2pp_register_operand"
3    (match_operand 0 "register_operand")
4 {
5    if (GET_CODE (op) == SUBREG)
6     op = SUBREG_REG (op);
7
8    if (!REG_P (op))
9    return 0;
10
```

```
11
      if (REGNO (op) > LAST_VIRTUAL_REGISTER)
12
13
     return S2PP_REGNO_P (REGNO (op));
14
   })
15
16
   (define_predicate "easy_vector_constant"
17
      (match_code "const_vector")
18
19
   {
20
21
      if (VECTOR_MEM_S2PP_P (mode))
22
23
      if (zero_constant (op, mode))
24
        return true;
25
26
      return easy_s2pp_constant (op, mode);
27
        }
28
29
   })
30
31
   (define_predicate "indexed_or_indirect_operand"
      (match_code "mem")
32
33
34
35
      if (VECTOR_MEM_S2PP_P (mode)
36
          && GET_CODE (op) == AND
37
          && GET_CODE (XEXP (op, 1)) == CONST_INT
38
          && INTVAL (XEXP (op, 1)) == -16)
39
        op = XEXP (op, 0);
40
41
      return indexed_or_indirect_address (op, mode);
42
   })
43
44
   (define_predicate "s2pp_indexed_or_indirect_operand"
45
      (match_code "mem")
46
47
      op = XEXP (op, 0);
      if (VECTOR_MEM_S2PP_P (mode)
48
          && GET_CODE (op) == AND
49
          && GET_CODE (XEXP (op, 1)) == CONST_INT
50
          && INTVAL (XEXP (op, 1)) == -16)
51
52
        return indexed_or_indirect_address (XEXP (op, 0), mode);
53
54
      return 0;
55
   })
56
```

If one wants to add more predicates, GCC offers a manuals entry [7, ch. 16.7].

The easy\_s2pp\_constant function, which is referred to in the listing above, checks if an operand is "splittable", ergo that all elements have the same value and the operand can be synthesized through a split instruction. To check this the operand is analyzed sequentially if either of the two available splat instructions can synthesize the same operand. This function is transferable from an AltiVec equivalent with the exception

that there is one less alternative for splatting a vector.

```
2
   easy_s2pp_constant (rtx op, enum machine_mode mode)
3
   { //cause of problem?
4
     unsigned step, copies;
5
6
     if (mode == VOIDmode)
7
        mode = GET_MODE (op);
      else if (mode != GET_MODE (op))
8
9
       return false;
10
     step = GET_MODE_NUNITS (mode) / 4;
11
12
        copies = 1;
13
14
      /* Try with a fxvsplath */
     if (step == 1)
15
        copies <<= 1;
16
17
      else
18
        step >>= 1;
19
20
     if (vspltis_constant (op, step, copies))
21
        return true;
22
23
      /* Try with a fxvsplatb */
24
      if (step == 1)
25
        copies <<= 1;
26
      else
27
       step >>= 1;
28
29
     if (vspltis_constant (op, step, copies))
30
       return true;
31
32
     return false;
33
   }
```

This is the only time, we will use an AltiVec function (vspltis\_constant) instead of defining a new function, as this function has not to be altered. A similar function gen\_easy\_s2pp\_constant can also be transferred as it is basically the same but generates RTL code that will create a constant vector operand from a different operand.

As all registers are now fully implemented, we have to take care of conflicts with FPRs. s2pp registers and FPRs share the same indexes and since they are not fixed could be identified as FPRs. For this reason we must scan the source files for uses of FP\_REGNO\_P (N) and add an exception with && !TARGET\_S2PP when it is necessary. This is especially the case when dealing with hard registers and having the compiler emit register moves.

#### 3.4. Reload

As hinted in section 2.3.4, reload is a deprecated process in GCC that mainly performs register allocation. Obviously we need to add special handling for vector registers

to reload because because register allocation is an important part of the compilation process. Thus we must add support for S2PP\_REGS.

As reload is capable of moving the contents of registers, it must be specified that s2pp registers are not compatible with GPRs or any other registers. It is also important to implement that memory instructions take two GPRs as registers.

```
static reg_class_t
2
   rs6000_secondary_reload (bool in_p,
3
                    rtx x,
4
                    reg_class_t rclass_i,
5
                     enum machine_mode mode,
6
                     secondary_reload_info *sri)
7
8
     /* Handle vector moves with reload helper functions.
9
     if (ret == ALL_REGS && icode != CODE_FOR_nothing)
10
11
          if (GET_CODE(x) == MEM)
12
            if (rclass == GENERAL_REGS || rclass == BASE_REGS)
13
14
              { . . .
                /* Loads to and stores from vector registers can only do reg+
15
                    reg
                addressing.
16
                              Altivec registers can also do (reg+reg) \mathcal{G}(-16).
                    Allow
17
                scalar modes loading up the traditional floating point
                    registers
18
                to use offset addresses.
19
                else if (rclass == VSX_REGS || rclass == ALTIVEC_REGS
                          || rclass == FLOAT_REGS || rclass == NO_REGS
20
21
                          || rclass == S2PP_REGS)
22
                  {...
23
                  }}}}
24
```

Because registers are quite different in their specifications and reload could possibly ask for any combination of source/destination register we restrict s2pp register moves to other s2pp registers or memory. This creates the need for checking the register class of an RTL expression and eventually correcting the register class.

```
static enum reg_class
2
   rs6000_preferred_reload_class (rtx x, enum reg_class rclass)
3
   {...
     if ((rclass == S2PP_REGS)
4
5
         && VECTOR_UNIT_S2PP_P (mode)
6
         && easy_vector_constant (x, mode)){
7
       return rclass;
8
     }
9
   }
10
   static enum reg_class
   rs6000_secondary_reload_class (enum reg_class rclass, enum machine_mode
13
                       rtx in)
  {...
14
```

As reload does not initially support the addressing mode which AltiVec and s2pp both use, indirect addresses for s2pp must be handled the same way as for AltiVec.

```
1
3 rs6000_secondary_reload_inner (rtx reg, rtx mem, rtx scratch, bool
       store_p)
4
5
     switch (rclass)
6
       \{\ldots
       case S2PP_REGS:
7
8
9
       }
10 }
     At last we also need to validate the mode which is used.
1
  static bool
2
   rs6000_cannot_change_mode_class (enum machine_mode from,
3
                     enum machine_mode to,
4
                     enum reg_class rclass)
5
   {
6
     if (TARGET_S2PP && rclass == S2PP_REGS
       && (S2PP_VECTOR_MODE (from) + S2PP_VECTOR_MODE (to)) == 1)
7
8
      return true;
Q
10 }
```

### 3.5. Built-ins, Insns and Machine Instructions

Basically the back-end is now capable of handling s2pp vector instructions. The only thing that is left to do, is specifying machine instructions that move registers or access memory. For this reason we add a machine description file s2pp.md to the back-end which will contain all available vector instructions.

We must index this new file in rs6000.md and t-rs6000.

```
1 ...
2 $(srcdir)/config/rs6000/s2pp.md
3 $
4 ...
1 ...
2 (include "s2pp.md")
3 ...
```

The most important insn is \*s2pp\_mov<mode>. It is generally used by emit\_move\_insn to allocate registers and memory.

```
(define_insn "*s2pp_mov<mode>"
2
     [(set (match_operand:FXVI 0 "nonimmediate_operand" "=Z,kv,kv,*Y,*r,*r,
         kv,kv")
      (match_operand:FXVI 1 "input_operand" "kv,Z,kv,r,Y,r,j,W"))]
3
     "VECTOR_MEM_S2PP_P (<MODE>mode)
4
5
      && (register_operand (operands[0], <MODE>mode)
6
      || register_operand (operands[1], <MODE>mode))"
7
8
      switch (which_alternative)
9
10
       case 0: return "fxvstax %1,%y0";
11
       case 1: return "fxvlax %0,%y1";
12
       case 2: return "fxvsel %0,%1,%1";
        case 3: return "#";
13
        case 4: return "#";
14
       case 5: return "#";
15
       case 6: return "fxvsel %0,0,0";
16
17
       case 7: return output_vec_const_move (operands);
18
       default: gcc_unreachable ();
19
20
21
     [(set_attr "type" "vecstore, vecload, vecsimple, store, load, *, vecsimple, *"
```

We explained the basics of insn definition earlier in section 2.3.4 thus we will only explain specific for this insn. The name is proceeded by an asterisk that renders the name not accessible directly because this insn shall only be referred to by the RTL sequence that follows. Names starting with an asterisk are in general equal to no name.

The RTL template is fairly simple and states that operand 0 is set by operand 1. Still, this insn applies for a number of cases which are specified by its constraints. The constraints of each operand build pairs. The first pair for example (z and kv) tells the compiler that memory, which is accessed by an indirect operand z, will be set by the contents of a vector register kv. Which machine instruction is used for each pair of constraints is stated in the output template by switch(which\_alternative). The template can also be written in C.

Each case is indexed according to the list of constraints so we take a look at case 0, which is the first pair. This alternative return a machine instruction for storing a vector in memory fxvstax. The second operand of this instruction also contains a character besides its index which is an operand modifier [7, ch. 6.45.2] that will cause the operand 0 to be split into an offset and an address in respective GPRs.

Other alternatives include instructions fxvlax, for loading a vector from memory, and fxvsel, for moving vector registers. case 6 moves the contents of vector register 0 (this register is all 0s) and thereby nulls that register (j is the respective constraint for a zero vector).

Returning # as output template is equivalent to stating that there is no machine instruction which can perform the RTL template. This causes the compiler to look for different RTL templates that have the same effect but also has a machine instruction.

This process is called **insn splitting** and can also be used for optimization. A devel-

oper may define which RTL templates are equivalent by using define\_split [7, 16.16]. As there exist non-AltiVec-specific splits for cases 3 through 5 in AltiVec, we do not need to define splits ourself.

Insn splitting is quite common for GCC back-ends because defining insns with unspecific constraints and then splitting them allows for easier generation of code. The back-end will then automatically search for code that fits the operands of the instruction. The same applies for \*s2pp\_mov which can not be referenced by name, but by an RTL template of mov in vector.md. Inorder to fulfill the condition, we add the S2PP\_VECTOR\_MODE\_P to the insn.

define\_expand is an **insn expansion** which is similar to insn splitting, but may combine several RTL templates and can not specify any machine instruction directly. Usually this is used to compose built-ins from an instruction sequence [7, ch. 16.15].

define\_insn\_and\_split is a combination of insn definition and insn splitting and is also described in the GCC manual [7, ch. 16.16].

Besides mov there is number of insn expansions in vector.md that must also apply to s2pp.

```
(define_expand "vector_load_<mode>"
2
     [(set (match_operand:VEC_M 0 "vfloat_operand" "")
3
            (match_operand:VEC_M 1 "memory_operand" ""))]
4
     "VECTOR_MEM_ALTIVEC_OR_VSX_P (<MODE>mode) || VECTOR_MEM_S2PP_P (<MODE>
         mode)"
5
6
7
   (define_expand "vector_store_<mode>"
     [(set (match_operand:VEC_M 0 "memory_operand" "")
8
           (match_operand:VEC_M 1 "vfloat_operand" ""))]
9
10
     "VECTOR_MEM_ALTIVEC_OR_VSX_P (<MODE>mode) || VECTOR_MEM_S2PP_P (<MODE>
         mode)"
     "")
11
12
13
   ;; Splits if a GPR register was chosen for the move
14
   (define_split
     [(set (match_operand: VEC_L 0 "nonimmediate_operand" "")
15
            (match_operand:VEC_L 1 "input_operand" ""))]
16
     "(VECTOR_MEM_ALTIVEC_OR_VSX_P (<MODE>mode) || VECTOR_MEM_S2PP_P (<MODE
17
         >mode))
18
      && reload_completed
19
      && gpr_or_gpr_p (operands[0], operands[1])
      && !direct_move_p (operands[0], operands[1])
21
      && !quad_load_store_p (operands[0], operands[1])"
22
     [(pc)]
23 {
     rs6000_split_multireg_move (operands[0], operands[1]);
24
```

```
25
     DONE;
26 })
27
28
29
  (define_expand "vector_s2pp_load_<mode>"
     [(set (match_operand:VEC_X 0 "vfloat_operand" "")
30
            (match_operand:VEC_X 1 "memory_operand" ""))]
31
32
      "VECTOR_MEM_S2PP_P (<MODE>mode)"
33
34
   {
35
     gcc_assert (VECTOR_MEM_S2PP_P (<MODE>mode));
36
37
38
   (define_expand "vector_s2pp_store_<mode>"
     [(set (match_operand:VEC_X 0 "memory_operand" "")
39
            (match_operand:VEC_X 1 "vfloat_operand" ""))]
40
      "VECTOR_MEM_S2PP_P (<MODE>mode)"
41
42
43
   {
     gcc_assert (VECTOR_MEM_S2PP_P (<MODE>mode));
44
  }")
45
46
47
   (define_insn_and_split "*vec_reload_and_plus_<mptrsize>"
48
      [(set (match_operand:P 0 "gpc_reg_operand" "=b")
49
            (and:P (plus:P (match_operand:P 1 "gpc_reg_operand" "r")
50
                            (match_operand:P 2 "reg_or_cint_operand" "rI"))
51
                   (const_int -16)))]
52
      "(TARGET_ALTIVEC || TARGET_VSX || TARGET_S2PP) && (reload_in_progress
         || reload_completed)"
53
54
      "&& reload_completed"
      [(set (match_dup 0)
55
56
            (plus:P (match_dup 1)
57
                    (match_dup 2)))
58
            (parallel [(set (match_dup 0)
59
                             (and:P (match_dup 0)
60
                                    (const_int -16)))
                        (clobber:CC (scratch:CC))])])
61
62
   (define_insn_and_split "*vec_reload_and_reg_<mptrsize>"
63
      [(set (match_operand:P 0 "gpc_reg_operand" "=b")
64
            (and:P (match_operand:P 1 "gpc_reg_operand" "r")
65
                   (const_int -16)))]
66
67
      "(TARGET_ALTIVEC || TARGET_VSX || TARGET_S2PP) && (reload_in_progress
         || reload_completed)"
68
69
     "&& reload_completed"
70
      [(parallel [(set (match_dup 0)
71
                       (and:P (match_dup 1)
72
                               (const_int -16)))
73
                  (clobber:CC (scratch:CC))])])
74
   (define_expand "add<mode>3"
75
76
      [(set (match_operand:VEC_F 0 "vfloat_operand" "")
```

```
77
          (plus:VEC_F (match_operand:VEC_F 1 "vfloat_operand" "")
78
                     (match_operand:VEC_F 2 "vfloat_operand" "")))]
79
     "VECTOR_UNIT_ALTIVEC_OR_VSX_P (<MODE>mode) || VECTOR_UNIT_S2PP_P (<MODE
        >mode)"
80
81
82
   (define_expand "sub<mode>3"
83
     [(set (match_operand:VEC_F 0 "vfloat_operand" "")
84
          (minus:VEC_F (match_operand:VEC_F 1 "vfloat_operand" "")
85
                      (match_operand:VEC_F 2 "vfloat_operand" "")))]
86
     "VECTOR_UNIT_ALTIVEC_OR_VSX_P (<MODE>mode) || VECTOR_UNIT_S2PP_P (<MODE
        >mode)"
87
88
  89
      , included for spellchecking, some bracked not escaped
```

Before we can continue with other insns, we shall go back to \*s2pp\_mov and take a look at case 7 which applies for constant vectors.

Constant vectors have a constant value that are known at compile time. GCC will look for such vectors and check if these vectors can be splatted. This is mainly used by AltiVec, which offers a special splat instruction that takes a constant immediate value as operand. Splatting an immediate value saves a GPR and thus boosts performance. Still, we keep this function, since we can achieve a similar effect for constant zero vectors by moving the zero register. To distinguish between cases where this applies, we use the function output\_vec\_const\_move() inrs6000.c which is also used by AltiVec. Only if the vector is a zero vector, this functions returns a machine instruction, otherwise it will return #.

```
const char * /*p_o_i */
2 output_vec_const_move (rtx *operands)
3 {...
     if (TARGET_S2PP)
4
5
6
       rtx splat_vec;
7
       if (zero_constant (vec, mode))
8
     return "fxvsel %0,0,0,0";
9
10
       splat_vec = gen_easy_s2pp_constant (vec);
11
       gcc_assert (GET_CODE (splat_vec) == VEC_DUPLICATE);
12
       operands[1] = XEXP (splat_vec, 0);
       if (!EASY_VECTOR_15 (INTVAL (operands[1]))){
13
     return "#";
14
15
16
       mode = GET_MODE (splat_vec);
       if (mode == V8HImode){
17
18
     return "#";
19
       else if (mode == V16QImode){
20
21
     return "#";
22
       }
23
       else
```

```
egin{array}{lll} 24 & & \mbox{gcc\_unreachable ();} \\ 25 & \mbox{} \end{array}
```

Since we are now missing an instruction to use this split we will define a split ourselves which converts the immediate splat into a normal splat:

```
1
   (define_split
2
     [(set (match_operand:FXVI 0 "s2pp_register_operand" "")
3
      (match_operand:FXVI 1 "easy_vector_constant" ""))]
4
     "TARGET_S2PP && can_create_pseudo_p()"
5
     [(set (match_dup 2) (match_dup 3))
6
      (set (match_dup 0) (unspec:FXVI [(match_dup 2)] UNSPEC_FXVSPLAT))]
7
8
      operands[2] = gen_reg_rtx (SImode);
9
      operands[3] = CONST_VECTOR_ELT(operands[1], 1);
10
      }")
11
   (define_insn "*s2pp_fxvsplat <FXVI_char > "
12
     [(set (match_operand:FXVI 0 "register_operand" "=kv")
13
14
       (unspec:FXVI
15
             [(match_operand:SI 1 "register_operand" "r")] UNSPEC_FXVSPLAT))]
16
     "TARGET_S2PP"
17
     "fxvsplat < FXVI_char > %0, %1"
     [(set_attr "type" "vecperm")])
18
```

We split the upper RTL template, which moves a constant vector to a vector register into the bottom RTL template, which inserts an intermediate step. match\_dup n means that the operand should match the operand with the same index, that is specified somewhere else. For this reason are operands 2 and 3 specified in the following C template, which also converts operand 1 into a single integer element because all values are the same. The second RTL template uses the newly created integer and moves it to a GPR, which is then splatted into a vector register.

An unspec operator together with UNSPEC\_... tells the compiler that the operation is not specified but has a name to distinguish it from other unspecified operations.

Now that memory insns for s2pp exist, we can also implement them in rs6000.c as well. In rs6000\_init\_hard\_regno\_mode\_ok we must assign code for store and load instructions to supported modes in case the target flag is set. As this is also done for AltiVec, we simply differentiate between those option flags.

By now the compiler would already support asm usage as shown in 2.3.2.

This also completes the prerequisites for intrinsic functions of **built-ins**. The different steps of adding built-ins were also described in a previous internship report [8]. Therefore we will only describe this briefly and refer to the report at times.

First we start defining insns for each vector instruction that is listed in the nux user guide [3]. In order to allow access to the synram we implement insns that work similar to fxvstax and fxvlax and are called fxvoutx and fxvinx.

```
1 ;;store
2 (define_insn "s2pp_fxvstax<fxvstax_char><mode>"
3  [(parallel
```

```
4
        [(set (match_operand:FXVI 0 "memory_operand" "=Z")
5
              (match_operand:FXVI 1 "register_operand" "kv"))
6
         (unspec [(const_int 0)] FXVSTAX)])]
     "TARGET_S2PP"
7
     "fxvstax %1,%y0,<fxvstax_int>"
8
9
      [(set_attr "type" "vecstore")])
10
11
   ;;load
12
   (define_insn "s2pp_fxvlax<fxvlax_char><mode>"
13
      [(parallel
14
       [(set (match_operand:FXVI 0 "register_operand" "=kv")
              (match_operand:FXVI 1 "memory_operand" "Z"))
15
16
        (unspec [(const_int 0)] FXVLAX)])]
     "TARGET_S2PP"
17
     "fxvlax %0,%y1,<fxvlax_int>"
18
     [(set_attr "type" "vecload")])
19
20
21
   ;;synram
22
   (define_insn "s2pp_fxvoutx<fxvoutx_char><mode>"
23
      [(parallel
       [(set (match_operand:FXVI 0 "memory_operand" "=Z")
24
              (match_operand:FXVI 1 "register_operand" "kv"))
25
26
        (unspec [(const_int 0)] FXVOUTX)])]
27
     "TARGET_S2PP"
28
     "fxvoutx %1,%y0,<fxvoutx_int>"
29
      [(set_attr "type" "vecstore")])
30
31
   (define_insn "s2pp_fxvinx<fxvinx_char><mode>"
32
     [(parallel
33
        [(set (match_operand:FXVI 0 "register_operand" "=kv")
              (match_operand:FXVI 1 "memory_operand" "Z"))
34
35
         (unspec [(const_int 0)] FXVINX)])]
36
     "TARGET_S2PP"
37
      "fxvinx %0,%y1,<fxvinx_int>"
38
      [(set_attr "type" "vecload")])
```

All of these insns exist with different conditionals and are named accordingly because load and store insns are hard to implement with an additional argument that is the conditional.

Simple arithmetic instructions exist in multiple versions that either support conditional execution or do not.

Due to an issue with nux regarding conditionals and arithmetic instructions, there exist two different ways of how conditionals are realized As tests revealed, the conditional execution of arithmetic instructions perform unexpectedly in case a condition does not apply. In this case, the result of a previous instruction is written to the return operand. Normally the operation should leave the contents of the operand untouched instead. For this reason we implement a workaround through insn splitting, that utilizes fxvselect and its conditional execution, as this instruction does work as intended. This was shown by another series of tests. Still, we should offer arithmetic operations without splits as this saves a clock cycle in comparison to having an additional fxvselect.

As of now, this was only done for simple arithmetic operations, fxvadd..., fxvsub... and fxvmul.... There also exist more complex operations that make use of the accumulator, which should not be used with conditionals as further testing is imminent and it is not clear whether those conditionals would work. Additionally would an extra instruction render the advantages of an accumulator meaningless. Nonetheless were accumulator instructions implemented together with a conditional argument which will allow for easier testing later on. Also does the additional operand not influence the performance of the instruction in a bad manner when set to 0.

We will refer back to this when discussing the results.

Since this completes the insns we can go on and create built-ins for these in rs6000-builtins.def. First though we add macros that simplify adding intrinsics. The exact definition of those macros is described for AltiVec built-ins in the internship report [8] and we can easily transfer those for s2pp by adding the RS6000\_BTM\_S2PP built-in mask in rs6000.h.

We then use those new s2pp built-in macros to create built-in definitions for each insn and also each mode (halfword or byte). Most built-ins follow the scheme of a normal function that has a result and a certain number of arguments. But there is a number of insns that do not produce an output as they set the accumulator or the conditional register. These instructions need special handling and thus are defined as special built-ins.

Besides defining built-ins we also define overloads. These are used to differ intrinsics through arguments types, simplify using them easier and prevent false usage. Overloads are also further explained in the intership report[8].

To make overloads usable one must link them to existing buili-ns as overloads are not directly connected to insns. This is done through structures that combine the built-in and overload names with a return type and up to three arguments.

To use these structures, we will add a function to rs6000-c.c that resolves the overloaded built-ins and is again built upon an AltiVec function that does the very same. These functions are s2pp\_build\_resolved\_builtin and s2pp\_resolve\_overloaded\_builtin

Which resolving function is used by the back-end, is decided in rs6000.h

Also we need functions in rs6000.c that handle built-ins in general. A new function s2pp\_expand\_builtin, which is invoked by rs6000\_expand\_builtin, handles all special built-ins that belong to s2pp and picks expander functions according the built-in's name. We therefore must create expander functions that take care of s2pp built-ins.

One group of built-ins are memory intrinsics that handle explicit memory addressing and synram intrinsicsi (fxvinx, fxvoutx). Expanders are needed because of the special way memory is accessed through indirect register referencing. Since AltiVec uses the same way of addressing we can reuse its implementation but use a different function names s2pp\_expand\_stv\_builtin and s2pp\_expand\_lv\_builtin.

Besides memory expander functions we add a new kind of expander function for s2pp. These expect no kind of return operand since a great number of instructions do not return any values because they write the accumulator or the conditional register. These functions are called s2pp\_expand\_unaryx\_builtin, s2pp\_expand\_binaryx\_builtin and s2pp\_expand\_ternaryx\_builtin and are used in regard to the number of arguments in a built-in.

```
1
   static rtx
2
   s2pp_expand_unaryx_builtin (enum insn_code icode, tree exp)
3
4
         tree arg0;
5
         rtx op0, pat;
6
         enum machine_mode mode0; //, tmode;
7
         arg0 = CALL_EXPR_ARG (exp, 0);
         op0 = expand_normal (arg0);
8
         mode0 = insn_data[icode].operand[0].mode;
9
10
         /* If we got invalid arguments bail out before generating bad rtl.
11
            */
         if (arg0 == error_mark_node)
12
13
           return const0_rtx;
14
15
         if (! (*insn_data[icode].operand[0].predicate) (op0, mode0))
16
           op0 = copy_to_mode_reg (mode0, op0);
17
         pat = GEN_FCN (icode) (op0);
18
19
         if (pat)
20
           emit_insn (pat);
21
         return NULL_RTX;
   }
22
```

As we are already handling special built-ins we need to define those built-ins in rs6000 .c as well. s2pp\_init\_bultins takes care of this, as it is a series of define\_builtin functions which must be written explicitly.

Besides built-ins that are connected to vector instructions, it is also possible to create intrinsics, that rely solely on GPRs. vec\_ext, vec\_init and vec\_promote are built-ins, which are compiler-constructed sequences of machine instructions that mainly use

memory. These functions are identical to AltiVec's implementation since they do not need a vector extension.

Finally we conclude on built-ins by defining alternative names for built-in functions in s2pp.h. A complete list of all intrinsic functions that the compiler supports at the time this thesis was written is available in the appendix A.1.

## 3.6. Prologue and Epilogue

Another problem, that only emerges, when using many registers at the same time, is missing prologue and epilogue support.

There is an ending number of registers, which the compiler can use for saving values, and this number is also reduced by the amount of fixed registers. Thus the compiler occasionally must store values in memory before calling a function that needs some of the available registers by calling a so called **prologue** [7, ch. 17.9.11]. The compiler then restores the registers after the function has finished through an **epilogue**.

Before the compiler can save registers, it must check which registers need to be saved. This is done by <code>seve\_reg\_p()</code>. In <code>rs6000\_emit\_prologue</code> the compiler checks each register that exists and saves them according to this function. Since the compilers checks register numbers instead of types, we need to alter the case for FPRs and add a target flag:

```
1
2
     if (!WORLD_SAVE_P (info) && (strategy & SAVE_INLINE_FPRS))
3
4
          int i:
5
          if (!TARGET_S2PP){
6
            for (i = 0; i < 64 - info->first_fp_reg_save; i++)
7
          }
8
9
          else{
            for (i = 0; info->first_s2pp_reg_save + i <= LAST_S2PP_REGNO; i</pre>
10
                ++)
              if (save_reg_p (info->first_s2pp_reg_save + i)){
11
12
13
                int offset = info->s2pp_save_offset + frame_off + 16 * i;
                rtx savereg = gen_rtx_REG (V8HImode, i+info->
14
                    first_s2pp_reg_save);
15
                rtx areg = gen_rtx_REG (Pmode, 0);
16
                emit_move_insn (areg, GEN_INT (offset));
17
                rtx mem = gen_frame_mem (V8HImode,gen_rtx_PLUS (Pmode,
                    frame_reg_rtx, areg));
18
                insn = emit_move_insn (mem, savereg);
19
                rs6000_frame_related (insn, frame_reg_rtx, sp_off-frame_off,
20
                GEN_INT(offset), NULL_RTX);
21
            }
22
          }
23
       }
24
```

25 ...

An rtx, which was a type often used in the previous listing, is short for RTL expression and can be used by insns as an argument. RTL expressions can also contain information on how the operand is to be constructed as this allows chaining of operations.

If register needs to be saved, the compiler computes an offset, that takes the current frame offset and adds 16 bytes(s2pp register size) for every register. savereg and areg are two kinds of registers that will later serve as operands for a memory instruction. savereg is the vector register we want to save and areg will be the GPR operand that holds an offsetemit\_move\_insn creates IR that stores the offset in areg. Now we can create a complete memory operand mem that takes offset in areg and frame\_reg\_rtx, which is the register holding the frame pointer, and combines them to a single operand. As both, register and memory, are specified, the compiler can emit a move insn that stores savereg to mem. Finally rs6000\_frame\_related handles the insn which was just created and performs additional customizations which are needed as the IR belongs to a function call.

After the prologue has finished, the function is compiled. Next, rs6000\_emit\_epilogue is called and works similar to prologue but restores the registers from memory. This function can not work on its but needs other functions that set parameters and prepare statements as well.

```
1
2
        int first_s2pp_reg_save;
3
4
        int s2pp_save_offset;
5
6
        int s2pp_size;
7
        ...}
8
9
   int
10
   direct_return (void)
11
   {
12
      if (reload_completed)
13
          rs6000_stack_t *info = rs6000_stack_info ();
14
15
          if (info->first_gp_reg_save == 32
16
17
          && info->first_s2pp_reg_save == LAST_S2PP_REGNO + 1
18
19
          . . . )
20
        return 1;
21
        }
22
23
      return 0;
24
   }
25
26
27
   static int
28
   first_s2pp_reg_to_save (void)
29
30
      int i;
```

fxvstax and fxvlax

```
31
      /* Find lowest numbered live register. */
32
     for (i = FIRST_SAVED_S2PP_REGNO; i <= LAST_S2PP_REGNO; ++i)</pre>
33
34
       if (save_reg_p (i))
35
          break;
36
37
     return i;
38 }
39
40 \quad \mathtt{static} \ \mathtt{rs6000\_stack\_t} \ *
41
   rs6000_stack_info (void)
42
        info_ptr->first_s2pp_reg_save = first_s2pp_reg_to_save ();
43
        info_ptr->s2pp_size = 16 * (LAST_S2PP_REGNO + 1
44
45
                          - info_ptr->first_s2pp_reg_save);
46
47 }
```

stack boundary -> put this together frame offsetr stackoffset

## 4. Results and Applications

In the course of the third chapter, the GCC back-end was extended for the s2pp vector extension. This chapter will examine features and early applications of the back-end.

So far the compiler back-end can be integrated into a compiler which creates machine code for the PPU. This enhanced compiler also supports the use of -mcpu=nux and -ms2pp target flags and a header file named s2pp.h which can be included the same way GCC standard header files are included. The back-end features a vector variable attribute which enables vector variables of different types.

These vector variables can serve as arguments for implemented s2pp intrinsic functions that cover every vector instruction which is available on nux. Additionally the new intrinsics support type detection and map automatically to the according machine instruction for each vector type if this is demanded by the user.

When using this, assigning registers as well as memory is done automatically and does not require user interaction. Despite a special bus to the synapse array, the back-end can also accesses the synapse array through special intrinsics. Specifically the intrinsics fxv\_inx and fxv\_outx allow to access the synapse array and load/store variables from/to there.

As many of the mentioned intrinsics as possible were designed similar to existing intrinsics for AltiVec and use the vec\_ prefix besides th fxv\_ prefix. This was done to include both, users that are accustomed to the existing vector macros and new users that are somewhat familiar with AltiVec.

In addition to intrinsics, the compiler also supports inline assembly coding in asm with vector instructions (as described in section 2.3.2, see listing 4.1). The user does not need to choose hard registers or implement store and load instructions by himself, as this is done by the compiler. This is possible through the addition of the kv constraint that marks vector registers as r does for GRPs. Overall inline assembly for nux became more intuitive than it had been before.

This will ultimately make it easier to combine low-level coding in high-level programs. The new back-end also supports the use of global functions that support simple function calls.

First tests were conducted during extension development and made use of intrinsics instead of macros. Ideas for more complex tests will be discussed in chapter 5.

David Stöckel further implemented a small series of tests using a newly developed unit testing framework as part of libnux in order to conduct high-level software tests (example in listing 4.1).

Through these early tests, it was possible to find a bug in nux for conditional execution of arithmetic instructions [?]. It was possible to implement a workaround for this which was already mentioned in chapter 3. The workaround was test and passed David Stöckel's

#### Listing 4.1: Example of nux Test.

This test directly loads two values as immediates into registers and splats them into vector registers. Those vector registers are added and the result saved in a variable. The result is then tested and also written into the mailbox for analysis.

```
1
            libnux_testcase_begin("fxvpckbu");
2
            vector uint8_t vec1, vec2, vec3;
3
                            "li %3, 0x1258\n\t" /*load value into gpr*/\
            asm volatile (
                            "fxvsplath %0, %3\n\t" /*splat value of qpr*/ \
4
5
                            "li %3, 0x00ff\n\t"\
                            "fxvsplath %1, %3\n\t" /*splat value of gpr*/ \
6
7
                            "fxvaddbm %2, %0, %1, 0 \n\t"
                              "=kv" (vec1), "=kv" (vec2), "=kv" (vec3) ,"=r"
8
                                (value) :/*handle output operands*/\
9
                              "r1"); /*reserve clobbered registers*/
10
            libnux_mailbox_write_string("fxvpckbu\n");
11
12
            for (uint32_t index = 0; index < 16/sizeof(vec_extract(vec3,0));</pre>
               index++) {
13
                    libnux_test_equal(vec3[index], 0x1337);
14
                    libnux_mailbox_write_string("Index is ");
15
                    libnux_mailbox_write_hex(index);
16
                    libnux_mailbox_write_string("\tvalue is ");
                    libnux_mailbox_write_hex(vec3[index]);
17
18
                    libnux_mailbox_write_string("\n");
19
           }
```

test, while performance was no criteria. At the same time the code size was minimally affected as only one machine instruction is added.

He also used the nux back-end for first experiments that made use of different functionalities of nux. One experiment used the PPU to increase the synaptic weights of all synapses in small steps and then measure the network activity. The same procedure was repeated for decreasing weights and the difference between activities was evaluated. Another experiment updated all synaptic weights depending on spike counts to create homeostatic behavior [?] and yet a different experiment implemented simple Stimulated Time-Dependent Plasticity (STDP) that relies on accessing the hardware correlation data of HICANN-DLS [?]. All these experiments still used inline assembly instead of intrinsics but may be transferred to intrinsics in the future. Nonetheless did the nux back-end simplify usage of inline assembly as described earlier and allowed the user to focus on tests rather than low-level operand management.

All tests used a version of GCC that was patched and then integrated to the waf build system of the working group. Hence a patched cross-compiler is already available at the time of this thesis.

As pointed out in the beginning of this thesis we also wanted to support optimization of vector specific machine code. Until the end of this thesis could be achieved for basic optimization (with flag -01) which mainly reduces memory accesses to a minimum but keeps execution order. This still gives readable assembly code and should achieve similar

#### 4. Results and Applications

performance to code written with the former standard macros.

Since the compiler did not recognize s2pp instructions before, asm statements had to be volatile to prevent vector instructions from being removed by optimization. volatile code can still be moved around by optimization. Other optimizations, like loop optimization or optimizations within a volatile statement are not possible. Efficient machine code was therefore relying more on the users code than usual. This changed with support of simple optimization (-01) by the extended back-end. Optimization going beyond -01 is yet to be tested for reliability with the new back-end which will be discussed later on.

Besides these internal improvements to s2pp usage we want to point out the main advantage of the new back-end for users of nux. The main goal of this thesis was to simplify programming for nux and listing 4.5 shows this for an exemplary program.

```
Listing 4.2:
                                 Listing 4.3:
                                                         Listing 4.4:
   Code with Intrinsics
                                    Code With Macros
                                                            Assembly Output for 4.5
void start() {
                                 void start() {
                                                         start:
  vector uint8_t vec1, vec2,
                                                           li %r9,8
                                   fxv_splatb(0, 8);
                                                           fxvsplatb %f11,%r9
      vec3;
  vec1 = fxv_splatb(8);
                                                           li %r9,11
  vec2 = fxv_splatb(11);
                                   fxv_splatb(1, 11);
                                                           fxvsplatb %f12,%r9
  vec3 = fxv_splatb(2703);
                                                           li %r9,2703
                                   fxv_splatb(2, 2703);
                                                           fxvsplatb %f10,%r9
  vec1 = fxv_mul(vec1, vec2);
                                   fxv_mulbm(0, 0, 1);
                                                           fxvmulbm %f12,%f11,%f12
  vec1 = fxv_add(vec1, vec3);
                                   fxv_addbm(0, 0, 2);
                                                           fxvaddbm %f12,%f12,%f10
  return;
                                   return;
                                                           blr
}
                                 }
```

One can see that listing 4.5 resembles standard C code and while listing 4.3 still uses the old macros for nux programming. Listing ?? shows the assembly output by the compiler for -o1 optimization. Comparing 4.5 and 4.3 shows that intrinsics give more structure to the program than macros do, especially since variables are supported. Dependencies between variables are also obvious right away.

When using the macros in listing 4.3, the code is very close to the assembly output in 4.6, which would almost be identical to the assembly output of 4.3. The only differences would be register numbers, as GCC does not assign the lowest index registers first.

Another example is listing ??, that combines function calls and the new intrinsic vec\_extract. This intrinsic extracts the element, which is indexed by the second argument, from a vector which is the first argument. It also presents the possibility of vector intrinsics as function arguments and return types.

Listing ?? shows -O1 optimized assembly output, which illustrates the capabilities of

optimization.

```
Listing 4.5:
                                Listing 4.6:
   Code with Intrinsics
                                   Assembly Output for 4.5
vector uint8_t splat_elem(
                                start:
                                         stwu %r1,-48(%r1)
   vector uint8_t vec,
                                        li %r9,11
   uint8_t elem_no) {
  uint8_t elem = vec_extract(
                                         fxvsplatb %f12,%r9
     vec, elem_no);
                                         li %r9,16
  return fxv_splatb(elem);
                                         fxvstax %f12,%r1,%r9
                                         addi %r1,%r1,48
void start() {
                                         blr
  vector uint8_t vec1;
  volatile vector uint8_t
     vec1;
  vec1 = (vector uint8_t)
        {0, 1, 2, 3, 4, 5, 6,
             7, 8, 9, 10, 11,
             12, 13, 14, 15};
  vec2 = splat_elem(vec1, 11)
  return;
```

Overall the compiler shows promising abilities that could help users create future software for the PPU.

## 5. Discussion and Outlook

The motivation of this thesis was, to simplify programming for the PPU and provide tools to users by establishing compiler support for the nux architecture. This should help the development of new applications for the HICANN-DLS and make the system accessible to more users.

Already there exist many experiments on HICANN-DLS the addition of compiler support could help increase their number and complexity. Easy experiments can now be generated in a short amount of time and need little expertise by the user. There exist various tutorials and examples on using vector types in C that can be used as introductory reading.

guides on vector programming

At the same time can experienced users create complex experiments more easily than before, as functions are available for different purposes and optimization will help improving performance. This will become even more important, as higher levels of optimization are yet to be verified for use.

Testing the compiler in general is still a major task for the near future. The backend needs high-level tests similar to listing 4.1 that can be run on the PPU and give comparable results. This should be extended to more complex testing scenarios that involve various combinations of intrinsics with different arguments and dependencies as well as conditional branching and looping. Running these tests with various optimization stages, would proof reliability of optimization as well.. The same could be done for inline assembly code.

Also the number of low level tests should be increased to compare results, especially if tests fail. These would rather test the nux architecture than the compiler, but only testing on both sides gives meaningful results. These tests should be similar to existing tests that are written in assembly.

All tests should be conducted in simulation as well as on hardware, to create a robust testing environment. It is planned to emulate the nux architecture on hardware in the future, which would accompany existing software simulation. This would make parallel testing of hardware faster and allow for continuous testing of future PPU modifications.

Such a testing environment would allow to validate if optimization beyond -01 is reliable with the new back-end. This could also involve existing AltiVec tests in GCC, that are transferable to nux.

Results form these tests as well as new insights from this thesis should be featured in the nux manual, in order to provide sufficient documentation of the hardware.

As the current back-end requires GCC 4.9.2, the future development of GCC should also be consodered. The most recent version of the GCC 4.9 release series dates back to August 2016 and maintenance is officially discontinued [6]. There exist newer bugs

but these were fixed through patches thanks to an active community behind GCC. It is highly unlikely that the GCC compiler itself will cause problems in the future but it might be reasonable to move to the latest 4.9 release 4.9.4 and test the back-end there as well.

Radical changes in the GCC environment are untypical for this project and the 4.9 release series is likely to be sufficient for a long time. Nonetheless exists an experimental build of GCC 7 with an early version of the s2pp back-end and also the latest binutils version by David Stöckel which has not been tested yet and only demonstrates the possibility of porting the back-end to different GCC releases if it ever became necessary. Also will the POWER architecture likely be supported by GCC to a great extend as there still exist back-ends for deprecated architectures and very minor targets.

Thus the most crucial development is that of the nux architecture. If it is ever decided that the PPU is to be completely redesigned, the current back-end would likely not support the new architecture. Smaller changes however, i.e. adding logical vector instructions to the instruction set, may be supported by adding these to the machine description and creating intrinsics from this as described in section 3.5 and the already mentioned internship report [8]. The back-ends structure would also allow for adding custom intrinsics that can be composed from existing machine instructions through the machine description and RTL code.

Eventually the s2pp extended GCC back-end may be usable for a reasonable amount of time and even longer if the back-end is maintained.

The PPU will play a key role in future experiments on HICANN-DLS. Experiments on this system that do not utilize the PPU are usually slower or less flexible and must be supervised outside of HICANN-DLS. The performance of vector processing on the PPU and direct access to the analogue system offer various possibilities for future experiments. Although the processing power of the PPU is limited when compared to larger experimental setups, it fulfills the requirements for simple optimization, reduced virtual environments with low latency for analogue neural networks and managing calibration of the system. This would allow for experiments that run solely on the PPU and do not need external supervision, which makes the HICANN-DLS a standalone system. As such, it would be able to run long-term experiments on its own and create many new testing scenarios.

A limiting factor to this is the small memory of the PPU. As the PPU should gain access to the FPGAs memory in future DLS releases, this limitation will drop.

Future set-ups might feature the PPU in wafer-scale implementation, that allows for multiple experiments running in parallel or large network plasticity.

All of this needs code that is at the same efficient and favorably of small size. Software should be easy to write, as more complex systems will cause programs to become more complicated and users should be encouraged to work on this platform.

The s2pp compiler support offers this and could open the way to additional features. One such feature could be the GNU Project Debugger (GDB) which offers code debugging, as this is currently not possible for PPU software. GDB support might also is minor right?

#### 5. Discussion and Outlook

be possible in the future but it is likely that more work on the back-end is necessary for this. Until the end of this thesis there have been no tests with GDB and the new back-end and other features such as optimization and testing would be more important. Over time this will help realizing experiments with large simulated networks or multiple standalone experiments in parallel.

Ultimately though, the future of the PPU is welded by users, developers and the applications they create for HICANN-DLS and other systems. Giving them the right tolls at hand will accelerate its development.

## A. Appendix

### A.1. Acronyms

ADC Analog Digital Converter

ALU Arithmetic Logic Unit

**ASIP** Application Specific Instruction set Processor

asm Assembly

CADC Correlation Analog Digital Converter

**CISC** Complex Instruction Set Computing

CPU Central Processing Unit

**CR** Conditional Register

**DLS** Digital Learning System

**DRAM** Dynamic RAM

insn instruction

IR Intermediate Representation

FPGA Field Programmable Gate Array

FPR Floating Point Register

**FPU** Ploating Point Unit

**GCC** GNU Compiler Collection

GDB GNU Project Debugger

**GPP** General Purpose Processor

**GPR** General Purpose Register

**HICANN** High Input Count Neural Network

**HICANN-DLS** High Input Count Neural Network - Digital Learning System

#### A. Appendix

**ISA** Instruction Set Architecture

**LLVM** Low Level Virtual Machine

LR Linker Register

**LRA** Local Register Allocator

MC Memory Controller

MMU Memory Management Unit

MSB Most Significant Bit

nux alternative name for PPU

**POWER** Performance Optimization With Enhanced RISC

PPU Plasiticty Processing Unit

RAM Random Access Memory

**RF** Register File

RTL Register Transfer Language

**RISC** Reduced Instruction Set Computing

**rs/6000** RISC system/6000

s2pp synaptic plasiticity processor

**SIMD** Single Input Multiple Data

**STDP** Stimulated Time-Dependent Plasticity

**SPR** Special Purpose Register

**SRAM** Static RAM

**VE** Vector Extension

VCR Vector Conditional Register

VR Vector Register

**VSCR** Vector Status and Control Register

**VRSAVE** Vector Save/Restore register

VRF Vector Register File

VMX Vector Media eXtension

intrinsic name	use	d	data	a types b	c	effect
fxv_add			vector signed char vector unsigned char			
vec_add	d = fxv_add(a,b)	same as a	vector signed short vector unsigned short	same as a		add a and b modulo element- wise and write the result in 4
fxv sub			vector signed char			
vec_sub	d = fxv_sub(a,b)	same as a	vector signed short	same as a		subtract b from a modulo element-wise and write the re-
			vector unsigned short			sult in d
fxv_mul vec mul	d = fxv_mul(a,b)	same as a	vector unsigned char	same as a		multiply a and b modulo
vec_mu1			vector signed short vector unsigned short			element-wise and write the re- sult in d
			vector signed char vector unsigned char			
fxv_addfs	d = fxv_addfs(a,b)	same as a	vector signed short	same as a		add a and b saturational element-wise and write the re-
			vector signed char			sult in a
fxv_subfs	d = fxv_subfs(a,b)	same as a	vector unsigned char vector signed short	same as a		subtract b from a saturational
			vector unsigned short			sult in a
fxv_mulfs	d = fxv_mulfs(a,b)	same as a	vector signed char vector unsigned char	same as a		multiply a and b saturational
114 - 1111 2	u 111-mu115(u,b)	ballo ab a	vector signed short vector unsigned short	Suite us u		element-wise and write the re-
			vector signed char		vector signed char* signed char*	Suit ii u
			vector unsigned char		vector unsigned char*	
fxv_stax vec_st	fxv_stax(a,b,c)		vector signed short	int	unsigned char* vector signed short*	a is stored to memory address c + b
			vector unsigned short		signed short* vector unsigned short*	
					unsigned short vector signed char*	
			vector signed char		signed char* vector unsigned char*	
fxv_outx	fxv_outx(a,b,c)		vector unsigned char	int	unsigned char* vector signed short*	a is stored to synaptic address
			vector signed short		signed short*	c + b
			vector unsigned short		unsigned short	
		vector signed char		vector signed char* signed char*		
fxv_lax	d = fxv_lax(a,b)	vector unsigned char	int	vector unsigned char* unsigned char*		d is read from memory address
vec_1d		vector signed short		vector signed short* signed short*		a + b
		vector unsigned short		vector unsigned short* unsigned short		
		vector signed char		vector signed char* signed char*		
		vector unsigned char		vector unsigned char*		
fxv_inx	d = fxv_inx(a,b)	vector signed short	int	vector signed short*		d is read from synaptic ad- dress a + b
		vector unsigned short		vector unsigned short*		
			vector signed char	unsigned short		
fxv_sel	d = fxv_sel(a,b,c)	same as a	vector unsigned char vector signed short	same as a	2-bit int	select element from a if c ap- plies for that index otherwise
		signed char	vector unsigned short			select b, store the result in d
vec_extract	d = vec_exctract(a,b)	unsigned char signed short	vector unsigned char	int		d is read from synaptic ad-
		unsigned short signed char	vector unsigned short vector signed char			dress a + b
vec_insert	d = vec_insert(a,b)	unsigned char	vector unsigned char	int		d is read from synaptic ad-
		signed short unsigned short	vector signed short vector unsigned short			dress a + b
vec_promote	d = vec_exctract(a,b)	signed char unsigned char	vector signed char vector unsigned char	int		d is read from synaptic ad-
·		signed short unsigned short	vector signed short vector unsigned short			dress a + b
vec_sh	d = fxv_sh(a,b)	signed char unsigned char	vector signed char vector unsigned char	int		d is read from synaptic ad-
fxv_sh	u - 11v_81(a,0)	signed short unsigned short	vector signed short vector unsigned short	1110		dress a + b
vec_splat_s16		signed char unsigned char	vector signed char vector unsigned char			
vec_splat_u16 \\ fxv_splatb	d = fxv_splatb(a)	signed short unsigned short	vector signed short vector unsigned short	int		d is read from synaptic ad- dress a + b
vec_splat_s8		signed char unsigned char	vector signed char vector unsigned char			
vec_splat_u8 \\ fxv_splath	d = fxv_splath(a)	signed short unsigned short	vector signed short	int		d is read from synaptic ad- dress a + b
		signed char unsigned char	vector unsigned short vector signed char vector unsigned char			1
fxv_cmp	fxv_cmp(a)	signed short unsigned short	vector unsigned char vector signed short vector unsigned short	int		d is read from synaptic ad- dress a + b
		signed char	vector signed char			1
fxv_mtac fxv_mtacfs	fxv_mtac(a)	unsigned char signed short	vector unsigned char vector signed short	int		d is read from synaptic ad- dress a + b
		unsigned short signed char	vector unsigned short vector signed char			
fxv_addactacm fxv_addactacf	fxv_addactac(a)	unsigned char signed short	vector unsigned char vector signed short	int		d is read from synaptic ad-
		unsigned short signed char	vector unsigned short vector signed char			
fxv_addacm fxv_addacfs	fxv_addac(a)	unsigned char signed short	vector unsigned char vector signed short	int		d is read from synaptic ad- dress a + b
		unsigned short signed char	vector unsigned short vector signed char			dress a + b
fxv_mam fxv mafs	fxv_ma(a)	unsigned char signed short	vector unsigned char vector signed short	int		d is read from synaptic ad-
		unsigned short signed char	vector unsigned short			dress a + b
fxv_matacm fxv_matacfs	fxv_matac(a)	unsigned char signed short	vector signed char vector unsigned char vector signed short	int		d is read from synaptic 63
.av_maradis		unsigned short	vector unsigned short			dress a + b
fxv_multacm	fxv_multac(a)	signed char	vector signed char	int		d is read from synaptic ad-
fxv_multacfs		signed short unsigned short	vector signed short vector unsigned short			dress a + b
fxv addtac	fxv addtac(a)	signed char unsigned char	vector signed char vector unsigned char	int		d is read from synaptic ad-
1AV_audu8C	auutac(8)	signed short unsigned short	vector signed short vector unsigned short			dress a + b
fxv_pckbu		signed char unsigned char	vector signed char vector unsigned char			d in mond from the state of
fxv_pckbl	d = fxv_pckbu(a,b)	signed short unsigned short	vector signed short vector unsigned short	int		d is read from synaptic address a + b
fxv_upckbl		signed char unsigned char	vector signed char vector unsigned char			
fxv_upckbr	d = fxv_upckbl(a,b)	signed short unsigned short	vector signed short vector unsigned short	int		d is read from synaptic ad- dress a + b
		anarkned sport	amergued snort	I	ı	I .

Table A 1: List of all implemented built-ins and how they are used

#### A.2. List of nux Intrinsics

## A.3. Assembly Mnemonics

#### caption and reference to PPC book and asm website correct the table

Mnemonics follow a certain pattern that has letters which can be interchanged to alter the meaning of the mnemonic, some of these characters are:

- i indicates that the instructions uses an immediate value
- b stands for byte and references the size of the operand
- h stands for halfword and references the size of the operand
- w stands for word and references the size of the operand
- s indicates that one of the operands is shifted
- g, ge, 1, le, e stand for greater, greater or equal, less, less or equal and equal which is the possible content of the conditional register

There are also special operands which might occur in inline assembly, which behave like pointers, while others contain debugginf information.

- @1(C) is equivalent to the lower order 16 bits of c in the symbol table
- ©ha(C) is equivalent to the higher order 16 bits of c in the symbol table and minds the sign extension
- .loc # # # marks a line of code (file, line, column) in the source file
- .LVL is a local label which can be discarded
- .LFB marks the begin of a function
- .LFE marks the end of a function
- .LCO is a constant of the literals table at position O

all these tables in the appendix

mnemonic	operands	description
add	RT, RA, RB	add RB to RA and store the result in RT
addi	RT, RA, SI	add SI to RA and store the result in RT
addis	RT, RA, SI	add SI shifted left by 16 bit to RA and store the result
		in RT
and	RA, RS, RB	RS and RB are anded and the result is stored in RT
b	target_addr	branch to the code at target_addr
ble	BF, target_addr	branch to the code at target_addr if BF is less or equal
blr		branch to the code at address in the linker register
cmp	BF, L, RA, RB	RA and RB are compared and the result (gt,lt,eq) is
		stored in BF, L depicts if 32-bit or 64-bit are compared
cmplwi	BF, RA, SI	RA compared logically wordwise with immediate SI
		and the result is stored in BF
and	RA, RS, RB	RS and RB are anded and the result is stored in RT
eieio		enforce in-order execution of $I/O$
isync		instruction cache synchronize
la	RT, D(RA)	load aggregate D + RA into RT
li	RT, SI	load immediate value SI into RT
lis	RT, SI	load immediate value SI shifted left by 16 bit into RT
lbz	RT, D(RA)	load byte at address D+RA into RT, fill the other bits with zeros
lwz	RT, D(RA)	load word at address D+RA into RT, fill the other bits
		with $\mathbf{z}$ eros
mflr	RT	move from linker register to RT
mr	RT, RA	move register RA to RT
nop		<b>no-op</b> eration or an instruction is performed that has no effect
rlwinm	RA, RS, SH, MB, ME	rotate left word in RS by immediate SH bits then and
		with mask which is 1 from MB+32 to ME+32 and 0 else,
		store to RA
stw	RS, D(RA)	store word from RS to address D+RA
stwu	RS, D(RA)	store word from RS to address D+RA and update RA
		to D+RA
sync		synchronize data cache

 ${\bf Table\ A.2.:\ Overview\ of\ Common\ Assembly\ Mnemonics}$ 

# Notes

paper on current neuromorphic computing	1
other systems	3
add reference	5
inhaltlicher zusammenhang	7
give reason for clock frequency	8
keep this?	9
reference	9
reference	9
add instruciton cache?	11
add description to instruction cache	13
keep this?	13
keep this?	19
PPC must handle syncing in compiler when I/O is added explain stack and	
frame pointer PPU instruction set	23
one example for repetitive use?	29
	29
	34
	52
stack boundary -> put this together frame offsetr stackoffset	53
	58
	59
1	64
all these tables in the appendix	64

## **Bibliography**

- G., [1] Davis, Back to the basics: Compiler optimization for smaller, faster embedded application code, http: //www.embedded.com/design/debug-and-optimization/4025587/ Back-to-the-Basics-Compiler-optimization-for-smaller-faster-embedded-application-code, accessed 2017.03.01, 2005.
- [2] Flik, T., Mikroprozessortechnik und Rechnerstrukturen, 7., neu bearb. aufl. ed., XIV, 649 S. pp., Springer, Berlin; Heidelberg [u.a.], 2005.
- [3] Friedmann, S., nux Manual, 2016.
- [4] Friedmann, S., J. Schemmel, A. Grübl, A. Hartel, M. Hock, and K. Meier, Demonstrating hybrid learning in a flexible neuromorphic hardware system, 2016.
- [5] FSF, Gcc wiki, https://gcc.gnu.org/wiki/reload, accessed 2017.02.26, 2013.
- [6] FSF, Gcc 4.9 release series, https://gcc.gnu.org/gcc-4.9/, accessed 2017.02.26, 2016.
- [7] FSF, GNU Compiler Collection Internals Manual, Free Software Foundation Inc., https://gcc.gnu.org/onlinedocs/gccint/index.html, 2017.
- [8] Heimbrecht, A., Internship report altivec intrinsics, 2017.
- [9] IBM, Developing PowerPC Embedded Application Binary Interface (EABI) Compliant Programs, IBM Microelectronics, 1998.
- [10] Kim, J.-J., S.-Y. Lee, S.-M. Moon, and S. Kim, Comparison of llvm and gcc on the arm platform, *IEEE*, pp. 1–6, 2010.
- [11] NXP, AltiVec manual, NXP, 2006.
- [12] Park, C., M. Han, H. Lee, and S. W. Kim, Performance comparison of gcc and llvm on the eisc processor, *IEEE*, pp. 1–2, 2014.
- [13] Silbernagl, S., and A. Despopoulos, *Color Atlas of Physiology*, Basic sciences, Thieme, 2009.
- [14] von Hagen, W., *The Definitive Guide to GCC*, section Introduction, pp. xxiii–xxix, second ed., Apress, 2006.

# Statement of Originality (Erklärung):

I certify that this thesis, and the research to which it refers, are the product of my own work. Any ideas or quotations from the work of other people, published or otherwise, are fully acknowledged in accordance with the standard referencing practices of the discipline.
Ich versichere, dass ich diese Arbeit selbständig verfasst und keine anderen als die angegebenen Quellen und Hilfsmittel benutzt habe.
Heidelberg, March 5, 2017(signature)