


2016

Interfacing DC motor with MPLAB Xpress Evaluation Board

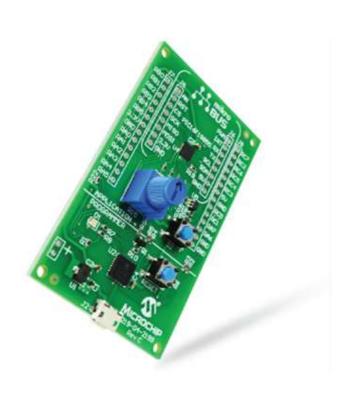

SIVA A

Contents

Introduction	2
Component Requirement	
Procedure	
Output:	

Introduction

MPLAB Xpress IDE cost free development platform. It's cloud Based IDE available from microchip supporting PIC-based microcontrollers. The platform is comprised of code editor, build automation tools, debugger, code configurator. MPLAB Xpress IDE is an end-to-end solution enabling engineers to develop their applications from initial evaluation to final production.

Component Requirement

> Hardware:

- MPLAB Xpress evaluation tool
- DC motor
- L293D breakout

> Software:

MPLAB Xpress IDE

Note: we have on board LED

Procedure

Step 1: Open your Browser and go to following link

https://mplabxpress.microchip.com/mplabcloud/ide

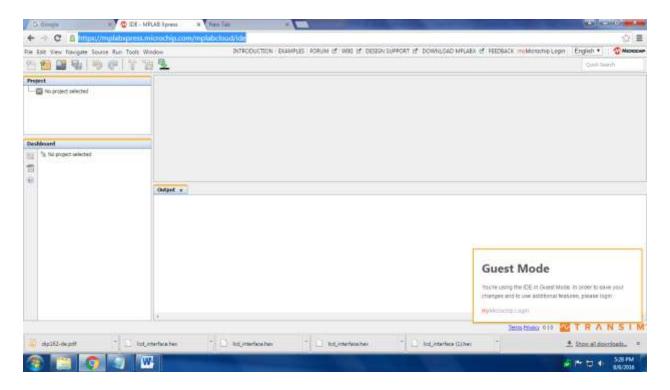


Figure 1 MPLAB Xpress IDE main window

Step 2: start creating our new project. Go to File >> New Project. Select microchip embedded as well as standalone project then click next

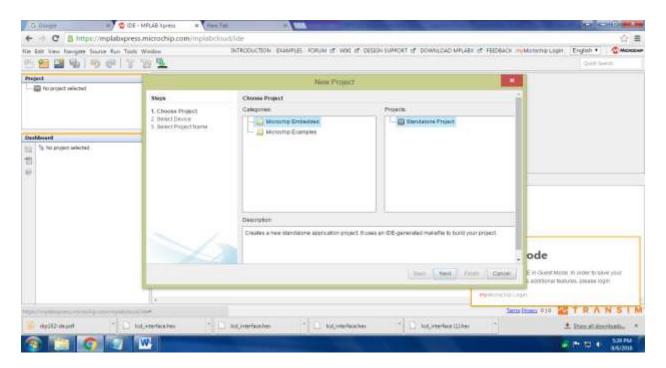


Figure 2 Open new project

Step 3: Select device pic16f18855, and click next.

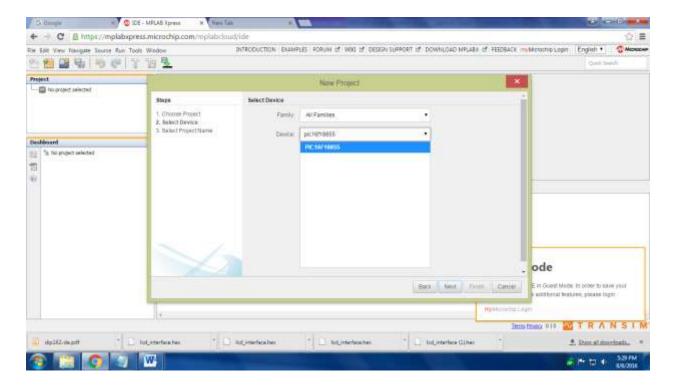


Figure 3 select Device

Step 4: then give project name and click finish.

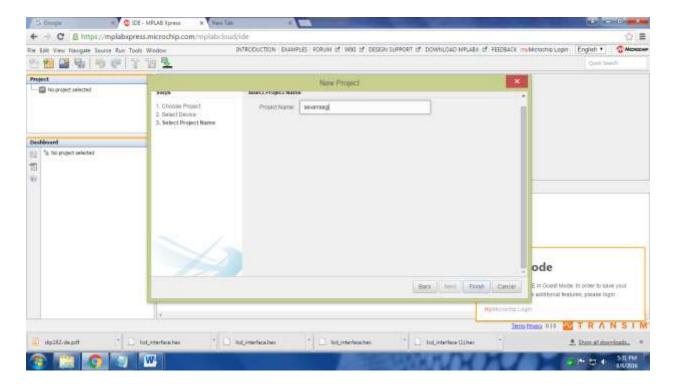


Figure 4 give project name

Step 5: Now choose MPLAB Xpress code configurator if it's not present in your Device please **Download** and install

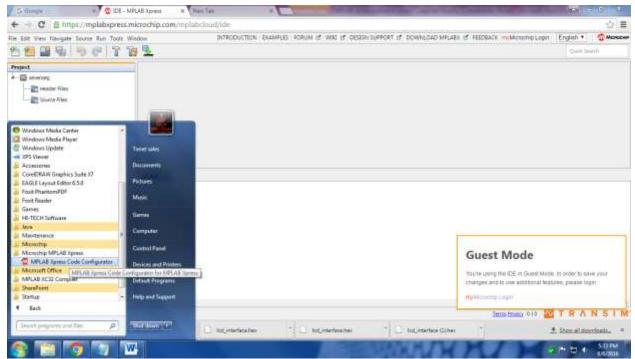


Figure 5 Select MPLAB Xpress code configurator

Step 6: Now we can see our MPLAB Xpress configuration window and select system module in MPLAB Xpress configuration window.

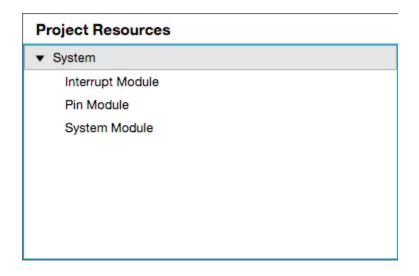


Figure 6 configuration window

Step 8: select RC3,RC4 pin and select pin module in MPLAB Xpress configuration window and deselect Analog in pin module set as out put

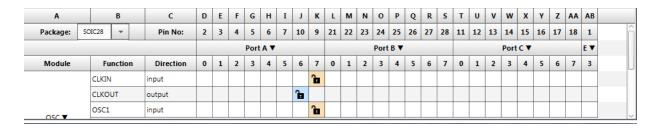


Figure 7 pin configuration set

```
SOURCE CODE:
#include "mcc_generated_files/mcc.h"
void main(void)
{
    SYSTEM_Initialize(); // initialize the device
    int i,n=10000;
    RC3=0; RC4=0;
    while (1)
                                // continues loop
    {
        RC3=0; //input 1
        RC4=0; //input 2
        for(i=0;i<=n*2;i++); //delay loop change state</pre>
        RC3=1; //input 1
        RC4=0; //input 2
        for(i=0;i<=n*2;i++); //delay loop change state</pre>
        RC3=1; //input 1
        RC4=1; //input 2
        for(i=0;i<=n*2;i++); //delay loop change state</pre>
        RC3=0; //input 1
        RC4=1; //input 2
```

TENET TECHNETRONICS | VARSITY



```
for(i=0;i<=n*2;i++); //delay loop change state
}</pre>
```

Step 10: Go to your MPLAP Xpress IDE Erase all existing code and copy above code past there then make clean and build for Export. If you done this go to download you can see hex file for your project.


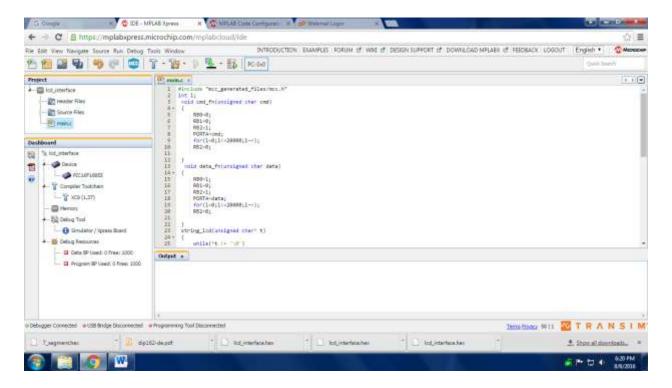


Figure 10 Build the project

Step 11: Now, if all goes well connect the Micro B cable to PIC16F18855 (MPLAB Xpress demonstration board) and connect it to your computer. If you done you can see your devise. And copy that Hex file to your device. And make hardware connection.

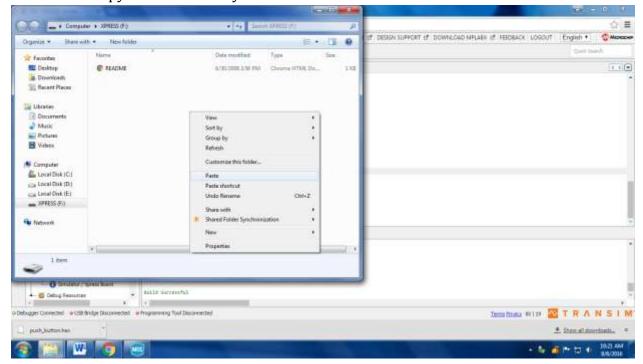

Output:

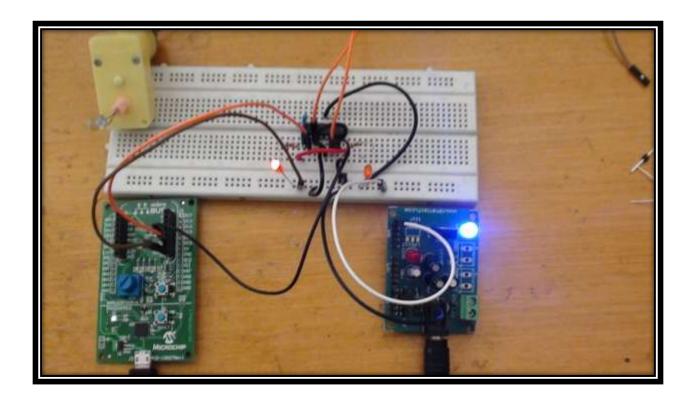


Figure 12 output

For product link:

http://www.tenettech.com/product/8828/mplab-xpress-development-board

For more information please visit: www.tenettech.com

For technical query please send an e-mail: info@tenettech.com