AVRTools

Generated by Doxygen 1.8.9.1

Sat Sep 5 2015 18:00:31

Contents

1	AVR	Tools: A Library for the AVR ATmega328 and ATmega2560 Microcontrollers	1						
	1.1	Overview	1						
	1.2								
	1.3	AVRTools is not	2						
	1.4	Quick Tour of AVRTools	2						
		1.4.1 Foundational Elements and Concepts	3						
		1.4.2 What you need to know about pin name macros	3						
		1.4.3 The core modules	4						
		1.4.3.1 System initialization module	5						
		1.4.3.2 System clock module	5						
		1.4.3.3 Analog-to-Digital module	5						
		1.4.3.4 PWM module	5						
		1.4.3.5 Minimal USART modules	6						
		1.4.3.6 ABI module	6						
		1.4.3.7 New module	6						
	1.5	Sample start up code using AVRTools	6						
	1.6	Advanced modules	7						
	1.7	Questions	7						
_	A .l		_						
2		anced Features	9						
	2.1	Advanced serial (USART) module							
	2.2	Memory utilities module	10						
	2.3	Simple delays module	10						
	2.4	I2C modules	10						
		2.4.1 I2C Master module	11						
		2.4.2 I2C Slave module	11						
	2.5	I2C-based LCD module	12						
	2.6	GPIO pin variables	12						
		2.6.1 Example using GPIO pin macros	13						

iv CONTENTS

		2.6.2	Example	using GPIO pin variables	 	 	. 14
3	FAQ						15
	3.1	Freque	ently Asked	Questions	 	 	. 15
	3.2	Can A	VRTools be	e installed as an Arduino IDE Library?	 	 	. 15
	3.3	Why ca	an't I assig	n pins like pPin01 to a variable?	 	 	. 15
	3.4	Why is	there a se	tGpioPinHigh() macro and a _setGpioPinHigh() macro?	 	 	. 15
	3.5	_setGp	oioPinHigh	() is defined with 8 arguments, but called with 1: how can that work?	 	 	. 16
	3.6	Why is	there a se	tGpioPinHigh() macro and a setGpioPinHighV() function?	 	 	. 16
4	Nam	espace	Index				17
	4.1	Names	space List		 	 	. 17
5	Hiera	archica	l Index				19
	5.1	Class I	Hierarchy		 		. 19
6	Clas	s Index					21
	6.1	Class I	List		 	 	. 21
7	File I	Index					23
	7.1	File Lis	st		 	 	. 23
8	Nam	espace	Documer	ntation			25
	8.1	I2cMas	ster Names	space Reference	 	 	. 25
		8.1.1	Detailed	Description	 	 	. 26
		8.1.2	Enumera	tion Type Documentation	 	 	. 27
			8.1.2.1	I2cBusSpeed	 	 	. 27
			8.1.2.2	I2cPullups	 	 	. 27
			8.1.2.3	I2cSendErrorCodes	 	 	. 27
			8.1.2.4	I2cStatusCodes	 	 	. 28
		8.1.3	Function	Documentation	 	 	. 28
			8.1.3.1	busy	 	 	. 28
			8.1.3.2	pullups	 	 	. 28
			8.1.3.3	readAsync	 	 	. 28
			8.1.3.4	readAsync	 	 	. 29
			8.1.3.5	readSync	 	 	. 30
			8.1.3.6	readSync	 	 	. 30
			8.1.3.7	start	 	 	. 30
			8.1.3.8	stop	 	 	. 30

CONTENTS

		8.1.3.9	writeAsync
		8.1.3.10	writeAsync
		8.1.3.11	writeAsync
		8.1.3.12	writeAsync
		8.1.3.13	writeSync
		8.1.3.14	writeSync
		8.1.3.15	writeSync
		8.1.3.16	writeSync
8.2	I2cSlav	ve Namesp	pace Reference
	8.2.1	Detailed	Description
	8.2.2	Enumera	tion Type Documentation
		8.2.2.1	I2cBusSpeed
		8.2.2.2	I2cPullups
		8.2.2.3	I2cStatusCodes
	8.2.3	Function	Documentation
		8.2.3.1	busy
		8.2.3.2	processl2cMessage
		8.2.3.3	pullups
		8.2.3.4	start
		8.2.3.5	stop
8.3	MemU	tils Names	space Reference
	8.3.1	Detailed	Description
	8.3.2	Function	Documentation
		8.3.2.1	freeRam
		8.3.2.2	freeRamQuickEstimate
8.4	USAR	Γ0 Names	pace Reference
	8.4.1	Detailed	Description
	8.4.2	Function	Documentation
		8.4.2.1	available
		8.4.2.2	flush
		8.4.2.3	peek
		8.4.2.4	read
		8.4.2.5	start
		8.4.2.6	stop
		8.4.2.7	write
		8.4.2.8	write
		8.4.2.9	write

vi CONTENTS

		8.4.2.10 write		 	 	 	 	 40
8.5	USAR	1 Namespace Ref	ference	 	 	 	 	 40
	8.5.1	Detailed Descript	ion	 	 	 	 	 41
	8.5.2	Function Docume	entation	 	 	 	 	 41
		8.5.2.1 availab	le	 	 	 	 	 41
		8.5.2.2 flush .		 	 	 	 	 41
		8.5.2.3 peek		 	 	 	 	 42
		8.5.2.4 read .		 	 	 	 	 42
		8.5.2.5 start		 	 	 	 	 42
		8.5.2.6 stop		 	 	 	 	 42
		8.5.2.7 write		 	 	 	 	 42
		8.5.2.8 write		 	 	 	 	 43
		8.5.2.9 write		 	 	 	 	 43
		8.5.2.10 write		 	 	 	 	 43
8.6	USAR	² Namespace Ref	ference	 	 	 	 	 43
	8.6.1	Detailed Descript	ion	 	 	 	 	 44
	8.6.2	Function Docume	entation	 	 	 	 	 44
		8.6.2.1 availab	le	 	 	 	 	 44
		8.6.2.2 flush .		 	 	 	 	 44
		8.6.2.3 peek		 	 	 	 	 45
		8.6.2.4 read		 	 	 	 	 45
		8.6.2.5 start		 	 	 	 	 45
		8.6.2.6 stop		 	 	 	 	 45
		8.6.2.7 write		 	 	 	 	 45
		8.6.2.8 write		 	 	 	 	 46
		8.6.2.9 write		 	 	 	 	 46
		8.6.2.10 write		 	 	 	 	 46
8.7	USAR	3 Namespace Ref	ference	 	 	 	 	 46
	8.7.1	Detailed Descript	ion	 	 	 	 	 47
	8.7.2	Function Docume	entation	 	 	 	 	 47
		8.7.2.1 availab	le	 	 	 	 	 47
		8.7.2.2 flush		 	 	 	 	 47
		8.7.2.3 peek		 	 	 	 	 48
		8.7.2.4 read .		 	 	 	 	 48
		8.7.2.5 start .		 	 	 	 	 48
		8.7.2.6 stop		 	 	 	 	 48
		8.7.2.7 write		 	 	 	 	 48

CONTENTS vii

			8.7.2.8	write	49
			8.7.2.9	write	49
			8.7.2.10	write	49
	٥.	_			
9			mentation		51
	9.1	•		Class Reference	
		9.1.1		Description	
	9.2			erence	
		9.2.1		Description	
		9.2.2		Enumeration Documentation	
			9.2.2.1	anonymous enum	
			9.2.2.2	anonymous enum	
		9.2.3	Member	Function Documentation	55
			9.2.3.1	command	55
			9.2.3.2	displayBottomRow	55
			9.2.3.3	displayTopRow	55
			9.2.3.4	init	56
			9.2.3.5	readButtons	56
			9.2.3.6	setBacklight	56
			9.2.3.7	setCursor	56
			9.2.3.8	write	56
			9.2.3.9	write	57
			9.2.3.10	write	57
			9.2.3.11	write	57
	9.3	Reade	r Class Re	ference	58
		9.3.1	Detailed	Description	59
		9.3.2	Member	Function Documentation	59
			9.3.2.1	available	59
			9.3.2.2	find	60
			9.3.2.3	find	60
			9.3.2.4	findUntil	60
			9.3.2.5	findUntil	60
			9.3.2.6	peek	61
			9.3.2.7	read	61
			9.3.2.8	readBytes	
			9.3.2.9	readBytes	
			9.3.2.10	readBytesUntil	
				•	

viii CONTENTS

		9.3.2.11	readBytesUntil	32
		9.3.2.12	readFloat	32
		9.3.2.13	readFloat	63
		9.3.2.14	readLine	33
		9.3.2.15	readLong	33
		9.3.2.16	readLong	63
		9.3.2.17	setTimeout	64
9.4	RingBı	uffer Class	Reference	64
	9.4.1	Detailed	Description	35
	9.4.2	Construc	ctor & Destructor Documentation	35
		9.4.2.1	RingBuffer	35
	9.4.3	Member	Function Documentation	35
		9.4.3.1	isEmpty	35
		9.4.3.2	isFull	35
		9.4.3.3	isNotEmpty	35
		9.4.3.4	isNotFull	36
		9.4.3.5	peek	36
		9.4.3.6	pull	36
		9.4.3.7	push	36
9.5	RingBı	ufferT< T,	N, SIZE $>$ Class Template Reference	36
	9.5.1	Detailed	Description	37
	9.5.2	Member	Function Documentation	37
		9.5.2.1	discardFromFront	37
		9.5.2.2	isEmpty	68
				۔ ح
		9.5.2.3	isFull	
		9.5.2.3 9.5.2.4	isFull	68
				68 68
		9.5.2.4	isNotEmpty	68 68 68
		9.5.2.4 9.5.2.5	isNotFull	68 68 68
		9.5.2.4 9.5.2.5 9.5.2.6	isNotEmpty	68 68 68 68
9.6	Serial	9.5.2.4 9.5.2.5 9.5.2.6 9.5.2.7 9.5.2.8	isNotEmpty	68 68 68 69 69
9.6	Serial0 9.6.1	9.5.2.4 9.5.2.5 9.5.2.6 9.5.2.7 9.5.2.8) Class Re	isNotEmpty (a) isNotFull (b) peek (c) pull (c) push (c)	68 68 68 69 69
9.6		9.5.2.4 9.5.2.5 9.5.2.6 9.5.2.7 9.5.2.8 OClass Re	isNotEmpty	68 68 68 69 69 70
9.6	9.6.1	9.5.2.4 9.5.2.5 9.5.2.6 9.5.2.7 9.5.2.8 OClass Re	isNotEmpty	68 68 68 69 69 70
9.6	9.6.1	9.5.2.4 9.5.2.5 9.5.2.6 9.5.2.7 9.5.2.8 Class Re Detailed Member	isNotEmpty	68 68 68 69 69 70 71
9.6	9.6.1	9.5.2.4 9.5.2.5 9.5.2.6 9.5.2.7 9.5.2.8 0 Class Re Detailed Member 9.6.2.1	isNotEmpty isNotFull peek pull push ference Description Function Documentation available	68 68 68 69 69 70 71 71

CONTENTS ix

		9.6.2.5	stop	72
		9.6.2.6	write	72
		9.6.2.7	write	72
		9.6.2.8	write	72
		9.6.2.9	write	73
9.7	Serial1	Class Ref	ference	73
	9.7.1	Detailed [Description	74
	9.7.2	Member F	Function Documentation	75
		9.7.2.1	available	75
		9.7.2.2	peek	75
		9.7.2.3	read	75
		9.7.2.4	start	75
		9.7.2.5	stop	76
		9.7.2.6	write	76
		9.7.2.7	write	76
		9.7.2.8	write	76
		9.7.2.9	write	77
9.8	Serial2	Class Ref	ference	77
	9.8.1	Detailed [Description	78
	9.8.2	Member F	Function Documentation	79
		9.8.2.1	available	79
		9.8.2.2	peek	79
		9.8.2.3	read	79
		9.8.2.4	start	79
		9.8.2.5	stop	80
		9.8.2.6	write	80
		9.8.2.7	write	80
		9.8.2.8	write	80
		9.8.2.9	write	81
9.9	Serial3	3 Class Ref	ference	81
	9.9.1	Detailed [Description	82
	9.9.2	Member F	Function Documentation	83
		9.9.2.1	available	83
		9.9.2.2	peek	83
		9.9.2.3	read	83
		9.9.2.4	start	83
		9.9.2.5	stop	84

CONTENTS

	9	9.9.2.6 write	84
	!	9.9.2.7 write	84
	9	9.9.2.8 write	84
	,	9.9.2.9 write	85
9.10	Writer C	lass Reference	85
	9.10.1	Detailed Description	87
	9.10.2	Member Enumeration Documentation	87
	9	9.10.2.1 IntegerOutputBase	87
	9.10.3	Member Function Documentation	87
	,	9.10.3.1 print	87
	!	9.10.3.2 print	87
	,	9.10.3.3 print	88
	!	9.10.3.4 print	88
	!	9.10.3.5 print	88
	9	9.10.3.6 print	89
	9	9.10.3.7 print	89
	9	9.10.3.8 print	89
	!	9.10.3.9 println	90
	9	9.10.3.10 println	90
	9	9.10.3.11 println	90
	9	9.10.3.12 println	90
	9	9.10.3.13 println	91
	9	9.10.3.14 println	91
	9	9.10.3.15 println	91
	9	9.10.3.16 println	91
	9	9.10.3.17 println	92
	9	9.10.3.18 write	92
	9	9.10.3.19 write	92
	9	9.10.3.20 write	92
	9	9.10.3.21 write	93
10 File	Documer	ntation .	95
		e Reference	
10.1		Detailed Description	
10.2		Digital.h File Reference	
10.2	_	Detailed Description	
		Macro Definition Documentation	
	10.2.2	viacio definition documentation	31

CONTENTS xi

		10.2.2.1	eadGpioPinAnalog	 	 	 	 	97
	10.2.3	Enumerati	n Type Documentation	 	 	 	 	97
		10.2.3.1	2DVoltageReference	 	 	 	 	97
	10.2.4	Function D	ocumentation	 	 	 	 	98
		10.2.4.1	itA2D	 	 	 	 	98
		10.2.4.2	eadA2D	 	 	 	 	98
		10.2.4.3	eadGpioPinAnalogV	 	 	 	 	98
		10.2.4.4	etA2DVoltageReference	 	 	 	 	99
		10.2.4.5	etA2DVoltageReference11V	 	 	 	 	99
		10.2.4.6	etA2DVoltageReference256V	 	 	 	 	99
		10.2.4.7	etA2DVoltageReferenceAREF	 	 	 	 	99
		10.2.4.8	etA2DVoltageReferenceAVCC	 	 	 	 	99
10.3	Arduino	oMegaPins.	File Reference	 	 	 	 	99
	10.3.1	Detailed D	scription	 	 	 	 1	00
10.4	Arduino	Pins.h File	Reference	 	 	 	 1	101
	10.4.1	Detailed D	scription	 	 	 	 1	101
10.5	Arduino	oUnoPins.h	File Reference	 	 	 	 1	101
	10.5.1	Detailed D	scription	 	 	 	 1	102
10.6	GpioPir	nMacros.h F	le Reference	 	 	 	 1	102
	10.6.1	Detailed D	scription	 	 	 	 1	105
	10.6.2	Macro Def	nition Documentation	 	 	 	 1	105
		10.6.2.1	etGpioADC	 	 	 	 1	105
		10.6.2.2	etGpioCOM	 	 	 	 1	105
		10.6.2.3	etGpioDDR	 	 	 	 1	106
		10.6.2.4	etGpioMASK	 	 	 	 1	106
		10.6.2.5	etGpioOCR	 	 	 	 1	106
		10.6.2.6	etGpioPIN	 	 	 	 1	106
		10.6.2.7	etGpioPORT	 	 	 	 1	106
		10.6.2.8	etGpioTCCR	 	 	 	 1	107
		10.6.2.9	pioPin	 	 	 	 1	107
		10.6.2.10	pioPinAnalog	 	 	 	 1	107
		10.6.2.11	pioPinPwm	 	 	 	 1	107
		10.6.2.12	nakeGpioVarFromGpioPin	 	 	 	 1	07
		10.6.2.13	nakeGpioVarFromGpioPinAnalog .	 	 	 	 1	801
		10.6.2.14	nakeGpioVarFromGpioPinPwm	 	 	 	 1	801
		10.6.2.15	eadGpioPinDigital	 	 	 	 1	801
		10.6.2.16	etGpioPinHigh	 	 	 	 1	801

xii CONTENTS

10.6.2.17 setGpioPinLow
10.6.2.18 setGpioPinModeInput
10.6.2.19 setGpioPinModeInputPullup
10.6.2.20 setGpioPinModeOutput
10.6.2.21 writeGpioPinDigital
10.6.3 Enumeration Type Documentation
10.6.3.1 anonymous enum
10.6.4 Function Documentation
10.6.4.1 readGpioPinDigitalV
10.6.4.2 setGpioPinHighV
10.6.4.3 setGpioPinLowV
10.6.4.4 setGpioPinModeInputPullupV
10.6.4.5 setGpioPinModeInputV
10.6.4.6 setGpioPinModeOutputV
10.6.4.7 writeGpioPinDigitalV
10.7 I2cLcd.h File Reference
10.7.1 Detailed Description
10.8 I2cMaster.h File Reference
10.8.1 Detailed Description
10.9 I2cSlave.h File Reference
10.9.1 Detailed Description
10.10InitSystem.h File Reference
10.10.1 Detailed Description
10.10.2 Function Documentation
10.10.2.1 initSystem
10.11MemUtils.h File Reference
10.11.1 Detailed Description
10.12new.h File Reference
10.12.1 Detailed Description
10.13Pwm.h File Reference
10.13.1 Detailed Description
10.13.2 Macro Definition Documentation
10.13.2.1 writeGpioPinPwm
10.13.3 Function Documentation
10.13.3.1 clearTimer0
10.13.3.2 clearTimer1
10.13.3.3 clearTimer2

CONTENTS xiii

10.13.3.4 clearTimer3	22
10.13.3.5 clearTimer4	22
10.13.3.6 clearTimer5	22
10.13.3.7 initPwmTimer0	22
10.13.3.8 initPwmTimer1	23
10.13.3.9 initPwmTimer2	23
10.13.3.1@nitPwmTimer3	23
10.13.3.11initPwmTimer4	23
10.13.3.12nitPwmTimer5	24
10.13.3.13writeGpioPinPwmV	24
10.14Reader.h File Reference	24
10.14.1 Detailed Description	25
10.15RingBuffer.h File Reference	25
10.15.1 Detailed Description	26
10.16RingBufferT.h File Reference	26
10.16.1 Detailed Description	27
10.17SimpleDelays.h File Reference	27
10.17.1 Detailed Description	28
10.17.2 Function Documentation	28
10.17.2.1 delayQuartersOfMicroSeconds	28
10.17.2.2 delayTenthsOfSeconds	29
10.17.2.3 delayWholeMilliSeconds	29
10.18SystemClock.h File Reference	29
10.18.1 Detailed Description	30
10.18.2 Function Documentation	30
10.18.2.1 delay	30
10.18.2.2 delayMicroseconds	30
10.18.2.3 delayMilliseconds	30
10.18.2.4 initSystemClock	31
10.18.2.5 micros	31
10.18.2.6 millis	31
10.19USART0.h File Reference	31
10.19.1 Detailed Description	34
10.19.2 Enumeration Type Documentation	34
10.19.2.1 UsartSerialConfiguration	34
10.20USART1.h File Reference	37
10.20.1 Detailed Description	39

xiv CONTENTS

10.20.2 Enumeration Type Documentation
10.20.2.1 UsartSerialConfiguration
10.21USART2.h File Reference
10.21.1 Detailed Description
10.21.2 Enumeration Type Documentation
10.21.2.1 UsartSerialConfiguration
10.22USART3.h File Reference
10.22.1 Detailed Description
10.22.2 Enumeration Type Documentation
10.22.2.1 UsartSerialConfiguration
10.23USARTMinimal.h File Reference
10.23.1 Detailed Description
10.23.2 Function Documentation
10.23.2.1 initUSART0
10.23.2.2 initUSART1
10.23.2.3 initUSART2
10.23.2.4 initUSART3
10.23.2.5 receiveUSART0
10.23.2.6 receiveUSART1
10.23.2.7 receiveUSART2
10.23.2.8 receiveUSART3
10.23.2.9 releaseUSART0
10.23.2.10 elease USART1
10.23.2.11releaseUSART2
10.23.2.12releaseUSART3
10.23.2.13transmitUSART0
10.23.2.14transmitUSART0
10.23.2.15transmitUSART1
10.23.2.1@transmitUSART1
10.23.2.17transmitUSART2
10.23.2.18transmitUSART2
10.23.2.19transmitUSART3
10.23.2.20transmitUSART3
10.24Writer.h File Reference
10.24.1 Detailed Description

Index

161

Chapter 1

AVRTools: A Library for the AVR ATmega328 and ATmega2560 Microcontrollers

1.1 Overview

This library provides an Arduino-like simple-to-use interface to the AVR ATmega328 and ATmega2560 microcontrollers without the bloat and slowness of the official Arduino libraries.

AVRTools is an attempt to provide the convenience of the Ardiuno library interface while embracing the fundametal C/C++ philosopy of "you don't pay for what you don't use" and "assume the programmer knows what he or she is doing"

Like the Arduino libraries, AVRTools allows you to refer to pins on an Arduino via simple names such as pPin07 for digital pin 7 or pPinA03 for analog pin 3. Unlike the Arduino libraries, these names are pure macros so that setGpioPinHigh(pPin12) always translates directly into PORTB = (1 << 4) on an Arduino Uno. Similar macros are available for conveniently naming any pin on an ATmega328 or ATmega2560 and provide easy and efficient access to all the functionality available on that pin (digital I/O, analog-to-digital conversion, PWM, etc). AVRTools provides functions to access the primary functionality of the ATmega328 and ATmega2560 microcontrollers.

On the other hand, because "you don't pay for what you don't use", when using AVRTools nothing is initialized or configured unless you explicitly do it. If you need analog inputs, then you must explicitly initialize the analog-to-digital subsystem before reading any analog pins. If you need an Arduino-style system clock (for functions like delay () or millis()), then you must explicitly start a system clock. AVRTools provides functions to do any necessary initialization, but the programmer must explicitly call these function to perform the initialization.

Similarly, because AVRTools "assumes the programmer knows what he or she is doing," it doesn't conduct a lot of checks to ensure you don't do something stupid. For example when you set the output value of a digital pin using the Arduino library function digitalWrite(), it checks if that pin is currently configured for PWM and if it is, it automatically turns off PWM-mode before writing to the pin. The equivalent of digitalWrite() in the AVRTools library, writeGpioPinDigital() doesn't do that: it assumes that if the programmer previously used the pin in PWM mode that he or she remembered to turn off PWM mode before using the pin digitally. Assuming the programmer knows what he or she is doing allows the functions in AVRTools to be much faster than their Arduino library counterparts. For example, a call to the Arduino function digitalWrite() takes about 70 cycles; a call to the equivalent AVRTools function writeGpioPinDigital() takes 1 cycle (it's actually a macro in AVRTools).

1.2 Audience

If you are an Arduino programmer, you may want to try out AVRTools if:

- · You are comfortable programming the Arduino Uno and Mega directly using the the avr-gcc toolset.
- · You are frustrated by the slowness of even simple functions in the official Arduino libraries.
- Your code doesn't fit into the available memory because the official Arduino libraries are so big.

If you are an ATmega328 or ATmega2560 microcontroller programmer, you may want to try out AVRTools if:

- · You are secretly jealous of how easy and convenient it is to use the Arduino libraries.
- · You wish you could bind together DDRs, PORTs, and PINs so you didn't have to write code like:

• You wish you could use a function-like syntax to switch input/output mode, read a pin, or set a pin high or low but still have the compiler generate single-cycle in and out instructions.

If you fit into either category, then you should read further.

1.3 AVRTools is not...

AVRTools is not a general purpose AVR programming library. I use the Arduino Uno and the Arduino Mega in my projects, and I wrote AVRTools to support these specific needs. There is conditional code throughout the implementation that is tailored to the ATmega328 and ATmega2560 microcontrollers. Additional conditional code could be added to create corresponding implementations for other AVR processors in the AT-family, but I haven't done it. Furthermore, the code assumes the microcontrollers are running at 16 MHz. I believe the only place this matters is in clock, timing, and delay related functions, but I haven't tested the code at any CPU speed other than 16 MHz.

Finally, the AVRTools interface is designed to meet my needs and coding style. That means the interfaces are designed in ways which may not reflect your usage. A particular example of this is the I2C module, which is designed to support the I2C idioms I use in my projects and is significantly different from the I2C interface offered by the Arduino libraries.

AVRTools is a C++ library. People may say that it is crazy to use C++ to program a microcontroller because C++ adds bloat and overhead, because behind your back the C++ compiler adds lots of code to make unnecessary copies, manage heap objects, handle exceptions, etc. C++, much like C, is a language that rewards programmers who know what they are doing and punishes those who don't. One can use C++ because it is a "better C" and use C++ features without incurring performance penalties or code bloat. For example, AVRTools uses namespaces to compartmentalize functionality into logical units and avoid name clashes; AVRTools also uses classes in a few cases where objects provide the most natural and convenient implementation of a capability (for example, certain advanced output classes such as USARTO or I2cLcd; note that AVRTools also provides a minimalistic USART interface using functions instead of classes, because different needs call for different tools).

1.4 Quick Tour of AVRTools

This section provides an overview of how AVRTools works, starting with the foundational elements and then summarizing the modules that provide interfaces into the major hardware subsystems of the ATmega328 and ATmega2560 microcontrollers.

1.4 Quick Tour of AVRTools 3

1.4.1 Foundational Elements and Concepts

The foundation of the AVRTools library consists of a collection of macros that enable you to refer to "pins" on the chips using a single name that can be used to switch input/output mode, read, or write a pin. This single name provides access, as appropriate, to the DDRx, PORTx, PINx registers and also the specific pin number. For pins that support analog-to-digital conversion, the single name also provides access the analog channel associated with the pin. For pins that support PWM, the single name also provides access to control and compare registers and bits needed to configure and control the PWM functionality of that pin.

This is all done via preprocessor macros, both for the single pin name mechanism and for the "functions" that make use of that single pin name. This means that access to any pin-related functionality is as fast as possible, designed specifically so that the avr-gcc compiler will emit single-cycle in, out, sbi, cbi, sbic, or sbis instructions for such operations. However, the complex internal representation of the macros means that the pin names are strictly constant and can only be passed to the specialized macro-functions designed to manipulate them. Although they may look and feel like simple constants, pin names cannot be assigned to variables, or passed to ordinary C/C++ functions (however, see the GPIO Pin Variables section in the Advanced Features section for a way to create and use variables for the GPIO pins). The AVRTools library does include macro-functions to extract any of the components related to a pin name so that users can access and manipulate the individual components as needed.

1.4.2 What you need to know about pin name macros

To access the pin names of the Arduino Uno or Mega, you only need to include the file "ArduinoPins.h". It will automatically detect whether you are compiling for Uno or Mega and it will correspondingly define the macros pPinNN (NN = 00 to 13 for Arduino Uno, NN = 00 to 53 for Mega) for digital ports and macros pPinAnn (nn = 00 to 07 for Uno, nn = 00 to 15 for Mega) for the analog ports. These correspond directly to the labelled pins on the Arduino boards. You can use these pin names to define your own macros:

While you cannot assign these to pin names to variables or pass them to ordinary functions, AVRTools provides a large collection of macro-functions to operate on the pin names. These include:

- setGpioPinModeOutput (pin) Enable the corresponding DDRn bit
- setGpioPinModeInput(pin) Clear the corresponding DDRn bit
- setGpioPinModeInputPullup(pin) Clear the corresponding DDRn and PORTn bits
- readGpioPinDigital(pin) Return the corresponding PINn bit
- writeGpioPinDigital(pin, value) Write a 0 or 1 to the corresponding PORTn bit
- setGpioPinHigh (pin) Set the corresponding PORTn bit
- setGpioPinLow(pin) Clear the corresponding PORTn bit
- readGpioPinAnalog (pin) Read an analog value from the corresponding ADC channel
- writeGpioPinPwm(pin, value) Set the corresonding PWM output level for that pin

Most of these macros are automatically defined when you include "ArduinoPins.h", although to define the last two you need to include "Analog2Digital.h" and "Pwm.h" (respectively). These macros allow you to write code such as:

```
// Assuming everything has been initialized properly before this point
setGpioPinModeOutput( THE_RED_LED );
setGpioPinLow( THE_RED_LED );
setGpioPinModeOutput( THE_GRN_LED );
setGpioPinModeOutput( THE_GRN_LED );
if ( readGpioPinLow( THE_GRN_LED );
}
if ( readGpioPinAnalog( POTENTIOMETER ) < 100 )
{
    setGpioPinHigh( THE_RED_LED );
}
else
{
    setGpioPinHigh( THE_GRN_LED );
}</pre>
```

If you are working directly with an AVR ATmega328 or ATmega2560, you can define pin macros yourself by including "GpioPinMacros.h" (this file is automatically included for you when you include "ArduinoPins.h" if you are working on Arduinos) and using one of three pin naming macros:

- GpioPin(letter, number) An ordinary pin located on bank letter and bit number; for example the macro GpioPin(B, 5) corresponds to pin PB5.
- GpioPinAnalog(letter, number, channel) An ADC capable pin on bank letter and bit number with ADC channel, e.g., GpioPinAnalog(C, 5, 5) for Atmega328 pin PC5/ADC5.
- GpioPinPwm(letter, number, timer, channel) A PWM capable pin on bank letter and bit number with timer and channel used to select the appropriate OCRn[A/B], TCCRnA registers, and COMn[A/B]1 bits needed to configure the PWM settings, e.g., GpioPinPwm(B, 2, 1, B) for ATmega328 pin PB2/OC1B.

So for example, pin 11 on the Arduino Uno, which corresponds to ATmega328 pin B3 which is PWM capable using OC2A, would be defined as follows:

```
#define pPin11 GpioPinPwm(B, 3, 2, A)
```

1.4.3 The core modules

In addition to the macro-based pin naming and access system discussed above, there are seven additional elements that make up the core of AVRTools and provide access to basic functional elements of the ATmega328 and ATmega2560 microcontrollers. Together, these provide an Arduino-like interface to the microcontroller features. Five of the seven modules directly interface to microcontroller capabilities:

- · System initialization module
- · System clock module
- · Analog-to-Digital module
- · PWM module
- · Minimal USART modules

Two of the seven modules supplement the C++ implementation provided by the avr-gcc toolset:

- ABI module (support for the C++ ABI not included in the avr-gcc distribution)
- New module (implementation for operator new and operator delete)

Brief descriptions of these modules follow.

1.4 Quick Tour of AVRTools 5

1.4.3.1 System initialization module

This module provides a single function that puts the microcontroller in a clean, known state. To use it include the header file InitSystem.h and link against InitSystem.cpp. These files provides a single function:

```
void initSystem();
```

The initSystem() function clears any bootloader settings, clears all timers, and turns on interrupts. This should be the first function your code calls at start up.

1.4.3.2 System clock module

This module provides a system clock functionality similar to that in the Arduino library. To employ this functionality include the header file SystemClock.h and link against SystemClock.cpp. Some of key functions provided by this module include:

```
void initSystemClock();
unsigned long millis();
void delay( unsigned long ms );
```

Note that unlike the Arduino libary, you must explicitly initialize the clock functionality by calling initSystemClock(). This module also provides additional functions providing a richer interface to the system clock.

1.4.3.3 Analog-to-Digital module

This module provides access to the analog read capabilities of the ATmega328 and ATmega2560. To employ this functionality include the header file Analog2Digital.h and link against Analog2Digital.cpp. The principle functions provided by this module include:

```
void initA2D();
void turnOffA2D();
readGpioPinAnalog( avrPort );  /* implemented as a macro */
```

You must initialize the analog-to-digital subsystem by calling initA2D() before attempting to read any analog pins.

1.4.3.4 PWM module

This module provides access to the PWM features available on certain ATmega328 and ATmega2560 pins. To employ this functionality include the header file Pwm.h and link against Pwm.cpp. The principle functions provided by this module include:

```
void initPwmTimer1();
void initPwmTimer2();
void clearTimer1();
void clearTimer2();
writeGpioPinPwm( avrPort, value );  /* implemented as a macro */
```

Depending on which pins you wish to employ in PWM mode, you should initialize the appropriate timers by calling either initPwmTimer1() or initPwmTimer2() before writing to the pin in PWM mode. This module also includes additional functions to access the extended PWM capabilities of the ATmega2560. The philosophical difference between the standard Arduino library and AVRTools is evident in this module: none of these function try to deduce which timers need to be turned on for any given pin, because that would require adding extra code and look-up tables. Instead AVRTools assumes the programmer will check the appropriate references to determine which timers correspond to the pins they want to use in PWM mode, and will use that knowledge to initialize the appropriate timers.

1.4.3.5 Minimal USART modules

This module provides a simple and minimal means of reading and writing from the USARTs available on the ATmega328 and ATmega2560. To employ this functionality, you must include the header file USARTMinimal.h and link against the file USARTMinimal.cpp. The principle functions for accessing the USARTs are:

```
void initUSART0( unsigned long baudRate );
void transmitUSART0( unsigned char data );
void transmitUSART0( const char* data );
unsigned char receiveUSART0();
void releaseUSART0();
```

To make use of the USART capability on USART0, first call initUSART0 () to initialize the USART. Then you can use transmitUSART0 () and receiveUSART0 () functions to communicate on USART0. When you are done with USART0 and want to use pins 0 and 1 for other purposes, call releaseUSART0 (). Similar functions are provided to access the other three USARTs available on the ATmega2560. If you want more advanced serial capabilities, checkout the class Serial0 in USART0.h.

1.4.3.6 ABI module

You only need this module if building your code produces link errors regarding missing symbols with strange names like __cxa_XXX (where XXX is some unusual string). In that case, simply link your code against abi.cpp. These are symbols related to the way the avr-gcc C++ compiler implements abstract virtual functions.

1.4.3.7 New module

This module implements operator new and operator delete. You only need this if you use new and delete to manage objects on the heap. AVRTools itself does not make any use of heap objects or operators new or delete.

1.5 Sample start up code using AVRTools

You can use AVRTools to create an environment that is very similar to the standard Arduino environment. The following sample code illustrates how to do this. The sample code reads a potentiometer and sets both a digital pin and a PWM pin based on the value of the potentiometer.

```
#include "AVRTools/ArduinoPins.h"
#include "AVRTools/InitSystem.h"
#include "AVRTools/SystemClock.h"
#include "AVRTools/Analog2Digital.h"
#include "AVRTools/Pwm.h
                      pPinA01
pPin11
pPin04
#define pPot
#define pPwmLed
#define pLed
init main()
    initSystem();
   initSystemClock();
    initPwmTimer2();
   initA2D();
   setGpioPinModeOutput( pLed );
   setGpioPinModeOutput( pPwmLed );
   setGpioPinModeInput( pPot );
        int i = readGpioPinAnalog( pPot ) / 4;
```

1.6 Advanced modules 7

```
writeGpioPinPwm( pPwmLed, i );

if ( i > 127 )
{
    setGpioPinHigh( pLed );
}
else
{
    setGpioPinLow( pLed );
}

delay( 100 );
}
```

1.6 Advanced modules

AVRTools also includes modules that provide access to more complex microcontroller capabilities and provide advanced services. These modules include both master and slave I2C modules (transmitting and receiving via interrupts), a module for driving an LCD display via I2C, a module for reporting memory utilization, and a module for more advanced serial input and output of various numerical types and strings. Information on these modules can be found in the Advanced Features sections of the documentation.

1.7 Questions

If you have questions, please check out the FAQ.

8	AVRTools: A Library for the AVR ATmega328 and ATmega2560 Microcontrollers

Chapter 2

Advanced Features

The AVRTools library includes four more advanced features:

- · Advanced serial (USART) module
- · Memory utilities module
- · Simple delays module
- I2C modules
- · I2C-based LCD module
- GPIO pin variables

These features provide functionality that is different from that provided by the Arduino libraries, either in the design of their interface or in the underlying implementation, or both. While the core modules of the AVRTools library are basically independent and can be used individually, these advanced features depend in various ways upon the core modules and, sometimes, each other. These dependencies are highlighted in the corresponding sections.

2.1 Advanced serial (USART) module

The advanced USART module provides two different high-level interfaces to USART0 hardware available on the Arduino Uno (ATmega328) and the Arduino Mega (ATmega2560). These provide serial input and output that is flexible, buffered, and asynchronous by exploiting the interrupts that are associated with the USART0 hardware. This means the transmit functions return immediately after queuing data in the output buffer for transmission, and the actual transmission happens asynchronously while your code continues to execute. Similarly, data is received asynchronously and placed into the input buffer for your code to read at its convenience.

If you try to queue more data than the transmit buffer can hold, the write functions will block until there is room in the buffer (as a result of data being transmitted). The receive buffer, however, will overwrite if it gets full. You must clear the receive buffer by reading it regularly when receiving significant amounts of data. The sizes of the transmit and receive buffers can be set at compile time via macro constants.

Two interfaces are provided. The first is provided in namespace USART0 and is a functional interface that makes use of the buffering and asynchronous transmit and receive capabilities of the microcontrollers. However, USART0 is limited to transmitting and receiving byte and character streams. Think of USART0 as a buffered version of the receiveUSART0() and transmitUSART0() functions provided by the Minimal USART modules.

The second interface is Serial0. Serial0 is the most advanced and capable interface to the USART0 hardware. Serial0 provides a object-oriented interface that includes the ability to read and write numbers of various types and in various

10 Advanced Features

formats, all asynchronously. Serial0 is implemented using USART0, so you may mix the use of USART0 and Serial0 interfaces in your code (although it is not recommended).

To use these the advanced serial capabilities, include the file USART0.h in your source code and link against the file USART0.cpp.

Note

The advanced serial module is incompatible with the minimal interface to USART0. If you link against the file USART0.cpp (even if you don't actually use Serial0 or USART0), do *not* call initUSART0() or releaseUSART0(); there is no point in any case because the receiveUSART0() and transmitUSART0() functions won't work. You may, however, use the minimal interface to access USART1, USART2, and/or USART3 while simultaneously using Serial0 and USART0 to access USART0.

Use of the timeout feature in Serial0 or USART0 requires linking against SystemClock.cpp and calling initSystemClock() from your start-up code.

If you are coding for the ATmega2560, you can also use USART1, USART2, and USART3 and/or Serial1, Serial2, and Serial3 to access the USART1, USART2, and USART3 hardware available on the ATmega2560. These work just like USART0 and Serial0. Again, if you link against USART1.cpp, USART2.cpp, or USART3.cpp then you cannot use the corresponding minimal interfaces for USART1, USART2, and USART3, and calling initUSART1() or releaseUSART1() (or their corresponding equivalents for the other USARTs) will put that USART in an inoperable configuration.

2.2 Memory utilities module

The Memory Utilities module provides functions that report the available memory in SRAM. These help you gauge in real-time whether your application is approaching memory exhaustion.

2.3 Simple delays module

The Simple Delays module provides simple delay functions that do not involve timers or interrupts. These functions simply execute a series of nested loops with known and precise timing.

These functions are all implemented directly in assembler to guarantee cycle counts. However, if interrupts are enabled, then the delays will be at least as long as requested, but may actually be longer.

2.4 I2C modules

These two modules provide two different interfaces to the two-wire serial interface (TWI) hardware of the Arduino Uno (ATmega328) and Arduino Mega (ATmega2560), providing a high-level interface to I2C protocol communications. There are two different modules corresponding to whether your application will function as a Master (as per the I2C protocol), or as a Slave.

Note

AVRTools does not support application that function both as I2C Masters and I2C Slaves. The two I2C modules provided by AVRTools are incompatible and cannot be mixed.

Both modules offer interfaces that are buffered for both input and output which operate using interrupts associated with the TWI hardware. This means the asynchronous transmit functions return immediately after queuing data in the output buffer for transmission and the transmission happens asynchronously, using dedicated TWI hardware. Similarly, data is received asynchronously and placed into the input buffer.

2.4 I2C modules 11

2.4.1 I2C Master module

The I2C Master module provides I2C-protocol-based interface to the TWI hardware that implements the Master portions of the I2C protocol. The interfaces are buffered for both input and output and operate using interrupts associated with the TWI hardware. This means the asynchronous transmit functions return immediately after queuing data in the output buffer for transmission and the transmission happens asynchronously, using dedicated TWI hardware. Similarly, data is received asynchronously and placed into the input buffer.

The interface offered by the I2C Master module is designed around the normal operating modes of the I2C protocol. From a Master device point of view, I2C communications consist of sending a designated device a message to do something, and then either:

- doing nothing because no further action required on the Master's part (e.g., telling the designated device to shutdown)
- transmitting additional data needed by the designated device (e.g., you told the designated device to store some data, next you need to send the data)
- receiving data from the designated device (e.g., telling the designated device to report the current temperature or to read back some data from its memory)

For very simple devices, the receipt of the message itself can suffice to tell it to do something. More commonly, the instruction to the designated device consists of a single byte that passes a "register address" on the device. It is called a register address because it often corresponds directly to a memory register on the device. But it is best to think of it as an instruction code to the designated device (e.g., 0x01 = report the temperature; 0x02 = set the units to either degrees F or degrees C (depending on additional data sent by the Master); 0x03 = report the humidity; etc.)

The interface offered by the I2C Master module conforms directly to the above I2C paradigm. For convenience, the interface functions come in both synchronous and asynchronous versions. The synchronous versions simply call the asynchronous versions and block internally until the asynchronous operations are complete.

Note

The I2C Master module is incompatible with the I2C Slave module: you must use and link against only one of the two modules.

2.4.2 I2C Slave module

The I2C Slave module provides I2C-protocol-based interface to the TWI hardware that implements the Slave portions of the I2C protocol. The interfaces are buffered for both input and output and operate using interrupts associated with the TWI hardware. This means the functions return immediately after queuing data for transmission and the transmission happens asynchronously, using the dedicated TWI hardware. Similarly, data is received asynchronously and placed into a buffer.

The interface offered by the I2C Slave module is designed designed around the normal operating modes of the I2C protocol. From a Slave device point of view, I2C communications consist of receiving a message from the Master telling it to do something, and in response:

- Processing the message and taking whatever action is appropriate.
- If that action includes returning data to the Master, queuing the data for transmission.

The interface offered by the I2C Slave module conforms directly to the above I2C paradigm.

12 Advanced Features

2.5 I2C-based LCD module

The I2C-base LCD module provides a high-level interface to an LCD offering an I2C interface. The most common variant of this is HD44780U controlled LCD driven by an MCP23017 that offers an I2C interface (such LCDs are available from Adafruit and SparkFun). This module allows you to write to the LCD much as it if were a serial device and includes the ability to write numbers of various types in various formats. It also lets you detect button presses on the 5-button keypad generally assocaited with such devices.

Note

The I2C-base LCD module requires the I2C Master module.

2.6 GPIO pin variables

There is sometimes a desire to assign GPIO pins to variables. Unfortunately, the pin name macros defined for you when you include ArduinoPins.h or that you define yourself using GpioPin(), GpioPinAnalog(), or GpioPinPwm() cannot be assigned to variables or used for anything other than passing them to the specialize macro functions designed to handle them. This is normally not a big limitation: the use of GPIO pins is generally encapsulated in functions or classes that function much like software drivers, hiding the pins from the rest of the application. Treating the pins as macro constants usually works well in such situations. However, there do sometimes arise situations in which it would be convenient to be able to assign GPIO pins to variables and manipulate GPIO pins via those variables.

AVRTools provides a way to convert GPIO pins macros into variables and provides corresponding functions for manipulating those variables. However, this convenience comes at a very significant cost for two reasons.

The first reason is that functions that manipulate AVR I/O registers via variables are inherently slower than those that manipulate them as constants. When using the GPIO pin macros, most operations map directly to in and out AVR assembler instructions. However, due to the limitations of these instructions, when using variables to pass the pins, the compiler must use slower ld and st instruction to access the I/O registers (for more on this issue, see the section in the AVR-GCC FAQ). In addition, when using variables and function calls the bit-shifts needed to generate suitable masks have to be generated at run-time (often using loops) instead of at compile-time.

The second reason is that the variables that store GPIO pins are rather large. On the AVR hardware architecture, manipulating a GPIO pin requires knowing three different I/O registers (DDRn, PORTn, and PINn) and a bit number. Access an analog pin requires a corresponding analog-to-digital channel number. Manipulating a PWM pin requires knowing two additional registers (OCRn[A/B] and TCCRnA) and another bit number (COMn[A/B]1). So a general-purpose variable representing a GPIO pin has to store all of these registers, bit numbers, and channel numbers. It is possible to create smaller GPIO pin variables by encoding information and using look-up tables. The costs are still there, and it is simply a choice of where to pay them. In AVRTools, the choice is to implement "heavy" variables and avoid look-up tables and encoding schemes.

In AVRTools, GPIO pin variables have type GpioPinVariable, which is a class defined in GpioPinMacros.h (recall that this file is automatically included by ArduinoPins.h). There are also three macros that you can use to initialize GPIO pin variables of type GpioPinVariable. The three are: makeGpioVarFromGpioPin(), makeGpioVarFromGpioPinAnalog(), and makeGpioVarFromGpioPinPwm(). These are used like this:

```
GpioPinVariable    pinA( makeGpioVarFromGpioPin( pPin10 ) );
GpioPinVariable    pinB( makeGpioVarFromGpioPinAnalog( pPinA01 ) );
GpioPinVariable    pinC = makeGpioVarFromGpioPinPwm( pPin03 );
GpioPinVariable    pinArray[3];
pinArray[0] = pinA;
pinArray[1] = pinB;
pinArray[2] = makeGpioVarFromGpioPin( pPin07 );
```

Which macro you choose depends upon what functionality of the GPIO pin you plan to access: you are free to use makeGpioVarFromGpioPin() with an analog pin macro (e.g., pPinA01) if you just plan to use the resulting variable

2.6 GPIO pin variables

digitally, but if you plan to use the analog capabilities of the GPIO pin, you must use makeGpioVarFromGpioPinAnalog() to initialize the variable. Similarly for PWM functionality.

Once you've created GPIO pin variables using the above macros, these variables can be assign and passed to functions as needed. To use these GPIO pin variables, there are special function analogs of the pin manipulation macros. These have the same names as the pin manipulation macros, except with a "V" appended:

Macro Version	Function Version	Purpose
setGpioPinModeOutput(pinMacro)	setGpioPinModeOutputV(const	Enable the corresponding DDRn bit
	GpioPinVariable& pinVar)	
setGpioPinModeInput(pinMacro)	setGpioPinModeInputV(const	Clear the corresponding DDRn bit
	GpioPinVariable& pinVar)	
setGpioPinModeInputPullup(setGpioPinModeInputPullupV(const	Clear the corresponding DDRn and
pinMacro)	GpioPinVariable& pinVar)	PORTn bits
readGpioPinDigital(pinMacro)	readGpioPinDigitalV(const	Return the corresponding PINn bit
	GpioPinVariable& pinVar)	
writeGpioPinDigital(pinMacro, value	writeGpioPinDigitalV(const	Write a 0 or 1 to the corresponding
)	GpioPinVariable& pinVar, bool value	PORTn bit
)	
setGpioPinHigh(pinMacro)	setGpioPinHighV(const	Set the corresponding PORTn bit
	GpioPinVariable& pinVar)	
setGpioPinLow(pinMacro)	setGpioPinLowV(const	Clear the corresponding PORTn bit
	GpioPinVariable& pinVar)	
readGpioPinAnalog(pinMacro)	readGpioPinAnalogV(const	Read an analog value from the
	GpioPinVariable& pinVar)	corresponding ADC channel
writeGpioPinPwm(pinMacro, value)	writeGpioPinPwmV(const	Set the corresonding PWM output
	GpioPinVariable& pinVar, uint8_t	level for that pin
	value)	

Note

GPIO pin variables can only be passed to the function versions; GPIO pin variables cannot be passed to the macro versions. Similarly, GPIO pin macros cannot be passed to the function versions.

To illustrate how GPIO pin variables can be used, here are two versions of a trivial program, the first using the macros, and the second using variables.

2.6.1 Example using GPIO pin macros

Compiled for an Arduino Uno, the following program is 1,978 bytes.

```
#include "AVRTools/ArduinoPins.h"
#include "AVRTools/InitSystem.h"
#include "AVRTools/SystemClock.h"
#define pRed
                    pPin07
pPin04
#define pYellow
#define pGreen
int main()
   initSystem();
   initSystemClock();
   setGpioPinModeOutput( pGreen );
   setGpioPinModeOutput( pYellow );
   setGpioPinModeOutput( pRed );
    setGpioPinHigh( pGreen );
   setGpioPinHigh( pYellow );
    setGpioPinHigh( pRed );
```

14 Advanced Features

```
delayMilliseconds( 2000 );
setGpioPinLow( pGreen );
setGpioPinLow( pYellow );
setGpioPinLow( pRed );
while ( 1 )
{
    delayMilliseconds( 1000 );
    setGpioPinLow( pRed );
    setGpioPinHigh( pGreen );
    delayMilliseconds( 1000 );
    setGpioPinLow( pGreen );
    setGpioPinLow( pGreen );
    setGpioPinHigh( pYellow );
    delayMilliseconds( 1000 );
    setGpioPinLow( pYellow );
    setGpioPinLow( pYellow );
    setGpioPinLow( pYellow );
    setGpioPinLow( pYellow );
}
```

2.6.2 Example using GPIO pin variables

Compiled for an Arduino Uno, the following program is 2,456 bytes (478 bytes larger than the macro version) and uses an additional 45 bytes of SRAM compared to the macro version.

```
#include "AVRTools/ArduinoPins.h"
#include "AVRTools/InitSystem.h"
#include "AVRTools/SystemClock.h"
#define pRed
                       pPin10
                       pPin07
#define pYellow
                      pPin04
#define pGreen
int main()
    initSystem();
   initSystemClock();
   GpioPinVariable pins[3];
   pins[0] = makeGpioVarFromGpioPin( pRed );
   pins[1] = makeGpioVarFromGpioPin( pYellow );
   pins[2] = makeGpioVarFromGpioPin( pGreen );
    for ( int i = 0; i < 3; i++ )
        setGpioPinModeOutputV( pins[i] );
        setGpioPinHighV( pins[i] );
    delayMilliseconds( 2000 );
    for ( int i = 0; i < 3; i++ )
        setGpioPinLowV( pins[i] );
    while (1)
       delayMilliseconds( 1000 );
        setGpioPinLowV( pins[i++] );
       setGpioPinHighV( pins[i] );
```

Chapter 3

FAQ

3.1 Frequently Asked Questions

- Can AVRTools be installed as an Arduino IDE Library?
- · Why can't I assign pins like pPin01 to a variable?
- Why is there a setGpioPinHigh() macro and a _setGpioPinHigh() macro?
- _setGpioPinHigh() is defined with 8 arguments, but called with 1: how can that work?
- Why is there a setGpioPinHigh() macro and a setGpioPinHighV() function?

3.2 Can AVRTools be installed as an Arduino IDE Library?

No, AVRTools is designed to replace the Arduino Library. It is designed for use directly with the avr-gcc compiler (the same compiler used by the Arduino IDE).

3.3 Why can't I assign pins like pPin01 to a variable?

Because pin names like pPin01 are actually complex macros that expand to a comma separated list of other macros. The macro pin names can only be understood and used by the function macros specifically designed to use them. This is explained in greater detail in What you need to know about pin name macros.

If you really need GPIO pin variables, there is a way to do it. See the section on GPIO pin variables. Note in particular that GPIO pin variables come with high costs, both in speed and memory requirements.

3.4 Why is there a setGpioPinHigh() macro and a _setGpioPinHigh() macro?

Getting maximum efficiency from the GPIO pin name macros while making them easy to use requires a series of recursive macro expansions. To make this work, it is essential to force rescanning of macro expansions, and nested macro function calls is a practical way to force macro rescanning. So all of the GPIO pin related macro functions call a helper macro function that has the same name except for a prepended underscore.

The helper macro functions are an internal implementation detail, and that is why they are not formally documented.

16 FAQ

3.5 _setGpioPinHigh() is defined with 8 arguments, but called with 1: how can that work?

Someone has been reading header files. It works because of the magic of the C/C++ preprocessor rescanning rules. The rescanning rules are described in 6.10.3.4 of the ISO Standard for C (the same rules apply to C++). It requires lawyer-like abilities to completely comprehend the full implications of this short paragraph. However, the gist of it is that if you have the following three macros:

```
#define BAR(X,Y) (X+Y)
#define FOO(X) BAR(X)
#define A B,C
```

And if you then call FOO(A) in your code, the preprocessor executes the following steps:

- first FOO (A) is expanded to BAR (A)
- next BAR (A) is expanded to BAR (B, C)
- then finally BAR (B, C) is expanded to (B+C).

This preprocessor rescanning logic is what powers all of the pin macro magic, not just setGpioPinHigh().

3.6 Why is there a setGpioPinHigh() macro and a setGpioPinHighV() function?

All of the GPIO pin related "functions" come in two versions. The versions that do not end in a "V" are actually macros and work with the GPIO pin name macros (e.g, pPin01). The versions that end with a "V" are true functions and work with GPIO variables. See GPIO pin variables.

Chapter 4

Namespace Index

4.1 Namespace List

Here is a list of all documented namespaces with brief descriptions:

I2cMaste	er	
	This namespace bundles the I2C-protocol-based interface to the TWI hardware. It provides logical cohesion for functions implement the Master portions of the I2C protocol and prevents namespace collisions	25
I2cSlave		
	This namespace bundles the I2C-protocol-based interface to the TWI hardware. It provides logical cohesion for functions implement the Slave portions of the I2C protocol and prevents namespace collisions	34
MemUtils		
	A namespace providing encapsulation for functions that report the available memory in SRAM	37
USARTO		
	This namespace bundles a high-level buffered interface to the USART0 hardware. It provides logical cohesion and prevents namespace collisions	37
USART1		
	This namespace bundles a high-level buffered interface to the USART1 hardware. It provides logical cohesion and prevents namespace collisions	40
USART2		
	This namespace bundles a high-level buffered interface to the USART2 hardware. It provides logical cohesion and prevents namespace collisions	43
USART3		
	This namespace bundles a high-level buffered interface to the USART3 hardware. It provides logical cohesion and prevents namespace collisions	46

18 Namespace Index

Chapter 5

Hierarchical Index

5.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

GpioPinVariable	
Reader	. 58
Serial0	. 69
Serial1	. 73
Serial2	
Serial3	
RingBuffer	. 64
$RingBufferT < T, N, SIZE > \ldots \ldots \ldots \ldots \ldots \ldots \ldots \ldots \ldots $	
Writer	
I2cLcd	. 52
Serial0	
Serial1	
Serial2	. 77
Serial3	81

20 **Hierarchical Index**

Chapter 6

Class Index

6.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

GpioPin\	Variable	
	This class defines a type that can encode a GPIO pin as a variable. Read the section on GPIO Pin Variables to understand how to use this class	51
I2cLcd		
	This class provides a high-level interface via I2C to an LCD such as those offered by AdaFruit and SparkFun. Specifically, it communicates via I2C with an MCP23017 that drives an HD44780U controlling an LCD. It also lets you detect button presses on the 5-button keypad generally assocaited with such devices	52
Reader		
	This is an abstract class defining a generic interface to read numbers and strings from a sequential stream of bytes (such as a serial device)	58
RingBuff	er e	
	This class provides an efficient ring buffer implementation for storing bytes. Ring buffers are particularly useful for memory constrained microcontrollers such as the ATmega328 and ATmega2650. For maximum efficiency, this class is focused on the storgage of bytes, providing a single code base that is shared by all instances of this class	64
RingBuff	erT< T, N, SIZE >	
	Template-based ring buffer class that can store different kinds of objects in buffers of whatever size is needed	66
Serial0		
	Provides a high-end interface to serial communications using USART0	69
Serial1	D. H. H. H. C.	_,
Cariala	Provides a high-end interface to serial communications using USART1	/3
Serial2	Provides a high-end interface to serial communications using USART2	77
Serial3	-	
\A/wike w	Provides a high-end interface to serial communications using USART3	81
Writer	This is an abstract class defining a generic interface to write numbers and strings to a sequential stream of bytes (such as a serial output device)	85

22 **Class Index**

Chapter 7

File Index

7.1 File List

Here is a list of all documented files with brief descriptions:

This file provides certain functions needed to complete the avr-gcc C++ ABI. You never need to
include this file, and you only need to link against abi.cpp if you encounter certain link errors 95
Digital.h
This file provides functions that access the analog-to-digital conversion capability of the ATmega328 and ATmega2560 microcontrollers
MegaPins.h
This file defines the standard Arduino Uno pin name macros. It may be included directly by user code, although more commonly user code includes the file ArduinoPins.h, which in turn includes this file (when compiling for Arduino Uno targets)
Pins.h
This file is the primary one that users should include to access and use the pin name macros 10
JnoPins.h
This file defines the standard Arduino Uno pin name macros. It may be included directly by user code, although more commonly user code includes the file ArduinoPins.h, which in turn includes this
file (when compiling for Arduino Uno targets)
Macros.h
This file contains the primary macros for naming and manipulating GPIO pin names
This file defines a close that avoides a bigh level interfere to see LOD effection on 100 interfere. The
This file defines a class that provides a high-level interface to an LCD offering an I2C interface. The most common variant of this is HD44780U controlled LCD driven via an MCP23017 that offers an I2C interface (such LCDs are available from Adafruit and SparkFun). To use this class you must also use and properly initialize the I2C Master package from I2cMaster.h
er.h
This file provides functions that interface to the TWI (two-wire serial interface) hardware of the Arduino Uno (ATmega328) and Arduino Mega (ATmega2560), providing a high-level interface to I2C protocol communications. Include this file if you want your application will operate in Master mode as defined in the I2C protocol
.h
This file provides functions that interface to the TWI (two-wire serial interface) hardware of the Arduino Uno (ATmega328) and Arduino Mega (ATmega2560), providing a high-level interface to I2C protocol communications. Include this file if you want your application will operate in Slave mode as defined in the I2C protocol

24 File Index

InitSystem	n.h
	nclude this file to use the functions that initialize the microcontroller to a known, basic state 116
MemUtils.	h
7	This file provides functions that provide information on the available memory in SRAM $\dots \dots 117$
new.h	
	This file provides operator new and operator delete. You only need this file if you use new and delete to manage objects on the heap
Pwm.h	
	This file provides functions that access the PWM capability of the ATmega328 and ATmega2560 microcontrollers
Reader.h	
5	This file provides a generic interface to incoming data streams of any kind. It is designed around how serial streams are generally used, but can be used with any system that provides a sequential input of bytes that can be interpreted as strings and/or numbers
RingBuffe	
	This file provides an efficient ring buffer implementation for storing bytes
RingBuffer	
SimpleDel	This file provides a very flexible, template-based ring buffer implementation
•	This file provides simple delay functions that do not involve timers or interrupts. These functions
	simply execute a series of nested loops with known and precise timing
SystemClo	· · · · · · · · · · · · · · · · · · ·
İ	Include this file to use the functions that instantiate and access a system clock that counts elapsed milliseconds
USARTO.	
٦	This file provides functions that offer high-level interfaces to USART0 hardware, which is available on the Arduino Uno (ATmega328) and Arduino Mega (ATmega2560)
USART1.	
	This file provides functions that offer high-level interfaces to USART1 hardware, which is available on Arduino Mega (ATMega2560)
USART2.h	1
	This file provides functions that offer high-level interfaces to USART2 hardware, which is available on Arduino Mega (ATMega2560)
USART3.h	1
	This file provides functions that offer high-level interfaces to USART3 hardware, which is available on Arduino Mega (ATMega2560)
USARTM i	nimal.h
	This file provides functions that provide a minimalist interface to the USARTs available on the Arduino Uno (ATmega328) and Arduino Mega (ATmega2560)
Writer.h	
S	This file provides a generic interface to outgoing data streams of any kind. It is designed around how serial streams are generally used, but can be used with any system that requires converting strings and/or numbers into a sequential output of bytes

Chapter 8

Namespace Documentation

8.1 I2cMaster Namespace Reference

This namespace bundles the I2C-protocol-based interface to the TWI hardware. It provides logical cohesion for functions implement the Master portions of the I2C protocol and prevents namespace collisions.

Enumerations

enum I2cBusSpeed { kI2cBusSlow, kI2cBusFast }

This enum lists I2C bus speed configurations.

enum l2cStatusCodes { kl2cCompletedOk = 0x00, kl2cError = 0x01, kl2cNotStarted = 0x02, kl2cInProgress = 0x04 }

This enum lists I2C status codes reported by the various transmit functions.

enum I2cSendErrorCodes {
 kI2cNoError = 0, kI2cErrTxBufferFull = 1, kI2cErrMsgTooLong = 2, kI2cErrNullStatusPtr = 3, kI2cErrWriteWithoutData = 4, kI2cErrReadWithoutStorage = 5 }

This enum lists I2C errors codes that may occur when you try to write a message.

enum I2cPullups { kPullupsOff, kPullupsOn }

This enum lists the options for controlling the built-in pullups in the TWI hardware.

Functions

void start (uint8 t speed=kl2cBusFast)

Configures the TWI hardware for I2C communications in Master mode. You must call this function before conducting any I2C communications using the functions in this module.

void stop ()

Terminates the I2C communications using the TWI hardware, and disables the TWI interrupts.

void pullups (uint8_t set=kPullupsOn)

Sets the state of the internal pullups that are part of the TWI hardware.

• bool busy ()

Reports whether the TWI hardware is busy communicating (either transmitting or receiving).

• uint8_t writeAsync (uint8_t address, uint8_t registerAddress, volatile uint8_t *status)

Transmit a single register address (a one-byte message) asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function).

uint8_t writeAsync (uint8_t address, uint8_t registerAddress, uint8_t data, volatile uint8_t *status)

Transmit a single register address and corresponding single byte of data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function).

uint8 t writeAsync (uint8 t address, uint8 t registerAddress, const char *data, volatile uint8 t *status)

Transmit a single register address and corresponding null-terminated string of data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function).

uint8_t writeAsync (uint8_t address, uint8_t registerAddress, uint8_t *data, uint8_t numberBytes, volatile uint8_t *status)

Transmit a single register address and corresponding buffer of data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function).

uint8_t readAsync (uint8_t address, uint8_t numberBytes, volatile uint8_t *destination, volatile uint8_t *bytes←
 Read, volatile uint8_t *status)

Request to read data from a device and receive that data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function). When the status variable reports kl2cCompletedOk, the requested data can be read from the receive buffer.

uint8_t readAsync (uint8_t address, uint8_t registerAddress, uint8_t numberBytes, volatile uint8_t *destination, volatile uint8 t *bytesRead, volatile uint8 t *status)

Request to read data from a specific register on a device and receive that data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function). When the status variable reports kl2cCompletedOk, the requested data can be read from the receive buffer.

int writeSync (uint8 t address, uint8 t registerAddress)

Transmit a single register address (a one-byte message) synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

int writeSync (uint8_t address, uint8_t registerAddress, uint8_t data)

Transmit a single register address and corresponding single byte of data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

int writeSync (uint8_t address, uint8_t registerAddress, const char *data)

Transmit a single register address and corresponding null-terminated string of data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

int writeSync (uint8_t address, uint8_t registerAddress, uint8_t *data, uint8_t numberBytes)

Transmit a single register address and corresponding buffer of data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

int readSync (uint8_t address, uint8_t numberBytes, uint8_t *destination)

Request to read data from a device and receive that data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

• int readSync (uint8_t address, uint8_t registerAddress, uint8_t numberBytes, uint8_t *destination)

Request to read data from a specific register on a device and receive that data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

8.1.1 Detailed Description

This namespace bundles the I2C-protocol-based interface to the TWI hardware. It provides logical cohesion for functions implement the Master portions of the I2C protocol and prevents namespace collisions.

These interfaces are buffered for both input and output and operate using interrupts associated with the TWI hardware. This means the asynchronous transmit functions return immediately after queuing data in the output buffer for

transmission and the transmission happens asynchronously, using dedicated TWI hardware. Similarly, data is received asynchronously and placed into the input buffer.

These functions are designed around the normal operating modes of the I2C protocol. From a Master device point of view, I2C communications consist of sending a designated device a message to do something, and then either:

- doing nothing because no further action required on the Master's part (e.g., telling the designated device to shutdown)
- transmitting additional data needed by the designated device (e.g., telling the designated device to store some data)
- receiving data from the designated device (e.g., telling the designated device to report the current temperature or to read back some data from its memory)

For very simple devices, the receipt of the message itself can suffice to tell it to do something. More commonly, the instruction to the designated device consists of a single byte that passes a "register address" on the device. It is call a register address because it often corresponds directly to a memory register on the device. But it is best to think of it as an instruction code to the designated device (e.g., 0x01 = report the temperature; 0x02 = set the units to either F or C (depending on additional data sent by the Master); 0x03 = report the humidity; etc.)

The functions defined by this module conform directly to the above I2C paradigm. The functions come in both synchronous and asynchronous versions. The synchronous versions simply call the asynchronous versions and block internally until the asynchronous operations are complete.

Note also that even "read" operations always begin (from the Master's point of view) with a "send" to the designated device the Master wants to read data from. For this reason all operations (both read and write) utilize the transmit buffer.

8.1.2 Enumeration Type Documentation

8.1.2.1 enum I2cMaster::I2cBusSpeed

This enum lists I2C bus speed configurations.

Enumerator

kl2cBusSlow I2C slow (standard) mode: 100 KHz.

kl2cBusFast I2C fast mode: 400 KHz.

8.1.2.2 enum I2cMaster::I2cPullups

This enum lists the options for controlling the built-in pullups in the TWI hardware.

Enumerator

kPullupsOff Disable the built-in TWI hardware pullups.

kPullupsOn Enable the built-in TWI hardware pullups.

8.1.2.3 enum I2cMaster::I2cSendErrorCodes

This enum lists I2C errors codes that may occur when you try to write a message.

Enumerator

kl2cNoError No error.

kl2cErrTxBufferFull The transmit buffer is full (try again later)

kl2cErrMsgTooLong The message is too long for the transmit buffer.

kl2cErrNullStatusPtr The pointer to the status variable is null (need to provide a valid pointer)

kl2cErrWriteWithoutData No data provided to send.

kl2cErrReadWithoutStorage Performing a write+read, but no buffer provided to store the "read" data.

8.1.2.4 enum I2cMaster::I2cStatusCodes

This enum lists I2C status codes reported by the various transmit functions.

Enumerator

kl2cCompletedOk I2C communications completed on this message with no error.

kl2cError 12C communications had an error on this message.

kl2cNotStarted I2C communications not started on this message.

kl2cInProgress I2C communications on this message still in progress.

8.1.3 Function Documentation

8.1.3.1 bool I2cMaster::busy ()

Reports whether the TWI hardware is busy communicating (either transmitting or receiving).

Returns

true if the TWI hardware is busy communicating; false if the TWI hardware is idle.

8.1.3.2 void I2cMaster::pullups (uint8_t set = kPullupsOn)

Sets the state of the internal pullups that are part of the TWI hardware.

start() automatically enables the internal pullups. You only need to call this function if you want to turn them off, or if you want to alter their state.

set the desired state of the built-in internal pullup. Defaults to enable (kPullupsOn).

```
8.1.3.3 uint8_t l2cMaster::readAsync ( uint8_t address, uint8_t numberBytes, volatile uint8_t * destination, volatile uint8_t * bytesRead, volatile uint8_t * status )
```

Request to read data from a device and receive that data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function). When the status variable reports kl2cCompletedOk, the requested data can be read from the receive buffer.

If the transmit buffer is full, this function will block until room is available in the buffer.

- address the I2C address of the destination device you want to read from.
- numberBytes the number of bytes you expect to read.
- destination a pointer to a buffer in which the received data will be stored; the buffer should be at least numberBytes large.
- bytesRead a pointer to a byte-sized countered in which the TWI hardware will asynchronously keep track of how many bytes have been received.
- status a pointer to a byte-size location in which the commincations status of this message will be reported (volatile because the value will be updates asynchronously after the function returns by the TWI hardware) values correspond to I2cStatusCodes.

Returns

error codes corresponding to I2cSendErrorCodes (0 means no error)

8.1.3.4 uint8_t l2cMaster::readAsync (uint8_t address, uint8_t registerAddress, uint8_t numberBytes, volatile uint8_t * destination, volatile uint8_t * bytesRead, volatile uint8_t * status)

Request to read data from a specific register on a device and receive that data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function). When the status variable reports kl2cCompletedOk, the requested data can be read from the receive buffer.

If the transmit buffer is full, this function will block until room is available in the buffer.

- address the I2C address of the destination device you want to read from.
- registerAddress in device-centric terms, the register address on the destination device; think of it as a onebyte instruction to the destination device telling it what you want to read (e.g., temperature or the starting address of a block of memory).
- numberBytes the number of bytes you expect to read.
- destination a pointer to a buffer in which the received data will be stored; the buffer should be at least numberBytes large.
- bytesRead a pointer to a byte-sized countered in which the TWI hardware will asynchronously keep track of how many bytes have been received.
- status a pointer to a byte-size location in which the commincations status of this message will be reported (volatile because the value will be updates asynchronously after the function returns by the TWI hardware); values correspond to I2cStatusCodes.

Returns

error codes corresponding to I2cSendErrorCodes (0 means no error)

8.1.3.5 int I2cMaster::readSync (uint8_t address, uint8_t numberBytes, uint8_t * destination)

Request to read data from a device and receive that data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

- address the I2C address of the destination device you want to read from.
- numberBytes the number of bytes you expect to read.
- destination a pointer to a buffer in which the received data will be stored; the buffer should be at least numberBytes large.

Returns

an error code which if positive corresponds to I2cSendErrorCodes, or if negative the absolute value corresponds to I2cStatusCodes (0 means no error).

8.1.3.6 int I2cMaster::readSync (uint8_t address, uint8_t registerAddress, uint8_t numberBytes, uint8_t * destination)

Request to read data from a specific register on a device and receive that data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

- address the I2C address of the destination device you want to read from.
- registerAddress in device-centric terms, the register address on the destination device; think of it as a onebyte instruction to the destination device telling it what you want to read (e.g., temperature or the starting address of a block of memory).
- numberBytes the number of bytes you expect to read.
- destination a pointer to a buffer in which the received data will be stored; the buffer should be at least numberBytes large.

Returns

an error code which if positive corresponds to I2cSendErrorCodes, or if negative the absolute value corresponds to I2cStatusCodes (0 means no error).

8.1.3.7 void I2cMaster::start (uint8_t speed = kI2cBusFast)

Configures the TWI hardware for I2C communications in Master mode. You must call this function before conducting any I2C communications using the functions in this module.

This function enables the TWI related interrupts and enables the built-in hardware pullups.

• speed the speed mode for the I2C protocol. The options are slow (100 KHz) or fast (400 KHz); the default is fast (kI2cBusFast).

8.1.3.8 void I2cMaster::stop ()

Terminates the I2C communications using the TWI hardware, and disables the TWI interrupts.

After calling this function, you need to call start() again if you want to resume I2C communications.

8.1.3.9 uint8_t l2cMaster::writeAsync (uint8_t address, uint8_t registerAddress, volatile uint8_t * status)

Transmit a single register address (a one-byte message) asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function).

If the transmit buffer is full, this function will block until room is available in the buffer.

- address the I2C address of the destination device for this message
- registerAddress in device-centric terms, the register address on the destination device; think of it as a one-byte instruction to the destination device telling it to do something (e.g., turn off or on).
- status a pointer to a byte-size location in which the commincations status of this message will be reported
 (volatile because the value will be updates asynchronously after the function returns by the TWI hardware); values
 correspond to I2cStatusCodes.

Returns

error codes corresponding to I2cSendErrorCodes (0 means no error)

8.1.3.10 uint8_t l2cMaster::writeAsync (uint8_t address, uint8_t registerAddress, uint8_t data, volatile uint8_t * status)

Transmit a single register address and corresponding single byte of data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function).

If the transmit buffer is full, this function will block until room is available in the buffer.

- address the I2C address of the destination device for this message
- registerAddress in device-centric terms, the register address on the destination device; think of it as a one-byte instruction to the destination device telling it to do something (e.g., set the volume level).
- data a single byte of data serving as a parameter to the register address (e.g., the volume level to set).
- status a pointer to a byte-size location in which the commincations status of this message will be reported (volatile because the value will be updates asynchronously after the function returns by the TWI hardware); values correspond to I2cStatusCodes.

Returns

error codes corresponding to I2cSendErrorCodes (0 means no error)

8.1.3.11 uint8_t l2cMaster::writeAsync (uint8_t address, uint8_t registerAddress, const char * data, volatile uint8_t * status)

Transmit a single register address and corresponding null-terminated string of data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function).

If the transmit buffer is full, this function will block until room is available in the buffer.

address the I2C address of the destination device for this message

- registerAddress in device-centric terms, the register address on the destination device; think of it as a one-byte instruction to the destination device telling it to do something (e.g., an address in a memory device).
- data a null-terminated string of data serving as a parameter to the register address (e.g., a string to store sequentially starting at the registerAddress).
- status a pointer to a byte-size location in which the commincations status of this message will be reported (volatile because the value will be updates asynchronously after the function returns by the TWI hardware); values correspond to I2cStatusCodes.

Returns

error codes corresponding to I2cSendErrorCodes (0 means no error)

8.1.3.12 uint8_t l2cMaster::writeAsync (uint8_t address, uint8_t registerAddress, uint8_t * data, uint8_t numberBytes, volatile uint8 t * status)

Transmit a single register address and corresponding buffer of data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function).

If the transmit buffer is full, this function will block until room is available in the buffer.

- address the I2C address of the destination device for this message
- registerAddress in device-centric terms, the register address on the destination device; think of it as a one-byte instruction to the destination device telling it to do something (e.g., an address in a memory device).
- data a buffer of data serving as a parameter to the register address (e.g., the data to store sequentially starting at the registerAddress).
- numberBytes the number of bytes from the buffer to transmit.
- status a pointer to a byte-size location in which the commincations status of this message will be reported
 (volatile because the value will be updates asynchronously after the function returns by the TWI hardware); values
 correspond to I2cStatusCodes.

Returns

error codes corresponding to I2cSendErrorCodes (0 means no error)

8.1.3.13 int l2cMaster::writeSync (uint8_t address, uint8_t registerAddress)

Transmit a single register address (a one-byte message) synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

- address the I2C address of the destination device for this message.
- registerAddress in device-centric terms, the register address on the destination device; think of it as a one-byte instruction to the destination device telling it to do something (e.g., turn off or on).

Returns

an error code which if positive corresponds to I2cSendErrorCodes, or if negative the absolute value corresponds to I2cStatusCodes (0 means no error).

8.1.3.14 int I2cMaster::writeSync (uint8_t address, uint8_t registerAddress, uint8_t data)

Transmit a single register address and corresponding single byte of data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

- address the I2C address of the destination device for this message.
- registerAddress in device-centric terms, the register address on the destination device; think of it as a one-byte instruction to the destination device telling it to do something (e.g., set the volume level).
- data a single byte of data serving as a parameter to the register address (e.g., the volume level to set).

Returns

an error code which if positive corresponds to I2cSendErrorCodes, or if negative the absolute value corresponds to I2cStatusCodes (0 means no error).

8.1.3.15 int I2cMaster::writeSync (uint8_t address, uint8_t registerAddress, const char * data)

Transmit a single register address and corresponding null-terminated string of data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

- address the I2C address of the destination device for this message
- registerAddress in device-centric terms, the register address on the destination device; think of it as a
 one-byte instruction to the destination device telling it to do something (e.g., an address in a memory device).
- data a null-terminated string of data serving as a parameter to the register address (e.g., a string to store sequentially starting at the registerAddress).

Returns

an error code which if positive corresponds to I2cSendErrorCodes, or if negative the absolute value corresponds to I2cStatusCodes (0 means no error).

8.1.3.16 int l2cMaster::writeSync (uint8 t address, uint8 t registerAddress, uint8 t * data, uint8 t numberBytes)

Transmit a single register address and corresponding buffer of data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

- address the I2C address of the destination device for this message
- registerAddress in device-centric terms, the register address on the destination device; think of it as a one-byte instruction to the destination device telling it to do something (e.g., an address in a memory device).
- data a buffer of data serving as a parameter to the register address (e.g., the data to store sequentially starting at the registerAddress).
- numberBytes the number of bytes from the buffer to transmit.

Returns

an error code which if positive corresponds to I2cSendErrorCodes, or if negative the absolute value corresponds to I2cStatusCodes (0 means no error).

8.2 I2cSlave Namespace Reference

This namespace bundles the I2C-protocol-based interface to the TWI hardware. It provides logical cohesion for functions implement the Slave portions of the I2C protocol and prevents namespace collisions.

Enumerations

enum I2cBusSpeed { kI2cBusSlow, kI2cBusFast }

This enum lists I2C bus speed configurations.

enum I2cStatusCodes {
 kI2cCompletedOk = 0x00, kI2cError = 0x01, kI2cTxPartial = 0x02, kI2cRxOverflow = 0x04, kI2cInProgress = 0x06 }

This enum lists I2C status codes reported by the various transmit functions.

enum I2cPullups { kPullupsOff, kPullupsOn }

This enum lists the options for controlling the built-in pullups in the TWI hardware.

Functions

uint8 t processl2cMessage (uint8 t *buffer, uint8 t len)

This function must be defined by the user. It is called by the TWI interrupt function installed as part of I2cSlave.cpp whenever it receives a message from the Master. The user should implement this function to respond to the data in the buffer, taking actions and as appropriate returning data to the buffer (for asynchronous transmission to the Master).

void start (uint8_t ownAddress, uint8_t speed=kl2cBusFast, bool answerGeneralCall=false)

Configures the TWI hardware for I2C communications in Slave mode. You must call this function before conducting any I2C communications using the functions in this module.

• void stop ()

Terminates the I2C communications using the TWI hardware, and disables the TWI interrupts.

void pullups (uint8_t set=kPullupsOn)

Sets the state of the internal pullups that are part of the TWI hardware.

· bool busy ()

Reports whether the TWI hardware is busy communicating (either transmitting or receiving).

8.2.1 Detailed Description

This namespace bundles the I2C-protocol-based interface to the TWI hardware. It provides logical cohesion for functions implement the Slave portions of the I2C protocol and prevents namespace collisions.

These interfaces are buffered for both input and output and operate using interrupts associated with the TWI hardware. This means the functions return immediately after queuing data for transmission and the transmission happens asynchronously, using the dedicated TWI hardware.

These functions are designed around the normal operating modes of the I2C protocol. From a Slave device point of view, I2C communications consist of receiving a message from the Master telling it to do something, and in response:

- Processing the message and taking whatever action is appropriate.
- If that action includes returning data to the Master, queuing that data for transmission.

The functions defined by this module conform directly to the above I2C paradigm. The key function is processI2c Message() and must be defined by the user. This function is called whenever the Slave receives a message and is also used to pass back any data that should be transmitted back to the Master.

8.2.2 Enumeration Type Documentation

8.2.2.1 enum I2cSlave::I2cBusSpeed

This enum lists I2C bus speed configurations.

Enumerator

```
kl2cBusSlow | I2C slow (standard) mode: 100 KHz.
```

kl2cBusFast 12C fast mode: 400 KHz.

8.2.2.2 enum I2cSlave::I2cPullups

This enum lists the options for controlling the built-in pullups in the TWI hardware.

Enumerator

```
kPullupsOff Disable the built-in TWI hardware pullups.
```

kPullupsOn Enable the built-in TWI hardware pullups.

8.2.2.3 enum I2cSlave::I2cStatusCodes

This enum lists I2C status codes reported by the various transmit functions.

Enumerator

kl2cCompletedOk I2C communications completed with no error.

kl2cError I2C communications encountered an error.

kl2cTxPartial I2C Master terminated transmission before all data were sent.

kl2cRxOverflow Recieved a message larger than can be held in the receive buffer.

8.2.3 Function Documentation

8.2.3.1 bool I2cSlave::busy ()

Reports whether the TWI hardware is busy communicating (either transmitting or receiving).

Returns

true if the TWI hardware is busy communicating; false if the TWI hardware is idle.

8.2.3.2 uint8_t l2cSlave::processl2cMessage (uint8_t * buffer, uint8_t len)

This function must be defined by the user. It is called by the TWI interrupt function installed as part of I2cSlave.cpp whenever it receives a message from the Master. The user should implement this function to respond to the data in the buffer, taking actions and as appropriate returning data to the buffer (for asynchronous transmission to the Master).

The user should implement this function to do the following:

- · review the incoming data from the Master
- take appropriate actions in response to that data
- if data must be returned to the Master, write the data into the buffer and return the number of bytes you placed in the buffer
- · if no data must be returned to the Master, return 0

Note

This function is called at interrupt time, so the implementation must be kept short. If any significant work must be done as a result of the message received from the Master, this function should simply set a flag that can be detected by the main execution thread and have it do the heavy lifting.

- buffer is both an input and output parameter. On entrance to the function, it contains the message received from the Master; on return from the function should contain data (if any) that should be sent back to the Master.
- len is only an input parameter. It is the number of received bytes in the input buffer.

Returns

the number of bytes placed in the buffer to be sent back to the Master; 0 if no data is to be returned to the Master.

8.2.3.3 void I2cSlave::pullups (uint8_t set = kPullupsOn)

Sets the state of the internal pullups that are part of the TWI hardware.

start() automatically enables the internal pullups. You only need to call this function if you want to turn them off, or if you want to alter their state.

• set the desired state of the built-in internal pullup. Defaults to enable (kPullupsOn).

8.2.3.4 void l2cSlave::start (uint8_t ownAddress, uint8_t speed = kl2cBusFast, bool answerGeneralCall = false)

Configures the TWI hardware for I2C communications in Slave mode. You must call this function before conducting any I2C communications using the functions in this module.

This function enables the TWI related interrupts and enables the built-in hardware pullups.

- ownAddress is the I2C address for this slave.
- speed the speed mode for the I2C protocol. The options are slow (100 KHz) or fast (400 KHz); the default is fast (kI2cBusFast).
- answerGeneralCall pass true for the Slave to answer I2C general calls; false for the Slave to ignore I2C general calls and only answer calls to his specific address. The defaults is to not answer general calls. and defaults to not answering I2C general calls.

```
8.2.3.5 void I2cSlave::stop ( )
```

Terminates the I2C communications using the TWI hardware, and disables the TWI interrupts.

After calling this function, you need to call start() again if you want to resume I2C communications.

8.3 MemUtils Namespace Reference

A namespace providing encapsulation for functions that report the available memory in SRAM.

Functions

unsigned int freeRam ()

Get the number of free bytes remaining in SRAM.

· unsigned int freeRamQuickEstimate ()

Get a quick estimate of the number of free bytes remaining in SRAM.

8.3.1 Detailed Description

A namespace providing encapsulation for functions that report the available memory in SRAM.

8.3.2 Function Documentation

8.3.2.1 unsigned int MemUtils::freeRam ()

Get the number of free bytes remaining in SRAM.

Returns

The number of free bytes remaining in SRAM.

8.3.2.2 unsigned int MemUtils::freeRamQuickEstimate ()

Get a quick estimate of the number of free bytes remaining in SRAM.

This provides a quicker, but perhaps slightly inaccurate, estimate of the amount of free memory.

Returns

The number of free bytes remaining in SRAM.

8.4 USARTO Namespace Reference

This namespace bundles a high-level buffered interface to the USART0 hardware. It provides logical cohesion and prevents namespace collisions.

Functions

void start (unsigned long baudRate, UsartSerialConfiguration config=kSerial_8N1)

Initialize USART0 for buffered, asynchronous serial communications using interrupts.

• void stop ()

Stops buffered serial communications using interrupts on USART0.

· size_t write (char c)

Write a single byte to the transmit buffer.

• size t write (const char *c)

Write a null-terminated string to the transmit buffer.

size_t write (const char *c, size_t n)

Write a character array of given size to the transmit buffer.

• size t write (const uint8 t *c, size t n)

Write a byte array of given size to the transmit buffer.

• void flush ()

Flush transmit buffer.

• int peek ()

Examine the next character in the receive buffer without removing it from the buffer.

• int read ()

Return the next character in the receive buffer, removing it from the buffer.

• bool available ()

Determine if there is data in the receive buffer..

8.4.1 Detailed Description

This namespace bundles a high-level buffered interface to the USART0 hardware. It provides logical cohesion and prevents namespace collisions.

8.4.2 Function Documentation

```
8.4.2.1 bool USART0::available ( )
```

Determine if there is data in the receive buffer..

Returns

if the receive buffer contains data, it returns TRUE; if the receive buffer is empty, it returns FALSE;

8.4.2.2 void USART0::flush ()

Flush transmit buffer.

This function blocks until the transmit buffer is empty and the last byte has been transmitted by USART0. flush() doesn't actually do anything to make the transmit happen; it simply waits for the transmission to complete.

8.4.2.3 int USART0::peek ()

Examine the next character in the receive buffer without removing it from the buffer.

Returns

if there is a value in the receive buffer, it returns the value (a number between 0 and 255); if the receive buffer is empty, it returns -1;

8.4.2.4 int USART0::read ()

Return the next character in the receive buffer, removing it from the buffer.

Returns

if there is a value in the receive buffer, it returns the value (a number between 0 and 255) and removes the value from the receive buffer; if the receive buffer is empty, it returns -1;

8.4.2.5 void USART0::start (unsigned long baudRate, UsartSerialConfiguration config = kSerial_8N1)

Initialize USART0 for buffered, asynchronous serial communications using interrupts.

You must call this function before using any of the other USARTO functions.

- baudRate the baud rate for the communications, usually one of the following values: 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, or 115200 (although other values below can be specified).
- config sets the configuration in term of data bits, parity, and stop bits. If omitted, the default is 8 data bits, no parity, and 1 stop bit.

```
8.4.2.6 void USART0::stop ( )
```

Stops buffered serial communications using interrupts on USART0.

After calling this function, Arduino pins 0 and 1 are released and available for use as ordinary digital pins.

If you want to use USART0 again for buffered, asynchronous serial communications, you must again call start().

```
8.4.2.7 size_t USART0::write ( char c )
```

Write a single byte to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART0-related interrupts.

• c the char (byte) to write into the transmit buffer

Returns

the number of bytes written into the output buffer.

```
8.4.2.8 size_t USART0::write ( const char * c )
```

Write a null-terminated string to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART0-related interrupts.

• c the null-terminated string to write into the transmit buffer.

Returns

the number of bytes written into the output buffer.

```
8.4.2.9 size_t USART0::write ( const char * c, size_t n )
```

Write a character array of given size to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART0-related interrupts

- $\bullet\ \ {\mbox{c}}$ the character array to write into the transmit buffer.
- n the number of elements from the array to write into the transmit buffer.

Returns

the number of characters written into the output buffer.

```
8.4.2.10 size_t USART0::write ( const uint8_t * c, size_t n )
```

Write a byte array of given size to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART0-related interrupts

- c the byte array to write into the transmit buffer.
- n the number of elements from the array to write into the transmit buffer.

Returns

the number of bytes written into the output buffer.

8.5 USART1 Namespace Reference

This namespace bundles a high-level buffered interface to the USART1 hardware. It provides logical cohesion and prevents namespace collisions.

Functions

• void start (unsigned long baudRate, UsartSerialConfiguration config=kSerial_8N1)

Initialize USART1 for buffered, asynchronous serial communications using interrupts.

• void stop ()

Stops buffered serial communications using interrupts on USART1.

· size_t write (char c)

Write a single byte to the transmit buffer.

• size t write (const char *c)

Write a null-terminated string to the transmit buffer.

size_t write (const char *c, size_t n)

Write a character array of given size to the transmit buffer.

• size t write (const uint8 t *c, size t n)

Write a byte array of given size to the transmit buffer.

• void flush ()

Flush transmit buffer.

• int peek ()

Examine the next character in the receive buffer without removing it from the buffer.

• int read ()

Return the next character in the receive buffer, removing it from the buffer.

• bool available ()

Determine if there is data in the receive buffer..

8.5.1 Detailed Description

This namespace bundles a high-level buffered interface to the USART1 hardware. It provides logical cohesion and prevents namespace collisions.

8.5.2 Function Documentation

```
8.5.2.1 bool USART1::available ( )
```

Determine if there is data in the receive buffer..

Returns

if the receive buffer contains data, it returns TRUE; if the receive buffer is empty, it returns FALSE;

8.5.2.2 void USART1::flush ()

Flush transmit buffer.

This function blocks until the transmit buffer is empty and the last byte has been transmitted by USART1. flush() doesn't actually do anything to make the transmit happen; it simply waits for the transmission to complete.

```
8.5.2.3 int USART1::peek ( )
```

Examine the next character in the receive buffer without removing it from the buffer.

Returns

if there is a value in the receive buffer, it returns the value (a number between 0 and 255); if the receive buffer is empty, it returns -1;

```
8.5.2.4 int USART1::read ( )
```

Return the next character in the receive buffer, removing it from the buffer.

Returns

if there is a value in the receive buffer, it returns the value (a number between 0 and 255) and removes the value from the receive buffer; if the receive buffer is empty, it returns -1;

8.5.2.5 void USART1::start (unsigned long baudRate, UsartSerialConfiguration config = kSerial_8N1)

Initialize USART1 for buffered, asynchronous serial communications using interrupts.

You must call this function before using any of the other USART1 functions.

- baudRate the baud rate for the communications, usually one of the following values: 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, or 115200 (although other values below can be specified).
- config sets the configuration in term of data bits, parity, and stop bits. If omitted, the default is 8 data bits, no parity, and 1 stop bit.

```
8.5.2.6 void USART1::stop ( )
```

Stops buffered serial communications using interrupts on USART1.

After calling this function, Arduino pins 0 and 1 are released and available for use as ordinary digital pins.

If you want to use USART1 again for buffered, asynchronous serial communications, you must again call start().

```
8.5.2.7 size_t USART1::write ( char c )
```

Write a single byte to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART1-related interrupts.

• c the char (byte) to write into the transmit buffer

Returns

the number of bytes written into the output buffer.

```
8.5.2.8 size_t USART1::write ( const char * c )
```

Write a null-terminated string to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART1-related interrupts.

• c the null-terminated string to write into the transmit buffer.

Returns

the number of bytes written into the output buffer.

```
8.5.2.9 size_t USART1::write ( const char * c, size_t n )
```

Write a character array of given size to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART1-related interrupts

- $\bullet\ \ {\mbox{c}}$ the character array to write into the transmit buffer.
- n the number of elements from the array to write into the transmit buffer.

Returns

the number of characters written into the output buffer.

```
8.5.2.10 size_t USART1::write ( const uint8_t * c, size_t n )
```

Write a byte array of given size to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART1-related interrupts

- c the byte array to write into the transmit buffer.
- n the number of elements from the array to write into the transmit buffer.

Returns

the number of bytes written into the output buffer.

8.6 USART2 Namespace Reference

This namespace bundles a high-level buffered interface to the USART2 hardware. It provides logical cohesion and prevents namespace collisions.

Functions

• void start (unsigned long baudRate, UsartSerialConfiguration config=kSerial_8N1)

Initialize USART2 for buffered, asynchronous serial communications using interrupts.

• void stop ()

Stops buffered serial communications using interrupts on USART2.

· size_t write (char c)

Write a single byte to the transmit buffer.

• size t write (const char *c)

Write a null-terminated string to the transmit buffer.

size_t write (const char *c, size_t n)

Write a character array of given size to the transmit buffer.

• size t write (const uint8 t *c, size t n)

Write a byte array of given size to the transmit buffer.

• void flush ()

Flush transmit buffer.

• int peek ()

Examine the next character in the receive buffer without removing it from the buffer.

• int read ()

Return the next character in the receive buffer, removing it from the buffer.

• bool available ()

Determine if there is data in the receive buffer..

8.6.1 Detailed Description

This namespace bundles a high-level buffered interface to the USART2 hardware. It provides logical cohesion and prevents namespace collisions.

8.6.2 Function Documentation

```
8.6.2.1 bool USART2::available ( )
```

Determine if there is data in the receive buffer..

Returns

if the receive buffer contains data, it returns TRUE; if the receive buffer is empty, it returns FALSE;

```
8.6.2.2 void USART2::flush ( )
```

Flush transmit buffer.

This function blocks until the transmit buffer is empty and the last byte has been transmitted by USART2. flush() doesn't actually do anything to make the transmit happen; it simply waits for the transmission to complete.

```
8.6.2.3 int USART2::peek ( )
```

Examine the next character in the receive buffer without removing it from the buffer.

Returns

if there is a value in the receive buffer, it returns the value (a number between 0 and 255); if the receive buffer is empty, it returns -1;

```
8.6.2.4 int USART2::read ( )
```

Return the next character in the receive buffer, removing it from the buffer.

Returns

if there is a value in the receive buffer, it returns the value (a number between 0 and 255) and removes the value from the receive buffer; if the receive buffer is empty, it returns -1;

8.6.2.5 void USART2::start (unsigned long baudRate, UsartSerialConfiguration config = kSerial_8N1)

Initialize USART2 for buffered, asynchronous serial communications using interrupts.

You must call this function before using any of the other USART2 functions.

- baudRate the baud rate for the communications, usually one of the following values: 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, or 115200 (although other values below can be specified).
- config sets the configuration in term of data bits, parity, and stop bits. If omitted, the default is 8 data bits, no parity, and 1 stop bit.

```
8.6.2.6 void USART2::stop ( )
```

Stops buffered serial communications using interrupts on USART2.

After calling this function, Arduino pins 0 and 1 are released and available for use as ordinary digital pins.

If you want to use USART2 again for buffered, asynchronous serial communications, you must again call start().

```
8.6.2.7 size_t USART2::write ( char c )
```

Write a single byte to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART2-related interrupts.

• c the char (byte) to write into the transmit buffer

Returns

the number of bytes written into the output buffer.

```
8.6.2.8 size_t USART2::write ( const char * c )
```

Write a null-terminated string to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART2-related interrupts.

• c the null-terminated string to write into the transmit buffer.

Returns

the number of bytes written into the output buffer.

```
8.6.2.9 size_t USART2::write ( const char * c, size_t n )
```

Write a character array of given size to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART2-related interrupts

- c the character array to write into the transmit buffer.
- n the number of elements from the array to write into the transmit buffer.

Returns

the number of characters written into the output buffer.

```
8.6.2.10 size_t USART2::write ( const uint8_t * c, size_t n )
```

Write a byte array of given size to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART2-related interrupts

- c the byte array to write into the transmit buffer.
- n the number of elements from the array to write into the transmit buffer.

Returns

the number of bytes written into the output buffer.

8.7 USART3 Namespace Reference

This namespace bundles a high-level buffered interface to the USART3 hardware. It provides logical cohesion and prevents namespace collisions.

Functions

void start (unsigned long baudRate, UsartSerialConfiguration config=kSerial_8N1)

Initialize USART3 for buffered, asynchronous serial communications using interrupts.

• void stop ()

Stops buffered serial communications using interrupts on USART3.

• size t write (char c)

Write a single byte to the transmit buffer.

• size t write (const char *c)

Write a null-terminated string to the transmit buffer.

size_t write (const char *c, size_t n)

Write a character array of given size to the transmit buffer.

• size t write (const uint8 t *c, size t n)

Write a byte array of given size to the transmit buffer.

• void flush ()

Flush transmit buffer.

• int peek ()

Examine the next character in the receive buffer without removing it from the buffer.

• int read ()

Return the next character in the receive buffer, removing it from the buffer.

• bool available ()

Determine if there is data in the receive buffer..

8.7.1 Detailed Description

This namespace bundles a high-level buffered interface to the USART3 hardware. It provides logical cohesion and prevents namespace collisions.

8.7.2 Function Documentation

```
8.7.2.1 bool USART3::available ( )
```

Determine if there is data in the receive buffer..

Returns

if the receive buffer contains data, it returns TRUE; if the receive buffer is empty, it returns FALSE;

8.7.2.2 void USART3::flush ()

Flush transmit buffer.

This function blocks until the transmit buffer is empty and the last byte has been transmitted by USART3. flush() doesn't actually do anything to make the transmit happen; it simply waits for the transmission to complete.

```
8.7.2.3 int USART3::peek ( )
```

Examine the next character in the receive buffer without removing it from the buffer.

Returns

if there is a value in the receive buffer, it returns the value (a number between 0 and 255); if the receive buffer is empty, it returns -1;

```
8.7.2.4 int USART3::read ( )
```

Return the next character in the receive buffer, removing it from the buffer.

Returns

if there is a value in the receive buffer, it returns the value (a number between 0 and 255) and removes the value from the receive buffer; if the receive buffer is empty, it returns -1;

8.7.2.5 void USART3::start (unsigned long baudRate, UsartSerialConfiguration config = kSerial_8N1)

Initialize USART3 for buffered, asynchronous serial communications using interrupts.

You must call this function before using any of the other USART3 functions.

- baudRate the baud rate for the communications, usually one of the following values: 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, or 115200 (although other values below can be specified).
- config sets the configuration in term of data bits, parity, and stop bits. If omitted, the default is 8 data bits, no parity, and 1 stop bit.

```
8.7.2.6 void USART3::stop ( )
```

Stops buffered serial communications using interrupts on USART3.

After calling this function, Arduino pins 0 and 1 are released and available for use as ordinary digital pins.

If you want to use USART3 again for buffered, asynchronous serial communications, you must again call start().

```
8.7.2.7 size_t USART3::write ( char c )
```

Write a single byte to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART3-related interrupts.

• c the char (byte) to write into the transmit buffer

Returns

the number of bytes written into the output buffer.

```
8.7.2.8 size_t USART3::write ( const char * c )
```

Write a null-terminated string to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART3-related interrupts.

• c the null-terminated string to write into the transmit buffer.

Returns

the number of bytes written into the output buffer.

```
8.7.2.9 size_t USART3::write ( const char * c, size_t n )
```

Write a character array of given size to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART3-related interrupts

- c the character array to write into the transmit buffer.
- n the number of elements from the array to write into the transmit buffer.

Returns

the number of characters written into the output buffer.

```
8.7.2.10 size_t USART3::write ( const uint8_t * c, size_t n )
```

Write a byte array of given size to the transmit buffer.

This function attempts to queue the data into the transmit buffer. If there is room in the transmit buffer, the function returns immediately. If not, the function blocks waiting for room to become available in the transmit buffer.

The data is transmitted asynchronously via USART3-related interrupts

- $\ensuremath{\text{c}}$ the byte array to write into the transmit buffer.
- n the number of elements from the array to write into the transmit buffer.

Returns

the number of bytes written into the output buffer.

Namocnaco	Documentation
namesbace	Documentation

Chapter 9

Class Documentation

9.1 GpioPinVariable Class Reference

This class defines a type that can encode a GPIO pin as a variable. Read the section on GPIO Pin Variables to understand how to use this class.

#include <GpioPinMacros.h>

Public Member Functions

• Gpio8Ptr ddr () const

Return a pointer to the DDR register.

• Gpio8Ptr port () const

Return a pointer to the PORT register.

• Gpio8Ptr pin () const

Return a pointer to the PIN register.

• Gpio16Ptr ocr () const

Return a pointer to the OCR register (PWM related).

• Gpio8Ptr tccr () const

Return a pointer to the TCCR register (PWM related).

uint8_t bitNbr () const

Return the bit number of this GPIO pin within the DDR, PORT, and PIN registers.

• uint8_t com () const

Return the bit number needed for manipulating TCCR register (PWM related).

uint8_t adcNbr () const

Return the ADC channel number (analog-to-digital related).

9.1.1 Detailed Description

This class defines a type that can encode a GPIO pin as a variable. Read the section on GPIO Pin Variables to understand how to use this class.

There are also three macros that you need to create vaiables of type GpioPinVariable: makeGpioVarFromGpioPin(), makeGpioVarFromGpioPinAnalog(), and makeGpioVarFromGpioPinPwm(). These are used like this:

52 Class Documentation

```
GpioPinVariable pinA( makeGpioVarFromGpioPin( pPin10 ) );
GpioPinVariable pinB( makeGpioVarFromGpioPinAnalog( pPinA01 ) )

GpioPinVariable pinC = makeGpioVarFromGpioPinPwm( pPin03 );

GpioPinVariable pinArray[3];
pinArray[0] = pinA;
pinArray[1] = pinB;
pinArray[2] = makeGpioVarFromGpioPin( pPin07 );
```

Once you've done this, these variables can be assign and passed to functions as needed. To use these GPIO pin variables, there are special function analogs of the GPIO pin manipulation macros. These have the same names as the GPIO pin manipulation macros, except with a "V" appended.

The documentation for this class was generated from the following file:


· GpioPinMacros.h

9.2 I2cLcd Class Reference

This class provides a high-level interface via I2C to an LCD such as those offered by AdaFruit and SparkFun. Specifically, it communicates via I2C with an MCP23017 that drives an HD44780U controlling an LCD. It also lets you detect button presses on the 5-button keypad generally assocaited with such devices.


```
#include <I2cLcd.h>
```

Inheritance diagram for I2cLcd:



9.2 I2cLcd Class Reference 53

Collaboration diagram for I2cLcd:



Public Types

```
    enum {
        kButton_Select, kButton_Right, kButton_Down, kButton_Up,
        kButton_Left }
    enum {
        kBacklight_Red, kBacklight_Yellow, kBacklight_Green, kBacklight_Teal,
        kBacklight_Blue, kBacklight_Violet, kBacklight_White }
```

Public Member Functions

• I2cLcd ()

Constructor simply initializes some internal bookkeeping.

• int init ()

Initialize the I2cLcd object. This must be called before using the I2cLcd, or calling any of the other member functions. The I2C system must be initialized before calling this function (by calling I2cMaster::start() from I2cMaster.h).

• void clear ()

Clear the display (all rows, all columns).

• void home ()

Move the cursor home (the top row, left column).

void displayTopRow (const char *str)

Display a C-string on the top row.

void displayBottomRow (const char *str)

Display a C-string on the bottom row.

void clearTopRow ()

Clear the top row.

• void clearBottomRow ()

Clear the bottom row.

void displayOff ()

Turn the display off.

void displayOn ()

Turn the display on.

54 Class Documentation

• void blinkOff ()

Do not blink the cursor.

void blinkOn ()

Blink the cursor.

void cursorOff ()

Hide the cursor.

• void cursorOn ()

Display the cursor.

void scrollDisplayLeft ()

Scroll the display to the left.

void scrollDisplayRight ()

Scroll the display to the right.

· void autoscrollOn ()

Turn on automatic scrolling of the display.

void autoscrollOff ()

Turn off automatic scrolling of the display.

void setCursor (uint8_t row, uint8_t col)

Move the cursor the a particular row and column.

int setBacklight (uint8 t color)

Set the backlight to a given color. Set a black-and-white LCD display to White if you want to have a backlight.

void command (uint8 t cmd)

Pass a command to the LCD.

uint8_t readButtons ()

Read the state of the buttons associated with the LCD display.

• virtual size_t write (char c)

Write a single character to the LCD at the current cursor location. This implements the pure virtual function Writer::write(char c).

virtual size t write (const char *str)

Write a C-string to the LCD at the current cursor location. This implements the pure virtual function Writer::write(const char* str).

virtual size_t write (const char *buffer, size_t size)

Write a given number of characters from a buffer to the LCD at the current cursor location. This implements the pure virtual function Writer::write(const char* buffer, size t size).

• virtual size t write (const uint8 t *buffer, size t size)

Write a given number of bytes from a buffer to the LCD at the current cursor location. This implements the pure virtual function Writer::write(const uint8_t* buffer, size_t size).

virtual void flush ()

This function does nothing. It simply implements the pure virtual function Writer::flush().

9.2.1 Detailed Description

This class provides a high-level interface via I2C to an LCD such as those offered by AdaFruit and SparkFun. Specifically, it communicates via I2C with an MCP23017 that drives an HD44780U controlling an LCD. It also lets you detect button presses on the 5-button keypad generally assocaited with such devices.

This class derives from Writer, allowing you to write to the LCD much as it if were a serial device.

To use these features, include I2cLcd.h in your source code and link against I2cLcd.cpp and I2cMaster.cpp, and initialize the I2C hardware by calling I2cMaster::start().

9.2 I2cLcd Class Reference 55

9.2.2 Member Enumeration Documentation

9.2.2.1 anonymous enum

These constants are used to identify the five buttons.

Enumerator

```
kButton_Select the Select button
kButton_Right the Right button
kButton_Down the Down button
kButton_Up the Up button
kButton_Left the Left button
```

9.2.2.2 anonymous enum

These constants are used to set the backlight color on the LCD.

Enumerator

```
kBacklight_Red Backlight red.
kBacklight_Yellow Backlight yellow.
kBacklight_Green Backlight green.
kBacklight_Teal Backlight teal.
kBacklight_Blue Backlight blue.
kBacklight_Violet Backlight violet.
kBacklight_White Backlight white.
```

9.2.3 Member Function Documentation

```
9.2.3.1 void I2cLcd::command ( uint8_t cmd )
```

Pass a command to the LCD.

• cmd a valid command to send to the HD44780U.

```
9.2.3.2 void I2cLcd::displayBottomRow ( const char * str )
```

Display a C-string on the bottom row.

• str the C-string to display.

9.2.3.3 void l2cLcd::displayTopRow (const char * str)

Display a C-string on the top row.

• str the C-string to display.

56 Class Documentation

```
9.2.3.4 int I2cLcd::init ( )
```

Initialize the I2cLcd object. This must be called before using the I2cLcd, or calling any of the other member functions. The I2C system must be initialized before calling this function (by calling I2cMaster::start() from I2cMaster.h).

The LCD display is initialized in 16-column, 2-row mode.

```
9.2.3.5 uint8_t l2cLcd::readButtons()
```

Read the state of the buttons associated with the LCD display.

Returns

a byte with flags set corresponding to the buttons that are depressed. You must "and" the return value with $k \leftarrow$ Button_Right, kButton_Left, kButton_Down, kButton_Up, or kButton_Select to determine which buttons have been pressed.

```
9.2.3.6 int I2cLcd::setBacklight ( uint8_t color )
```

Set the backlight to a given color. Set a black-and-white LCD display to White if you want to have a backlight.

color the color to set the backlight. Pass one of kBacklight_Red, kBacklight_Yellow, kBacklight_Green, k←
 Backlight_Teal, kBacklight_Blue, kBacklight_Violet, or kBacklight_White.

```
9.2.3.7 void I2cLcd::setCursor ( uint8_t row, uint8_t col )
```

Move the cursor the a particular row and column.

- row the row to move the cursor to (numbering starts at 0).
- col the column to move the cursor to (numbering starts at 0).

```
9.2.3.8 size_t l2cLcd::write ( char c ) [virtual]
```

Write a single character to the LCD at the current cursor location. This implements the pure virtual function Writer::write(char c).

• the character to be written.

Returns

the number of bytes written.

Implements Writer.

9.2 I2cLcd Class Reference 57

```
9.2.3.9 size_t l2cLcd::write ( const char * str ) [virtual]
```

Write a C-string to the LCD at the current cursor location. This implements the pure virtual function Writer::write(const char* str).

• the C-string to be written.

Returns

the number of bytes written.

Implements Writer.

```
9.2.3.10 size_t l2cLcd::write ( const char * buffer, size_t size ) [virtual]
```

Write a given number of characters from a buffer to the LCD at the current cursor location. This implements the pure virtual function Writer::write(const char* buffer, size t size).

- buffer the buffer of characters to write.
- size the number of characters to write

Returns

the number of bytes written.

Implements Writer.

```
9.2.3.11 size_t l2cLcd::write ( const uint8_t * buffer, size_t size ) [virtual]
```

Write a given number of bytes from a buffer to the LCD at the current cursor location. This implements the pure virtual function Writer::write(const uint8_t* buffer, size_t size).

- buffer the buffer of bytes to write.
- size the number of bytes to write

Returns

the number of bytes written.

Implements Writer.

The documentation for this class was generated from the following files:

- I2cLcd.h
- I2cLcd.cpp


58 Class Documentation

9.3 Reader Class Reference

This is an abstract class defining a generic interface to read numbers and strings from a sequential stream of bytes (such as a serial device).

#include <Reader.h>

Inheritance diagram for Reader:

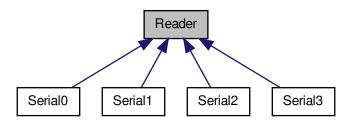

Public Member Functions

• Reader ()

Constructor. It sets the default timeout to 1 second.

virtual int read ()=0

Pure virtual function that reads and removes the next byte from the input stream.

virtual int peek ()=0

Pure virtual function that examines the next byte from the input stream, without removing it.

• virtual bool available ()=0

Pure virtual function that determines if data is available in the input stream.

void setTimeout (unsigned long milliseconds)

Sets maximum milliseconds to wait for stream data, default is 1 second.

· bool find (const char *target)

Read data from the input stream until the target string is found.

bool find (const char *target, size_t length)

Read data from the stream until the target string of given length is found.

bool findUntil (const char *target, const char *terminator)

Read data from the stream until the target string is found, or the terminator string is found, or the function times out.

bool findUntil (const char *target, size_t targetLen, const char *terminate, size_t termLen)

Read data from the stream until the target string of given length is found, or the terminator string of given length is found, or the function times out.

bool readLong (long *result)

Return the first valid long integer value from the stream.

bool readFloat (float *result)

Return the first valid float value from the stream.

bool readLong (long *result, char skipChar)

9.3 Reader Class Reference 59

Return the first valid long integer value from the stream, ignoring selected characters.

bool readFloat (float *result, char skipChar)

Return the first valid float value from the stream, ignoring selected characters.

size t readBytes (char *buffer, size t length)

Read characters from the input stream into a buffer, terminating if length characters have been read or the function times out. The result is NOT null-terminated.

size t readBytesUntil (char terminator, char *buffer, size t length)

Read characters from the input stream into a buffer, terminating when the terminator charactor is encountered, or if length characters have been read, or if the function times out. The result is NOT null-terminated.

size_t readBytes (uint8_t *buffer, size_t length)

Read bytes (uint8_t) from the input stream into a buffer, terminating if length bytes have been read or the function times out.

size_t readBytesUntil (uint8_t terminator, uint8_t *buffer, size_t length)

Read bytes (uint8_t) from the input stream into a buffer, terminating when the terminator byte is encountered, or if length bytes have been read, or if the function times out.

size_t readLine (char *buffer, size_t length)

Read characters from the input stream into a buffer, until it reaches EOL, or if length characters have been read, or if it times out. The result IS null-terminated.

void consumeWhiteSpace ()

Consumes whitespace characters until the first non-whitespace character is encountered or the function times out.

9.3.1 Detailed Description

This is an abstract class defining a generic interface to read numbers and strings from a sequential stream of bytes (such as a serial device).

It implements functions to convert a sequence of bytes into various integers and floating point numbers (so it is not a pure interface class). These functions depend on a small set of lower-level functions that are purely abstract and must be implemented by classes deriving from Reader.

Serial0 is an example of a class that derives from Reader by implementating the purely abstract functions in Reader.

Note

Use of the timeout feature requires linking against SystemClock.cpp and calling initSystemClock() from your start-up code. If you do not wish to use the system clock and link against SystemClock.cpp, then define the macro USE_READER_WITHOUT_SYSTEM_CLOCK. This means that calls will never timeout, and you are likely to lock your system if you read input that doesn't naturally terminate parsing (e.g., if you read numbers and the last number isn't followed by a newline).

9.3.2 Member Function Documentation

```
9.3.2.1 virtual bool Reader::available ( ) [pure virtual]
```

Pure virtual function that determines if data is available in the input stream.

Returns

True if data is available in the stream before timeout expires; false if timeout expires before any data appears in the stream.

Implemented in Serial1, Serial2, Serial3, and Serial0.

```
9.3.2.2 bool Reader::find (const char * target ) [inline]
```

Read data from the input stream until the target string is found.

• target is the string the function seeks in the input stream.

Returns

true if target string is found before timeout, false otherwise.

```
9.3.2.3 bool Reader::find ( const char * target, size_t length ) [inline]
```

Read data from the stream until the target string of given length is found.

- target is a string, the first length bytes of which the function seeks in the input stream.
- length is the number of bytes of the string to use for comparison.

Returns

true if target string of given length is found, false if the function times out before finding the target string.

```
9.3.2.4 bool Reader::findUntil ( const char * target, const char * terminator )
```

Read data from the stream until the target string is found, or the terminator string is found, or the function times out.

This function is like find() but the search ends if the terminator string is found first.

- target is the string the function seeks in the input stream.
- terminator is the string that stops the search.

Returns

true if target string is found before the terminator is encountered and before the function times out; false otherwise.

```
9.3.2.5 bool Reader::findUntil ( const char * target, size_t targetLen, const char * terminate, size_t termLen )
```

Read data from the stream until the target string of given length is found, or the terminator string of given length is found, or the function times out.

This function is like find() but the search ends if the terminator string is found first.

- target is the string the function seeks in the input stream.
- targetLen is the number of bytes in target that the function seeks in the input stream.
- terminator is the string that stops the search.
- termLen is the number of bytes in the terminator that

Returns

true if target string is found before the terminator is encountered and before the function times out; false otherwise.

9.3 Reader Class Reference 61

```
9.3.2.6 virtual int Reader::peek ( ) [pure virtual]
```

Pure virtual function that examines the next byte from the input stream, without removing it.

Returns

the next byte, or -1 if there is nothing to read in the input stream before timeout expires.

Implemented in Serial1, Serial2, Serial3, and Serial0.

```
9.3.2.7 virtual int Reader::read ( ) [pure virtual]
```

Pure virtual function that reads and removes the next byte from the input stream.

Returns

the next byte, or -1 if there is nothing to read in the input stream before timeout expires.

Implemented in Serial1, Serial2, Serial3, and Serial0.

```
9.3.2.8 size_t Reader::readBytes ( char * buffer, size_t length )
```

Read characters from the input stream into a buffer, terminating if length characters have been read or the function times out. The result is *NOT* null-terminated.

- buffer a pointer to where the characters read will be stored.
- length the maximum number of characters to read.

Returns

the number of characters placed in the buffer (0 means no data were read prior to timeout).

```
9.3.2.9 size_t Reader::readBytes ( uint8_t * buffer, size_t length ) [inline]
```

Read bytes (uint8_t) from the input stream into a buffer, terminating if length bytes have been read or the function times out.

- buffer a pointer to where the bytes read will be stored.
- length the maximum number of bytes to read.

Returns

the number of bytes placed in the buffer (0 means no data were read prior to timeout).

```
9.3.2.10 size_t Reader::readBytesUntil ( char terminator, char * buffer, size_t length )
```

Read characters from the input stream into a buffer, terminating when the terminator character is encountered, or if length characters have been read, or if the function times out. The result is *NOT* null-terminated.

- terminator a character that when encountered causes the function to return.
- buffer a pointer to where the characters read will be stored.
- length the maximum number of characters to read.

Returns

the number of characters placed in the buffer (0 means no data were read prior to timeout or detecting the terminator character).

```
9.3.2.11 size t Reader::readBytesUntil ( uint8 t terminator, uint8 t * buffer, size t length ) [inline]
```

Read bytes (uint8_t) from the input stream into a buffer, terminating when the terminator byte is encountered, or if length bytes have been read, or if the function times out.

- terminator a byte that when encountered causes the function to return.
- buffer a pointer to where the bytes read will be stored.
- length the maximum number of bytes to read.

Returns

the number of bytes placed in the buffer (0 means no data were read prior to timeout or detecting the terminator character).

```
9.3.2.12 bool Reader::readFloat ( float * result )
```

Return the first valid float value from the stream.

Initial characters that are not digits (or the minus sign) are skipped; the float is terminated by the first character that is not a digit.

• result is a pointer to where the float will be stored.

Returns

true if a valid float is found prior to timeout; false otherwise.

9.3 Reader Class Reference 63

```
9.3.2.13 bool Reader::readFloat ( float * result, char skipChar )
```

Return the first valid float value from the stream, ignoring selected characters.

Initial characters that are not digits (or the minus sign) are skipped; the float is terminated by the first character that is not a digit and is not one of the skip characters. This allows format characters (typically commas) to be ignored on input.

- result is a pointer to where the float will be stored.
- skipChar is a character that will be ignored on input.

Returns

true if a valid float is found prior to timeout; false otherwise.

```
9.3.2.14 size_t Reader::readLine ( char * buffer, size_t length )
```

Read characters from the input stream into a buffer, until it reaches EOL, or if length characters have been read, or if it times out. The result IS null-terminated.

- buffer a pointer to where the characters read will be stored.
- length the maximum number of characters to read.

Returns

the number of characters placed in the buffer (0 means no data were read prior to timeout or detecting EOL).

```
9.3.2.15 bool Reader::readLong ( long * result )
```

Return the first valid long integer value from the stream.

Initial characters that are not digits (or the minus sign) are skipped; the integer is terminated by the first character that is not a digit.

• result is a pointer to where the long integer will be stored.

Returns

true if a valid integer is found prior to timeout; false otherwise.

```
9.3.2.16 bool Reader::readLong ( long * result, char skipChar )
```

Return the first valid long integer value from the stream, ignoring selected characters.

Initial characters that are not digits (or the minus sign) are skipped; the integer is terminated by the first character that is not a digit and is not one of the skip characters. This allows format characters (typically commas) to be ignored on input.

- result is a pointer to where the long integer will be stored.
- skipChar is a character that will be ignored on input.

Returns

true if a valid long integer is found prior to timeout; false otherwise.

9.3.2.17 void Reader::setTimeout (unsigned long milliseconds) [inline]

Sets maximum milliseconds to wait for stream data, default is 1 second.

• milliseconds the length of the timeout period in milliseconds.

The documentation for this class was generated from the following files:

- · Reader.h
- · Reader.cpp

9.4 RingBuffer Class Reference

This class provides an efficient ring buffer implementation for storing bytes. Ring buffers are particularly useful for memory constrained microcontrollers such as the ATmega328 and ATmega2650. For maximum efficiency, this class is focused on the storgage of bytes, providing a single code base that is shared by all instances of this class.

```
#include <RingBuffer.h>
```

Public Member Functions

• RingBuffer (unsigned char *buffer, unsigned short size)

Construct a ring buffer by providing the storage area for the ring buffer.

• int pull ()

Extract the next (first) byte from the ring buffer.

int peek (unsigned short index=0)

Examine an element in the ring buffer.

• bool push (unsigned char element)

Push a byte into the ring buffer. The element is appended to the back of the buffer.

bool isFull ()

Determine if the buffer is full and cannot accept more bytes.

bool isNotFull ()

Determine if the buffer is not full and can accept more bytes.

bool isEmpty ()

Determine if the buffer is empty.

bool isNotEmpty ()

Determine if the buffer is not empty.

• void clear ()

Clear the ring buffer, leaving it empty.

9.4.1 Detailed Description

This class provides an efficient ring buffer implementation for storing bytes. Ring buffers are particularly useful for memory constrained microcontrollers such as the ATmega328 and ATmega2650. For maximum efficiency, this class is focused on the storgage of bytes, providing a single code base that is shared by all instances of this class.

For maximum flexibility, the caller must provide the storage to be used for each RingBuffer object instantiated (this allows the use of different sized ring bufferss without having to make dynamic memory allocations).

The implementation of RingBuffer is interrupt safe: the key operations are atomic, allowing for RingBuffer objects to be shared between interrupt functions and ordinary code.

The template-based RingBufferT class provides a more flexible ring buffer implementation that can store a variety of data types. However, this comes at the cost of replicating code for each template instantiation of RingBufferT.

9.4.2 Constructor & Destructor Documentation

```
9.4.2.1 RingBuffer::RingBuffer ( unsigned char * buffer, unsigned short size )
```

Construct a ring buffer by providing the storage area for the ring buffer.

- buffer the storage for the ring buffer.
- size the size of the storage for the ring buffer.

9.4.3 Member Function Documentation

```
9.4.3.1 bool RingBuffer::isEmpty( ) [inline]
```

Determine if the buffer is empty.

Returns

true if the buffer is empty; false if not.

9.4.3.2 bool RingBuffer::isFull ()

Determine if the buffer is full and cannot accept more bytes.

Returns

true if the buffer is full; false if not.

9.4.3.3 bool RingBuffer::isNotEmpty() [inline]

Determine if the buffer is not empty.

Returns

true if the buffer is not empty; false if it is empty.

```
9.4.3.4 bool RingBuffer::isNotFull ( )
```

Determine if the buffer is not full and can accept more bytes.

Returns

true if the buffer is not full: false if it is full.

9.4.3.5 int RingBuffer::peek (unsigned short index = 0)

Examine an element in the ring buffer.

• index the element to examine; 0 means the first (= next) element in the buffer. The default if the argument is omitted is to return the first element.

Returns

the next element or -1 if there is no such element.

```
9.4.3.6 int RingBuffer::pull ( )
```

Extract the next (first) byte from the ring buffer.

Returns

the next byte, or -1 if the ring buffer is empty.

9.4.3.7 bool RingBuffer::push (unsigned char element)

Push a byte into the ring buffer. The element is appended to the back of the buffer.

• element is the byte to append to the ring buffer.

Returns

0 (false) if it succeeds; 1 (true) if it fails because the buffer is full.

The documentation for this class was generated from the following files:

- · RingBuffer.h
- · RingBuffer.cpp

9.5 RingBufferT < T, N, SIZE > Class Template Reference

a template-based ring buffer class that can store different kinds of objects in buffers of whatever size is needed.

```
#include <RingBufferT.h>
```

Public Member Functions

· RingBufferT ()

Construct a ring buffer to store elements of type T indexed by integer type N, with size SIZE. All of these are passed as template parameters. *.

• T pull ()

Extract the next (first) element from the ring buffer.

T peek (N index=0)

Examine an element in the ring buffer.

bool push (T element)

Push an element into the ring buffer. The element is appended to the back of the buffer.

bool isEmpty ()

Determine if the buffer is empty.

bool isNotEmpty ()

Determine if the buffer is not empty.

bool isFull ()

Determine if the buffer is full and cannot accept more bytes.

bool isNotFull ()

Determine if the buffer is not full and can accept more bytes.

void discardFromFront (N nbrElements)

discard a number of elements from the front of the ring buffer.

void clear ()

Clear the ring buffer, leaving it empty.

9.5.1 Detailed Description

template<typename T, typename N, unsigned int SIZE>class RingBufferT< T, N, SIZE >

a template-based ring buffer class that can store different kinds of objects in buffers of whatever size is needed.

The implementation of RingBufferT is interrupt safe: the key operations are atomic, allowing for RingBuffer objects to be shared between interrupt functions and ordinary code.

The template-based RingBufferT class provides a very flexible ring buffer implementation; however different instantiations of RingBufferT (e.g., RingBufferT char, int, 32 > and RingBufferT char, int, 16 >) result in replicated code for each instantiation, even when they could logically share code. For a more efficient ring buffer that avoids such code bloat but can only store bytes, use RingBuffer.

Template Parameters

T	is the type of object that will be stored in the RingBufferT instantiation.
N	is the integer type that will be used to index the RingBufferT elements.
SIZE	is an integer indicating the size of the RingBufferT instantiation.

9.5.2 Member Function Documentation

9.5.2.1 template<typename T , typename N , unsigned int SIZE> void RingBufferT< T, N, SIZE >::discardFromFront (N nbrElements) [inline]

discard a number of elements from the front of the ring buffer.

• nbrElements the number of elements to discard.

9.5.2.2 template < typename T , typename N , unsigned int SIZE > bool RingBufferT < T, N, SIZE >::isEmpty () [inline]

Determine if the buffer is empty.

Returns

true if the buffer is empty; false if not.

9.5.2.3 template < typename T, typename N, unsigned int SIZE > bool RingBufferT < T, N, SIZE >::isFull () [inline]

Determine if the buffer is full and cannot accept more bytes.

Returns

true if the buffer is full; false if not.

9.5.2.4 template < typename T , typename N , unsigned int SIZE > bool RingBufferT < T, N, SIZE >::isNotEmpty () [inline]

Determine if the buffer is not empty.

Returns

true if the buffer is not empty; false if it is empty.

9.5.2.5 template < typename T, typename N, unsigned int SIZE > bool RingBufferT < T, N, SIZE >::isNotFull() [inline]

Determine if the buffer is not full and can accept more bytes.

Returns

true if the buffer is not full; false if it is full.

9.5.2.6 template < typename T , typename N , unsigned int SIZE> T RingBufferT< T, N, SIZE>::peek (N index = 0) [inline]

Examine an element in the ring buffer.

• index the element to examine; 0 means the first (= next) element in the buffer. The default if the argument is omitted is to return the first element.

Note

There is no general purpose safe value to return to indicate an empty element, so before calling peek() be sure the element exists.

Returns

the next element.

9.6 Serial0 Class Reference 69

9.5.2.7 template < typename T, typename N, unsigned int SIZE > T RingBufferT < T, N, SIZE >::pull () [inline]

Extract the next (first) element from the ring buffer.

Note

There is no general purpose safe value to return to indicate an empty buffer, so before calling pull() be sure to check the ring buffer is not empty.

Returns

the next element.

9.5.2.8 template < typename T , typename N , unsigned int SIZE> bool RingBufferT< T, N, SIZE>::push (T element) [inline]

Push an element into the ring buffer. The element is appended to the back of the buffer.

• element is the item to append to the ring buffer.

Returns

0 (false) if it succeeds; 1 (true) if it fails because the buffer is full.

The documentation for this class was generated from the following file:


• RingBufferT.h

9.6 Serial Class Reference


Provides a high-end interface to serial communications using USART0.

#include <USARTO.h>

Inheritance diagram for Serial0:



Collaboration diagram for Serial0:



Public Member Functions

void start (unsigned long baudRate, UsartSerialConfiguration config=kSerial 8N1)

Configure the hardware for two-way serial communications, including turning on associated interrupts. You must call this function before reading from or writing to SerialO on USARTO.

void stop ()

Stops buffered serial communications using Serial0 on USART0 by deconfiguring the hardware and turning off interrupts.

• virtual size t write (char c)

Write a single character to the output stream. This implements the pure virtual function Writer::write(charc).

virtual size_t write (const char *str)

Write a null-terminated string to the output stream. This implements the pure virtual function Writer::write(char* str).

• virtual size t write (const char *buffer, size t size)

Write a given number of characters from a buffer to the output stream. This implements the pure virtual function Writer←::write(const char* buffer, size t size).

virtual size t write (const uint8 t *buffer, size t size)

Write a given number of bytes from a buffer to the output stream. This implements the pure virtual function Writer::write(const uint8_t* buffer, size_t size).

• virtual void flush ()

Flush the output stream. When this function returns, all previously written data will have been transmitted through the underlying output stream. This implements the pure virtual function Writer::flush().

· virtual int read ()

Read and remove the next byte from the input stream. This implements the pure virtual function Reader::read().

• virtual int peek ()

Examine the next byte from the input stream, without removing it. This implements the pure virtual function Reader::peek().

• virtual bool available ()

Determine if data is available in the input stream. This implements the pure virtual function Reader::available().

Additional Inherited Members

9.6.1 Detailed Description

Provides a high-end interface to serial communications using USART0.

9.6 Serial0 Class Reference 71

The functions in this class are buffered for both input and output and operate using interrupts associated with USAR ← T0. This means the write functions return immediately after queuing data in the output buffer for transmission and the transmission happens asynchronously, using dedicated USART0 hardware. Similarly, data is received asynchronously and placed into the read buffer.

The read and write buffers are both ring buffers. If you try to queue more data than the transmit buffer can hold, the write functions will block until there is room in the buffer (as a result of data being transmitted). The read buffer, however, will overwrite if it gets full. You must clear the read buffer by actually reading the data regularly when receiving significant amounts of data.

9.6.2 Member Function Documentation

```
9.6.2.1 virtual bool SerialO::available() [virtual]
```

Determine if data is available in the input stream. This implements the pure virtual function Reader::available().

Returns

True if data is available in the stream; false if not.

Implements Reader.

```
9.6.2.2 virtual int SerialO::peek( ) [virtual]
```

Examine the next byte from the input stream, without removing it. This implements the pure virtual function Reader ← ::peek().

Returns

the next byte, or -1 if there is nothing to read in the input stream before timeout expires.

Implements Reader.

```
9.6.2.3 virtual int SerialO::read() [virtual]
```

Read and remove the next byte from the input stream. This implements the pure virtual function Reader::read().

Returns

the next byte, or -1 if there is nothing to read in the input stream before timeout expires.

Implements Reader.

```
9.6.2.4 void Serial0::start (unsigned long baudRate, UsartSerialConfiguration config = kSerial 8N1) [inline]
```

Configure the hardware for two-way serial communications, including turning on associated interrupts. You must call this function before reading from or writing to Serial0 on USART0.

- baudRate the baud rate for the communications, usually one of the following values: 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, or 115200 (although other values below can be specified).
- config sets the configuration in term of data bits, parity, and stop bits. If omitted, the default is 8 data bits, no parity, and 1 stop bit.

```
9.6.2.5 void SerialO::stop( ) [inline]
```

Stops buffered serial communications using Serial0 on USART0 by deconfiguring the hardware and turning off interrupts.

After calling this function, Arduino pins 0 and 1 are released and available for use as ordinary digital pins.

If you want to use SerialO again for communications, you must call start() again.

```
9.6.2.6 virtual size_t SerialO::write ( char c ) [virtual]
```

Write a single character to the output stream. This implements the pure virtual function Writer::write(char c).

• the character to be written.

Returns

the number of bytes written.

Implements Writer.

```
9.6.2.7 virtual size_t Serial0::write ( const char * str ) [virtual]
```

Write a null-terminated string to the output stream. This implements the pure virtual function Writer::write(char* str).

• str the string to be written.

Returns

the number of bytes written.

Implements Writer.

```
9.6.2.8 virtual size_t Serial0::write ( const char * buffer, size_t size ) [virtual]
```

Write a given number of characters from a buffer to the output stream. This implements the pure virtual function Writer

∷write(const char* buffer, size_t size).

- buffer the buffer of characters to write.
- size the number of characters to write

Returns

the number of bytes written.

Implements Writer.

9.7 Serial1 Class Reference 73

```
9.6.2.9 virtual size_t SerialO::write ( const uint8_t * buffer, size_t size ) [virtual]
```

Write a given number of bytes from a buffer to the output stream. This implements the pure virtual function Writer::write(const uint8_t* buffer, size_t size).

- buffer the buffer of bytes to write.
- size the number of bytes to write

Returns

the number of bytes written.

Implements Writer.

The documentation for this class was generated from the following file:


• USART0.h

9.7 Serial1 Class Reference


Provides a high-end interface to serial communications using USART1.

#include <USART1.h>

Inheritance diagram for Serial1:



Collaboration diagram for Serial1:



Public Member Functions

void start (unsigned long baudRate, UsartSerialConfiguration config=kSerial_8N1)

Configure the hardware for two-way serial communications, including turning on associated interrupts. You must call this function before reading from or writing to Serial1 on USART1.

void stop ()

Stops buffered serial communications using Serial1 on USART1 by deconfiguring the hardware and turning off interrupts.

• virtual size t write (char c)

Write a single character to the output stream. This implements the pure virtual function Writer::write(char c).

• virtual size_t write (const char *str)

Write a null-terminated string to the output stream. This implements the pure virtual function Writer::write(char* str).

• virtual size t write (const char *buffer, size t size)

Write a given number of characters from a buffer to the output stream. This implements the pure virtual function Writer←::write(const char* buffer, size t size).

virtual size t write (const uint8 t *buffer, size t size)

Write a given number of bytes from a buffer to the output stream. This implements the pure virtual function Writer::write(const uint8_t* buffer, size_t size).

• virtual void flush ()

Flush the output stream. When this function returns, all previously written data will have been transmitted through the underlying output stream. This implements the pure virtual function Writer::flush().

· virtual int read ()

Read and remove the next byte from the input stream. This implements the pure virtual function Reader::read().

• virtual int peek ()

Examine the next byte from the input stream, without removing it. This implements the pure virtual function Reader::peek().

• virtual bool available ()

Determine if data is available in the input stream. This implements the pure virtual function Reader::available().

Additional Inherited Members

9.7.1 Detailed Description

Provides a high-end interface to serial communications using USART1.

9.7 Serial1 Class Reference 75

The functions in this class are buffered for both input and output and operate using interrupts associated with USAR ← T1. This means the write functions return immediately after queuing data in the output buffer for transmission and the transmission happens asynchronously, using dedicated USART1 hardware. Similarly, data is received asynchronously and placed into the read buffer.

The read and write buffers are both ring buffers. If you try to queue more data than the transmit buffer can hold, the write functions will block until there is room in the buffer (as a result of data being transmitted). The read buffer, however, will overwrite if it gets full. You must clear the read buffer by actually reading the data regularly when receiving significant amounts of data.

9.7.2 Member Function Documentation

```
9.7.2.1 bool Serial1::available() [virtual]
```

Determine if data is available in the input stream. This implements the pure virtual function Reader::available().

Returns

True if data is available in the stream; false if not.

Implements Reader.

```
9.7.2.2 int Serial1::peek( ) [virtual]
```

Examine the next byte from the input stream, without removing it. This implements the pure virtual function Reader ← ::peek().

Returns

the next byte, or -1 if there is nothing to read in the input stream before timeout expires.

Implements Reader.

```
9.7.2.3 int Serial1::read() [virtual]
```

Read and remove the next byte from the input stream. This implements the pure virtual function Reader::read().

Returns

the next byte, or -1 if there is nothing to read in the input stream before timeout expires.

Implements Reader.

```
9.7.2.4 void Serial1::start (unsigned long baudRate, UsartSerialConfiguration config = kSerial 8N1) [inline]
```

Configure the hardware for two-way serial communications, including turning on associated interrupts. You must call this function before reading from or writing to Serial 1 on USART1.

- baudRate the baud rate for the communications, usually one of the following values: 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, or 115200 (although other values below can be specified).
- config sets the configuration in term of data bits, parity, and stop bits. If omitted, the default is 8 data bits, no parity, and 1 stop bit.

```
9.7.2.5 void Serial1::stop() [inline]
```

Stops buffered serial communications using Serial1 on USART1 by deconfiguring the hardware and turning off interrupts.

After calling this function, Arduino pins 0 and 1 are released and available for use as ordinary digital pins.

If you want to use Serial1 again for communications, you must call start() again.

```
9.7.2.6 size_t Serial1::write ( char c ) [virtual]
```

Write a single character to the output stream. This implements the pure virtual function Writer::write(char c).

• the character to be written.

Returns

the number of bytes written.

Implements Writer.

```
9.7.2.7 size_t Serial1::write ( const char * str ) [virtual]
```

Write a null-terminated string to the output stream. This implements the pure virtual function Writer::write(char* str).

• str the string to be written.

Returns

the number of bytes written.

Implements Writer.

```
9.7.2.8 size_t Serial1::write ( const char * buffer, size_t size ) [virtual]
```

Write a given number of characters from a buffer to the output stream. This implements the pure virtual function Writer

∷write(const char* buffer, size_t size).

- buffer the buffer of characters to write.
- size the number of characters to write

Returns

the number of bytes written.

Implements Writer.

9.8 Serial2 Class Reference 77

```
9.7.2.9 size_t Serial1::write ( const uint8_t * buffer, size_t size ) [virtual]
```

Write a given number of bytes from a buffer to the output stream. This implements the pure virtual function Writer::write(const uint8_t* buffer, size_t size).

- buffer the buffer of bytes to write.
- size the number of bytes to write

Returns

the number of bytes written.

Implements Writer.

The documentation for this class was generated from the following files:


- USART1.h
- USART1.cpp

9.8 Serial2 Class Reference


Provides a high-end interface to serial communications using USART2.

```
#include <USART2.h>
```

Inheritance diagram for Serial2:



Collaboration diagram for Serial2:



Public Member Functions

void start (unsigned long baudRate, UsartSerialConfiguration config=kSerial 8N1)

Configure the hardware for two-way serial communications, including turning on associated interrupts. You must call this function before reading from or writing to Serial2 on USART2.

void stop ()

Stops buffered serial communications using Serial2 on USART2 by deconfiguring the hardware and turning off interrupts.

• virtual size t write (char c)

Write a single character to the output stream. This implements the pure virtual function Writer::write(charc).

virtual size_t write (const char *str)

Write a null-terminated string to the output stream. This implements the pure virtual function Writer::write(char* str).

• virtual size t write (const char *buffer, size t size)

Write a given number of characters from a buffer to the output stream. This implements the pure virtual function Writer←::write(const char* buffer, size t size).

virtual size t write (const uint8 t *buffer, size t size)

Write a given number of bytes from a buffer to the output stream. This implements the pure virtual function Writer::write(const uint8_t* buffer, size_t size).

· virtual void flush ()

Flush the output stream. When this function returns, all previously written data will have been transmitted through the underlying output stream. This implements the pure virtual function Writer::flush().

· virtual int read ()

Read and remove the next byte from the input stream. This implements the pure virtual function Reader::read().

• virtual int peek ()

Examine the next byte from the input stream, without removing it. This implements the pure virtual function Reader::peek().

• virtual bool available ()

Determine if data is available in the input stream. This implements the pure virtual function Reader::available().

Additional Inherited Members

9.8.1 Detailed Description

Provides a high-end interface to serial communications using USART2.

9.8 Serial2 Class Reference 79

The functions in this class are buffered for both input and output and operate using interrupts associated with USAR ← T2. This means the write functions return immediately after queuing data in the output buffer for transmission and the transmission happens asynchronously, using dedicated USART2 hardware. Similarly, data is received asynchronously and placed into the read buffer.

The read and write buffers are both ring buffers. If you try to queue more data than the transmit buffer can hold, the write functions will block until there is room in the buffer (as a result of data being transmitted). The read buffer, however, will overwrite if it gets full. You must clear the read buffer by actually reading the data regularly when receiving significant amounts of data.

9.8.2 Member Function Documentation

```
9.8.2.1 bool Serial2::available() [virtual]
```

Determine if data is available in the input stream. This implements the pure virtual function Reader::available().

Returns

True if data is available in the stream; false if not.

Implements Reader.

```
9.8.2.2 int Serial2::peek( ) [virtual]
```

Examine the next byte from the input stream, without removing it. This implements the pure virtual function Reader ← ::peek().

Returns

the next byte, or -1 if there is nothing to read in the input stream before timeout expires.

Implements Reader.

```
9.8.2.3 int Serial2::read() [virtual]
```

Read and remove the next byte from the input stream. This implements the pure virtual function Reader::read().

Returns

the next byte, or -1 if there is nothing to read in the input stream before timeout expires.

Implements Reader.

```
9.8.2.4 void Serial2::start (unsigned long baudRate, UsartSerialConfiguration config = kSerial_8N1) [inline]
```

Configure the hardware for two-way serial communications, including turning on associated interrupts. You must call this function before reading from or writing to Serial2 on USART2.

- baudRate the baud rate for the communications, usually one of the following values: 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, or 115200 (although other values below can be specified).
- config sets the configuration in term of data bits, parity, and stop bits. If omitted, the default is 8 data bits, no parity, and 1 stop bit.

```
9.8.2.5 void Serial2::stop() [inline]
```

Stops buffered serial communications using Serial2 on USART2 by deconfiguring the hardware and turning off interrupts.

After calling this function, Arduino pins 0 and 1 are released and available for use as ordinary digital pins.

If you want to use Serial2 again for communications, you must call start() again.

```
9.8.2.6 size_t Serial2::write ( char c ) [virtual]
```

Write a single character to the output stream. This implements the pure virtual function Writer::write(char c).

• the character to be written.

Returns

the number of bytes written.

Implements Writer.

```
9.8.2.7 size_t Serial2::write ( const char * str ) [virtual]
```

Write a null-terminated string to the output stream. This implements the pure virtual function Writer::write(char* str).

• str the string to be written.

Returns

the number of bytes written.

Implements Writer.

```
9.8.2.8 size_t Serial2::write ( const char * buffer, size_t size ) [virtual]
```

Write a given number of characters from a buffer to the output stream. This implements the pure virtual function Writer

::write(const char∗ buffer, size_t size).

- buffer the buffer of characters to write.
- size the number of characters to write

Returns

the number of bytes written.

Implements Writer.

9.9 Serial3 Class Reference 81

```
9.8.2.9 size_t Serial2::write ( const uint8_t * buffer, size_t size ) [virtual]
```

Write a given number of bytes from a buffer to the output stream. This implements the pure virtual function Writer::write(const uint8_t* buffer, size_t size).

- buffer the buffer of bytes to write.
- size the number of bytes to write

Returns

the number of bytes written.

Implements Writer.

The documentation for this class was generated from the following files:


- USART2.h
- USART2.cpp

9.9 Serial3 Class Reference


Provides a high-end interface to serial communications using USART3.

```
#include <USART3.h>
```

Inheritance diagram for Serial3:



Collaboration diagram for Serial3:



Public Member Functions

void start (unsigned long baudRate, UsartSerialConfiguration config=kSerial 8N1)

Configure the hardware for two-way serial communications, including turning on associated interrupts. You must call this function before reading from or writing to Serial3 on USART3.

void stop ()

Stops buffered serial communications using Serial3 on USART3 by deconfiguring the hardware and turning off interrupts.

• virtual size t write (char c)

Write a single character to the output stream. This implements the pure virtual function Writer::write(charc).

virtual size_t write (const char *str)

Write a null-terminated string to the output stream. This implements the pure virtual function Writer::write(char* str).

• virtual size t write (const char *buffer, size t size)

Write a given number of characters from a buffer to the output stream. This implements the pure virtual function Writer← ::write(const char* buffer, size_t size).

virtual size t write (const uint8 t *buffer, size t size)

Write a given number of bytes from a buffer to the output stream. This implements the pure virtual function Writer::write(const uint8_t* buffer, size_t size).

· virtual void flush ()

Flush the output stream. When this function returns, all previously written data will have been transmitted through the underlying output stream. This implements the pure virtual function Writer::flush().

· virtual int read ()

Read and remove the next byte from the input stream. This implements the pure virtual function Reader::read().

• virtual int peek ()

Examine the next byte from the input stream, without removing it. This implements the pure virtual function Reader::peek().

• virtual bool available ()

Determine if data is available in the input stream. This implements the pure virtual function Reader::available().

Additional Inherited Members

9.9.1 Detailed Description

Provides a high-end interface to serial communications using USART3.

9.9 Serial3 Class Reference 83

The functions in this class are buffered for both input and output and operate using interrupts associated with USAR ← T3. This means the write functions return immediately after queuing data in the output buffer for transmission and the transmission happens asynchronously, using dedicated USART3 hardware. Similarly, data is received asynchronously and placed into the read buffer.

The read and write buffers are both ring buffers. If you try to queue more data than the transmit buffer can hold, the write functions will block until there is room in the buffer (as a result of data being transmitted). The read buffer, however, will overwrite if it gets full. You must clear the read buffer by actually reading the data regularly when receiving significant amounts of data.

9.9.2 Member Function Documentation

```
9.9.2.1 bool Serial3::available() [virtual]
```

Determine if data is available in the input stream. This implements the pure virtual function Reader::available().

Returns

True if data is available in the stream; false if not.

Implements Reader.

```
9.9.2.2 int Serial3::peek( ) [virtual]
```

Examine the next byte from the input stream, without removing it. This implements the pure virtual function Reader ← ::peek().

Returns

the next byte, or -1 if there is nothing to read in the input stream before timeout expires.

Implements Reader.

```
9.9.2.3 int Serial3::read() [virtual]
```

Read and remove the next byte from the input stream. This implements the pure virtual function Reader::read().

Returns

the next byte, or -1 if there is nothing to read in the input stream before timeout expires.

Implements Reader.

```
9.9.2.4 void Serial3::start (unsigned long baudRate, UsartSerialConfiguration config = kSerial 8N1) [inline]
```

Configure the hardware for two-way serial communications, including turning on associated interrupts. You must call this function before reading from or writing to Serial3 on USART3.

- baudRate the baud rate for the communications, usually one of the following values: 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, or 115200 (although other values below can be specified).
- config sets the configuration in term of data bits, parity, and stop bits. If omitted, the default is 8 data bits, no parity, and 1 stop bit.

```
9.9.2.5 void Serial3::stop() [inline]
```

Stops buffered serial communications using Serial3 on USART3 by deconfiguring the hardware and turning off interrupts.

After calling this function, Arduino pins 0 and 1 are released and available for use as ordinary digital pins.

If you want to use Serial3 again for communications, you must call start() again.

```
9.9.2.6 size_t Serial3::write( char c ) [virtual]
```

Write a single character to the output stream. This implements the pure virtual function Writer::write(char c).

• the character to be written.

Returns

the number of bytes written.

Implements Writer.

```
9.9.2.7 size_t Serial3::write ( const char * str ) [virtual]
```

Write a null-terminated string to the output stream. This implements the pure virtual function Writer::write(char* str).

• str the string to be written.

Returns

the number of bytes written.

Implements Writer.

```
9.9.2.8 size_t Serial3::write ( const char * buffer, size_t size ) [virtual]
```

Write a given number of characters from a buffer to the output stream. This implements the pure virtual function Writer

::write(const char∗ buffer, size_t size).

- buffer the buffer of characters to write.
- size the number of characters to write

Returns

the number of bytes written.

Implements Writer.

9.10 Writer Class Reference 85

```
9.9.2.9 size_t Serial3::write ( const uint8_t * buffer, size_t size ) [virtual]
```

Write a given number of bytes from a buffer to the output stream. This implements the pure virtual function Writer::write(const uint8_t* buffer, size_t size).

- buffer the buffer of bytes to write.
- size the number of bytes to write

Returns

the number of bytes written.

Implements Writer.

The documentation for this class was generated from the following files:


- USART3.h
- USART3.cpp

9.10 Writer Class Reference

This is an abstract class defining a generic interface to write numbers and strings to a sequential stream of bytes (such as a serial output device).

```
#include <Writer.h>
```

Inheritance diagram for Writer:



Public Types

• enum IntegerOutputBase { kBin = 2, kOct = 8, kDec = 10, kHex = 16 }

An enumeration that defines the number that will be used as the base for representing integer quantities as a string of characters.

Public Member Functions

virtual size_t write (char c)=0

Pure virtual function that writes a single character to the output stream.

virtual size t write (const char *str)=0

Pure virtual function that writes a null-terminated string to the output stream.

• virtual size t write (const char *buffer, size t size)=0

Pure virtual function that writes a given number of characters from a buffer to the output stream.

virtual size t write (const uint8 t *buffer, size t size)=0

Pure virtual function that writes a given number of bytes from a buffer to the output stream.

virtual void flush ()=0

Pure virtual function to flush the output stream. When this function returns, all previously written data will have been transmitted through the underlying output stream.

size t print (const char *str, bool addLn=false)

Print a null-terminated string to the output stream, with or without adding a new line character at the end.

size_t print (const uint8_t *buf, size_t size, bool addLn=false)

Print a number of bytes to the output stream, with or without adding a new line character at the end.

• size_t print (char c, bool addLn=false)

Print a single character to the output stream, with or without adding a new line character at the end.

size t print (int n, int base=kDec, bool addLn=false)

Print an integer to the output stream, with or without adding a new line character at the end.

size t print (unsigned int n, int base=kDec, bool addLn=false)

Print an unsigned integer to the output stream, with or without adding a new line character at the end.

• size t print (long n, int base=kDec, bool addLn=false)

Print a long integer to the output stream, with or without adding a new line character at the end.

size_t print (unsigned long n, int base=kDec, bool addLn=false)

Print an unsigned long integer to the output stream, with or without adding a new line character at the end.

• size_t print (double d, int digits=2, bool addLn=false)

Print a floating point number to the output stream, with or without adding a new line character at the end.

• size t println (const char *str)

Print a null-terminated string to the output stream, adding a new line character at the end.

size_t println (const uint8_t *buf, size_t size)

Print a number of bytes to the output stream, adding a new line character at the end.

size_t println (char c)

Print a single character to the output stream, adding a new line character at the end.

size_t println (unsigned char n, int base=kDec)

Print an unsigned character to the output stream, adding a new line character at the end.

size t println (int n, int base=kDec)

Print an integer to the output stream, adding a new line character at the end.

size_t println (unsigned int n, int base=kDec)

Print an unsigned integer to the output stream, adding a new line character at the end.

size_t println (long n, int base=kDec)

Print a long integer to the output stream, adding a new line character at the end.

size_t println (unsigned long n, int base=kDec)

Print an unsigned long integer to the output stream, adding a new line character at the end.

size_t println (double d, int digits=2)

Print a floating point number to the output stream, adding a new line character at the end.

size_t println ()

Print a new line ('
') to the output stream.

9.10 Writer Class Reference 87

9.10.1 Detailed Description

This is an abstract class defining a generic interface to write numbers and strings to a sequential stream of bytes (such as a serial output device).

It implements functions to convert various integers and floating point numbers into a sequence of bytes (so it is not a pure interface class). These functions depend on a small set of lower-level functions that are purely abstract and must be implemented by classes deriving from Writer.

Serial0 is an example of a class that derives from Writer by implementating the purely abstract functions in Writer.

9.10.2 Member Enumeration Documentation

9.10.2.1 enum Writer::IntegerOutputBase

An enumeration that defines the number that will be used as the base for representing integer quantities as a string of characters.

Enumerator

```
kBin Produce a binary representation of integers (e.g., 11 is output as 0b1011)
```

kOct Produce an octal representation of integers (e.g, 11 is output as 013)

kDec Produce a decimal representation of integers (e.g., 11 is output as 11.

kHex Produce a hexadecimal representation of integers (e.g., 11 is output as 0x0b)

9.10.3 Member Function Documentation

```
9.10.3.1 size_t Writer::print ( const char * str, bool addLn = false )
```

Print a null-terminated string to the output stream, with or without adding a new line character at the end.

- str is the null-terminated string to output.
- addLn if true, a new line character ('
 ') is added at the end of the output; the default is false.

Returns

the number of bytes sent to the output stream.

```
9.10.3.2 size_t Writer::print ( const uint8_t * buf, size_t size, bool addLn = false )
```

Print a number of bytes to the output stream, with or without adding a new line character at the end.

- · buf is the buffer containing bytes to output.
- size is the number of bytes from the buffer to output.
- addLn if true, a new line character ('
 ') is added at the end of the output; the default is false.

Returns

```
9.10.3.3 size_t Writer::print ( char c, bool addLn = false )
```

Print a single character to the output stream, with or without adding a new line character at the end.

- c is the character to output.
- addLn if true, a new line character ('
 ') is added at the end of the output; the default is false.

Returns

the number of bytes sent to the output stream.

```
9.10.3.4 size_t Writer::print (int n, int base = kDec, bool addLn = false) [inline]
```

Print an integer to the output stream, with or without adding a new line character at the end.

- n is the integer to output.
- base is the base used to represent the number; should be one of IntegerOutputBase; defaults to decimal representation (kDec).
- addLn if true, a new line character ('
 ') is added at the end of the output; the default is false.

Returns

the number of bytes sent to the output stream.

```
9.10.3.5 size_t Writer::print (unsigned int n, int base = kDec, bool addLn = false) [inline]
```

Print an unsigned integer to the output stream, with or without adding a new line character at the end.

- n is the unsigned integer to output.
- base is the base used to represent the number; should be one of IntegerOutputBase; defaults to decimal representation (kDec).
- addLn if true, a new line character ('
 ') is added at the end of the output; the default is false.

Returns

9.10 Writer Class Reference 89

```
9.10.3.6 size_t Writer::print ( long n, int base = kDec, bool addLn = false )
```

Print a long integer to the output stream, with or without adding a new line character at the end.

- n is the long integer to output.
- base is the base used to represent the number; should be one of IntegerOutputBase; defaults to decimal representation (kDec).
- addLn if true, a new line character ('
 ') is added at the end of the output; the default is false.

Returns

the number of bytes sent to the output stream.

```
9.10.3.7 size_t Writer::print ( unsigned long n, int base = kDec, bool addLn = false )
```

Print an unsigned long integer to the output stream, with or without adding a new line character at the end.

- n is the unsigned long integer to output.
- base is the base used to represent the number; should be one of IntegerOutputBase; defaults to decimal representation (kDec).
- addLn if true, a new line character ('
 ') is added at the end of the output; the default is false.

Returns

the number of bytes sent to the output stream.

```
9.10.3.8 size_t Writer::print ( double d, int digits = 2, bool addLn = false )
```

Print a floating point number to the output stream, with or without adding a new line character at the end.

- d is the floating point number to output.
- digits is the number of decimal digits to output; the default is 2.
- addLn if true, a new line character ('
 ') is added at the end of the output; the default is false.

Returns

```
9.10.3.9 size_t Writer::println ( const char * str ) [inline]
```

Print a null-terminated string to the output stream, adding a new line character at the end.

str is the null-terminated string to output.

Returns

the number of bytes sent to the output stream.

```
9.10.3.10 size_t Writer::println ( const uint8_t * buf, size_t size ) [inline]
```

Print a number of bytes to the output stream, adding a new line character at the end.

- buf is the buffer containing bytes to output.
- size is the number of bytes from the buffer to output.

Returns

the number of bytes sent to the output stream.

```
9.10.3.11 size_t Writer::println ( char c ) [inline]
```

Print a single character to the output stream, adding a new line character at the end.

- $_{\mbox{\scriptsize C}}$ is the character to output.

Returns

the number of bytes sent to the output stream.

```
9.10.3.12 size_t Writer::println ( unsigned char n, int base = kDec ) [inline]
```

Print an unsigned character to the output stream, adding a new line character at the end.

- n is the unsigned character to output.
- base is the base used to represent the number; should be one of IntegerOutputBase; defaults to decimal representation (kDec).

Returns

9.10 Writer Class Reference 91

```
9.10.3.13 size_t Writer::println ( int n, int base = kDec ) [inline]
```

Print an integer to the output stream, adding a new line character at the end.

- n is the integer to output.
- base is the base used to represent the number; should be one of IntegerOutputBase; defaults to decimal representation (kDec).

Returns

the number of bytes sent to the output stream.

```
9.10.3.14 size_t Writer::println ( unsigned int n, int base = kDec ) [inline]
```

Print an unsigned integer to the output stream, adding a new line character at the end.

- n is the unsigned integer to output.
- base is the base used to represent the number; should be one of IntegerOutputBase; defaults to decimal representation (kDec).

Returns

the number of bytes sent to the output stream.

```
9.10.3.15 size_t Writer::println ( long n, int base = kDec ) [inline]
```

Print a long integer to the output stream, adding a new line character at the end.

- n is the long integer to output.
- base is the base used to represent the number; should be one of IntegerOutputBase; defaults to decimal representation (kDec).

Returns

the number of bytes sent to the output stream.

```
9.10.3.16 size_t Writer::println ( unsigned long n, int base = kDec ) [inline]
```

Print an unsigned long integer to the output stream, adding a new line character at the end.

- n is the unsigned long integer to output.
- base is the base used to represent the number; should be one of IntegerOutputBase; defaults to decimal representation (kDec).

Returns

```
9.10.3.17 size_t Writer::println ( double d, int digits = 2 ) [inline]
```

Print a floating point number to the output stream, adding a new line character at the end.

- d is the flaoting point number to output.
- digits is the number of decimal digits to output; the default is 2.

Returns

the number of bytes sent to the output stream.

```
9.10.3.18 size_t Writer::write ( char c ) [pure virtual]
```

Pure virtual function that writes a single character to the output stream.

• c the character to be written.

Returns

the number of bytes written.

Implemented in Serial1, Serial2, Serial3, Serial0, and I2cLcd.

```
9.10.3.19 size_t Writer::write ( const char * str ) [pure virtual]
```

Pure virtual function that writes a null-terminated string to the output stream.

• str the string to be written.

Returns

the number of bytes written.

Implemented in Serial1, Serial2, Serial3, Serial0, and I2cLcd.

```
9.10.3.20 size_t Writer::write ( const char * buffer, size_t size ) [pure virtual]
```

Pure virtual function that writes a given number of characters from a buffer to the output stream.

- buffer the buffer of characters to write.
- · size the number of characters to write

Returns

the number of bytes written.

Implemented in Serial1, Serial2, Serial3, Serial0, and I2cLcd.

9.10 Writer Class Reference 93

```
9.10.3.21 size_t Writer::write(const uint8_t * buffer, size_t size) [pure virtual]
```

Pure virtual function that writes a given number of bytes from a buffer to the output stream.

- buffer the buffer of bytes to write.
- size the number of bytes to write

Returns

the number of bytes written.

Implemented in Serial1, Serial2, Serial3, Serial0, and I2cLcd.

The documentation for this class was generated from the following files:

- Writer.h
- Writer.cpp


Chapter 10

File Documentation

10.1 abi.h File Reference

This file provides certain functions needed to complete the avr-gcc C++ ABI. You never need to include this file, and you only need to link against abi.cpp if you encounter certain link errors.

#include <stdlib.h>
Include dependency graph for abi.h:



10.1.1 Detailed Description

This file provides certain functions needed to complete the avr-gcc C++ ABI. You never need to include this file, and you only need to link against abi.cpp if you encounter certain link errors.


If when building your project you get link-time errors about undefined references to symbols of the form $__cxa_XXX$ (e.g., $__cxa_pure_virtual$), then you should link your project against abi.cpp (there is no need to include abi.h in any of your sources.

If you don't encounter such errors, you can completely disregard both abi.h and abi.cpp.

10.2 Analog2Digital.h File Reference

This file provides functions that access the analog-to-digital conversion capability of the ATmega328 and ATmega2560 microcontrollers.

```
#include <stdint.h>
#include "GpioPinMacros.h"
Include dependency graph for Analog2Digital.h:
```

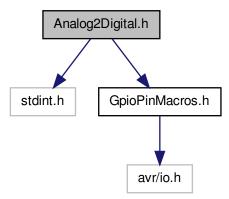

Macros

• #define readGpioPinAnalog(pinName)

Read the analog value of the pin.

Enumerations

 enum A2DVoltageReference { kA2dReferenceAREF, kA2dReferenceAVCC, kA2dReference11V, kA2d← Reference256V }

Constants representing voltage references.

Functions

int readA2D (int8_t channel)

Read an analog voltage value.

uint16_t readGpioPinAnalogV (const GpioPinVariable &pinVar)

Read the analog value of the pin.

void initA2D (uint8_t ref=kA2dReferenceAVCC)

Initialize the analog-to-digital system.

• void turnOffA2D ()

Turn off the analog-to-digital system.

void setA2DVoltageReference (A2DVoltageReference ref)

Set the voltage reference for the analog-to-digital system.

void setA2DVoltageReferenceAREF ()

Set the voltage reference for the analog-to-digital system to AREF.

void setA2DVoltageReferenceAVCC ()

Set the voltage reference for the analog-to-digital system to AREF.

void setA2DVoltageReference11V ()

Set the voltage reference for the analog-to-digital system to AREF.

void setA2DVoltageReference256V ()

Set the voltage reference for the analog-to-digital system to AREF.

10.2.1 Detailed Description

This file provides functions that access the analog-to-digital conversion capability of the ATmega328 and ATmega2560 microcontrollers.

To use these functions, include Analog2Digital.h in your source code and link against Analog2Digital.cpp.

10.2.2 Macro Definition Documentation

10.2.2.1 #define readGpioPinAnalog(pinName)

Read the analog value of the pin.

This function returns a number between 0 and 1023 that corresponds to voltage between 0 and a maximum reference value. The reference value is set using one of the setA2DVoltageReferenceXXX() functions.

• pinName a pin name macro generated by GpioPinAnalog().

Returns

an value between 0 and 1023.

Note

Before calling this function must fist initialize the analog-to-digital sub-system by calling initA2D().

10.2.3 Enumeration Type Documentation

10.2.3.1 enum A2DVoltageReference

Constants representing voltage references.

Enumerator

kA2dReferenceAREF Reference is AREF pin, internal VREF turned off.

kA2dReferenceAVCC Reference is AVCC pin, internal VREF turned off.

kA2dReference11V Reference is internal 1.1V VREF.

kA2dReference256V Reference is internal 2.56V VREF (only available on ATmega2560)

10.2.4 Function Documentation

10.2.4.1 void initA2D (uint8_t ref = kA2dReferenceAVCC)

Initialize the analog-to-digital system.

You must call this function before using any of the analog-to-digital functions.

• ref provides the voltage reference to be used for analog-to-digital conversions. Pass one of the constants from enum A2DVoltageReference. If no value is provided, the default is kA2dReferenceAVCC.

10.2.4.2 int readA2D (int8_t channel)

Read an analog voltage value.

Voltage is read relative to the currently set reference value.

• channel is an ADC channel number (between 0 and 7 on ATmega328; between 0 and 15 on ATMega2560).

Returns

a number between 0 and 1023.

Note

Generally users will not call this function but instead call readPinAnalog() passing it a pin name macro generated by Analog().

10.2.4.3 uint16_t readGpioPinAnalogV (const GpioPinVariable & pinVar) [inline]

Read the analog value of the pin.

This function returns a number between 0 and 1023 that corresponds to voltage between 0 and a maximum reference value. The reference value is set using one of the setA2DVoltageReferenceXXX() functions.

pinVar a pin variable that has analog-to-digital capabilities (i.e., initialized with makeGpioVarFromGpioPin←
Analog()).

Returns

an value between 0 and 1023.

Note

Before calling this function must fist initialize the analog-to-digital sub-system by calling initA2D().

10.2.4.4 void setA2DVoltageReference (A2DVoltageReference ref)

Set the voltage reference for the analog-to-digital system.

After your have initialized the analog-to-digital system with initA2D(), you can use this function to change the voltage reference.

 ref provides the voltage reference to be used for analog-to-digital conversions. Pass one of the constants from enum A2DVoltageReference.

```
10.2.4.5 void setA2DVoltageReference11V() [inline]
```

Set the voltage reference for the analog-to-digital system to AREF.

This is an inline synonym for setA2DVoltageReference(kA2dReference11V)

```
10.2.4.6 void setA2DVoltageReference256V() [inline]
```

Set the voltage reference for the analog-to-digital system to AREF.

This is an inline synonym for setA2DVoltageReference(kA2dReference256V)

Note

this function is only available on ATmega2560 (not on the ATmega328).

```
10.2.4.7 void setA2DVoltageReferenceAREF( ) [inline]
```

Set the voltage reference for the analog-to-digital system to AREF.

This is an inline synonym for setA2DVoltageReference(kA2dReferenceAREF)

```
10.2.4.8 void setA2DVoltageReferenceAVCC() [inline]
```


Set the voltage reference for the analog-to-digital system to AREF.

This is an inline synonym for setA2DVoltageReference(kA2dReferenceAVCC)


10.3 ArduinoMegaPins.h File Reference

This file defines the standard Arduino Uno pin name macros. It may be included directly by user code, although more commonly user code includes the file ArduinoPins.h, which in turn includes this file (when compiling for Arduino Uno targets).

#include "GpioPinMacros.h"
Include dependency graph for ArduinoMegaPins.h:

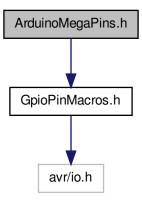

This graph shows which files directly or indirectly include this file:



10.3.1 Detailed Description

This file defines the standard Arduino Uno pin name macros. It may be included directly by user code, although more commonly user code includes the file ArduinoPins.h, which in turn includes this file (when compiling for Arduino Uno targets).

The standard Arduino Uno digital pins will be defined as pPin00 through pPin53.


The standard Arduino Uno analog pins will be defined as pPinA00 through pPinA15.

Additionally, the I2C SDA and SCL pins are also defined as pSDA and pSCL (these are synonyms for pPin20 and pPin21, respectively).

10.4 ArduinoPins.h File Reference

This file is the primary one that users should include to access and use the pin name macros.

#include "ArduinoMegaPins.h"
Include dependency graph for ArduinoPins.h:

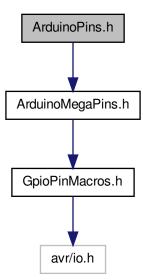

10.4.1 Detailed Description

This file is the primary one that users should include to access and use the pin name macros.

Including this file will automatically include either the default Arduino Uno pin names (by including ArduinoUnoPins.h) or the default Arduino Mega pin names (by including ArduinoMegaPins.h).


The standard Arduino digital pins will be defined in the form pPinNN (where NN = 00 through 13 for Arduino Uno, and 00 through 53 for Arduino Mega).

The standard Arduino analog pins will be defined in the form pPinAxx (where xx = 00 through 07 for Arduino Uno, and xx = 00 through 15 for Arduino Mega).

10.5 ArduinoUnoPins.h File Reference

This file defines the standard Arduino Uno pin name macros. It may be included directly by user code, although more commonly user code includes the file ArduinoPins.h, which in turn includes this file (when compiling for Arduino Uno targets).

#include "GpioPinMacros.h"
Include dependency graph for ArduinoUnoPins.h:

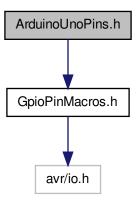

10.5.1 Detailed Description

This file defines the standard Arduino Uno pin name macros. It may be included directly by user code, although more commonly user code includes the file ArduinoPins.h, which in turn includes this file (when compiling for Arduino Uno targets).

The standard Arduino Uno digital pins will be defined as pPin00 through pPin13.

The standard Arduino Uno analog pins will be defined as pPinA00 through pPinA07.


Additionally, the I2C SDA and SCL pins are also defined as pSDA and pSCL (these are synonyms for pPinA04 and pPinA05, respectively).

10.6 GpioPinMacros.h File Reference


This file contains the primary macros for naming and manipulating GPIO pin names.

#include <avr/io.h>

Include dependency graph for GpioPinMacros.h:



This graph shows which files directly or indirectly include this file:

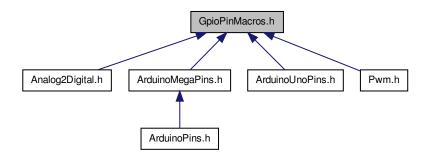

Classes

• class GpioPinVariable

This class defines a type that can encode a GPIO pin as a variable. Read the section on GPIO Pin Variables to understand how to use this class.

Macros

• #define GpioPin(portLtr, pinNbr)

Primary macro-function for defining a GPIO pin name.

#define GpioPinAnalog(portLtr, pinNbr, adcNbr)

Secondary macro-function for defining a GPIO pin name for GPIO pins that support analog conversion.

• #define GpioPinPwm(portLtr, pinNbr, timer, chan)

Secondary macro-function for defining a GPIO pin name for GPIO pins that support PWM output.

#define setGpioPinModeOutput(pinName)

Set the mode of the GPIO pin to output (i.e., set the corresponding DDRn bit).

• #define setGpioPinModeInput(pinName)

Set the mode of the GPIO pin to input (i.e., clear the corresponding DDRn and PORTn bits).

#define setGpioPinModeInputPullup(pinName)

Set the mode of the GPIO pin to input with pullup (i.e., clear the corresponding DDRn bit and set the PORTn bit).

#define readGpioPinDigital(pinName)

Read the value of the GPIO pin (i.e., return the value of correspoinding the PINn bit).

#define writeGpioPinDigital(pinName, val)

Write a value the GPIO pin (i.e., set or clear the correspoinding the PORTn bit).

#define setGpioPinHigh(pinName)

Write a 1 to the GPIO pin (i.e., set the correspoinding the PORTn bit).

#define setGpioPinLow(pinName)

Write a 0 the GPIO pin (i.e., clear the correspoinding the PORTn bit).

#define getGpioDDR(pinName)

Get the DDRn corresponding to this GPIO pin.

#define getGpioPORT(pinName)

Get the PORTn corresponding to this GPIO pin.

#define getGpioPIN(pinName)

Get the bit number corresponding to this GPIO pin.

#define getGpioMASK(pinName)

Get the bit mask corresponding to this GPIO pin.

#define getGpioADC(pinName)

Get the ADC channel corresponding to this GPIO pin, assuming it is an ADC capable GPIO pin.

#define getGpioOCR(pinName)

Get the OCR register corresponding to this GPIO pin, assuming it is a PWM capable GPIO pin.

#define getGpioCOM(pinName)

Get the COM bit name corresponding to this GPIO pin, assuming it is a PWM capable GPIO pin.

• #define getGpioTCCR(pinName)

Get the TCCR register corresponding to this GPIO pin, assuming it is a PWM capable GPIO pin.

#define makeGpioVarFromGpioPin(pinName)

Create a GPIO pin variable of type GpioPinVariable from a GPIO pin macro.

• #define makeGpioVarFromGpioPinAnalog(pinName)

Create a GPIO pin variable of type GpioPinVariable that can be used for analog-to-digital reading from a GPIO pin macro.

#define makeGpioVarFromGpioPinPwm(pinName)

Create a GPIO pin variable of type GpioPinVariable that can be used for PWM from a GPIO pin macro.

Enumerations

• enum { kDigitalLow = 0, kDigitalHigh = 1 }

Constants for digital values representing LOW and HIGH.

Functions

void setGpioPinModeOutputV (const GpioPinVariable &pinVar)

Set the mode of the GPIO pin to output (i.e., set the corresponding DDRn bit).

void setGpioPinModeInputV (const GpioPinVariable &pinVar)

Set the mode of the GPIO pin to input (i.e., clear the corresponding DDRn and PORTn bits).

void setGpioPinModeInputPullupV (const GpioPinVariable &pinVar)

Set the mode of the GPIO pin to input with pullup (i.e., clear the corresponding DDRn bit and set the PORTn bit).

bool readGpioPinDigitalV (const GpioPinVariable &pinVar)

Read the value of the GPIO pin (i.e., return the value of correspoinding the PINn bit).

void writeGpioPinDigitalV (const GpioPinVariable &pinVar, bool value)

Write a value the GPIO pin (i.e., set or clear the corresponding the PORTn bit).

void setGpioPinHighV (const GpioPinVariable &pinVar)

Write a 1 to the GPIO pin (i.e., set the correspoinding the PORTn bit).

void setGpioPinLowV (const GpioPinVariable &pinVar)

Write a 0 to the GPIO pin (i.e., clear the corresponding the PORTn bit).

10.6.1 Detailed Description

This file contains the primary macros for naming and manipulating GPIO pin names.

Normally you do not include this file directly. Instead include either ArduinoPins.h, which will automatically include this file.

10.6.2 Macro Definition Documentation

10.6.2.1 #define getGpioADC(pinName)

Get the ADC channel corresponding to this GPIO pin, assuming it is an ADC capable GPIO pin.

pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().

Returns

a number between 0-7 (for ATmega328) or between 0-15 (for ATmega2560).

10.6.2.2 #define getGpioCOM(pinName)

Get the COM bit name corresponding to this GPIO pin, assuming it is a PWM capable GPIO pin.

pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().

Returns

a COMn[A/B]1 bit name (e.g., COM2B1)

```
10.6.2.3 #define getGpioDDR( pinName )
Get the DDRn corresponding to this GPIO pin.
   • pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().
Returns
     a DDRn register name (e.g., DDRB)
10.6.2.4 #define getGpioMASK( pinName )
Get the bit mask corresponding to this GPIO pin.
   • pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().
Returns
     a byte-sized bitmask
10.6.2.5 #define getGpioOCR( pinName )
Get the OCR register corresponding to this GPIO pin, assuming it is a PWM capable GPIO pin.
   • pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().
Returns
     a OCRn[A/B] register name (e.g., OCR2B)
10.6.2.6 #define getGpioPIN( pinName )
Get the bit number corresponding to this GPIO pin.
   • pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().
Returns
     a number between 0 and 7
```

10.6.2.7 #define getGpioPORT(pinName)

Get the PORTn corresponding to this GPIO pin.

• pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().

Returns

a PORTn register name (e.g., PORTB)

10.6.2.8 #define getGpioTCCR(pinName)

Get the TCCR register corresponding to this GPIO pin, assuming it is a PWM capable GPIO pin.

• pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().

Returns

a TCCTn[A/B] register name (e.g., TCCR2B)

10.6.2.9 #define GpioPin(portLtr, pinNbr)

Primary macro-function for defining a GPIO pin name.

- portLtr an uppercase letter identifying the port (e.g., A, B, C, ...) the GPIO pin belongs to.
- pinNbr a number between 0 and 7 identifying the bit on that port that corresponds to the GPIO pin.

10.6.2.10 #define GpioPinAnalog(portLtr, pinNbr, adcNbr)

Secondary macro-function for defining a GPIO pin name for GPIO pins that support analog conversion.

- portLtr an uppercase letter identifying the port (e.g., A, B, C, ...) the GPIO pin belongs to.
- pinNbr a number between 0 and 7 identifying the bit on that port that corresponds to the GPIO pin.
- adcNbr a number representing the ADC converter channel corresponding to this GPIO pin (0-7 for ArduinoUno;
 0-15 for ArduinoMega)

10.6.2.11 #define GpioPinPwm(portLtr, pinNbr, timer, chan)

Secondary macro-function for defining a GPIO pin name for GPIO pins that support PWM output.

- portLtr an uppercase letter identifying the port (e.g., A, B, C, ...) the GPIO pin belongs to.
- pinNbr a number between 0 and 7 identifying the bit on that port that corresponds to the GPIO pin.
- timer a number representing the timer number associated with the PWM function on this GPIO pin.
- chan a letter (A, B, or C) representing the channel on the timer associated with the PWM function on this GPIO pin.

10.6.2.12 #define makeGpioVarFromGpioPin(pinName)

Create a GPIO pin variable of type GpioPinVariable from a GPIO pin macro.

pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().

Returns

a GpioPinVariable.

```
10.6.2.13 #define makeGpioVarFromGpioPinAnalog( pinName )
```

Create a GPIO pin variable of type GpioPinVariable that can be used for analog-to-digital reading from a GPIO pin macro.

• pinName a GPIO pin name macro generated by GpioPinAnalog().

Returns

a GpioPinVariable that can be used for analog-to-digital reading.

```
10.6.2.14 #define makeGpioVarFromGpioPinPwm( pinName )
```

Create a GPIO pin variable of type GpioPinVariable that can be used for PWM from a GPIO pin macro.

• pinName a GPIO pin name macro generated by GpioPinPwm().

Returns

a GpioPinVariable that can be used for PWM.

```
10.6.2.15 #define readGpioPinDigital( pinName )
```

Read the value of the GPIO pin (i.e., return the value of correspoinding the PINn bit).

• pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().

Returns

0 or 1

10.6.2.16 #define setGpioPinHigh(pinName)

Write a 1 to the GPIO pin (i.e., set the correspoinding the PORTn bit).

• pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().

10.6.2.17 #define setGpioPinLow(pinName)

Write a 0 the GPIO pin (i.e., clear the correspoinding the PORTn bit).

• pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().

10.6.2.18 #define setGpioPinModeInput(pinName)

Set the mode of the GPIO pin to input (i.e., clear the corresponding DDRn and PORTn bits).

• pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().

10.6.2.19 #define setGpioPinModeInputPullup(pinName)

Set the mode of the GPIO pin to input with pullup (i.e., clear the corresponding DDRn bit and set the PORTn bit).

pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().

10.6.2.20 #define setGpioPinModeOutput(pinName)

Set the mode of the GPIO pin to output (i.e., set the corresponding DDRn bit).

pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().

10.6.2.21 #define writeGpioPinDigital(pinName, val)

Write a value the GPIO pin (i.e., set or clear the correspoinding the PORTn bit).

- pinName a GPIO pin name macro generated by either GpioPin(), GpioPinAnalog(), or GpioPinPwm().
- val the value to be written: 0 means to clear the GPIO pin; any other value means to set it.

10.6.3 Enumeration Type Documentation

10.6.3.1 anonymous enum

Constants for digital values representing LOW and HIGH.

Enumerator

kDigitalLow Value representing digital LOW.kDigitalHigh Value representing digital HIGH.

10.6.4 Function Documentation

10.6.4.1 bool readGpioPinDigitalV (const GpioPinVariable & pinVar) [inline]

Read the value of the GPIO pin (i.e., return the value of correspoinding the PINn bit).

• pinVar a GPIO pin variable of type GpioPinVariable.

Returns

0 or 1

```
10.6.4.2 void setGpioPinHighV (const GpioPinVariable & pinVar) [inline]
Write a 1 to the GPIO pin (i.e., set the correspoinding the PORTn bit).
    • pinVar a GPIO pin variable of type GpioPinVariable.
10.6.4.3 void setGpioPinLowV (const GpioPinVariable & pinVar) [inline]
Write a 0 to the GPIO pin (i.e., clear the correspoinding the PORTn bit).
    • pinVar aa GPIO pin variable of type GpioPinVariable.
10.6.4.4 void setGpioPinModeInputPullupV (const GpioPinVariable & pinVar) [inline]
Set the mode of the GPIO pin to input with pullup (i.e., clear the corresponding DDRn bit and set the PORTn bit).
    • pinVar a GPIO pin variable of type GpioPinVariable.
10.6.4.5 void setGpioPinModeInputV (const GpioPinVariable & pinVar) [inline]
Set the mode of the GPIO pin to input (i.e., clear the corresponding DDRn and PORTn bits).

    pinVar a GPIO pin name variable of type GpioPinVariable.

10.6.4.6 void setGpioPinModeOutputV (const GpioPinVariable & pinVar) [inline]
Set the mode of the GPIO pin to output (i.e., set the corresponding DDRn bit).
    • pinVar a GPIO pin variable of type GpioPinVariable.
10.6.4.7 void writeGpioPinDigitalV (const GpioPinVariable & pinVar, bool value) [inline]
Write a value the GPIO pin (i.e., set or clear the correspoinding the PORTn bit).
```

• pinVar a GPIO pin variable of type GpioPinVariable.

val the value to be written: 0 means to clear the GPIO pin; any other value means to set it.


10.7 I2cLcd.h File Reference

10.7 I2cLcd.h File Reference

This file defines a class that provides a high-level interface to an LCD offering an I2C interface. The most common variant of this is HD44780U controlled LCD driven via an MCP23017 that offers an I2C interface (such LCDs are available from Adafruit and SparkFun). To use this class you must also use and properly initialize the I2C Master package from I2cMaster.h.

```
#include <inttypes.h>
#include "Writer.h"
```

Include dependency graph for I2cLcd.h:

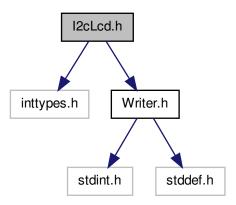

Classes

class I2cLcd

This class provides a high-level interface via I2C to an LCD such as those offered by AdaFruit and SparkFun. Specifically, it communicates via I2C with an MCP23017 that drives an HD44780U controlling an LCD. It also lets you detect button presses on the 5-button keypad generally assocaited with such devices.

10.7.1 Detailed Description

This file defines a class that provides a high-level interface to an LCD offering an I2C interface. The most common variant of this is HD44780U controlled LCD driven via an MCP23017 that offers an I2C interface (such LCDs are available from Adafruit and SparkFun). To use this class you must also use and properly initialize the I2C Master package from I2cMaster.h.

To use these features, include I2cLcd.h in your source code and link against I2cLcd.cpp and I2cMaster.cpp.


10.8 I2cMaster.h File Reference

This file provides functions that interface to the TWI (two-wire serial interface) hardware of the Arduino Uno (ATmega328) and Arduino Mega (ATmega2560), providing a high-level interface to I2C protocol communications. Include this file if

you want your application will operate in Master mode as defined in the I2C protocol.

```
#include <stdint.h>
#include <stdlib.h>
#include <util/atomic.h>
```

Include dependency graph for I2cMaster.h:

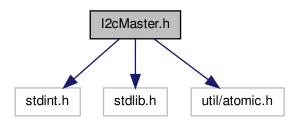

Namespaces

I2cMaster

This namespace bundles the I2C-protocol-based interface to the TWI hardware. It provides logical cohesion for functions implement the Master portions of the I2C protocol and prevents namespace collisions.

Enumerations

enum I2cMaster::I2cBusSpeed { I2cMaster::kI2cBusSlow, I2cMaster::kI2cBusFast }

This enum lists I2C bus speed configurations.

enum I2cMaster::I2cStatusCodes { I2cMaster::kI2cCompletedOk = 0x00, I2cMaster::kI2cError = 0x01, I2c
 Master::kI2cNotStarted = 0x02, I2cMaster::kI2cInProgress = 0x04 }

This enum lists I2C status codes reported by the various transmit functions.

enum I2cMaster::I2cSendErrorCodes {

I2cMaster::kI2cNoError = 0, I2cMaster::kI2cErrTxBufferFull = 1, I2cMaster::kI2cErrMsgTooLong = 2, I2cMaster ↔ ::kI2cErrNullStatusPtr = 3,

I2cMaster::kI2cErrWriteWithoutData = 4, I2cMaster::kI2cErrReadWithoutStorage = 5 }

This enum lists I2C errors codes that may occur when you try to write a message.

enum I2cMaster::I2cPullups { I2cMaster::kPullupsOff, I2cMaster::kPullupsOn }

This enum lists the options for controlling the built-in pullups in the TWI hardware.

Functions

void I2cMaster::start (uint8 t speed=kl2cBusFast)

Configures the TWI hardware for I2C communications in Master mode. You must call this function before conducting any I2C communications using the functions in this module.

void I2cMaster::stop ()

Terminates the I2C communications using the TWI hardware, and disables the TWI interrupts.

void I2cMaster::pullups (uint8_t set=kPullupsOn)

Sets the state of the internal pullups that are part of the TWI hardware.

bool I2cMaster::busy ()

Reports whether the TWI hardware is busy communicating (either transmitting or receiving).

uint8 t I2cMaster::writeAsync (uint8 t address, uint8 t registerAddress, volatile uint8 t *status)

Transmit a single register address (a one-byte message) asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function).

uint8 t l2cMaster::writeAsync (uint8 t address, uint8 t registerAddress, uint8 t data, volatile uint8 t *status)

Transmit a single register address and corresponding single byte of data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function).

uint8_t l2cMaster::writeAsync (uint8_t address, uint8_t registerAddress, const char *data, volatile uint8_t *status)

Transmit a single register address and corresponding null-terminated string of data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function).

• uint8_t l2cMaster::writeAsync (uint8_t address, uint8_t registerAddress, uint8_t *data, uint8_t numberBytes, volatile uint8_t *status)

Transmit a single register address and corresponding buffer of data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function).

uint8_t l2cMaster::readAsync (uint8_t address, uint8_t numberBytes, volatile uint8_t *destination, volatile uint8 ← t *bytesRead, volatile uint8 t *status)

Request to read data from a device and receive that data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function). When the status variable reports kl2cCompletedOk, the requested data can be read from the receive buffer.

uint8_t I2cMaster::readAsync (uint8_t address, uint8_t registerAddress, uint8_t numberBytes, volatile uint8_
 t *destination, volatile uint8 t *bytesRead, volatile uint8 t *status)

Request to read data from a specific register on a device and receive that data asynchronously. This function queues the message and returns immediately. Eventual status of the transmitted message can be monitored via the designated status variable (passed as a pointer to this function). When the status variable reports kl2cCompletedOk, the requested data can be read from the receive buffer.

int I2cMaster::writeSync (uint8_t address, uint8_t registerAddress)

Transmit a single register address (a one-byte message) synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

int I2cMaster::writeSync (uint8_t address, uint8_t registerAddress, uint8_t data)

Transmit a single register address and corresponding single byte of data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

int I2cMaster::writeSync (uint8_t address, uint8_t registerAddress, const char *data)

Transmit a single register address and corresponding null-terminated string of data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

int I2cMaster::writeSync (uint8 t address, uint8 t registerAddress, uint8 t *data, uint8 t numberBytes)

Transmit a single register address and corresponding buffer of data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

int I2cMaster::readSync (uint8_t address, uint8_t numberBytes, uint8_t *destination)

Request to read data from a device and receive that data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

• int I2cMaster::readSync (uint8_t address, uint8_t registerAddress, uint8_t numberBytes, uint8_t *destination)

Request to read data from a specific register on a device and receive that data synchronously. This function blocks until the communications exchange is complete or encounters an error. Error codes are returned (0 means no error).

10.8.1 Detailed Description

This file provides functions that interface to the TWI (two-wire serial interface) hardware of the Arduino Uno (ATmega328) and Arduino Mega (ATmega2560), providing a high-level interface to I2C protocol communications. Include this file if you want your application will operate in Master mode as defined in the I2C protocol.

To use these functions, include I2cMaster.h and link against I2cMaster.cpp.

These interfaces are buffered for both input and output and operate using interrupts associated with the TWI hardware. This means the asynchronous transmit functions return immediately after queuing data in the output buffer for transmission and the transmission happens asynchronously, using dedicated TWI hardware. Similarly, data is received asynchronously and placed into the input buffer.

The transmit buffer is a ring buffer. If you try to queue more data than the transmit buffer can hold, the write functions will block until there is room in the buffer (as a result of data being transmitted). Receive buffers are provided by the callers of these functions. Note that due to the nature of the I2C protocol, Master I2C "read" operations must still write a command instructing the destination device to send data for the Master to read, and thus "read" operations still utilize the transmit buffer.

The size of the transmit buffer can be set at compile time via macro constants (the receive buffers are provided the corresponding functions are called). The default size of the transmit buffer assumes the maximum transmit message length is 24 bytes and allows 3 out-going messages to be queued. You can change these defaults by defining the macros I2C_MASTER_MAX_TX_MSG_LEN to specify the maximum transmit message length and I2C_MASTER_MAX_T \leftarrow X_MSG_NBR to specify the maximum number of transmit messages to hold in the buffer. You need to make these define these macros prior to including the file I2cMaster.h, each time it is included. So you should define these using a compiler option (e.g., -DI2C_MASTER_MAX_TX_MSG_LEN=32 -DI2C_MASTER_MAX_TX_MSG_NBR=5) to ensure they are consistently defined throughout your project.

This interface assumes your application will operator in I2C Master mode as defined in the I2C protocol. If you wish your application to operate in I2C Slave mode, then instead include I2cSlave.h and link against I2cSlave.cpp.


Note

Only one of I2cMaster.cpp and I2cSlave.cpp can be linking into your application. These two files install different, incompatible versions of the TWI interrupt function. AVRTools does not support building an application that functions both as a Master and as a Slave under the I2C protocol. This limitation allows the corresponding TWI interrupt functions to be significantly leaner and faster.

10.9 I2cSlave.h File Reference

This file provides functions that interface to the TWI (two-wire serial interface) hardware of the Arduino Uno (ATmega328) and Arduino Mega (ATmega2560), providing a high-level interface to I2C protocol communications. Include this file if you want your application will operate in Slave mode as defined in the I2C protocol.

#include <stdint.h>
Include dependency graph for I2cSlave.h:



Namespaces

I2cSlave

This namespace bundles the I2C-protocol-based interface to the TWI hardware. It provides logical cohesion for functions implement the Slave portions of the I2C protocol and prevents namespace collisions.

Enumerations

enum I2cSlave::l2cBusSpeed { I2cSlave::kI2cBusSlow, I2cSlave::kI2cBusFast }

This enum lists I2C bus speed configurations.

enum I2cSlave::I2cStatusCodes {
 I2cSlave::kI2cCompletedOk = 0x00, I2cSlave::kI2cError = 0x01, I2cSlave::kI2cTxPartial = 0x02, I2cSlave::kI2c←
 RxOverflow = 0x04,
 I2cSlave::kI2cInProgress = 0x06 }

This enum lists I2C status codes reported by the various transmit functions.

enum I2cSlave::I2cPullups { I2cSlave::kPullupsOff, I2cSlave::kPullupsOn }

This enum lists the options for controlling the built-in pullups in the TWI hardware.

Functions

uint8_t l2cSlave::processl2cMessage (uint8_t *buffer, uint8_t len)

This function must be defined by the user. It is called by the TWI interrupt function installed as part of I2cSlave.cpp whenever it receives a message from the Master. The user should implement this function to respond to the data in the buffer, taking actions and as appropriate returning data to the buffer (for asynchronous transmission to the Master).

void I2cSlave::start (uint8_t ownAddress, uint8_t speed=kl2cBusFast, bool answerGeneralCall=false)

Configures the TWI hardware for I2C communications in Slave mode. You must call this function before conducting any I2C communications using the functions in this module.

void I2cSlave::stop ()

Terminates the I2C communications using the TWI hardware, and disables the TWI interrupts.

void I2cSlave::pullups (uint8_t set=kPullupsOn)

Sets the state of the internal pullups that are part of the TWI hardware.

• bool I2cSlave::busy ()

Reports whether the TWI hardware is busy communicating (either transmitting or receiving).

10.9.1 Detailed Description

This file provides functions that interface to the TWI (two-wire serial interface) hardware of the Arduino Uno (ATmega328) and Arduino Mega (ATmega2560), providing a high-level interface to I2C protocol communications. Include this file if you want your application will operate in Slave mode as defined in the I2C protocol.

To use these functions, include I2cSlave.h and link against I2cSlave.cpp.

These interfaces are buffered for recieving and sending data and operate using interrupts associated with the TWI hardware. This means data from the Master is received asynchronously and when reception is complete, a user-supplied function is called. That function has the option of placing data in a buffer to be transmitted asynchronously back to the Master.

The Slave buffer is a simple array. The size of the Slave buffer can be set at compile time via the macro constant I2C← _SLAVE_BUFFER_SIZE. The default size of the Slave buffer is 32 bytes. You can change the default by defining the macro I2C_SLAVE_BUFFER_SIZE prior to including the file l2cSlave.h, each time it is included. So you should define it using a compiler option (e.g., ¬DI2C_SLAVE_BUFFER_SIZE=64) to ensure it is consistently defined throughout your project.

This interface assumes your application will operator in I2C Slave mode as defined in the I2C protocol. If you wish your application to operate in I2C Master mode, then instead include I2cMaster.h and link against I2cMaster.cpp.

Note

Only one of I2cMaster.cpp and I2cSlave.cpp can be linking into your application. These two files install different, incompatible versions of the TWI interrupt function. AVRTools does not support building an application that functions both as a Master and as a Slave under the I2C protocol. This limitation allows the corresponding TWI interrupt functions to be significantly leaner and faster.

10.10 InitSystem.h File Reference

Include this file to use the functions that initialize the microcontroller to a known, basic state.

Functions

· void initSystem ()

This function initializes the microcontroller by clearing any bootloader settings, clearing all timers, and turning on interrupts.

10.10.1 Detailed Description

Include this file to use the functions that initialize the microcontroller to a known, basic state.

To use these functions, include InitSystem.h in your source code and link against InitSystem.cpp.

10.10.2 Function Documentation

10.10.2.1 void initSystem ()

This function initializes the microcontroller by clearing any bootloader settings, clearing all timers, and turning on interrupts.

This function is generally called at the very beginning of main ().

10.11 MemUtils.h File Reference

This file provides functions that provide information on the available memory in SRAM.

Namespaces

MemUtils

A namespace providing encapsulation for functions that report the available memory in SRAM.

Functions

• unsigned int MemUtils::freeRam ()

Get the number of free bytes remaining in SRAM.

unsigned int MemUtils::freeRamQuickEstimate ()

Get a quick estimate of the number of free bytes remaining in SRAM.

10.11.1 Detailed Description

This file provides functions that provide information on the available memory in SRAM.


To use these functions, include MemUtils.h in your source code and link against MemUtils.cpp.

These functions are wrapped in namespace MemUtils to avoid namespace collisions.

10.12 new.h File Reference

This file provides operator new and operator delete. You only need this file if you use new and delete to manage objects on the heap.

#include <stdlib.h>
Include dependency graph for new.h:



10.12.1 Detailed Description

This file provides operator new and operator delete. You only need this file if you use new and delete to manage objects on the heap.

If you do use new and delete, then include new.h in your source files and link your project against new.cpp.

Note

The AVRTools library does not itself make any use of heap storage or the new or delete operators.


10.13 Pwm.h File Reference

This file provides functions that access the PWM capability of the ATmega328 and ATmega2560 microcontrollers.

```
#include <stdint.h>
#include "GpioPinMacros.h"
```

10.13 Pwm.h File Reference 119

Include dependency graph for Pwm.h:

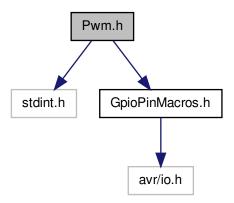

Macros

• #define writeGpioPinPwm(pinName, value)

Write a PWM value to a pin.

Functions

• void writeGpioPinPwmV (const GpioPinVariable &pinVar, uint8_t value)

Write a PWM value to a pin.

void initPwmTimer0 ()

Initialize timer0 for PWM.

void initPwmTimer1 ()

Initialize timer1 for PWM.

void initPwmTimer2 ()

Initialize timer2 for PWM.

• void clearTimer0 ()

Clear timer0.

void clearTimer1 ()

Clear timer1.

· void clearTimer2 ()

Clear timer2.

void initPwmTimer3 ()

Initialize timer3 for PWM.

void initPwmTimer4 ()

Initialize timer4 for PWM.

• void initPwmTimer5 ()

Initialize timer5 for PWM.

• void clearTimer3 ()

Clear timer3.

· void clearTimer4 ()

Clear timer4.

• void clearTimer5 ()

Clear timer5.

10.13.1 Detailed Description

This file provides functions that access the PWM capability of the ATmega328 and ATmega2560 microcontrollers.

To use these functions, include Pwm.h in your source code and link against Pwm.cpp.

Before you use the writePinPwm() function, you must first initialize the appropriate timers using the appropriate init←PwmTimerN() function.

The association between PWN pins and timers is as follows:

For Arduino Uno (ATmega328)

Arduino Uno pin	ATmega328 pin	Timer
3	PD3	timer2
5	PD5	timer0
6	PD6	timer0
9	PB1	timer1
10	PB2	timer1
11	PB3	timer2

For Arduino Mega (ATmega2560)

Arduino Mega pin	ATmega2560 pin	Timer
2	PE4	timer3
3	PE5	timer3
4	PG5	timer0
5	PE3	timer3
6	PH3	timer4
7	PH4	timer4
8	PH5	timer4
9	PH6	timer2
10	PB4	timer2
11	PB5	timer1
12	PB6	timer1
13	PB7	timer0
44	PL5	timer5
45	PL4	timer5
46	PL3	timer5

Note

Timer0 is also used by the system clock. *Do not initialize or clear timer0* if you are also using the system clock function from SystemClock.h. If you are using the system clock function, you can use timer0-based PWM functions *without* having to call initPwmTimer0().

10.13.2 Macro Definition Documentation

10.13 Pwm.h File Reference 121

```
10.13.2.1 #define writeGpioPinPwm( pinName, value )
```

Write a PWM value to a pin.

This sets the duty cycle for the PWM on the pin. Completely off is represented by 0; completely on is represented by 1.

Before calling this function, you must initialize the appropriate timer by calling initPwmTimerN(), where N = 1, 2, 3, 4, or 5 is the timer corresponding to that particular pin.

- pinName a pin name macro generated by GpioPinPwm().
- value a value between 0 and 255.

Note

Timer0 is also used by the system clock. *Do not initialize or clear timer0* if you are also using the system clock function from SystemClock.h. If you are using the system clock function, you can use timer0-based PWM functions *without* having to call initPwmTimer0().

You can temporarily turn off PWM by writing a 0 to the pin with writePinPwm(pin, 0). In particular, this is how to turn off PWM to pins associated with timer0 when timer0 is also being used by the system clock.

10.13.3 Function Documentation

```
10.13.3.1 void clearTimer0 ( )
```

Clear timer0.

This function clears timer0.

Note

Timer0 is also used by the system clock. *Do not clear timer0* if you are also using the system clock function from SystemClock.h.

Only call this function if you called initPwmTimer0() instead of initSystemClock().

Note

To turn off PWM on pins associated with timer0 while also using the system clock, write a zero to the pin by calling writePinPwm(pinName, 0).

```
10.13.3.2 void clearTimer1 ( )
```

Clear timer1.

This function clears timer1, turning off the PWM functionality.

```
10.13.3.3 void clearTimer2 ( )
```

Clear timer2.

This function clears timer2, turning off the PWM functionality.

```
10.13.3.4 void clearTimer3 ( )
```

Clear timer3.

This function clears timer3, turning off the PWM functionality.

Note

This function is only available on Arduino Mega (ATmega2560).

```
10.13.3.5 void clearTimer4 ( )
```

Clear timer4.

This function clears timer4, turning off the PWM functionality.

Note

This function is only available on Arduino Mega (ATmega2560).

```
10.13.3.6 void clearTimer5 ( )
```

Clear timer5.

This function clears timer5, turning off the PWM functionality.

Note

This function is only available on Arduino Mega (ATmega2560).

```
10.13.3.7 void initPwmTimer0 ( )
```

Initialize timer0 for PWM.

This function sets timer0 for phase-correct PWM mode. You must call this function or initSystemClock() before calling writePinPwm() on a PWM pin associated with timer0.

The PWM pins supported by timer0 are:

- Arduino Uno (ATmega328): pin 5 (PD5), pin 6 (PD6)
- Arduino Mega (ATmega2560): pin 4 (PG5), pin 13 (PB7)

Note

Timer0 is also used by the system clock. *Do not initialize timer0* if you are also using the system clock function from SystemClock.h.

The function initSystemClock() puts timer0 in fast PWM mode. While this is different than the phase-correct PWM mode preferred for PWM usage, fast PWM mode still allows PWM operations on the associated pins. However, the duty cycles may be slightly off, and calling writePinPwm(pin, 0) may not completely turn off output on the pins associated with timer0.

Only call initPwmTimer0() if you did *not* call initSystemClock() (i.e., you are *not* using the system clock) and you wish to use PWM on the pins associate with timer0.

10.13 Pwm.h File Reference 123

Note

To turn off PWM on pins associated with timer0 while also using the system clock, write a zero to the pin by calling writePinPwm(pinName, 0).

```
10.13.3.8 void initPwmTimer1 ( )
```

Initialize timer1 for PWM.

This function sets timer1 for phase-correct PWM mode. You must call this function before calling writePinPwm() on a PWM pin associated with timer1.

The PWM pins supported by timer1 are:

- Arduino Uno (ATmega328): pin 9 (PB1), pin 10 (PB2)
- Arduino Mega (ATmega2560): pin 11 (PB5), pin 12 (PB6)

```
10.13.3.9 void initPwmTimer2 ( )
```

Initialize timer2 for PWM.

This function sets timer2 for phase-correct PWM mode. You must call this function before calling writePinPwm() on a PWM pin associated with timer2.

The PWM pins supported by timer2 are:

- Arduino Uno (ATmega328): pin 3 (PD3), pin 11 (PB3)
- Arduino Mega (ATmega2560): pin 9 (PH6), pin 10 (PB4)

```
10.13.3.10 void initPwmTimer3 ( )
```

Initialize timer3 for PWM.

This function sets timer3 for phase-correct PWM mode. You must call this function before calling writePinPwm() on a PWM pin associated with timer3.

The PWM pins supported by timer3 are:

• Arduino Mega (ATmega2560): pin 2 (PE4), pin 3 (PE5)

Note

This function is only available on Arduino Mega (ATmega2560).

```
10.13.3.11 void initPwmTimer4 ( )
```

Initialize timer4 for PWM.

This function sets timer4 for phase-correct PWM mode. You must call this function before calling writePinPwm() on a PWM pin associated with timer4.

The PWM pins supported by timer4 are:

• Arduino Mega (ATmega2560): pin 6 (PH3), pin 7 (PH4), pin 8 (PH5)

Note

This function is only available on Arduino Mega (ATmega2560).

10.13.3.12 void initPwmTimer5 ()

Initialize timer5 for PWM.

This function sets timer5 for phase-correct PWM mode. You must call this function before calling writePinPwm() on a PWM pin associated with timer5.

The PWM pins supported by timer5 are:

Arduino Mega (ATmega2560): pin 44 (PL5), pin 45 (PL4), pin 46 (PL3)

Note

This function is only available on Arduino Mega (ATmega2560).

10.13.3.13 void writeGpioPinPwmV (const GpioPinVariable & pinVar, uint8_t value) [inline]

Write a PWM value to a pin.

This sets the duty cycle for the PWM on the pin. Completely off is represented by 0; completely on is represented by 1.

Before calling this function, you must initialize the appropriate timer by calling initPwmTimerN(), where N = 1, 2, 3, 4, or 5 is the timer corresponding to that particular pin.

- pinVar a pin variable that has PWM capabilities (i.e., initialized with makeGpioVarFromGpioPinPwm()).
- · value a value between 0 and 255.

Note

Timer0 is also used by the system clock. *Do not initialize or clear timer0* if you are also using the system clock function from SystemClock.h. If you are using the system clock function, you can use timer0-based PWM functions *without* having to call initPwmTimer0().


You can temporarily turn off PWM by writing a 0 to the pin with writePinPwm(pin, 0). In particular, this is how to turn off PWM to pins associated with timer0 when timer0 is also being used by the system clock.

10.14 Reader.h File Reference


This file provides a generic interface to incoming data streams of any kind. It is designed around how serial streams are generally used, but can be used with any system that provides a sequential input of bytes that can be interpreted as strings and/or numbers.

```
#include <stddef.h>
#include <stdint.h>
```

Include dependency graph for Reader.h:

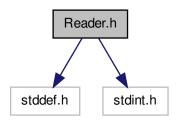

This graph shows which files directly or indirectly include this file:



Classes

class Reader

This is an abstract class defining a generic interface to read numbers and strings from a sequential stream of bytes (such as a serial device).


10.14.1 Detailed Description

This file provides a generic interface to incoming data streams of any kind. It is designed around how serial streams are generally used, but can be used with any system that provides a sequential input of bytes that can be interpreted as strings and/or numbers.

10.15 RingBuffer.h File Reference

This file provides an efficient ring buffer implementation for storing bytes.

#include <util/atomic.h>
Include dependency graph for RingBuffer.h:



Classes

• class RingBuffer

This class provides an efficient ring buffer implementation for storing bytes. Ring buffers are particularly useful for memory constrained microcontrollers such as the ATmega328 and ATmega2650. For maximum efficiency, this class is focused on the storgage of bytes, providing a single code base that is shared by all instances of this class.

10.15.1 Detailed Description


This file provides an efficient ring buffer implementation for storing bytes.

Ring buffers are particularly useful for memory constrained microcontrollers such as the ATmega328 and ATmega2650.

10.16 RingBufferT.h File Reference

This file provides a very flexible, template-based ring buffer implementation.

#include <util/atomic.h>
Include dependency graph for RingBufferT.h:



Classes

class RingBufferT< T, N, SIZE >

a template-based ring buffer class that can store different kinds of objects in buffers of whatever size is needed.

10.16.1 Detailed Description

This file provides a very flexible, template-based ring buffer implementation.


Ring buffers are versatile storage structures. This file provides a template-based ring buffer implementation that can store different kinds of objects in buffers of whatever size is needed.

10.17 SimpleDelays.h File Reference

This file provides simple delay functions that do not involve timers or interrupts. These functions simply execute a series of nested loops with known and precise timing.

#include <stdint.h>

Include dependency graph for SimpleDelays.h:



Functions

void delayQuartersOfMicroSeconds (uint16_t nbrOfQuartersOfMicroSeconds)

Delay a given number of quarter microseconds. Due to function call overhead, the smallest possible delay is just under 6 quarter microseconds (\sim 1.5 microseconds). Delays of 7 quarter microseconds or greater are reasonably accurate.

- void delayWholeMilliSeconds (uint8 t nbrOfMilliSeconds)
 - Delay a given number of milliseconds. Despite function call overhead, this function is accurate within a few hundreds of microseconds.
- void delayTenthsOfSeconds (uint8_t nbrOfTenthsOfSeconds)

Delay a given number of tenths of a seconds. Despite function call overhead, this function is accurate within a few hundreds of microseconds.

10.17.1 Detailed Description

This file provides simple delay functions that do not involve timers or interrupts. These functions simply execute a series of nested loops with known and precise timing.

For precision, these functions are all implemented directly in assembler.

Note

These functions all assume a 16 MHz clock cycle.

10.17.2 Function Documentation

10.17.2.1 void delayQuartersOfMicroSeconds (uint16_t nbrOfQuartersOfMicroSeconds)

Delay a given number of quarter microseconds. Due to function call overhead, the smallest possible delay is just under 6 quarter microseconds (\sim 1.5 microseconds). Delays of 7 quarter microseconds or greater are reasonably accurate.

Delays of less than 7 quarter microseconds produce a delay of just under 6 quarter microseconds (\sim 1.5 microseconds). The maximum delay is 65535 quarter microseconds (equal to 16,383.75 microseconds, or about 16.4 milliseconds).

• nbr0fQuarters0fMicroSeconds the number of quarter microseconds to delay. Arguments less than 7 quarter microseconds all produce delays of just under 6 quarter microseconds.

Note

This delay function is only accurate if interrupts are disabled. If interrupts are enabled, the delays will be at least as long as requested, but may actually be longer. If accurate delays are desired, disable interrupts before calling this function (remember to enable interrupts afterwards).

This function assumes a 16 MHz clock rate.

For precision, this function is implemented directly in assembler.

10.17.2.2 void delayTenthsOfSeconds (uint8_t nbrOfTenthsOfSeconds)

Delay a given number of tenths of a seconds. Despite function call overhead, this function is accurate within a few hundreds of microseconds.

• nbrOfTenthsOfSeconds the number of tenths of seconds to delay. The maximum delay is 256 tenths of a second or 25.6 seconds (pass 0 for a delay of 256 tenths of a second).

Note

This delay function is only accurate if interrupts are disabled. If interrupts are enabled, the delays will be at least as long as requested, but may actually be longer. If accurate delays are desired, disable interrupts before calling this function (remember to enable interrupts afterwards).

This function assumes a 16 MHz clock rate.

For precision, this function is implemented directly in assembler.

10.17.2.3 void delayWholeMilliSeconds (uint8_t nbrOfMilliSeconds)

Delay a given number of milliseconds. Despite function call overhead, this function is accurate within a few hundreds of microseconds.

nbr0fMilliSeconds the number of milliseconds to delay. The maximum delay is 256 milliseconds (pass 0 for a delay of 256 milliseconds).

Note

This delay function is only accurate if interrupts are disabled. If interrupts are enabled, the delays will be at least as long as requested, but may actually be longer. If accurate delays are desired, disable interrupts before calling this function (remember to enable interrupts afterwards).

This function assumes a 16 MHz clock rate.

For precision, this function is implemented directly in assembler.

10.18 SystemClock.h File Reference

Include this file to use the functions that instantiate and access a system clock that counts elapsed milliseconds.

Functions

void initSystemClock ()

This function initializes a system clock that tracks elapsed milliseconds.

void delayMicroseconds (unsigned int us)

Delay a certain number of microseconds.

void delayMilliseconds (unsigned long ms)

Delay a certain number of milliseconds.

void delay (unsigned long ms)

Delay a certain number of milliseconds.

unsigned long micros ()

Return the number of elasped microseconds since the system clock was turned on.

• unsigned long millis ()

Return the number of elasped milliseconds since the system clock was turned on.

10.18.1 Detailed Description

Include this file to use the functions that instantiate and access a system clock that counts elapsed milliseconds.

To use these functions, include SystemClock.h in your source code and link against SystemClock.cpp.

Note

Linking against SystemClock.cpp installs a interrupt function on timer0. This interrupt routine is installed regardless of whether the system clock is actually initialized or not. If you have other uses for timer0, do not use SystemClock functions and do not link against SystemClock.cpp.

10.18.2 Function Documentation

```
10.18.2.1 void delay (unsigned long ms) [inline]
```

Delay a certain number of milliseconds.

This inline function is a synonym for delayMilliseconds(); it is provided for compatibility with the standard Arduino library.

• m the number of milliseconds to delay.

10.18.2.2 void delayMicroseconds (unsigned int us)

Delay a certain number of microseconds.

• us the number of microseconds to delay.

10.18.2.3 void delayMilliseconds (unsigned long ms)

Delay a certain number of milliseconds.

· m the number of milliseconds to delay.

```
10.18.2.4 void initSystemClock ( )
```

This function initializes a system clock that tracks elapsed milliseconds.

The system clock uses timer0, so you cannot use timer0 for other functions if you use the system clock functionality.

Note

Linking against SystemClock.cpp installs a interrupt function on timer0. This interrupt routine is installed regardless of whether the system clock is actually initialized or not. If you have other uses for timer0, do not use SystemClock functions and do not link against SystemClock.cpp.

```
10.18.2.5 unsigned long micros ( )
```

Return the number of elasped microseconds since the system clock was turned on.

The microsecond count will overflow back to zero in approximately 70 minutes.

Returns

the number of elapsed microseconds.

```
10.18.2.6 unsigned long millis ( )
```

Return the number of elasped milliseconds since the system clock was turned on.

The millisecond count will overflow back to zero in approximately 50 days.

Returns


the number of elapsed milliseconds.

10.19 USARTO.h File Reference

This file provides functions that offer high-level interfaces to USART0 hardware, which is available on the Arduino Uno (ATmega328) and Arduino Mega (ATmega2560).

```
#include "Writer.h"
#include "Reader.h"
#include <stdint.h>
#include <stddef.h>
```

Include dependency graph for USART0.h:

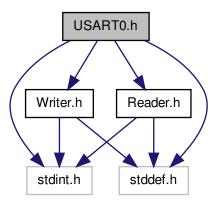

Classes

• class Serial0

Provides a high-end interface to serial communications using USART0.

Namespaces

• USARTO

This namespace bundles a high-level buffered interface to the USARTO hardware. It provides logical cohesion and prevents namespace collisions.

Enumerations

```
    enum UsartSerialConfiguration {

  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial 5N2, kSerial 6N2, kSerial 7N2, kSerial 8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial_501, kSerial_601, kSerial_701, kSerial_801,
  kSerial 502, kSerial 602, kSerial 702, kSerial 802,
  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial 5N2, kSerial 6N2, kSerial 7N2, kSerial 8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial 501, kSerial 601, kSerial 701, kSerial 801,
  kSerial_502, kSerial_602, kSerial_702, kSerial_802,
  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial_5N2, kSerial_6N2, kSerial_7N2, kSerial_8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial 501, kSerial 601, kSerial 701, kSerial 801,
  kSerial 502, kSerial 602, kSerial 702, kSerial 802,
  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial 5N2, kSerial 6N2, kSerial 7N2, kSerial 8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial 501, kSerial 601, kSerial 701, kSerial 801,
 kSerial 502, kSerial 602, kSerial 702, kSerial 802 }
```

This enum lists serial configuration in terms of data bits, parity, and stop bits.

Functions

```
    void USART0::start (unsigned long baudRate, UsartSerialConfiguration config=kSerial_8N1)
```

Initialize USART0 for buffered, asynchronous serial communications using interrupts.

void USART0::stop ()

Stops buffered serial communications using interrupts on USARTO.

• size_t USART0::write (char c)

Write a single byte to the transmit buffer.

size_t USART0::write (const char *c)

Write a null-terminated string to the transmit buffer.

size_t USART0::write (const char *c, size_t n)

Write a character array of given size to the transmit buffer.

size_t USART0::write (const uint8_t *c, size_t n)

Write a byte array of given size to the transmit buffer.

void USART0::flush ()

Flush transmit buffer.

int USART0::peek ()

Examine the next character in the receive buffer without removing it from the buffer.

• int USART0::read ()

Return the next character in the receive buffer, removing it from the buffer.

• bool USART0::available ()

Determine if there is data in the receive buffer..

10.19.1 Detailed Description

This file provides functions that offer high-level interfaces to USART0 hardware, which is available on the Arduino Uno (ATmega328) and Arduino Mega (ATmega2560).

These interfaces are buffered for both input and output and operate using interrupts associated with USART0. This means the transmit functions return immediately after queuing data in the output buffer for transmission and the transmission happens asynchronously, using dedicated USART0 hardware. Similarly, data is received asynchronously and placed into the input buffer.

The transmit and receive buffers are both ring buffers. If you try to queue more data than the transmit buffer can hold, the write functions will block until there is room in the buffer (as a result of data being transmitted). The receive buffer, however, will overwrite if it gets full. You must clear the receive buffer by reading it regularly when receiving significant amounts of data.

The sizes of the transmit and receive buffers can be set at compile time via macro constants. The default sizes are 32 bytes for the receive buffer and 64 bytes for the transmit buffer. To change these, define the macros USARTO_RX_ \leftarrow BUFFER_SIZE (for the receive buffer) and USARTO_TX_BUFFER_SIZE (for the transmit buffer) to whatever sizes you need. You need to make these define these macros prior to compiling the file USARTO.cpp.

Two interfaces are provided. USART0 is a functional interface that makes use of the buffering and asynchronous transmit and receive capabilities of the microcontrollers. However, USART0 is limited to transmitting and receiving byte and character streams.

Serial0 is the most advanced and capable interface to the USART0 hardware. Serial0 provides a object-oriented interface that includes the ability to read and write numbers of various types and in various formats, all asynchronously.

To use these functions, include USART0.h in your source code and link against USART0.cpp.

Note

Linking against USART0.cpp installs interrupt functions for transmit and receive on USART0 (interrupts USART ∪ _ UDRE and USART_RX on Arduino Uno/ATmega328; interrupts USART0_UDRE and USART0_RX on Arduino Mega/ATmega2560). You cannot use the minimal interface to USART0 (from USARTMinimal.h) if you link against USART0.cpp. In particular, do *not* call initUSART0() or clearUSART0() if you link against USART0.cpp.

10.19.2 Enumeration Type Documentation

10.19.2.1 enum UsartSerialConfiguration

This enum lists serial configuration in terms of data bits, parity, and stop bits.

The format is kSerial XYZ where

- X = the number of data bits
- Y = N, E, or O; where N = none, E = even, and O = odd
- Z = the number of stop bits

Enumerator

```
kSerial_5N1 5 data bits, no parity, 1 stop bit
kSerial_6N1 6 data bits, no parity, 1 stop bit
kSerial_7N1 7 data bits, no parity, 1 stop bit
kSerial_8N1 8 data bits, no parity, 1 stop bit
kSerial_5N2 5 data bits, no parity, 2 stop bits
```

kSerial_6N2 6 data bits, no parity, 2 stop bits kSerial_7N2 7 data bits, no parity, 2 stop bits kSerial_8N2 8 data bits, no parity, 2 stop bits **kSerial_5E1** 5 data bits, even parity, 1 stop bit **kSerial** 6E1 6 data bits, even parity, 1 stop bit kSerial_7E1 7 data bits, even parity, 1 stop bit kSerial_8E1 8 data bits, even parity, 1 stop bit kSerial_5E2 5 data bits, even parity, 2 stop bits kSerial_6E2 6 data bits, even parity, 2 stop bits **kSerial_7E2** 7 data bits, even parity, 2 stop bits **kSerial_8E2** 8 data bits, even parity, 2 stop bits **kSerial_501** 5 data bits, odd parity, 1 stop bit kSerial_601 6 data bits, odd parity, 1 stop bit kSerial_701 7 data bits, odd parity, 1 stop bit kSerial_801 8 data bits, odd parity, 1 stop bit kSerial_502 5 data bits, odd parity, 2 stop bits kSerial_602 6 data bits, odd parity, 2 stop bits kSerial_702 7 data bits, odd parity, 2 stop bits kSerial_802 8 data bits, odd parity, 2 stop bits kSerial_5N1 5 data bits, no parity, 1 stop bit kSerial_6N1 6 data bits, no parity, 1 stop bit kSerial_7N1 7 data bits, no parity, 1 stop bit **kSerial_8N1** 8 data bits, no parity, 1 stop bit kSerial_5N2 5 data bits, no parity, 2 stop bits kSerial_6N2 6 data bits, no parity, 2 stop bits kSerial_7N2 7 data bits, no parity, 2 stop bits kSerial_8N2 8 data bits, no parity, 2 stop bits kSerial_5E1 5 data bits, even parity, 1 stop bit kSerial_6E1 6 data bits, even parity, 1 stop bit kSerial_7E1 7 data bits, even parity, 1 stop bit **kSerial 8E1** 8 data bits, even parity, 1 stop bit kSerial_5E2 5 data bits, even parity, 2 stop bits kSerial_6E2 6 data bits, even parity, 2 stop bits kSerial_7E2 7 data bits, even parity, 2 stop bits kSerial_8E2 8 data bits, even parity, 2 stop bits kSerial_501 5 data bits, odd parity, 1 stop bit kSerial_601 6 data bits, odd parity, 1 stop bit kSerial_701 7 data bits, odd parity, 1 stop bit kSerial_801 8 data bits, odd parity, 1 stop bit kSerial_502 5 data bits, odd parity, 2 stop bits kSerial_602 6 data bits, odd parity, 2 stop bits kSerial_702 7 data bits, odd parity, 2 stop bits

```
kSerial_802 8 data bits, odd parity, 2 stop bits
kSerial_5N1 5 data bits, no parity, 1 stop bit
kSerial_6N1 6 data bits, no parity, 1 stop bit
kSerial_7N1 7 data bits, no parity, 1 stop bit
kSerial_8N1 8 data bits, no parity, 1 stop bit
kSerial_5N2 5 data bits, no parity, 2 stop bits
kSerial_6N2 6 data bits, no parity, 2 stop bits
kSerial_7N2 7 data bits, no parity, 2 stop bits
kSerial_8N2 8 data bits, no parity, 2 stop bits
kSerial_5E1 5 data bits, even parity, 1 stop bit
kSerial_6E1 6 data bits, even parity, 1 stop bit
kSerial_7E1 7 data bits, even parity, 1 stop bit
kSerial_8E1 8 data bits, even parity, 1 stop bit
kSerial_5E2 5 data bits, even parity, 2 stop bits
kSerial_6E2 6 data bits, even parity, 2 stop bits
kSerial_7E2 7 data bits, even parity, 2 stop bits
kSerial 8E2 8 data bits, even parity, 2 stop bits
kSerial_501 5 data bits, odd parity, 1 stop bit
kSerial_601 6 data bits, odd parity, 1 stop bit
kSerial_701 7 data bits, odd parity, 1 stop bit
kSerial_801 8 data bits, odd parity, 1 stop bit
kSerial_502 5 data bits, odd parity, 2 stop bits
kSerial 602 6 data bits, odd parity, 2 stop bits
kSerial_702 7 data bits, odd parity, 2 stop bits
kSerial_802 8 data bits, odd parity, 2 stop bits
kSerial_5N1 5 data bits, no parity, 1 stop bit
kSerial_6N1 6 data bits, no parity, 1 stop bit
kSerial_7N1 7 data bits, no parity, 1 stop bit
kSerial_8N1 8 data bits, no parity, 1 stop bit
kSerial_5N2 5 data bits, no parity, 2 stop bits
kSerial_6N2 6 data bits, no parity, 2 stop bits
kSerial_7N2 7 data bits, no parity, 2 stop bits
kSerial_8N2 8 data bits, no parity, 2 stop bits
kSerial_5E1 5 data bits, even parity, 1 stop bit
kSerial_6E1 6 data bits, even parity, 1 stop bit
kSerial_7E1 7 data bits, even parity, 1 stop bit
kSerial_8E1 8 data bits, even parity, 1 stop bit
kSerial_5E2 5 data bits, even parity, 2 stop bits
kSerial_6E2 6 data bits, even parity, 2 stop bits
kSerial_7E2 7 data bits, even parity, 2 stop bits
kSerial_8E2 8 data bits, even parity, 2 stop bits
kSerial_501 5 data bits, odd parity, 1 stop bit
```


```
kSerial_601 6 data bits, odd parity, 1 stop bit
kSerial_701 7 data bits, odd parity, 1 stop bit
kSerial_801 8 data bits, odd parity, 1 stop bit
kSerial_502 5 data bits, odd parity, 2 stop bits
kSerial_602 6 data bits, odd parity, 2 stop bits
kSerial_702 7 data bits, odd parity, 2 stop bits
kSerial_802 8 data bits, odd parity, 2 stop bits
```

10.20 USART1.h File Reference

This file provides functions that offer high-level interfaces to USART1 hardware, which is available on Arduino Mega (ATMega2560).

```
#include "Writer.h"
#include "Reader.h"
#include <stdint.h>
#include <stddef.h>
```

Include dependency graph for USART1.h:

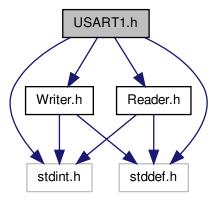

Classes

class Serial1

Provides a high-end interface to serial communications using USART1.

Namespaces

• USART1

This namespace bundles a high-level buffered interface to the USART1 hardware. It provides logical cohesion and prevents namespace collisions.

Enumerations

```
    enum UsartSerialConfiguration {

  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial 5N2, kSerial 6N2, kSerial 7N2, kSerial 8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial_501, kSerial_601, kSerial_701, kSerial_801,
  kSerial 502, kSerial 602, kSerial 702, kSerial 802,
  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial 5N2, kSerial 6N2, kSerial 7N2, kSerial 8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial 501, kSerial 601, kSerial 701, kSerial 801,
  kSerial_502, kSerial_602, kSerial_702, kSerial_802,
  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial_5N2, kSerial_6N2, kSerial_7N2, kSerial_8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial 501, kSerial 601, kSerial 701, kSerial 801,
  kSerial 502, kSerial 602, kSerial 702, kSerial 802,
  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial 5N2, kSerial 6N2, kSerial 7N2, kSerial 8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial 501, kSerial 601, kSerial 701, kSerial 801,
 kSerial 502, kSerial 602, kSerial 702, kSerial 802 }
```

This enum lists serial configuration in terms of data bits, parity, and stop bits.

Functions

```
    void USART1::start (unsigned long baudRate, UsartSerialConfiguration config=kSerial_8N1)
    Initialize USART1 for buffered, asynchronous serial communications using interrupts.
```

void USART1::stop ()

Stops buffered serial communications using interrupts on USART1.

• size t USART1::write (char c)

Write a single byte to the transmit buffer.

size_t USART1::write (const char *c)

Write a null-terminated string to the transmit buffer.

size_t USART1::write (const char *c, size_t n)

Write a character array of given size to the transmit buffer.

size_t USART1::write (const uint8_t *c, size_t n)

Write a byte array of given size to the transmit buffer.

void USART1::flush ()

Flush transmit buffer.

int USART1::peek ()

Examine the next character in the receive buffer without removing it from the buffer.

• int USART1::read ()

Return the next character in the receive buffer, removing it from the buffer.

bool USART1::available ()

Determine if there is data in the receive buffer..

10.20.1 Detailed Description

This file provides functions that offer high-level interfaces to USART1 hardware, which is available on Arduino Mega (ATMega2560).

These interfaces are buffered for both input and output and operate using interrupts associated with USART1. This means the transmit functions return immediately after queuing data in the output buffer for transmission and the transmission happens asynchronously, using dedicated USART1 hardware. Similarly, data is received asynchronously and placed into the input buffer.

The transmit and receive buffers are both ring buffers. If you try to queue more data than the transmit buffer can hold, the write functions will block until there is room in the buffer (as a result of data being transmitted). The receive buffer, however, will overwrite if it gets full. You must clear the receive buffer by reading it regularly when receiving significant amounts of data.

The sizes of the transmit and receive buffers can be set at compile time via macro constants. The default sizes are 32 bytes for the receive buffer and 64 bytes for the transmit buffer. To change these, define the macros <code>USART1_RX_ \leftrightarrow BUFFER_SIZE</code> (for the receive buffer) and <code>USART1_TX_BUFFER_SIZE</code> (for the transmit buffer) to whatever sizes you need. You need to make these define these macros prior to compiling the file <code>USART1.cpp</code>.

Two interfaces are provided. USART1 is a functional interface that makes use of the buffering and asynchronous transmit and receive capabilities of the microcontrollers. However, USART1 is limited to transmitting and receiving byte and character streams.

Serial1 is the most advanced and capable interface to the USART1 hardware. Serial1 provides a object-oriented interface that includes the ability to read and write numbers of various types and in various formats, all asynchronously.

To use these functions, include USART1.h in your source code and link against USART1.cpp.

Note

Linking against USART1.cpp installs interrupt functions for transmit and receive on USART1 (interrupts USAR ← T1_UDRE and USART1_RX on Arduino Mega/ATmega2560). You cannot use the minimal interface to USART1 (from USARTMinimal.h) if you link against USART1.cpp. In particular, do *not* call initUSART1() or clearUSART1() if you link against USART1.cpp.

10.20.2 Enumeration Type Documentation

10.20.2.1 enum UsartSerialConfiguration

This enum lists serial configuration in terms of data bits, parity, and stop bits.

The format is kSerial XYZ where

- X = the number of data bits
- Y = N, E, or O; where N = none, E = even, and O = odd
- Z = the number of stop bits

Enumerator

```
kSerial_5N1 5 data bits, no parity, 1 stop bit
kSerial_6N1 6 data bits, no parity, 1 stop bit
kSerial_7N1 7 data bits, no parity, 1 stop bit
kSerial_8N1 8 data bits, no parity, 1 stop bit
kSerial_5N2 5 data bits, no parity, 2 stop bits
```

```
kSerial_6N2 6 data bits, no parity, 2 stop bits
kSerial_7N2 7 data bits, no parity, 2 stop bits
kSerial_8N2 8 data bits, no parity, 2 stop bits
kSerial_5E1 5 data bits, even parity, 1 stop bit
kSerial_6E1 6 data bits, even parity, 1 stop bit
kSerial_7E1 7 data bits, even parity, 1 stop bit
kSerial_8E1 8 data bits, even parity, 1 stop bit
kSerial_5E2 5 data bits, even parity, 2 stop bits
kSerial_6E2 6 data bits, even parity, 2 stop bits
kSerial_7E2 7 data bits, even parity, 2 stop bits
kSerial_8E2 8 data bits, even parity, 2 stop bits
kSerial_501 5 data bits, odd parity, 1 stop bit
kSerial_601 6 data bits, odd parity, 1 stop bit
kSerial_701 7 data bits, odd parity, 1 stop bit
kSerial_801 8 data bits, odd parity, 1 stop bit
kSerial_502 5 data bits, odd parity, 2 stop bits
kSerial_602 6 data bits, odd parity, 2 stop bits
kSerial_702 7 data bits, odd parity, 2 stop bits
kSerial_802 8 data bits, odd parity, 2 stop bits
kSerial_5N1 5 data bits, no parity, 1 stop bit
kSerial_6N1 6 data bits, no parity, 1 stop bit
kSerial_7N1 7 data bits, no parity, 1 stop bit
kSerial_8N1 8 data bits, no parity, 1 stop bit
kSerial_5N2 5 data bits, no parity, 2 stop bits
kSerial_6N2 6 data bits, no parity, 2 stop bits
kSerial_7N2 7 data bits, no parity, 2 stop bits
kSerial_8N2 8 data bits, no parity, 2 stop bits
kSerial_5E1 5 data bits, even parity, 1 stop bit
kSerial 6E1 6 data bits, even parity, 1 stop bit
kSerial_7E1 7 data bits, even parity, 1 stop bit
kSerial 8E1 8 data bits, even parity, 1 stop bit
kSerial_5E2 5 data bits, even parity, 2 stop bits
kSerial_6E2 6 data bits, even parity, 2 stop bits
kSerial_7E2 7 data bits, even parity, 2 stop bits
kSerial_8E2 8 data bits, even parity, 2 stop bits
kSerial_501 5 data bits, odd parity, 1 stop bit
kSerial_601 6 data bits, odd parity, 1 stop bit
kSerial_701 7 data bits, odd parity, 1 stop bit
kSerial_801 8 data bits, odd parity, 1 stop bit
kSerial_502 5 data bits, odd parity, 2 stop bits
kSerial_602 6 data bits, odd parity, 2 stop bits
kSerial_702 7 data bits, odd parity, 2 stop bits
```

kSerial_802 8 data bits, odd parity, 2 stop bits kSerial_5N1 5 data bits, no parity, 1 stop bit kSerial_6N1 6 data bits, no parity, 1 stop bit **kSerial_7N1** 7 data bits, no parity, 1 stop bit **kSerial_8N1** 8 data bits, no parity, 1 stop bit kSerial_5N2 5 data bits, no parity, 2 stop bits kSerial_6N2 6 data bits, no parity, 2 stop bits kSerial_7N2 7 data bits, no parity, 2 stop bits kSerial_8N2 8 data bits, no parity, 2 stop bits kSerial_5E1 5 data bits, even parity, 1 stop bit kSerial_6E1 6 data bits, even parity, 1 stop bit **kSerial_7E1** 7 data bits, even parity, 1 stop bit kSerial_8E1 8 data bits, even parity, 1 stop bit kSerial_5E2 5 data bits, even parity, 2 stop bits kSerial_6E2 6 data bits, even parity, 2 stop bits kSerial_7E2 7 data bits, even parity, 2 stop bits **kSerial** 8E2 8 data bits, even parity, 2 stop bits kSerial_501 5 data bits, odd parity, 1 stop bit kSerial_601 6 data bits, odd parity, 1 stop bit kSerial_701 7 data bits, odd parity, 1 stop bit kSerial_801 8 data bits, odd parity, 1 stop bit kSerial_502 5 data bits, odd parity, 2 stop bits **kSerial** 602 6 data bits, odd parity, 2 stop bits kSerial_702 7 data bits, odd parity, 2 stop bits kSerial_802 8 data bits, odd parity, 2 stop bits kSerial_5N1 5 data bits, no parity, 1 stop bit kSerial_6N1 6 data bits, no parity, 1 stop bit kSerial_7N1 7 data bits, no parity, 1 stop bit **kSerial_8N1** 8 data bits, no parity, 1 stop bit kSerial_5N2 5 data bits, no parity, 2 stop bits kSerial_6N2 6 data bits, no parity, 2 stop bits kSerial_7N2 7 data bits, no parity, 2 stop bits **kSerial_8N2** 8 data bits, no parity, 2 stop bits kSerial_5E1 5 data bits, even parity, 1 stop bit kSerial_6E1 6 data bits, even parity, 1 stop bit kSerial_7E1 7 data bits, even parity, 1 stop bit kSerial_8E1 8 data bits, even parity, 1 stop bit kSerial_5E2 5 data bits, even parity, 2 stop bits kSerial_6E2 6 data bits, even parity, 2 stop bits kSerial_7E2 7 data bits, even parity, 2 stop bits kSerial_8E2 8 data bits, even parity, 2 stop bits kSerial_501 5 data bits, odd parity, 1 stop bit


```
kSerial_601 6 data bits, odd parity, 1 stop bit
kSerial_701 7 data bits, odd parity, 1 stop bit
kSerial_801 8 data bits, odd parity, 1 stop bit
kSerial_502 5 data bits, odd parity, 2 stop bits
kSerial_602 6 data bits, odd parity, 2 stop bits
kSerial_702 7 data bits, odd parity, 2 stop bits
kSerial_802 8 data bits, odd parity, 2 stop bits
```

10.21 USART2.h File Reference

This file provides functions that offer high-level interfaces to USART2 hardware, which is available on Arduino Mega (ATMega2560).

```
#include "Writer.h"
#include "Reader.h"
#include <stdint.h>
#include <stddef.h>
```

Include dependency graph for USART2.h:

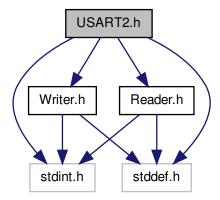

Classes

• class Serial2

Provides a high-end interface to serial communications using USART2.

Namespaces

• USART2

This namespace bundles a high-level buffered interface to the USART2 hardware. It provides logical cohesion and prevents namespace collisions.

Enumerations

```
    enum UsartSerialConfiguration {

  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial 5N2, kSerial 6N2, kSerial 7N2, kSerial 8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial_501, kSerial_601, kSerial_701, kSerial_801,
  kSerial 502, kSerial 602, kSerial 702, kSerial 802,
  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial 5N2, kSerial 6N2, kSerial 7N2, kSerial 8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial 501, kSerial 601, kSerial 701, kSerial 801,
  kSerial_502, kSerial_602, kSerial_702, kSerial_802,
  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial_5N2, kSerial_6N2, kSerial_7N2, kSerial_8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial 501, kSerial 601, kSerial 701, kSerial 801,
  kSerial 502, kSerial 602, kSerial 702, kSerial 802,
  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial 5N2, kSerial 6N2, kSerial 7N2, kSerial 8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial 501, kSerial 601, kSerial 701, kSerial 801,
 kSerial 502, kSerial 602, kSerial 702, kSerial 802 }
```

This enum lists serial configuration in terms of data bits, parity, and stop bits.

Functions

```
    void USART2::start (unsigned long baudRate, UsartSerialConfiguration config=kSerial_8N1)
```

Initialize USART2 for buffered, asynchronous serial communications using interrupts.

void USART2::stop ()

Stops buffered serial communications using interrupts on USART2.

• size t USART2::write (char c)

Write a single byte to the transmit buffer.

size_t USART2::write (const char *c)

Write a null-terminated string to the transmit buffer.

size_t USART2::write (const char *c, size_t n)

Write a character array of given size to the transmit buffer.

size_t USART2::write (const uint8_t *c, size_t n)

Write a byte array of given size to the transmit buffer.

void USART2::flush ()

Flush transmit buffer.

int USART2::peek ()

Examine the next character in the receive buffer without removing it from the buffer.

• int USART2::read ()

Return the next character in the receive buffer, removing it from the buffer.

bool USART2::available ()

Determine if there is data in the receive buffer..

10.21.1 Detailed Description

This file provides functions that offer high-level interfaces to USART2 hardware, which is available on Arduino Mega (ATMega2560).

These interfaces are buffered for both input and output and operate using interrupts associated with USART2. This means the transmit functions return immediately after queuing data in the output buffer for transmission and the transmission happens asynchronously, using dedicated USART2 hardware. Similarly, data is received asynchronously and placed into the input buffer.

The transmit and receive buffers are both ring buffers. If you try to queue more data than the transmit buffer can hold, the write functions will block until there is room in the buffer (as a result of data being transmitted). The receive buffer, however, will overwrite if it gets full. You must clear the receive buffer by reading it regularly when receiving significant amounts of data.

The sizes of the transmit and receive buffers can be set at compile time via macro constants. The default sizes are 32 bytes for the receive buffer and 64 bytes for the transmit buffer. To change these, define the macros USART2_RX_

BUFFER_SIZE (for the receive buffer) and USART2_TX_BUFFER_SIZE (for the transmit buffer) to whatever sizes you need. You need to make these define these macros prior to compiling the file USART2.cpp.

Two interfaces are provided. USART2 is a functional interface that makes use of the buffering and asynchronous transmit and receive capabilities of the microcontrollers. However, USART2 is limited to transmitting and receiving byte and character streams.

Serial2 is the most advanced and capable interface to the USART2 hardware. Serial2 provides a object-oriented interface that includes the ability to read and write numbers of various types and in various formats, all asynchronously.

To use these functions, include USART2.h in your source code and link against USART2.cpp.

Note

Linking against USART2.cpp installs interrupt functions for transmit and receive on USART2 (interrupts USAR
T2_UDRE and USART2_RX on Arduino Mega/ATmega2560). You cannot use the minimal interface to USART2 (from USARTMinimal.h) if you link against USART2.cpp. In particular, do *not* call initUSART2() or clearUSART2() if you link against USART2.cpp.

10.21.2 Enumeration Type Documentation

10.21.2.1 enum UsartSerialConfiguration

This enum lists serial configuration in terms of data bits, parity, and stop bits.

The format is kSerial XYZ where

- X = the number of data bits
- Y = N, E, or O; where N = none, E = even, and O = odd
- Z = the number of stop bits

Enumerator

```
kSerial_5N1 5 data bits, no parity, 1 stop bit
kSerial_6N1 6 data bits, no parity, 1 stop bit
kSerial_7N1 7 data bits, no parity, 1 stop bit
kSerial_8N1 8 data bits, no parity, 1 stop bit
kSerial_5N2 5 data bits, no parity, 2 stop bits
```

kSerial_6N2 6 data bits, no parity, 2 stop bits kSerial_7N2 7 data bits, no parity, 2 stop bits kSerial_8N2 8 data bits, no parity, 2 stop bits kSerial_5E1 5 data bits, even parity, 1 stop bit **kSerial** 6E1 6 data bits, even parity, 1 stop bit kSerial_7E1 7 data bits, even parity, 1 stop bit kSerial_8E1 8 data bits, even parity, 1 stop bit kSerial_5E2 5 data bits, even parity, 2 stop bits kSerial_6E2 6 data bits, even parity, 2 stop bits **kSerial_7E2** 7 data bits, even parity, 2 stop bits **kSerial_8E2** 8 data bits, even parity, 2 stop bits **kSerial_501** 5 data bits, odd parity, 1 stop bit kSerial_601 6 data bits, odd parity, 1 stop bit kSerial_701 7 data bits, odd parity, 1 stop bit kSerial_801 8 data bits, odd parity, 1 stop bit kSerial_502 5 data bits, odd parity, 2 stop bits kSerial_602 6 data bits, odd parity, 2 stop bits kSerial_702 7 data bits, odd parity, 2 stop bits kSerial_802 8 data bits, odd parity, 2 stop bits kSerial_5N1 5 data bits, no parity, 1 stop bit kSerial_6N1 6 data bits, no parity, 1 stop bit kSerial_7N1 7 data bits, no parity, 1 stop bit **kSerial_8N1** 8 data bits, no parity, 1 stop bit kSerial_5N2 5 data bits, no parity, 2 stop bits kSerial_6N2 6 data bits, no parity, 2 stop bits kSerial_7N2 7 data bits, no parity, 2 stop bits kSerial_8N2 8 data bits, no parity, 2 stop bits kSerial_5E1 5 data bits, even parity, 1 stop bit kSerial_6E1 6 data bits, even parity, 1 stop bit kSerial_7E1 7 data bits, even parity, 1 stop bit **kSerial 8E1** 8 data bits, even parity, 1 stop bit kSerial_5E2 5 data bits, even parity, 2 stop bits **kSerial_6E2** 6 data bits, even parity, 2 stop bits kSerial_7E2 7 data bits, even parity, 2 stop bits kSerial_8E2 8 data bits, even parity, 2 stop bits kSerial_501 5 data bits, odd parity, 1 stop bit kSerial_601 6 data bits, odd parity, 1 stop bit kSerial_701 7 data bits, odd parity, 1 stop bit kSerial_801 8 data bits, odd parity, 1 stop bit kSerial_502 5 data bits, odd parity, 2 stop bits kSerial_602 6 data bits, odd parity, 2 stop bits kSerial_702 7 data bits, odd parity, 2 stop bits

```
kSerial_802 8 data bits, odd parity, 2 stop bits
kSerial_5N1 5 data bits, no parity, 1 stop bit
kSerial_6N1 6 data bits, no parity, 1 stop bit
kSerial_7N1 7 data bits, no parity, 1 stop bit
kSerial_8N1 8 data bits, no parity, 1 stop bit
kSerial_5N2 5 data bits, no parity, 2 stop bits
kSerial_6N2 6 data bits, no parity, 2 stop bits
kSerial_7N2 7 data bits, no parity, 2 stop bits
kSerial_8N2 8 data bits, no parity, 2 stop bits
kSerial_5E1 5 data bits, even parity, 1 stop bit
kSerial_6E1 6 data bits, even parity, 1 stop bit
kSerial_7E1 7 data bits, even parity, 1 stop bit
kSerial_8E1 8 data bits, even parity, 1 stop bit
kSerial_5E2 5 data bits, even parity, 2 stop bits
kSerial_6E2 6 data bits, even parity, 2 stop bits
kSerial_7E2 7 data bits, even parity, 2 stop bits
kSerial 8E2 8 data bits, even parity, 2 stop bits
kSerial_501 5 data bits, odd parity, 1 stop bit
kSerial_601 6 data bits, odd parity, 1 stop bit
kSerial_701 7 data bits, odd parity, 1 stop bit
kSerial_801 8 data bits, odd parity, 1 stop bit
kSerial_502 5 data bits, odd parity, 2 stop bits
kSerial 602 6 data bits, odd parity, 2 stop bits
kSerial_702 7 data bits, odd parity, 2 stop bits
kSerial_802 8 data bits, odd parity, 2 stop bits
kSerial_5N1 5 data bits, no parity, 1 stop bit
kSerial_6N1 6 data bits, no parity, 1 stop bit
kSerial_7N1 7 data bits, no parity, 1 stop bit
kSerial_8N1 8 data bits, no parity, 1 stop bit
kSerial_5N2 5 data bits, no parity, 2 stop bits
kSerial_6N2 6 data bits, no parity, 2 stop bits
kSerial_7N2 7 data bits, no parity, 2 stop bits
kSerial_8N2 8 data bits, no parity, 2 stop bits
kSerial_5E1 5 data bits, even parity, 1 stop bit
kSerial_6E1 6 data bits, even parity, 1 stop bit
kSerial_7E1 7 data bits, even parity, 1 stop bit
kSerial_8E1 8 data bits, even parity, 1 stop bit
kSerial_5E2 5 data bits, even parity, 2 stop bits
kSerial_6E2 6 data bits, even parity, 2 stop bits
kSerial_7E2 7 data bits, even parity, 2 stop bits
kSerial_8E2 8 data bits, even parity, 2 stop bits
kSerial_501 5 data bits, odd parity, 1 stop bit
```


```
kSerial_601 6 data bits, odd parity, 1 stop bit
kSerial_701 7 data bits, odd parity, 1 stop bit
kSerial_801 8 data bits, odd parity, 1 stop bit
kSerial_502 5 data bits, odd parity, 2 stop bits
kSerial_602 6 data bits, odd parity, 2 stop bits
kSerial_702 7 data bits, odd parity, 2 stop bits
kSerial_802 8 data bits, odd parity, 2 stop bits
```

10.22 USART3.h File Reference

This file provides functions that offer high-level interfaces to USART3 hardware, which is available on Arduino Mega (ATMega2560).

```
#include "Writer.h"
#include "Reader.h"
#include <stdint.h>
#include <stddef.h>
```

Include dependency graph for USART3.h:

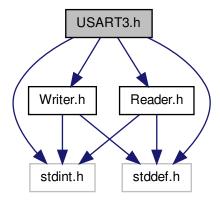

Classes

• class Serial3

Provides a high-end interface to serial communications using USART3.

Namespaces

• USART3

This namespace bundles a high-level buffered interface to the USART3 hardware. It provides logical cohesion and prevents namespace collisions.

Enumerations

```
    enum UsartSerialConfiguration {

  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial 5N2, kSerial 6N2, kSerial 7N2, kSerial 8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial_501, kSerial_601, kSerial_701, kSerial_801,
  kSerial 502, kSerial 602, kSerial 702, kSerial 802,
  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial 5N2, kSerial 6N2, kSerial 7N2, kSerial 8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial 501, kSerial 601, kSerial 701, kSerial 801,
  kSerial_502, kSerial_602, kSerial_702, kSerial_802,
  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial_5N2, kSerial_6N2, kSerial_7N2, kSerial_8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial 501, kSerial 601, kSerial 701, kSerial 801,
  kSerial 502, kSerial 602, kSerial 702, kSerial 802,
  kSerial 5N1, kSerial 6N1, kSerial 7N1, kSerial 8N1,
  kSerial 5N2, kSerial 6N2, kSerial 7N2, kSerial 8N2,
  kSerial 5E1, kSerial 6E1, kSerial 7E1, kSerial 8E1,
  kSerial_5E2, kSerial_6E2, kSerial_7E2, kSerial_8E2,
  kSerial 501, kSerial 601, kSerial 701, kSerial 801,
 kSerial 502, kSerial 602, kSerial 702, kSerial 802 }
```

This enum lists serial configuration in terms of data bits, parity, and stop bits.

Functions

void USART3::start (unsigned long baudRate, UsartSerialConfiguration config=kSerial_8N1)

Initialize USART3 for buffered, asynchronous serial communications using interrupts.

void USART3::stop ()

Stops buffered serial communications using interrupts on USART3.

• size t USART3::write (char c)

Write a single byte to the transmit buffer.

size_t USART3::write (const char *c)

Write a null-terminated string to the transmit buffer.

size_t USART3::write (const char *c, size_t n)

Write a character array of given size to the transmit buffer.

size_t USART3::write (const uint8_t *c, size_t n)

Write a byte array of given size to the transmit buffer.

void USART3::flush ()

Flush transmit buffer.

int USART3::peek ()

Examine the next character in the receive buffer without removing it from the buffer.

• int USART3::read ()

Return the next character in the receive buffer, removing it from the buffer.

bool USART3::available ()

Determine if there is data in the receive buffer..

10.22.1 Detailed Description

This file provides functions that offer high-level interfaces to USART3 hardware, which is available on Arduino Mega (ATMega2560).

These interfaces are buffered for both input and output and operate using interrupts associated with USART3. This means the transmit functions return immediately after queuing data in the output buffer for transmission and the transmission happens asynchronously, using dedicated USART3 hardware. Similarly, data is received asynchronously and placed into the input buffer.

The transmit and receive buffers are both ring buffers. If you try to queue more data than the transmit buffer can hold, the write functions will block until there is room in the buffer (as a result of data being transmitted). The receive buffer, however, will overwrite if it gets full. You must clear the receive buffer by reading it regularly when receiving significant amounts of data.

The sizes of the transmit and receive buffers can be set at compile time via macro constants. The default sizes are 32 bytes for the receive buffer and 64 bytes for the transmit buffer. To change these, define the macros USART3_RX_

BUFFER_SIZE (for the receive buffer) and USART3_TX_BUFFER_SIZE (for the transmit buffer) to whatever sizes you need. You need to make these define these macros prior to compiling the file USART3.cpp.

Two interfaces are provided. USART3 is a functional interface that makes use of the buffering and asynchronous transmit and receive capabilities of the microcontrollers. However, USART3 is limited to transmitting and receiving byte and character streams.

Serial3 is the most advanced and capable interface to the USART3 hardware. Serial3 provides a object-oriented interface that includes the ability to read and write numbers of various types and in various formats, all asynchronously.

To use these functions, include USART3.h in your source code and link against USART3.cpp.

Note

Linking against USART3.cpp installs interrupt functions for transmit and receive on USART3 (interrupts USAR

T3_UDRE and USART3_RX on Arduino Mega/ATmega2560). You cannot use the minimal interface to USART3 (from USARTMinimal.h) if you link against USART3.cpp. In particular, do *not* call initUSART3() or clearUSART3() if you link against USART3.cpp.

10.22.2 Enumeration Type Documentation

10.22.2.1 enum UsartSerialConfiguration

This enum lists serial configuration in terms of data bits, parity, and stop bits.

The format is kSerial XYZ where

- X = the number of data bits
- Y = N, E, or O; where N = none, E = even, and O = odd
- Z = the number of stop bits

Enumerator

```
kSerial_5N1 5 data bits, no parity, 1 stop bit
kSerial_6N1 6 data bits, no parity, 1 stop bit
kSerial_7N1 7 data bits, no parity, 1 stop bit
kSerial_8N1 8 data bits, no parity, 1 stop bit
kSerial_5N2 5 data bits, no parity, 2 stop bits
```

```
kSerial_6N2 6 data bits, no parity, 2 stop bits
kSerial_7N2 7 data bits, no parity, 2 stop bits
kSerial_8N2 8 data bits, no parity, 2 stop bits
kSerial_5E1 5 data bits, even parity, 1 stop bit
kSerial_6E1 6 data bits, even parity, 1 stop bit
kSerial_7E1 7 data bits, even parity, 1 stop bit
kSerial_8E1 8 data bits, even parity, 1 stop bit
kSerial_5E2 5 data bits, even parity, 2 stop bits
kSerial_6E2 6 data bits, even parity, 2 stop bits
kSerial_7E2 7 data bits, even parity, 2 stop bits
kSerial_8E2 8 data bits, even parity, 2 stop bits
kSerial_501 5 data bits, odd parity, 1 stop bit
kSerial_601 6 data bits, odd parity, 1 stop bit
kSerial_701 7 data bits, odd parity, 1 stop bit
kSerial_801 8 data bits, odd parity, 1 stop bit
kSerial_502 5 data bits, odd parity, 2 stop bits
kSerial_602 6 data bits, odd parity, 2 stop bits
kSerial_702 7 data bits, odd parity, 2 stop bits
kSerial_802 8 data bits, odd parity, 2 stop bits
kSerial_5N1 5 data bits, no parity, 1 stop bit
kSerial_6N1 6 data bits, no parity, 1 stop bit
kSerial_7N1 7 data bits, no parity, 1 stop bit
kSerial_8N1 8 data bits, no parity, 1 stop bit
kSerial_5N2 5 data bits, no parity, 2 stop bits
kSerial_6N2 6 data bits, no parity, 2 stop bits
kSerial_7N2 7 data bits, no parity, 2 stop bits
kSerial_8N2 8 data bits, no parity, 2 stop bits
kSerial_5E1 5 data bits, even parity, 1 stop bit
kSerial 6E1 6 data bits, even parity, 1 stop bit
kSerial_7E1 7 data bits, even parity, 1 stop bit
kSerial 8E1 8 data bits, even parity, 1 stop bit
kSerial_5E2 5 data bits, even parity, 2 stop bits
kSerial_6E2 6 data bits, even parity, 2 stop bits
kSerial_7E2 7 data bits, even parity, 2 stop bits
kSerial_8E2 8 data bits, even parity, 2 stop bits
kSerial_501 5 data bits, odd parity, 1 stop bit
kSerial_601 6 data bits, odd parity, 1 stop bit
kSerial_701 7 data bits, odd parity, 1 stop bit
kSerial_801 8 data bits, odd parity, 1 stop bit
kSerial_502 5 data bits, odd parity, 2 stop bits
kSerial_602 6 data bits, odd parity, 2 stop bits
kSerial_702 7 data bits, odd parity, 2 stop bits
```

kSerial_802 8 data bits, odd parity, 2 stop bits kSerial_5N1 5 data bits, no parity, 1 stop bit kSerial_6N1 6 data bits, no parity, 1 stop bit **kSerial_7N1** 7 data bits, no parity, 1 stop bit **kSerial_8N1** 8 data bits, no parity, 1 stop bit kSerial_5N2 5 data bits, no parity, 2 stop bits kSerial_6N2 6 data bits, no parity, 2 stop bits kSerial_7N2 7 data bits, no parity, 2 stop bits kSerial_8N2 8 data bits, no parity, 2 stop bits kSerial_5E1 5 data bits, even parity, 1 stop bit kSerial_6E1 6 data bits, even parity, 1 stop bit **kSerial_7E1** 7 data bits, even parity, 1 stop bit kSerial_8E1 8 data bits, even parity, 1 stop bit kSerial_5E2 5 data bits, even parity, 2 stop bits kSerial_6E2 6 data bits, even parity, 2 stop bits kSerial_7E2 7 data bits, even parity, 2 stop bits **kSerial** 8E2 8 data bits, even parity, 2 stop bits kSerial_501 5 data bits, odd parity, 1 stop bit kSerial_601 6 data bits, odd parity, 1 stop bit kSerial_701 7 data bits, odd parity, 1 stop bit kSerial_801 8 data bits, odd parity, 1 stop bit kSerial_502 5 data bits, odd parity, 2 stop bits **kSerial** 602 6 data bits, odd parity, 2 stop bits kSerial_702 7 data bits, odd parity, 2 stop bits kSerial_802 8 data bits, odd parity, 2 stop bits kSerial_5N1 5 data bits, no parity, 1 stop bit kSerial_6N1 6 data bits, no parity, 1 stop bit kSerial_7N1 7 data bits, no parity, 1 stop bit **kSerial_8N1** 8 data bits, no parity, 1 stop bit kSerial_5N2 5 data bits, no parity, 2 stop bits kSerial_6N2 6 data bits, no parity, 2 stop bits kSerial_7N2 7 data bits, no parity, 2 stop bits **kSerial_8N2** 8 data bits, no parity, 2 stop bits kSerial_5E1 5 data bits, even parity, 1 stop bit kSerial_6E1 6 data bits, even parity, 1 stop bit kSerial_7E1 7 data bits, even parity, 1 stop bit kSerial_8E1 8 data bits, even parity, 1 stop bit kSerial_5E2 5 data bits, even parity, 2 stop bits kSerial_6E2 6 data bits, even parity, 2 stop bits kSerial_7E2 7 data bits, even parity, 2 stop bits kSerial_8E2 8 data bits, even parity, 2 stop bits kSerial_501 5 data bits, odd parity, 1 stop bit

```
kSerial_601 6 data bits, odd parity, 1 stop bit
kSerial_701 7 data bits, odd parity, 1 stop bit
kSerial_801 8 data bits, odd parity, 1 stop bit
kSerial_502 5 data bits, odd parity, 2 stop bits
kSerial_602 6 data bits, odd parity, 2 stop bits
kSerial_702 7 data bits, odd parity, 2 stop bits
kSerial_802 8 data bits, odd parity, 2 stop bits
```

10.23 USARTMinimal.h File Reference

This file provides functions that provide a minimalist interface to the USARTs available on the Arduino Uno (ATmega328) and Arduino Mega (ATmega2560).

Functions

void initUSART0 (unsigned long baudRate)

Initialize USART0 for serial receive and transmit.

void transmitUSART0 (unsigned char data)

Transmit a single byte on USARTO.

void transmitUSART0 (const char *data)

Transmit a null-terminated string on USARTO.

unsigned char receiveUSART0 ()

Receive a byte on USARTO.

• void releaseUSART0 ()

Release USART0, making pins 0 and 1 again available for non-USART use.

void initUSART1 (unsigned long baudRate)

Initialize USART1 for serial receive and transmit.

void transmitUSART1 (unsigned char data)

Transmit a single byte on USART1.

void transmitUSART1 (const char *data)

Transmit a null-terminated string on USART1.

unsigned char receiveUSART1 ()

Receive a byte on USART1.

void releaseUSART1 ()

Release USART1, making pins 0 and 1 again available for non-USART use.

void initUSART2 (unsigned long baudRate)

Initialize USART2 for serial receive and transmit.

· void transmitUSART2 (unsigned char data)

Transmit a single byte on USART2.

• void transmitUSART2 (const char *data)

Transmit a null-terminated string on USART2.

• unsigned char receiveUSART2 ()

Receive a byte on USART2.

• void releaseUSART2 ()

Release USART2, making pins 0 and 1 again available for non-USART use.

· void initUSART3 (unsigned long baudRate)

Initialize USART3 for serial receive and transmit.

void transmitUSART3 (unsigned char data)

Transmit a single byte on USART3.

void transmitUSART3 (const char *data)

Transmit a null-terminated string on USART3.

unsigned char receiveUSART3 ()

Receive a byte on USART3.

void releaseUSART3 ()

Release USART3, making pins 0 and 1 again available for non-USART use.

10.23.1 Detailed Description

This file provides functions that provide a minimalist interface to the USARTs available on the Arduino Uno (ATmega328) and Arduino Mega (ATmega2560).

These functions are minimalist in the following sense:

- They only send sigle bytes or zero-terminated character strings.
- · They only receive single characters.
- They do not use the USART-related interrupts.
- They determine when the USART is ready to send by polling the relevant register bit.
- They determine when the USART has received data by polling the relevant register bit.

To use these functions, include USARTMinimal.h in your source code and link against USARTMinimal.cpp.

For a more advanced USART interface, consider using either the USART0 or Serial0 interfaces. Both of these are available by including USART0.h instead of USARTMinimal.h.

10.23.2 Function Documentation

10.23.2.1 void initUSART0 (unsigned long baudRate)

Initialize USART0 for serial receive and transmit.

USART0 is tied to pins 0 (RX) and 1 (TX) on both Arduino Uno (ATmega328 pins PD0, PD1) and Arduino Mega (A← Tmega2560 pins PE0, PE1).

Communications are configured for 8 data bits, no parity, and 1 stop bit.

baudRate the baud rate for the communications, usually one of the following values: 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, or 115200 (although other values below can be specified).

10.23.2.2 void initUSART1 (unsigned long baudRate)

Initialize USART1 for serial receive and transmit.

USART1 is tied to pins 18 (TX) and 19 (RX) on Arduino Mega (ATmega2560 pins PD3, PD2).

Communications are configured for 8 data bits, no parity, and 1 stop bit.

baudRate the baud rate for the communications, usually one of the following values: 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, or 115200 (although other values below can be specified).

Note

This function is only available on Arduino Mega (ATmega2560).

10.23.2.3 void initUSART2 (unsigned long baudRate)

Initialize USART2 for serial receive and transmit.

USART2 is tied to pins 16 (TX) and 17 (RX) on Arduino Mega (ATmega2560 pins PH1, PH0).

Communications are configured for 8 data bits, no parity, and 1 stop bit.

baudRate the baud rate for the communications, usually one of the following values: 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, or 115200 (although other values below can be specified).

Note

This function is only available on Arduino Mega (ATmega2560).

10.23.2.4 void initUSART3 (unsigned long baudRate)

Initialize USART3 for serial receive and transmit.

USART3 is tied to pins 14 (TX) and 15 (RX) on Arduino Mega (ATmega2560 pins PJ1, PJ0).

Communications are configured for 8 data bits, no parity, and 1 stop bit.

baudRate the baud rate for the communications, usually one of the following values: 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, or 115200 (although other values below can be specified).

Note

This function is only available on Arduino Mega (ATmega2560).

10.23.2.5 unsigned char receiveUSART0 ()

Receive a byte on USART0.

You must first initialize USART0 by calling initUSART0().

This function blocks until the USART receives a byte.

Returns

the byte received.

```
10.23.2.6 unsigned char receiveUSART1 ( )
Receive a byte on USART1.
You must first initialize USART1 by calling initUSART1().
This function blocks until the USART receives a byte.
Returns
     the byte received.
Note
     This function is only available on Arduino Mega (ATmega2560).
10.23.2.7 unsigned char receiveUSART2 ( )
Receive a byte on USART2.
You must first initialize USART2 by calling initUSART2().
This function blocks until the USART receives a byte.
Returns
     the byte received.
Note
     This function is only available on Arduino Mega (ATmega2560).
10.23.2.8 unsigned char receiveUSART3 ( )
Receive a byte on USART3.
You must first initialize USART3 by calling initUSART3().
This function blocks until the USART receives a byte.
Returns
     the byte received.
Note
     This function is only available on Arduino Mega (ATmega2560).
10.23.2.9 void releaseUSART0 ( )
Release USART0, making pins 0 and 1 again available for non-USART use.
After calling this function, you cannot read or write to the USART unless you first call initUSART0().
```

```
10.23.2.10 void releaseUSART1 ( )
Release USART1, making pins 0 and 1 again available for non-USART use.
After calling this function, you cannot read or write to the USART unless you first call initUSART1().
Note
     This function is only available on Arduino Mega (ATmega2560).
10.23.2.11 void releaseUSART2 ( )
Release USART2, making pins 0 and 1 again available for non-USART use.
After calling this function, you cannot read or write to the USART unless you first call initUSART2().
Note
     This function is only available on Arduino Mega (ATmega2560).
10.23.2.12 void releaseUSART3 ( )
Release USART3, making pins 0 and 1 again available for non-USART use.
After calling this function, you cannot read or write to the USART unless you first call initUSART3().
Note
     This function is only available on Arduino Mega (ATmega2560).
10.23.2.13 void transmitUSART0 (unsigned char data)
Transmit a single byte on USART0.
You must first initialize USART0 by calling initUSART0().
This function blocks until the USART becomes available and the byte can be transmitted.
    • data the byte to be transmitted.
10.23.2.14 void transmitUSART0 (const char * data)
Transmit a null-terminated string on USART0.
You must first initialize USART0 by calling initUSART0().
```

data the null-terminated string to be transmitted.

This function blocks until the USART becomes available and all the bytes can be transmitted.

10.23.2.15 void transmitUSART1 (unsigned char data)

Transmit a single byte on USART1.

You must first initialize USART1 by calling initUSART1().

This function blocks until the USART becomes available and the byte can be transmitted.

• data the byte to be transmitted.

Note

This function is only available on Arduino Mega (ATmega2560).

10.23.2.16 void transmitUSART1 (const char * data)

Transmit a null-terminated string on USART1.

You must first initialize USART1 by calling initUSART1().

This function blocks until the USART becomes available and all the bytes can be transmitted.

• data the null-terminated string to be transmitted.

Note

This function is only available on Arduino Mega (ATmega2560).

10.23.2.17 void transmitUSART2 (unsigned char data)

Transmit a single byte on USART2.

You must first initialize USART2 by calling initUSART2().

This function blocks until the USART becomes available and the byte can be transmitted.

• data the byte to be transmitted.

Note

This function is only available on Arduino Mega (ATmega2560).

10.23.2.18 void transmitUSART2 (const char * data)

Transmit a null-terminated string on USART2.

You must first initialize USART2 by calling initUSART2().

This function blocks until the USART becomes available and all the bytes can be transmitted.

• data the null-terminated string to be transmitted.

Note

This function is only available on Arduino Mega (ATmega2560).

10.23.2.19 void transmitUSART3 (unsigned char data)

Transmit a single byte on USART3.

You must first initialize USART3 by calling initUSART3().

This function blocks until the USART becomes available and the byte can be transmitted.

• data the byte to be transmitted.

Note

This function is only available on Arduino Mega (ATmega2560).

```
10.23.2.20 void transmitUSART3 (const char * data)
```

Transmit a null-terminated string on USART3.

You must first initialize USART3 by calling initUSART3().

This function blocks until the USART becomes available and all the bytes can be transmitted.

• data the null-terminated string to be transmitted.

Note


This function is only available on Arduino Mega (ATmega2560).

10.24 Writer.h File Reference


This file provides a generic interface to outgoing data streams of any kind. It is designed around how serial streams are generally used, but can be used with any system that requires converting strings and/or numbers into a sequential output of bytes.

```
#include <stdint.h>
#include <stddef.h>
```

Include dependency graph for Writer.h:



This graph shows which files directly or indirectly include this file:



Classes

• class Writer

This is an abstract class defining a generic interface to write numbers and strings to a sequential stream of bytes (such as a serial output device).

10.24.1 Detailed Description

This file provides a generic interface to outgoing data streams of any kind. It is designed around how serial streams are generally used, but can be used with any system that requires converting strings and/or numbers into a sequential output of bytes.

Index

A2DVoltageReference	clearTimer5
Analog2Digital.h, 97	Pwm.h, 122
abi.h, 95	command
Analog2Digital.h, 96	I2cLcd, 55
A2DVoltageReference, 97	
initA2D, 98	delay
kA2dReference11V, 97	SystemClock.h, 130
kA2dReference256V, 97	delayMicroseconds
kA2dReferenceAREF, 97	SystemClock.h, 130
kA2dReferenceAVCC, 97	delayMilliseconds
readA2D, 98	SystemClock.h, 130
readGpioPinAnalog, 97	delayQuartersOfMicroSeconds
readGpioPinAnalogV, 98	SimpleDelays.h, 128
setA2DVoltageReference, 98	delayTenthsOfSeconds
setA2DVoltageReference11V, 99	SimpleDelays.h, 129
setA2DVoltageReference256V, 99	delayWholeMilliSeconds
setA2DVoltageReferenceAREF, 99	SimpleDelays.h, 129
setA2DVoltageReferenceAVCC, 99	discardFromFront
ArduinoMegaPins.h, 99	RingBufferT, 67
ArduinoPins.h, 101	displayBottomRow
ArduinoUnoPins.h, 101	I2cLcd, 55
available	displayTopRow
Reader, 59	I2cLcd, 55
Serial0, 71	
Serial1, 75	find
Serial2, 79	Reader, 59, 60
Serial3, 83	findUntil
USARTO, 38	Reader, 60
USART1, 41	flush
USART2, 44	USART0, 38
USART3, 47	USART1, 41
	USART2, 44
busy	USART3, 47
I2cMaster, 28	freeRam
I2cSlave, 35	MemUtils, 37
. T	freeRamQuickEstimate
clearTimer0	MemUtils, 37
Pwm.h, 121	+O:- ADO
clearTimer1	getGpioADC
Pwm.h, 121	GpioPinMacros.h, 105
clearTimer2	getGpioCOM
Pwm.h, 121	GpioPinMacros.h, 105
clearTimer3	getGpioDDR
Pwm.h, 121	GpioPinMacros.h, 105
clearTimer4	getGpioMASK
Pwm.h. 122	GpioPinMacros.h. 106

10 : 000	
getGpioOCR	init, 55
GpioPinMacros.h, 106	kBacklight_Blue, 55
getGpioPinMagragh 106	kBacklight_Green, 55
GpioPinMacros.h, 106	kBacklight_Red, 55 kBacklight Teal, 55
getGpioPORT	<u> </u>
GpioPinMacros.h, 106	kBacklight_Violet, 55
getGpioTCCR	kBacklight_White, 55
GpioPinMacros.h, 106	kBacklight_Yellow, 55
GpioPin	kButton_Down, 55
GpioPinMacros.h, 107	kButton_Left, 55
GpioPinAnalog	kButton_Right, 55
GpioPinMacros.h, 107	kButton_Select, 55
GpioPinMacros.h, 102	kButton_Up, 55
getGpioADC, 105	readButtons, 56
getGpioCOM, 105	setBacklight, 56
getGpioDDR, 105	setCursor, 56
getGpioMASK, 106	write, 56, 57
getGpioOCR, 106	I2cLcd.h, 111
getGpioPIN, 106	I2cMaster, 25
getGpioPORT, 106	busy, 28
getGpioTCCR, 106	I2cBusSpeed, 27
GpioPin, 107	I2cPullups, 27
GpioPinAnalog, 107	I2cSendErrorCodes, 27
GpioPinPwm, 107	I2cStatusCodes, 28
kDigitalHigh, 109	kl2cBusFast, 27
kDigitalLow, 109	kl2cBusSlow, 27
makeGpioVarFromGpioPin, 107	kl2cCompletedOk, 28
makeGpioVarFromGpioPinAnalog, 107	kl2cErrMsgTooLong, 28
makeGpioVarFromGpioPinPwm, 108	kl2cErrNullStatusPtr, 28
readGpioPinDigital, 108	kl2cErrReadWithoutStorage, 28
readGpioPinDigitalV, 109	kl2cErrTxBufferFull, 28
setGpioPinHigh, 108	kl2cErrWriteWithoutData, 28
setGpioPinHighV, 109	kl2cError, 28
setGpioPinLow, 108	kl2cInProgress, 28
setGpioPinLowV, 110	kl2cNoError, 28
setGpioPinModeInput, 108	kl2cNotStarted, 28
setGpioPinModeInputPullup, 109	kPullupsOff, 27
setGpioPinModeInputPullupV, 110	kPullupsOn, 27
setGpioPinModeInputV, 110	pullups, 28
setGpioPinModeOutput, 109	readAsync, 28, 29
setGpioPinModeOutputV, 110	readSync, 29, 30
writeGpioPinDigital, 109	start, 30
writeGpioPinDigitalV, 110	stop, 30
GpioPinPwm	writeAsync, 30–32
GpioPinMacros.h, 107	writeSync, 32, 33
GpioPinVariable, 51	I2cMaster.h, 111
apior invariable, 51	
IO-Dur Cross	I2cPullups
I2cBusSpeed	I2cMaster, 27
I2cMaster, 27	I2cSlave, 35
I2cSlave, 35	I2cSendErrorCodes
I2cLcd, 52	I2cMaster, 27
command, 55	I2cSlave, 34
displayBottomRow, 55	busy, 35
displayTopRow, 55	I2cBusSpeed, 35

I2cPullups, 35	isFull
I2cStatusCodes, 35	RingBuffer, 65
kl2cBusFast, 35	RingBufferT, 68
kl2cBusSlow, 35	isNotEmpty
kl2cCompletedOk, 35	RingBuffer, 65
kl2cError, 35	RingBufferT, 68
kl2clnProgress, 35	isNotFull
kl2cRxOverflow, 35	RingBuffer, 65
kl2cTxPartial, 35	RingBufferT, 68
kPullupsOff, 35	
kPullupsOn, 35	kA2dReference11V
processI2cMessage, 35	Analog2Digital.h, 97
pullups, 36	kA2dReference256V
start, 36	Analog2Digital.h, 97
stop, 36	kA2dReferenceAREF
I2cSlave.h, 114	Analog2Digital.h, 97
I2cStatusCodes	kA2dReferenceAVCC
I2cMaster, 28	Analog2Digital.h, 97
I2cSlave, 35	kBacklight_Blue
init	I2cLcd, 55
I2cLcd, 55	kBacklight_Green
initA2D	I2cLcd, 55
Analog2Digital.h, 98	kBacklight_Red
initPwmTimer0	I2cLcd, 55
Pwm.h, 122	kBacklight Teal
initPwmTimer1	I2cLcd, 55
Pwm.h, 123	kBacklight_Violet
initPwmTimer2	I2cLcd, 55
Pwm.h, 123	kBacklight_White
initPwmTimer3	I2cLcd, 55
Pwm.h, 123	kBacklight_Yellow
initPwmTimer4	I2cLcd, 55
Pwm.h, 123	kBin
initPwmTimer5	Writer, 87
Pwm.h, 124	kButton Down
initSystem	I2cLcd, 55
InitSystem.h, 116	kButton_Left
InitSystem.h, 116	I2cLcd, 55
initSystem, 116	kButton_Right
initSystemClock	I2cLcd, 55
SystemClock.h, 130	kButton_Select
initUSART0	I2cLcd, 55
USARTMinimal.h, 153	kButton_Up
initUSART1	I2cLcd, 55
USARTMinimal.h, 153	kDec
initUSART2	Writer, 87
USARTMinimal.h, 154	kDigitalHigh
initUSART3	GpioPinMacros.h, 109
USARTMinimal.h, 154	kDigitalLow
IntegerOutputBase	GpioPinMacros.h, 109
Writer, 87	kHex
isEmpty	Writer, 87
RingBuffer, 65	kl2cBusFast
RingBufferT, 67	I2cMaster, 27

I2aClava 2E	LCorial ENO
I2cSlave, 35 kI2cBusSlow	kSerial_5N2 USART0.h, 134–136
I2cMaster, 27	USART1.h, 139–141
I2cSlave, 35	USART2.h, 144–146
kl2cCompletedOk	USART3.h, 149–151
I2cMaster, 28	kSerial 501
•	USARTO.h, 135, 136
I2cSlave, 35 kI2cErrMsgTooLong	USART1.h, 140, 141
I2cMaster, 28	USART2.h, 145, 146
kl2cErrNullStatusPtr	USART3.h, 150, 151
I2cMaster, 28	kSerial 502
kl2cErrReadWithoutStorage	USARTO.h, 135–137
I2cMaster, 28	USART1.h, 140–142
kl2cErrTxBufferFull	USART2.h, 145–147
I2cMaster, 28	USART3.h, 150–152
kl2cErrWriteWithoutData	kSerial 6E1
I2cMaster, 28	USARTO.h, 135, 136
kl2cError	USART1.h, 140, 141
I2cMaster, 28	USART2.h, 145, 146
I2cSlave, 35	USART3.h, 150, 151
kl2cInProgress	kSerial_6E2
I2cMaster, 28	USARTO.h, 135, 136
I2cSlave, 35	USART1.h, 140, 141
kl2cNoError	USART2.h, 145, 146
I2cMaster, 28	USART3.h, 150, 151
kl2cNotStarted	kSerial_6N1
I2cMaster, 28	USART0.h, 134–136
kl2cRxOverflow	USART1.h, 139–141
I2cSlave, 35	USART2.h, 144–146
kl2cTxPartial	USART3.h, 149–151
I2cSlave, 35	kSerial_6N2
kOct	USARTO.h, 134–136
Writer, 87	USART1.h, 139–141
kPullupsOff	USART2.h, 144–146
I2cMaster, 27	USART3.h, 149–151
I2cSlave, 35	kSerial_601
kPullupsOn	USART0.h, 135, 136
I2cMaster, 27	USART1.h, 140, 141
I2cSlave, 35	USART2.h, 145, 146
kSerial_5E1	USART3.h, 150, 151
USART0.h, 135, 136	kSerial 602
USART1.h, 140, 141	USART0.h, 135–137
USART2.h, 145, 146	USART1.h, 140–142
USART3.h, 150, 151	USART2.h, 145–147
kSerial_5E2	USART3.h, 150–152
USART0.h, 135, 136	kSerial_7E1
USART1.h, 140, 141	USART0.h, 135, 136
USART2.h, 145, 146	USART1.h, 140, 141
USART3.h, 150, 151	USART2.h, 145, 146
kSerial_5N1	USART3.h, 150, 151
USART0.h, 134–136	kSerial_7E2
USART1.h, 139–141	USARTO.h, 135, 136
USART2.h, 144–146	USART1.h, 140, 141
USART3.h, 149–151	USART2.h, 145, 146

USART3.h, 150, 151	makeGpioVarFromGpioPinAnalog
kSerial_7N1	GpioPinMacros.h, 107
USART0.h, 134-136	makeGpioVarFromGpioPinPwm
USART1.h, 139-141	GpioPinMacros.h, 108
USART2.h, 144-146	MemUtils, 37
USART3.h, 149-151	freeRam, 37
kSerial 7N2	freeRamQuickEstimate, 37
USART0.h, 135, 136	MemUtils.h, 117
USART1.h, 140, 141	micros
USART2.h, 145, 146	SystemClock.h, 131
USART3.h, 150, 151	millis
kSerial_701	SystemClock.h, 131
USART0.h, 135–137	
USART1.h, 140–142	new.h, 117
USART2.h, 145–147	peek
USART3.h, 150–152	Reader, 60
kSerial_702	RingBuffer, 66
USART0.h, 135–137	RingBufferT, 68
USART1.h, 140–142	Serial0, 71
USART2.h, 145–147	Serial1, 75
USART3.h, 150–152	Serial2, 79
kSerial_8E1	Serial3, 83
USART0.h, 135, 136	USARTO, 38
USART1.h, 140, 141	USART1, 41
USART2.h, 145, 146	USART2, 44
USART3.h, 150, 151	USART3, 47
kSerial_8E2	print
USART0.h, 135, 136	Writer, 87–89
USART1.h, 140, 141	println
USART2.h, 145, 146	Writer, 89–91
USART3.h, 150, 151	processl2cMessage
kSerial_8N1	I2cSlave, 35
USART0.h, 134–136	pull
USART1.h, 139–141	RingBuffer, 66
USART2.h, 144–146	RingBufferT, 68
USART3.h, 149–151	pullups
kSerial_8N2	I2cMaster, 28
USART0.h, 135, 136	I2cSlave, 36
USART1.h, 140, 141	
USART2.h, 145, 146	push Ping Puffer CC
USART3.h, 150, 151	RingBuffer, 66
kSerial 801	RingBufferT, 69
USART0.h, 135–137	Pwm.h, 118
	clearTimer0, 121
USART1.h, 140–142	clearTimer1, 121
USART2.h, 145–147	clearTimer2, 121
USART3.h, 150–152	clearTimer3, 121
kSerial_802	clearTimer4, 122
USART0.h, 135–137	clearTimer5, 122
USART1.h, 140–142	initPwmTimer0, 122
USART2.h, 145–147	initPwmTimer1, 123
USART3.h, 150–152	initPwmTimer2, 123
	initPwmTimer3, 123
makeGpioVarFromGpioPin	initPwmTimer4, 123
GpioPinMacros.h, 107	initPwmTimer5, 124

writeGpioPinPwm, 120	receiveUSART1
writeGpioPinPwmV, 124	USARTMinimal.h, 154
	receiveUSART2
read	USARTMinimal.h, 155
Reader, 61	receiveUSART3
Serial0, 71	USARTMinimal.h, 155
Serial1, 75	releaseUSART0
Serial2, 79	USARTMinimal.h, 155
Serial3, 83	releaseUSART1
USART0, 39	USARTMinimal.h, 155
USART1, 42	releaseUSART2
USART2, 45	USARTMinimal.h, 156
USART3, 48	releaseUSART3
readA2D	USARTMinimal.h, 156
Analog2Digital.h, 98	RingBuffer, 64
readAsync	isEmpty, <mark>65</mark>
I2cMaster, 28, 29	isFull, 65
readButtons	isNotEmpty, 65
I2cLcd, 56	isNotFull, 65
readBytes	peek, 66
Reader, 61	pull, 66
readBytesUntil	push, 66
Reader, 61, 62	RingBuffer, 65
readFloat	RingBuffer.h, 125
Reader, 62	RingBufferT
readGpioPinAnalog	discardFromFront, 67
Analog2Digital.h, 97	isEmpty, 67
readGpioPinAnalogV	isFull, 68
Analog2Digital.h, 98	isNotEmpty, 68
readGpioPinDigital	isNotFull, 68
GpioPinMacros.h, 108	peek, 68
readGpioPinDigitalV	pull, 68
GpioPinMacros.h, 109	push, 69
readLine	RingBufferT< T, N, SIZE >, 66
Reader, 63	RingBufferT.h, 126
readLong	0 1 10 00
Reader, 63	Serial0, 69
readSync	available, 71
I2cMaster, 29, 30	peek, 71
Reader, 58	read, 71
available, 59	start, 71
find, 59, 60	stop, 71
findUntil, 60	write, 72
peek, 60	Serial1, 73
read, 61	available, 75
readBytes, 61	peek, 75
readBytesUntil, 61, 62	read, 75
readFloat, 62	start, 75
readLine, 63	stop, 75
readLong, 63	write, 76
setTimeout, 64	Serial2, 77
Reader.h, 124	available, 79
receiveUSART0	peek, 79
USARTMinimal.h, 154	read, 79

start, 79	Serial1, 75
stop, 79	Serial2, 79
write, 80	Serial3, 83
Serial3, 81	USART0, 39
available, 83	USART1, 42
peek, 83	USART2, 45
read, 83	USART3, 48
start, 83	stop
stop, 83	I2cMaster, 30
write, 84	I2cSlave, 36
setA2DVoltageReference	Serial0, 71
Analog2Digital.h, 98	Serial1, 75
setA2DVoltageReference11V	Serial2, 79
Analog2Digital.h, 99	Serial3, 83
setA2DVoltageReference256V	USART0, 39
Analog2Digital.h, 99	USART1, 42
setA2DVoltageReferenceAREF	USART2, 45
Analog2Digital.h, 99	USART3, 48
setA2DVoltageReferenceAVCC	SystemClock.h, 129
Analog2Digital.h, 99	delay, 130
setBacklight	delayMicroseconds, 130
I2cLcd, 56	delayMilliseconds, 130
setCursor	initSystemClock, 130
I2cLcd, 56	micros, 131
setGpioPinHigh	millis, 131
GpioPinMacros.h, 108	
setGpioPinHighV	transmitUSART0
GpioPinMacros.h, 109	USARTMinimal.h, 156
setGpioPinLow	transmitUSART1
GpioPinMacros.h, 108	USARTMinimal.h, 156, 157
setGpioPinLowV	transmitUSART2
	USARTMinimal.h, 157
GpioPinMacros.h, 110	transmitUSART3
setGpioPinModeInput	USARTMinimal.h, 157, 158
GpioPinMacros.h, 108	
setGpioPinModeInputPullup	USART0, 37
GpioPinMacros.h, 109	available, 38
setGpioPinModeInputPullupV	flush, 38
GpioPinMacros.h, 110	peek, <mark>38</mark>
setGpioPinModeInputV	read, 39
GpioPinMacros.h, 110	start, 39
setGpioPinModeOutput	stop, <mark>39</mark>
GpioPinMacros.h, 109	write, 39, 40
setGpioPinModeOutputV	USART0.h, 131
GpioPinMacros.h, 110	kSerial_5E1, 135, 136
setTimeout	kSerial_5E2, 135, 136
Reader, 64	kSerial_5N1, 134-136
SimpleDelays.h, 127	kSerial_5N2, 134-136
delayQuartersOfMicroSeconds, 128	kSerial_5O1, 135, 136
delayTenthsOfSeconds, 129	kSerial_5O2, 135-137
delayWholeMilliSeconds, 129	kSerial_6E1, 135, 136
start	kSerial_6E2, 135, 136
I2cMaster, 30	kSerial_6N1, 134-136
I2cSlave, 36	kSerial_6N2, 134-136
Serial0, 71	kSerial_6O1, 135, 136

kSerial_6O2, 135–137	stop, 45
kSerial_7E1, 135, 136	write, 45, 46
kSerial_7E2, 135, 136	USART2.h, 142
kSerial_7N1, 134–136	kSerial_5E1, 145, 146
kSerial_7N2, 135, 136	kSerial_5E2, 145, 146
kSerial_701, 135–137	kSerial_5N1, 144–146
kSerial_702, 135–137	kSerial_5N2, 144–146
kSerial_8E1, 135, 136	kSerial_501, 145, 146
kSerial_8E2, 135, 136	kSerial_502, 145–147
kSerial_8N1, 134-136	kSerial_6E1, 145, 146
kSerial_8N2, 135, 136	kSerial_6E2, 145, 146
kSerial_8O1, 135–137	kSerial_6N1, 144-146
kSerial_802, 135–137	kSerial_6N2, 144-146
UsartSerialConfiguration, 134	kSerial_6O1, 145, 146
USART1, 40	kSerial_6O2, 145-147
available, 41	kSerial_7E1, 145, 146
flush, 41	kSerial_7E2, 145, 146
peek, 41	kSerial_7N1, 144-146
read, 42	kSerial 7N2, 145, 146
start, 42	kSerial 701, 145-147
stop, 42	kSerial 702, 145-147
write, 42, 43	kSerial_8E1, 145, 146
USART1.h, 137	kSerial_8E2, 145, 146
kSerial 5E1, 140, 141	kSerial 8N1, 144-146
kSerial_5E2, 140, 141	kSerial 8N2, 145, 146
kSerial_5N1, 139–141	kSerial 801, 145–147
kSerial_5N2, 139–141	kSerial_802, 145–147
kSerial_501, 140, 141	UsartSerialConfiguration, 144
kSerial 502, 140–142	USART3, 46
kSerial_6E1, 140, 141	available, 47
kSerial_6E2, 140, 141	flush, 47
kSerial_6N1, 139–141	
kSerial 6N2, 139–141	peek, 47
_ :	read, 48
kSerial_601, 140, 141	start, 48
kSerial_602, 140–142	stop, 48
kSerial_7E1, 140, 141	write, 48, 49
kSerial_7E2, 140, 141	USART3.h, 147
kSerial_7N1, 139–141	kSerial_5E1, 150, 151
kSerial_7N2, 140, 141	kSerial_5E2, 150, 151
kSerial_701, 140–142	kSerial_5N1, 149–151
kSerial_702, 140–142	kSerial_5N2, 149–151
kSerial_8E1, 140, 141	kSerial_501, 150, 151
kSerial_8E2, 140, 141	kSerial_502, 150-152
kSerial_8N1, 139-141	kSerial_6E1, 150, 151
kSerial_8N2, 140, 141	kSerial_6E2, 150, 151
kSerial_8O1, 140–142	kSerial_6N1, 149–151
kSerial_802, 140-142	kSerial_6N2, 149-151
UsartSerialConfiguration, 139	kSerial_6O1, 150, 151
USART2, 43	kSerial_6O2, 150-152
available, 44	kSerial_7E1, 150, 151
flush, 44	kSerial_7E2, 150, 151
peek, 44	kSerial_7N1, 149-151
read, 45	kSerial_7N2, 150, 151
otort 45	LO - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 -
start, 45	kSerial_7O1, 150–152

kSerial_7O2, 150-152	Writer, 85
kSerial_8E1, 150, 151	IntegerOutputBase, 87
kSerial_8E2, 150, 151	kBin, 87
kSerial_8N1, 149-151	kDec, 87
kSerial_8N2, 150, 151	kHex, 87
kSerial_801, 150-152	kOct, 87
kSerial_8O2, 150–152	print, 87–89
UsartSerialConfiguration, 149	println, 89–91
USARTMinimal.h, 152	write, 92
initUSART0, 153	Writer.h, 158
initUSART1, 153	
initUSART2, 154	
initUSART3, 154	
receiveUSART0, 154	
receiveUSART1, 154	
receiveUSART2, 155	
receiveUSART3, 155	
releaseUSART0, 155	
releaseUSART1, 155	
releaseUSART2, 156	
releaseUSART3, 156	
transmitUSART0, 156	
transmitUSART1, 156, 157	
transmitUSART2, 157	
transmitUSART3, 157, 158	
UsartSerialConfiguration	
USARTO.h, 134	
USART1.h, 139	
USART2.h, 144	
USART3.h, 149	
write	
I2cLcd, 56, 57	
Serial0, 72	
Serial1, 76	
Serial2, 80	
Serial3, 84	
USART0, 39, 40	
USART1, 42, 43	
USART2, 45, 46	
USART3, 48, 49	
Writer, 92	
writeAsync	
I2cMaster, 30–32	
writeGpioPinDigital	
GpioPinMacros.h, 109	
writeGpioPinDigitalV	
GpioPinMacros.h, 110	
writeGpioPinPwm	
Pwm.h, 120	
writeGpioPinPwmV	
Pwm.h, 124	
writeSync	
I2cMaster, 32, 33	
,,	