

Programming Manual for FDx SDK *Pro* for Java

For applications using SecuGen® fingerprint readers

SG1-0040A-001 (05/13)

© Copyright 1998-2012 SecuGen Corporation.

ALL RIGHTS RESERVED. Specifications are subject to change without notice. SecuGen, Auto-On, FDP02, FDU01, FDU02, FDU03, FDU04, SDU03, SDU04 and Smart Capture are trademarks or registered trademarks of SecuGen Corporation. All other brands or products may be trademarks, service marks or registered trademarks of their respective owners.

Contents

| BEFORE YOU BEGIN | | 1 |
|---|----|------------|
| BIOMETRICS OVERVIEW | | . 4 |
| ABOUT SECUGEN | | |
| ABOUT SECUGEN PRODUCTS | 5 | |
| CHAPTER 1. OVERVIEW | | 6 |
| 1.1. FEATURES | | . 0 |
| 1.2. SYSTEM REQUIREMENTS | 6 | |
| 1.3. DEVELOPMENT ENVIRONMENT | | |
| CHAPTER 2. INSTALLATION | | Q |
| 2.1. INSTALLATION | | . 0 |
| 2.2. INCLUDED FILES | | |
| 2.3. RUN-TIME DISTRIBUTION | | |
| CHAPTER 3. PROGRAMMING IN JAVA | | a |
| 3.1. CREATE JSGFPLIB | | |
| 3.2. INITIALIZE JSGFPLIB | | |
| 3.3. TERMINATE JSGFPLIB | | |
| 3.4. OPEN THE SECUGEN FINGERPRINT READER | | |
| 3.5. GET DEVICE INFORMATION | | |
| 3.6. CAPTURE A FINGERPRINT IMAGE | 11 | |
| 3.7. GET IMAGE QUALITY | 11 | |
| 3.8. USE SMART CAPTURE™ OR CONTROL BRIGHTNESS MANUALLY | 12 | |
| 3.9. CREATE A TEMPLATE | | |
| 3.10. MATCH TEMPLATES | | |
| 3.11. REGISTER A FINGERPRINT | | |
| 3.12. VERIFY A FINGERPRINT | | |
| 3.13. GET MATCHING SCORE | | |
| 3.14. TEMPLATE FORMAT | | |
| 3.15. MANIPULATE ANSI378 TEMPLATES | | |
| 3.16. MANIPULATE ISO19794-2 TEMPLATES | | |
| 3.17. GET VERSION INFORMATION OF MINEX COMPLIANT ALGORITHMS | | ~ 4 |
| CHAPTER 4. JSGFPLIB FUNCTION REFERENCE | | 24 |
| 4.1. JSGFPLIB CREATION AND TERMINATION | | |
| 4.2. INITIALIZATION | 24 | |
| 4.3. DEVICE AND CAPTURING FUNCTIONS | | |
| 4.5. MATCHING FUNCTIONS | | |
| 4.6. FUNCTIONS FOR ANSI378 TEMPLATES | | |
| 4.7. FUNCTIONS FOR ISO19794-2 TEMPLATES | | |
| 4.8. OTHER | | |
| CHAPTER 5. CLASS REFERENCE | | 36 |
| 5.1. JAVA DOCUMENTATION | | 00 |
| CHAPTER 6 CONSTANTS | | 37 |
| 6.1. SGFDXDEVICENAME | 37 | <i>J</i> / |
| 6.2. SGFDXSECURITYLEVEL | | |
| 6.3. SGFDXTEMPLATEFORMAT | | |
| 6.4. SGIMPRESSIONTYPE | | |
| 6.5. SGFINGERPOSITION | | |
| 6.6. SGFDXERRORCODE | | |
| 6.7. SGFDXCONSTANT | 38 | |
| CHAPTER 7. SAMPLE APPLICATIONS | | 39 |
| 7.1. JSGD - HARDWARE TEST PROGRAM | | |
| 7.2. JFPLIB TEST PROGRAM | | |
| CHAPTER 8. SIGNED APPLET AND WEB BROWSER INTEGRATION | | 41 |
| 8.1. INSTALL THE FDX SDK PRO FOR JAVA RUNTIME LIBRARY | | - • |
| 8.2. GENERATE A DIGITAL CERTIFICATE AND KEY PAIR (GENKEY.BAT) | | |
| 8.3. BUILD A SIGNED JAR FILE (BUILDSIGNEDAPPLET.BAT) | | |
| 8.4. EXPORT THE CERTIFICATE (EXPORTCERT.BAT) | 43 | |
| 8.5. IMPORT THE CERTIFICATE INTO JAVA PLUG-IN | | |

FDx SDK Pro Programming Manual – Java

| 8.6. OPEN THE APPLET DEMO HTML FILE | 46 |
|-------------------------------------|----|
| | 47 |
| 8.8. FIREFOX BROWSER | 48 |
| 8.9. GOOGLE CHROME BROWSER | 40 |

Before You Begin

Biometrics Overview

Biometrics is an automated method of recognizing a person based on physical or behavioral characteristics. Biometric information that can be used to accurately identify people includes fingerprint, voice, face, iris, handwriting and hand geometry.

There are two key functions offered by a biometric system. One method is **identification**, a "one-to-many" matching process in which a biometric sample is compared sequentially to a set of stored samples to determine the closest match. The other is **verification**, a "one-to-one" matching process in which the biometric system checks previously enrolled data for a specific user to verify whether that individual is who he or she claims to be. The verification method provides the best combination of speed and security, especially where multiple users are concerned, and requires a user ID or other identifier for direct matching.

With an increasing reliance on online technology and other shared resources, the information age is quickly revolutionizing the way transactions are initiated and completed. Business transactions of all types are increasingly being handled online and remotely. This unprecedented growth in electronic transactions has underlined the need for a faster, more secure and more convenient method of user verification than passwords can provide.

Using biometric identifiers offers several advantages over traditional and current methods. This is because only biometric authentication is based on the identification of an intrinsic part of a human being. Tokens such as smart cards, magnetic stripe cards and physical keys, can be lost, stolen, duplicated or left behind. Passwords can be forgotten, shared, hacked or unintentionally observed by a third party. By eliminating all of these potential trouble spots, biometric technology can provide greater security, with convenience, needed for today's complex electronic landscape.

Advantages of Using Fingerprints

The advantages of using fingerprints include widespread public acceptance, convenience and reliability. It takes little time and effort to scan one's fingerprint with a fingerprint reader, and so fingerprint recognition is considered among the least intrusive of all biometric verification techniques. Ancient officials used thumbprints to seal documents thousands of years ago, and law enforcement agencies have been using fingerprint identification since the late 1800s. Fingerprints have been used so extensively and for so long, there is a great accumulation of scientific data supporting the idea that no two fingerprints are alike.

About SecuGen

SecuGen (www.secugen.com) provides biometric solutions for physical and network security employing advanced fingerprint recognition technology. The company's comprehensive product line includes high quality optical fingerprint readers and sensor component, software and development kits that are used for a variety of innovative applications including Internet, enterprise network and desktop security, physical access control, time and attendance management and financial and medical records control. SecuGen patented products feature the industry's longest warranty and are renowned for their accuracy, reliability and versatility. Based in Silicon Valley, SecuGen has been serving the global biometric community since 1998 and is an active member of the Biometrics Consortium (www.biometrics.org) and the BioAPI Consortium (www.bioapi.org).

About SecuGen Products

SecuGen Sensor Qualities

- **Excellent Image Quality:** Clear, distortion-free fingerprint images are generated using advanced, patent-pending optical methods. Quality imaging yields better sampling for minutiae data extraction.
- **Durability:** Mechanical strength tests show resistance to impact, shock and scratches.
- Powerful Software: Precise, fast processing algorithm ensures efficiency and reliability.
- Ruggedness and Versatility: Solid engineering and superior materials allows for use under extreme conditions.
- **Ergonomic Design:** Compact, modular design for seamless integration into small devices, ease of use and compatibility make it ideal for a broad range of applications.
- **Low Cost:** Products are developed to deliver high performance, zero maintenance at very affordable prices for general and industrial use.

Advantages of SecuGen Sensors Over Other Optical Sensors

- Unique optical method captures fine details, even from dry skin
- Extremely low image-distortion
- Reinforced materials
- Wear resistance
- Attractively small size
- Ease of integration
- Ready-to-use
- Low cost through longer life and no maintenance requirements

Advantages SecuGen Sensors Over Semiconductor (Capacitive) Sensors

- Non-metal, non-silicon components make it less susceptible to corrosion when exposed to salts, oil and moisture from skin and environment
- Superior surface properties eliminate need for costly coating and processing procedures
- · Greater mechanical strength, wear-resistance and durability
- · Broader range of applicability, especially for use in extreme conditions and climates
- Immunity from electrostatic discharge
- Low cost through longer life and no maintenance requirements

Strengths of SecuGen Software and Algorithms

- Unique image processing algorithm extracts fingerprint minutiae very accurately
- High signal-to-noise ratio processing algorithm screens out false features
- Highly efficient matching algorithm
- Fast overall process of extraction, matching and verification
- Encryption function to protect user privacy
- Compatibility with existing desktop, laptop PCs interface computers
- Ease in developing applications for various purposes

Chapter 1. Overview

SecuGen's FDx SDK *Pro* is designed to provide low level access to SecuGen's fingerprint readers using SecuGen's next-generation algorithm module. Programming with SecuGen's FDx SDK *Pro* is simple and easy to program and gives the most development flexibility among all SecuGen SDKs.

1.1. Features

- Uses SecuGen's new and improved next-generation algorithms
- Supports three kinds of fingerprint minutiae formats (or templates):
 - SG400: SecuGen's proprietary fingerprint minutiae format
 - ANSI378: Finger Minutiae Format for Data Exchange (ANSI-INCITS 378-2004)
 - ISO19794-2: Biometric Data Interchange Formats--Finger Minutiae Data (ISO/IEC 19794-2:2005)
- Provides low-level APIs for image capture, feature extraction and matching
 - The following extraction and matching algorithms, which are incorporated in sgfpamx.dll in this SDK, support the ANSI-INCITS 378-2004 standard and have been tested and proven to be MINEX Compliant (http://fingerprint.nist.gov/MINEX/):
 - SecuGen ANSI INCITS 378 Template Generator v3.5 (feature extraction algorithm)
 - SecuGen ANSI INCITS 378 Template Matcher v3.5 (matching algorithm)
- Gives a high degree of flexibility to developers of all kinds of applications and is easy to use

1.2. System Requirements

SecuGen USB fingerprint readers capture a fingerprint image and digitize the image to an 8-bit gray-scale image at 500 DPI resolution. The host system then retrieves the image through its USB port for subsequent processing. All SecuGen USB fingerprint readers, except for those based on FDU01 sensors, are supported in this SDK.

Requires

- IBM-compatible PC 486 or later
- 1 USB port (1.1 or higher) for the SecuGen USB fingerprint reader
- 64 MB RAM
- 80 MB available hard disk space
- Windows 7 / Vista / XP / 2000 / 98 SE, Windows Server 2008 R2 / 2003
- Java SDK v1.6.0_30 or later
- Java JRE v1.6.0_30 or later

1.3. Development Environment

Requires: SecuGen FDx SDK Pro for Windows v3.54 or later

1.3.1. Install the FDx SDK Pro for Windows

FDx SDK Pro for Java is a Java Native Interface (JNI) wrapper for FDx SDK Pro for Windows. The JNISGFPLIB runtime library included in this SDK passes calls to the SGFPLIB runtime library included in FDx SDK Pro for Windows. Refer to the FDx SDK Pro for Windows Installation Manual for detailed installation instructions.

1.3.2. Install the Java 2 SDK v1.6.0_30

The Java SDK can be downloaded at www.oracle.com/technetwork/java. Refer to the Java documentation for detailed installation instructions.

After installing the Java SDK, verify that you have installed it correctly by launching a command prompt and running the following commands

- java -version
- javac -version

```
C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\javac -version
javac 1.6.0_30

C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\java -version
java version "1.6.0_30"
Java(TM) SE Runtime Environment (build 1.6.0_30-b12)
Java HotSpot(TM) Client UM (build 20.5-b03, mixed mode, sharing)

C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\_
```

1.3.3. Copy the FDx SDK Pro for Java directory to your target location

FDx SDK Pro for Java is distributed as a directory structure containing all required Jar files, the JNI library and various batch files that can be used to compile and run the included sample applications. As long as the Java SDK and FDx SDK Pro for Windows are correctly installed, the FDx SDK Pro for Java can be installed in any convenient location.

Chapter 2. Installation

2.1. Installation

Copy the FDx SDK Pro for Java distribution into a new directory on the development machine.

2.2. Included Files

Library Files

FDxSDKPRO.jar –FDx SDK Pro for Java jar file **jnifsgplib.dll** – SecuGen JNI library. Wrapper for sgfplib.dll **Absolutelayout.jar** – NetBeans 4.x Swing layout runtime

Sample Program Files

extract_samples.bat – Extracts sample source code
 build_samples.bat – Builds sample applications
 run_JSGD.bat – Runs the JSGD sample application
 run_JSGFPLibTest.bat – Runs the JFPLibTest sample application
 run_JSGMultiDeviceTest.bat – Runs the JSGMultiDeviceTest sample application

Sample Signed Applet Files

applet/ – Directory containing signed applet demo
 genkey.bat – Generates certificate & key pair
 buildsignedapplet.bat – Builds signed jar file
 exportcert.bat – Exports certificate
 JSGDAppletDemo.html – Html file to load signed applet

Documentation

readme.txt – Latest release information for FDx SDK Pro for Java
 doc/ – Directory containing JavaDoc for FDx SDK Pro for Java
 FDx SDK Pro Programming Manual (Java).pdf – This document

2.3. Run-time Distribution

Please follow the distribution instructions for FDx SDK Pro for Windows. Additionally, copy the FDx SDK Pro for Java runtime files as follows:

Windows 7 32bit: Copy jnifplib\win32\jnisgfplib.dll to C:\windows\system32
Windows 7 64bit: Copy jnifplib\win32\jnisgfplib.dll to C:\Windows\SysWOW64
Copy jnifplib\x64\jnisgfplib.dll to C:\Windows\system32

Chapter 3. Programming in Java

SecuGen's FDx SDK *Pro* was designed for ease in programming and the most flexibility for developers. All SDK functions are integrated into the **JSGFPLib** class. The JSGFPLib class includes Device Initialization, Fingerprint Capture, and Minutiae Extraction and Matching functions.

3.1. Create JSGFPLib

To use JSGFPLib, call JSGFPLib(), which instantiates a JSGFPLib object.

```
JSGFPLib sgfplib = new JSGFPLib((UsbManager)getSystemService(Context.USB_SERVICE));
```

3.2. Initialize JSGFPLib

After the JSGFPLib object is created, it should be initialized using JSGFPLib,Init() or JSGFPLib.InitEx(). JSGFPLib.Init() takes the device name, loads the driver that corresponds to the device name and initializes the fingerprint algorithm module based on device information. JSGFPLib.InitEx() takes image width, image height and resolution as parameters. Call JSGFPLib.InitEx() when using the fingerprint algorithm module without a SecuGen reader.

The table below summarizes the correlation among device name (device type), loaded device driver and initial image size when the **Init(JSGFPLibDeviceName devName)** function is called.

Device Name, Device Driver and Image Size

| Device Name | Value | Device driver | Image Size (pixels) |
|-------------|-------|--------------------------|---------------------|
| SGDEV_FDP02 | 1 | Parallel device driver | 260*300 |
| SGDEV_FDU02 | 3 | USB FDU02 driver | 260*300 |
| SGDEV_FDU03 | 4 | USB FDU03 / SDU03 driver | 260*300 |
| SGDEV_FDU04 | 5 | USB FDU04 / SDU04 driver | 258*336 |

JSGFPLib.Init()

```
long error = sgfplib.Init( SGFDxDeviceName.SG_DEV_AUTO);
```

JSGFPLib.InitEx()

```
DWORD image_width = 260;
DWORD image_height = 300;
DOWRD image_dpi = 500;
long error = JSGFPLib.InitEx(image_width, image_height, image_dpi);
```

3.3. Terminate JSGFPLib

JSGFPLib.Close() must be called prior to terminating the application. It frees up the memory used by the JSGFPLib object.

```
Long error = JSGFPLib.Close();
```

3.4. Open the SecuGen Fingerprint Reader

To use a SecuGen fingerprint reader, call **JSGFPLib.OpenDevice()**. The parameter (**devId**) of **JSGFPLib.OpenDevice()** can have different meanings depending on which type of fingerprint reader is used.

If only one USB fingerprint reader is connected to the PC, **devId** will be 0. If multiple USB fingerprint readers are connected to one PC, **devId** can range from 0 to 9. The maximum number of SecuGen USB readers that can be connected to one PC is 10.

In general, if only one USB reader is connected to the PC, then USB_AUTO_DETECT is recommended.

```
long error = sqfplib.OpenDevice(USB AUTO DETECT);
```

3.5. Get Device Information

Device information can be retrieved by calling **JSGFPLib.GetDeviceInfo()**, which obtains required device information such as image height and width. The device information is contained in the **SGDeviceInfoParam** structure.

```
SGDeviceInfoParam device_info;
error = JSGFPLib.GetDeviceInfo(device_info);

if (error == SGFDxErrorCode.SGSGFDX_ERROR_NONE)
{
    m_ImgWidth = device_info.ImageWidth;
    m_ImgHeight = device_info.ImageHeight;
}
```

3.6. Capture a Fingerprint Image

After the reader is initialized, a fingerprint image can be captured. The SGFPM object provides three types of fingerprint image capture functions listed below. Captured fingerprints are 256 gray-level images, and image width and height can be retrieved by calling **SGFPM_GetDeviceInfo()**. The image buffer should be allocated by the calling application.

JSGFPLib.GetImage() captures an image without checking for the presence of a finger or checking image quality.

JSGFPLib.GetImageEx() captures fingerprint images continuously, checks the image quality against a specified quality value and ignores the image if it does not contain a fingerprint or if the quality of the fingerprint is not acceptable. If a quality image is captured within the given time (the second parameter), **JSGFPLib.GetImageEx()** ends its processing. If a window handle is provided by the application, the drivers will draw a fingerprint image in the provided window using the handle value.

• JSGFPLib.GetImage()

```
[Example]
byte[] buffer = new byte[m_ImageWidth*m_ImageHeight];
if (JSGFPLib.GetImage(buffer) == SGFDxErrorCode.SGSGFDX_ERROR_NONE) // Get image data
from device
{
    // Display image
    // Process image
}
```

JSGFPLib.GetImageEx()

```
[Example]
byte[] buffer = new byte[m_ImageWidth*m_ImageHeight];
long timeout = 10000;
long quality = 80;
if(JSGFPLib.GetImageEx(buffer, timeout, null, quality) ==
SGFDxErrorCode.SGFDX_ERROR_NONE)
{
    // Display image
}
```

3.7. Get Image Quality

To determine the fingerprint image quality, use GetImageQuality().

JSGFPLib.GetImageQuality()

```
Int[] img_qlty;
JSGFPLib.GetImageQuality(ImageWidth, m_ImageHeight, fp_image, mg_qlty);
if (img_qlty[0] < 80)
    // Capture again</pre>
```

3.8. Use Smart Capture™ or Control Brightness Manually

Depending on the fingerprint reader used, environmental factors and the specifications of the host system, the brightness of a fingerprint image may vary. The SecuGen device drivers use a technology called Smart Capture™ to dynamically adjust brightness to ensure the best image quality. Smart Capture is enabled by default.

To manually control the quality of a captured image, the image brightness should be adjusted by changing the brightness setting of the reader using **JSGFPLib.SetBrightness()**. This function is ignored if Smart Capture is enabled.

• JSGFPLib. SetBrightness()

JSGFPLib.SetBrightness(70); // Set from 0 to 100.

3.9. Create a Template

To register or verify a fingerprint, a fingerprint image is first captured, and then feature data (minutiae) is extracted from the image into a **template**. Minutiae are the unique core points near the center of every fingerprint, such as ridges, ridge endings, bifurcations, valleys and whorls.

Use JSGFPLib.CreateTemplate() to extract minutiae from a fingerprint image to form a template. The buffer should be assigned by the application. To get the buffer size of the minutiae, call JSGFPLib.GetMaxTemplateSize(). It will return the maximum buffer size for data in one template. The actual template size can be obtained by calling JSGFPLib.GetTemplateSize() after the template is created. The JSGFPLib.CreateTemplate() API creates only one set of data from an image.

Note: Templates having the ANSI378 or ISO19794-2 format may be merged.

• JSGFPLib.CreateTemplate()

```
// Get a fingerprint image
err = JSGFPLib.GetImage(m_ImgBuf);

// Create template from captured image
err = JSGFPLib.GetMaxTemplateSize(maxTemplateSize);
byte[] minBuffer = new byte[maxTemplateSize[0]];

// Set information about template
SGFingerInfo finger_info;
finger_info.FingerNumber = SGFingerPosition.SG_FINGPOS_LI;
finger_info.ImageQuality = qlty[0];
finger_info.ImpressionType = SG_IMPTYPE_LP;
finger_info.ViewNumber = 1;

err = JSGFPLib.CreateTemplate(finger_info, m_ImgBuf, minBuffer);
```

3.10. Match Templates

Templates are matched during both registration and verification processes. During registration, it is recommended to capture at least two image samples per fingerprint for a higher degree of accuracy. The minutiae data from each image sample can then be compared against each other (i.e. matched) to confirm the quality of the registered fingerprints. This comparison is analogous to a password confirmation routine that is commonly required for entering a new password.

During verification, newly input minutiae data is compared against registered minutiae data. Similar to the registration process, verification requires the capture of a fingerprint image followed by extraction of the minutiae data from the captured image into a template.

To match templates, FDx SDK *Pro* provides four kinds of matching functions. Each function requires two sets of template data for matching.

JSGFPLib.MatchTemplate():This function matches templates having the same format as the default format. When calling this function, each template should include only one sample (or view) per template. The default format is SG400 (SecuGen proprietary format) but can be changed by calling JSGFPLib.SetTemplateFormat().

JSGFPLib.MatchTemplateEx(): This function can match templates having different template formats. This function can also specify the template format for each template and can match templates that have multiple views per template.

JSGFPLib.MatchAnsiTemplate(): This function is the same as **JSGFPLib.MatchTemplateEx()** except that it supports only ANSI378 templates.

JSGFPLib.MatchIsoTemplate(): This fucntion is the same as **JSGFPLib.MatchTemplateEx()** except that it supports only ISO19794-2 templates.

| Function | Template Format | Can match templates with different formats? |
|-------------------------|---------------------------|---|
| SGFPM_MatchTemplate | SG400 (System default) | No |
| SGFPM_MatchTemplateEx | Specified template format | Yes |
| SGFPM_MatchAnsiTemplate | ANSI378 | No |
| SGFPM_MatchIsoTemplate | ISO19794-2 | No |

JSGFPLib.MatchTemplate()

JSGFPLib.MatchTemplateEx()

```
byte[]RegTemplate1= new byte[maxTemplateSize[0]];
byte[]RegTemplate2= new byte[maxTemplateSize[0]];
// Make SG400 template
err = JSGFPLib.SetTemplateFormat(SGFDxTemplateFormat.TEMPLATE FORMAT SG400);
err = JSGFPLib.GetImage(m ImgBuf, 5000, NULL, qlty);
err = JSGFPLib.CreateTemplate(null, m_ImgBuf, m_RegTemplate1);
// Make ANSI378 template
err = JSGFPLib.SetTemplateFormat(TEMPLATE FORMAT ANSI378);
err = JSGFPLib.GetImage(m ImgBuf);
err = JSGFPLib.CreateTemplate(null, m ImgBuf, m RegTemplate2);
boolean[] matched = new boolean[1];
err = JSGFPLib.MatchTemplateEx(RegTemplate1,
                         SGFDxTemplateFormat TEMPLATE FORMAT SG400,
                                         // Must be 0 if template format is SG400
                         RegTemplate2,
                         SGFDxTemplateFormat TEMPLATE FORMAT ANSI378,
                                       // Currently only one sample
                         Ο,
                         sl,
                         &matched);
```

• JSGFPLib.MatchAnsiTemplate()

```
Long err err;
boolean[] matched = new boolean[1];
matched[0] = false;
SGANSITemplateInfo sample info = new SGANSITemplateInfo();
err = JSGFPLib.GetAnsiTemplateInfo(m EnrollTemplate, sample info);
boolean finger found = false;
for (int i = 0; i < sample info.TotalSamples; i++)</pre>
  if(sample_info.SampleInfo[i].FingerNumber == finger_pos) // Try match for same finger
    finger found = true;
    err = JSGFPLib.MatchAnsiTemplate(m EnrollTemplate,
                                i.
                                m FetBufM,
                                Ο,
                                SGFDxSecurityLevel.SL NORMAL
                               matched);
    if (matched)
      break;
  }
```

• JSGFPLib.MatchlsoTemplate()

```
long err;
boolean[] matched = new boolean[1];
matched[0] = false;
// ISO19794-2
SGISOTemplateInfo sample_info = new SGISOTemplateInfo();
err = JSGFPLib.GetIsoTemplateInfo(m StoredTemplate, sample info);
int found_finger = -1;
for (int \bar{i} = 0; i < sample_info.TotalSamples; <math>i++)
      // ISO19794-2
     err = JSGFPLib.MatchIsoTemplate(m_StoredTemplate,
                               m_FetBufM,
                               0,
                               SGFDxSecurityLevel.SL NORMAL,
                               matched);
      if (matched)
         found finger = sample info.SampleInfo[i].FingerNumber;
         break;
```

3.11. Register a Fingerprint

To register a fingerprint, a fingerprint image is first captured, and then feature data (minutiae) is extracted from the image to create a template. It is recommended to capture at least two image samples per fingerprint for a higher degree of accuracy. The minutiae data from each image can then be compared against each other (i.e. matched) to confirm the quality of the registered fingerprints. This comparison of two fingerprints is analogous to a password confirmation routine that is commonly required for entering a new password.

Fingerprint Registration Process

- 1. Capture fingerprint images: JSGFPLib.GetImage()
- 2. Extract minutiae from each captured fingerprint image to create a template: JSGFPLib.CreateTemplate()
- 3. Match each template to determine if they are acceptable for registration: JSGFPLib.MatchTemplate()
- 4. Save templates to file or database to complete registration

Example: Using two fingerprint images to register one fingerprint

```
err = JSGFPLib.GetMaxTemplateSize(m_MaxTemplateSize);
byte[] m_RegTemplate1 = new byte [MaxTemplateSize[0]];
BYTE* m_RegTemplate2 = new byte [MaxTemplateSize[0]];

// Get first fingerprint image and create template from the image
err = JSGFPLib.GetImage(m_ImgBuf);
err = JSGFPLib.CreateTemplate(null, m_ImgBuf, m_RegTemplate1);

// Get second fingerprint image and create template from the image
err = JSGFPLib.GetImage(m_ImgBuf);
err = JSGFPLib.CreateTemplate(null, m_ImgBuf, m_RegTemplate2);

DWORD sl = SGFDxSecurityLevel.SL_NORMAL; // Set security level as NORMAL
Boolean[] matched = new Boolean[1];
err = JSGFPLib.MatchTemplate(m_RegTemplate1, m_RegTemplate2, sl, matched);

if (matched)
   // Save these templates somewhere
```

3.12. Verify a Fingerprint

The process of verifying a fingerprint involves matching newly input minutiae data against registered minutiae data. Similar to the registration process, verification requires the capture of a fingerprint image followed by extraction of the minutiae data from the captured image and the creation of a template.

Fingerprint Verification Process

- 1. Capture fingerprint image: JSGFPLib.GetImage()
- 2. Extract minutiae data from captured image to create a template: JSGFPLib.CreateTemplate()
- 3. Match newly made template against registered template(s): JSGFPLib.MatchTemplate()
 - Adjust the security level according to the type of application. For example, if fingerprint-only authentication is used, set the security level higher than **SL_NORMAL** to reduce the chances for false acceptance (FAR).

Example: Input minutiae data is matched against two registered minutiae data samples

```
DWORD err;
err = JSGFPLib.GetMaxTemplateSize(m hFPM, &m MaxTemplateSize);
byte[] m VrfTemplate1= new byte[m MaxTemplateSize];
// Get first fingerprint image and create template from the image
err = JSGFPLib.GetImage(m ImgBuf);
err = JSGFPLib.CreateTemplate(null, m ImgBuf, m VrfTemplate1);
{\tt DWORD \ sl = SGFDxSecurityLevel.SL\_NORMAL; // \ Set \ security \ level \ depending \ on \ applications.}
boolean[] matched1 = new boolean[1];
boolean[] matched2 = new boolean[1];
err = JSGFPLib.MatchTemplate(m_RegTemplate1, m_ VrfTemplate1, sl, matched1);
err = JSGFPLib.MatchTemplate(m RegTemplate2, m VrfTemplate1, s1, matched2);
if (err == SGFDxErrorCode.SGSGFDX ERROR NONE)
   if (matched1 && matched2)
       // Matched
   else
        // Not matched
```

3.13. Get Matching Score

For improved quality control during the registration or verification process, a matching score can be used instead of a security level setting to determine the success of the operation. The matching score can be specified so that only sets of minutiae data that exceed the score will be accepted; data below the score will be rejected. The matching score may have a value from 0 to 199. **JSGFPLib.GetMatchingScore()** requires two sets of minutiae data of the same template format. **JSGFPLib.GetMatchingScoreEx()** requires two sets of minutiae data, but they can take different template formats.

```
int[] score = new int[1];
if (JSGFPLib.GetMatchingScore(m_RegTemplate1, m_RegTemplate2, score) ==
SGFDXErrorCode.SGFDX_ERROR_NONE)
{
   if (score > 100)
        // Enroll these fingerprints to database
   else
        // Try again
}
```

To understand how the matching scores correlate with typical security levels, refer to the chart below.

Security Level vs. Corresponding Matching Score

| Constant | Value | Corresponding Matching Score |
|-----------------|-------|------------------------------|
| SL_NONE | 0 | 0 |
| SL_LOWEST | 1 | 30 |
| SL_LOWER | 2 | 50 |
| SL_LOW | 3 | 60 |
| SL_BELOW_NORMAL | 4 | 70 |
| SL_NORMAL | 5 | 80 |
| SL_ABOVE_NORMAL | 6 | 90 |
| SL_HIGH | 7 | 100 |
| SL_HIGHER | 8 | 120 |
| SL_HIGHEST | 9 | 140 |

Note: Starting from version 3.53 of FDx SDK *Pro* for Windows, the Corresponding Matching Scores have changed.

3.14. Template Format

The FDx SDK Pro supports three types of fingerprint template formats:

- SecuGen's proprietary template format ("SG400")
- ANSI INCITS 378-2004 "Finger Minutiae Format for Data Exchange" ("ANSI378")
- ISO/IEC 19794-2:2005 "Biometric Data Interchange Formats-- Finger Minutiae Data" ("ISO19794-2")

As default, JSGFPLib creates SecuGen proprietary templates (TEMPLATE_FORMAT_SG400). To change the template format, use **JSGFPLib.SetTemplateFormat()**.

SG400 templates are encrypted for high security and have a size of 400 bytes. ANSI378 templates are not encrypted, and their size is variable depending on how many fingers are registered in the structure and how many minutiae points are found.

For more information about the ANSI378 template, refer to the standard document titled "Information technology - Finger Minutiae Format for Data Interchange," document number ANSI INCITS 378-2004, available at the ANSI website http://webstore.ansi.org.

For more information about the ISO19794-2 template, refer to the standard document titled "Information technology -- Biometric Data Interchange Formats -- Part 2: Finger Minutiae Data," document number ISO/IEC 19794-2:2005, available at the ISO website under Subcommittee JTC 1 / SC 37 (Biometrics): <a href="http://www.iso.org/iso/iso-catalogue/catalogue-tc/catalogue-

Once the template format is set, it will affect the execution of the JSGFPLib module.

The following APIs are affected by JSGFPLib.SetTemplateFormat():

- JSGFPLib.GetMaxTemplateSize()
- JSGFPLib.CreateTemplate()
- JSGFPLib.GetTemplateSize()
- JSGFPLib.MatchTemplate()
- JSGFPLib.GetMatchingScore()

The following APIs work only when the template format is **TEMPLATE_FORMAT_ANSI378**:

- JSGFPLib.GetTemplateSizeAfterMerge()
- JSGFPLib.MergeAnsiTemplate()
- JSGFPLib.GetAnsiTemplateInfo()
- JSGFPLib.MatchAnsiTemplate()
- JSGFPLib.GetAnsiMatchingScore()

The following APIs work only when the template format is **TEMPLATE_FORMAT_ISO19794**:

- JSGFPLib.GetIsoTemplateSizeAfterMerge()
- JSGFPLib.MergelsoTemplate()
- JSGFPLib.GetIsoTemplateInfo()
- JSGFPLib.MatchlsoTemplate()
- JSGFPLib.GetIsoMatchingScore()

The following APIs work with any template format:

- JSGFPLib.MatchTemplateEx()
- JSGFPLib.GetMatchingScoreEx()

Set template format to ANSI378

```
JSGFPLib.SetTemplateFormat(SGFDxTemplateFormat TEMPLATE FORMAT ANSI378);
```

Set template format to SG400

```
JSGFPLib.SetTemplateFormat(SGFDxTemplateFormat TEMPLATE FORMAT SG400);
```

Set template format to ISO19794

```
JSGFPLib.SetTemplateFormat(SGFDxTemplateFormat TEMPLATE FORMAT ISO19794);
```

3.15. Manipulate ANSI378 Templates

The ANSI378 template format allows multiple fingers and multiple views per finger to be stored in one template. To support this feature, FDx SDK *Pro* provides the following special APIs:

- JSGFPLib.GetTemplateSizeAfterMerge()
- JSGFPLib.MergeAnsiTemplate()
- JSGFPLib.GetAnsiTemplateInfo()
- JSGFPLib.MatchAnsiTemplate()
- JSGFPLib.GetAnsiMatchingScore()

Merge two ANSI378 templates

After creating an ANSI378 template from a fingerprint image, additional ANSI378 templates can be merged into one template. To do this, use **JSGFPLib.MergeAnsiTemplate()**, which takes two ANSI378 templates and merges them into one template. The merged template size will be less than the sum of the sizes of all input templates. Call **JSGFPLib.GetTemplateSizeAfterMerge()** to obtain the exact template size of the merged template before using **JSGFPLib.MergeAnsiTemplate()**.

```
err = JSGFPLib.GetMaxTemplateSize(m_hFPM, &m_MaxTemplateSize);
byte[] m_Template1 = new byte[m_MaxTemplateSize];
byte[] m_Template2 = new byte[m_MaxTemplateSize];

// Get first fingerprint image and create template from the image
err = JSGFPLib.GetImage(m_ImgBuf);
err = JSGFPLib.CreateTemplate(null, m_ImgBuf, m_Template1);

// Get second fingerprint image and create template from the image
err = JSGFPLib.GetImage(m_ImgBuf);
err = JSGFPLib.GetImage(m_ImgBuf);
err = JSGFPLib.CreateTemplate(null, m_ImgBuf, m_Template2);

// Save template after merging two templates - m_Template1, m_Template2
int[] buf_size = new int[1];
err = JSGFPLib.GetTemplateSizeAfterMerge(m_Template1, m_Template2, buf_size);
byte[] merged_template = new byte[buf_size[0]];
err = JSGFPLib.MergeAnsiTemplate(m_Template1, m_Template2, merged_template);
```

• Get information about an ANSI378 template

The ANSI378 template format allows multiple fingers and multiple views per finger to be stored in one template. To match one sample (view) against a sample in other template, information about the template may be needed. To get sample information about a template, use **JSGFPLib.GetAnsiTemplateInfo()**.

```
long err;
int matched samples = 0;
SGANSITemplateInfo sample_info1 = new SGANSITemplateInfo;
SGANSITemplateInfo sample info2 = new SGANSITemplateInfo;
err = JSGFPLib.GetAnsiTemplateInfo(g EnrollData, sample info1);
err = JSGFPLib.GetAnsiTemplateInfo(g VrfData, sample info2);
for (int i = 0; i < sample infol.TotalSamples; i++)</pre>
   for (int j = 0; j < sample info2.TotalSamples; j++)</pre>
     boolean[] matched = new Boolean[1];
      err = JSGFPLib.MatchAnsiTemplate(g EnrollData, i, g VrfData, 0, sl, matched);
     if (matched[0])
            matched samples++;
if (err == SGFDxErrorCode.SGFDX ERROR NONE)
   if (matched samples > 0)
     System.out.writeln("Found " + matched samples + "matched samples");
   else
      System.out.writeln("Cannot find matching sample");
else
   System.out.writeln("MatchTemplate() failed. Error = " + err);
```

3.16. Manipulate ISO19794-2 Templates

The ISO19794-2 template format allows multiple fingers and multiple views per finger to be stored in one template. To support this feature, FDx SDK *Pro* provides the following special APIs:

- JSGFPLib.GetIsoTemplateSizeAfterMerge()
- JSGFPLib.MergelsoTemplate()
- JSGFPLib.GetIsoTemplateInfo()
- JSGFPLib.MatchlsoTemplate()
- JSGFPLib.GetIsoMatchingScore()

Merge two ISO19794-2 templates

After creating an ISO19794-2 template from a fingerprint image, additional ISO19794-2 templates can be merged into one template. To do this, use **JSGFPLib.MergelsoTemplate()**, which takes two ISO19794-2 templates and merges them into one template. The merged template size will be less than the sum of the sizes of all input templates. Call **JSGFPLib.GetIsoTemplateSizeAfterMerge()** to obtain the exact template size of the merged template before using **JSGFPLib.MergelsoTemplate()**.

```
err = JSGFPLib.GetMaxTemplateSize(m_hFPM, &m_MaxTemplateSize);
byte[] m_Template1 = new byte[m_MaxTemplateSize];
byte[] m_Template2 = new byte[m_MaxTemplateSize];

// Get first fingerprint image and create template from the image
err = JSGFPLib.GetImage(m_ImgBuf);
err = JSGFPLib.CreateTemplate(null, m_ImgBuf, m_Template1);

// Get second fingerprint image and create template from the image
err = JSGFPLib.GetImage(m_ImgBuf);
err = JSGFPLib.GetImage(m_ImgBuf);
err = JSGFPLib.CreateTemplate(null, m_ImgBuf, m_Template2);

// Save template after merging two templates - m_Template1, m_Template2
int[] buf_size = new int[1];
err = JSGFPLib.GetTemplateSizeAfterMerge(m_Template1, m_Template2, buf_size);
byte[] merged_template = new byte[buf_size[0]];
err = JSGFPLib.MergeIsoTemplate(m_Template1, m_Template2, merged_template);
```

Get information about an ISO19794-2 template

The ISO19794-2 template format allows multiple fingers and multiple views per finger to be stored in one template. To match one sample (view) against a sample in other template, information about the template may be needed. To get sample information about a template, use **JSGFPLib.GetIsoTemplateInfo()**.

```
DWORD err;
BOOL matched = FALSE;

// ISO19794-2
SGISOTemplateInfo sample_info = {0};
err = JSGFPLib.GetIsoTemplateInfo(m_hFPM, m_StoredTemplate, &sample_info);

matched = FALSE;
int found_finger = -1;
for (int i = 0; i < sample_info.TotalSamples; i++)
{
    // ISO19794-2
    err = JSGFPLib.MatchIsoTemplate(m_hFPM, m_StoredTemplate, i, m_FetBufM, 0, SL_NORMAL, &matched);</pre>
```

3.17. Get Version Information of MINEX Compliant Algorithms

To obtain version information about the MINEX Compliant algorithms, use **JSGFPLib.GetMinexVersion()**. Currently, the extractor version number is 0x000A0035, and the matcher version number is 0x000A8035.

```
Long[] extractor = new long[1];
Long[]matcher = new long[1];
err = JSGFPLib.GetMinexVersion(extractor, matcher);
System.out.println("(Extractor:" + extractor [0] + "Matcher:" + matcher);
```

Chapter 4. JSGFPLib Function Reference

4.1. JSGFPLib Creation and Termination

public JSGFPLib()

Instantiates the JSGFPLib object.

Return values

SGFDX_ERROR_NONE = No error SGFDX_ERROR_CREATION_FAILED = Failed to instantiate object

public long Open()

Opens the SecuGen native library.

Return values

SGFDX_ERROR_NONE = No error

public long Close()

Closes the SecuGen native library.

Return values

SGFDX_ERROR_NONE = No error

4.2. Initialization

public long Init(long devName)

Initializes JSGFPLib with device name information. The JSGFPLib object loads appropriate drivers with device name (devName) and initializes fingerprint algorithm module based on the device information.

Parameters

devName

Specifies the device name

SG_DEV_FDU03: device name for USB FDU03 and SDU03-based readers SG_DEV_FDU04: device name for USB FDU04 and SDU04-based readers

SG_DEV_AUTO: automatically determines the device name

Return values

SGFDX_ERROR_NONE = No error

SGFDX_ERROR_CREATION_FAILED = Failed to create JSGFPLib object

SGFDX_ERROR_INVALID_PARAM = Invalid parameter used

SGFDX_ERROR_DRVLOAD_FAILED = Failed to load driver

public long InitEx(long width, long height, long dpi)

Initializes JSGFPLib with image information. Use when running fingerprint algorithm module without a SecuGen reader.

Parameters

width

Image width in pixels

height

Image height in pixels

dpi

Image resolution in DPI

• Return values

SGFDX_ERROR_NONE = No error

SGFDX_ERROR_CREATION_FAILED = Failed to create JSGFPLib object

SGFDX_ERROR_INVALID_PARAM = Invalid parameter used

SGFDX_ERROR_DLLLOAD_FAILED = Failed to load algorithm DLL

public long SetTemplateFormat(short format)

Sets template format. Default format is SecuGen proprietary format (TEMPLATE_FORMAT_SG400).

Parameters

format

Specifies template format

TEMPLATE_FORMAT_ANSI378: ANSI INCITS 378-2004 format TEMPLATE_FORMAT_ISO19794: ISO/IEC 19794-2:2005 format TEMPLATE_FORMAT_SG400: SecuGen proprietary format

Return values

SGFDX_ERROR_NONE = No error SGFDX_ERROR_CREATION_FAILED = Failed to create JSGFPLib object SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template format

4.3. Device and Capture Functions

public long EnumerateDevice(int[] ndevs, SGDeviceList[] devList)

Enumerates currently attached reader to the system.

Parameters

ndevs

The number of attached USB readers

devList

Buffer that contains device ID and device serial number.

Return values

SGFDX_ERROR_NONE = No error

SGFDX_ERROR_FUNCTION_FAILED = General function fail error

SGFDX_ERROR_INVALID_PARAM = Invalid parameter used

public long OpenDevice(long devId)

Initializes the fingerprint reader.

Parameters

devld

Specifies the device ID for USB readers. The value can be from 0 to 9. The maximum number of supported readers attached at the same time is 10.

Return values

SGFDX_ERROR_NONE = No error

SGFDX_ERROR_INVALID_PARAM = Invalid parameter used

SGFDX_ERROR_SYSLOAD_FAILED = Failed to loading system files

SGFDX_ERROR_INITIALIZE_FAILED = Failed to initialize chip

SGFDX_ERROR_DEVICE_NOT_FOUND = Device not found

public long CloseDevice()

Closes the opened device. OpenDevice() must be called before this function is used.

- Parameters
- Return values

SGFDX_ERROR_NONE = No error

public long GetDeviceInfo(SGDeviceInfoParam Info)

Gets device information from the driver (before device initialization)

Parameters

info

An instantiated SGDeviceInfoParam object.

Return values

SGFDX_ERROR_NONE = No error

public long SetBrightness(int brightness)

Controls brightness of image sensor. This function will only work if Smart Capture is disabled.

Parameters

brightness

Must be set to a value from 0 to 100

Return values

```
SGFDX_ERROR_NONE = No error
SGFDX_ERROR_INVALID_PARAM = Invalid parameter used
```

public long SetLedOn(boolean on)

Turns optic unit LED on/off.

Parameters

on

True: Turns on LED False: Turns off LED

Return values

SGFDX_ERROR_NONE = No error

public long GetImage(byte[] buffer)

Captures a 256 gray-level fingerprint image from the reader. The image size can be retrieved by calling **GetDeviceInfo()**. **JSGFPLib.GetImage()** does not check for image quality. To get image quality of a captured image, use **GetImageQuality()**.

Parameters

buffer

A byte array containing a fingerprint image. The image size can be retrieved by calling **GetDeviceInfo()**.

Return values

```
SGFDX_ERROR_NONE = No error
SGFDX_ERROR_WRONG_IMAGE = Capture image is not a real fingerprint image
SGFDX_ERROR_INVALID_PARAM = Invalid parameter used
SGFDX_ERROR_LINE_DROPPED = Image data lost
```

public long GetImageQuality(long width, long height, byte[] imgBuf, int[] quality)

Gets the quality of a captured (scanned) image. The value is determined by two factors. One is the ratio of the fingerprint image area to the whole scanned area, and the other is the ridge quality of the fingerprint image area. A quality value of 50 or higher is recommended for registration. A quality value of 40 or higher is recommended for verification.

Parameters

width

Image width in pixels

height

Image height in pixels

imgBuf

Fingerprint image data

quality

The single element array to contain image quality

• Return values

SGFDX_ERROR_NONE = No error

SGFDX_ERROR_INVALID_PARAM = Invalid parameter used

Public long GetImageEx(byte[] buffer, long timeout, long dispWnd , long quality)

Captures fingerprint images from the reader until the quality of the image is greater than the value of the quality parameter. The captured fingerprint is a 256 gray-level image; image size can be retrieved by calling the **SGFPM_GetDeviceInfo()** function. A quality value of 50 or higher is recommended for registration. A quality value of 40 or higher is recommended for verification.

Note: The returned quality value is different from the value used in **SGFPM_GetImage()**. The quality value in **GetImageEx()** represents only the ratio of the fingerprint image area to the whole scanned area.

Parameters

buffer

A byte array containing a fingerprint image. The image size can be retrieved by calling GetDeviceInfo().

timeout

The timeout value (in milliseconds) used to specify the amount of time the function will wait for a valid fingerprint to be input on the fingerprint reader

dispWnd

null. Not used in Java

quality

The minimum quality value of an image, used to determine whether to accept the captured image

Return values

SGFDX_ERROR_NONE = No error

SGFDX_ERROR_INVALID_PARAM = Invalid parameter used

SGFDX_ERROR_LINE_DROPPED = Image data lost

SGFDX_ERROR_TIME_OUT = No valid fingerprint captured in the given time

4.4. Extraction Functions

public long GetMaxTemplateSize(int[] size)

Gets the maximum size of a fingerprint template (view or sample). Use this function before using **CreateTemplate()** to obtain an appropriate buffer size. If the template format is SG400, it returns fixed length size 400.

Note: The returned template size means the maximum size of one view or sample.

Parameters

size

The single element array to contain template size

Return values

SGFDX_ERROR_NONE = No error

public long CreateTemplate(SGFingerInfo fpInfo, byte[] rawImage, byte[] minTemplate)

Extracts minutiae from a fingerprint image to form a template having the default format.

Parameters

fpInfo

Fingerprint information stored in a template. For ANSI378 templates, this information can be retrieved from the template using **GetAnsiTemplateInfo()**. For **ISO19794** templates, this information can be retrieved from the template using **GetIsoTemplateInfo()**. For **SG400** templates, this information cannot be seen in the template.

rawlmg

A byte array containing 256 Gray-level fingerprint image data

minTemplate

A byte array containing minutiae data extracted from a fingerprint image

Return values

```
SGFDX_ERROR_NONE = No error
SGFDX_ERROR_FEAT_NUMBER = Inadequate number of minutia
SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template type
SGFDX_ERROR_INVALID_TEMPLATE1 = 103 = Error while decoding template 1
SGFDX_ERROR_INVALID_TEMPLATE2 = 104 = Error while decoding template 2
```

public long GetTemplateSize(byte[] minTemplate, int[] size)

Gets template size. If the template format is SG400, it will return 400. If the template format is ANSI378 or ISO19794, template size may vary.

Parameters

minTemplate

A byte array containing minutiae data extracted from a fingerprint image

size

A byte array that will contain template size

Return values

SGFDX_ERROR_NONE = No error

4.5. Matching Functions

public long MatchTemplate(byte[] minTemplate1, byte[] minTemplate2, long secuLevel, Boolean[] matched)

Compares two sets of minutiae data of the **same** template format. The template format should be the same as that set by **SetTemplateFormat()** and should include only one sample. To match templates that have more than one sample, use **MatchTemplateEx()** or **MatchAnsiTemplate()**.

It returns TRUE or FALSE as a matching result (**matched**). Security level (**secuLevel**) affects matching result. The security level may be adjusted according to the security policy required by the user or organization.

Parameters

minTemplate1

A byte array containing minutiae data extracted from a fingerprint image

minTempate2

A byte array containing minutiae data extracted from a fingerprint image

secuLevel

A security level as specified in "SGFDxSecurityLevel" by one the following nine security levels: SL_LOWEST, SL_LOWER, SL_LOW, SL_BELOW_NORMAL, SL_NORMAL, SL_ABOVE_NORMAL, SL_HIGHER and SL_HIGHEST. SL_NORMAL is recommended in usual case.

matched

A byte array that contains matching result. If passed templates are matching templates, **TRUE** is returned. If not, **FALSE** is returned.

Return values

SGFDX ERROR NONE = No error

SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template type

SGFDX_ERROR_INVALID_TEMPLATE1 = Error in minTemplate1

SGFDX_ERROR_INVALID_TEMPLATE2 = Error in minTemplate2

public long MatchTemplateEx(byte[] minTemplate1, short tempateType1, long sampleNum1, byte[] minTemplate2, short tempateType2, long sampleNum2, long secuLevel, boolean[] matched)

Compares two sets of minutiae data, which can be of different template formats (SG400 or ANSI378). It returns TRUE or FALSE as a matching result (**matched**). Security level (**secuLevel**) affects matching result. The security level may be adjusted according to the security policy required by the user or organization.

Parameters

minTemplate1

A byte array containing minutiae data extracted from a fingerprint image

templateType1

Specifies format of minTemplate1. Should be either TEMPLATE_FORMAT_SG400 or TEMPLATE_FORMAT_ANSI378.

sampleNum1

Position of a sample to be matched in minTemplate1. If templateType1 is TEMPLATE_FORMAT_ANSI378, it can have a value from 0 to (number of samples -1) in minTemplate1. If templateType1 is TEMPLATE_FORMAT_SG400, this value is ignored.

minTemplate2

A byte array containing minutiae data extracted from a fingerprint image

templateType2

Specifies format of minTemplate2. Should be either TEMPLATE_FORMAT_SG400 or TEMPLATE_FORMAT_ANSI378.

sampleNum2

Position of a sample to be matched in minTemplate2. If templateType2 is TEMPLATE_FORMAT_ANSI378, it can have a value from 0 to (number of samples -1) in minTemplate2. If templateType2 is

TEMPLATE_FORMAT_SG400, this value is ignored.

secuLevel

A security level as specified in "fplibnew.h" by one the following nine security levels: SL_LOWEST, SL_LOWER, SL_LOW, SL_BELOW_NORMAL, SL_NORMAL, SL_ABOVE_NORMAL, SL_HIGH, SL_HIGHEST. SL_NORMAL is recommended in usual case.

matched

TRUE: Same template FALSE: Not same template

Return values

SGFDX_ERROR_NONE = No error

SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template type

SGFDX_ERROR_INVALID_TEMPLATE1 = Error in minTemplate1

SGFDX_ERROR_INVALID_TEMPLATE2 = Error in minTemplate2

public long JSGFPLib.GetMatchingScore(byte[] minTemplate1, byte[] minTemplate2, int[] score)

Gets matching score of two sets of minutiae data of the **same** template format.

Parameters

minTemplate1

A pointer to the buffer containing minutiae data extracted from a fingerprint image

minTemplate2

A pointer to the buffer containing minutiae data extracted from a fingerprint image **score**

Matching score. Returned score has a value from 0 to 199.

· Returned values

SGFDX_ERROR_NONE = No error

SGFDX_ERROR_INVALID_TEMPLATE1 = Error in minTemplate1

SGFDX_ERROR_INVALID_TEMPLATE2 = Error in minTemplate2

public long GetMatchingScoreEx(byte[] minTemplate1, short tempateType1, long sampleNum1, byte[] minTemplate2, short tempateType2, long sampleNum2, int[] score);

Gets matching score of two sets of minutiae data, which can be of different template formats (SG400 or ANSI378).

Parameters

minTemplate1

A byte array containing minutiae data extracted from a fingerprint image

templateType1

Specifies format of minTemplate1. Should be either TEMPLATE_FORMAT_SG400 or TEMPLATE_FORMAT_ANSI378.

sampleNum1

Position of a sample to be matched in minTemplate1. If templateType1 is TEMPLATE_FORMAT_ANSI378, it can have a value from 0 to (number of samples -1) in minTemplate1. If templateType1 is TEMPLATE_FORMAT_SG400, this value is ignored.

minTemplate2

A byte array containing minutiae data extracted from a fingerprint image

templateType2

Specifies format of minTemplate2. Should be either TEMPLATE_FORMAT_SG400 or TEMPLATE_FORMAT_ANSI378.

sampleNum2

Position of a sample to be matched in minTemplate2. If templateType2 is TEMPLATE_FORMAT_ANSI378, it can have a value from 0 to (number of samples -1) in minTemplate2. If templateType2 is TEMPLATE_FORMAT_SG400, this value is ignored.

score

Matching score. Returned score has a value from 0 to 199.

Returned values

```
SGFDX_ERROR_NONE = No error
SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template type
SGFDX_ERROR_INVALID_TEMPLATE1 = Error in minTemplate1
SGFDX_ERROR_INVALID_TEMPLATE2 = Error in minTemplate2
```

4.6. Functions for ANSI378 Templates

public long GetTemplateSizeAfterMerge(byte[] ansiTemplate1,byte[] ansiTemplate2, int[] size)

Calculates template size if two templates – ansiTemplate1 and ansiTemplate2 – are merged. Use this function to determine exact buffer size before using **MergeAnsiTemplate()**.

Parameters

ansiTemplate1

A byte array containing minutiae data. A template can have more than one sample.

ansiTempate2

A byte array containing minutiae data. A template can have more than one sample.

size

Template size if two templates are merged

Return values

```
SGFDX_ERROR_NONE = No error
SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template type
SGFDX_ERROR_INVALID_TEMPLATE1 = Error in minTemplate1
SGFDX_ERROR_INVALID_TEMPLATE2 = Error in minTemplate2
```

public long MergeAnsiTemplate(byte[] ansiTemplate1,byte[] ansiTemplate2, byte[] outTemplate)

Merges two ANSI378 templates and returns a new merged template. The merged template (outTemplate) size will be less than sum of the sizes of the two input templates (size of ansiTemplate1 + size of ansiTemplate2). Call GetTemplateSizeAfterMerge() to determine the exact buffer size for outTemplate before calling MergeAnsiTemplate().

Parameters

ansiTemplate1

A byte array containing minutiae data. A template can have more than one sample.

asniTempate2

A byte array containing minutiae data. A template can have more than one sample.

outTempate

The byte array containing merged data. The buffer should be assigned by the application. To determine the exact buffer size, call **JSGFPLib.GetTemplateSizeAfterMerge()**.

Return values

```
SGFDX_ERROR_NONE = No error
SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template type
SGFDX_ERROR_INVALID_TEMPLATE1 = Error in minTemplate1
SGFDX_ERROR_INVALID_TEMPLATE2 = Error in minTemplate2
```

public long GetAnsiTemplateInfo(byte[] ansiTemplate, SGANSITemplateInfo templateInfo)

Gets information of an ANSI378 template. Call this function before **MatchAnsiTemplate()** to obtain information about a template.

Parameters

anisiTemplate

ANSI378 template

templateInfo

The object that contains template information. For more information see **SGANSITemplateInfo** structure.

Return values

SGFDX_ERROR_NONE = No error

SGFDX_ERROR_INVALID_PARAM = Invalid parameter used

SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template type

public long MatchAnsiTemplate(byte[] ansiTemplate1, long sampleNum1, byte[] ansiTemplate2, long sampleNum2, long secuLevel, Boolean[] matched)

Compares two sets of ANSI378 templates. It returns TRUE or FALSE as a matching result (**matched**). Security level (**secuLevel**) affects matching result. The security level may be adjusted according to the security policy required by the user or organization.

Parameters

ansiTemplate1

A byte array containing minutiae data. A template can have more than one sample.

sampleNum1

Position of sample to be matched in **ansiTemplate1**. It can be from 0 to (number of samples -1) in **ansiTemplate1**

ansiTempate2

A byte array containing minutiae data. A template can have more than one sample.

sampleNum2

Position of sample to be matched in ansiTemplate2. It can be from 0 to (number of samples -1) in ansiTemplate2

secuLevel

A security level as specified in **SGFDxSecurityLevel** by one the following nine security levels: SL_LOWEST, SL_LOWER, SL_LOW, SL_BELOW_NORMAL, SL_NORMAL, SL_ABOVE_NORMAL, SL_HIGHER and SL_HIGHEST. SL_NORMAL is recommended in usual case.

matched

TRUE: Same template

FALSE: Not same template

Return values

SGFDX_ERROR_NONE = No error

SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template type

SGFDX_ERROR_INVALID_TEMPLATE1 = Error in ansiTemplate1

SGFDX_ERROR_INVALID_TEMPLATE2 = Error in ansiTemplate2

public long GetAnsiMatchingScore(byte[] ansiTemplate1, long sampleNum1, byte[] ansiTemplate2, long sampleNum2, int[] score)

Gets matching score.

Parameters

ansiTemplate1

A byte array containing minutiae data. A template can have more than one sample.

sampleNum1

Position of sample to be matched in **ansiTemplate1**. It can be from 0 to (number of samples -1) in **ansiTemplate1**

ansiTempate2

A byte array containing minutiae data. A template can have more than one sample.

sampleNum2

Position of sample to be matched in **ansiTemplate2**. It can be from 0 to (number of samples -1) in **ansiTemplate2**

score

Matching score. Returned score has a value from 0 to 199.

Return values

SGFDX_ERROR_NONE = No error SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template type SGFDX_ERROR_INVALID_TEMPLATE1 = Error in ansiTemplate1 SGFDX_ERROR_INVALID_TEMPLATE2 = Error in ansiTemplate2

4.7. Functions for ISO19794-2 Templates

public long GetIsoTemplateSizeAfterMerge(byte[] isoTemplate1, byte[] isoTemplate2, int[] size)

Calculates template size if two templates – isoTemplate1 and isoTemplate2 – are merged. Use this function to determine exact buffer size before using **MergelsoTemplate()**.

Parameters

isoTemplate1

A byte array containing minutiae data. A template can have more than one sample.

isoTempate2

A byte array containing minutiae data. A template can have more than one sample.

size

Template size if two templates are merged

Return values

```
SGFDX_ERROR_NONE = No error

SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template type

SGFDX_ERROR_INVALID_TEMPLATE1 = Error in minTemplate1

SGFDX_ERROR_INVALID_TEMPLATE2 = Error in minTemplate2
```

public long MergelsoTemplate(byte[] isoTemplate1, byte[] isoTemplate2,byte[] outTemplate)

Merges two ISO19794-2 templates and returns a new merged template. The merged template (outTemplate) size will be less than sum of the sizes of the two input templates (size of isoTemplate1 + size of isoTemplate2). Call GetTlsoemplateSizeAfterMerge() to determine the exact buffer size for outTemplate before calling MergelsoTemplate().

Parameters

isoTemplate1

A byte array containing minutiae data. A template can have more than one sample.

isoTempate2

A byte array containing minutiae data. A template can have more than one sample.

outTempate

The byte array containing merged data. The buffer should be assigned by the application. To determine the exact buffer size, call **GetIsoTemplateSizeAfterMerge()**.

Return values

```
SGFDX_ERROR_NONE = No error
SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template type
SGFDX_ERROR_INVALID_TEMPLATE1 = Error in minTemplate1
SGFDX_ERROR_INVALID_TEMPLATE2 = Error in minTemplate2
```

public long GetIsoTemplateInfo(byte[] isoTemplate, SGISOTemplateInfo templateInfo)

Gets information of an ISO19794-2 template. Call this function before **MatchIsoTemplate()** to obtain information about a template.

Parameters

isoTemplate

ISO19794-2 template

templateInfo

The object that contains template information. For more information see **SGISOTemplateInfo** structure.

Return values

SGFDX_ERROR_NONE = No error

SGFDX_ERROR_INVALID_PARAM = Invalid parameter used

SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template type

public long MatchlsoTemplate(byte[] isoTemplate1, long sampleNum1, byte[] isoTemplate2, long sampleNum2, long secuLevel, boolean[] matched)

Compares two sets of ISO19794-2 templates. It returns TRUE or FALSE as a matching result (**matched**). Security level (**secuLevel**) affects matching result. The security level may be adjusted according to the security policy required by the user or organization.

Parameters

isoTemplate1

A byte array containing minutiae data. A template can have more than one sample.

sampleNum1

Position of sample to be matched in **isoTemplate1**. It can be from 0 to (number of samples -1) in **isoTemplate1**

isoTempate2

A byte array containing minutiae data. A template can have more than one sample.

sampleNum2

Position of sample to be matched in **isoTemplate2**. It can be from 0 to (number of samples -1) in **isoTemplate2**

secuLevel

A security level as specified in **SGFDxSecurityLevel** by one the following nine security levels: SL_LOWEST, SL_LOWER, SL_LOW, SL_BELOW_NORMAL, SL_NORMAL, SL_ABOVE_NORMAL, SL_HIGHER and SL_HIGHEST. SL_NORMAL is recommended in usual case.

matched

TRUE: Same template

FALSE: Not same template

Return values

SGFDX_ERROR_NONE = No error

SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template type

SGFDX_ERROR_INVALID_TEMPLATE1 = Error in isoTemplate1

SGFDX_ERROR_INVALID_TEMPLATE2 = Error in isoTemplate2

public long GetIsoMatchingScore(byte[] isoTemplate1, long sampleNum1, byte[] isoTemplate2, long sampleNum2, int[] score)

Gets matching score.

Parameters

isoTemplate1

A byte array containing minutiae data. A template can have more than one sample.

sampleNum1

Position of sample to be matched in **isoTemplate1**. It can be from 0 to (number of samples -1) in **isoTemplate1**

isoTempate2

A byte array containing minutiae data. A template can have more than one sample.

sampleNum2

Position of sample to be matched in **isoTemplate2**. It can be from 0 to (number of samples -1) in **isoTemplate2**

score

Matching score. Returned score has a value from 0 to 199.

Return values

```
SGFDX_ERROR_NONE = No error
SGFDX_ERROR_INVALID_TEMPLATE_TYPE = Wrong template type
SGFDX_ERROR_INVALID_TEMPLATE1 = Error in isoTemplate1
SGFDX_ERROR_INVALID_TEMPLATE2 = Error in isoTemplate2
```

4.8. Other

public long GetMinexVersion(long[] extractor, long[] matcher)

Gets version of MINEX Compliant algorithms used in this SDK.

Parameters

extractor

Version of MINEX Compliant extractor (template generator)

matcher

Version of MINEX Compliant matcher (template matcher)


Return values

SGFDX_ERROR_NONE = No error

Chapter 5. Class Reference

5.1. Java Documentation

Refer to the "doc" folder in this SDK release for complete JavaDoc class reference.

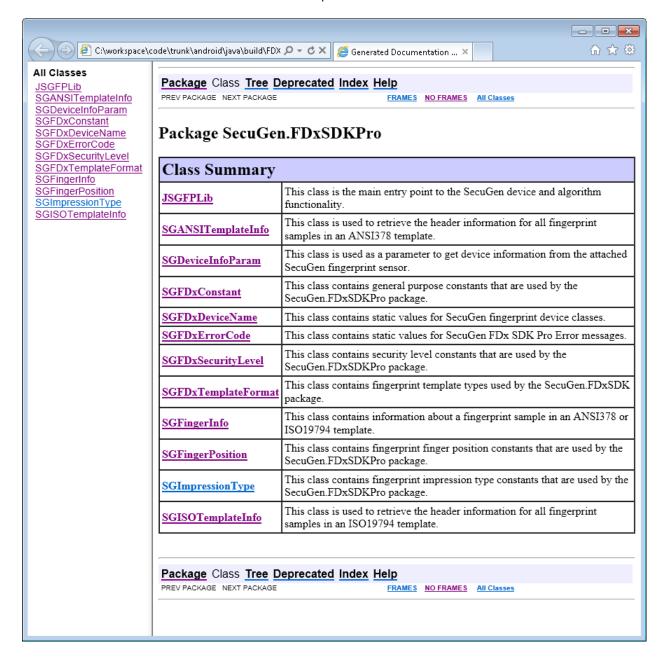

Chapter 6. Constants

6.1. SGFDxDeviceName

| Device Name | Value | Description |
|--|---------------------------|---|
| SG_DEV_UNKNOWN SG_DEV_FDU03 SG_DEV_FDU04 SG_DEV_AUTO | 0 0x04 0x05 0xFF | Not determined FDU03 or SDU03-based reader FDU04 or SDU04-based reader Auto Detect |

6.2. SGFDxSecurityLevel

| Security Level | Value | Description |
|-----------------|-------|--------------|
| SL_NONE | 0 | No Security |
| SL_LOWEST | 1 | Lowest |
| SL_LOWER | 2 | Lower |
| SL_LOW | 3 | Low |
| SL_BELOW_NORMAL | 4 | Below normal |
| SL_NORMAL | 5 | Normal |
| SL_ABOVE_NORMAL | 6 | Above normal |
| SL_HIGH | 7 | High |
| SL_HIGHER | 8 | Higher |
| SL_HIGHEST | 9 | Highest |

6.3. SGFDxTemplateFormat

| Template Format | Value | Description |
|--|----------------------------|--|
| TEMPLATE_FORMAT_ANSI378 TEMPLATE_FORMAT_SG400 TEMPLATE_FORMAT_ISO19794 | 0x0100 0x0200 0x0300 | ANSI INCITS 378-2004 format SecuGen proprietary format ISO/IEC 19794-2:2005 format |

6.4. SGImpressionType

| Security Level | Value | Description |
|----------------|-------|----------------------|
| SG_IMPTYPE_LP | 0x00 | Live-scan plain |
| SG_IMPTYPE_LR | 0x01 | Live-scan rolled |
| SG_IMPTYPE_NP | 0x02 | Non-live-scan plain |
| SG_IMPTYPE_NR | 0x03 | Non-live-scan rolled |

6.5. SGFingerPosition

| Security Level | Value | Description |
|----------------|-------|---------------------|
| SG_FINGPOS_UK | 0x00 | Unknown finger |
| SG_FINGPOS_RT | 0x01 | Right thumb |
| SG_FINGPOS_RI | 0x02 | Right index finger |
| SG_FINGPOS_RM | 0x03 | Right middle finger |
| SG_FINGPOS_RR | 0x04 | Right ring finger |
| SG_FINGPOS_RL | 0x05 | Right little finger |
| SG_FINGPOS_LT | 0x06 | Left thumb |
| SG_FINGPOS_LI | 0x07 | Left index finger |
| SG_FINGPOS_LM | 80x0 | Left middle finger |
| SG_FINGPOS_LR | 0x09 | Left ring finger |
| SG_FINGPOS_LL | 0x0A | Left little finger |

6.6. SGFDxErrorCode

| Error Code | Value | Description | |
|---------------------------------|-------|---------------------------------|--|
| General Error Codes | | | |
| SGFDX_ERROR_NONE | 0 | No error | |
| SGFDX_ERROR_CREATION_FAILED | 1 | JSGFPLib object creation failed | |
| SGFDX_ERROR_FUNCTION_FAILED | 2 | Function call failed | |
| SGFDX_ERROR_INVALID_PARAM | 3 | Invalid parameter used | |
| SGFDX_ERROR_NOT_USED | 4 | Not used function | |
| SGFDX_ERROR_DLLLOAD_FAILED | 5 | DLL loading failed | |
| SGFDX_ERROR_DLLLOAD_FAILED_DRV | 6 | Device driver loading failed | |
| SGFDX_ERROR_DLLLOAD_FAILED_ALGO | 7 | Algorithm DLL loading failed | |
| Device Driver Error Codes | | | |
| SGFDX_ERROR_SYSLOAD_FAILED | 51 | Cannot find driver sys file | |
| SGFDX_ERROR_INITIALIZE_FAILED | 52 | Chip initialization failed | |
| SGFDX_ERROR_LINE_DROPPED | 53 | Image data lost | |
| SGFDX_ERROR_TIME_OUT | 54 | GetImageEx() timeout | |
| SGFDX_ERROR_DEVICE_NOT_FOUND | 55 | Device not found | |
| SGFDX_ERROR_DRVLOAD_FAILED | 56 | Driver file load failed | |
| SGFDX_ERROR_WRONG_IMAGE | 57 | Wrong image | |
| SGFDX_ERROR_LACK_OF_BANDWIDTH | 58 | Lack of USB bandwidth | |
| SGFDX_ERROR_DEV_ALREADY_OPEN | 59 | Device is already opened | |
| SGFDX_ERROR_GETSN_FAILED | 60 | Serial number does not exist | |
| SGFDX_ERROR_UNSUPPORTED_DEV | 61 | Unsupported device | |

| Extract & Matching Error Codes | | |
|---|--|---|
| SGFDX_ERROR_FEAT_NUMBER SGFDX_ERROR_INVALID_TEMPLATE_TYPE SGFDX_ERROR_INVALID_TEMPLATE1 SGFDX_ERROR_INVALID_TEMPLATE2 SGFDX_ERROR_EXTRACT_FAIL SGFDX_ERROR_MATCH_FAIL | 101 102 103 104 105 106 | Inadequate number of minutiae Wrong template type Error in decoding template 1 Error in decoding template 2 Extraction failed Matching failed |

6.7. SGFDxConstant

DEV_SN_LEN

15 // Device serial number length.

Chapter 7. Sample Applications

After installing the hardware and software, it is recommended that all components be checked to verify that they are working properly. The included sample applications can be used for this purpose

7.1. JSGD - Hardware Test Program

The **SecuGen Device Diagnostic Utility** program (JSGD.class) is located in the FDxSDK.jar archive. This program scans fingerprint images and also performs fingerprint registration and verification. If this program fails to capture a fingerprint image, the system is not configured correctly.

- 1. Launch a command prompt.
- 2. cd <FDx_SDK_FOR_JAVA_INSTALL_DIR>
- Type run_JSGD.bat and then Enter. The following command can also be used:

```
java -cp ".;AbsoluteLayout.jar;FDxSDKPro.jar" SecuGen.FDxSDKPro.samples.JSGD
```

4. Click **Initialize** to initialize the reader. The result of initialization (success or failure) will be displayed in the status bar at the bottom left of the screen. If initialization fails, check the device connection and repeat the above steps.



If initialization is successful, place your finger on the fingerprint reader, and click **Capture**. The fingerprint image should be displayed if your reader is working properly.

7.2. JFPLib Test Program

The JSGFPLibTest program demonstrates all of the functionality included in FDx SDK Pro for Java.

- 1. Launch a command prompt.
- 2. cd <FDx SDK FOR JAVA INSTALL DIR>
- 3. Type *run_jsgfplibtest.bat* and then **Enter.**

Chapter 8. Signed Applet and Web Browser Integration

8.1. Install the FDx SDK Pro for Java Runtime Library

8.2. Generate a Digital Certificate and Key Pair (GENKEY.BAT)

keytool -genkey -alias demokey -keypass demopassword -keystore demokeystore -storepass demopassword

```
Administrator: Visual Studio 2008 Command Prompt
C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\FDx_SDK_Pro_for_Java_1_3>ge
nkey
C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\FDx_$DK_Pro_for_Java_1_3>ke
ytool —genkey —alias demokey —keypass demopassword —keystore demokeystore —store
pass demopassword
  nat is your first and last name?
[Unknown]: Dan Riley
  at is the name of your organizational unit?
[Unknown]: Engineering
What is the name of your organization?
[Unknown]: SecuGen
  nat is the name of your City or Locality?
[Unknown]: Santa Clara
What is the name of your State or Province?
[Unknown]: CA
What is the two-letter country code for this unit?
[Unknown]: US
  [Unknown]:
 s CN=Dan Riley, OU=Engineering, O=SecuGen, L=Santa Clara, ST=CA, C=US correct?
  [no]:
C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\FDx_SDK_Pro_for_Java_1_3>,
```

8.3. Build a Signed JAR File (BUILDSIGNEDAPPLET.BAT)

```
del AppletDemo.jar
jar xvf FDxSDKPro.jar
jar xvf AbsoluteLayout.jar
javac -deprecation applet\*.java
jar cvf AppletDemo.jar SecuGen\FDxSDKPro\jni\*.class applet\*.class org\netbeans\lib\awtextra\*.*
jarsigner -keystore demokeystore -storepass demopassword -keypass demopassword AppletDemo.jar
demokey
```

```
Administrator: Visual Studio 2008 Command Prompt
C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\FDx_SDK_Pro_for_Java_1_3>ja
vac -deprecation applet\*.java
ib\awtextra\*.*
added manifest
 adding: SecuGen/FDxSDKPro/jni/JSGFPLib.class(in = 2900)                     (out= 1532)(deflated 47%
adding: SecuGen/FDxSDKPro/jni/SGANSITemplateInfo.class(in = 698) (out= 466)(defl
ated 33%)
adding: SecuGen/FDxSDKPro/jni/SGCallBackFunction.class(in = 305) (out= 247)(defl
ated 19%)
adding: SecuGen/FDxSDKPro/jni/SGDeviceInfoParam.class(in = 1578) (out= 813)(defl
ated 48%)
 adding: SecuGen/FDxSDKPro/jni/SGDeviceList.class(in = 1713)            (out= 942)(deflated
 adding: SecuGen/FDxSDKPro/jni/SGFDxConstant.class(in = 283)      (out= 229)(deflated
adding: SecuGen/FDxSDKPro/jni/SGFDxDeviceName.class(in = 491)            (out= 302)(deflate
d 38%)
adding: SecuGen/FDxSDKPro/jni/SGFDxErrorCode.class(in = 1597) (out= 660)(deflate
d 58%)
adding: SecuGen/FDxSDKPro/jni/SGFDxSecurityLeve1.class(in = 622)            (out= 351)(def1
 ated 43%)
adding: SecuGen/FDxSDKPro/jni/SGFDxTemplateFormat.class(in = 398) (out= 287)(def
lated 27%)
adding: SecuGen/FDxSDKPro/jni/SGFingerInfo.class(in = 396)                 (out= 289)(deflated 2
 adding: SecuGen/FDxSDKPro/jni/SGFingerPosition.class(in = 659)      (out= 334)(deflat
ed 49%)
adding:
ed 32%)
              SecuGen/FDxSDKPro/jni/SGImpressionType.class(in = 400) (out= 269)(deflat
adding: SecuGen/FDxSDKPro/jni/SGISOTemplateInfo.class(in = 696) (out= 465)(defla
ted 33%)
adding: SecuGen/FDxSDKPro/jni/SGPPPortAddr.class(in = 422)                  (<u>out= 292)(deflated</u> 3
adding: applet/JSGDApplet$1.class(in = 605) (out= 373)(deflated 38%) adding: applet/JSGDApplet$10.class(in = 606) (out= 375)(deflated 38%) adding: applet/JSGDApplet$11.class(in = 607) (out= 374)(deflated 38%) adding: applet/JSGDApplet$2.class(in = 607) (out= 374)(deflated 38%) adding: applet/JSGDApplet$2.class(in = 605) (out= 370)(deflated 38%) adding: applet/JSGDApplet$4.class(in = 605) (out= 370)(deflated 38%) adding: applet/JSGDApplet$4.class(in = 605) (out= 371)(deflated 38%) adding: applet/JSGDApplet$5.class(in = 605) (out= 372)(deflated 38%) adding: applet/JSGDApplet$6.class(in = 605) (out= 373)(deflated 38%) adding: applet/JSGDApplet$7.class(in = 605) (out= 373)(deflated 38%) adding: applet/JSGDApplet$8.class(in = 605) (out= 372)(deflated 38%) adding: applet/JSGDApplet$9.class(in = 605) (out= 372)(deflated 38%) adding: applet/JSGDApplet$9.class(in = 605) (out= 372)(deflated 38%) adding: applet/JSGDApplet$9.class(in = 20889) (out= 9061)(deflated 56%) adding: org/netbeans/lib/awtextra/AbsoluteConstraints.class(in = 1585)
ロット
adding: org/netbeans/lib/awtextra/AbsoluteConstraints.class(in = 1585) (out= 814
)(deflated 48%)
adding: org/netbeans/lib/awtextra/AbsoluteLayout.class(in = 2607) (out= 1298)(de
flated 50%)
C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\FDx_SDK_Pro_for_Java_1_3>
C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\FDx_SDK_Pro_for_Java_1_3>
C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\FDx_SDK_Pro_for_Java_1_3>ja
rsigner -keystore demokeystore -storepass demopassword -keypass demopassword App
letDemo.jar demokey
Warning:
The signer certificate will expire within six months.
C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\FDx_SDK_Pro_for_Java_1_3>_
```

8.4. Export the Certificate (EXPORTCERT.BAT)

keytool -export -alias demokey -storepass demopassword -keystore demokeystore -file democert.csr

```
Administrator: Visual Studio 2008 Command Prompt

C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\FDx_SDK_Pro_for_Java_1_3\
C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\FDx_SDK_Pro_for_Java_1_3\
C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\FDx_SDK_Pro_for_Java_1_3\exportcert

C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\FDx_SDK_Pro_for_Java_1_3\exportcert

C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\FDx_SDK_Pro_for_Java_1_3\exportcert


democert_csr

Certificate stored in file \( \democert_csr \)


C:\workspace\code\trunk\windows\fdx_sdk_pro_for_java\FDx_SDK_Pro_for_Java_1_3 \)

T
```


8.5. Import the Certificate into Java Plug-In

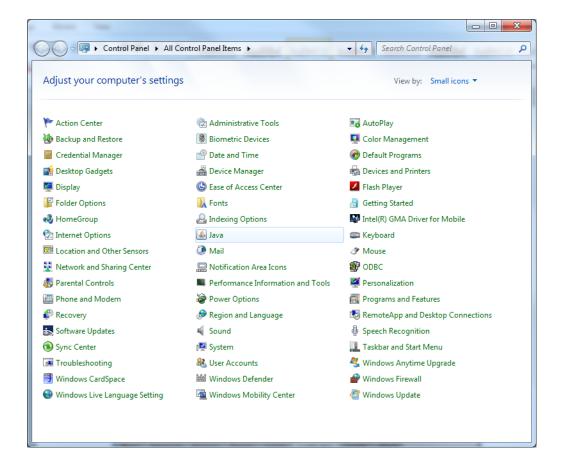


Launch the Java Control Panel applet and select the Security tab.

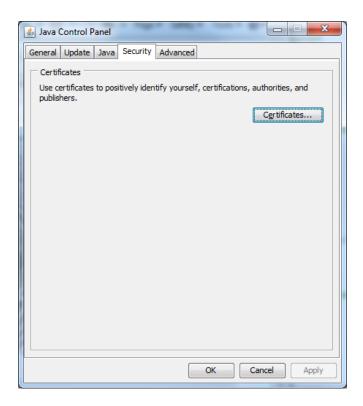


Click the "Certificates" button and then click "Import."

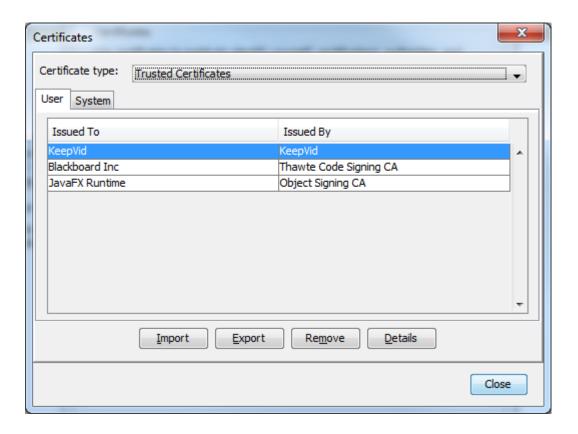

Browse to the DEMOCERT.CSR certificate exported above and click "Open."

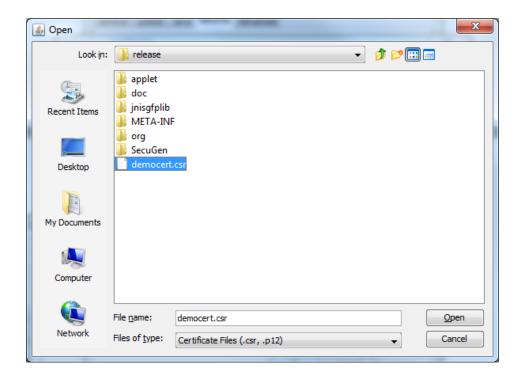

The certificate is now installed in the JRE.

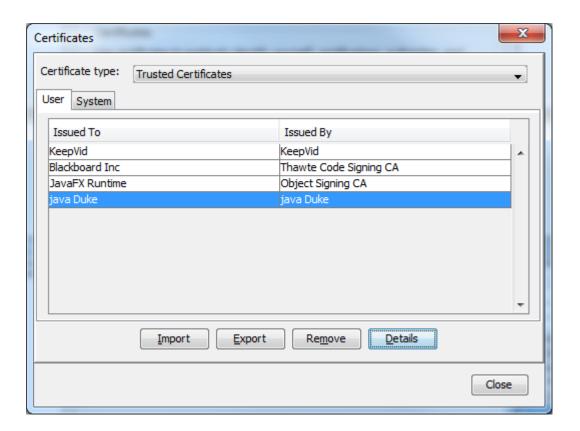


8.6. Open the Applet Demo HTML File

JSGDAppletDemo.html

```
<html>
<head>
<title>
JSGD Applet Demo
</title>
</head>
<body>
<center>
<applet
          = "applet.JSGDApplet.class"
 code
         = "JSGDApplet"
 name
 archive = "AppletDemo.jar"
          = "550"
= "550"
 width
 height
 hspace = "0"
 vspace = "0"
          = "middle"
 align
</applet>
</center>
</body>
</html>
```


8.7. Internet Explorer Browser

Tested IE v9.0.8112 on Windows 7 32bit Tested IE v10.0.9200 on Windows 7 64bit

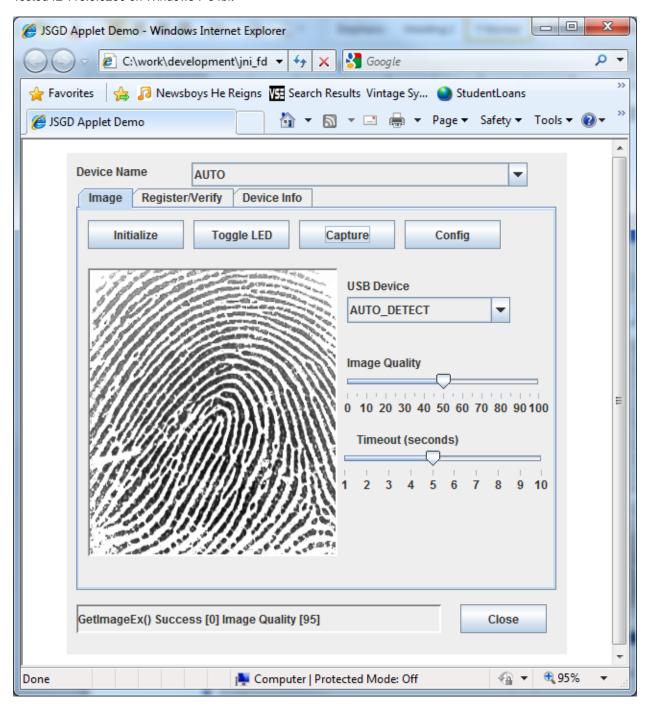

8.8. FireFox Browser

Tested FireFox v20.0.1 on Windows 7 32bit Tested FireFox v12.0 on Windows 7 64bit

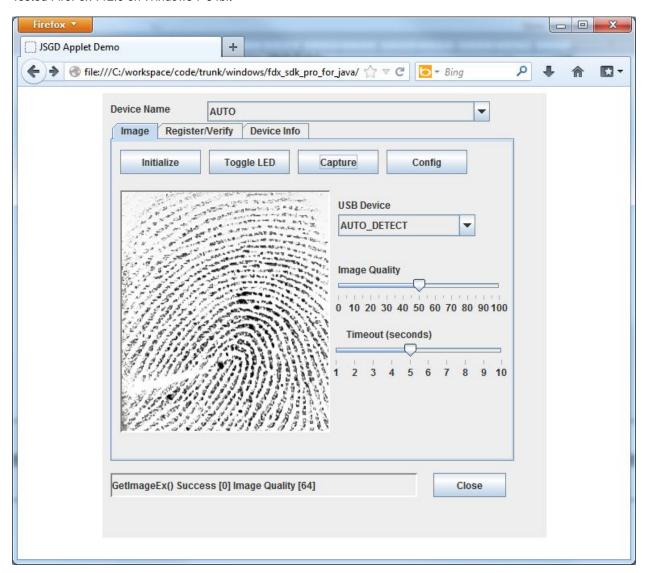

8.9. Google Chrome Browser

Tested Google Chrome v27.0.1453.94 m on Windows 7 32bit Tested Google Chrome v27.0.1453.94 m on Windows 7 64bit

