9.2. 2020

Installing NodeJS, NodeRED and mqtt broger Mosquitto

1. Options for computers

These installations can be done on a normal Windows computer with Win 10 operating system. Please note that the installations typically write some information on C:\Users\... -folders. This means that only the user who made the installation will be able to run the system. There are instructions on the installation pages on how to install on system level. With system level installation all users will be able to run the system.

All these installations can be done on a linux computer, too. Even a Raspberry Pi will be enough to run the system. The instructions are given on installation pages of each component.

1. NodeJS

Look at the NodeRED installation guidelines which version they recommend to install of the Node.js. It is not necessary the latest version!

https://nodered.org/docs/faq/node-versions#installing-nodejs

Install the Node.js. Typically it is best to install to the default directory with default options.

https://nodejs.org/en/download/

On a computer with Windows operating system the Node.js files can be found in library C:\Program Files\nodejs.

To ensure that the installation was successful you can run following commands:

```
Using Powershell: node --version; npm -version Using cmd: node --version && npm --version
```

The following lines with green print are from a Powershell command window.

```
PS C:\Users\xxxxxx> cd..
PS C:\Users> cd..
PS C:\> node --version;npm -version
v12.13.1
6.12.1
PS C:\>
```

This installation was done earlier in 2019. You might already get higher version numbers.

2. Node-RED

The node-RED installation on Linux and on Windows operating systems is explained in the "Running Node-RED locally" pages

9.2. 2020

https://nodered.org/docs/getting-started/local

Installation especially on Windows computer is explained in pages

https://nodered.org/docs/getting-started/windows

The installation is done with command: npm install -g --unsafe-perm node-red

```
PS C:\> npm install -g --unsafe-perm node-red
C:\Users\xxxx\AppData\Roaming\npm\node-red ->
C:\Users\xxxx\AppData\Roaming\npm\node_modules\node-red\red.js
C:\Users\xxxx\AppData\Roaming\npm\node-red-pi ->
C:\Users\xxxx\AppData\Roaming\npm\node_modules\node-red\bin\node-
red-pi
> bcrypt@3.0.6 install
C:\Users\xxxx\AppData\Roaming\npm\node modules\node-
red\node_modules\bcrypt
> node-pre-gyp install --fallback-to-build
node-pre-gyp WARN Using request for node-pre-gyp https download
[bcrypt] Success:
"C:\Users\xxxx\AppData\Roaming\npm\node modules\node-
red\node_modules\bcrypt\lib\binding\bcrypt_lib.node" is installed via remote
+ node-red@1.0.1
added 68 packages from 36 contributors, removed 73 packages and updated
108 packages in 29.004s
PS C:\>
```

This install the Node-RED into the system bath. The Node-RED can be started now on any directory.

The Node-RED installation can be tested on power shell command: C:>node-red

PS C:\> node-red

```
6 Oct 17:35:36 - [warn] Missing node modules:
6 Oct 17:35:36 - [warn] - node-red-node-email (0.1.27): e-mail, e-mail in
6 Oct 17:35:36 - [warn] - node-red-node-feedparser (0.1.12): feedparse
6 Oct 17:35:36 - [warn] - node-red-node-twitter (0.1.13): twitter-credentials, twitter in, twitter out
6 Oct 17:35:36 - [info] Removing modules from config
6 Oct 17:35:36 - [info] Settings file : \Users\xxxx\.node-red\settings.js
6 Oct 17:35:36 - [info] Context store : 'default' [module=memory]
6 Oct 17:35:36 - [info] User directory: \Users\xxxx\.node-red
6 Oct 17:35:36 - [warn] Projects disabled : set
editorTheme.projects.enabled=true to enable
6 Oct 17:35:36 - [info] Flows file : \Users\xxxx\.node-red\flows_DESKTOP-
IIMRDS7.json
6 Oct 17:35:36 - [info] Server now running at http://127.0.0.1:1880/
6 Oct 17:35:36 - [warn]
```

Your flow credentials file is encrypted using a system-generated key.

If the system-generated key is lost for any reason, your credentials file will not be recoverable, you will have to delete it and re-enter your credentials.

You should set your own key using the 'credentialSecret' option in your settings file. Node-RED will then re-encrypt your credentials file using your chosen key the next time you deploy a change.

```
6 Oct 17:35:36 - [info] Starting flows
6 Oct 17:35:36 - [info] Started flows
6 Oct 17:35:37 - [info] [mqtt-broker:HAMK MQTT on xxxxxxxxxxx] Connected to broker: NodeRed1@mqtt://xxxxxxxxxxxxxxx1883
```

On the organization ICT administration managed Windows computer the PowerShell command "node-red" caused a security error ".....because running scripts is disabled on this system....". But the same command "node-red" on the same computer executed in the Command prompt did not cause any security errors!

You can pick up the Node-RED server address from the lines from PS terminal. In my installation the server is in local address

```
http://127.0.0.1:1880/
```

Please open that address with a browser.

The last lines on the command window are generated by the Node-RED flow already earlier created in the Node-RED.

To run the Node-RED the PS terminal window needs to be open. If you would like to use the Node-RED for an application and not just for testing and developing please read the instruction on page

https://nodered.org/docs/getting-started/windows#running-on-windows

Similar instructions are available for a linux installation.

3. MQTT broker Mosquitto

As an mqtt broker we might use the Mosquitto. An existing installation on some server can be used or the Mosquitto can be installed locally on the same computer where the Node.js and Node-RED are installed.

Instructions for installation are available at

https://mosquitto.org/

https://mosquitto.org/download/

You can dowload the suitable .exe file for the installation and run the file as administrator. The file can be for example the "mosquitto-1.6.7-install-windows-x64.exe" . The installation will be done with the default parameters.

The mosquito documentation can be found at

https://mosquitto.org/man/mosquitto-8.html

Please go the latest documentation page if you are using the latest version of the Mosquitto.

The mosquito files can be found under C:\Program Files\mosquitto
Please study the content of the files
readme-windows.txt
mosquito.conf

Don't close the PowerShell or Command prompt terminal which might be open after the Node-RED installation. Please open a new PowerShell terminal.

To test your installation write in the power shell command prompt in the mosquito directory: .\mosquitto

Some common mistakes and solutions from power shell are seen on the print below:

PS C:\Users> cd..
PS C:\> cd C:\Program Files\mosquitto

IoT 9.2. 2020

Set-Location : A positional parameter cannot be found that accepts argument 'Files\.....

PS C:\> cd "C:\Program Files"

PS C:\Program Files> cd mosquitto

PS C:\Program Files\mosquitto> mosquitto

mosquitto: The term 'mosquitto' is not recognized as the name of a cmdlet, function, script file, or operable program....

.....Windows PowerShell does not load commands from the current location by default. If you trust this command, instead type: ".\mosquitto". See "gethelp about_Command_Precedence" for more details.

PS C:\Program Files\mosquitto> .\mosquitto

This will start the mosquito server. It starts with the configuration set on the file mosquito.conf .

The Mosquitto installation can be tested by opening a separate PowerShell command terminal and typing:

```
.\mosquitto_sub -v -t "test/firsttopic"

PS C:\> cd "C:\Program Files"

PS C:\Program Files> cd mosquito

PS C:\Program Files\mosquitto> .\mosquitto sub -v -t "test/firsttopic"
```

Leave that PowerShell terminal open. Open again a new PowerShell terminal. Type the command:

```
.\mosquitto_pub -t "test/firsttopic" -m "helloThere"
```

PS C:\Users\xxxxx> cd "C:\Program Files\mosquitto\"
PS C:\Program Files\mosquitto_ pub -t "test/firsttopic" -m "helloThere"

PS C:\Program Files\mosquitto>

Now you should get in the previous PowerShell terminal a new line:

test/firsttopic helloThere

To find out the IP address where the Mosquitto broker is listening please open once more a new PowerShell window and type:

```
netstat -an | findstr 1883
```

```
PS C:\> netstat -an | findstr 1883

TCP 0.0.0.0:1883 0.0.0.0:0 LISTENING

TCP 192.168.0.17:60736 193.167.167.59:1883 ESTABLISHED

TCP [::]:1883 [::]:0 LISTENING

TCP [::1]:1883 [::1]:60969 ESTABLISHED

TCP [::1]:60969 [::1]:1883 ESTABLISHED

PS C:\>
```

The Mosquitto broker is listening at address 0.0.0.0 in port 1883.

4. Testing the installation

The installation can be tested with the flow seen on picture below:

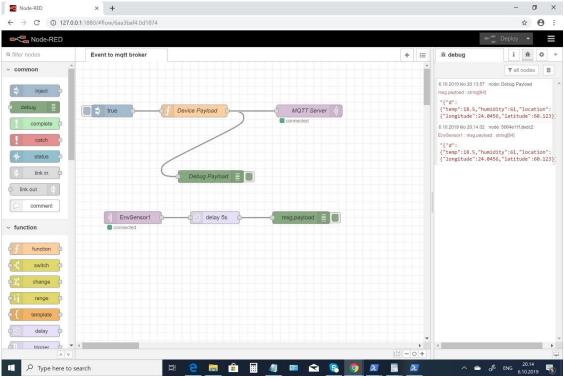


Fig. 4.1 The Node-RED flow for testing

The flow can be copied to your node red by copying the following JSON formatted text first into notepad to remove unvisible symbols from the word or pdf file and then copying the text into clipboard. The clipboard can be inported to Node-RED.

```
[{"id":"6aa3baf4.0d1874","type":"tab","label":"Event to mqtt
broker", "disabled": false, "info": ""}, {"id": "63e03741.5d6cf8", "type": "inject", "z": "6aa3baf4.0d1874", "
name":"","topic":"","payload":"true","payloadType":"bool","repeat":"","crontab":"","once":false,"
onceDelay":0.1,"x":90,"y":120,"wires":[["398df5fb.e9e4ea"]]},{"id":"398df5fb.e9e4ea","type":"func
tion","z":"6aa3baf4.0d1874","name":"Device Payload","func":"\nvar longitude1 = 24.0456;\nvar
latitude1 = 60.123;\n\n// Array of pseudo random temperatures\nvar temp1 =
[15,17,18.5,20,21.5,23,24,22.2,19,18];\n\n// Array of pseudo random relative humidities\nvar
context.get('counter1')||0;\ncounter1 = counter1+1;\nif(counter1 > 9) counter1 =
0;\ncontext.set('counter1',counter1);\n\n// Create MQTT message in JSON\nmsg = {\n payload:}
                        d:{\n
                                \"temp\": temp1[counter1],\n
                                                                  \"humidity\":
JSON.stringify(\n {\n
humidity1[counter1],\n
                          \"location\" :\n
                                                     \"longitude\": longitude1,\n
                                             {\n
\"latitude\" : latitude1\n
                           },\n
                                  n \in \mathbb{N} 
msg;","outputs":1,"noerr":0,"x":290,"y":120,"wires":[["8f56361b.779e98","36e34c50.b57c04"]]},{"i
d":"8f56361b.779e98","type":"debug","z":"6aa3baf4.0d1874","name":"Debug
Payload", "active": true, "tosidebar": true, "console": false, "tostatus": false, "complete": "payload", "x": 3
30,"y":280,"wires":[]},{"id":"36e34c50.b57c04","type":"mqtt
out","z":"6aa3baf4.0d1874","name":"MQTT
Server","topic":"EnvSensor1","qos":"0","retain":"false","broker":"426dbfae.68222","x":570,"y":120
,"wires":[]},{"id":"772b8d63.6c67f4","type":"mqtt
in","z":"6aa3baf4.0d1874","name":"","topic":"EnvSensor1","qos":"0","datatype":"auto","broker":"
426dbfae.68222","x":140,"y":380,"wires":[["8e9a06ec.bdd718"]]},{"id":"5064e11f.dedc2","type":"
debug","z":"6aa3baf4.0d1874","name":"","active":true,"tosidebar":true,"console":false,"tostatus":
false,"complete":"false","x":550,"y":380,"wires":[]},{"id":"8e9a06ec.bdd718","type":"delay","z":"6a
a3baf4.0d1874","name":"","pauseType":"delay","timeout":"5","timeoutUnits":"seconds","rate":"1
","nbRateUnits":"1","rateUnits":"second","randomFirst":"1","randomLast":"5","randomUnits":"sec
onds","drop":false,"x":340,"y":380,"wires":[["5064e11f.dedc2"]]},{"id":"426dbfae.68222","type":"
mqtt-
broker", "z":"", "name": "LocalInstallation", "broker": "0.0.0.0", "port": "1883", "clientid": "", "usetls": fals
e,"compatmode":false,"keepalive":"60","cleansession":true,"birthTopic":"","birthQos":"0","birthPa
yload":"","closeTopic":"","closeQos":"0","closePayload":"","willTopic":"","willQos":"0","willPayload
":""}]
```

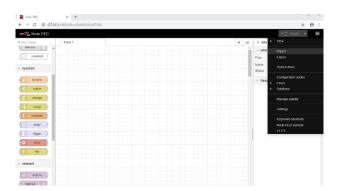


Fig 4.2 Click the Import on pull down meny on top right.



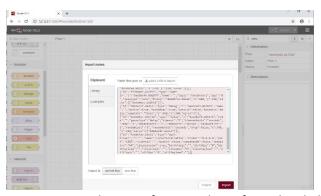


Fig 4.3 Import the JSON formatted text from the clipboard

You may get a message about lost credentials.

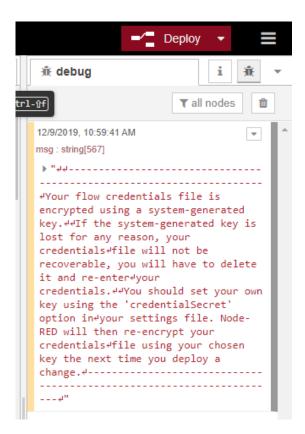


Fig 4.4 Lost credentials

To get it working again you should go to the library C:\Users\<your user name>\.node-red . Open the file settings.js . Uncomment the last line seen below:

```
// By default, credentials are encrypted in storage using a generated key. To // specify your own secret, set the following property.
```

```
// If you want to disable encryption of credentials, set this property to false.
// Note: once you set this property, do not change it - doing so will prevent
// node-red from being able to decrypt your existing credentials and they will be
// lost.
credentialSecret: "a-secret-key",
```

Save the file. The NodeRED should be able to deploy the flow changes to the server.