


GOISTAT MONOCHROME MONITOR SERVICE MANUAL

CAUTION

BEFORE SERVICING THE CHASSIS, READ THE "SAFETY PRECAUTIONS", IN THIS MANUAL

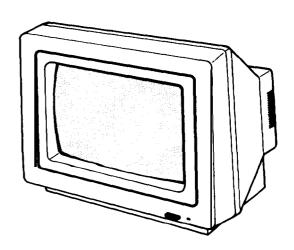

MODEL: MBM-2105G/A (MC-3 CHASSIS)



FEATURES

- 2000 display characters in a 8 x 8 dot format.
- 18 MHz bandwidth, medium class, composite signal input.
- · This monitor is compatible with a variety of home and personal computers

CONTROLS LOCATION

The MBM-2105G/A monochrome monitor uses a RCA jack connector.

The input signal is input through the RCA jack connector.

The input signal is based on the composite level.

Figure 2 shows the monitor controls on the front and rear panels.

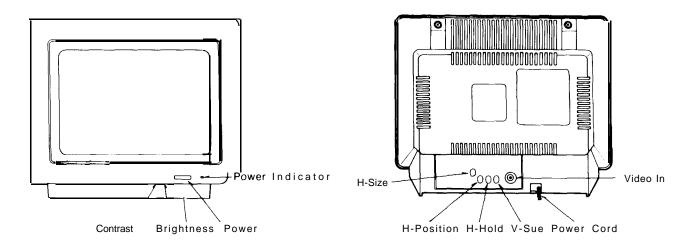


Figure 2, Monitor Controls

NOTE: Monitor cabinet not used on 6300T Models.

• POWER (PUSH-ON)

Turn on the monitor by pressing the power switch. The power indicator lights when the power is ON. Always turn on the monitor before you turn on the computer.

To turn the power OFF, just press this switch again.

Brightness

Turn this knob clockwise to increase brightness.

Contrast

Turn this knob clockwise to increase contrast.

V-Size

Turn this knob to adjust the vertical size of the picture.

H-Hold

Turn this knob to stop horizontal rolling of the picture.

H-Position

Turn this knob clockwise to move the center of the picture to the right; turn the knob counterclockwise to move the center of the picture to the left.

H-Size

Turn this knob to adjust the horizontal size of the picture.

CIRCUIT DESCRIPTION

1. VIDEO AMPLIFIER

The Fig. 3 details the cascade video amplifier. Video amplification is provided by the TR303 and TR304. TR303 and TR304 are connected in a cascade configuration. TR303 operates as a common emitter and TR304 operates in the common base configuration. This minimized the miller effect input capacitance and the difining breakdown parameter for TR303 which becomes BVCBO as opposed to BVCEO.

This enables selection of a higher speed/lower breakdown transistor to be used in the video amplifier.

The emitter of TR304 is driven by the collector of TR303 which is a high frequency transistor. Overall voltage gain for the stage is determined by the ratio of R312 to R316. Bandwidth is within 3dB to 32 MHz.

2. POWER SUPPLY

The 120V AC line voltage is applied to the primary of the T901 where it is stepped down through the secondary winding to approximately 17V (AC). After passing through the bridge rectifier circuit and filter (C905) the regulated DC supply voltage is approximately 18V (DC). The 18V unregulated B+ voltage is applied directly to the collector of the B+ regulator (TR901). A voltage divider network (R905, VR901, R906) in which the B+ adjustment control (VR901) is used to establish the desired operating level (12V DC). When AC input voltage variations occur, a correction voltage is produced at the base of TR903 and is coupled directly to the base of the error amplifier (TR902). This correction voltage is then passed from the emitter of TR902 directly to the base of TR901 and B+ voltage regulation is then accomplished.

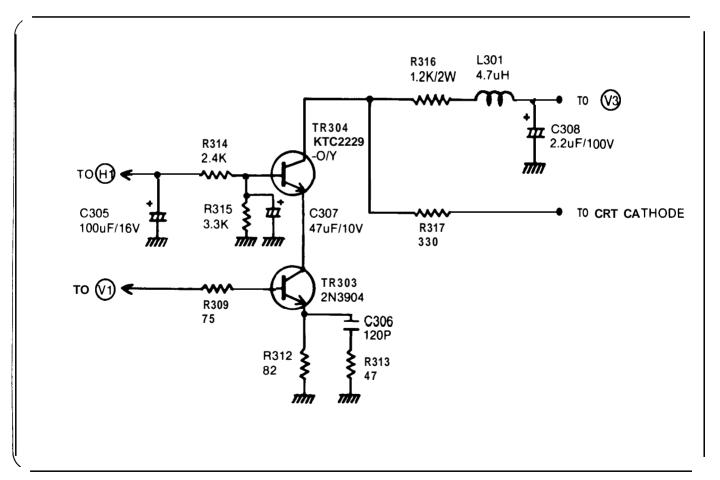


Figure 3, Video Amplifier


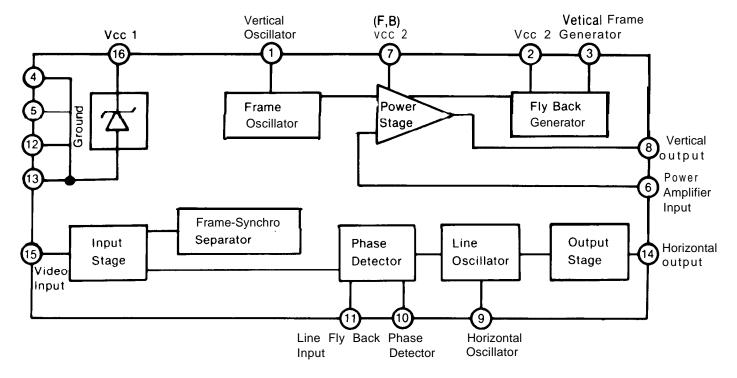


Figure 4, BLOCK DIAGRAM OF THE TEA 2037A

3. COMPOSITE VIDEO INPUT AND HORIZONTAL/ VERTICAL DEFLECTION

3-I VIDEO INPUT (PIN 15)

The detection level for negative sync pulse at the sync separation input (pin 15) is set at 1.6V. When the voltage at emitter of the Transistor (pin 15) is above 1.6V, the transistor is cut off. Voltage lower than 1.6V enables the transistor to conduct and the internal circuitry is enabled for synchronization function.

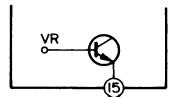

3-2 COMPOSITE VIDEO INPUT (PIN 15)


3-3 LINE (H) OSCILLATOR (PIN 9)

The line oscillator is of the type which charges and discharges a capacitor, since a perfectly linear sawtooth wave form is not required.

The free running frequency is dependent on C705, R705 and VR702 and is governed by this expression $To = 085 \times C705 \times R705$ where To is the line oscillator free running frequency.

3-4 FRAME(V) OSCILLATOR (PIN 9)

Oscillator thresholds are internally fixed by resistor C601, R603 are used to determine the free-running frequency, the oscillator free-running frequency is given by To = 0.15 x C601 x R603.

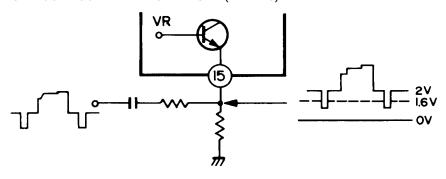

ADJUSTMENT

1. REGULATED B + ADJUSTMENT (VR901)

Connect high impedance voltmeter between TR901 emitter and ground rotate the B + adjustment control (VR901) to obtain a reading of 12.0 ± 0.1V.

2. FOCUS (VR704)

Adjust the focus control (VR704) for best overall focus of the test pattern (marked with the symbol "%"). Usually the center and corners of the screen do not focus at the same setting and a compromise must be made.

3. VERTICAL SIZE (VR601)

The vertical size control (VR601) should be adjust for the picture to fill the screen vertically.

4. HORIZONTAL SIZE (L703)

The horizontal size control (H-site coil) should be adjusted for the picture to fill the screen horizontally.

5. HORIZONTAL POSITION (VR701)

The horizontal position control (VH701) should be adjusted for the horizontal picture position.


6. SUB-BRIGHT (VR703)


Adjust subbright control (VR703) for visual cut off of the raster when external brightness is turned to maximum

7. CENTERING ADJUSTMENT


It the raster is not centered horizontally and vertically it may be centered by removing the cabinet back and adjusting the centering tabs on the neck of the tube, located at the rear of the deflection yoke. Turn the whole device clockwise or counterclockwise. To increase the amount of raster shift move the two tabs which project from the device farther apart, if raster is tilted on an angle, it may be straightened by loosening the deflection yoke clamp and rotating the deflection yoke.

BLOCK DIAGRAM

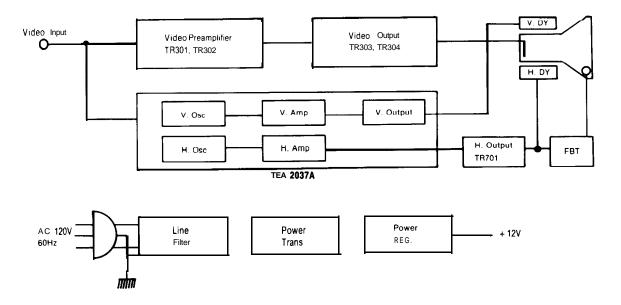

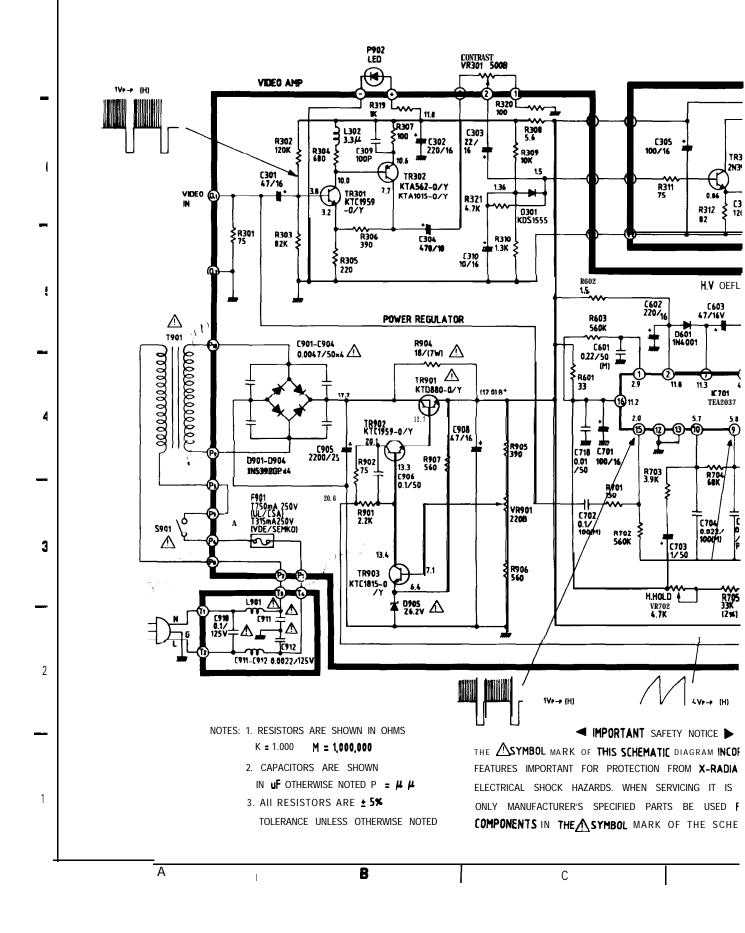

DIAGRAM

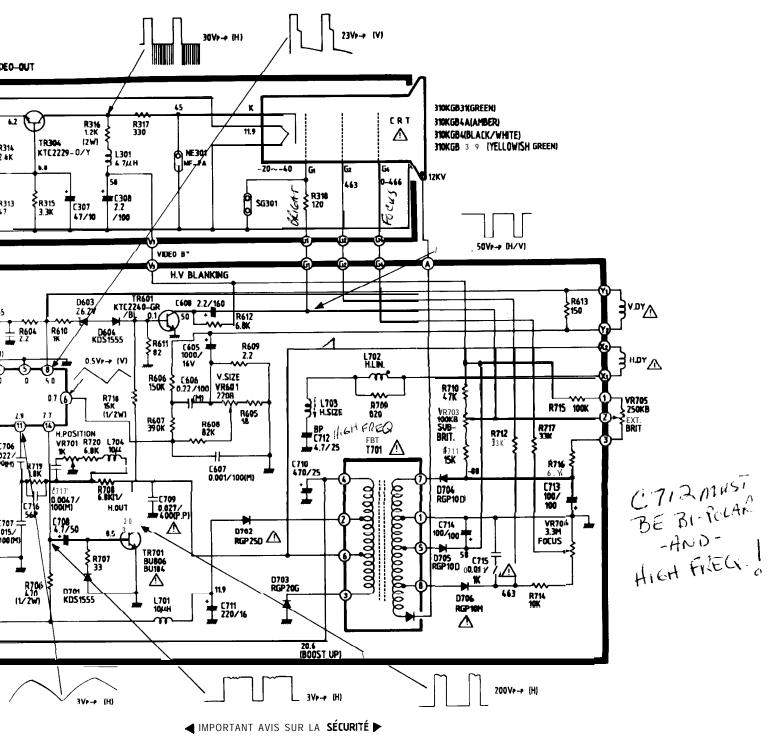

TES SPECIAL
FIRE AND
TIAL THAT
HE CRITICAL

LA A SYMBOLE MARQUE DE CE DIAGRAMME SCHEMATIQUE COMPREND DIMPORTANTES

CARACTÉRISTIQUES SPÉCIALES CONÇUES POUR PROTÉGER DES RAYONS X, ET

DES DANGERS DÍNCENDIE ET DE SECOUSSES ÉLECTRIQUES. EN CAS DE BESOIN

SI DES PIÈCES DE CETTE A SYMBOLE MARQUE DOIVENT ÊTRE REMPLACE'S

N'UTILISEZ QUE DES PIÈCES SPÉCIFIÉES PAR LE HANUFACTURIER.

484-309A

E F G


TROUBLESHOOTING GUIDE VIDEO IS OK BUT TR902, TR903, D905, NO VIDEO DISPLAY SIZE IS SMALL TR901 AND POWER REG CIRCUIT AND WAVY OV OR TROUBLE IN CHECK BETWEEN TR901 E SMALL HORIZONTAL CIRCUIT AND GROUND 12V D702, D703, C710, C709 TR701, C712, D704, D705 D706, C713, C714, C715 YES ABOVE 14V TROUBLE IN L701, C705, R707, D701 R706, R705, IC701. TROUBLE IN , CHECK CRT (G2) VOLTAGE 450V ΝO FBT, CR706, R712 2 CHECK CRT (HEATER) VOLTAGE 12V LEAD (H1), LEAD (V1, V2) YES ABOVE 55V TROUBLE IN CHECK CRT CATHOD VOLTAGE TR303, TR304, R311, R309, R310, 45-55V R315, R314, R312 YES TROUBLE IN NO VERTICAL DEFLECTION NO HORIZONTAL DEFLECTION HORIZONTAL/VERTICAL SYNC TROUBLE VR703 (SUB-BRIGHT,, R710, R711, VR301 (CONTRAST,, (ONE HORIZONTAL LINE AT (ONE VERTICAL LINE AT VR705 (EXT BRIGHT,, TR301, TR302, VIDEO CABLE CRT SCREEN CENTER) CRT SCREEN CENTER) TROUBLE IN TROUBLE IN TROUBLE IN DY, IC601, R603, C601, DY, C712, L702 IC701, R701, R702, C605, R606, R609, R605, C702 C607, R608, C606, VR601, D601 HORIZONTAL SYNOTROUBLE REF. NO. **FIGURE** DESCRIPTION KTC 1015 TR301, TR302, KTC 1959 TR902. TR903, **KTA 562TM** R719, C716, R708, R720, ктс 1815 TR601 C717, C706, C707, R704 TR304 KTC 2229 VERTICAL SYNC TROUBLE TR701, ви 806 TROUBLE IN TR901 KTD 880 IC701 IC701 TEA 2037A RETRACE LINE TROUBLE TROUBLE IN TR303 2N 3904 R610, D603, D604, R611,

TR601, R612, C608


Figure 5, TRANSISTOR & IC BASING

1. MAIN PCB

ASSY PIN: 1 10-B06C

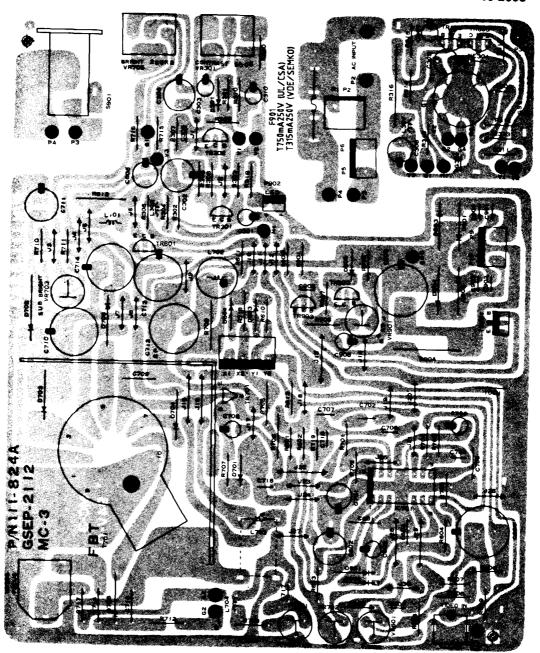


2. LINE FILTER PCB

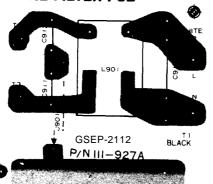



ASSY PIN: 110-B72A

3. MAIN PCB (SOLDER SIDE)

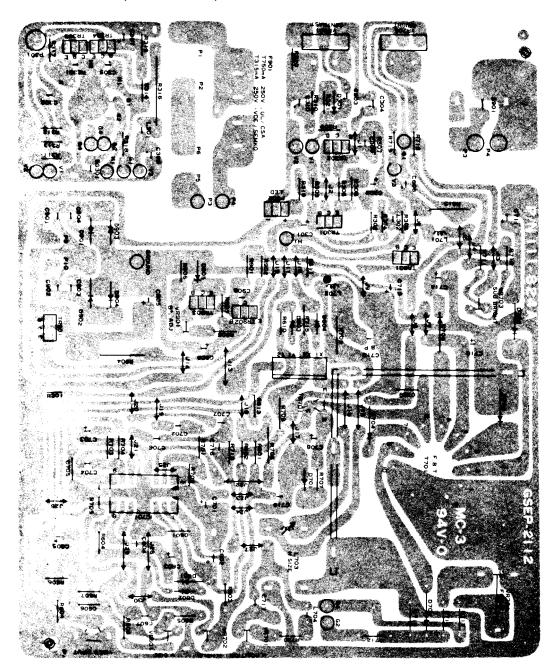

4. LINE FILTER PCB (SOLDER SIDE)

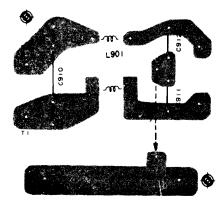

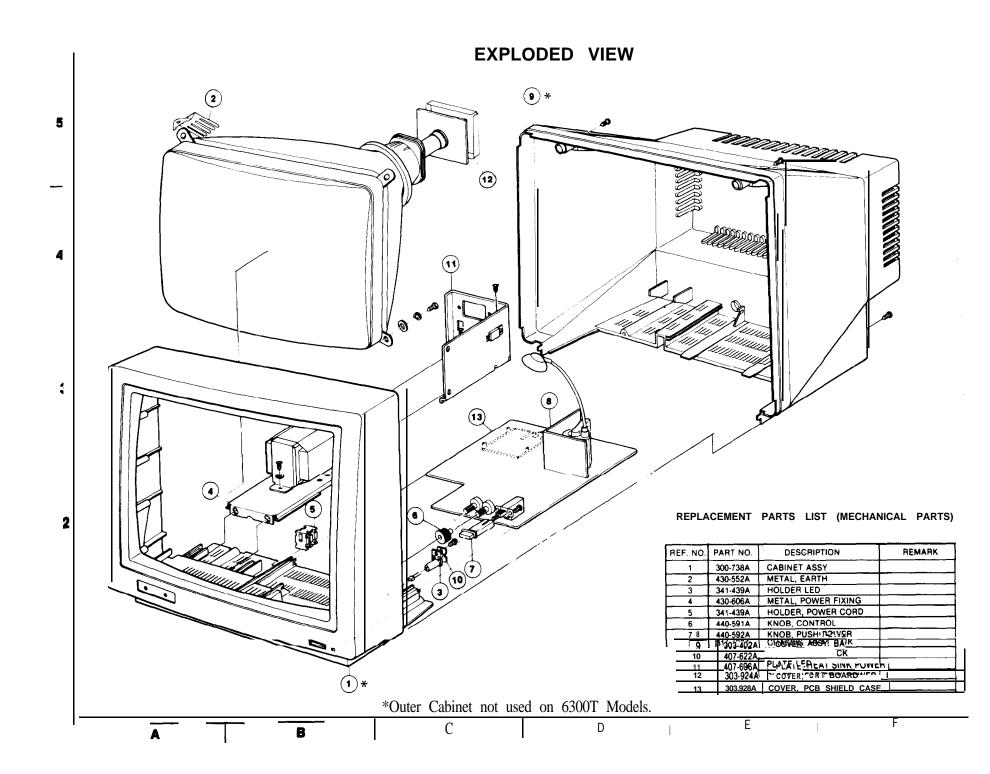

REPLACEMENT PARTS LIST

CAUTION: Components identified by the A symbols in the PARTS LIST and on the SCHEMATIC DIAGRAM

have special characteristics important to safety.

Do not degrade the safety of the set through improper servicing.

ABBREVIATIONS: Capacitors CC: Ceramic (TC), CE: Chemical, CK: Ceramic (Hi-K),

BP: Bipolar, CQ: Mylar, PE: Polyester, PP: Polypropylene

Resistors RD: Carbon Film, RS: Metal Oxide Film

(All CC and Capacitors are ± 5%, 50 Volts and all resistor, ±5%, 1/8W unless otherwise noted). S: Recommended Service Parts, R: Replacement Service Parts

REF. NO.	PART N O . DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMAR
	RESISTOR	R709		RD. 1/8W 820 ohm	R	
R301	RD. 1/8W 75 ohm	R	R710		RD. 1/8W 47K ohm	R
Fi302	RD. 1/8W 120K ohm	R	R711		RD. 1/8W 15K ohm	R
R303	RD. 1/8W 82K ohm	n R	R712		RD. 1/8W 33K ohm	R
			R714		RD. 1/8W 10K ohm	R
R304	RD. 1/8W 680 ohm	R	R715		RD. 1/8W 100K ohm	R
R305	RD. 1/8W 220 ohm	R	R716		RD. 1/8W 6 8K ohm	R
R306	RD, 1/8W 390 ohm		R717		RD, 1/8W 33K ohm	R
R307	RD. 1/8W 100 ohm	R	R718		RD. 1/8W 15K ohm	R
R308	RD 1/8W 56 ohm	R	R719		RD. 1/8W 1 8K ohm	R
R309	RD. 1/8W 10K ohm	R	R720		RD. 1/8W 6 8k ohm	R
R310	RD. 1/8W 1 3K ohm	R	R901		RD. 1/8W 2 2K ohm	R
R311	RD 1/8W 75 ohm	R	R902		RD. 1/8W 75K ohm	R
R312	RD. 1/8W 82 ohm	R	A R904		RWR, 7W 18 ohm	S
R313	RD. 1/8W 47 ohm	R	R905		RD. 1/8W 390 ohm	R
R314	RD. 1/8W 2 4K ohm	R	R906		RD. 1/8W 560 ohm	ft
R315	RD. 1/8W 3 3K ohm	R	R907		RD. 1/8W 560 ohm	R
R316	RD 2W 1 2K ohm	R	VR301		VARIABLE 500B	S
R317	RD. 1/8W 330 ohm	R	VR601		SEMIFIX SR 29R 2208	S
R318	RD. 1/8W 120 ohm	R	VR701		SEMIFIX SR 29R 1KB	S
R319	RD. 1/8W 1 OK ohm	R	VR702		SEMIFIX SR 29R 4 7KB	S
R320	RD 1/8W 100 ohm	R	VR703		SEMIFIX'S R 19R100KB	S
R321	RD. 1/8W 4 7K ohm	R	VR704		SEMIFIX H162IC 3 3 M B	S
R601	RD. 1/8W 33 ohm	R	VR705		VARIABLE 250KB	S
R602	RD. 1/8W 1 5 ohm	R	VR901		SEMIFIX SR 19R 2 2 0 8	S
R603	RD. 1/8W 560K ohm	R	******	<u> </u>	CAPACITOR	
R604	RD. 1/8W 2 2 ohm	R				
R605	RD. 1/8W 18 ohm	R	C301		CE, 47uF16V	R
R606	RD. 1/8W 150K ohm	R	C302		CE, 220uF 16V	R
R607	RD. 1/8W 390K ohm	R	C303		CE, 22uF 16V	R
R608	RD. 1/8W 82K ohm	R	C304		CE, 470uF10V	R
R609	RD. 1/8W 2 2 ohm	Α	C305		CE. 100uF 16V	R
R610	RD. 1/8W 1 OK ohm	R	C306		C C , 120pF 50V	l "R
R611	RD. 1/8W 82 ohm	R	C307		CE, 47uF 10V	R
R612	RD. 1/8W 6 8K ohm	R	C308		CE, 474F 10V	R
R613	RD. 1/8W 150 ohm	R	C309			R
R701	RD. 1/8W 150 ohm	R	C309 C310		CC, 100pF 50V	R
R702	RD. 1/8W 560K ohm	R	C601		CE, 10uF 16V	
R703	RD. 1/8W 3 9K ohm	R			CO. 0 22uF 100V	S R
R704	RD. 1/8W 47K ohm	R	C602		C E . 220uF 16V	
R705	RD. 1/8W 33K ohm ±2%	R	C603		CE. 47uF 16V	R
R706	RD. 1/8W 470 ohm	R	C604		CO, 0 1uF100V	S
R707	RD. 1/8W 33 ohm	R	C605		CE. 1000uF 16V	R
R708	RD. 1/2W 6 8K ohm	R	C606		CO, 0 22uF 100V	S R
1.700	KD. 1/2VV O OK UIIIII	п	C607		CO, 0.001uF100V	Н

REF. NO.	PART NO.	DESCRIPTION	REMAR	REF. NO.	PART NO.	DESCRIPTION	REMARK	
C608 C701 C702		CE, 2 2uF 160V CE. 100uF 16V CO, 0 1uF 100V	R R S R	△ TR901 TR902 TR903	19-0043	KTD880-O KTC1959-Y KTC1815-Y	S S S	
c 703 C704		CE. 1 0uF 25V CO, 0 0022uF 100V	R	COIL				
C705 C 706 C707 C708 A C709 C710 C711		PP 0 0022uF 200V CO, 0 0022uF 100V CQ, 0 015uF 100V CE, 4 7uF 25V PP. 0 027uF 400V CE, 470uF 25V CE. 220uF 16V BP. 4 7uF 25V	5 R R R S R R 5	L301 L302 L701 L702 L703 L704 A L901	20-0040 20-0039 20-0038	PEAKING PL 4 7uH PEAKING PL 3 3uH CHOKE 10uH H-LINEARITY COIL WIDTH PEAKING PL 10uH LINE FILTER	8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8	
C712 C713		CE, 100uF 100V	R	MISCELLANEOUS				
C714 A C715 C716 C717 C718 C901 C902 C903 C904 C905 C906 C908 A C910 A C911 A C912		CE, 100uF 100V CK. 0.01uF 1000V CC. 56pF 50V CO, 0.0047uF 100V CK. 0.01uF 50V CK, 0.0047uF 50V CE, 2200uF 25V CK, 0.1uF 50V CE, 47uF 16V MPP. 0.1uF 125V CK, 0.0022uF 125V CK, 0.0022uF 125V CK, 0.0022uF 125V		A A T701 A F901 A S901 NE301 SG301 VIDEO IN SIGNAL CABLE V1. v2	1 I-0023 07-0009	CRT, 310KGB31 (Green) CRT, 310KGB4A (Amber) FBT DY ASSY PCB MAIN FUSE 0 75A/250V SWITCH, POWER NEON LAMP 95V SPARK GAP JACK, RCA PHONE RCA TO RCA CABLE SOCKET CRT WIRE ASSY SHIELD TRANS. POWER SHIELD	88888888RR RRS	
		I c.			14709	PWB LINE FILTER AC POWER CORD	s R	
IC701	06300159	TEA 2037A DIODE	S	REBONUL		PC BOARD COMPL. W/TRAY CONNECTOR ASSY FOR TR901	R	
D301		KDS1555	S	101/070	ű-	CONNECTOR ASSY FOR LED	R	
D601		1 N4002	S		PRI	NTED MATTERS		
D602 A D603 D604 D701 A D702 D703 D704 D705 A D706 A D901 A 0902 A D903 A D904 A D905 P902	19-0053 19-0052 19-0051 19-0050 19-0049 19-0048 19-0047	KDSI555 ZENER BZX83-C6V2 KDS1555 KDS1555 RGP25D RGP20G RGP10D RGP10M 1N5392GP 1N5392GP 1N5392GP 1N5392GP ZENER BZX83-C6V2 LED (GREEN)	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	FLYBA	kek 3	KIT, PRINTING OWNER'S MANUAL PIN. STAPLE NO 10 BAG, PE	R R R	
		TRANSISTOR						
TR301 TR302 TR303 TR304 TR601 A TR701	19-0046 1 9-0045 1 9-0044	KTC 1959-Y KTA562 TM-Y 2N3904 KTC2229-Y KTC2240-GR BU806	S S S S S S					