Advanced Robot Programming Labs C++ Programming

Lab 2: Mobile robot with sensors

1 Content of this lab

The goal of this lab is to read, use and build C++ classes in order to develop an elementary simulator for a ground robot.

1.1 The simulator

The simulator is defined by several headers and source files, as defined in Fig. 1.

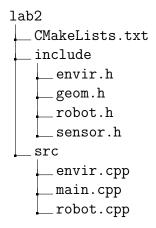


Figure 1: Files used by the simulator

The main file is main.cpp and is compiled to an executable.

The files robot.h and robot.cpp define a Robot class and will be modified in the first lab to implement new methods that allow using the simulator.

The files envir.h and envir.cpp defines the environment in which the robot is moving. These files are not to be modified.

The file sensor.h defines a virtual class Sensor that will be used to create two sensor types: range and bearing sensors.

1.2 Expected work

During the lab the files will be modified and others will be created. At the end of the lab, please send by email a zip file allowing to compile and test the program.

You may answer the questions by inserting comments in the code at the corresponding lines.



1.3 Geometry structures

In the geom.h file are defined two simple geometry structures:

- One for a 2D pose: Pose with attributes x, y, theta
- One for a 2D motion: Twist with attributes vx, vy, wz

Those structures have classical constructors, and also methods to express change of frames:

- Pose Pose::transformDirect(Pose _transform) returns the pose expressed in the given transform
- Pose Pose::transformInverse(Pose _transform) returns the pose expressed in the given transform inverse
- Twist Twist::transformDirect(Pose _transform) returns the twist expressed in the given transform
- Twist Twist::transformInverse(Pose _transform) returns the twist expressed in the given transform inverse



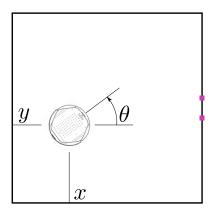


Figure 2: Robot in its environment

2 Building the Robot class

The default behavior is the robot following a moving target in the environment. The environment consists of 4 walls defining a 20×20 m square. The target is leaving the square at some point, and for now the robot is also leaving the square as nothing tells it that there are some walls there.

2.1 Defined methods

Some methods of the class are already defined:

- Robot(std::string _name, double _x, double _y, double _theta) constructor, initialize the robot with a given name at a given (x, y, θ) position
- Pose pose() returns the current pose of the robot
- void moveXYT(double _vx, double _vy, double _omega) sends a (v_x, v_y, ω) velocity to the robot and updates its position
- void goTo(const Pose &_p)
 tries to have the robot reach the given Pose

2.2 Incomplete methods

- Q1 Compile and execute the program. According to the main.cpp file, the robot is trying to go to the position of the target. In which files is the target motion defined?
- Q2 Explain the signature of Robot::Robot, especially the way to pass arguments. From the main() function, can the passed arguments be modified while defining a new robot?
- Q3 In practice it is often impossible to control a ground robot by sending (x, y, θ) velocities. A classical way to control such a robot is to send a setpoint with a linear velocity v and an angular velocity ω , expressed in the robot frame as shown in Fig. 3.



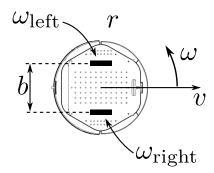


Figure 3: Differential drive model

The corresponding model is quite simple:

$$\begin{cases} \dot{x} = v \cos \theta \\ \dot{y} = v \sin \theta \\ \dot{\theta} = \omega \end{cases}$$

Implement such a function in Robot::moveVW. This method should compute the (x, y, θ) velocities from (v, ω) and then call the Robot::moveXYT method.

- Q4 Now that a realistic way to control the robot is possible, should the Robot::moveXYT method stay available for external use? What can we do in the robot.h file to make it impossible to use it from outside the Robot class?
- **Q5** The moveWithSensor method was using the XYT motion, which is not realistic. Modify it so that it calls the moveVW method. A simple way to change a desired $(\dot{x}, \dot{y}, \dot{\theta})$ motion to a (v, ω) motion is:

$$\begin{cases} v = \dot{x} \\ \omega = \alpha \dot{y} + \dot{\theta} \end{cases}$$

We will use $\alpha = 20$ here.

 $\underline{\mathbf{Q5}}$ When a robot is equipped with two actuated wheels, a simple model is the differential drive model, as shown in Fig. 3. Assuming the two wheels have a radius r and are separated with a distance b, then the kinematic model yields:

$$\begin{cases} v = r \frac{\omega_l + \omega_r}{2} \\ \omega = r \frac{\omega_l - \omega_r}{2b} \end{cases}$$

We will need to define new attributes in the Robot class in order to initialize the radius and base distance. Create also a new method in the Robot class, called initWheel, that does so. In the main.cpp, use the following values:

$$\begin{cases} r = 0.1 \ m \\ b = 0.3 \ m \end{cases}$$



- Now that the robot has some wheel radius and inter-distance, implement the Robot::rotateWheels method, so that it can be possible to control the robot by sending wheel velocities. The method should call Robot::moveXYT after having computed the (x, y, θ) velocities from (ω_l, ω_r) .
- Q7 By using a bool wheels_init_ attribute, make sure that it is impossible to do anything in Robot::rotateWheels if the radius and base have not been initialized.

2.3 Velocity limits

With the current simulation, we can control the robot:

- by sending linear and angular velocity setpoint with Robot::moveVW
- or by sending wheel velocities with Robot::motateWheels

These two methods call Robot::moveXYT¹ and the robot can reach any velocity. In practice, the wheels have a limited velocity at ± 10 rad/s.

- Q1 Modify the Robot::initWheels method in order to pass a new argument that defines the wheel angular velocity limit. You may need to define a new attribute of the Robot class to store this limit.
- Modify the Robot::rotateWheels method in order to ensure that the applied velocities (ω_l, ω_r) are within the bounds. The method should also print a message if the velocity setpoint is too high. Note that if you just saturate the velocities, the robot motion will be different. A scaling is a better strategy, in this case we keep the same ratio between ω_l and ω_r according to the following algorithm:

```
Data: desired wheel velocities \omega_l, \omega_r, velocity limit \omega_{\max} Result: actual velocities \omega_l, \omega_r a \leftarrow \max(|\omega_l|/\omega_{\max}, |\omega_r|/\omega_{\max}); if a < 1 then |a \leftarrow 1; end return \omega_l/a, \omega_r/a;
```

Algorithm 1: Scale wheel velocities with maximum value

Q3 Although the robot actually moves by having its wheels rotate, it is more natural to send linear and angular velocity setpoints. Modify the Robot::moveVW method so that a (v, ω) setpoint is changed to a (ω_l, ω_r) setpoint that will then be called through Robot::rotateWheels. The inverse of model (2.2) yields:

$$\begin{cases}
\omega_l = \frac{v + b\omega}{r} \\
\omega_r = \frac{v - b\omega}{r}
\end{cases}$$
(1)



¹which should not be calable anymore from outside the Robot class

The corresponding behavior should be that the robot cannot follow perfectly the target anymore, because it is not fast enough.



3 Sensors

In this section we will try to avoid the walls by using some range sensors.

The sensor.h files defines a Sensor class that has the following methods:

- Sensor(Robot &_robot, double _x, double _y, double _theta) initializes a sensor at a given position on the given robot
- virtual void update(const Pose &_p) updates the measurement from the sensor current position
- virtual void checkTwist(Twist &_t) checks if the given Twist is fine with the current sensor measurement

Some of the methods are pure virtual functions, which makes the Sensor class a abstract class. It is thus impossible to declare a variable to be of Sensor type, as this class is only designed to build daughter-classes depending on the sensor type.

The Robot class already has a attribute called sensors_ which is a vector of Sensor*. As the Sensor class is abtract it is forbidden to use it by itself, but pointers are still possible.

3.1 Range sensor

- Q1 Create a sensor_range.h file that defines a SensorRange class that is derived from Sensor. The update and checkTwist methods have to be defined so that the code compiles. For now, just make the methods print something to the screen.
- $\underline{\mathbf{Q2}}$ Include this file in main.cpp and declare a SensorRange variable. We will use a front range sensor placed at (0.1,0,0) in the robot frame.
- Q3 In the Robot::moveWithSensor method we currently do not take into account the sensor measurement. Before calling moveVW we should loop through all the sensors of the robot and call their update method.
- Q4 In this question we will build the update function of the range sensor. This sensor should compute the distance to the nearest wall in the direction of the x-axis.

In the envir_ attribute of the sensor class, the walls are defined by a list of points available in envir_->walls. Fig. 4 shows a configuration where the sensor is at (x, y, θ) and is facing a wall defined by (x_1, y_1) and (x_2, y_2) . In this case, the distance to the wall is:

$$d = \frac{x_1 y_2 - x_1 y - x_2 y_1 + x_2 y + x y_1 - x y_2}{x_1 \sin \theta - x_2 \sin \theta - y_1 \cos \theta + y_2 \cos \theta}$$
(2)

The computed distance is positive if the wall is in front of the sensor, and negative if it is behind (in this case this wall is actually not measured). Also, the denominator may be null if the wall is parallel to the sensor orientation.

A simple code to loop trough all the walls is:



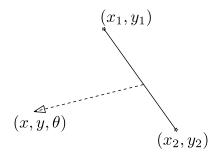


Figure 4: Distance to a segment defined by two points.

```
Pose p1, p2;
for(int i=0;i<envir_->walls.size();++i)
{
   p1 = envir_->walls[i];
   p2 = envir_->walls[(i+1)%envir_->walls.size()];

   // do whatever you want to do with points p1 and p2
}
```

Define the update function so that it updates the attribute s_{-} of the sensor with the distance to the nearest wall. Make it also print the distance to see if it is fine.

Q5 We now want the sensor to be able to modify the robot twist to prevent any collisions, which is the goal of the checkTwist method. We assume the Twist that is passed to this method is already expressed in the sensor frame. Hence we are only interested in the vx attribute and do not want it to be too large (fast motion in the sensor axis) if we are near to a wall.

A simple way to do so is to define a minimum security range and to impose an upper bound to the velocity:

Q6 Modify the Robot::moveWithSensor method so that we also check the current robot twist. The robot should then stay inside the walls. We will use the following parameters:

$$\begin{cases} g = .1 \\ s_m = 0.1 m \end{cases}$$

```
Data: Current twist T, current range s, gain g, minimum range s_m Result: Modified twist T if T.vx > g*(s-s_m) then | T.vx \leftarrow g*(s-s_m); end return T
```

Algorithm 2: Modify the given twist to avoid collisions

Q7 Add some other range sensors to the robot to check if everything is going fine.



3.2 Bearing sensor

In this section we will create a new kind of sensor, that returns the bearing angle to the other robot in the simulation. Define first a new robot with smaller wheels (0.05 m).

In the main loop, we just want this robot to go forward at 0.4 m/s:

robot2.moveWithConstraints(Twist(0.4,0,0));

Of course it will go out of the wall for now.

- Q1 Create a sensor_bearing.h file that defines a SensorBearing class that is derived from Sensor. The update and checkTwist methods have to be defined so that the code compiles. For now, just make the methods print something to the screen.
- $\underline{\mathbf{Q2}}$ Include this file in main.cpp and declare a SensorBearing variable. We will use a front bearing sensor placed at (0.1,0,0) in the second robot frame.
- Q3 Here we build the update method. The sensor measurement should be the angle under which the sensor is detecting another robot. We have to loop through all the robots of the environment, which can be done with this loop:

```
// look for first other robot
   for(auto other: envir_->robots_)
      if(other != robot_)
      {
            // compute angle between sensor and detected robot
            break;
      }
      // set angle back to [-pi,pi]
```

The angle between the sensor and the robot can be computed with:

$$\alpha = \arctan 2(y_s - y_r, x_s - x_r) - \theta_s$$

where (x_s, y_s, θ_s) is the sensor pose and (x_r, y_r) is the robot position.

Q4 We now build the checkTwist method. The bearing sensor should try to align with its target. To do so, we just want to change the rotation velocity:

Data: Current twist T, current bearing s, gain g

Result: Modified twist T

 $T.wz \leftarrow T.wz - q \times s;$

return T

Algorithm 3: Modify the given twist to avoid collisions

We use this method with the following parameters: q = 0.5.

Q5 Check that the second robot now follows the first robot, just by using its bearing sensor.

