

Fun with IOT, HCP and SAP UI5




Enable HCP Internet of Things Services

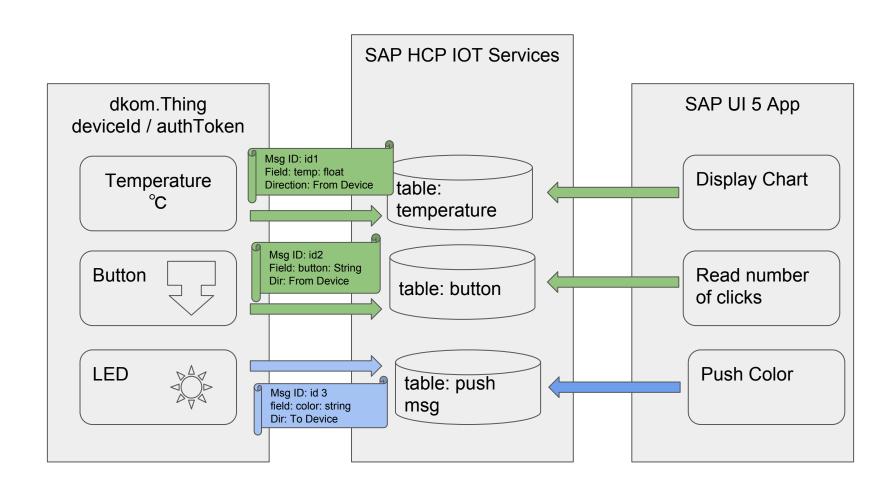


- at the end select "Go To Service
- when it opens click the "Deploy Message Management Service
- Then enter your account password.
- Hit Deploy
- It takes 1-2 minutes to start the app

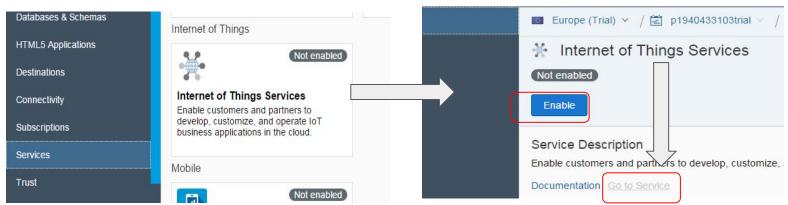

Create Devices and Messages in IOT Cockpit

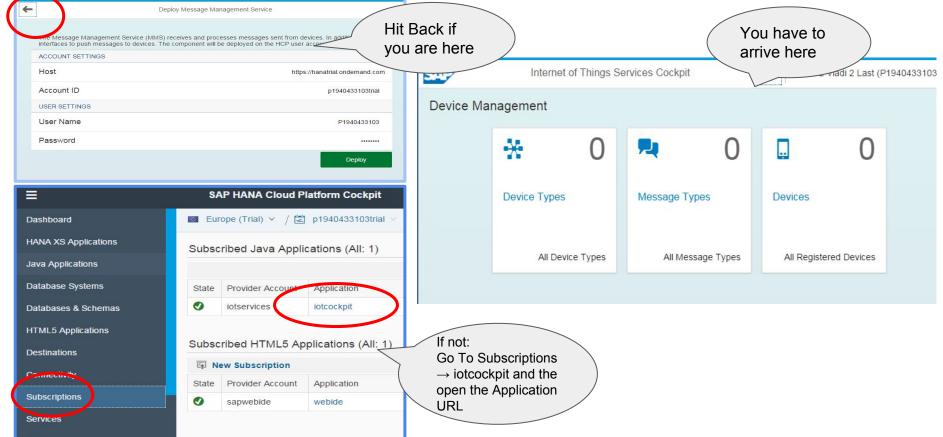

Create new Device Type

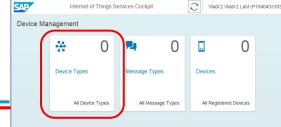

Search

No data

No data

*Name:

dkomThingDeviceType

Further Details:

Enter a URL to call up further details

Note: None of the artefacts about to be created is editable for now. So in case you make a mistake, you have to start from scratch. So have patience:)

Choose a name. It is not important. E.g.:

dkomThingDeviceType

Then click [Create] button









Create

Add Messages

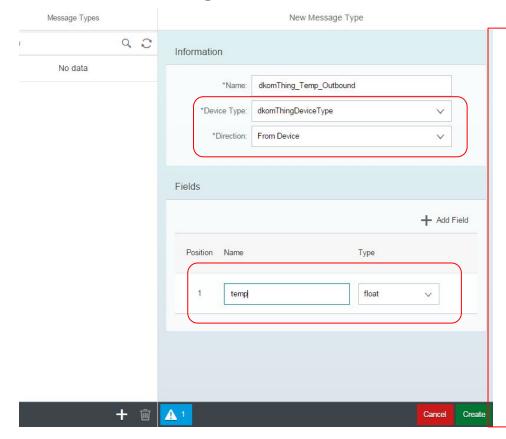

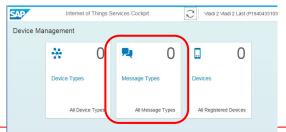

- Create the 3 messages for the communication. Make sure to enter correct values for:
 - Message Type Name is only for reference
 - DeviceType (only if you have more than one)
 - Direction
 - Field Name / Type
 - remove auto-generated fields
- Message Details
 - Temperature
 - Msg Type: dkom_Thing_Temp_Out
 - Direction: From Device
 - Field Name: temp
 - Field Type: float
 - o Button
 - Msg Name: dkom_Thing_Button_Out
 - Direction: From Device
 - Field Name: button
 - Field Type: **String**
 - Led Color
 - Msg Name: dkom Thing LED In
 - Direction: To Device
 - Field Name: colorField Type: String


Messages Result

- This is how it should look like at the end.
- Note that each Message has an ID.
- Copy them down somewhere, as you will need them in 10 minutes

Button: xxxx

Led: yyyy


Temp: zzzz

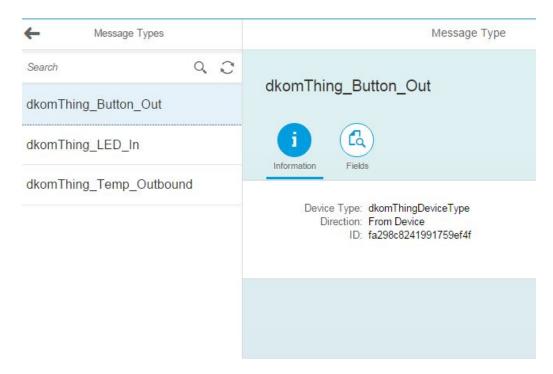

Create The Device

- Create a new device.
- Name (not important) E.g.: dkomDevice
- The Device is generated. It has an ID and OAuth Token.
- The OAuth Token is important and visible only once.
- Copy both the DeviceID and the OAuthToken somewhere for reference


 In case you forget the OAuth Token - simply go to the "Authentication" Tab on this screen and you will be able to invalidate the current token and generate a new one

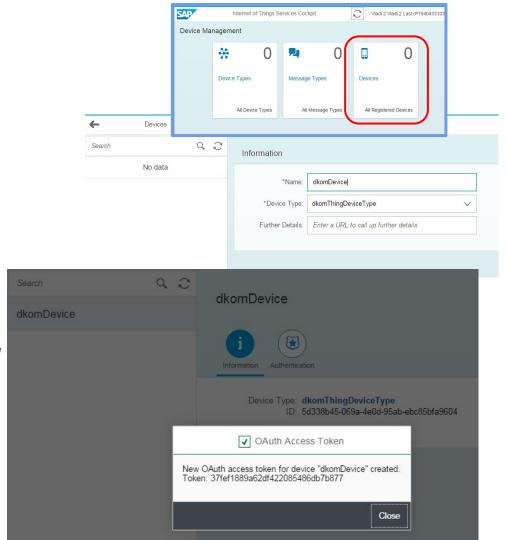

Allow your user to call the IOT MMS API

- By default no user is assigned the role to allow calling the IOT MMS API to push messages to devices. Most of the operations are accomplished via the OAuth token.
 Just pushing the message to the device still requires
 Basic Authentication and a user.
- Open "Account Cockpit → Java Applications → iotmms"
- Copy the Application URL somewhere -
- On the next screen, go to the "Roles" tab -
- Click Assign
- And add your P/I/D user (See below where to take it from, especially for P users)



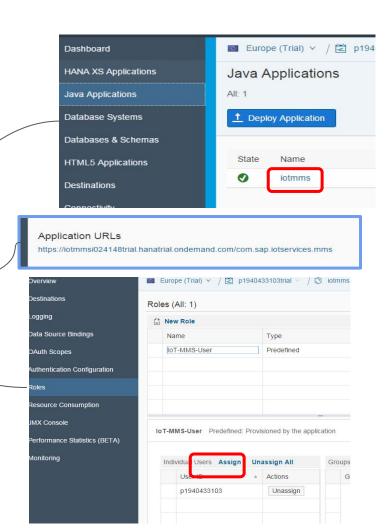

Create Destination to the IOT MMS API

 To access the IOT MMS API form a HTML5 App, we need to create a destination and then add a route in the HTML5 App to this Destination.

To create the destination: Go to Account Cockpit Destinations. And create a new one with following properties


Name: iot_mms

Type: HTTP

 URL: Copy the Application URL from the previous step

Authentication: Basic Auth

User/Pass: Your Account credentials

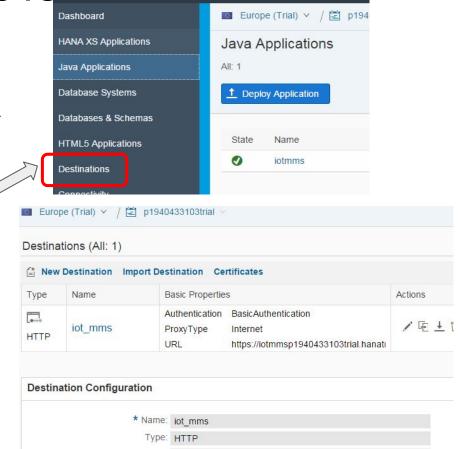

Start the WebIDE

SAP HANA Cloud Platform Cockpit


Active Application Version: 1.24.3-24022016132009

Active Version

Start WebIDF from the Account Cockpit → Subscriptions Tab

> Overview Roles


Logging

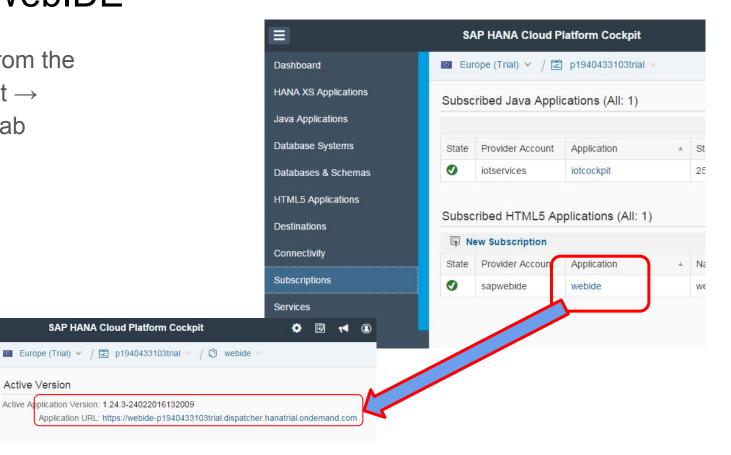

Import the Sample app into Web Ide

- Download the Sample app from here https://github.com/vlast3k/vThingCO2/raw/master/files/DKomSofia_IOT_Sample_App.zip
- Import it from the Web IDE Home Page
- It should look like this:



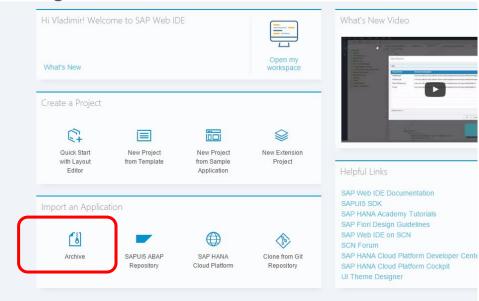

Configure the Web App

 open the file "main.js" and on the top there are 5 variables that you need to edit according to your device and message ids

```
var deviceId = "8f9b541b-cf97-45f4-be7e-c42521d18fb6";
var token = "3abd57fe85f5353178911d8872dc153b";
var msgIdLED = "759c55b23a3985597db3";
var msgIdButton= "df3e2e4d1584f9ac20cd";
var msgIdTemp = "8099277fb913f6159bd3";
```

Attach the dkom. Thing and connect it to Wifi

- Install the USB Drivers from here http://www.arduined.eu/ch340-windows-8-driver-download/, for Windows 7 and 8 and http://kig.re/downloads/CH34x Install.zip for Mac (have a look on the Readme file inside
- Connect the VThing with the USB Cable. It should light up Green
- Install and Start the Chrome Configuration Utility (and chrome if you do not have it) from there: https://chrome.google.com/webstore/detail/vair-co2-monitor-configur/kiangganloipimjbgolfijhaknkifhcn (press "Add to Chrome")
- When it loads it should automatically find the device. Now enter the Wifi connection details and press "Set Wifi"
- In few seconds it should show the IP in the log at the bottom


SSID: DKOM

Pass: <<< empty >>>



Connect the dkom. Thing to HCP IOT Service

- Expand the "Reporting: SAP HCP Internet Of Things"
- Enter the values
 - SAP HCP IOT Host
 - Take ONLY the HOST part of the Application URL you already stored
- For the remaining add the corresponding values
- The Message ID for the LED is not necessary
- Press [Set]. And wait few seconds until the log says "Configuration Stored"
- → now the device will start to send
 Temperature updates each 15 seconds

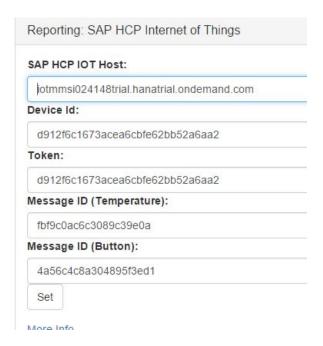

That's it for now!

- For digging deeper into those aspects you can join the IOT training that will be conducted on premise
- Also for programming the actual thing and not using the pre-made firmware
- and also how to measure real ambient temperature and not the heat coming from the LED and device itself