
We use cookies (and similar techniques) to provide you better products and services. Your permission will be confirmed if you continue using this website. Read more DOOGEE N30 & S40 Pro \$99.99 \$149.99 **Shop Now** Ship to Finland , EUR ▼ Get a 10% off APP only coupon Help ▼ Country Website 0 All categories Rs485 gg Sign in Join Wishlist Cart Online Shopping: foot switch keyboard switches rc jr connectors vintage table la **Shop All Categories** Flash Deals 1-Week Delivery TOP RANKING New Arrivals Home Tools Measurement & Analysis Instruments Voltage & Current Testers Voltmeters & Ammeters SHT20 Temperature & Humidity Transmitter Sensor High Precision Monitoring Modbus RS485 RTU PLC system integration 2 Reviews Questions & Answers ID: 1591861 7,73€ _{11,17€} 31% Off Price: 1 \$20 for New User Coupon: Ship From: CN 2,15€ Shipping: to Finland via Air Parcel Register ▼ Shipping time:20-35 business days ② 0 Quantity: Add to Cart **Buy Now** Add to Wishlist (37) Share to: Warranty: 30-day refund or replacement Payment: Refer & earn 10% off any order Price alert Report error Hot Products Related To This Item

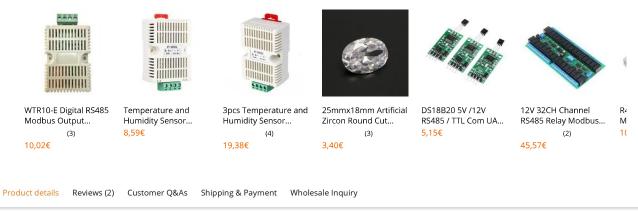

Description document download:http://www.eiemsun.com/c/8584.htm

1.Description:

Product adopts industrial-grade chip, high-precision SHT20 temperature and humidity sensors, ensure the products with good reliability, high precision and interchangeability.

Adopt RS485 hardware interface (with the lightning protection design), the protocol layer compatible with standard industrial Modbus RTU protocol. This product integrating MODBUS protocol and ordinary UART communication protocol, users can choose communication protocols, UART communication support automatic report function (Connect the RS485 serial interface mode tool by automatically output temperature and humidity).

2.Features:

- 1>.Support MODBUS RTU protocol
- 2>.RS485 supports 1000 meters communication
- 3>.Standard DIN35 mounting rails

1 of 7

0

- 4>.High precision
- 5>.Industrial products, high progress SHT20 temperature and humidity sensor, the RS485 communication
- 6>.Standard MODBUS protocol and ordinary protocol, the user can choose communication protocol
- 7>.Baud rate can decide for themselves
- 8>.General agreement with automatic upload function, upload speed can decide for themselves

3.Parameters:

- 1>.Product Name:Modbus RTU RS485 SHT20 Temperature Humidity Transmitter
- 2>.Product Number:XY-MD02
- 3>.Working Voltage:DC 5V~30V
- 4>.Output signal:RS485 signal
- 5>.Communication protocol:Modbus RTU and ordinary protocol
- 6>.Communication address:1~247(default 1)
- 7>.Temperature Range:-40°C~60°C
- 8>.Temperature Precision:+/-0.5 $^{\circ}$ C
- 9>.Temperature Resolution:0.1°C
- 10>.Humidity Range:0%RH~80%RH
- 11>.Humidity Precision:+/-3%RH
- 12>.Humidity Resolution:0.1%RH
- 13>.Power:<0.2W
- 14>.Work Temperature:-40°C~85°C
- 15>.Work Humidity:0%~95%RH
- 16>.Size:65*46*28.5mm

4.Using Steps:

- 1>.Connect signal receiver such as for to RS485 terminal.
- 2>.Input power supply at power terminal.
- 3>.According to the acquired data, the data is processed differently according to actual needs.

5.Note:

- 1>.Users need to prepare their own ModBus debugging tool and RS485 debugger.
- 2>.Users needs to complete write code according to the communication protocol and commands if using the controller to receive data.

6.Application:

- 1>.Factory Detect
- 2>.Equipment box Detect
- 3>.Environmental test
- 4>.Home security

7.Package:

1>.1pc Modbus RTU RS485 SHT20 Temperature Humidity Transmitter;

8.Details pictures:

Modbus Protocol						
Function Code						
Command Register	Funciotn					
0x03	Read keep register					
0x04	Read input register					
0x06	Write a single keep register					
0x10	Write more keep registers					

Register Type	Register Address	Register Contents	Bytes
In t Do nieton	0x0001	Temperature	2
Input Register	0x0002	Humidity	2
	0x0101	Device Address	2
Keep Register	0x0102	Baud Rate: 0:9600 1:14400 2:19200	2
	0x0103	Temperature Correction -10°C~10°C	2

30/09/2020, 15:08 2 of 7

		0x0104		Humidity Correction -10%RH~10%RH			2		
			Modbus Prot	ocol Communi	cation Format				
			Master Se	nd Format					
Device Address	Function Code	Starting Address Hi	Starting Address Li	Quantity Hi	Quantity Li	CRC Hi	CRC Li		
			Respor	nse Format from	n Slave				
Device Address	Function Code	Bytes	Register 1 Hi	Register 1 Li	Register N Hi	Register N Li	CRC Hi	CRC Li	
			ModBus (Command					
		Master Re	ad Temperatur		rame(0x04)				
Device Address	Function Code	Starting Address Hi	Starting Address Li	Quantity Hi	Quantity Li	CRC Hi	CRC Li		
0x01	0x04	0x00	0x01	0x00	0x01	0x60	0x0A		
		Response Te	mperature Vali	ue from Slave					
Device Address	Function Code	Bytes	Temp Hi	Tmep Li	CRC Hi	CRC Li			
0x01	0x04	0x02	0x01	0x31	0x79	0x74			
Note: Temper		converted to a d hexadecimal r 0.5 °C							
		Master R	lead Humidity	Command Fra	me(0x04)				
Device Address	Function Code	Starting Address Hi	Starting Address Li	Quantity Hi	Quantity Li	CRC Hi	CRC Li		
0x01	0x04	0x00	0x02	0x00	0x01	0x90	0x0A		
		Response I	Humidity Value	from Slave					
Device Address	Function Code	Bytes	Humidiyt Hi	Humidity Li	CRC Hi	CRC Li			
0x01	0x04	0x02	0x02	0x22	0xD1	0xBA			
For example: Humidity Valu	ie = 0x222, coi	nverted to a de	cimal 546, so a	ctual humidity	value = 546/1	0 = 54.6%RH			
	Cont	inuous Read Te	emperature and	d Humidity Co	mmand Frame(0x04)			
Device Address	Function Code	Starting Address Hi	Starting Address Li	Quantity Hi	Quantity Li	CRC Hi	CRC Li		
0x01	0x04	0x00	0x01	0x00	0x02	0x20	0x0B		
		Respo	onse Temperat	ure and Humio	lity Value from	Slave			
Device Address	Function Code	Bytes	Temp Hi	Tmep Li	Humidiyt Hi	Humidity Li	CRC Hi	CRC Li	
0x01	0x04	0x04	0x01	0x31	0x02	0x22	0x2A	0xCE	

Read Keep Register(0x03)								
Read Device Address from Slave								
Device Address	Function Code	Starting Address Hi	Starting Address Li	Quantity Hi	Quantity Li	CRC Hi	CRC Li	
0x01	0x03	0x01	0x01	0x00	0x01	0xD4	0x36	
		Respon	se Data fro	m Slave				
Device Address	Function Code	Bytes	Slave Add Hi	Slave Add Li	CRC Hi	CRC Li		
0x01	0x03	0x02	0x01	0x02	0x30	0x18		
1 - 1		Modif	y Contents	of Registers	(0x06)			
		Мо	dify Slave A	ddress Regi	ster			
Device Address	Function Code	Register Address Hi	Register Address Li	Value Hi	Value Li	CRC Hi	CRC Li	
0x01	0x06	0x01	0x01	0x00	0x08	0xD8	0x30	
Note:For e	xample,this	command i	s used to cl	nange slave	address to	0x08.		
		Send	d/Response	Data from 9	Slave			
Device Address	Function Code	Register Address Hi	Register Address Li	Value Hi	Value Li	CRC Hi	CRC Li	
0x01	0x06	0x01	0x01	0x00	0x08	0xD4	0x0F	

Continuously Change Keep Registers(0x10)

30/09/2020, 15:08 3 of 7

Device Address	Function Code	Starting Address Hi	Starting Address Li	Quantity Hi	Quantity Li	Bytes	3	3	3	Register Address 2 Li		CRC Li
0x01	0x10	0x01	0x01	0x00	0x02	0x04	0x00	0x20	0x25	0x80	0x25	0x09

For example, this command is used to change slave address to 0x20 by register 1. That is 32. Set Baud Rate to 0x2580 by register 2.That is 9600

Response Data from Slave								
Device Address	Function Code	Starting Address Hi	Starting Address Li	Register Num Hi	Register Num Li	CRC Hi	CRC Li	
0x01	0x10	0x01	0x01	0x00	0x02	0x11	0xF4	

- 1. This product integrating MODBUS protocol and ordinary UART communication protocol, users can choose communication protocols, UART communication support automatic report function.
- 2. output temperature and humidity automatically after connect the RS485 serial interface mode tool.

	UART Communication Protocol
Baud Rate	9600
Bit	8
Stop Bit	1
Check Bit	No
Command	Function
	Read temperature and humidity
	For exampe:
READ	27.4°C,67.7%
	Temperature is 27.4℃
	Humidity is 67.7%RH
AUTO	Start the temperature and humidity automatically report function (Same as READ)
STOP	Stop the temperature and humidity automatically report function
	Set baud rate 9600-19200
BR:XXXX	For exampe:
	BR:9600
	Set baud rate to 9600
TC:XX.X	Set the temperature calibration (-10.0~10.0)
	For exampe:
	TC:02.0
	Set calibration to 2℃
	Set the humidity calibration (-10.0~10.0)
HC-VV V	For exampe:
Check Bit Command READ AUTO STOP BR:XXXX FC:XX.X HC:XX.X	HC:-05.1
	Set calibration to -5.1%RH
	Set the temperature and humidity reporting rate. Range is 0.5,1,2,5,10
⊔7.VVV	For exampe:
112.777	HZ:2
	Set reporting rate to 2Hz
	Read system current Set Value
	Return:
	TC:0.0,HC:0.0,BR:9600,HZ:1
	Temperature Calibration:0.0°C
PARAM	Humidity Calibration: 0.0%RH
	Baud Rate : 9600
	Report Rate: 1Hz
	SLAVE_ADD:1
	ModBus Slave Address is 0x01

Temperature and humidity transmitter

4 of 7 30/09/2020, 15:08



Product parameters




Commodity coding	XY-MD02	Temperature precision	±0.5°C (25°C)
Product name	Temperature and humidity transmitte	Humidity precision	±3%RH
DC power supply	DC 5-30V	Temperature range	-40°C~+60°C
Output signal	RS485 signal	Humidity range	0%RH~80%RH
Communication protocol	Modbus-RTU protocol and Custom general protocol	Temperature resolution	0.1°C
Mailing address	$1\sim$ 247 can be set, by default 1	Humidity resolution	0.1%RH
Baud rate	Can be set, by default 9600 8 bit data, 1 bit stop, no check.	Equipment power consumption	≤0.2W

Standard card rail installation


Standard 35mm card rail installation, the appearance is small and exquisite, can be directly installed in the standard DIN35 guide rail.



5 of 7 30/09/2020, 15:08

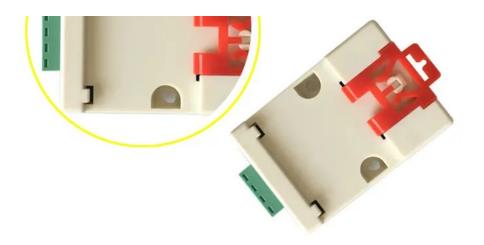

Connection mode

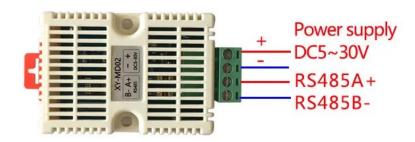

RS485 communication distance up to 1000 meters.

Customers Who View This Item Also Bought

Customer Reviews

Customer Q&As

Search for your questions

30/09/2020, 15:08 6 of 7

Customers Who View This It	em Also View						
You Viewed							
		Related Searches:					
Quality and Saving	Global Warehouse	Fast and convenient logistics	Payment Se	acurity	Professi	onal service and	d
Comprehensive quality control and affordable prices	37 overseas warehouses	Fast and convenient door to door delivery	More than 40	different	prod	uct warranty ustomer Service	u
and anordable prices		door delivery	secure paymen	t methods	24// (Istomer Service	
Enter Email to get \$50 worth of coupons.	SUBSCRIBE	f	0 🗖	y 0	W E	9 😅	0
OUR COMPANY	CONTACT US	PAYMENT (& SHIPPING		D <i>e</i> arichie rashini	PoPoReOrGaiRAMS	
About Banggood.com	Contact Us	PAYMENT & SHIPPING Payment Methods			exclusive 10% of Fashion Blogge	off coupon	
Guarantees & Return Policy	New User Guide	Shipping Go			□	ŭ	
Terms And Conditions	Help Center	Locations V			0	gram	
Privacy Policy	Specialized Affairs		elivery Time			-	
Intellectual Property Claims		BGpay Instr	uction		Review Club		

Copyright © 2006-2020 Banggood All Rights Reserved.

Site Map

7 of 7