

Designs for Risk Evaluation and Management (DREAM) Tool User's Manual, Version: 2016.08-1.0 Beta

15 August 2016

DRAFT – Do not cite or quote



Office of Fossil Energy

NRAP-TRS-III-00X-2016

## **Disclaimer**

This report was prepared as an account of work sponsored by an agency of the United States Government. Neither the United States Government nor any agency thereof, nor any of their employees, makes any warranty, express or implied, or assumes any legal liability or responsibility for the accuracy, completeness, or usefulness of any information, apparatus, product, or process disclosed, or represents that its use would not infringe privately owned rights. Reference therein to any specific commercial product, process, or service by trade name, trademark, manufacturer, or otherwise does not necessarily constitute or imply its endorsement, recommendation, or favoring by the United States Government or any agency thereof. The views and opinions of authors expressed therein do not necessarily state or reflect those of the United States Government or any agency thereof.

**Cover Illustration:** A hypothetical visualization of a DREAM application to a leak from subsurface storage into an overlying aquifer through an abandoned wellbore. The inserts visualize three of many monitoring configurations that DREAM would generate and assess during the iterative procedure.

Suggested Citation: Yonkofski, C. M. R; Porter, E. A.; Rodriguez, L. R., Brown, C. F. *Designs for Risk Evaluation and Management (DREAM) Tool User's Manual, Version: 2016.08-1.0 Beta;* NRAP-TRS-III-0XX-2016; NRAP Technical Report Series; U.S. Department of Energy, National Energy Technology Laboratory: Morgantown, WV, 2016; p 36.

### An electronic version of this report can be found at:

 $\underline{\text{http://www.netl.doe.gov/research/on-site-research/publications/featured-technical-reports}$ 

https://edx.netl.doe.gov/nrap

# Designs for Risk Evaluation and Management (DREAM) Tool User's Manual, Version: 2016.08-1.0 Beta


## Catherine M.R. Yonkofski, Ellen A. Porter, Luke R. Rodriguez, Christopher F. Brown

 $Pacific \ Northwest \ National \ Laboratory, 902 \ Battelle \ Boulevard, Richland, WA \ 99354$ 

NRAP-TRS-III-0XX-2016

Level III Technical Report Series

15 August 2016



## **Table of Contents**

| A. | BSTR | ACT  | 1  |
|----|------|--|----|
| 1. | INT  | TRODUCTION   | 2  |
|    |      | FTWARE INSTALLATION AND REQUIREMENTS                 |    |
| 3. | USI  | ER INTERFACE DESCRIPTION WITH AN EXAMPLE APPLICATION | 5  |
|    | 3.1  | THE DREAM WIZARD                                     | e  |
|    | 3.2  | PRE-PROCESSING DATA                                  | 25 |
|    | 3.3  | RANGE OF DREAM APPLICABILITY AND LIMITATIONS         | 31 |
| 4  | RE   | FERENCES   | 32 |

## **List of Figures**

| Figure 1: Beta Example Schematic  | 5  |
|---|----|
| Figure 2: DREAM UI Flow Chart.  | 6  |
| Figure 3: DREAM Welcome Window.   | 7  |
| Figure 4: Input Directory Selection.  | 8  |
| Figure 5: Porosity definition.  | 9  |
| Figure 6: Scenario Weighting Window.  | 10 |
| Figure 7: Leakage Criteria Window.  | 11 |
| Figure 8: DREAM visualization tool  | 13 |
| Figure 9: Detection Criteria Window.  | 14 |
| Figure 10: Configuration Settings.  | 15 |
| Figure 11: Exclude Locations by Node.   | 16 |
| Figure 12: Google Map and Toolbar.  | 17 |
| Figure 13: Run Optimization Window.   | 18 |
| Figure 14: Tested configurations during optimization                                    | 19 |
| Figure 15: Algorithm performance plots.   | 20 |
| Figure 16: TTD performance for up to 6 sensors.   | 22 |
| Figure 17: Detection performance for up to 6 sensors.                                   | 22 |
| Figure 18: TTD performance for up to 12 sensors and 1,000 configurations                | 23 |
| Figure 19: TTD performance for up to 12 sensors and 1,000 configurations                | 23 |
| Figure 20: TTD performance for up to 12 sensors and 10,000 configurations               | 24 |
| Figure 21: TTD performance for up to 12 sensors and 10,000 configurations               | 24 |
| Figure 22: Best monitoring configurations for up to 12 sensors and 1,000 configurations | 24 |
| Figure 23: DREAM File Converter Tool.   | 25 |
| Figure 24: HDFView of DREAM input file structure.                                       | 30 |
| List of Tables  |    |
|   |    |
| Table 1: Supplementary Software   |    |
| Table 2: Leakage Criteria Inputs  |    |
| Table 3: Triggering Nodes   | 12 |

## Acronyms, Abbreviations, and Symbols

| Term   | Description   |  |  |  |  |
|--|---|--|--|--|--|
| Acronyms/Abbreviations                           |   |  |  |  |  |
| 3-D  | Three-dimensional                                   |  |  |  |  |
| ASCII  | American Standard Code for Information Interchange  |  |  |  |  |
| CO <sub>2</sub>                                  | Carbon dioxide                                      |  |  |  |  |
| DOE  | U.S. Department of Energy                           |  |  |  |  |
| DREAM Designs for Risk Evaluation and Management |   |  |  |  |  |
| ETFD   | Estimated time to first detection                   |  |  |  |  |
| GUI  | Graphical user interface                            |  |  |  |  |
| HDF5   | Hierarchical data format                            |  |  |  |  |
| NETL   | National Energy Technology Laboratory               |  |  |  |  |
| NRAP   | National Risk Assessment Partnership                |  |  |  |  |
| NUFT   | Nonisothermal, Unsaturated Flow and Transport model |  |  |  |  |
| PC   | Personal computer                                   |  |  |  |  |
| PNNL   | Pacific Northwest National Laboratory               |  |  |  |  |
| RCSP   | Regional Carbon Sequestration Partnership           |  |  |  |  |
| STOMP  | Subsurface Transport Over Multiple Phases model     |  |  |  |  |
| TTD  | Time to detection                                   |  |  |  |  |
| USDW   | Underground source of drinking water                |  |  |  |  |
| Units/Symbols                                    |   |  |  |  |  |
| cm   | centimeter  |  |  |  |  |
| L  | Liter   |  |  |  |  |
| mg   | Milligram   |  |  |  |  |
| mg/L   | Milligrams per liter                                |  |  |  |  |
| min  | Minute  |  |  |  |  |
| mol  | Mole  |  |  |  |  |
| Pa   | Pascal  |  |  |  |  |
| S  | Second  |  |  |  |  |
| wk   | Week  |  |  |  |  |
| yr   | Year  |  |  |  |  |

## Acknowledgments

This work was completed as part of the National Risk Assessment Partnership (NRAP) project. Support for this project came from the U.S. Department of Energy's (DOE) Office of Fossil Energy's Crosscutting Research program. The technical effort described in this report was performed in support of the DOE National Energy Technology Laboratory's (NETL) ongoing research. The author wishes to acknowledge Robert Romanosky and Traci Rodosta (NETL Strategic Center for Coal) and Regis Conrad and Mark Ackiewicz (DOE Office of Fossil Energy) for programmatic guidance, direction, and support.

In addition, special thanks to Jason Gastelum, Art Sadvosky, and Diana Bacon for their early contributions to DREAM development.

## **ABSTRACT**

This manual provides a brief guide for the use of the Designs for Risk Evaluation and Management (DREAM) tool, developed as part of the effort to quantify the risk of geologic storage of carbon dioxide (CO<sub>2</sub>) under the U.S. Department of Energy's (DOE) National Risk Assessment Partnership (NRAP). DREAM is an optimization tool created to identify optimal monitoring schemes that minimize the time to first detection of CO<sub>2</sub> leakage from a subsurface storage formation. DREAM optimizes across user-provided output from subsurface leakage simulations. While DREAM was developed for CO<sub>2</sub> leakage scenarios, it is applicable to any subsurface leakage simulation of the same output format.

The DREAM tool is comprised of three main components: (1) a Java wizard used to configure and execute the simulations, (2) a visualization tool to view the domain space and optimization results, and (3) a plotting tool used to analyze the results. A secondary Java application is provided to aid users in converting common American Standard Code for Information Interchange (ASCII) output data to the standard DREAM hierarchical data format (HDF5).

DREAM employs a simulated annealing approach that searches the solution space by iteratively mutating potential monitoring schemes built of various configurations of monitoring locations and leak detection parameters. This approach has proven to be orders of magnitude faster than an exhaustive search of the entire solution space. This user's manual illustrates the program graphical user interface (GUI), describes the tool inputs, and includes an example application.

## 1. <u>INTRODUCTION</u>

The Designs for Risk Evaluation and Management (DREAM) tool was developed at Pacific Northwest National Laboratory (PNNL) as a tool to assist in determining optimal placement of monitoring devices in order to detect carbon dioxide (CO<sub>2</sub>) leakage from storage formations. The National Risk Assessment Partnership (NRAP) identified the need for a user-friendly tool with the ability to design site-specific risk-based monitoring strategies. NRAP is a U.S. Department of Energy (DOE) project tasked with conducting risk and uncertainty analysis in the areas of reservoir performance, natural leakage pathways, wellbore integrity, groundwater protection, monitoring, and systems level modeling. Monitoring designs produced by DREAM may be used by stakeholders and regulators to assist in compliance with regulatory requirements developed to ensure the safety of U.S. underground sources of drinking water (USDWs) and ultimately lead to safe, permanent geologic CO<sub>2</sub> storage. Further, site-specific designs generated by DREAM allow for potential generalizations to other sites, as well as comparisons between risk-based monitoring designs and monitoring designs for other purposes, if such designs should already exist (e.g., from a Regional Carbon Sequestration Partnership [RCSP] site).

DREAM optimizes across user-provided output from subsurface leakage simulations, with the objective of configuring monitoring schemes that minimize time to first detection of user-specified leakage indicators. DREAM employs a simulated annealing approach that searches the solution space by iteratively mutating potential monitoring schemes built of various configurations of monitoring locations and leak detection parameters. Leakage indicators may include pressure, temperature, gas saturation, dissolved component concentrations, pH, or any other quantity that can be modeled in a physics-based simulation of porous media fluid transport. These variables are constrained by location and budget, where placement must be in a user-defined suitable location and the budget includes both the number of monitoring devices and the number of wells. The simulated annealing approach has proven to be orders of magnitude faster than an exhaustive search of the entire solution space (Yonkofski et al., 2016). While DREAM was designed with applications to CO<sub>2</sub> leakage in mind, this flexibility allows DREAM to be used to determine optimal monitoring locations for any contaminant transport scenario.

Development of DREAM began in 2012 as part of the NRAP project. This code version began development in 2013 during the third-generation of the NRAP project. Subsequent versions, when completed, will add flexibility in the choice of the objective function (e.g. cost instead of time to detection), allow for a broader range of input formats, and improve existing capabilities (e.g. computational speed).

This manual illustrates the program graphical user interface (GUI), describes the tool inputs, and includes an example application. For a synopsis of the theoretical basis of DREAM, see Yonkofski et al. (2016).

## 2. SOFTWARE INSTALLATION AND REQUIREMENTS

Before DREAM installation, the most recent release of the Java Platform, Standard Edition Development Kit must be installed (<u>jre-8u102-windows-x64.exe</u> is the most recent as of August 2016).

It is also recommend that the user install the most recent version of HDFView for reading converted hierarchical data format (HDF5). Download locations for these files are shown in Table 1.

The DREAM tool has been released within the NRAP Tools Beta Test Release Collaborative Workspace on the NETL Energy Data Exchange (EDX).

1. Sign into EDX with an account that belongs to the workspace and download the DREAM tool at: https://edx.netl.doe.gov/dataset/nrap-tools-beta-testing-collection

The DREAM content is separated into three parts (due to the large file sizes of parts 2 and 3) as seen in the link above:

- (DREAM) Part 1 of 3: Contains the DREAM tool for Windows and Mac (separated into different folders based on operating system) and a "BetaTest\_Results" folder that provides results files for users to compare their example runs to.
- (DREAM) Part 2 of 3: Contains the BetaTest1\_hdf5.zip Test File (6.0 GB File)
- (DREAM) Part 3 of 3: Contains the BetaTest2\_hdf5.zip Test File (7.0 GB File)

### **PC Instructions:**

- 2. Select the "(DREAM) Part 1 of 3" link and download the zip file to your computer's hard drive.
- 3. Also download all compressed files under "(DREAM) Part 2 of 3 and (DREAM) Part 3 of 3". These include BetaTest1 hdf5.zip, BetaTest2\_hdf5.zip.
- 4. Extract the all compressed folders to the same parent directory.
- 5. Double click the "DREAM\_v1.jar" file found within the extracted DREAM\_v1 folder. This will launch the DREAM tool application. If the .jar file does not readily run, launch the "runDREAM.bat" file.

Note: If the runDREAM.bat fails to run, the user may need to update the path to the 64 bit Java version by editing the .bat file.

## **Mac Instructions:**

- 2. Select the "(DREAM) Part 1 of 3" link and download the zip file to your computer's hard drive.
- 3. Also download all compressed files under ""(DREAM) Part 2 of 3 and (DREAM) Part 3 of 3". These include BetaTest1\_hdf5.zip, BetaTest2\_hdf5.zip.
- 4. Extract the all compressed folders to the same parent directory.

5. Double click "runDREAM.command" found within the extracted DREAM\_v1 folder. This will launch the DREAM tool application.

**Table 1: Supplementary Software** 

| Software     | Website   |  |  |
|--------------|---|--|--|
| Java SE 8    | http://www.oracle.com/technetwork/java/javase/downloads/jre8-downloads-<br>2133155.html |  |  |
| HDFView 2.13 | https://www.hdfgroup.org/products/java/release/download.html#download                   |  |  |

## 3. USER INTERFACE DESCRIPTION WITH AN EXAMPLE APPLICATION

The DREAM tool is comprised of three main components: 1) a Java wizard used to configure and execute the optimization algorithm; 2) a file converter to translate leakage simulation output from American Standard Code for Information Interchange (ASCII) data to the standard DREAM HDF5; and 3) a results directory to plot best configurations and analyze the performance of the iterative procedure.

The example will guide the user through the DREAM Java Wizard User Interface (UI) while demonstrating an application to 19 randomly selected leakage realizations generated for an NRAP Second-Generation Reduced-Order Model study (Carroll et al., 2013). For context, a brief summary of the model set up from Carroll et al. (2013) is provided.

The NUFT numerical model (Figure 1) was comprised of a 3-D heterogeneous domain that represented an unconsolidated aquifer consisting of layers of permeable sand and impermeable shale layers based on the lithology of the High Plains Aquifer. The aquifer was underlain by a hypothetical  $CO_2$  storage reservoir and both aquifer and reservoir were penetrated by leaking wells. The model domain encompassed  $10 \text{ km} \times 5 \text{ km} \times 240 \text{ m}$  with 1 to 5 leakage sources per realization placed at a depth of 198 m based on 48 known well locations. The wells were a mix of domestic, feedlot, irrigation, public water supply and oil field water supply wells. Leakage rates were varied based on uncertainties in hydrogeologic properties.

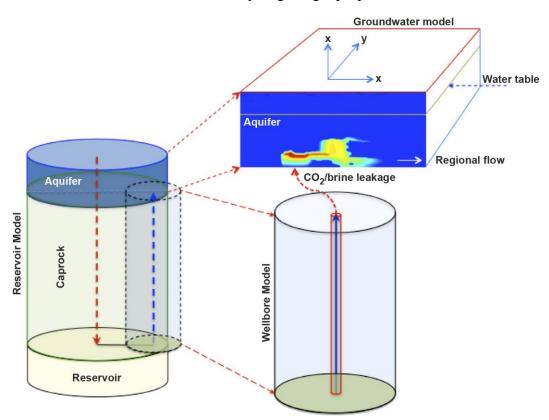


Figure 1: Beta Example Schematic. Figure from Carroll et al. (2013) shows the links between reservoir, well leakage, and aquifer models using the alluvium case study. Links between reservoir, well leakage, and the carbonate case study are identical.

The included beta test files contain output data at specified times across all nodes representing hypothetical leakage scenarios from the  $CO_2$  storage formation. DREAM will be used to optimize monitoring configurations that minimize the estimated time to first detection (TTD) of  $CO_2$  leakage.

## 3.1 THE DREAM WIZARD

For best results, the DREAM UI should be completed in the sequence with which windows progress (Figure 2).

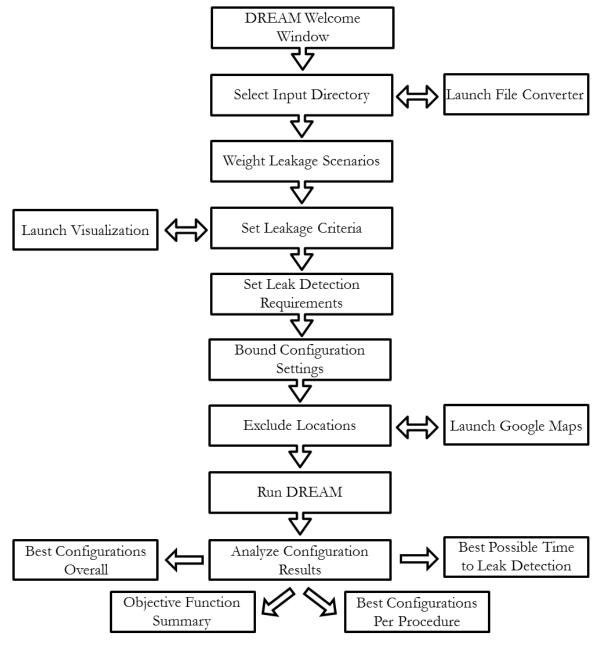


Figure 2: DREAM UI Flow Chart.

## 3.1.1 DREAM Welcome Window

The DREAM Welcome page (Figure 3) provides links to the DREAM Tool User's Manual and literature detailing the technical development and theory behind the DREAM simulated annealing algorithm (Yonkofski et al., 2016). It is recommended the user review the cited paper to thoroughly understand the objective function, decision variables and constraints, as well as the process DREAM performs to approach the global minima.

A conceptual figure shows a theoretical DREAM application, with a leak from subsurface storage entering an overlying aquifer through an abandoned wellbore. While the user must provide the leakage scenario, the inserts visualize three of many monitoring configurations that DREAM generates and assesses during the iterative procedure.

To continue to the example application, press *Next*.




Figure 3: DREAM Welcome Window.

## 3.1.2 Input Directory Selection

The "Input Directory" window (Figure 4) prompts the user to select the directory containing HDF5 files for all leakage simulations to be included. The current version of DREAM supports the "Sensor placement optimization tool: CCS9.1" and the model option, "Individual Sensors 2.1." The dropdown boxes provided were built with future versions of DREAM in mind, where the objective function parameters will be more flexible. The HDF5 files must be directly available within the directory provided; they may not be in subdirectories within the root directory.

If the user has not converted ASCII simulation output data into DREAM readable HDF5 input files, the *Launch Converter* button will open a pop-up file converter tool. Read more about the DREAM HDF5 Converter tool in Section 3.2.

Note: The information icon in this and all subsequent windows provides brief instructions to those using DREAM without the manual.

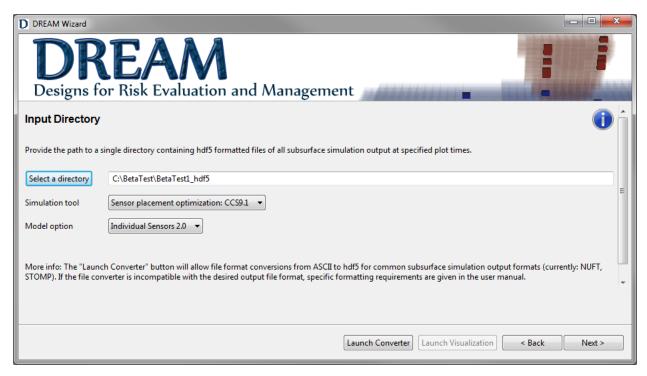

**Figure 4: Input Directory Selection.** 

To begin the example application, consolidate the BetaTest1\_hdf5 and BetaTest2\_hdf5 directories to BetaTest\_hdf5. These directories were split for efficiency in uploading and downloading. From the DREAM Input Directory Window, navigate to the "BetaTest\_hdf5" directory. Select *Next*.

## 3.1.3 Porosity

A pop up window will prompt the user to specify material porosities. This property is not typically included in simulation output files but is useful in calculating the volume of aquifer degraded. The user may apply a homogenous porosity to the entire model, specify zonal porosities, or load the porosities from a text file, in which they are ordered by node count.

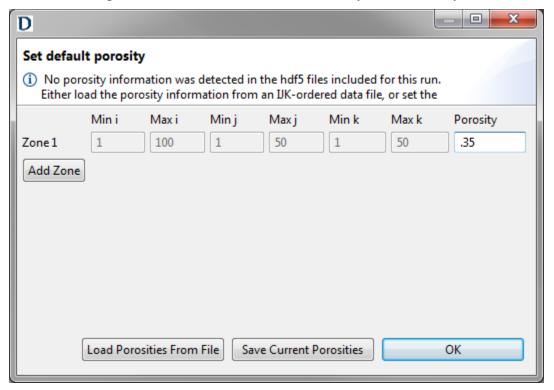


Figure 5: Porosity definition.

Apply a homogenous porosity of 0.35 for the current example and select *OK*.

## 3.1.4 Scenario Weighting

The Scenario Weighting window (Figure 6) lists realizations by the naming convention used in the leakage simulation input files. If the user has prior knowledge of leakage probabilities or would like to choose to weight leakage scenarios unequally, they may do so in the *Scenario Weighting* window. By default all scenarios are considered equally likely.

DREAM works to minimize the average time to leakage detection across all scenarios. Weighting scenarios non-uniformly has the effect of altering the average time to detection; therefore, monitoring configurations that solve for scenarios with higher weights will be given priority while DREAM iterates over monitoring configurations. Ultimately, results show both the unweighted and weighted times to detection to provide the user with an understanding of the impact scenario weighting has on each particular problem.

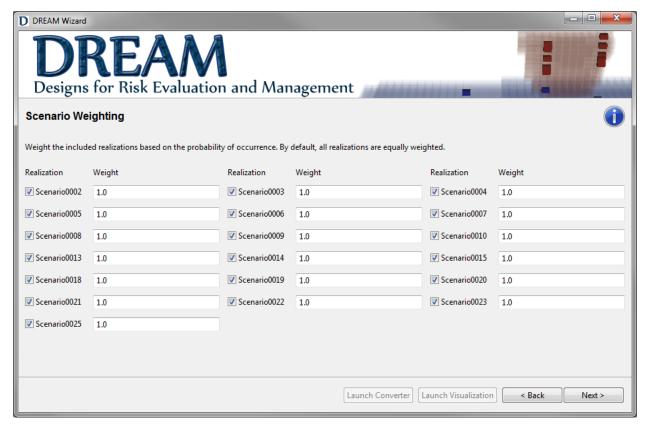


Figure 6: Scenario Weighting Window.

For the example problem choose to leave all scenarios equally weighted, assuming they are all equally likely.

Select Next.

## 3.1.5 Leakage Criteria for Monitoring Parameters

After reading through the directory of realization outputs, DREAM will generate a table of monitoring parameters that the user can select (Figure 76). These parameters are specific to the included realizations. The selected monitoring parameters will be used in the optimization algorithm. The user may label what technology they will use to monitor each selected parameter in the *Alias for Monitoring Technology* box and then provide a realistic cost per monitoring technology if it is known; if not, the costs should be set equal. The detection criteria may be specified based on the relative change from initial conditions, absolute change from initial conditions, or a maximum or minimum threshold. If relative delta, absolute delta, or maximum threshold is selected, the given value and all values above are treated as detecting a leak. If minimum threshold is selected, that value and all values below are treated as detecting a leak.

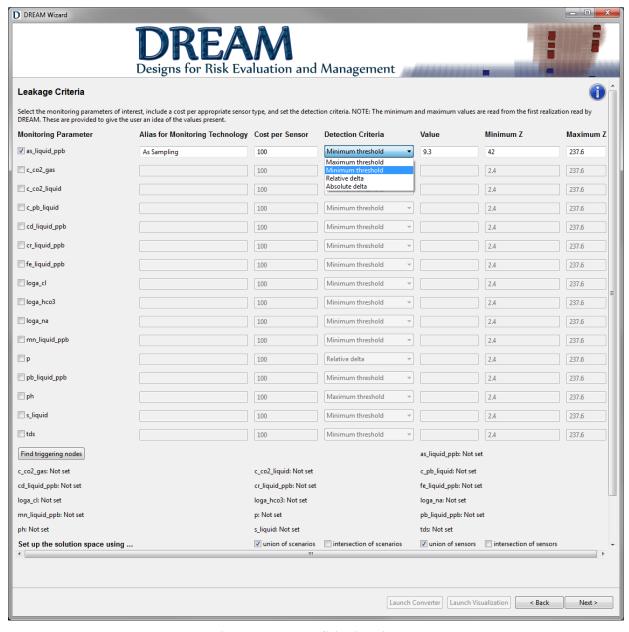


Figure 7: Leakage Criteria Window.

For the example problem, select the listed monitoring parameters and enter in the following "no impact" criteria taken from Last et al. (2013) and Carroll et al. (2014) relating to arsenic, cadmium, chromium, lead, pH, and total dissolved solids in the High Plains Aquifer (Table 2).

**Table 2: Leakage Criteria Inputs** 

| Monitoring Parameter | Cost per<br>Sensor | Detection Criteria | Value | Minimum Z | Maximum Z |
|----------------------|--------------------|--------------------|-------|-----------|-----------|
| as_liquid_ppb        | 100                | Minimum Threshold  | 9.3   | 42        | 237.6     |
| cd_liquid_ppb        | 100                | Minimum Threshold  | 0.25  | 42        | 237.6     |
| cr_liquid_ppb        | 100                | Minimum Threshold  | 3.9   | 42        | 237.6     |
| pb_liquid_ppb        | 100                | Minimum Threshold  | 0.63  | 42        | 237.6     |
| рН                   | 100                | Maximum Threshold  | 7     | 42        | 237.6     |
| tds                  | 100                | Minimum Threshold  | 1300  | 42        | 237.6     |

Leave the solution space settings to the union of scenarios and union of sensors. The *Find triggering node* button will read through all the realization files and select the nodes (or elements) that meet the detection criteria. The set of nodes where leakage is present is referred to as the "solution space". These values are then filtered through a Pareto optimality scheme (Pardalos et al., 2008) which identifies optimal monitoring locations within the solution space.

Select *Find triggering nodes*. The following values should appear next to each selected parameter type at the bottom of the page (Table 3).

Note: While the *Find triggering nodes* button is working, a red box appears to the right of the progress bar. Pressing this box cancels the process before completion. This may be necessary if unphysical or poorly chosen values are entered for leakage criteria, sending DREAM into an excessively long process.

**Table 3: Triggering Nodes** 

| Monitoring Parameter | Optimal Locations |  |  |
|----------------------|-------------------|--|--|
| as_liquid_ppb        | 3                 |  |  |
| cd_liquid_ppb        | 9                 |  |  |
| cr_liquid_ppb        | 12                |  |  |
| pb_liquid_ppb        | 11                |  |  |
| рН                   | 34                |  |  |
| tds                  | 11                |  |  |

These values indicate the number of optimal locations found within the leakage solution space. To visualize both the leakage solution space and the optimal locations, press "Launch Visualization" (Figure 8).

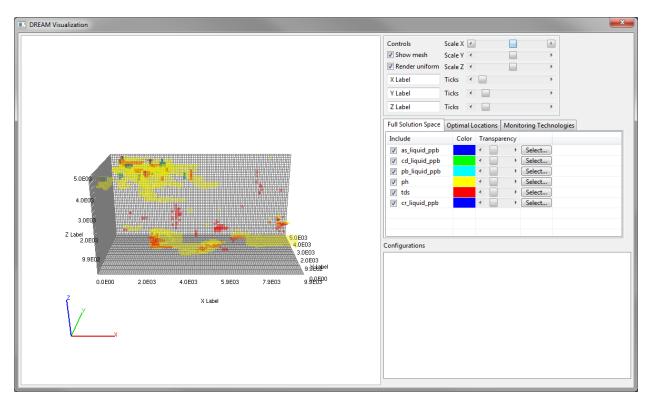


Figure 8: DREAM visualization tool.

The DREAM Visualization Tool displays the full solution space (every leakage location), as well as the optimal locations. The user may toggle between views and change which parameters to display and what the color and transparency of the parameter should be. The user may zoom in and out with the mouse or scale the grid with the "Scale X/Y/Z" sliders. The monitoring technologies tab will become useful once the DREAM tool is run.

Select Next.

## 3.1.6 Minimum Triggered Monitoring Devices

The *Detection Criteria* window (Figure 97) prompts the user to specify how many monitoring devices must be triggered to signify a leak has occurred. A leak may be defined in two ways. DREAM reads input provided as an "or" statement, where it will determine a leak has occurred if (1) the specified value for any specific parameter has been met *or* (2) the overall number of locations exceeding the detection criteria is equal to or greater than the provided value. This allows for various combinations of monitoring device configurations to be tested.

Enter "1" for all minimum required number of sensors for all fields. Select Next.

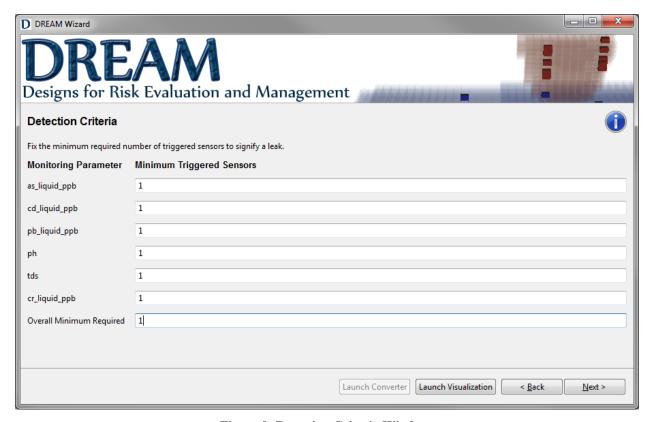


Figure 9: Detection Criteria Window.

## 3.1.7 Configuration Settings

The configuration settings specify hard constraints for the optimization algorithm (Figure 108). The solutions may not exceed the maximum cost or the maximum number of wells defined. The user must be careful to provide a high enough cost to meet the specified minimum requirements given in the previous window. The "Add starting point" field is the coordinate where the algorithm begins searching for new monitoring device placement. The *Use average time to detection* checkbox averages the time to first detection of leakage across all realizations using the same monitoring configuration.

Note: DREAM assumes that wells span the entire z-axis of simulation grids and multiple detection devices may be placed within a single well.

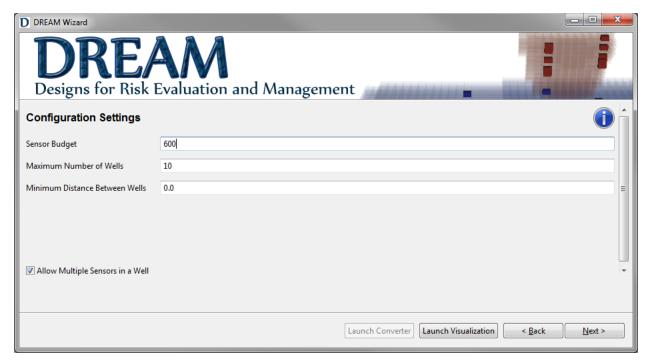


Figure 10: Configuration Settings.

On the Configuration Settings page, enter "600" for the initial sensor budget. This strategy begins testing with the most conservative budget. Enter "6" for the maximum number of wells. For this example we will not set a constraint for the minimum distance between monitoring wells; however, the user may specify this based on known limitations. Leave the "Allow Multiple Sensors in a Well" selected. Select *Next*.

## 3.1.8 Exclude Locations

The user may need to exclude (x, y) locations from the monitoring configuration that are infeasible or unapproved. This window allows the user to manually deselect nodes that should not be used in the optimization algorithm (Figure 119).

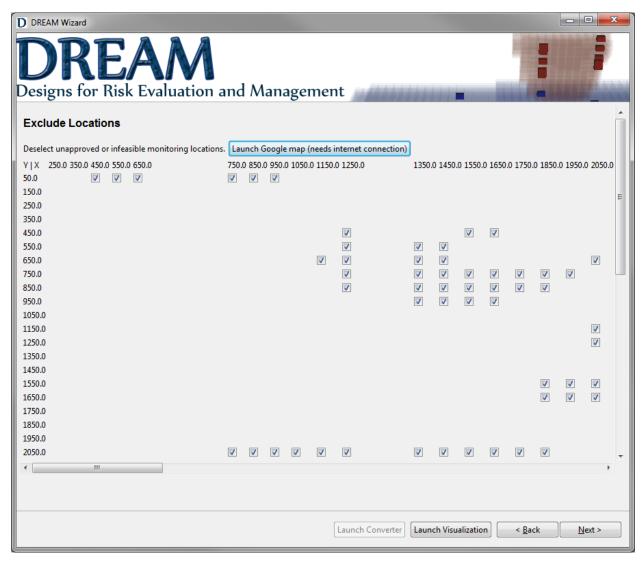


Figure 11: Exclude Locations by Node.

If the user has an internet connection, the *Launch Google map* button will pop-up a map (Figure 1210) which the user can use to overlay the realization grid over the location of interest. The input coordinates should align with the upper left corner of the simulation grid (in plan view). The toolbar allows the user to zoom in or out and pivot the google map to achieve the appropriate view. Optimal locations that exceed one or more of the threshold criteria are shown in gray and may be de-selected by clicking on the (x, y) location.

Note: The image shown in Figure 1210 is an arbitrary demonstration of this feature. It is *not* a location above a current CO<sub>2</sub> storage site.

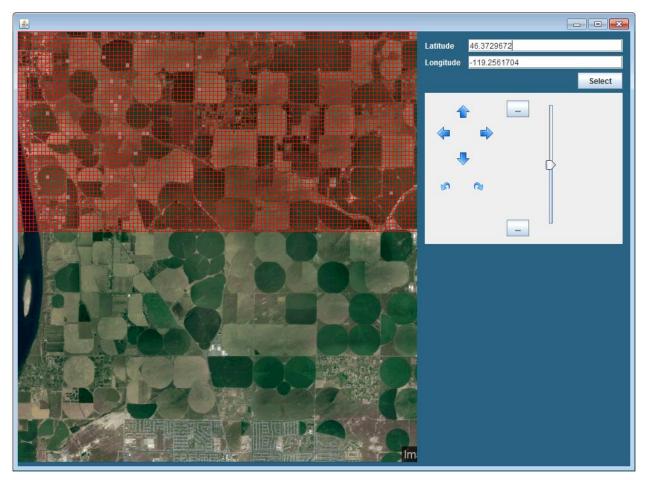


Figure 12: Google Map and Toolbar.

Leave all the 'grayed out' boxes and exit out of this window. Select Next

## 3.1.9 Run DREAM

The *Run DREAM* window provides a summary of the scenario set and user-specified constraints. After reviewing run summary, the user must provide an output directory to store the resulting .csv files (Figure 1311).

The Best TTD Possible per Sensor-type button allows the user to generate a summary of the average times to detection for all scenarios and all sensor-types individually and as a whole. The "Weighted percent of scenarios that are detectable" is also presented, giving the user an idea for how many of the leakage scenarios read into DREAM had leaks detected according to the leakage criteria specified. The algorithm behind this button assumes an unlimited budget and an unlimited number of wells to achieve this goal. In other words, a monitoring point is placed in every node in the solution space; therefore, the results give no indication of optimal monitoring configurations. The purpose of this button is to allow the user to have an understanding of the problem before running the iterative procedure. Results identify the best possible time to detection and highest percent of scenarios detecting a leak possible.

The *Run Iterative Procedure* button will run the simulated annealing optimization algorithm the number of times specified on the number of configurations specified.

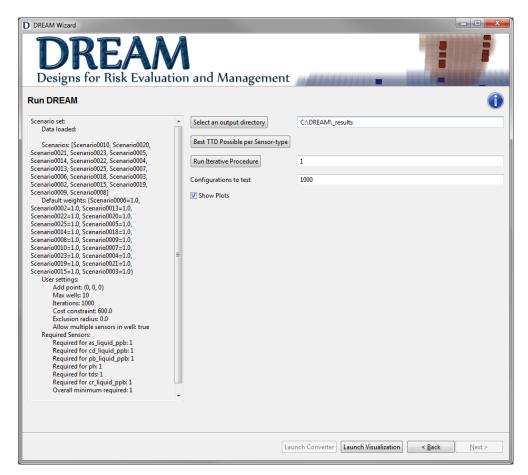


Figure 13: Run Optimization Window.

For the example problem, enter an output directory for the example results files then follow this progression:

- a. Choose *Best TTD Possible per Sensor-type* to view a summary of the lowest possible times to leakage detection. Compare your results to "best\_ttd\_table" found in BetaTest\_Results\_bak. Note the minimum time to leakage detection overall is 18.12 years and the weighted percent of scenarios that are detectable is 89.47%. These are the properties of the best possible configurations.
- b. Next, choose to run the procedure one time for 1,000 configurations. Select *Run Iterative Procedure*.

While DREAM is running, two pop-up windows display the optimization performance. One is the DREAM Visualization Tool, which dynamically updates to show the configurations being tested (Figure 1412).

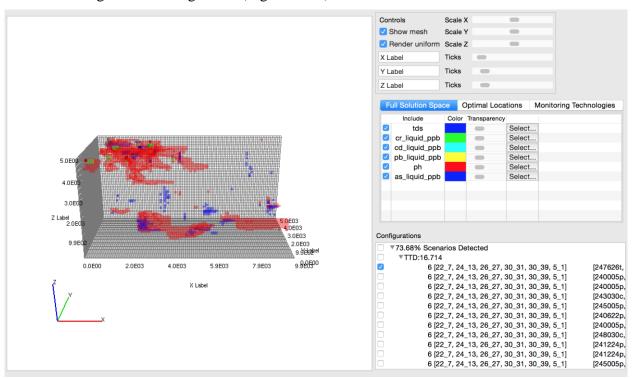


Figure 14: Tested configurations during optimization.

The second window shows the performance of the iteration procedure through four plots (Figure 1513). The upper-left plot shows the running first time to detection (TTD) of the newest configuration, for each simulated annealing iteration, or new monitoring configuration. The upper-right plot shows the running TTD of the best configuration, or configuration with the lowest TTD. The bottom-left plot shows the TTD of each realization, or scenario, across all configurations. The bottom-right plot shows the percent of realizations, or scenarios, in which the leak was detected as new configurations are being tested.

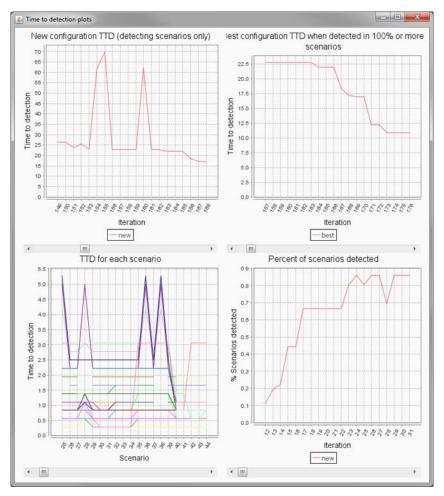


Figure 15: Algorithm performance plots.

Additionally, DREAM loads results files into the specified directory. The user can view .csv files summarizing the iteration procedure and results. These include:

## best\_configurations.csv

One of the most useful output files will be best\_configurations.csv, which provides the weighted and unweighted percent of scenarios where the leak was detected using the best configuration(s), weighted and unweighted average time to detection (TTD) across all successful scenarios, the range of TTD across all successful scenarios, the scenarios where the configuration(s) did not detect a leak, the cost of the well configuration, the volume of aquifer degraded at the time of detection and the monitoring parameter and sensor locations of the best configuration(s).

Note: The cost of the well configuration and volume of aquifer degraded are under development. Current cost estimates are hardwired to assume \$65 USD/ft well completion. The total length of each well spans from the surface to the deepest sensor location. These values are included to provide a ranking in circumstances where multiple configurations are identified with the same TTD.

Only detecting sensor locations are displayed. This is important to note in cases where the initial sensor budget is in excess of the number of sensors that actually detect.

## objective\_summary\_best.csv, objective\_summary\_current.csv, objective\_summary\_new.csv

These files provide summaries of each simulated annealing procedure performed. The iterations listed count the best, current, and new configurations tested. The respective weighted TTD and percent of scenarios detected are given so the user can visualize the algorithm performance.

## run\_0\_best.csv, run\_0\_current.csv, run\_0\_new.csv

These files provide summaries of the specific configurations tested during iterations. The first column is the iteration number, the second column is the TTD, and from the third column on, the node number and sensor type are given.

Note: There will likely be more than one configuration that provides the lowest TTD.

Open your results directory and compare your output files to those found in BetaTest\_Results\_6\_1\_1000\_bak.

Note: DREAM\_v1 is a special beta testing version where the random seeds usually included in the simulated annealing procedure have been removed in order to generate reproducible results.

c. The percent of scenarios where the leak was detected (found in best\_configurations.csv) is lower than the best possible (best\_ttd\_table.csv). Increase the iterative procedures to 10 to test a wider variety of configurations. Leave all else unchanged and close the current results files before re-running. Compare your new output files to those found in BetaTest\_Results\_6\_10\_1000\_bak.

Use the objective\_summary\_best.csv to make plots of Iterations vs. TTDs for each scenario and Iterations vs. % Scenarios Detected (Figure 1614 and Figure 1715).

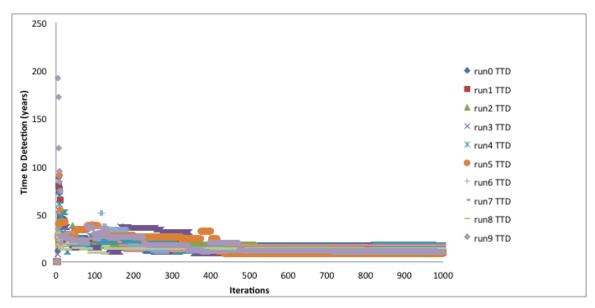


Figure 16: TTD performance for up to 6 sensors.

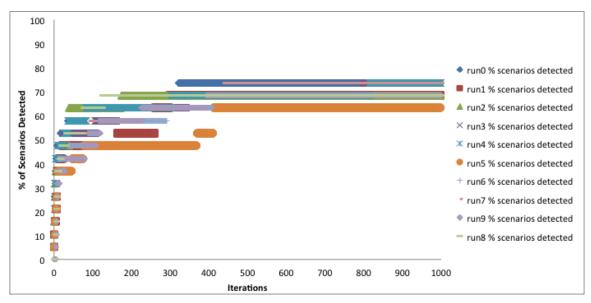


Figure 17: Detection performance for up to 6 sensors.

d. The percent of scenarios where the leak was detected is still lower than the best possible, Select *Back* twice and increase the sensor budget to 1200 and the maximum number of wells to 12 for more coverage of the domain. Select *Next* twice.

Update the output directory again. Choose to run the iterative procedure 10 times and test 1,000 configurations. Close the current results files before re-running. Compare your new output files to those found in BetaTest\_Results\_12\_10\_1000\_bak.

Use the objective\_summary\_best.csv to make new plots of Iterations vs. TTDs for each scenario and Iterations vs. % Scenarios Detected (Figure 2018 and Figure 2119).

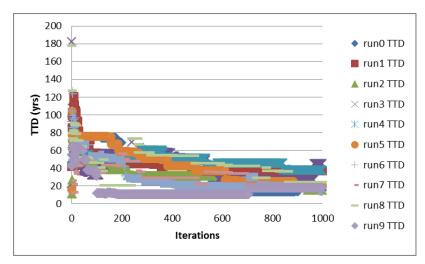


Figure 18: TTD performance for up to 12 sensors and 1,000 configurations.

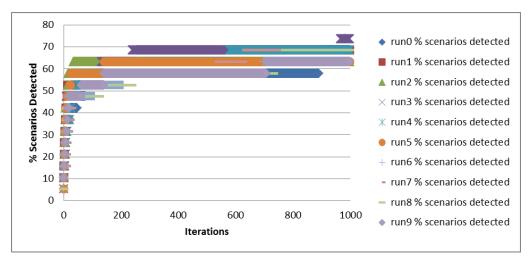


Figure 19: TTD performance for up to 12 sensors and 1,000 configurations.

e. The percent of scenarios where the leak was detected is significantly higher, but the performance plots (Figure 2018 and Figure 2119) show that a higher number of iterations are necessary for convergence. Increase the number of configurations tested to 10,000. Leave the number of iterative procedures at 10. Close the current results files before re-running.

Note: This step will likely take several minutes.

Compare your new output files to those found in BetaTest\_Results\_12\_10\_10000\_bak.

Use the objective\_summary\_best.csv to make new plots of Iterations vs. TTDs for each scenario and Iterations vs. % Scenarios Detected (Figure 2018 and Figure 2119).

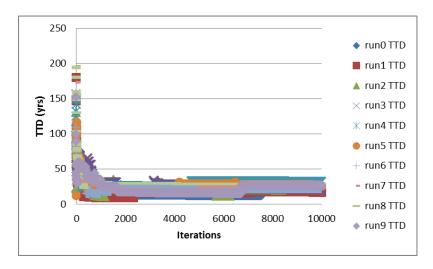


Figure 20: TTD performance for up to 12 sensors and 10,000 configurations.

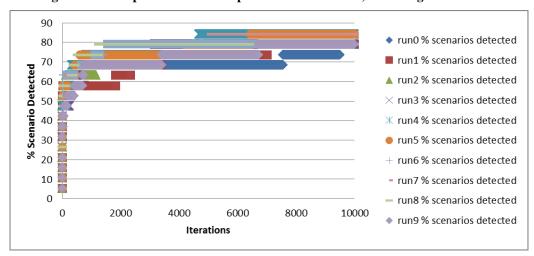


Figure 21: TTD performance for up to 12 sensors and 10,000 configurations.

The performance plots appear smooth and the 6 new solutions are all very close to the best possible solution. Configurations are ranked by "Cost of Well Configuration" (Figure 2220), where the top configurations require a shallower sampling configuration.

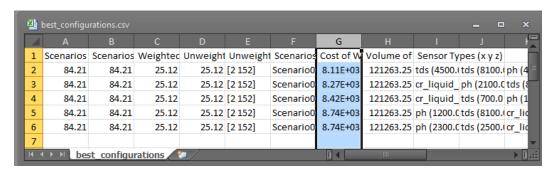


Figure 22: Best monitoring configurations for up to 12 sensors and 1,000 configurations.

## 3.2 PRE-PROCESSING DATA

DREAM comes with the DREAM HDF5 Converter tool (Figure 2321Error! Reference source not found.), which is pre-programmed to convert NUFT (Nonisothermal, Unsaturated Flow and Transport model; Nitao, 1998), STOMP (Subsurface Transport Over Multiple Phases model; White and Oostrom, 2000), and TECPLOT formatted output data to DREAM input files. The user must provide the directory containing the time plot files of all the realizations, or scenarios. Once the converter has translated all the ASCII files, the user is able to select the monitoring parameters of interest as well as the realizations and time steps of interest.

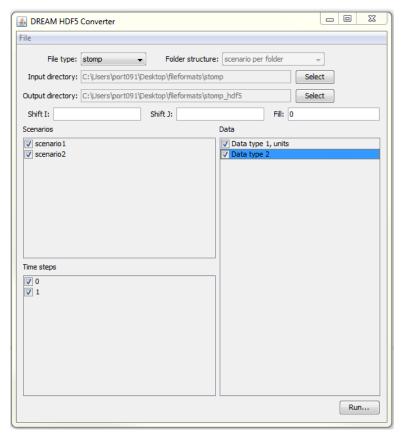


Figure 23: DREAM File Converter Tool.

## 3.2.1 STOMP Data

The DREAM file converter will accept most output types from STOMP. The required directory hierarchy is "input directory name\specific realizations\plot files". Detailed information follows.

#### **Folder Structure**

For STOMP output, a folder with sub folders is expected. Each subfolder contains all the data for a given scenario. Within the scenario folder there should be one file for each time step that contains data for all the variables. Each scenario needs to have the same number of time steps and the same set of variables:

```
stomp_output/scenario1/plot.1
stomp_output/scenario1/plot.2
stomp_output/scenario2/plot.1
stomp_output/scenario2/plot.2
```

## File Example: stomp\_output/scenario1/plot.1

This example file contains data for the first time step for the first scenario. XYZ data in STOMP is expected in x, then y, then z ordering. **Required** input are in bold, optional data is *italics*.

```
----- Beginning of File
Number of Time Steps =
Time = 1,yr
Number of X or R-Direction Nodes =
Number of Y or Theta-Direction Nodes =
Number of Z-Direction Nodes = 2
Number\ of\ Active\ Nodes=8
Number of Vertices = 8
X-Direction Nodal Vertices, m
01010101
12121212
01010101
12121212
01010101
12121212
01010101
12121212
Y-Direction Nodal Vertices, m
00110011
00110011
11221122
11221122
00110011
00110011
11221122
11221122
Z-Direction Nodal Vertices, m
```

00001111

0 0 0 0 1 1 1 1 0 0 0 0 1 1 1 1 1 1 1 1 2 2 2 2 1 1 1 1 2 2 2 2 1 1 1 1 2 2 2 2 2 1 1 1 1 2 2 2 2 Data type 1, units 1.2 1.2 1.2 6.3 1.2 1.2 1.2 1.2 Data type 2 4.5 4.5 4.5 4.5 4.5 4.5 4.5 4.5

----- End of File

## 3.2.2 NUFT/NTAB Data

The plot files must be sorted to directories containing like monitoring parameters across all realizations if the given plot files were generated by NUFT and given in NTAB format.

### **Folder Structure**

In this case, the directory hierarchy is "input directory name\plot files for like parameters across all simulations," and the converter tool must be used multiple times (once for each parameter of interest). The NUFT HDF5 plot files must then be manually consolidated to one directory for DREAM to read.

```
ntab/scenario1.data_type_1.ntab
ntab/scenario1.data_type_2.ntab
ntab/scenario2.data_type_1.ntab
ntab/scenario2.data_type_2.ntab
```

## File Example: ntab/scenario1.data\_type\_1.ntab

This file contains data for all time steps of data type 1. All data including x, y, z is cell centered. **Required** input are in bold, optional data is *italics*.

----- End of File

## 3.2.3 TECPLOT Data

If the user has plot files generated by another subsurface simulation code, it is recommended to reformat the plot file to fit an accepted ASCII format. TECPLOT formats are accepted due to their prevalent use in post-processing.

#### **Folder Structure**

For Tecplot output DREAM expects a single folder containing a TECPLOT file for each scenario. Each tecplot file is expected to contain all the time steps and all the data for that scenario. Each scenario needs to have the same number of time steps and the same set of variables.

tecplot/scenario1.tecplot tecplot/scenario2.tecplot

## File Example: tecplot/scenario1.tecplot

This file contains data for all time steps and all data types. XYZ are expected to be nodal and should be in z then y then x ordering. All data is expected to be cell centered. **Required** keys are in bold, optional data is *italics*.

```
----- Beginning of File
TITLE = "Scenario 1"
VARIABLES = "X, m" "Y, m" "Z, m" "data type 1" "data type 2"
ZONE T = "1, y", STRANDID = 1, SOLUTIONTIME = 1, NODES = 64, ELEMENTS = 8,
DATAPACKING = BLOCK, ZONETYPE = FEBRICK
VARLOCATION = ([4,5] = CELLCENTERED)
01010101
01010101
01010101
01010101
12121212
12121212
12121212
12121212
00110011
00110011
11221122
11221122
00110011
00110011
11221122
11221122
00001111
11112222
00001111
11112222
00001111
11112222
00001111
11112222
1.2 1.2 1.2 6.3 1.2 1.2 1.2 1.2
4.5 4.5 4.5 4.5 4.5 4.5 4.5
ZONE T = "2, y", STRANDID = 1, SOLUTIONTIME = 2, NODES = 64, ELEMENTS = 8,
DATAPACKING = BLOCK, ZONETYPE = FEBRICK VARSHARELIST = ([1,2,3]=1),
CONNECTIVITYSHAREZONE = 1
VARLOCATION = ([4,5] = CELLCENTERED)
1.2 1.2 6.3 6.3 1.2 1.2 1.2 6.3
4.5 4.5 4.5 4.5 4.5 4.5 4.5
 ------ End of File
```

## 3.2.4 HDF5 Output

For each of the three examples, DREAM will create a directory with the same name as the parent directory with an "\_hdf5" appended. Inside the directory will be an HDF5 file for each scenario that contains all the time steps for all the data types along with the grid information. All data will be cell centered.

## **Folder Structure:**

/stomp

/stomp\_hdf5/Scenario1.h5

/stomp\_hdf5/**Scenario2.h5** 

## File Example:

/stomp\_hdf5/Scenario1.h5

The hdf5 files can be viewed with HDFView (Figure 2422).

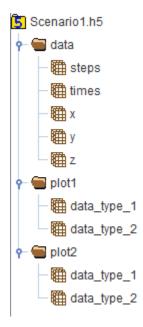


Figure 24: HDFView of DREAM input file structure.

Each scenario will contain an element called data that contains metadata about the scenario; the grids x, y, and z coordinates, the time steps and their matching times. There will also be an element for each time step containing data for each data type at that time step.


## 3.3 RANGE OF DREAM APPLICABILITY AND LIMITATIONS

DREAM version 1.0 is designed as a tool for additional analysis of subsurface  $CO_2$  leakage simulations; however, it can be applied to any dataset of the format described in Section 3.2. Users should take note of the following limitations:

- The only objective function solved is the time to first detection of leakage.
- There is only one monitoring device, or sensor, per monitoring parameter. Similarly, there is only one monitoring parameter associated with each monitoring device.
- The cost of monitoring devices is treated as a one-time fee, as opposed to incurring costs during operation.
- The total cost of the monitoring configuration is set as a hard constraint. Future versions will minimize cost as a secondary objective.
- The monitoring configuration results produced by the simulated annealing algorithm are a function of the realizations provided to DREAM as well as the number of iterative procedures and number of configurations tested. Users are encouraged to vary each of these parameters to determine the sensitivity of their results.
- DREAM was developed for use on PC; therefore the speed of the tool is dependent on the capability of the specific PC to handle the size of the datasets.
- The interactive map feature (Section 3.1.8) cannot work without an internet connection.

## 4. <u>REFERENCES</u>

- Carroll, S. A., Keating, E., Mansoor, K., Dai, Z., Sun, Y., Trainor-Guitton, W., Brown, C. and Bacon, D. Key factors for determining groundwater impacts due to leakage from geologic carbon sequestration reservoirs. *Intl. J. Greenhouse Gas Control* **2014**, 29, 153–168.
- Nitao, J. J. Reference manual for the NUFT flow and transport code, version 2.0; Lawrence Livermore National Laboratory, Livermore, CA, 1998.
- Pardalos, P.M., Migdalas, A. and Pitsoulis, L. eds., 2008. *Pareto optimality, game theory and equilibria* (Vol. 17). Springer Science & Business Media.
- White, M. D.; Oostrom M. STOMP, Subsurface transport over multiple phases, Version 2.0, Theory Guide; Pacific Northwest National Laboratory, Richland, WA, 2000.
- Yonkofski, C. M.; Gastelum, J. A.; Porter, E. A.; Rodriguez, L. R.; Bacon, D. H.; Brown, C. F. An optimization approach to design monitoring schemes for CO<sub>2</sub> leakage detection. *Intl. J. Greenhouse Gas Control* **2016**, *47*, 233–239.



This page intentionally left blank.



NRAP is an initiative within DOE's Office of Fossil Energy and is led by the National Energy Technology Laboratory (NETL). It is a multi-national-lab effort that leverages broad technical capabilities across the DOE complex to develop an integrated science base that can be applied to risk assessment for long-term storage of carbon dioxide (CO<sub>2</sub>). NRAP involves five DOE national laboratories: NETL, Lawrence Berkeley National Laboratory (LBNL), Lawrence Livermore National Laboratory (LLNL), Los Alamos National Laboratory (LANL), and Pacific Northwest National Laboratory (PNNL).

## Technical Leadership Team

Diana Bacon

Lead, Groundwater Protection Working Group Pacific Northwest National Laboratory Richmond, WA

Jens Birkholzer LBNL Lab Lead Lawrence Berkeley National Laboratory Berkeley, CA

Grant Bromhal
Technical Director, NRAP
Research and Innovation Center
National Energy Technology Laboratory
Morgantown, WV

Chris Brown
PNNL Lab Lead
Pacific Northwest National Laboratory
Richmond, WA

Susan Carroll
LLNL Lab Lead
Lawrence Livermore National Laboratory
Livermore, CA

Abdullah Cihan Lead, Reservoir Performance Working Group Lawrence Berkeley National Laboratory Berkeley, CA Tom Daley Lead, Strategic Monitoring Working Group Lawrence Berkeley National Laboratory Berkeley, CA

Robert Dilmore
NETL Lab Lead
Research and Innovation Center
National Energy Technology Laboratory
Pittsburgh, PA

Nik Huerta Lead, Migration Pathways Working Group Research and Innovation Center National Energy Technology Laboratory Albany, OR

Rajesh Pawar LANL Lab Lead Lead, Systems/Risk Modeling Working Group Los Alamos National Laboratory Los Alamos, NM

Tom Richard
Deputy Technical Director, NRAP
The Pennsylvania State University
State College, PA

Josh White Lead, Induced Seismicity Working Group Lawrence Livermore National Laboratory Livermore, CA



## Sean Plasynski

Executive Director Technology Development and Integration Center National Energy Technology Laboratory U.S. Department of Energy

## **Heather Quedenfeld**

Associate Director Coal Development and Integration National Energy Technology Laboratory U.S. Department of Energy

#### Traci Rodosta

Technology Manager Strategic Planning Science and Technology Strategic Plans and Programs National Energy Technology Laboratory U.S. Department of Energy

### Mark Ackiewicz

Director Division of Carbon Capture and Storage Office of Fossil Energy U.S. Department of Energy



#### NRAP Executive Committee

## **Cynthia Powell**

Executive Director Research and Innovation Center National Energy Technology Laboratory

#### Donald DePaolo

Associate Laboratory Director Energy and Environmental Sciences Lawrence Berkeley National Laboratory

## **Roger Aines**

Chief Energy Technologist Lawrence Livermore National Laboratory

#### Melissa Fox

Program Manager Applied Energy Programs Los Alamos National Laboratory

## **George Guthrie**

Chair, NRAP Executive Committee Earth and Environmental Sciences Los Alamos National Laboratory

#### **Alain Bonneville**

Laboratory Fellow Pacific Northwest National Laboratory

#### **Grant Bromhal**

Technical Director, NRAP Senior Research Fellow Research and Innovation Center National Energy Technology Laboratory









