# Tasmota-Plus Smart Relay & Switch Input







SS-1CHPro User Guide

Latest Version of this document available at:

https://github.com/UBWH/ubwh.github.io/blob/master/assets/UserGuides

## **Table of Contents**

Introduction	4
Common Smart Devices	4
Tasmota Smart Devices are different	5
Tasmota-Plus Smart Devices	6
Ping Watchdog	7
WAN Security	8
WiFi Signal Indicator	9
Clock Configuration Page	10
Hardware	11
Safety Warning	12
Power and Wiring	12
Requirements	13
Web Browser Interface	14
http:// Command Interface	15
Relay and Switch Interaction	16
Desired Behaviour 1: Relay follows Switch	16
Desired Behaviour 2: Relay/Switch Independent	16
Getting Started	17
Using the Web Interface	20
Standard Tasmota Web Interface	20
Tasmota-Plus Features	21
Firmware	21
Checking the installed version	21
Checking the latest released version	21
Updating	21
Initial Setup Mode	22
Factory Reset Procedure	22

Centralised Monitoring & Control	
WebGUI Interfaces	24
Specifications	26

#### Introduction

The SS-1CHPro is a WiFi connected Smart Relay & Switch, with **Tasmota-Plus**<sup>1</sup> installed.

The features of this product include:

- Tiny size: 43 mm diameter
- Very flexible power options
  - o DC:
    - 12V DC
    - 24-60V DC
  - o AC
- 110-240V AC
- WiFi connectivity giving remote control and monitoring.
- 1 x 16A **Relay**; Remote control & monitoring.
- 1 x **Switch input**; Remote control & monitoring.

#### **Common Smart Devices**

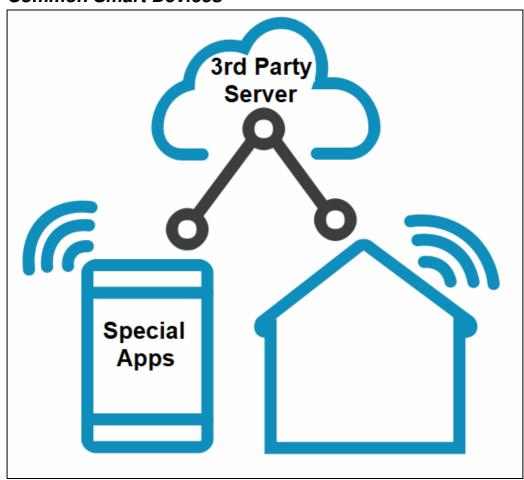


Figure 1 - Common Smart devices require a 3rd Party server, and special apps.

<sup>&</sup>lt;sup>1</sup> An enhanced version of Tasmota (https://tasmota.github.io/docs/)

Common Smart devices are designed to only work via the manufacturer's server and with special apps; the user never communicates directly with the device.

While this works well for home users, power users may prefer to directly control the device using a simple http:// (web) interface.

#### Tasmota Smart Devices are different

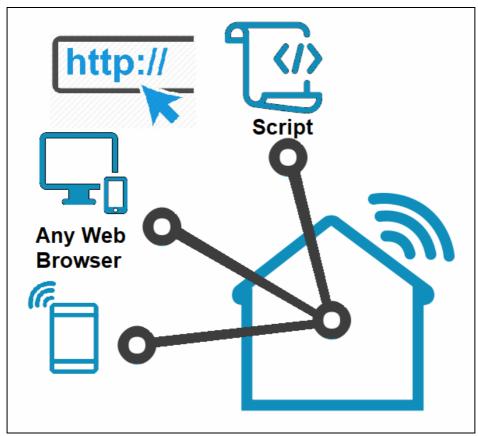


Figure 2 - Tasmota Smart devices can be directly controlled. No special app or server required.

Tasmota gives direct access to the device via simple http:// web access.

The value of this for power users is that the device can be controlled using:

- Web browser interface.
- http:// Command Interface. Ideal for control by external scripts.
- MQTT<sup>2</sup> & openHAB<sup>3</sup>
- others

**More information:** https://tasmota.github.io/docs/

2

<sup>&</sup>lt;sup>2</sup> https://mqtt.org

<sup>&</sup>lt;sup>3</sup> https://openhab.org

#### Tasmota-Plus Smart Devices




Figure 3 – Tasmota-Plus Smart devices have extra features

Tasmota-Plus adds the following features to standard Tasmota.

#### **Ping Watchdog**



There are 4 Ping Watchdogs for use. These are configured using the **Configure Watchdog** page.

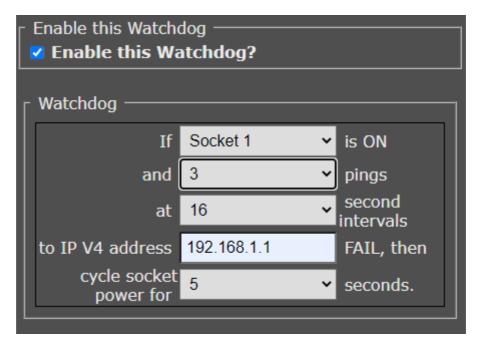

#### **Enable this Watchdog?**

Only enabled Watchdogs operate.

#### **Socket/Relay Number**

If the selected socket/relay is not ON, then the Watchdog is disabled.

#### Number of Pings at Interval (seconds)

The device will continuously send the requested number of Pings at the requested intervals. If ALL Pings fail, the Watchdog fires. If any of the Pings succeed, the Watchdog resets and starts a new cycle.

#### **IP V4 Address**

A valid IPV4 address must be entered here.

IPV6 addresses & host names are not supported.

#### **Cycle Seconds**

If the Watchdog fires (i.e. the Pings failed), then the specified socket/relay will be powered down for the requested seconds, then powered up.

#### **WAN Security**



Tasmota supports remote commands, with optional login credentials, that can query and change parameters. For example this URL will turn the power ON:

http://<LAN.device.ip.address>/cm?user=admin&password=joker&cmnd=power1%20on

If the device is to be managed remotely, a port forwarding firewall rule can be created. e.g. WAN Port 8080 → LAN.address.of.device:80


In this case the following URL will also work:

http://<WAN.ip.address>:8080/cm?user=admin&password=joker&cmnd=power1%20

However there is a new risk in that the credentials are sent in clear text.

**Tasmota-Plus** has a WAN Security feature where WAN requests not originating from a specified IP address can be blocked.

This is configured using the **Configure Other** page.

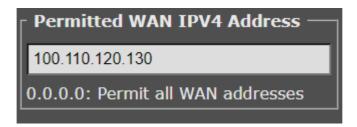

#### A request looks like:

http://<device.ip.address>/
http://<device.ip.address>/cm?cmnd=xxxxx
etc.

#### **Examples**

Permitted WAN IP4 Address	Requests from	Result
	•••	
0.0.0.0	Anywhere	Accepted
100.110.120.130	50.60.70.80	Rejected
	100.110.120.1	Rejected
	100.110.120.130	Accepted
	Local LAN	Accepted

## **WiFi Signal Indicator**



Much like a smart phone, **Tasmota-Plus** shows the received WiFi signal strength in the top-right corner of the Main page.




#### **Clock Configuration Page**




Standard Tasmota has no configuration page to set the parameters necessary to correctly calculate the local time, and local sunrise/sunset times.

Tasmota-Plus has a Configure Clock page as shown below.

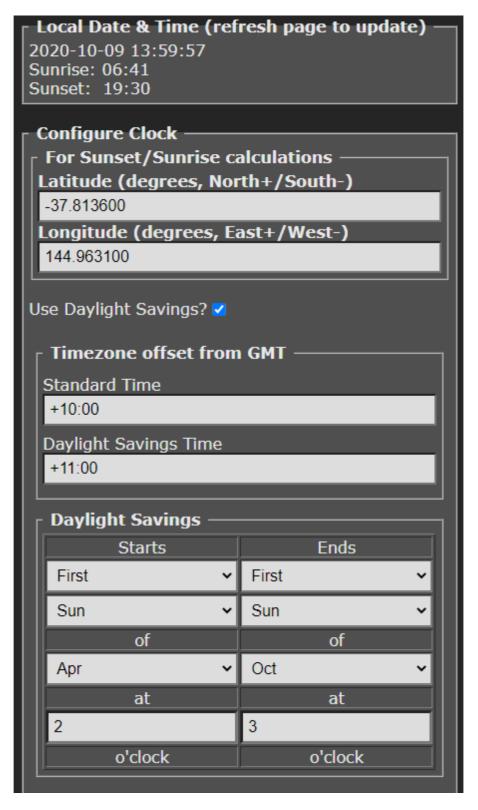

## **Hardware**

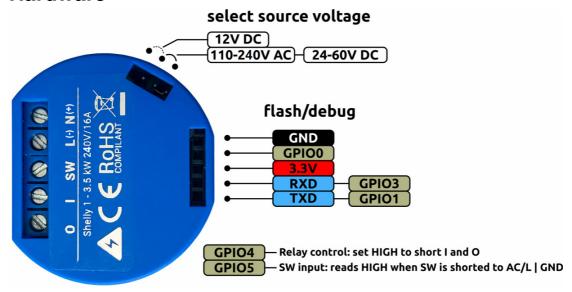

Source Voltage	12V DC	Connect 12V DC
Jumper		<ul><li>+ to "N(+)" terminal</li><li>- to "L(-)" terminal</li></ul>
		<b>Note</b> : Supply must be within this range: 10.8 to 13.2 V. Not suitable for direct connection to vehicle 12V system.
	24-60V DC 110-240V AC	Connect 24-60V DC
		<ul><li>+ to "N(+)" terminal</li><li>- to "L(-)" terminal</li></ul>
		OR
		Connect 110-240V AC
		<ul><li>Neutral to "N(+)" terminal</li><li>Live to "L(-)" terminal</li></ul>
flash/debug socket	Not used.	
Terminals	N(+)	Power Supply (See above)
	L(-)	Power Supply (See above)
	SW	Switch; wired between SW & L(-)
	1 & 0	Relay In/Out. These terminals are electrically isolated from all other connections

## **Safety Warning**




#### AC Power can kill.


Only licensed electricians to connect power if using AC power.

## **Power and Wiring**

This device can be powered by an AC or DC supply.

Relay Terminals: 0 & I Switch Terminals: SW & L Power Terminals: L(-) & N(+)

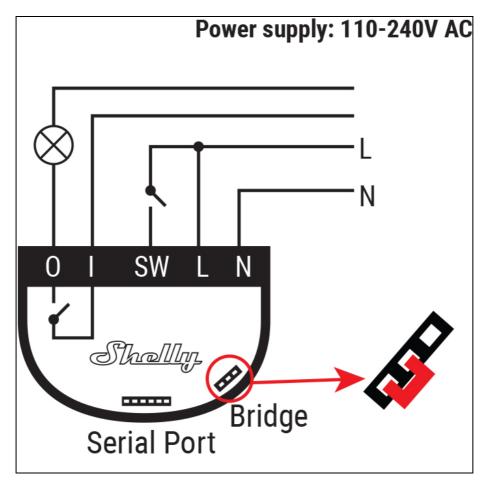

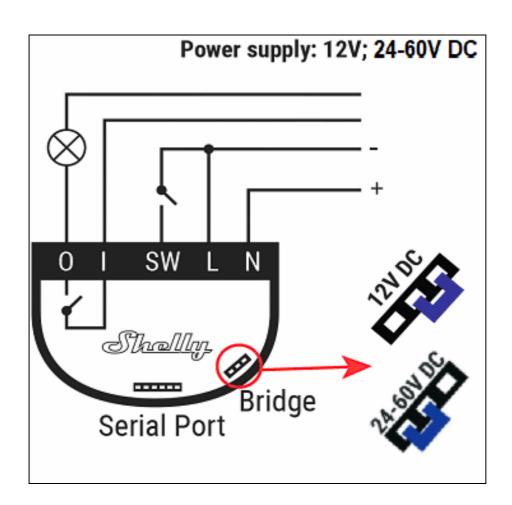

## Requirements

The SS-1CHPro requires:

#### Initial Setup

 A device with a Web Browser & WiFi interface, located close to the SS-1CHPro. A smart-phone, or tablet will usually be sufficient.

#### Operation

- A WiFi Access Point (AP) connected to the local LAN<sup>4</sup>, within the WiFi Range<sup>5</sup> of the SS-1CHPro.
- o A DHCP<sup>6</sup> server on the LAN.

## Ongoing Management

 Any device with a Web browser and connected to the same LAN as the SS-1CHPro.

<sup>&</sup>lt;sup>4</sup> Local Area Network. See https://en.wikipedia.org/wiki/Local\_area\_network

<sup>&</sup>lt;sup>5</sup> See Specifications, page 26

<sup>&</sup>lt;sup>6</sup> Dynamic Host Configuration Protocol: See https://en.wikipedia.org/wiki/Dynamic Host Configuration Protocol

#### **Web Browser Interface**

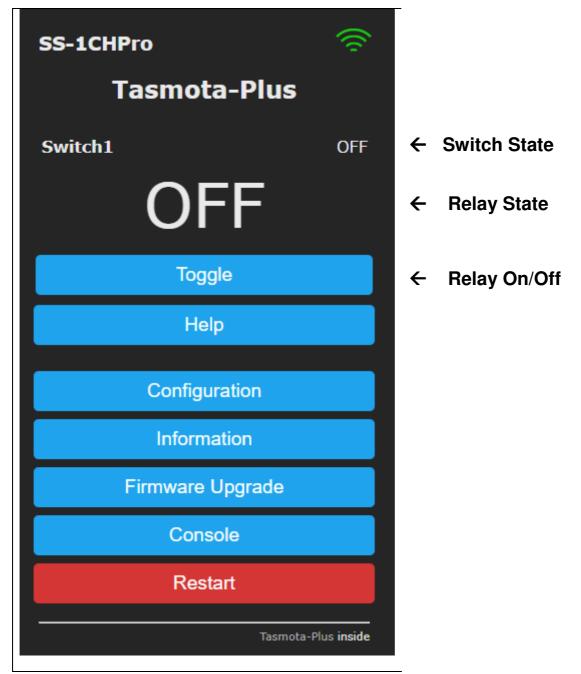


Figure 4 - The Tasmota Web Interface is available from any Web browser

Simply use any web browser to open the web page http://<device.ip.address>/

See documentation here: https://tasmota.github.io/docs/WebUI/

## http:// Command Interface



Simple commands as below will (e.g.) turn the Smart Plug ON.

Note: %20 in a URL = Space character

#### From Web Browser

http://<device.ip.address>/cm?cmnd=power1%20on

#### From Windows or Linux command/terminal window

curl http://<device.ip.address>/cm?cmnd=power1%20on

#### From a Windows Batch file (\*.bat file)

curl http://<device.ip.address>/cm?cmnd=power1%%20on

Note: need double % characters if in a batch file

#### From a PHP script (\*.php file)

```
file_get_contents(
    'http://<device.ip.address>/cm?cmnd=power1%20on');
```

#### You can retrieve the **Switch Status** as below.

http://<device.ip.address>/cm?cmnd=status%208

#### A typical JSON response looks like:

```
{
    "StatusSNS":{
        "Time":"2021-01-18T02:06:53",
        "Switch1":"OFF"}
}
```

#### More information:

https://tasmota.github.io/docs/Commands/#management

## **Relay and Switch Interaction**

The default behaviour is that the switch contacts directly control the relay. To change that behaviour, some simple commands can be issued from the Console.

Console

## Desired Behaviour 1: Relay follows Switch

This is the Factory Default behaviour

Console Commands	SetOption114 0
	switchmode 0

Switch transitions	Typical MQTT messages	
Open → Closed	stat/tasmota_xx/POWER = ON	
Closed → Open	stat/tasmota_xx/POWER = OFF	

#### Desired Behaviour 2: Relay/Switch Independent

Console Commands	SetOption114 1
	switchmode 1

Switch transitions	Typical MQTT messages
Open → Closed	stat/tasmota_xx/RESULT =
	{ "Switch1": { "Action": "ON" } }
Closed → Open	stat/tasmota_xx/RESULT =
	{"Switch1":{"Action":"OFF"}}

Relay transitions	Typical MQTT messages	
Open → Closed	stat/tasmota_xx/POWER = ON	
Closed → Open	stat/tasmota_xx/POWER = OFF	

## **Getting Started**

- 1. Power the SS-1CHPro.
- 2. When in Factory Default state, the device powers up in **Initial Setup Mode**<sup>7</sup>. Search for a WiFi network named tasmota\_xxxxxx-yyyy using your smartphone, tablet, ...



**NOTE**: If you do not see this WiFi network: Reset the device to Factory Default. See page 22.

- 3. Connect to that WiFi network. On connection to the network, you may get a warning that there is no Internet connection and be prompted to connect to a different network. Do not allow your mobile device to select a different network.
- 4. After you have connected to the Tasmota WiFi AP, open http://192.168.4.1 in a web browser on the smartphone (or whatever device you used). Depending on the phone, it will take you to the Tasmota configuration page automatically, or you will get a prompt to sign in to WiFi network or authorise. Tapping on the AP name should also open the configuration page (shown below).

<sup>&</sup>lt;sup>7</sup> See page 22.

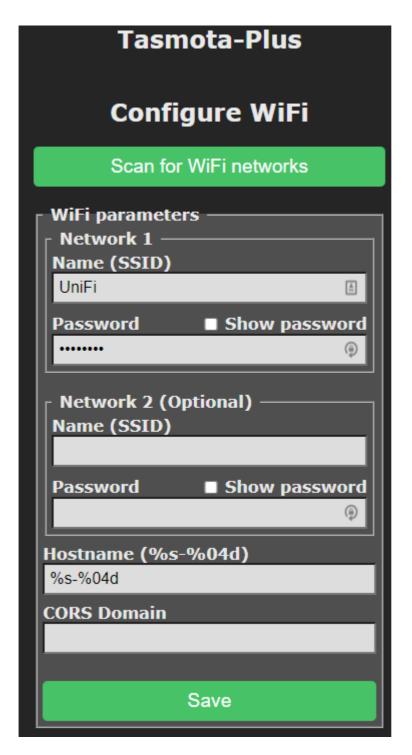


Figure 5 - A device in Factory Default mode displays this page.

#### On this page you can either:

- Scan for available WiFi networks. Select the right network from the list; or
- Manually Enter the **Network 1 Name (SSID)** your WiFi network name (case sensitive)

**Network 1 Password** - password for your WiFi network (Required) The password has to be under 32 characters and without special characters (e.g. asterisks) or white spaces

#### Recommended:

**Network 2 Name (SSID)** - alternative WiFi network SSID, in case connection to Network 1 fails.

**Network 2 Password** - password for your alternative WiFi network

Click the **Show password** checkbox(s) to see the password(s) you enter to ensure that it is correct and that your mobile device has not inadvertently capitalised the first letter nor autocorrected from what you entered. ~~**Double**~~ **Triple** check the WiFi credentials.

#### Click



The Tasmota-Plus device will restart and connect to your WiFi network. The tasmota\_xxxxx WiFi network will not longer exist, so your smartphone will automatically connect back to its normal WiFi network.

- 5. The next step is to learn the IP address assigned by your local DHCP server to your Tasmota device. There are a number of ways to do this. You will look for a device with a name similar to this.
  - i.e. tasmota-\_xxxxxx-yyyy
    - Your router Look in DHCP leases.
    - Fing for Android or iOS
      https://www.fing.com/products/




- Angry IP Scanner open source for Linux, Windows and Mac. https://angryip.org/
- SuperScan Windows only (free)
  https://sectools.org/tool/superscan/

6. Using your web browser, visit the device's IP address, as discovered in the step above.

NOTE: Do NOT visit https:// (no 's')

http://<device.ip.address>/

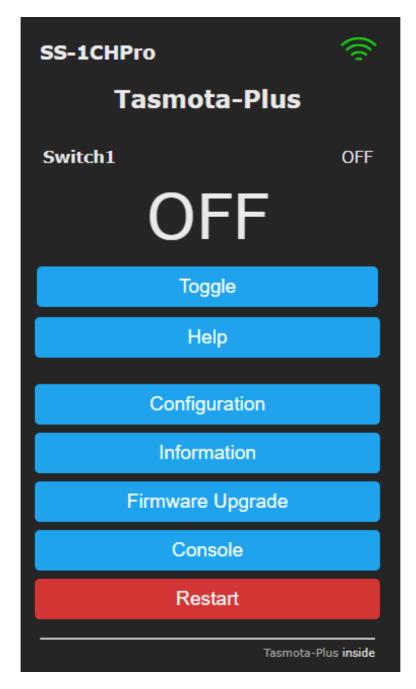

## **Using the Web Interface**

#### Standard Tasmota Web Interface

This is documented here:

https://tasmota.github.io/docs/WebUI/

#### Tasmota-Plus Features

See Tasmota-Plus Smart Devices page 6 in this document.

#### **Firmware**

From time to time, new Tasmota-Plus firmware may be released for your device.

#### Checking the installed version

Open the Information page and note the **Program Version** currently installed.




#### Checking the latest released version

Use your web browser to visit:

#### http://ubwh.com.au/tasmota/Tasmota-Plus/SS-1CHPro-ReleaseNotes.php

#### **Updating**

If you choose to update the firmware to the latest version, there are two methods.

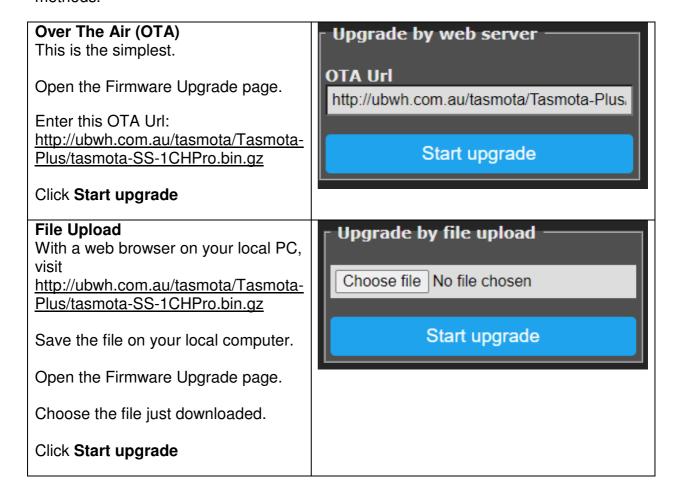

## **Initial Setup Mode**

When in this mode, the device can not connect to a WiFi network as is does not know which network to connect to.

The device WiFi is in Access Point (AP) mode, broadcasting with a WiFi Network name of *tasmota\_xxxxxx-yyyy* 

The device is in Initial Setup Mode when it is in **Factory Default** state.


## **Factory Reset Procedure**

When the settings have been cleared, the device is in *Initial Setup Mode* and can not connect to a WiFi network.

There are a number of ways to clear (reset) all settings and get the device into *Initial Setup Mode*.

- Web Browser Interface → Configuration
   Reset Configuration
- Power off the device.
   Repeat 6 times: Power on for 1 second, then power off.
   Power on the device.

## **Centralised Monitoring & Control**

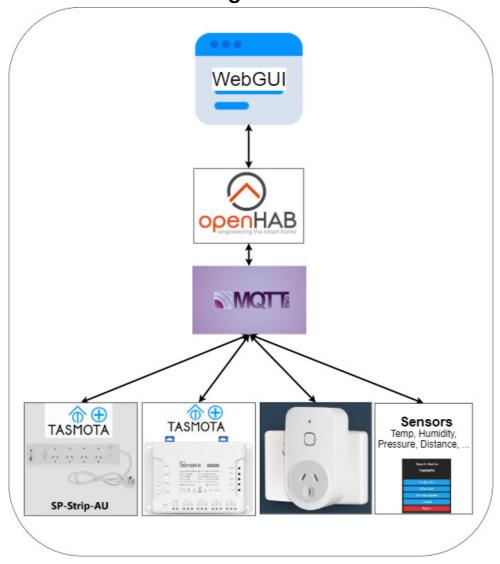

While this device can operate 100% stand-alone, it can also be monitored and controlled, along with multiple other devices, from a single management platform.

One popular management platform is **openHAB**<sup>8</sup>.

#### In simple terms:

- MQTT compatible devices (e.g. Tasmota) connect to an MQTT Broker<sup>9</sup>.
  - Status information sent TO the MQTT broker.
  - Commands received FROM the MQTT broker.

SS-1CHPro

<sup>&</sup>lt;sup>8</sup> https://www.openhab.org/ (Freeware, Open source)

<sup>&</sup>lt;sup>9</sup> https://mqtt.org/ (Freeware, Open source)

- openHAB also connects to the MQTT broker.
   Status information received FROM the MQTT broker.
   Commands sent TO the MQTT broker.
- Users interact via web pages (WebGUI)

#### **WebGUI Interfaces**

openHAB supports a number of User Interfaces (UIs). Each UI is highly customisable.

The images below show example visualisations.

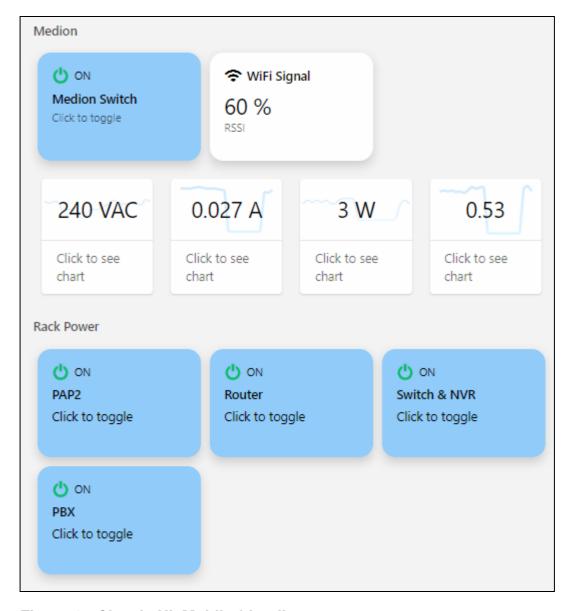


Figure 6 - Classic UI. Mobile friendly.



Figure 7 - Basic UI. Mobile friendly.

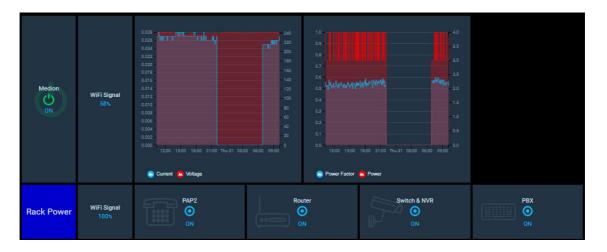


Figure 8 - Panel UI. Ideal for touch screens.

## **Specifications**

Working Voltage	DC: 10.8-13.2V
	DC: 24-60V
	AC: 110-240V
Max. RelayCurrent	16 A
Max. VA	3800 VA
Max. Power load	3800 W (real)
Switch Input	Open/Closed contacts detected
WiFi Standards	802.11b/g/n (2.4 GHz)
WiFi Range	No walls: 20m typical
	With walls: 10m typical.
Manufacturer's warranty	1 year
Hardware manufacturer	Shelly
Manufacturer's model	Shelly 1
Firmware	Tasmota-Plus (customised)
Works with http://	Yes
Works with MQTT/openHAB	Yes
Works with Amazon Alexa	No
Works with Google Assistant	No
Compliance	CE, ACMA, EESS