# Tasmota-Plus Smart Plug with Power Monitor







SP-Plug-AU User Guide

Latest Version of this document available at:

https://github.com/UBWH/ubwh.github.io/blob/master/assets/UserGuides

# **Table of Contents**

Introduction	3
Common Smart Devices	3
Tasmota Smart Devices	4
Tasmota-Plus Smart Devices	5
Ping Watchdog	6
WAN Security	7
WiFi Signal Indicator	8
Clock Configuration Page	9
Requirements	10
Web Browser Interface	11
http:// Command Interface	12
Getting Started	13
Using the Web Interface	17
Standard Tasmota Web Interface	17
Tasmota Plus Features	17
Firmware	18
Checking the installed version	18
Checking the latest released version	18
Updating	18
Factory Reset Procedure	19
Power Monitoring Calibration	19
Specifications	20

#### Introduction

The SP-Plug-AU is a WiFi connected Smart Plug, with **Tasmota-Plus**<sup>1</sup> installed.

#### **Common Smart Devices**

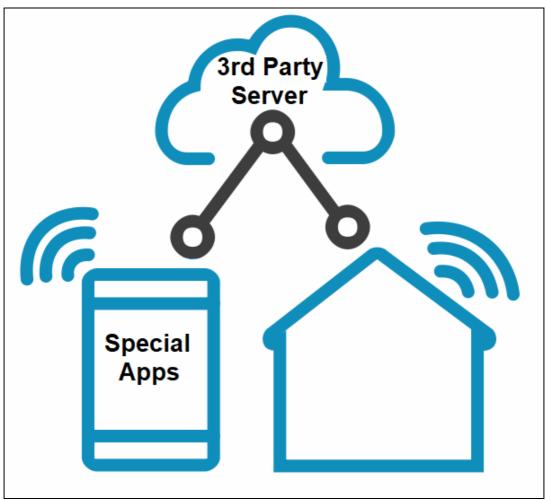


Figure 1 - Common Smart devices require a 3rd Party server, and special apps.

Common Smart devices are designed to only work via the manufacturer's server and with special apps; the user never communicates directly with the device.

While this works well for home users, power users may prefer to directly control the device using a simple http:// (web) interface.

<sup>&</sup>lt;sup>1</sup> An enhanced version of Tasmota (https://tasmota.github.io/docs/)

#### Tasmota Smart Devices

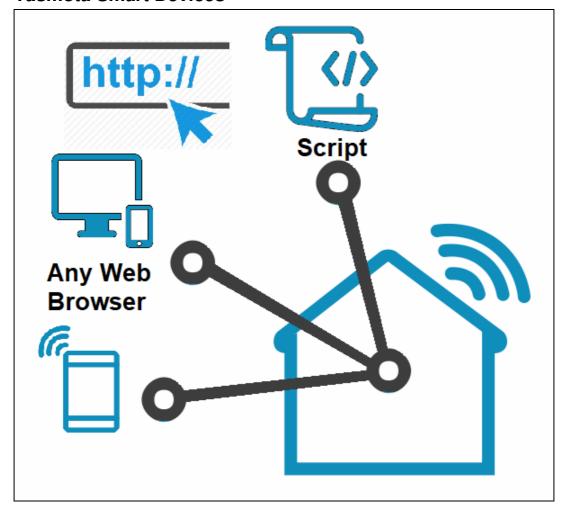


Figure 2 - Tasmota Smart devices can be directly controlled. No special app or server required.

Tasmota gives direct access to the device via simple http:// web access.

The value of this for power users is that the device can be controlled using:

- Web browser interface.
- http:// Command Interface. Ideal for control by external scripts.

**More information:** https://tasmota.github.io/docs/

## Tasmota-Plus Smart Devices




Figure 3 – Tasmota-Plus Smart devices have extra features

Tasmota-Plus adds the following features to standard Tasmota.

#### **Ping Watchdog**



There are 4 Ping Watchdogs for use. These are configured using the **Configure Watchdog** page.

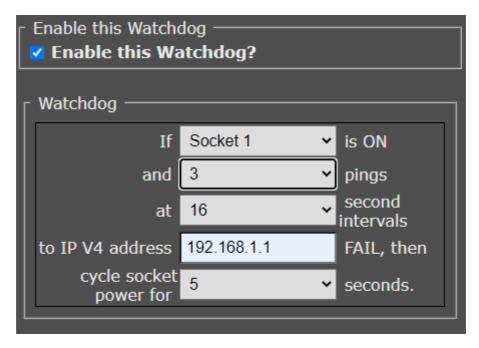

## **Enable this Watchdog?**

Only enabled Watchdogs operate.

#### **Socket Number**

If the selected socket is not ON, then the Watchdog is disabled.

### Number of Pings at Interval (seconds)

The device will continuously send the requested number of Pings at the requested intervals. If ALL Pings fail, the Watchdog fires. If any of the Pings succeed, the Watchdog resets and starts a new cycle.

#### **IP V4 Address**

**Cycle Seconds** 

A valid IPV4 address must be entered here. IPV6 addresses & host names are not supported.

#### ·

If the Watchdog fires (i.e. the Pings failed), then the specified socket will be powered down for the requested seconds, then powered up.

#### **WAN Security**



Tasmota supports remote commands, with optional login credentials, that can query and change parameters. For example this URL will turn the power ON:

http://<LAN.device.ip.address>/cm?user=admin&password=joker&cmnd=power1%20on

If the device is to be managed remotely, a port forwarding firewall rule can be created. e.g. WAN Port 8080 → LAN.address.of.device:80


In this case the following URL will also work:

http://<WAN.ip.address>:8080/cm?user=admin&password=joker&cmnd=power1%20

However there is a new risk in that the credentials are sent in clear text.

**Tasmota-Plus** has a WAN Security feature where WAN requests not originating from a specified IP address can be blocked.

This is configured using the **Configure Other** page.

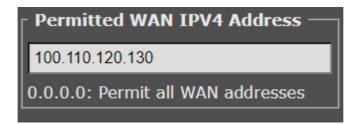

#### A request looks like:

http://<device.ip.address>/
http://<device.ip.address>/cm?cmnd=xxxxx
etc.

#### **Examples**

Permitted WAN IP4 Address	Requests from	Result
0.0.0.0	Anywhere	Accepted
100.110.120.130	50.60.70.80	Rejected
	100.110.120.1	Rejected
	100.110.120.130	Accepted
	Local LAN	Accepted

## WiFi Signal Indicator



Much like a smart phone, **Tasmota-Plus** shows the received WiFi signal strength in the top-right corner of the Main page.




#### **Clock Configuration Page**



Standard Tasmota has no configuration page to set the parameters necessary to correctly calculate the local time, and local sunrise/sunset times.

Tasmota-Plus has a Configure Clock page as shown below.

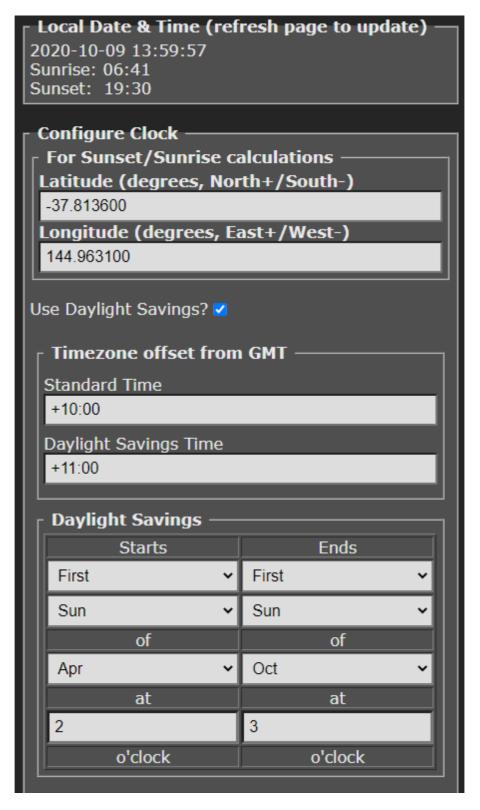

## Requirements

The SP-Plug-AU requires:

#### Initial Configuration

 A device with a Web Browser & WiFi interface, located close to the SP-Plug-AU. A smart-phone, or tablet will usually be sufficient.

#### Operation

- A WiFi Access Point (AP) connected to the local LAN<sup>2</sup>, within the WiFi Range<sup>3</sup> of the SP-Plug-AU.
- o A DHCP<sup>4</sup> server on the LAN.

## • Ongoing Management

Any device with a Web browser and connected to the LAN.

\_

<sup>&</sup>lt;sup>2</sup> Local Area Network. See https://en.wikipedia.org/wiki/Local\_area\_network

<sup>&</sup>lt;sup>3</sup> See Specifications, page 20

<sup>&</sup>lt;sup>4</sup> Dynamic Host Configuration Protocol: See https://en.wikipedia.org/wiki/Dynamic\_Host\_Configuration\_Protocol

## **Web Browser Interface**

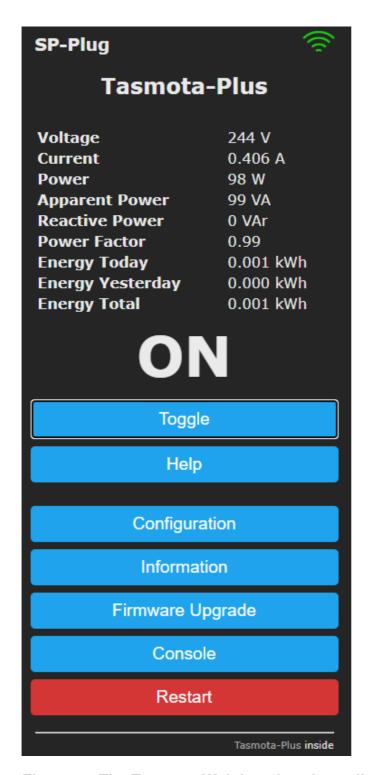


Figure 4 - The Tasmota Web Interface is available from any Web browser

Simply use any web browser to open the web page http://<device.ip.address>/

See documentation here: https://tasmota.github.io/docs/WebUI/

## http:// Command Interface



Simple commands as below will (e.g.) turn the Smart Plug ON.

Note: %20 in a URL = Space character

#### From Web Browser

http://<device.ip.address>/cm?cmnd=power1%20on

#### From Windows or Linux command/terminal window

curl http://<device.ip.address>/cm?cmnd=power1%20on

#### From a Windows Batch file (\*.bat file)

curl http://<device.ip.address>/cm?cmnd=power1%%20on

Note: need double % characters if in a batch file

#### From a PHP script (\*.php file)

```
file_get_contents(
    'http://<device.ip.address>/cm?cmnd=power1%20on');
```

#### You can retrieve the power monitoring status as below.

http://<device.ip.address>/cm?cmnd=status%208

#### A typical JSON response looks like:

#### More information:

https://tasmota.github.io/docs/Commands/#power-monitoring

## **Getting Started**

- 1. Plug the SP-Plug-AU into a 240V AC power socket and apply power.
- 2. Search for a WiFi network named tasmota\_xxxxxx-yyyy using your smartphone, tablet, ...



**NOTE**: If you do not see this WiFi network: Reset the device to Factory Default. See page 19.

- Connect to that WiFi network. On connection to the network, you may get a warning that there is no Internet connection and be prompted to connect to a different network. Do not allow your mobile device to select a different network.
- 4. After you have connected to the Tasmota WiFi AP, open http://192.168.4.1 in a web browser on the smartphone (or whatever device you used). Depending on the phone, it will take you to the Tasmota configuration page automatically, or you will get a prompt to sign in to WiFi network or authorise. Tapping on the AP name should also open the configuration page (shown below).

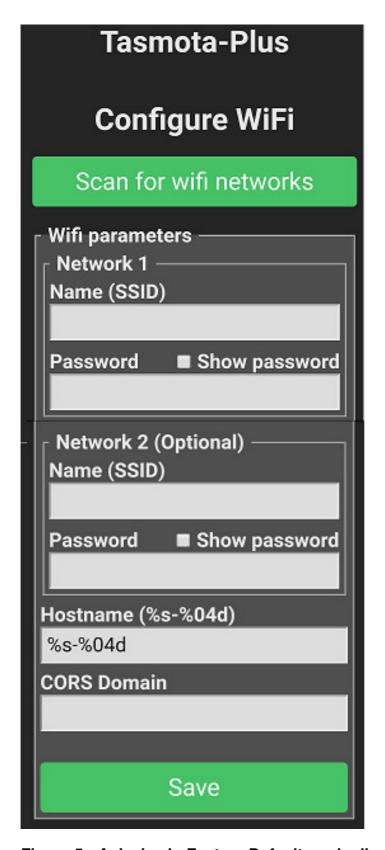


Figure 5 - A device in Factory Default mode displays this page.

#### On this page you can either:

- Scan for available WiFi networks. Select the right network from the list; or
- Manually Enter the Network 1 Name (SSID) your WiFi network name (case sensitive)

**Network 1 Password** - password for your WiFi network (Required) The password has to be under 32 characters and without special characters (e.g. asterisks) or white spaces

#### Recommended:

**Network 2 Name (SSID)** - alternative WiFi network SSID, in case connection to Network 1 fails.

**Network 2 Password** - password for your alternative WiFi network

Click the **Show password** checkbox(s) to see the password(s) you enter to ensure that it is correct and that your mobile device has not inadvertently capitalised the first letter nor autocorrected from what you entered. ~~**Double**~~ **Triple** check the WiFi credentials.

#### Click



The Tasmota-Plus device will restart and connect to your WiFi network. The tasmota\_xxxxx WiFi network will not longer exist, so your smartphone will automatically connect back to its normal WiFi network.

- 5. The next step is to learn the IP address assigned by your local DHCP server to your Tasmota device. There are a number of ways to do this. You will look for a device with a name similar to this.
  - i.e. tasmota-\_xxxxxx-yyyy
    - Your router Look in DHCP leases.
    - Fing for Android or iOS https://www.fing.com/products/




- Angry IP Scanner open source for Linux, Windows and Mac. https://angryip.org/
- SuperScan Windows only (free)
  https://sectools.org/tool/superscan/

6. Using your web browser, visit the device's IP address, as discovered in the step above.

NOTE: Do NOT visit https:// (no 's')

http://<device.ip.address>/

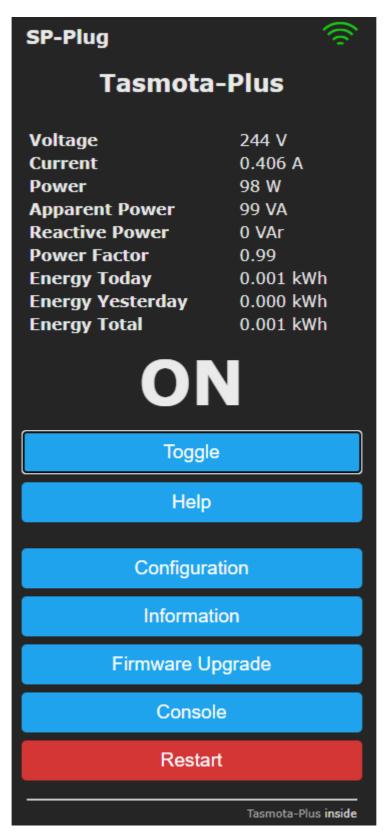

# **Using the Web Interface**

## Standard Tasmota Web Interface

This is documented here:

https://tasmota.github.io/docs/WebUI/

#### Tasmota Plus Features

See Tasmota-Plus Smart; page 5 in this document.

#### **Firmware**

From time to time, new Tasmota-Plus firmware may be released for your device.

#### Checking the installed version

Open the Information page and note the **Program Version** currently installed.




## Checking the latest released version

Use your web browser to visit:

#### http://ubwh.com.au/tasmota/Tasmota-Plus/SP-Plug-ReleaseNotes.php

#### **Updating**

If you choose to update the firmware to the latest version, there are two methods.

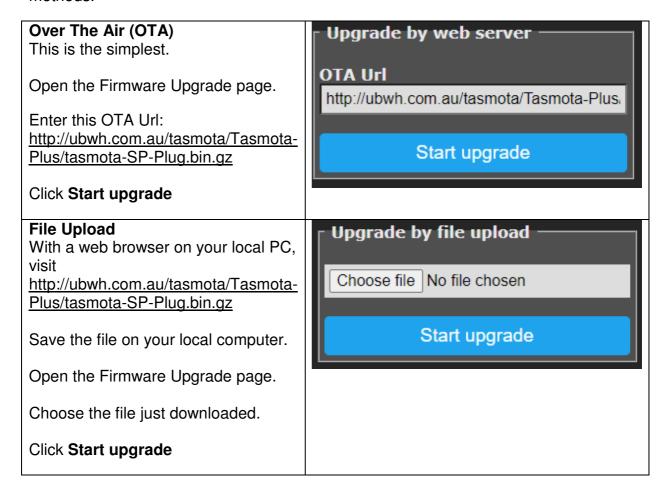

## **Factory Reset Procedure**

When the settings have been cleared, the device can not connect to a WiFi network, so it starts up as a WiFi Access Point (AP) in WiFi setup mode (see Getting Started, page 13).

There are a number of ways to clear (reset) all settings.

- Web Browser Interface → Configuration
   Reset Configuration
- 2. Press and hold the button on the device for 45 seconds, then release.
- 3. Power off the device.

  Repeat 6 times: Power on for 1 second, then power off.

  Power on the device.

## **Power Monitoring Calibration**

As delivered, and after a Factory Reset, the power monitoring values (Volts, Current, Power, ...) are not fully calibrated and may be off by a few percent.

User calibration is possible. See this page:

https://tasmota.github.io/docs/Power-Monitoring-Calibration/

# **Specifications**

<u>- opoomoutiono</u>		
Working Voltage	240 VAC	
Max. Current	10 A	
Max. VA	2400 VA	
Max. Power load	2400 W (real)	
Power Monitoring Values	AC Volts (V)	
_	AC Current (A)	
	AC Power	
	real (W)	
	reactive (VA)	
	total (VA)	
	Cumulative Energy	
	today (kWh)	
	yesterday (kWh)	
	total (kWh)	
	Power Factor	
Power Monitoring Accuracy		
- Factory Default	+/- 2%	
- User Calibrated	+/- 0%	
WiFi Standards	802.11b/g/n (2.4 GHz)	
WiFi Range	No walls: 20m	
	With walls: Less than 20m	
Manufacturer's warranty	1 year	
Hardware manufacturer	Kogan	
Manufacturer's model	KASPEMHA	
Firmware	Tasmota-Plus (customised)	
Works with http://	Yes	
Works with Amazon Alexa	No	
Works with Google Assistant	s with Google Assistant No	