Antennas and Propagation

Chapter 5



Introduction

- An antenna is an electrical conductor or system of conductors
 - Transmission radiates electromagnetic energy into space
 - Reception collects electromagnetic energy from space
- In two-way communication, the same antenna can be used for transmission and reception



Radiation Patterns

- Radiation pattern
 - Graphical representation of radiation properties of an antenna
 - Depicted as two-dimensional cross section
- Beam width (or half-power beam width)
 - Measure of directivity of antenna
- Reception pattern
 - Receiving antenna's equivalent to radiation pattern



Types of Antennas

- Isotropic antenna (idealized)
 - Radiates power equally in all directions
- Dipole antennas
 - Half-wave dipole antenna (or Hertz antenna)
 - Quarter-wave vertical antenna (or Marconi antenna)
- Parabolic Reflective Antenna



Antenna Gain

- Antenna gain
 - Power output, in a particular direction, compared to that produced in any direction by a perfect omnidirectional antenna (isotropic antenna)
- Effective area
 - Related to physical size and shape of antenna

4

Antenna Gain

Relationship between antenna gain and effective area

$$G = \frac{4\pi A_e}{\lambda^2} = \frac{4\pi f^2 A_e}{c^2}$$


- G =antenna gain
- A_e = effective area
- f = carrier frequency
- $c = speed of light (> 3 ' 10^8 m/s)$
- λ = carrier wavelength



Propagation Models

- Ground-wave propagation
- Sky-wave propagation
- Line-of-sight propagation
- Free Space
- Two Ray Model



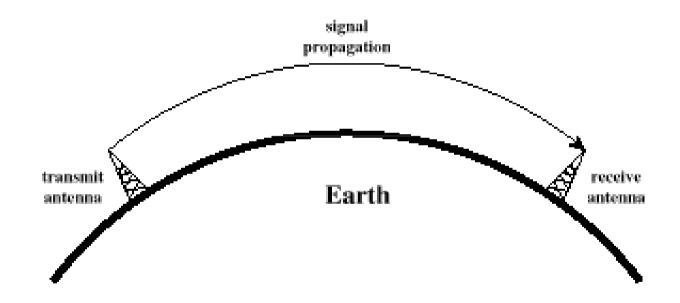




Ground Wave Propagation

- Follows contour of the earth
- Can Propagate considerable distances
- Frequencies up to 2 MHz
- Example
 - AM radio



Sky Wave Propagation

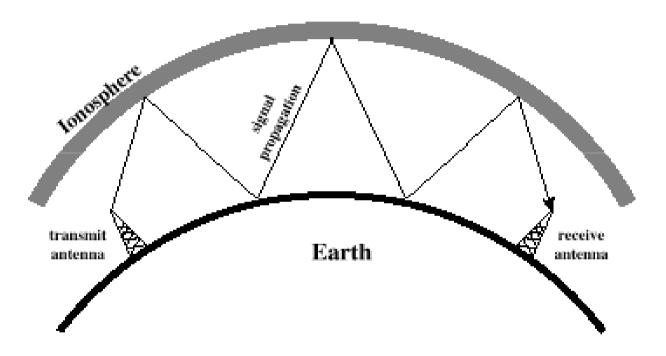




Sky Wave Propagation

- Signal reflected from ionized layer of atmosphere back down to earth
- Signal can travel a number of hops, back and forth between ionosphere and earth's surface
- Reflection effect caused by refraction
- Examples
 - Amateur radio
 - CB radio



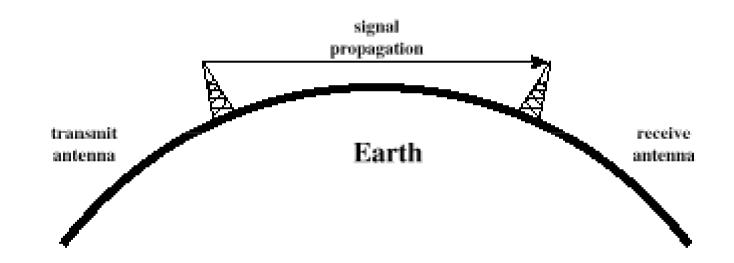



Line-of-Sight Propagation

- Transmitting and receiving antennas must be within line of sight
 - Satellite communication signal above 30 MHz not reflected by ionosphere
 - Ground communication antennas within *effective* line of site due to refraction
- Refraction bending of microwaves by the atmosphere
 - Velocity of electromagnetic wave is a function of the density of the medium
 - When wave changes medium, speed changes
 - Wave bends at the boundary between mediums



- Attenuation and attenuation distortion
- Free space loss
- Noise
- Atmospheric absorption
- Multipath
- Refraction
- Thermal noise



Attenuation

- Strength of signal falls off with distance over transmission medium
- Attenuation factors for unguided media:
 - Received signal must have sufficient strength so that circuitry in the receiver can interpret the signal
 - Signal must maintain a level sufficiently higher than noise to be received without error
 - Attenuation is greater at higher frequencies, causing distortion

Free Space Loss

Free space loss, ideal isotropic antenna

$$\frac{P_t}{P_r} = \frac{(4\pi d)^2}{\lambda^2} = \frac{(4\pi f d)^2}{c^2}$$

- $P_{\rm t}$ = signal power at transmitting antenna
- $P_{\rm r}$ = signal power at receiving antenna
- λ = carrier wavelength
- d = propagation distance between antennas
- $c = \text{speed of light (} \Rightarrow 3 \cdot 10 \cdot 8 \text{ m/s)}$

where d and λ are in the same units (e.g., meters)


Path Loss Exponent

 Table 4.2
 Path Loss Exponents for Different Environments

Environment	Path Loss Exponent, n
Free space	2
Urban area cellular radio	2.7 to 3.5
Shadowed urban cellular radio	3 to 5
In building line-of-sight	1.6 to 1.8
Obstructed in building	4 to 6
Obstructed in factories	2 to 3

Sha

Shadowing

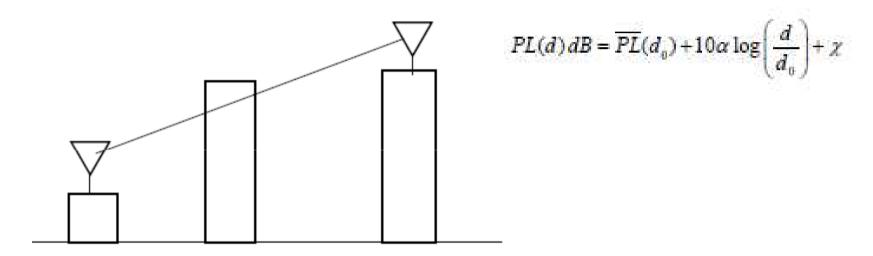

Here χ is a normally (Gaussian) distributed random variable (in dB) with standard deviation σ . χ represents the effect of shadowing. As a result of shadowing, power received at the points that are at the same distance d from the transmitter may be different and have a lognormal distribution. This phenomenon is referred to as lognormal shadowing.



Categories of Noise

- Thermal Noise
- Intermodulation noise
- Crosstalk
- Impulse Noise



Thermal Noise

- Thermal noise due to agitation of electrons
- Present in all electronic devices and transmission media
- Cannot be eliminated
- Function of temperature
- Particularly significant for satellite communication

Thermal Noise

Amount of thermal noise to be found in a bandwidth of 1Hz in any device or conductor is:

$$N_0 = kT (W/Hz)$$

- N_0 = noise power density in watts per 1 Hz of bandwidth
- $k = Boltzmann's constant = 1.3803 \cdot 10^{-23} J/K$
- \blacksquare T = temperature, in kelvins (absolute temperature)

4

Thermal Noise

- Noise is assumed to be independent of frequency
- Thermal noise present in a bandwidth of *B* Hertz (in watts):

$$N = kTB$$

or, in decibel-watts

$$N = 10\log k + 10\log T + 10\log B$$

= -228.6 dBW + 10 log T + 10 log B



Noise Terminology

- Intermodulation noise occurs if signals with different frequencies share the same medium
 - Interference caused by a signal produced at a frequency that is the sum or difference of original frequencies
- Crosstalk unwanted coupling between signal paths
- Impulse noise irregular pulses or noise spikes
 - Short duration and of relatively high amplitude
 - Caused by external electromagnetic disturbances, or faults and flaws in the communications system

4

Expression E_b/N_0

 Ratio of signal energy per bit to noise power density per Hertz

$$\frac{E_b}{N_0} = \frac{S/R}{N_0} = \frac{S}{kTR}$$

- The bit error rate for digital data is a function of E_b/N_0
 - Given a value for E_b/N_0 to achieve a desired error rate, parameters of this formula can be selected
 - As bit rate R increases, transmitted signal power must increase to maintain required E_b/N_0



Other Impairments

- Atmospheric absorption water vapor and oxygen contribute to attenuation
- Multipath obstacles reflect signals so that multiple copies with varying delays are received
- Refraction bending of radio waves as they propagate through the atmosphere

Two

Two ray model


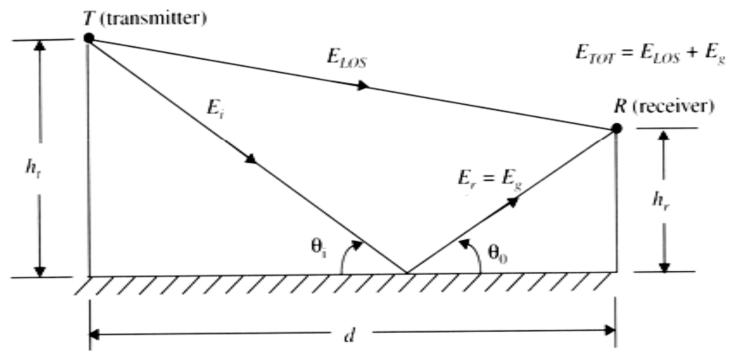


Figure 4.7 Two-ray ground reflection model.

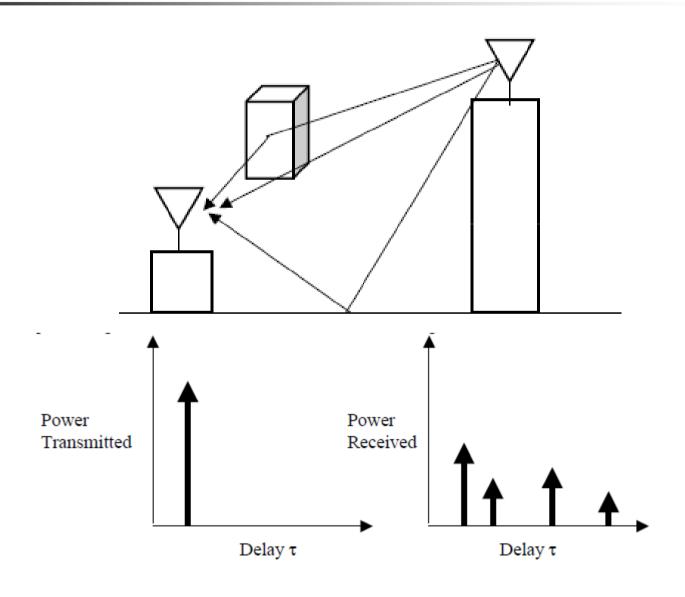

Multipath



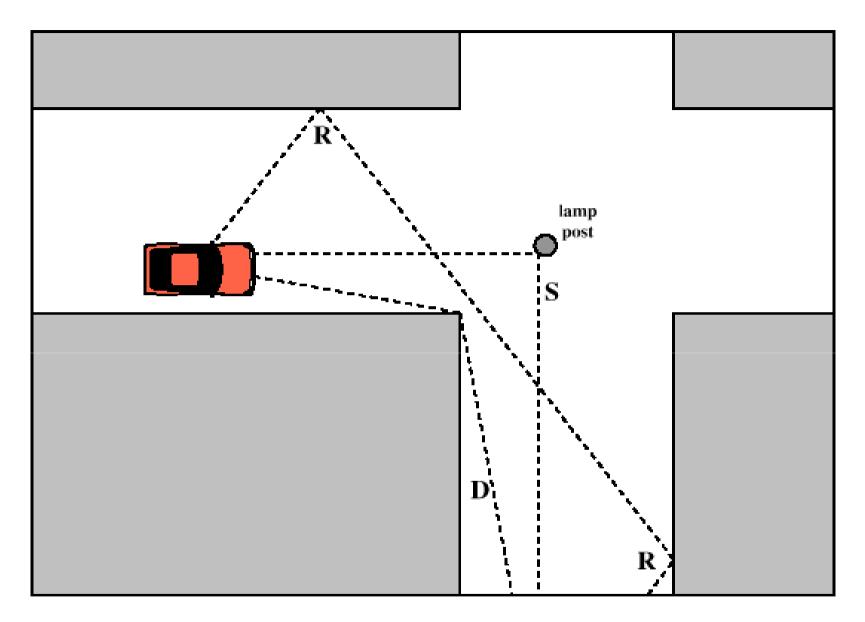


Figure 5.10 Sketch of Three Important Propagation Mechanisms: Reflection (R), Scattering (S), Diffraction (D) [ANDE95]



Multipath Propagation

- Reflection occurs when signal encounters a surface that is large relative to the wavelength of the signal
- Diffraction occurs at the edge of an impenetrable body that is large compared to wavelength of radio wave
- Scattering occurs when incoming signal hits an object whose size in the order of the wavelength of the signal or less




- Multiple copies of a signal may arrive at different phases
 - If phases add destructively, the signal level relative to noise declines, making detection more difficult
- Intersymbol interference (ISI)
 - One or more delayed copies of a pulse may arrive at the same time as the primary pulse for a subsequent bit



Types of Fading

- Fast fading
- Slow fading
- Flat fading
- Selective fading
- Rayleigh fading
- Rician fading

Total received power

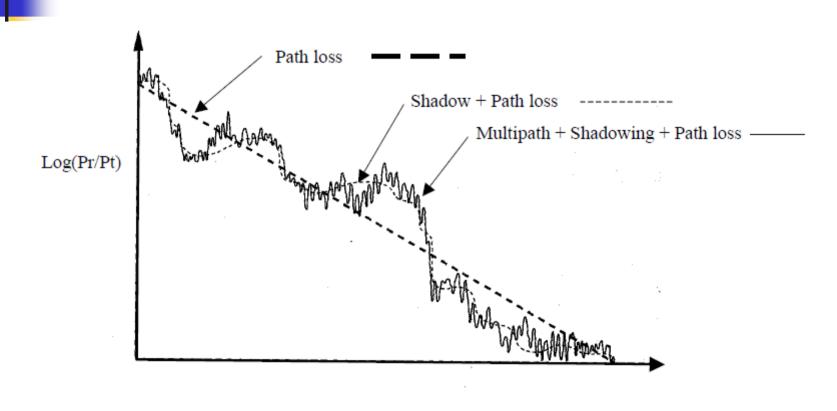

Log(d)