Tock Embedded OS Tutorial

SenSys 2018

Tock

A secure operating system for microcontrollers

- Kernel components in Rust
- Type-safe API for safe driver development
- ► Hardware isolated processes for application code

Microcontrollers

System-on-a-chip with integrated flash, SRAM, CPU and a bunch of hardware controllers.

Typically:

- Communication: UART, SPI, I2C, USB, CAN...
- External I/O: GPIO, external interrupt, ADC, DAC
- Timers: RTC, countdown timers

Maybe...

- Radio (Bluetooth, 15.4)
- Cryptographic accelerators
- Other specialized hardware...


Low Resource

- ▶ 10's of μA average power draw
- ▶ 10's of kBs of RAM
- Moderate clock speeds


Use cases

- Security applications (e.g. authentication keys)
- Sensor networks
- Programmable wearables
- PC/phone peripherals
- ► Home/industrial automation
- Flight control

Two types of components: capsules and processes

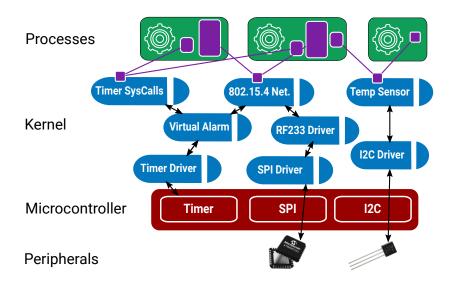


Two types of scheduling: cooperative and preemptive

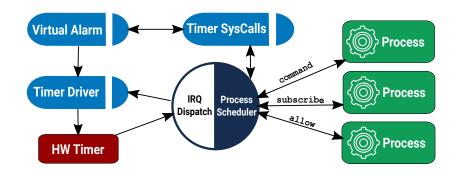

Agenda Today

09:30-10:40	Intro to Tock, Development Environment & Hardware	
10:40-11:00	Coffee break	
11:00-12:00	Hardware setup and installing apps	
12:00-13:30	Lunch	
13:30-15:20	Find and fix a real world bug	
15:20-15:40	Coffee break	
15:40-17:30	Choose your own adventure	

Part 1: Hardware, tools, and development environment

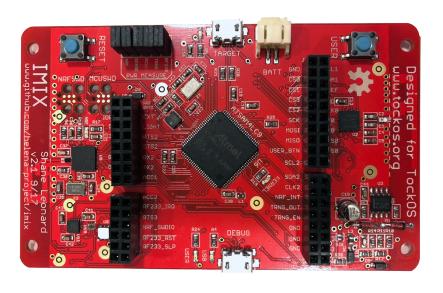

imix

- Atmel SAM4L, Cortex-M4, 64 kB RAM, 256 kB flash
- Nordic NRF51 Bluetooth SoC
- > 802.15.4 radio (6lowpan)
- Temperature, humidity, and light sensors
- 2 USBs (target USB + FTDI serial USB)
- 2 LEDs, 1 "user" button

Binaries on-board in flash

- 0x00000: Bootloader: Interact with Tockloader; load code
- > 0x10000: **Kernel**
- > 0x40000: **Processes**: Packed back-to-back

Tools

- make
- Rust/Cargo (Rust code → Cortex-M)
- arm-none-eabi (C → Cortex-M)
- tockloader to interact with imix and the bootloader

Tools: tockloader

Write a binary to a particular address in flash

\$ tockloader flash --address 0x10000 \
 target/thumbv7em-none-eabi/release/imix.bin

Program a process in Tock Binary Format¹:

\$ tockloader install myapp.tab

Restart the board and connect to the debug console:

\$ tockloader listen

¹TBFs are relocatable process binaries prefixed with headers like the package name.

[.] tab is a tarball of TBFs for different architectures as well as a metadata file for tockloader.

Check your understanding

Turn to the person next to you:

- What kinds of binaries exist on a Tock board?
 Hint: There are three, and only two can be programmed using tockloader.
- 2. What steps would you follow to program a process onto imix? What about to replace the kernel?

Answers

 The three binaries are the serial bootloader, the kernel, and a series of processes. The bootloader can be used to load the kernel and processes, but cannot replace itself.

2. Use tockloader:

- tockloader install app.tab
- tockloader flash --address 0x10000 imix-kernel.bin

Hands-on: Set-up development environment

- 3. Compile and program the kernel
- 4. (Optional) Familiarize yourself with tockloader commands
- * `uninstall`
- * `list`
- * `erase-apps`
 - (Optional) Add some other apps from the repo, like blink and sensors
 - Head to http://j2x.us/tock1 to get started!
 - (https://github.com/tock/tock/blob/tutorial-sensys-2018/doc/courses/sensys/environment.md)

Part 2: User space programming

System calls

Tock supports five syscalls that applications use to interact with the kernel.

Call	Target	Description
command	Capsule	Invoke an operation on a capsule
allow	Capsule	Share memory with a capsule
subscribe	Capsule	Register an upcall
memop	Core	Modify memory break
yield	Core	Block until next upcall is ready

C System Calls: command & allow

```
// Start an operation
int command(u32 driver, u32 command, int arg1, int arg2);
// Share memory with the kernel
int allow(u32 driver, u32 allow, void* ptr, size_t size);
```

C System Calls: subscribe

C System Calls: yield & yield_for

```
// Block until next callback
void yield(void);


// Block until a specific callback
void yield_for(bool *cond) {
  while (!*cond) {
    yield();
  }
}
```

Example: printing to the debug console

```
#define DRIVER NUM CONSOLE 0x0001
bool done = false;
static void putstr_cb(int x, int y, int z, void* ud) {
 done = true;
}
int putnstr(const char *str, size t len) {
  allow(DRIVER NUM CONSOLE, 1, str, len);
  subscribe(DRIVER NUM CONSOLE, 1, putstr cb, NULL);
  command(DRIVER NUM CONSOLE, 1, len, 0);
  yield for(&done);
  return SUCCESS;
```

Hands-on: Write a simple application

- 3. Get an application running on imix
- 4. Print "Hello World" every second
- 5. Extend your app to sample on-board sensors
- Head to http://j2x.us/tock2 to get started!
- (https://github.com/tock/tock/blob/tutorial-sensys-2018/doc/courses/sensys/application.md)



Trusted Computing Base (unsafe allowed)

- Hardware Abstraction Layer
- Board configuration
- Event & Process scheduler
- Rust core library
- Core Tock primitives

```
arch/
chips/
kernel/
```

Capsules (unsafe not allowed)

- Virtualization
- Peripheral drivers
- Communication protocols (IP, USB, etc)
- Application logic

capsules/

Constraints

Small isolation units

Breaking a monolithic component into smaller ones should have low/no cost

Avoid memory exhaustion in the kernel

No heap. Everything is allocated statically.

Low communication overhead

Communicating between components as cheap as an internal function call. Ideally inlined.

Event-driven execution model


```
pub fn main<P, C>(platform: &P, chip: &mut C,
                  processes: &mut [Process]) {
    loop {
        chip.service pending interrupts();
        for (i, p) in processes.iter mut().enumerate() {
            sched::do process(platform, chip, process);
        if !chip.has_pending_interrupts() {
            chip.prepare_for_sleep();
            support::wfi();
```

Event-driven execution model

```
fn service_pending_interrupts(&mut self) {
    while let Some(interrupt) = get_interrupt() {
        match interrupt {
            ASTALARM => ast::AST.handle_interrupt(),
            USARTO => usart::USARTO.handle_interrupt(),
            USART1 => usart::USART1.handle interrupt(),
            USART2 => usart::USART2.handle interrupt(),
```

Event-driven execution model

```
impl Ast {
   pub fn handle interrupt(&self) {
        self.clear alarm();
        self.callback.get().map(|cb| { cb.fired(); });
impl time::Client for MuxAlarm {
    fn fired(&self) {
        for cur in self.virtual_alarms.iter() {
            if cur.should_fire() {
                cur.armed.set(false);
                self.enabled.set(self.enabled.get() - 1);
                cur.fired();
```

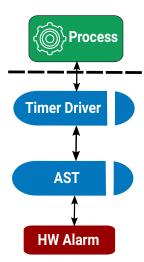

Check your understanding

Turn to the person next to you:

- What are Tock kernel components called?
- 2. Is the kernel scheduled cooperatively or preemptively? What happens if a capsule performs a very long computation?
- 3. How is a hardware interrupt handled in the kernel?

Answers

- Tock kernel components are called "capsules"
- The kernel is scheduled cooperatively by capsules calling methods on each other. If a capsule performs a very long computation it might prevent other capsules from running or cause them to miss events.
- Hardware interrupts are scheduled to run when capsules next yield. If a process is running when a hardware event happens, the hardware event will be immediately handled.

Hands-on: Write and add a capsule to the kernel

- 4. Read the imix boot sequence in boards/imix/src/main.rs
- 5. Write a new capsule that prints "Hello World" to the debug console.
- 6. Extend your capsule to print "Hello World" every second
- 7. Extend your capsule to print light readings every second
- 8. Extra credit
- Head to http://j2x.us/tock3 to get started!
- (https://github.com/tock/tock/blob/tutorial-sensys-2018/doc/courses/sensys/capsule.md)

Part 3: Deliver for the Client

Debugging in a Multi-app Setting

- Multiprogramming -> multiple things can go wrong
- Multiprogramming *enables* better debugging facilities
 - Monitor individual application state
 - Disable only faulty applications
 - Replace only parts of the system

The Process Console on imix

Keeps track of system calls and timeslice expirations for each process.

Provides basic debugging facilities over UART:

- status
- list
- stop [app_name]
- start [app_name]

Our task

- Fix a "deployed" with two mysteriously named processes:
 - app1 & app2
- Networked over UDP/6LoWPAN
 - One sends button presses
 - Another sends periodic temperature, humidty and light data
- Functional, but seem to be draining battery!

Find and fix the problem!

Stay in touch!

https://www.tockos.org

https://github.com/tock/tock

tock-dev@googlegroups.com