## Tock Embedded OS Tutorial

SenSys 2017

# Welcome to the Tock OS Training!

Please make sure you have completed all of the tutorial pre-requisites. If you prefer, you can download a virtual machine image with all the pre-requisites already installed.

https://github.com/helena-project/tock/tree/master/doc/courses/sensys/README.md

aka


http://bit.do/tock

# Agenda Today

- 1. Intro to hardware, tools and development environment
- 2. Write an end-to-end Bluetooth Low Energy environment sensing application
- 3. Add functionality to the Tock kernel
  - ► Write some Rust!

# Part 1: Hardware, tools, and development environment

# SAM4L Accelerometer MCU RGB LED

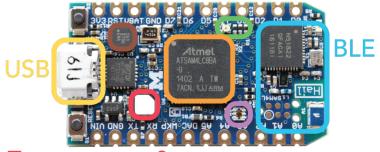

Temperature & Humidity

Light Sensor

## We need the Hails back at the end of the tutorial

But you can take one home with you! Purchase here:

https://tockos.org/hardware

Put in "SENSYS17" for \$5 off, and "2600 Hearst Ave, Berkeley CA 94709" as the address for local pickup.

## Binaries on-board in flash

- ▶ 0x00000: **Bootloader**: Interact with Tockloader; load code
- ► 0x10000: **Kernel**
- ▶ 0x30000: **Processes**: Packed back-to-back

#### **Tools**

- make
- Rust/Cargo/Xargo (Rust code → LLVM)
- arm-none-eabi (LLVM → Cortex-M)
- tockloader to interact with Hail and the bootloader

## Tools: tockloader

Write a binary to a particular address in flash

\$ tockloader flash --address 0x10000 \
 target/thumbv7em-none-eabi/release/hail.bin

Program a process in Tock Binary Format<sup>1</sup>:

\$ tockloader install myapp.tab

Restart the board and connect to the debug console:

\$ tockloader listen

<sup>&</sup>lt;sup>1</sup>TBFs are relocatable process binaries prefixed with headers like the package name.

<sup>.</sup> tab is a tarball of TBFs for different architectures as well as a metadata file for tockloader.

# Check your understanding

#### Turn to the person next to you:

- What kinds of binaries exist on a Tock board? Hint: There are three, and only two can be programmed using tockloader.
- 2. What steps would you follow to program a process onto Hail? What about to replace the kernel?

#### **Answers**

- The three binaries are the serial bootloader, the kernel, and a series of processes. The bootloader can be used to load the kernel and processes, but cannot replace itself.
- 2. Use tockloader:
  - ▶ tockloader install app.tab
  - ▶ tockloader flash --address 0x10000 hail.bin

## Hands-on: Set-up development environment

- 3. Compile and flash the kernel
- 4. (Optional) Familiarize yourself with tockloader commands
  - ▶ uninstall
  - ▶ list
  - erase-apps
- (Optional) Add some other apps from the repo, like blink and sensors
- ► Head to http://bit.do/tock2 to get started!
- https://github.com/helena-project/tock/blob/master/doc/courses/sensys/environment.md)

Part 2: User space

# System calls

Tock supports five syscalls that applications use to interact with the kernel.

Call	Target	Description	
command	Capsule	Invoke an operation on a capsule	
allow	Capsule	Share memory with a capsule	
subscribe	Capsule	Register an upcall	
memop	Core	Modify memory break	
yield	Core	Block until next upcall is ready	

## C System Calls: command & allow

```
// Start an operation
int command(u32 driver, u32 command, int arg1, int arg2);
// Share memory with the kernel
int allow(u32 driver, u32 allow, void* ptr, size_t size);
```

## C System Calls: subscribe

# C System Calls: yield & yield\_for


```
// Block until next callback
void yield(void);

// Block until a specific callback
void yield_for(bool *cond) {
  while (!*cond) {
    yield();
  }
}
```

# Example: printing to the debug console

```
#define DRIVER NUM CONSOLE 0x0001
bool done = false:
static void putstr cb(int x, int y, int z, void* ud) {
 done = true;
int putnstr(const char *str, size t len) {
  allow(DRIVER_NUM_CONSOLE, 1, str, len);
  subscribe(DRIVER_NUM_CONSOLE, 1, putstr_cb, NULL);
  command(DRIVER NUM CONSOLE, 1, len, 0);
  yield for(&done);
  return SUCCESS;
}
```

## Inter Process Communication (IPC)

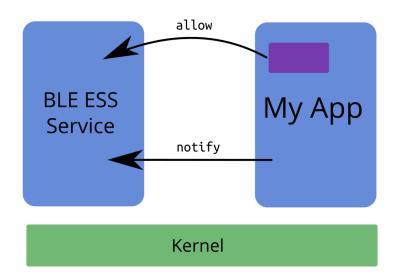

#### **Tock Inter Process Communication Overview**

#### Servers

- Register as an IPC service
- Call notify to trigger callback in connected client
- Receive a callback when a client calls notify

#### Clients

- Discover IPC services by application name
- Able to share a buffer with a connected service
- Call notify to trigger callback in connected service
- Receive a callback when service calls notify

#### Client Inter Process Communication API

```
// Discover IPC service by name
int ipc discover(const char* pkg name);
// Share memory slice with IPC service
int ipc_share(int pid, void* base, int len);
// Register for callback on server `notify`
int ipc_register_client_cb(int pid, subscribe_cb cb,
                           void* userdata):
// Trigger callback in service
int ipc notify svc(int pid);
```

# Check your understanding

## Turn to the person next to you:

- How does a process perform a blocking operation? Can you draw the flow of operations when a process calls delay\_ms (1000)?
- 2. Which functions would a client call to interact with an IPC service that provides a UART console? What does the design of the console service look like?

#### Answers

- A blocking operation starts with setting up a callback (using the subscribe syscall), then is initiated with a command syscall, and the process then blocks until the callback is called. For delay\_ms (1000), the application first registers a timer done callback, then calls the correct timer command with the value 1000, then calls yield() which will return when the timer callback is triggered after 1000 ms.
- 2. First the client would call ipc\_discover() to find the ID of the console service. Then, the client would call ipc\_share() to share a buffer with the service, fill in the buffer with the string it wants to print to the console, and call ipc\_notify\_svc() to invoke the service to actually print the string. If the client wants to know when the string has been printed, it should ipc\_register\_client\_cb() before notifying the service to get a callback.
  - The console service is relatively simple. It first has to register a callback to receive notifications from clients. When the callback triggers, it uses the buffer shared by the client and prints the contents to the console.

# Hands-on: Write a BLE environment sensing application

- 3. Get an application running on Hail
- 4. Print "Hello World" every second
- 5. Extend your app to sample on-board sensors
- 6. Extend your app to report through the ble-env-sense service
- Head to http://bit.do/tock3 to get started!
- (https://github.com/helena-project/tock/blob/master/doc/courses/sensys/application.md)



# Trusted Computing Base (unsafe allowed)

- Hardware Abstraction Layer
- Board configuration
- Event & Process scheduler
- Rust core library
- Core Tock primitives

```
kernel/chips/
```

## Capsules (unsafe not allowed)

- Virtualization
- Peripheral drivers
- Communication protocols (IP, USB, etc)
- Application logic

capsules/

#### **Constraints**

#### Small isolation units

Breaking a monolithic component into smaller ones should have low/no cost

### Avoid memory exhaustion in the kernel

No heap. Everything is allocated statically.

#### Low communication overhead

Communicating between components as cheap as an internal function call. Ideally inlined.

#### Event-driven execution model


```
pub fn main<P, C>(platform: &P, chip: &mut C,
                  processes: &mut [Process]) {
    loop {
        chip.service_pending_interrupts();
        for (i, p) in processes.iter_mut().enumerate() {
            sched::do_process(platform, chip, process);
        if !chip.has pending interrupts() {
            chip.prepare for sleep();
            support::wfi();
```

#### Event-driven execution model

```
fn service pending interrupts(&mut self) {
    while let Some(interrupt) = get_interrupt() {
        match interrupt {
            ASTALARM => ast::AST.handle_interrupt(),
            USARTO => usart::USARTO.handle_interrupt(),
            USART1 => usart::USART1.handle_interrupt(),
            USART2 => usart::USART2.handle_interrupt(),
```

## Event-driven execution model

```
impl Ast {
   pub fn handle interrupt(&self) {
        self.clear alarm();
        self.callback.get().map(|cb| { cb.fired(); });
impl time::Client for MuxAlarm {
   fn fired(&self) {
        for cur in self.virtual_alarms.iter() {
            if cur.should_fire() {
                cur.armed.set(false);
                self.enabled.set(self.enabled.get() - 1);
                cur.fired();
```

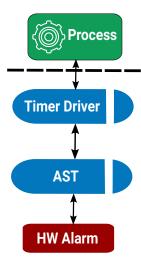

# Check your understanding

#### Turn to the person next to you:

- 1. What are Tock kernel components called?
- 2. Is the kernel scheduled cooperatively or preemptively? What happens if a capsule performs a very long computation?
- 3. How is a hardware interrupt handled in the kernel?

#### **Answers**

- 1. Tock kernel components are called "capsules"
- The kernel is scheduled cooperatively by capsules calling methods on each other. If a capsule performs a very long computation it might prevent other capsules from running or cause them to miss events.
- Hardware interrupts are scheduled to run when capsules next yield. If a process is running when a hardware event happens, the hardware event will be immediately handled.

# Hands-on: Write and add a capsule to the kernel

- 4. Read the Hail boot sequence in boards/hail/src/main.rs
- 5. Write a new capsule that prints "Hello World" to the debug console.
- 6. Extend your capsule to print "Hello World" every second
- 7. Extend your capsule to print light readings every second
- 8. Extra credit
- ► Head to http://bit.do/tock4 to get started!
- https://github.com/helena-project/tock/blob/master/doc/courses/sensys/capsule.md)

We need the Hails back!

But you can take one home with you! Purchase here:

https://tockos.org/hardware

Put in "SENSYS17" for \$5 off, and "2600 Hearst Ave, Berkeley CA 94709" as the address for local pickup.

	imix (\$100)	Hail (\$60)
Sensors		
- Accelerometer	✓	$\checkmark$
- Temperature/Humidity	✓	$\checkmark$
- Light	✓	$\checkmark$
- Accelerometer	✓	$\checkmark$
Radios	BLE & 802.15.4	BLE
Buttons	1 user, 1 reset	1 user, 1 reset
LEDs	3	1 blue, 1 RGB
Hardware RNG	✓	
USB Host	✓	pins only
Independent Power Domains	✓	
Form Factor	Custom, 2.45" x 4"	Particle Photon

# Stay in touch!

```
https://www.tockos.org
```

https://github.com/helena-project/tock

tock-dev@googlegroups.com

#tock on Freenode

## Quick Survey!

https://goo.gl/???

#### Hardware!

https://tockos.org/hardware

Put in "SENSYS17" for \$5 off, and "2600 Hearst Ave, Berkeley CA 94709" as the address for local pickup.