# Tock Embedded OS Training

RustConf 2017

### Tock is a...

- 1. Secure
- 2. Embedded
- 3. Operating System
- 4. for Low Resource
- 5. Microcontrollers

# Secure



### Secure Safe

Tock has isolation primitives that allow you to build secure systems.

### **Embedded**

#### Definition A

Kernel, applications and hardware are tightly integrated.

#### Definition B

You'll likely be writing the kernel.

## **Operating System**

Tock itself provides services to components in the system:

- Scheduling
- Communication
- ► Hardware multiplexing

### Low Resource

- ▶ 10s uA average power draw
- ▶ 10s of kBs of RAM
- Moderate clock speeds

### Microcontrollers

System-on-a-chip with integrated flash, SRAM, CPU and a bunch of hardware controllers.


### Typically:

- Communication: UART, SPI, I2C, USB, CAN...
- External I/O: GPIO, external interrupt, ADC, DAC
- ► Timers: RTC, countdown timers


### Maybe...

- Radio (Bluetooth, 15.4)
- Cryptographic accelerators
- Other specialized hardware...

## Two types of components: capsules and processes

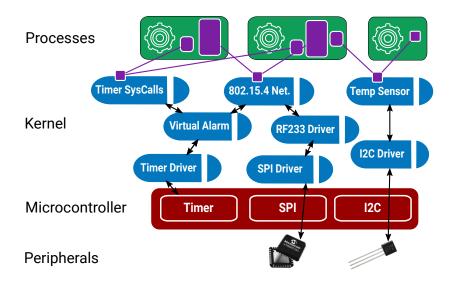


# Two types of scheduling: cooperative and preemptive

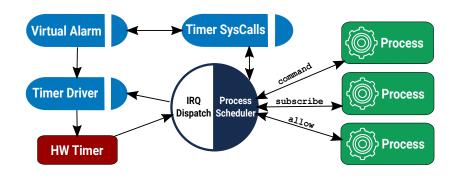

Part 1: Hardware, tools and development

environment

# SAM4L Accelerometer MCU RGB LED

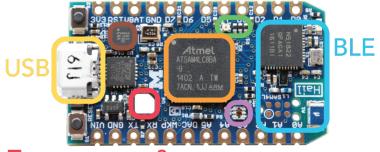

Temperature & Humidity

Light Sensor

### Binaries on-board

- Bootloader
- Kernel
- Processes

### Tools

- make
- Rust nightly (asm!, compiling core)
- xargo to automate compiling base libraries
- arm-none-eabi GCC to link binaries
- tockloader to interact with Hail and the bootloader

### Tools: tockloader

Write a binary to a particular address in flash

\$ tockloader flash --address 0x1000 \
 target/thumbv7em-none-eabi/release/hail.bin

Program a process in Tock Binary Format<sup>1</sup>:

\$ tockloader install myapp.tab

Restart the board and connect to the debug console:

\$ tockloader listen

<sup>&</sup>lt;sup>1</sup>TBFs are relocatable process binaries prefixed with headers like the package name. .tab is a tarball of TBFs for different architectures as well as a metadata file for tockloader.

# Check your understanding

- 1. What kinds of binaries exist on a Tock board? Hint: There are three, and only two can be programmed using tockloader.
- 2. What are the differences between capsules and processes? What performance and memory overhead does each entail? Why would you choose to write something as a process instead of a capsule and vice versa?
- 3. Is it acceptable for a process to enter an infinte loop? What about a capsule?

## Hands-on: Set-up development environment

- 1. Compile and flash the kernel
- 2. Compile and program ble-env-sense service
- (Optional) Add some other apps from the repo, like blink and sensors
- 4. (Optional) Familiarize yourself with tockloader commands
  - ▶ uninstall
  - ▶ list
  - erase-apps

Part 2: The kernel

# Trusted Computing Base (unsafe allowed)

- ► Hardware Abstraction Layer
- ► Board configuration
- Event & Process scheduler
- Rust core library
- A few data structures

```
kernel/chips/
```

# Capsules (unsafe not allowed)

- Virtualization
- Peripheral drivers
- ► Communication protocols (IP, USB, etc)
- Application logic

capsules/

### Constraints

#### Small isolation units

Breaking a monolithic component into smaller ones should have low/no cost

### Avoid memory exhaustion in the kernel

No heap. Everything is allocated statically.

#### Low communication overhead

Communicating between components as cheap as an internal function call. Ideally inlined.

### Event-driven execution model

```
pub fn main<P, C>(platform: &P, chip: &mut C,
                  processes: &mut [Process]) {
    loop {
        chip.service_pending_interrupts();
        for (i, p) in processes.iter_mut().enumerate() {
            sched::do_process(platform, chip, process;
        if !chip.has pending interrupts() {
            chip.prepare for sleep();
            support::wfi();
```

### Event-driven execution model

```
fn service pending interrupts(&mut self) {
    while let Some(interrupt) = get interrupt() {
        match interrupt {
            ASTALARM => ast::AST.handle_interrupt(),
            USARTO => usart::USARTO.handle_interrupt(),
            USART1 => usart::USART1.handle_interrupt(),
            USART2 => usart::USART2.handle_interrupt(),
```

### Event-driven execution model

```
impl Ast {
    pub fn handle_interrupt(&self) {
        self.clear alarm();
        self.callback.get().map(|cb| { cb.fired(); });
impl time::Client for MuxAlarm {
   fn fired(&self) {
        for cur in self.virtual alarms.iter() {
            if cur.should_fire() {
                cur.armed.set(false);
                self.enabled.set(self.enabled.get() - 1);
                cur.fired();
```

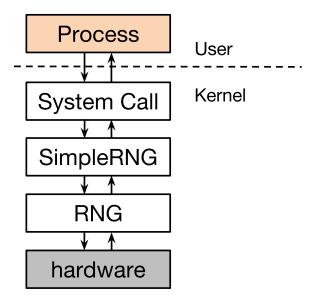


Figure: Capsules reference each other directly, assisting inlining

# The mutable aliases problem

```
enum NumOrPointer {
  Num(u32),
 Pointer(&mut u32)
// n.b. will not compile
let external : &mut NumOrPointer;
match external {
  Pointer(internal) => {
    // This would violate safety and
    // write to memory at Oxdeadbeef
    *external = Num(Oxdeadbeef);
    *internal = 12345; // Kaboom
  },
```

# Interior mutability to the rescue

Туре	Copy-only	Mutual exclusion	Opt.	Mem Opt.
Cell	<b>✓</b>	Х	✓	<b>✓</b>
VolatileCell	✓	×	X	✓
TakeCell	X	✓	X	✓
MapCell	×	✓	✓	×

```
pub struct Fxos8700cq<`a> {
  i2c: &`a I2CDevice,
  state: Cell<State>,
  buffer: TakeCell<`static, [u8]>,
  callback:
    Cell<Option<&`a hil::ninedof::NineDofClient>>,
}
impl<`a> I2CClient for Fxos8700cq<`a> {
  fn cmd_complete(&self, buf: &`static mut [u8]) { ... }
impl<`a> hil::ninedof::NineDof for Fxos8700cq<`a> {
  fn read accelerometer(&self) -> ReturnCode { ... }
}
pub trait NineDofClient {
  fn callback(&self, x: usize, y: usize, z: usize);
}
```

# Check your understanding

- What is a VolatileCell? Can you find some uses of VolatileCell, and do you understand why they are needed? Hint: look inside chips/sam4l/src.
- What is a TakeCell? When is a TakeCell preferable to a standard Cell?

## Hands-on: Write and add a capsule to the kernel

- 1. Read the Hail boot sequence in boards/hail/src/main.rs
- 2. Create a new capsule that prints "Hello World" to the debug console every second.
- 3. Add your capsule to the boot sequence
- 4. Extend your capsule to sample the 9dof sensor

Part 3: User space

# System calls

Call	Target	Description
command	Capsule	Invoke an operation on a capsule
allow	Capsule	Share memory with a capsule
subscribe	Capsule	Register an upcall
memop	Core	Modify memory break
yield	Core	Bloc until next upcall is ready


# System calls: Rust

```
pub unsafe fn command(major: u32, minor: u32,
  arg: isize) -> isize;
pub unsafe fn allow(major: u32, minor: u32,
                    slice: &[u8]) -> isize:
type ExternFn =
  extern fn (usize, usize, usize, *const usize);
pub unsafe fn subscribe(major: u32, minor: u32,
  cb: ExternFn, ud: *const usize) -> isize {
pub fn yieldk();
pub fn yieldk for<F: Fn() -> bool>(cond: F) {
    while !cond() { yieldk(); }
}
```

# Example: printing to the debug console

```
pub fn write(string: Box<[u8]>) {
    let done: Cell<bool> = Cell::new(false):
    syscalls::allow(DRIVER NUM, 1, string);
    syscalls::subscribe(DRIVER NUM, 1, callback,
          &done as *const as usiz);
    syscalls::command(DRIVER NUM, 1, string.len());
    yieldk_for(|| done.get())
}
extern fn callback(_: usize, _: usize, _: usize,
                   ud: *const usize) {
    let done: &Cell<bool> = unsafe {
        mem::transmute(ud)
    }:
    done.set(true):
}
```

# Process memory layout

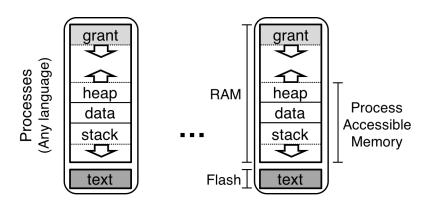

### Current Rust userland

### Supported drivers

- Debug console
- Timer
- Sensors:
  - ► Accelerometer & magnetometer
  - Ambient light
  - Temperature

#### Caveats

- ► No global variables allowed!
  - Waiting on LLD 5.0 to be released this month
- Fixed code offset
- Blocking library calls only

# Check your understanding

- How does a process perform a blocking operation? Can you draw the flow of operations when a process calls delay\_ms(1000)?
- 2. What is a Grant? How do processes interact with grants? Hint: Think about memory exhaustion.

# Hands-on: Write a BLE environment sensing application

- 1. Get a Rust application running on Hail
- 2. Periodically sample on-board sensors
- Extend your app to report through the ble-env-sense service