DSPIRA Horn Telescope Cradle Assembly

MATERIALS NEEDED:

two 20" long
$$2 \times 2$$
's

two $9\frac{5}{8}$ " long 2×2 's

Note: These eight $2" \times 2"$

pieces can be cut from a single 8' long piece.

three 9 " long 2×2 's


one $\frac{11}{16}$ " plywood piece, $7" \times 8"$
 $2\frac{1}{2}$ " construction screws for assembling 2×2 's - need approximately 10

1" or $1\frac{1}{4}$ " construction screws – for attaching the thin plywood base to the cradle two $3\frac{1}{2}$ " long $\frac{1}{4}$ -20 bolts - for attaching the cradle to the stand

ASSEMBLING THE CRADLE:

two 1/4-20 wing nuts

1. Using the $2\frac{1}{2}$ " screws, assemble the 20", $6\frac{11}{16}$ " and $9\frac{5}{8}$ " pieces into a rectangle with a cross bar, as illustrated in the *top view* diagram to the right.

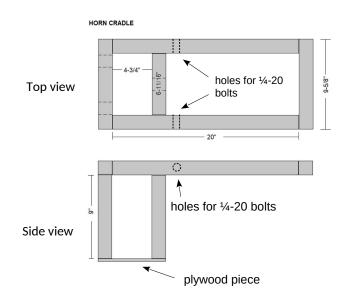

- 2. Attach the two 9" pieces extending downward from the corners at the left end of the rectangular frame and one 9" piece from the midpoint of the $6\frac{11}{16}$ " crossbar.
- 3. Use the construction screws to attach the ¼ " plywood piece to the bottom of these three extensions. This should form a structure that the can can fit into.
- 4. Drill $\frac{5}{16}$ "holes for the ½-20 bolts for connecting to the stand.



assembled cradle