


Small Sound Sensor

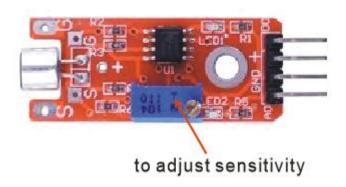

Overview

The Small Sound Sensor packages a sound-sensitive, capacitive electret microphone inside a convenience circuit that reports two outputs. As acoustic waves vibrate the thin electret film, they generate a small voltage, allowing the intensity of the sound to be reported as an analog output. At the same time, a digital output indicates whether that measured volume exceeds a particular user-adjustable threshold. Simple sound detection has many applications in automation, security, and novelty and entertainment technologies. In this experiment, you'll use your Raspberry Pi and the analog-to-digital converter to monitor both outputs of the sound sensor.

The Small Sound Sensor is very similar to the Big Sound Sensor, except it contains a smaller microphone, making it less expensive, slightly more compact and also less sensitive to very quiet sounds. The wiring diagrams, experimental procedures and source code of both sound sensor experiments are the same.

Experimental Materials

Raspberry Pi			
Breadboard	x1		
Small sound sensor	x1		
ADC0832			
Dupont jumper wires			

Experimental Procedure

1. If you have not done so already, prepare your development system by installing the Python interpreter, RPi.GPIO library, and wiringPi library as described in READ ME FIRST.TXT.



- 2. Install the ADC0832 analog/digital converter IC and the sound sensor on your breadboard, and use Dupont jumper wires to connect them to each other and your Raspberry Pi as illustrated in the Wiring Diagram below.
- 3. Execute the sample stored in this experiment's subfolder. If using C, compile and execute the C code:


```
cd Code/C
gcc soundSensor.c -o soundSensor.out -lwiringPi
./soundSensor.out
```

If using Python, launch the Python script:

```
cd Code/Python
python soundSensor.py
```

4. Make experimental observations. The command line interface of the Raspberry Pi displays the current measured sound intensity (from the analog signal run through the ADC). When that intensity exceeds the threshold value determined by the onboard potentiometer, the Raspberry Pi also displays "voice in!" To change the sensitivity of that second measurement, change the position of the potentiometer dial.

Wiring Diagram

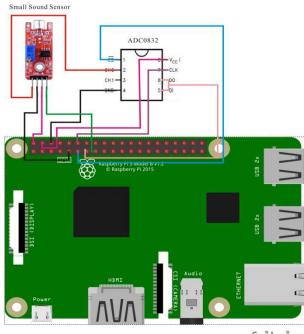

fritzing



AD0382 pin position:

CS

CLK	\leftrightarrow	Raspberry	Pi	pin	12
DI	\leftrightarrow	Raspberry	Pi	pin	13

↔ Raspberry Pi pin 11

D0 \leftrightarrow Raspberry Pi pin 13

CHO \leftrightarrow Sound Sensor pin A0

VCC ↔ Raspberry Pi +5V

GND \longleftrightarrow Raspberry Pi GND

Sound Sensor position:

A0	\leftrightarrow	ADC0382 Pin CH0
D0	\leftrightarrow	Raspberry Pi Pin 15

GND \leftrightarrow Raspberry Pi GND

"+" ↔ Raspberry Pi +5V

Sample Code

Python Code

```
#!/usr/bin/env python
import RPi.GPIO as GPIO
import ADC0832
import time

MIC_DO_PIN = 15

def init():
    GPIO.setmode(GPIO.BOARD)
    GPIO.setup(MIC_DO_PIN, GPIO.IN,
pull_up_down=GPIO.PUD_UP)
    ADC0832.setup()
```



```
def loop():
   while True:
      global digitalVal
      digitalVal = GPIO.input(MIC DO PIN)
      if(digitalVal == 0):
          print 'DO is %d' % digitalVal
          print "voice in..."
         print 'Current analog value is %d'%
ADC0832.getResult(0)
      else:
         pass
if __name__ == '__main__':
   init()
   try:
     loop()
   except KeyboardInterrupt:
     ADC0832.destroy()
     print 'The end !'
C Code
#include <wiringPi.h>
#include <stdio.h>
#include <string.h>
#include <errno.h>
#include <stdlib.h>
#define ADC_CS 0
#define
         ADC CLK 1
#define ADC DIO 2
#define Sound DO Pin 3
typedef unsigned char uchar;
typedef unsigned int uint;
uchar get ADC Result(void)
{
  uchar i;
  uchar dat1=0, dat2=0;
```



}

```
digitalWrite(ADC CS, 0);
   digitalWrite(ADC CLK,0);
   digitalWrite(ADC DIO,1);
                             delayMicroseconds(2);
   digitalWrite(ADC CLK,1);
                              delayMicroseconds(2);
   digitalWrite(ADC CLK,0);
   digitalWrite(ADC DIO,1);
                              delayMicroseconds(2);
   digitalWrite(ADC CLK,1);
                              delayMicroseconds(2);
   digitalWrite(ADC CLK,0);
   digitalWrite(ADC DIO,0);
                              delayMicroseconds(2);
   digitalWrite(ADC CLK,1);
   digitalWrite(ADC DIO,1);
                              delayMicroseconds(2);
   digitalWrite(ADC CLK,0);
   digitalWrite(ADC DIO,1);
                             delayMicroseconds(2);
   for(i=0;i<8;i++)
      digitalWrite(ADC CLK,1); delayMicroseconds(2);
      digitalWrite(ADC CLK,0); delayMicroseconds(2);
      pinMode(ADC DIO, INPUT);
      dat1=dat1<<1 | digitalRead(ADC DIO);</pre>
   }
   for(i=0;i<8;i++)
      dat2 = dat2 | ((uchar)(digitalRead(ADC DIO))<<i);</pre>
      digitalWrite(ADC CLK,1); delayMicroseconds(2);
      digitalWrite(ADC CLK,0);     delayMicroseconds(2);
   }
   digitalWrite(ADC CS,1);
   pinMode(ADC_DIO, OUTPUT);
   return(dat1==dat2) ? dat1 : 0;
int main(void)
  uchar digitalVal = 1;
  uchar analogVal = 0;
```



```
if(wiringPiSetup() == -1)
     printf("setup wiringPi failed!\n");
     return -1;
   }
  pinMode(ADC CS, OUTPUT);
  pinMode(ADC CLK, OUTPUT);
  pinMode(Sound DO PIN, INPUT);
  pullUpDnControl(Sound DO PIN, PUD UP);
  printf("Please speak into the sensor...\n");
  while(1)
   {
     printf("Current analog value is %d.\n",
get ADC Result());
      if(!(digitalVal = digitalRead(Sound DO PIN)))
      {
        printf("D0 is %d.\n", digitalVal);
        printf("Voice in...");
      }
      delay(200);
   }
  return 0;
}
```