QNX® Neutrino® RTOS Programmer's Guide



©2000–2014, QNX Software Systems Limited, a subsidiary of BlackBerry. All rights reserved.

QNX Software Systems Limited 1001 Farrar Road Ottawa, Ontario K2K 0B3 Canada

Voice: +1 613 591-0931 Fax: +1 613 591-3579 Email: info@qnx.com Web: http://www.qnx.com/

QNX, QNX CAR, Neutrino, Momentics, Aviage, and Foundry27 are trademarks of BlackBerry Limited that are registered and/or used in certain jurisdictions, and used under license by QNX Software Systems Limited. All other trademarks belong to their respective owners.

Electronic edition published: Thursday, February 20, 2014

Table of Contents

Typographical conventions	
Technical support	
Teermeal Support	13
Chapter 1: Compiling and Debugging	17
Choosing the version of the OS	18
Making your code more portable	19
Conforming to standards	19
Including OS-specific code	21
Header files in /usr/include	22
Cross-development	23
A simple example	23
Cross-development with network filesystem	24
Cross-development with debugger	25
Cross-development, deeply embedded	25
Using libraries	28
Static and dynamic libraries	28
Platform-specific library locations	30
Linking your modules	31
Creating shared objects	32
Optimizing the runtime linker	33
Lazy binding	33
RTLD_LAZY	36
Lazy loading	36
Diagnostics and debugging	38
Environment variables	38
Debugging	40
Debugging in a cross-development environment	40
The GNU debugger (gdb)	40
The process-level debug agent	
A simple debug session	
Configure the target	46
Compile for debugging	
Start the debug session	46
Get help	
Sample boot image	49
Debugging using libmudflap	50
Chapter 2: Programming Overview	51
An application as a set of processes	

	Some definitions	54
	Priorities and scheduling	56
	Priority range	56
	BLOCKED and READY states	57
	The ready queue	58
	Suspending a running thread	59
	When the thread is blocked	59
	When the thread is preempted	59
	When the thread yields	59
	Scheduling policies	60
	FIFO scheduling	62
	Round-robin scheduling	
	Sporadic scheduling	63
	Why threads?	64
	Summary	65
Cha	pter 3: Processes	67
	Starting processes — two methods	68
	Process creation	69
	Concurrency	69
	Inheriting file descriptors	71
	Process termination	72
	Normal process termination	72
	Abnormal process termination	72
	Detecting process termination	75
	Using the High Availability Framework	75
	Detecting termination from a starter process	76
	Sample parent process using wait()	76
	Sample parent process using sigwaitinfo()	77
	Detecting dumped processes	78
	Detecting the termination of daemons	81
	Detecting client termination	81
	Process privileges	82
	Privilege separation	83
	Procmgr abilities	85
	An example of privilege separation	93
	Resource constraint thresholds	95
	Controlling processes via the /proc filesystem	98
	Establishing a connection	98
	Reading and writing the process's address space	99
	Manipulating a process or thread	100
	Thread information	102
	DCMD_PROC_BREAK	107
	DCMD_PROC_CHANNELS	107

DCMD_PROC_CLEAR_FLAG	107
DCMD_PROC_CURTHREAD	108
DCMD_PROC_EVENT	108
DCMD_PROC_FREEZETHREAD	108
DCMD_PROC_GETALTREG	109
DCMD_PROC_GETFPREG	109
DCMD_PROC_GETGREG	109
DCMD_PROC_GETREGSET	110
DCMD_PROC_GET_BREAKLIST	110
DCMD_PROC_INFO	110
DCMD_PROC_IRQS	110
DCMD_PROC_MAPDEBUG	111
DCMD_PROC_MAPDEBUG_BASE	111
DCMD_PROC_MAPINFO	112
DCMD_PROC_PAGEDATA	112
DCMD_PROC_RUN	113
DCMD_PROC_SETALTREG	114
DCMD_PROC_SETFPREG	114
DCMD_PROC_SETGREG	115
DCMD_PROC_SETREGSET	115
DCMD_PROC_SET_FLAG	115
DCMD_PROC_SIGNAL	115
DCMD_PROC_STATUS	116
DCMD_PROC_STOP	116
DCMD_PROC_SYSINFO	116
DCMD_PROC_THAWTHREAD	117
DCMD_PROC_THREADCTL	117
DCMD_PROC_TIDSTATUS	117
DCMD_PROC_TIMERS	118
DCMD_PROC_WAITSTOP	118
Chapter 4: Working with Access Control Lists (ACLs)	119
ACL formats	120
ACL storage management	122
Manipulating ACL entries in working storage	123
Manipulating permissions in an ACL entry	124
Manipulating the tag type and qualifier in an ACL entry	125
Manipulating ACLs on a file or directory	126
Example	127
Chapter 5: Tick, Tock: Understanding the Microkernel's Concept of Time	129
Oversleeping: errors in delays	130
Delaying for a second: inaccurate code	130
Timer quantization error	130

The tick and the hardware timer	131
Delaying for a second: better code	131
Another hiccup with hardware timers	132
Where's the catch?	133
What time is it?	135
Clocks, timers, and power management	137
Chapter 6: Transparent Distributed Processing Using Qnet	141
What is Qnet?	142
Benefits of Qnet	143
What works best	143
What type of application is well-suited for Qnet?	144
How does it work?	145
Locating services using GNS	148
Different modes of GNS	148
Registering a service	149
GNS path namespace	150
Deploying the gns processes	151
Quality of Service (QoS) and multiple paths	154
QoS policies	154
loadbalance	154
preferred	155
exclusive	155
Specifying QoS policies	155
Symbolic links	155
Designing a system using Qnet	157
The product: a telecom box	157
Developing your distributed system	157
Configuring the data cards	158
Configuring the controller card	158
Enhancing reliability via multiple transport buses	159
Redundancy and scalability using multiple controller cards	160
Autodiscovery vs static	162
When should you use Qnet, TCP/IP, or NFS?	163
Drivers for Qnet	165
Chapter 7: Writing an Interrupt Handler	167
Interrupts on multicore systems	168
Attaching and detaching interrupts	169
Interrupt Service Routine (ISR)	170
Determining the source of the interrupt	170
Servicing the hardware	172
Updating common data structures	173
Signalling the application code	174

Running out of interrupt events	178
Problems with shared interrupts	179
Advanced topics	180
Interrupt environment	180
Ordering of shared interrupts	180
Interrupt latency	180
Atomic operations	181
Interrupts and power management	181
Chapter 8: Heap Analysis: Making Memory Errors a Thing of the Past	183
Dynamic memory management	184
Arena allocations	184
Small block configuration	186
Heap corruption	190
Contiguous memory blocks	190
Multithreaded programs	190
Allocation strategy	191
Common sources	191
Detecting and reporting errors	193
Controlling the level of checking	193
Other environment variables	198
Caveats	199
Manual checking (bounds checking)	201
Getting pointer information	201
Memory leaks	202
Tracing	202
Causing a trace and giving results	203
Analyzing dumps	203
Compiler support	205
C++ issues	205
Chapter 9: Freedom from Hardware and Platform Dependencies	207
Common problems	208
I/O space vs memory-mapped	208
Big-endian vs little-endian	208
Alignment and structure packing	210
Atomic operations	210
Solutions	211
Determining endianness	211
Swapping data if required	211
Accessing unaligned data	213
Examples	213
Accessing I/O ports	215

	ter 10: Conventions for Recursive Makefiles and Directories	
	Structure of a multiplatform source tree	218
	Makefile structure	219
	The recurse.mk file	219
	Macros	219
	Directory levels	221
	Specifying options	223
	The common.mk file	223
	The variant-level makefile	223
	Recognized variant names	224
	Using the standard macros and include files	226
	The qconfig.mk include file	226
	The qrules.mk include file	229
	The qtargets.mk include file	233
	Advanced topics	235
	Collapsing unnecessary directory levels	235
	Performing partial builds	236
	Performing parallel builds	236
	More uses for LIST	237
	GNU configure	237
	Examples of creating Makefiles	242
	A single application	242
	A library and an application	245
Chapt	ter 11: POSIX Conformance	249
	Conformance statement	
	System interfaces: general attributes	
	File handling	
	Internationalized system interfaces	
	Threads: Cancellation points	
	Realtime: Prioritized I/O	
	Realtime threads	
	C-language compilation environment	
	POSIX Conformance Document (PCD)	
	Base Definitions	
	System Interfaces	
	Non-POSIX functions with POSIX-sounding names	
	ter 12: Using GDB	307
Chant	-	
Chapt	(JINX INPLITATION-SUPPLITE EXTENSIONS	308
Chapt	QNX Neutrino-specific extensions	
Chapt	A quick overview of starting the debugger	309
Chapt	A quick overview of starting the debugger	309

Command completion	311
Getting help	312
Running programs under GDB	315
Compiling for debugging	315
Setting the target	315
Starting your program	316
Your program's arguments	317
Your program's environment	317
Your program's input and output	319
Debugging an already-running process	319
Killing the process being debugged	320
Debugging programs with multiple threads	320
Debugging programs with multiple processes	321
Stopping and continuing	323
Breakpoints, watchpoints, and exceptions	323
Continuing and stepping	334
Signals	338
Stopping and starting multithreaded programs	339
Examining the stack	341
Stack frames	341
Backtraces	342
Selecting a frame	343
Information about a frame	344
Examining source files	346
Printing source lines	346
Searching source files	348
Specifying source directories	348
Source and machine code	349
Shared libraries	351
Examining data	352
Expressions	352
Program variables	353
Artificial arrays	354
Output formats	355
Examining memory	356
Automatic display	358
Print settings	360
Value history	365
Convenience variables	366
Registers	
Floating point hardware	
Examining the symbol table	
Altering execution	
Assignment to variables	
Continuing at a different address	375

Returning from a function	
Calling program functions	376
	377
Patching programs	377
Chapter 13: QNX Neutrino for ARMv7 Cortex A-8 and A-9 Processors	379
libstartup	380
Behavior of shm_ctl()	381
CPU flags	382
Board startup for SMP	383
board_smp_num_cpu()	383
board_smp_init()	384
board_smp_start()	384
board_smp_adjust_num()	384
20010_011P_00J001_110111(/	
Using ARMv7 instructions	385
, _	
Using ARMv7 instructions	387
Using ARMv7 instructions	387
Using ARMv7 instructions Chapter 14: Advanced Qnet Topics Low-level discussion of Qnet principles	387 388 389
Using ARMv7 instructions Chapter 14: Advanced Qnet Topics Low-level discussion of Qnet principles Details of Qnet data communication	387 388 389
Using ARMv7 instructions Chapter 14: Advanced Qnet Topics Low-level discussion of Qnet principles Details of Qnet data communication Node descriptors	387 388 389 391
Using ARMv7 instructions Chapter 14: Advanced Qnet Topics Low-level discussion of Qnet principles Details of Qnet data communication Node descriptors netmgr_strtond() netmgr_ndtostr()	387388389391391
Using ARMv7 instructions Chapter 14: Advanced Qnet Topics Low-level discussion of Qnet principles Details of Qnet data communication Node descriptors netmgr_strtond() netmgr_ndtostr() netmgr_remote_nd()	387389391391391
Using ARMv7 instructions Chapter 14: Advanced Qnet Topics Low-level discussion of Qnet principles Details of Qnet data communication Node descriptors netmgr_strtond() netmgr_ndtostr() netmgr_remote_nd() Booting over the network	387388391391391393
Using ARMv7 instructions Chapter 14: Advanced Qnet Topics Low-level discussion of Qnet principles Details of Qnet data communication Node descriptors netmgr_strtond() netmgr_ndtostr() netmgr_remote_nd()	387389391391393394
Using ARMv7 instructions Chapter 14: Advanced Qnet Topics Low-level discussion of Qnet principles Details of Qnet data communication Node descriptors netmgr_strtond() netmgr_ndtostr() netmgr_remote_nd() Booting over the network Overview Creating directory and setting up configuration files	387388391391393394
Using ARMv7 instructions Chapter 14: Advanced Qnet Topics Low-level discussion of Qnet principles Details of Qnet data communication Node descriptors netmgr_strtond() netmgr_ndtostr() netmgr_remote_nd() Booting over the network Overview	387389391391393394394395
Using ARMv7 instructions Chapter 14: Advanced Qnet Topics Low-level discussion of Qnet principles Details of Qnet data communication Node descriptors netmgr_strtond() netmgr_ndtostr() netmgr_remote_nd() Booting over the network Overview Creating directory and setting up configuration files Building an OS image	387388391391393394394394394
Using ARMv7 instructions Chapter 14: Advanced Qnet Topics Low-level discussion of Qnet principles Details of Qnet data communication Node descriptors netmgr_strtond() netmgr_ndtostr() netmgr_remote_nd() Booting over the network Overview Creating directory and setting up configuration files Building an OS image Booting the client	387388389391391394394394395397
Using ARMv7 instructions Chapter 14: Advanced Qnet Topics Low-level discussion of Qnet principles Details of Qnet data communication Node descriptors netmgr_strtond() netmgr_ndtostr() netmgr_remote_nd() Booting over the network Overview Creating directory and setting up configuration files Building an OS image Booting the client Troubleshooting	387388389391391393394394394395397397

About the QNX Neutrino Programmer's Guide

The QNX Neutrino *Programmer's Guide* is intended for developers who are building applications that will run under the QNX Neutrino RTOS.



Depending on the nature of your application and target platform, you may also need to refer to *Building Embedded Systems*. If you're using the Integrated Development Environment, see the IDE *User's Guide*. For a different perspective on programming in QNX Neutrino, see *Get Programming with the QNX Neutrino*.

This table may help you find what you need in the *Programmer's Guide*:

When you want to:	Go to:	
Get started with a "Hello, world!" program	Compiling and Debugging (p. 17)	
Get an overview of the QNX Neutrino process model and scheduling methods	Programming Overview (p. 51)	
Create and terminate processes	Processes (p. 67)	
Manipulate the access control lists for files and directories	Working with ACLs (p. 119)	
Understand the inaccuracies in times	Tick, Tock: Understanding the Microkernel's Concept of Time (p. 129)	
Use native networking	Transparent Distributed Processing Using Qnet (p. 141)	
Learn about ISRs in QNX Neutrino	Writing an Interrupt Handler (p. 167)	
Analyze and detect problems related to dynamic memory management	Heap Analysis: Making Memory Errors a Thing of the Past (p. 183)	
Deal with non-x86 issues (e.g. big-endian vs little-endian)	Freedom from Hardware and Platform Dependencies (p. 207)	
Understand our Makefile methodology	Conventions for Recursive Makefiles and Directories (p. 217)	
Find out how QNX Neutrino conforms to and extends POSIX	POSIX Conformance (p. 249)	
Learn how to use the GDB debugger	<i>Using GDB</i> (p. 307)	
Learn about special programming issues for ARM platforms	QNX Neutrino for ARMv7 Cortex A-8 and A-9 Processors (p. 379)	
Find out about advanced Qnet topics	Advanced Qnet Topics (p. 387)	

When you want to:	Go to:
Look up terms used in the QNX Neutrino documentation	Glossary



We assume that you've already installed QNX Neutrino and that you're familiar with its architecture. For a detailed overview, see the *System Architecture* manual.

For the most part, the information that's documented in the *Programmer's Guide* is specific to QNX. For more general information, we recommend the following books:

Threads:

 Butenhof, David R. 1997. Programming with POSIX Threads. Reading, MA: Addison-Wesley Publishing Company. ISBN 0-201-63392-2.

TCP/IP programming (note that some of the advanced API features mentioned in the following books might not be supported):

- Hunt, Craig. 2002. TCP/IP Network Administration. Sebastopol, CA: O'Reilly & Associates. ISBN 0-596-00297-1.
- Stevens, W. Richard. 1997. *Unix Network Programming: Networking APIs: Sockets and XTI*. Upper Saddle River, NJ: Prentice-Hall PTR. ISBN 0-13-490012-X.
- —. 1993. *TCP/IP Illustrated, Volume 1 The Protocols*. Reading, MA: Addison-Wesley Publishing Company. ISBN 0-201-63346-9.
- —. 1995. *TCP/IP Illustrated, Volume 2 The Implementation*. Reading, MA: Addison-Wesley Publishing Company. ISBN 0-201-63354-X.

Typographical conventions

Throughout this manual, we use certain typographical conventions to distinguish technical terms. In general, the conventions we use conform to those found in IEEE POSIX publications.

The following table summarizes our conventions:

Reference	Example
Code examples	if(stream == NULL)
Command options	-lR
Commands	make
Environment variables	PATH
File and pathnames	/dev/null
Function names	exit()
Keyboard chords	Ctrl –Alt –Delete
Keyboard input	Username
Keyboard keys	Enter
Program output	login:
Variable names	stdin
Parameters	parm1
User-interface components	Navigator
Window title	Options

We use an arrow in directions for accessing menu items, like this:

You'll find the Other... menu item under Perspective → Show View .

We use notes, cautions, and warnings to highlight important messages:



Notes point out something important or useful.



Cautions tell you about commands or procedures that may have unwanted or undesirable side effects.



Warnings tell you about commands or procedures that could be dangerous to your files, your hardware, or even yourself.

Note to Windows users

In our documentation, we use a forward slash (/) as a delimiter in all pathnames, including those pointing to Windows files. We also generally follow POSIX/UNIX filesystem conventions.

Technical support

Technical assistance is available for all supported products.

To obtain technical support for any QNX product, visit the Support area on our website (*www.qnx.com*). You'll find a wide range of support options, including community forums.

Chapter 1 Compiling and Debugging

Let's start by looking at some things you should consider when you start to write a program for the QNX Neutrino RTOS.

Choosing the version of the OS

You can install and work with multiple versions of QNX Neutrino. Whether you're using the command line or the IDE, you can choose which version of the OS to build programs for.

When you install QNX Momentics, you get a set of configuration files that indicate where you've install the software. The *QNX_CONFIGURATION* environment variable stores the location of the configuration files for the installed versions of QNX Neutrino.

If you're using the command-line tools, use the qconfig utility to configure your machine to use a specific version of the QNX Momentics Tool Suite.

Here's what qconfig does:

- If you run it without any options, qconfig lists the versions that are installed on your machine.
- If you use the -e option, you can use qconfig to set up the environment for building software for a specific version of the OS. For example, if you're using the Korn shell (ksh), you can configure your machine like this:

```
eval `qconfig -n "QNX Neutrino 6.5" -e`
```

When you start the IDE, it uses your current <code>qconfig</code> choice as the default version of the OS; if you haven't chosen a version, the IDE chooses an entry from the directory identified by <code>QNX_CONFIGURATION</code>. If you want to override the IDE's choice, you can choose the appropriate build target. For details, see "Version coexistence" in the Concepts chapter of the IDE <code>User's Guide</code>.

QNX Neutrino uses these environment variables to locate files on the *host* machine:

QNX_HOST

The location of host-specific files.

QNX_TARGET

The location of target backends on the host machine.

The qconfig utility sets these variables according to the version of QNX Momentics that you specified.

Making your code more portable

To help you create portable applications, the QNX Neutrino RTOS lets you compile for specific standards and include OS-specific code.

Conforming to standards

The header files supplied with the C library provide the proper declarations for the functions and for the number and types of arguments used with them. Constant values used in conjunction with the functions are also declared. The files can usually be included in any order, although individual function descriptions show the preferred order for specific headers.

When you use the -ansi option, <code>qcc</code> compiles strict ANSI code. Use this option when you're creating an application that must conform to the ANSI standard. The effect on the inclusion of ANSI- and POSIX-defined header files is that certain portions of the header files are omitted:

- for ANSI header files, these are the portions that go beyond the ANSI standard
- for POSIX header files, these are the portions that go beyond the POSIX standard

You can then use the qcc-D option to define *feature-test macros* to select those portions that are omitted. Here are the most commonly used feature-test macros:

_POSIX_C_SOURCE=199506

Include those portions of the header files that relate to the POSIX standard (*IEEE Standard Portable Operating System Interface for Computer Environments - POSIX 1003.1*, 1996)

FILE OFFSET BITS=64

Make the libraries use 64-bit file offsets.

_LARGEFILE64_SOURCE

Include declarations for the functions that support large files (those whose names end with 64).

ONX SOURCE

Include everything defined in the header files. This is the default.

Feature-test macros may be defined on the command line, or in the source file before any header files are included. The latter is illustrated in the following example, in which an ANSI- and POSIX-conforming application is being developed.

```
#define _POSIX_C_SOURCE=199506
#include <limits.h>
#include <stdio.h>
...
```

```
#if defined(_QNX_SOURCE)
  #include "non_POSIX_header1.h"
  #include "non_POSIX_header2.h"
  #include "non_POSIX_header3.h"
#endif
```

You'd then compile the source code using the -ansi option.

The following ANSI header files are affected by the _POSIX_C_SOURCE feature-test macro:

- <limits.h>
- <setjmp.h>
- <signal.h>
- < <stdio.h>
- < <stdlib.h>
- < <time.h>

The following ANSI and POSIX header files are affected by the _QNX_SOURCE feature-test macro:

Header file	Туре
<ctype.h></ctype.h>	ANSI
<fcntl.h></fcntl.h>	POSIX
<float.h></float.h>	ANSI
imits.h>	ANSI
<math.h></math.h>	ANSI
<pre><pre><pre><pre><pre><pre><pre><pre></pre></pre></pre></pre></pre></pre></pre></pre>	extension to POSIX
<setjmp.h></setjmp.h>	ANSI
<signal.h></signal.h>	ANSI
<sys stat.h=""></sys>	POSIX
<stdio.h></stdio.h>	ANSI
<stdlib.h></stdlib.h>	ANSI
<string.h></string.h>	ANSI
<termios.h></termios.h>	POSIX
<time.h></time.h>	ANSI
<sys types.h=""></sys>	POSIX
<unistd.h></unistd.h>	POSIX

You can also set the **POSIXLY_CORRECT** environment variable to 1. This environment variable is used by Unix-style operating systems to alter behavior to comply with POSIX where it's different from the OS's default behavior.

For example, if **POSIXLY_CORRECT** is set, functions that check the length of a pathname do so *before* removing any redundant . and . . components. If **POSIXLY_CORRECT** isn't set, the functions check the length *after* removing any redundant components.

POSIXLY_CORRECT is a de facto standard that isn't defined by POSIX.

Including OS-specific code

If you need to include OS-specific code in your application, you can wrap it in an #ifdef to make the program more portable.

The qcc utility defines these preprocessor symbols (or *manifest constants*):

```
___QNX___
```

The target is a QNX operating system (QNX 4, QNX Neutrino, or BlackBerry 10 OS).

```
QNXNTO
```

The target is the QNX Neutrino RTOS or BlackBerry 10 OS.

For example:

```
#if defined(__QNX__)
   /* QNX-specific (any flavor) code here */
#if defined(__QNXNTO__)
        /* QNX Neutrino-specific code here */
#else
        /* QNX 4-specific code here */
#endif
#endif
```

For information about other preprocessor symbols that you might find useful, see the Manifests chapter of the QNX Neutrino *C Library Reference*.

Header files in /usr/include

The **\${QNX_TARGET}**/usr/include directory includes at least the following subdirectories (in addition to the usual sys):

arpa

ARPA header files concerning the Internet, FTP and TELNET.

hw

Descriptions of various hardware devices.

arm, x86

CPU-specific header files. You typically don't need to include them directly — they're included automatically. There are some files that you might want to look at:

- Files ending in *intr.h might describe interrupt vector numbers for
 use with InterruptAttach() and InterruptAttachEvent(). If not, look for
 them in the sample buildfiles in \${QNX_TARGET}x86/boot/build,
 or in the buildfiles included in the Board Support Package for your board.
- Files ending with *cpu.h describe the registers and other information about the processor.

malloc, malloc_g

Memory allocation; for more information, see the *Heap Analysis: Making Memory Errors a Thing of the Past* (p. 183) chapter in this guide.

net

Network interface descriptions.

netinet, netinet6, netkey

Header files concerning TCP/IP.

Cross-development

In the rest of this chapter, we'll describe how to compile and debug a QNX Neutrino system. Your QNX Neutrino system might be anything from a deeply embedded turnkey system to a powerful multiprocessor server. You'll develop the code to implement your system using development tools running on a supported cross-development platform.

QNX Neutrino supports *cross-development*, where you develop on your host system and then transfer and debug the executable on your target hardware. This section describes the procedures for compiling and debugging in this way.

A simple example

We'll now go through the steps necessary to build a simple QNX Neutrino system that runs on a standard PC and prints out the text "Hello, world!" — the classic first C program.

Let's look at the spectrum of methods available to you to run your executable:

If your environment is:	Then you can:
Cross-development, network filesystem link	Compile and link, load over network filesystem, then run on target
Cross-development, debugger link	Compile and link, use debugger as a "network filesystem" to transfer executable over to target, then run on target
Cross-development, rebuilding the image	Compile and link, rebuild entire image, reboot target.

Which method you use depends on what's available to you. All the methods share the same initial step — write the code, then compile and link it for QNX Neutrino on the platform that you wish to run the program on.



You can choose how you wish to compile and link your programs: you can use tools with a command-line interface (via the qcc command) or you can use an IDE (Integrated Development Environment) with a graphical user interface (GUI) environment. Our samples here illustrate the command-line method.

The "Hello, world!" program itself is very simple:

```
#include <stdio.h>
int
main (void)
{
    printf ("Hello, world!\n");
```

```
return (0);
```

You compile it for ARMv7 (little-endian) with the single line:

```
qcc -V gcc_ntoarmv7le hello.c -o hello
```

This executes the C compiler with a special cross-compilation flag,

-V gcc_ntoarmv7le, that tells the compiler to use the gcc compiler, QNX

Neutrino-specific includes, libraries, and options to create an ARMv7 (little-endian) executable using the GCC compiler.

To see a list of compilers and platforms supported, simply execute the command:

```
qcc -V
```

If you're using an IDE, refer to the documentation that came with the IDE software for more information.

At this point, you should have an executable called hello.

Cross-development with network filesystem

If you're using a network filesystem, let's assume you've already set up the filesystem on both ends.

For information on setting this up, see the Sample Buildfiles appendix in *Building Embedded Systems*.

Using a network filesystem is the richest cross-development method possible, because you have access to remotely mounted filesystems. This is ideal for a number of reasons:

- Your embedded system requires only a network connection; no disks (and disk controllers) are required.
- You can access all the shipped and custom-developed QNX Neutrino utilities they don't need to be present on your (limited) embedded system.
- Multiple developers can share the same filesystem server.

For a network filesystem, you'll need to ensure that the shell's **PATH** environment variable includes the path to your executable via the network-mounted filesystem. At this point, you can just type the name of the executable at the target's command-line prompt (if you're running a shell on the target):

hello

Cross-development with debugger

Once the debug agent is running, and you've established connectivity between the host and the target, you can use the debugger to download the executable to the target, and then run and interact with it.

Download/upload facility

When the debug agent is connected to the host debugger, you can transfer files between the host and target systems. Note that this is a general-purpose file transfer facility — it's not limited to transferring only executables to the target (although that's what we'll be describing here).

In order for QNX Neutrino to execute a program on the target, the program must be available for loading from some type of filesystem. This means that when you transfer executables to the target, you must write them to a filesystem. Even if you don't have a conventional filesystem on your target, recall that there's a writable "filesystem" present under QNX Neutrino—the /dev/shmem filesystem. This serves as a convenient RAM-disk for downloading the executables to.

Cross-development, deeply embedded

If your system is deeply embedded and you have no connectivity to the host system, or you wish to build a system "from scratch," you'll have to perform the following steps (in addition to the common step of creating the executable(s), as described above):

- 1. Build a QNX Neutrino system image.
- **2.** Transfer the system image to the target.
- **3.** Boot the target.

Step 1: Build a QNX Neutrino system image.

You use a buildfile to build a QNX Neutrino system image that includes your program.

The buildfile contains a list of files (or modules) to be included in the image, as well as information about the image. A buildfile lets you execute commands, specify command arguments, set environment variables, and so on. The buildfile will look something like this:

```
[virtual=processor,elf] .bootstrap = {
    startup-board_name
    PATH=/proc/boot procnto
}
[+script] .script = {
    devc-serpci vid=0x8086,did=0x8811 -c 48000000/16 -b115200 -e & reopen
    hello
}
[type=link] /dev/console=/dev/ser1
[type=link] /usr/lib/ldqnx.so.2=/proc/boot/libc.so
[perms=+r,+x]
libc.so
```

```
[data=copy]
[perms=+r,+x]
devc-serpci
hello &
```

The first part (the four lines starting with [virtual=processor,elf]), contains information about the kind of image we're building.

The next part (the five lines starting with [+script]) is the startup script that indicates what executables (and their command-line parameters, if any) should be invoked.

The [type=link] lines set up symbolic links to specify the serial port and shared library file we want to use.



The runtime linker is expected to be found in a file called ldqnx.so.2, but the runtime linker is currently contained within the libc.so file, so we make a process manager symbolic link to it.

The [perms=+r,+x] lines assign permissions to the binaries that follow — in this case, we're setting them to be readable and executable.

Then we include the C shared library, libc.so.

Then the line [data=copy] specifies to the loader that the data segment should be copied. This applies to all programs that follow the [data=copy] attribute. The result is that we can run the executable multiple times.

Finally, the last part (the last two lines) is simply the list of files indicating which files should be included as part of the image. For more details on buildfile syntax, see the mkifs entry in the *Utilities* Reference.

Our sample buildfile indicates the following:

- A board-specific startup and an ELF boot prefix code are being used to boot.
- The image should contain devc-serpci, the serial communications manager for PCIs, as well as hello (our test program).
- devc-serpci should be started in the background (specified by the & character).
- Standard input, output, and error should be redirected to /dev/ser1 (via the reopen command, which by default redirects to /dev/console, which we've linked to /dev/ser1).
- Finally, our hello program should run.

Let's assume that the above buildfile is called hello.bld. Using the mkifs utility, you could then build an image by typing:

```
mkifs hello.bld hello.ifs
```

Step 2: Transfer the system image to the target.

You now have to transfer the image hello.ifs to the target system. If your target is a PC, the most universal method of booting is to make a bootable floppy diskette.



If you're developing on a platform that has TCP/IP networking and connectivity to your target, you may be able to boot your QNX Neutrino target system using a BOOTP server. For details, see the "BOOTP section" in the Customizing IPL Programs chapter in *Building Embedded Systems*.

If your development system is Windows NT or Windows 95/98, transfer your image to a floppy by issuing this command:

dinit -f hello.ifs a:

Step 3: Boot the target.

Place the floppy diskette into your target system and reboot your machine. The message "Hello, world!" should appear on your screen.

Using libraries

When you're developing code, you almost always make use of a *library*, a collection of code modules that you or someone else has already developed (and hopefully debugged).

Under QNX Neutrino, we have three different ways of using libraries:

Static linking

You can combine your modules with the modules from the library to form a single executable that's entirely self-contained. We call this *static linking*. The word "static" implies that it's not going to change — *all* the required modules are already combined into one executable.

Dynamic linking

Rather than build a self-contained executable ahead of time, you can take your modules and link them in such a way that the Process Manager will link them to the library modules before your program runs. We call this *dynamic linking*. The word "dynamic" here means that the association between your program and the library modules that it uses is done *at load time*, not at link time (as was the case with the static version).

Runtime loading

There's a variation on the theme of dynamic linking called *runtime loading*. In this case, the program decides *while it's actually running* that it wishes to load a particular function from a library.

Static and dynamic libraries

To support the two major kinds of linking described above, QNX Neutrino has two kinds of libraries: *static* and *dynamic*.

Static libraries

A static library is usually identified by a .a (for "archive") suffix (e.g. libc.a). The library contains the modules you want to include in your program and is formatted as a collection of ELF object modules that the linker can then extract (as required by your program) and *bind* with your program at link time.

This "binding" operation literally copies the object module from the library and incorporates it into your "finished" executable. The major advantage of this approach is that when the executable is created, it's entirely self-sufficient — it doesn't require any other object modules to be present on the target system. This advantage is usually outweighed by two principal disadvantages, however:

- Every executable created in this manner has its own private copy of the library's
 object modules, resulting in large executable sizes (and possibly slower loading
 times, depending on the medium).
- You must *relink the executable* in order to upgrade the library modules that it's using.

Dynamic libraries

A dynamic library is usually identified by a .so (for "shared object") suffix (e.g. libc.so). Like a static library, this kind of library also contains the modules that you want to include in your program, but these modules are *not* bound to your program at link time. Instead, your program is linked in such a way that the Process Manager causes your program to be bound to the shared objects at load time.

The Process Manager performs this binding by looking at the program to see if it references any shared objects (.so files). If it does, then the Process Manager looks to see if those particular shared objects are already present in memory. If they're not, it loads them into memory. Then the Process Manager patches your program to be able to use the shared objects. Finally, the Process Manager starts your program.

Note that from your program's perspective, it isn't even aware that it's running with a shared object versus being statically linked — that happened before the first line of your program ran!

The main advantage of dynamic linking is that the programs in the system will reference only a particular set of objects — they don't contain them. As a result, programs are smaller. This also means that you can upgrade the shared objects *without relinking the programs*. This is especially handy when you don't have access to the source code for some of the programs.

dlopen()

When a program decides at runtime that it wants to "augment" itself with additional code, it will issue the *dlopen()* function call. This function call tells the system that it should find the shared object referenced by the *dlopen()* function and create a binding between the program and the shared object. Again, if the shared object isn't present in memory already, the system will load it. The main advantage of this approach is that the program can determine, at runtime, which objects it needs to have access to.

Note that there's no *real* difference between a library of shared objects that you link against and a library of shared objects that you load at runtime. Both modules are of the exact same format. The only difference is in how they get used.

By convention, therefore, we place libraries that you link against (whether statically or dynamically) into the lib directory, and shared objects that you load at runtime into the lib/dll (for "dynamically loaded libraries") directory.

Note that this is just a convention — there's nothing stopping you from linking against a shared object in the lib/dll directory or from using the *dlopen()* function call on a shared object in the lib directory.

Platform-specific library locations

The development tools have been designed to work out of their processor directories (x86, armle-v7, etc.). This means you can use the same toolset for any target platform.

If you have development libraries for a certain platform, then put them into the platform-specific library directory (e.g. /x86/lib), which is where the compiler tools will look.



You can use the -L option to qcc to explicitly provide a library path.

Linking your modules

To link your application against a library, use the -I option to qcc, omitting the lib prefix and any extension from the library's name. For example, to link against libsocket, specify -I socket.

You can specify more than one -I option. The qcc configuration files might specify some libraries for you; for example, qcc usually links against libc. The description of each function in the QNX Neutrino *Library Reference* tells you which library to link against.

By default, the tool chain links dynamically. We do this because of all the benefits mentioned above.

If you want to link statically, then you should specify the -static option to qcc, which will cause the link stage to look in the library directory *only* for static libraries (identified by a .a extension).



For this release of QNX Neutrino, you can't use the floating point emulator (fpemu.so) in statically linked executables.

Although we generally discourage linking statically, it does have this advantage: in an environment with tight configuration management and software QA, the very same executable can be regenerated at link time and known to be complete at runtime.

To link dynamically (the default), you don't have to do anything.

To link statically *and* dynamically (some libraries linked one way, other libraries linked the other way), the two keywords -Bstatic and -Bdynamic are positional parameters that can be specified to qcc. All libraries specified after the particular -B option will be linked in the specified manner. You can have multiple -B options:

```
qcc ... -Bdynamic -11 -12 -Bstatic -13 -14 -Bdynamic -15
```

This will cause libraries 1ib1, 1ib2, and 1ib5 to be dynamically linked (i.e. will link against the files 1ib1.so, 1ib2.so and 1ib5.so), and libraries 1ib3 and 1ib4 to be statically linked (i.e. will link against the files 1ib3.a and 1ib4.a).

You may see the extension .1 appended to the name of the shared object (e.g. libc.so.1). This is a version number. Use the extension .1 for your first revision, and increment the revision number if required.

You may wish to use the above "mixed-mode" linking because some of the libraries you're using will be needed by only one executable or because the libraries are small (less than 4 KB), in which case you'd be wasting memory to use them as shared libraries. Note that shared libraries are typically mapped in 4-KB pages and will require at least one page for the "text" section and possibly one page for the "data" section.



When you specify -Bstatic or -Bdynamic, *all* subsequent libraries will be linked in the specified manner.

Creating shared objects

To create a shared object suitable for linking against:

- 1. Compile the source files for the library using the -shared option to qcc.
- 2. To create the library from the individual object modules, simply combine them with the linker (this is done via the qcc compiler driver as well, also using the -shared command-line option).



Make sure that all objects and "static" libs that are pulled into a .so are position-independent as well (i.e. also compiled with -shared).

If you make a shared library that has to static-link against an existing library, you can't static-link against the .a version (because those libraries themselves aren't compiled in a position-independent manner). Instead, there's a special version of the libraries that has a capital "S" just before the .a extension. For example, instead of linking against libsocket.a, you'd link against libsockets.a. We recommend that you don't static-link, but rather link against the .so shared object version.

Specifying an internal name

When you're building a shared object, you can specify the following option to qcc:

```
"-W1,-hname"
```

(You might need the quotes to pass the option through to the linker intact, depending on the shell.)

This option sets the internal name of the shared object to *name* instead of to the object's pathname, so you'd use *name* to access the object when dynamically linking. You might find this useful when doing cross-development (e.g. from a Windows system to a QNX Neutrino target).

Optimizing the runtime linker

The runtime linker supports the following features that you can use to optimize the way it resolves and relocates symbols:

- Lazy binding (p. 33)
- RTLD_LAZY (p. 36)
- Lazy loading (p. 36)

The term "lazy" in all of them can cause confusion, so let's compare them briefly before looking at them in detail:

- Lazy binding is the process by which symbol resolution is deferred until a symbol is actually used.
- RTLD_LAZY indicates to the runtime linker that an a loaded object might have unresolved symbols that it shouldn't worry about resolving. It's up to the developer to load the objects that define the symbols before calling any functions that use the symbols.
- Lazy loading modifies the lookup scope and avoids loading objects (or even looking them up) before the linker needs to search them for a symbol.

RTLD_LAZY doesn't imply anything about whether dependencies will be loaded; it says where a symbol will be looked up. It allows the looking up of symbols that are subsequently opened with the RTLD_GLOBAL flag, when looking up a symbol in an RTLD_LAZY-opened object and its resolution scope fails. The term "resolution scope" is intentional since we don't know what it is by just looking at RTLD_LAZY; it differs depending on whether you specify RTLD_WORLD, RTLD_LAZYLOAD, or both.

Lazy binding

Lazy binding (also known as lazy linking or on-demand symbol resolution) is the process by which symbol resolution isn't done until a symbol is actually used. Functions can be bound on-demand, but data references can't.

All dynamically resolved functions are called via a Procedure Linkage Table (PLT) stub. A PLT stub uses relative addressing, using the Global Offset Table (GOT) to retrieve the offset. The PLT knows where the GOT is, and uses the offset to this table (determined at program linking time) to read the destination function's address and make a jump to it.

To be able to do that, the GOT must be populated with the appropriate addresses. Lazy binding is implemented by providing some stub code that gets called the first time a function call to a lazy-resolved symbol is made. This stub is responsible for setting up the necessary information for a binding function that the runtime linker provides. The stub code then jumps to it.

The binding function sets up the arguments for the resolving function, calls it, and then jumps to the address returned from resolving function. The next time that user code calls this function, the PLT stub jumps directly to the resolved address, since the resolved value is now in the GOT. (GOT is initially populated with the address of this special stub; the runtime linker does only a simple relocation for the load base.)

The semantics of lazy-bound (on-demand) and now-bound (at load time) programs are the same:

- In the bind-now case, the application fails to load if a symbol couldn't be resolved.
- In the lazy-bound case, it doesn't fail right away (since it didn't check to see if it could resolve all the symbols) but will still fail on the first call to an unresolved symbol. This doesn't change even if the application later calls *dlopen()* to load an object that defines that symbol, because the application can't change the resolution scope. The only exceptions to this rule are objects loaded using *dlopen()* with the RTLD_LAZY (p. 36) flag (see below).

Lazy binding is controlled by the -z option to the linker, 1d. This option takes keywords as an argument; the keywords include (among others):

lazy

When generating an executable or shared library, mark it to tell the dynamic linker to defer function-call resolution to the point when the function is called (lazy binding), rather than at load time.

now

When generating an executable or shared library, mark it to tell the dynamic linker to resolve all symbols when the program is started, or when the shared library is linked to using *dlopen()*, instead of deferring function-call resolution to the point when the function is first called.

Lazy binding is the default. If you're using qcc (as we recommend), use the -W option to pass the -z option to 1d. For example, specify -WI,-zlazy or -WI,-znow.

There are cases where the default lazy binding isn't desired. For example:

- While the system is under development, you might want to fully resolve all symbols right away, to catch library mismatches; your application would fail to load if a referenced function couldn't be resolved.
- You might want to fully resolve the symbols for a particular object at load time.
- You might want only a given program to be always bound right away.

There's a way to do each of these:

 To change the default lazy binding to the "bind now" behavior for all processes started from a given shell, set the LD_BIND_NOW environment variable to a non-null value. For example:

```
LD_BIND_NOW=1 ./foobar
```

By default, pdebug sets **LD_BIND_NOW** to 1.



Without <code>LD_BIND_NOW</code>, you'd see a different backtrace for the first function call into the shared object as the runtime linker resolves the symbol. On subsequent calls to the same function, the backtrace would be as expected. You can prevent <code>pdebug</code> from setting <code>LD_BIND_NOW</code> by specifying the -I ("el") option.

 To override the binding strategy for a given shared object, link it with the -znow linker option:

```
qcc -Wl,-znow -o libfoo.so foo.o bar.o
```

 To override the binding for all objects of a given program, link the program's executable with the -znow option:

```
qcc -Wl,-znow -o foobar -lfoo.so -lbar.so
```

To see if a binary was built with -znow, type:

```
readelf -d my_binary
```

The output will include the BIND_NOW dynamic tag if -znow was used when linking.

You can use the **DL_DEBUG** environment variable to get the runtime linker to display some debugging information. For more information, see "*Diagnostics and debugging* (p. 38)" and "*Environment variables* (p. 38)," later in this chapter.

Applications with many symbols — typically C++ applications — benefit the most from lazy binding. For many C applications, the difference is negligible.

Lazy binding does introduce some overhead; it takes longer to resolve *N* symbols using lazy binding than with immediate resolution. There are two aspects that potentially save time or at least improve the user's perception of system performance:

- When you start an application, the runtime linker doesn't resolve all symbols, so
 you may expect to see the initial screen sooner, providing your initialization prior
 to displaying the screen doesn't end up calling most of the symbols anyway.
- When the application is running, many symbols won't be used and thus they aren't looked up.

Both of the above are typically true for C++ applications.

Lazy binding could affect realtime performance because there's a delay the first time you access each unresolved symbol, but this delay isn't likely to be significant, especially on fast machines. If this delay is a problem, use -znow



It isn't sufficient to use -znow on the shared object that has a function definition for handling something critical; the whole process must be resolved "now". For example, you should probably link driver executables with -znow or run drivers with **LD_BIND_NOW**.

RTLD_LAZY

RTLD_LAZY is a flag that you can pass to dlopen() when you load a shared object.

Even though the word "lazy" in the name suggests that it's about lazy binding as described above in "Lazy binding (p. 33)," it has different semantics. It makes (semantically) no difference whether a program is lazy- or now- bound, but for objects that you load with dlopen(), RTLD_LAZY means "there may be symbols that can't be resolved; don't try to resolve them until they're used." This flag currently applies only to function symbols, not data symbols.

What does it practically mean? To explain that, consider a system that comprises an executable X, and shared objects P (primary) and S (secondary). X uses *dlopen()* to load P, and P loads S. Let's assume that P has a reference to *some_function()*, and S has the definition of *some_function()*.

If X opens P without RTLD_LAZY binding, the symbol <code>some_function()</code> doesn't get resolved — not at the load time, nor later by opening S. However, if P is loaded with RTLD_LAZY | RTLD_WORLD, the runtime linker doesn't try to resolve the symbol <code>some_function()</code>, and there's an opportunity for us to call <code>dlopen("S", RTLD_GLOBAL)</code> before calling <code>some_function()</code>. This way, the <code>some_function()</code> reference in P will be satisfied by the definition of <code>some_function()</code> in S.

There are several programming models made possible by RTLD_LAZY:

- X uses dlopen() to load P and calls a function in P; P determines its own requirements and loads the object with the appropriate implementation. For that, P needs to be opened with RTLD_LAZY. For example, the X server opens a video driver (P), and the video driver opens its own dependencies.
- X uses *dlopen()* to load P, and then determines the implementation that P needs to use (e.g. P is a user interface, and S is the "skin" implementation).

Lazy loading

Lazy dependency loading (or on-demand dependency loading) is a method of loading the required objects when they're actually required. The most important effect of lazy loading is that the resolution scope is different for a lazyload dependency. While in a "normal" dependency, the resolution scope contains immediate dependencies followed

by their dependencies sorted in breadth-first order, for a lazy-loaded object, the resolution scope ends with its first-level dependencies. Therefore, all of the lazy-loaded symbols must be satisfied by definitions in its first level dependencies.

Due to this difference, you must carefully consider whether lazy-load dependencies are suitable for your application.

Each dynamic object can have multiple dependencies. Dependencies can be *immediate* or *implicit*:

- Immediate dependencies are those that directly satisfy all external references of the object.
- Implicit dependencies are those that satisfy dependencies of the object's dependencies.

The ultimate dependent object is the executable binary itself, but we will consider any object that needs to resolve its external symbols to be dependent. When referring to immediate or implicit dependencies, we always view them from the point of view of the dependent object.

Here are some other terms:

Lazy-load dependency

Dependencies that aren't immediately loaded are referred to as *lazy-load* dependencies.

Lookup scope/resolution scope

A list of objects where a symbol is looked for. The lookup scope is determined at the object's load time.

Immediate and lazy symbol resolution

All symbolic references must be resolved. Some symbol resolutions need to be performed immediately, such as symbolic references to global data. Another type of symbolic references can be resolved on first use: external function calls. The first type of symbolic references are referred to as *immediate*, and the second as *lazy*.

To use lazy loading, specify the RTLD_LAZYLOAD flag when you call <code>dlopen()</code>.

The runtime linker creates the link map for the executable in the usual way, by creating links for each DT_NEEDED object. Lazy dependencies are represented by a special link, a placeholder that doesn't refer to actual object yet. It does, however, contain enough information for the runtime linker to look up the object and load it on demand.

The lookup scope for the dependent object and its regular dependencies is the link map, while for each lazy dependency symbol, the lookup scope gets determined on-demand, when the object is actually loaded. Its lookup scope is defined in the same way that we define the lookup scope for an object loaded with

dlopen(RTLD_GROUP) (it's important that RTLD_WORLD not be specified, or else we'd be including all RTLD_GLOBAL objects in the lookup scope).

When a call to an external function is made from dependent object, by using the lazy binding mechanism we traverse its scope of resolution in the usual way. If we find the definition, we're done. If, however, we reach a link that refers to a not-yet-loaded dependency, we load the dependency and then look it up for the definition. We repeat this process until either a definition is found, or we've traversed the entire dependency list. We don't traverse any of the implicit dependencies.

The same mechanism applies to resolving immediate relocations. If a dependent object has a reference to global data, and we don't find the definition of it in the currently loaded objects, we proceed to load the lazy dependencies, the same way as described above for resolving a function symbol. The difference is that this happens at the load time of the dependent object, not on first reference.



This approach preserves the symbol-overriding mechanisms provided by LD PRELOAD.

Another important thing to note is that lazy-loaded dependencies change their own lookup scope; therefore, when resolving a function call from a lazy-loaded dependency, the lookup scope will be different than if the dependency was a normal dependency. As a consequence, lazy loading can't be transparent as, for example, lazy binding is (lazy binding doesn't change the lookup scope, only the time of the symbol lookup).

Diagnostics and debugging

When you're developing a complex application, it may become difficult to understand how the dynamic linker lays out the internal link maps and scopes of resolution. To help determine what exactly the dynamic linker is doing, you can use the **DL_DEBUG** environment variable to make the linker display diagnostic messages.

Diagnostic messages are categorized, and the value of **DL_DEBUG** determines which categories are displayed. The special category help doesn't produce diagnostics messages, but rather displays a help message and then terminates the application.

To redirect diagnostic messages to a file, set the **LD_DEBUG_OUTPUT** environment variable to the full path of the output file.



For security reasons, the use of **LD_DEBUG_OUTPUT** with setuid binaries is disabled.

Environment variables

The following environment variables affect the operation of the dynamic linker:

DL_DEBUG

Display diagnostic messages. The value can be a comma-separated list of the following:

- all display all debug messages.
- help display a help message, and then exit.
- reloc display relocation processing messages.
- libs display information about shared objects being opened.
- statistics display runtime linker statistics.
- lazyload print lazy-load debug messages.
- debug print various runtime linker debug messages.

A value of 1 (one) is the same as all.

LD_DEBUG

A synonym for **DL_DEBUG**; if you set both variables, **DL_DEBUG** takes precedence.

LD_DEBUG_OUTPUT

The name of a file in which the dynamic linker writes its output. By default, output is written to *stderr*.



For security reasons, the use of **LD_DEBUG_OUTPUT** with setuid binaries is disabled.

LD_BIND_NOW

Affects lazy-load dependencies due to full symbol resolution. Typically, it forces the loading of all lazy-load dependencies (until all symbols have been resolved).

Debugging

Now let's look at the different options you have for debugging the executable.

Debugging in a cross-development environment

The debugger can run on one platform to debug executables on another:

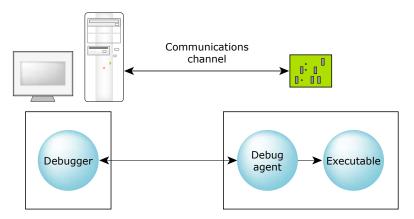


Figure 1: Debugging in a cross-development environment.

In a cross-development environment, the host and the target systems must be connected via some form of communications channel.

The two components, the debugger and the debug agent, perform different functions. The debugger is responsible for presenting a user interface and for communicating over some communications channel to the debug agent. The debug agent is responsible for controlling (via the /proc filesystem) the process being debugged.

All debug information and source remains on the host system. This combination of a small target agent and a full-featured host debugger allows for full symbolic debugging, even in the memory-constrained environments of small targets.



In order to debug your programs with full source using the symbolic debugger, you'll need to tell the C compiler and linker to include symbolic information in the object and executable files. For details, see the qcc docs in the *Utilities* Reference. Without this symbolic information, the debugger can provide only assembly-language-level debugging.

The GNU debugger (gdb)

The GNU debugger is a command-line program that provides a very rich set of options.

You'll find a tutorial-style doc called "*Using GDB* (p. 307)" as an appendix in this manual.

You can invoke gdb by using the following variants, which correspond to your target platform:

For this target:	Use this command:	
ARMv7	ntoarmv7-gdb	
Intel	ntox86-gdb	

For more information, see the gdb entry in the *Utilities* Reference.

The process-level debug agent

When a breakpoint is encountered and the process-level debug agent _pdebug_ is in control, the process being debugged and all its threads are stopped. All other processes continue to run and interrupts remain enabled.



To use the pdebug agent, you must set up pty support (via devc-pty) on your target.

When the process's threads are stopped and the debugger is in control, you may examine the state of any thread within the process. For more info on examining thread states, see your debugger docs.

The pdebug agent may either be included in the image and started in the image startup script or started later from any available filesystem that contains pdebug. The pdebug command-line invocation specifies which device will be used.

You can start pdebug in one of three ways, reflecting the nature of the connection between the debugger and the debug agent:

- serial connection
- TCP/IP static port connection
- TCP/IP dynamic port connection

Serial connection

If the host and target systems are connected via a serial port, then the debug agent (pdebug) should be started with the following command:

pdebug devicename[,baud]

This indicates the target's communications channel (*devicename*) and specifies the baud rate (*baud*).

For example, if the target has a /dev/ser2 connection to the host, and we want the link to be 115,200 baud, we would specify:

pdebug /dev/ser2,115200

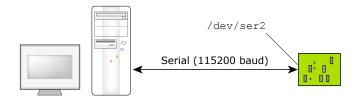


Figure 2: Running the process debug agent with a serial link at 115200 baud.

The QNX Neutrino target requires a supported serial port. The target is connected to the host using either a null-modem cable, which allows two identical serial ports to be directly connected, or a straight-through cable, depending on the particular serial port provided on the target. The null-modem cable crosses the Tx/Rx data and handshaking lines. Most computer stores stock both types of cables.

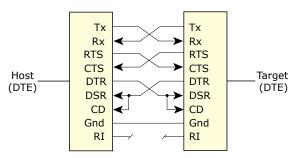


Figure 3: Null-modem cable pinout.

TCP/IP connection

If the host and the target are connected via some form of TCP/IP connection, the debugger and agent can use that connection as well. Two types of TCP/IP communications are possible with the debugger and agent: static port and dynamic port connections (see below).

The QNX Neutrino target must have a supported Ethernet controller. Note that since the debug agent requires the TCP/IP manager to be running on the target, this requires more memory.

This need for extra memory is offset by the advantage of being able to run multiple debuggers with multiple debug sessions over the single network cable. In a networked development environment, developers on different network hosts could independently debug programs on a single common target.

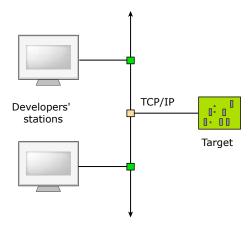


Figure 4: Several developers can debug a single target system.

TCP/IP static port connection

For a static port connection, the debug agent is assigned a TCP/IP port number and will listen for communications on that port only. For example, the pdebug 1204 command specifies TCP/IP port 1204:

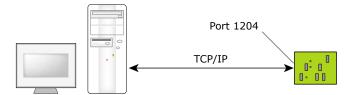


Figure 5: Running the process debug agent with a TCP/IP static port.

If you have multiple developers, each developer could be assigned a specific TCP/IP port number above the reserved ports 0 to 1024.

TCP/IP dynamic port connection

For a dynamic port connection, the debug agent is started by inetd and communicates via standard input/output. The inetd process fetches the communications port from the configuration file (typically /etc/services). The host process debug agent connects to the port via inetd — the debug agent has no knowledge of the port.

The command to run the process debug agent in this case is simply as follows (from the inetd.conf file):

pdebug -

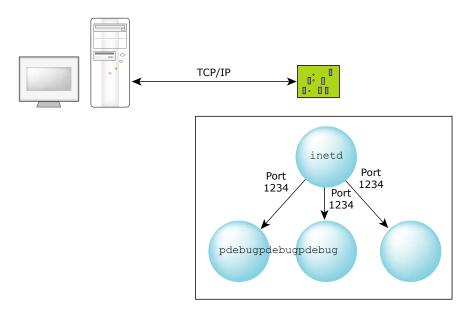


Figure 6: For a TCP/IP dynamic port connection, the inetd process will manage the port.

Note that this method is also suitable for one or more developers. It's effectively what the qconn daemon does to provide support to remote IDE components; qconn listens to a port and spawns pdebug on a new, dynamically determined port.

Sample buildfile for dynamic port sessions

The following buildfile supports multiple sessions specifying the same port. Although the port for each session on the pdebug side is the same, inetd causes unique ports to be used on the debugger side. This ensures a unique socket pair for each session.

Note that inetd should be included and started in your boot image. The pdebug program should also be in your boot image (or available from a mounted filesystem).

The config files could be built into your boot image (as in this sample buildfile) or linked in from a remote filesystem using the [type=link] command:

```
[type=link] /etc/services=/mount_point/services
[type=link] /etc/inetd.conf=/mount_point/inetd.conf
```

Here's the buildfile:

```
[virtual=x86,bios +compress] boot = {
   startup-bios -N node428
   PATH=/proc/boot:/bin:/apk/bin_nto:./ procnto
[+script] startup-script = {
# explicitly running in edited mode for the console link
   devc-ser8250 -e -b115200 &
   reopen
   display_msg Welcome to QNX Neutrino on a PC-compatible BIOS system
# tcp/ip with a NE2000 Ethernet adaptor
   io-pkt-v4 -dne2000 -ptcpip if=ndi0:10.0.1.172 &
   waitfor /dev/socket
   inetd &
   pipe &
# pdebug needs devc-pty and esh
   devc-pty &
# NFS mount of the QNX Neutrino filesystem
```

```
fs-nfs3 -r 10.89:/x86 /x86 -r 10.89:/home /home &
# CIFS mount of the NT filesystem
    fs-cifs -b //QA:10.0.1.181:/QARoot /QAc apk 123 &
# NT Hyperterm needs this to interpret backspaces correctly
    stty erase=08
    reopen /dev/console
    [+session] esh &
[type=link] /usr/lib/ldqnx.so.2=/proc/boot/libc.so
[type=link] /lib=/x86/lib
[type=link] /tmp=/dev/shmem
                                    # tmp points to shared memory
[type=link] /dev/console=/dev/ser2 # no local terminal
[type=link] /bin=/x86/bin
                                    # executables in the path
[type=link] /apk=/home/apk
                                    # home dir
[perms=+r,+x]
                       # Boot images made under MS-Windows
                       # need to be reminded of permissions.
devn-ne2000.so
libc.so
fpemu.so
libsocket.so
[data=copy]
                       # All executables that can be restarted
                       # go below.
devc-ser8250
io-pkt-v4
pipe
devc-pty
fs-nfs3
fs-cifs
inetd
esh
stty
ping
ls
                       # Data files are created in the named
                       # directory.
/etc/hosts =
127.0.0.1
             localhost
10.89
            node89
10.222
             node222
10.326
             node326
10.0.1.181
            QA node437
            APP_ENG_1
10.241
/etc/services = {
              21/tcp
ftp
              23/tcp
telnet
              79/tcp
finger
pdebug
              8000/tcp
/etc/inetd.conf = {
                                           /bin/fdtpd
ftp
        stream
                 tcp
                         nowait
                                   root
                                                           fdtpd
telnet
       stream
                  tcp
                         nowait
                                   root
                                           /bin/telnetd
                                                           telnetd
finger stream
                  tcp
                         nowait
                                   root
                                           /bin
                                                           fingerd
pdebug stream
                                           /bin/pdebug
                                                           pdebug -
                        nowait
                 tcp
                                   root
```

A simple debug session

In this example, we'll be debugging our "Hello, world!" program via a TCP/IP link. We go through the following steps:

- configuring the target
- · compiling for debugging
- · starting the debug session
- getting help

Configure the target

Let's assume an x86 target using a basic TCP/IP configuration. The following lines (from the sample boot file at the end of this chapter) show what's needed to host the sample session:

```
io-pkt-v4 -dne2000 -ptcpip if=ndi0:10.0.1.172 & devc-pty & [+session] pdebug 8000 &
```

The above specifies that the host IP address is 10.0.1.172 (or 10.428 for short). The pdebug program is configured to use port 8000.

Compile for debugging

We'll be using the x86 compiler. Note the -g option, which enables debugging information to be included:

```
$ qcc -V gcc_ntox86 -g -o hello hello.c
```

Start the debug session

For this simple example, the sources can be found in our working directory. The gdb debugger provides its own shell; by default its prompt is (gdb). The following commands would be used to start the session. To reduce document clutter, we'll run the debugger in quiet mode:

```
# Working from the source directory:
    (61) con1 /home/allan/src >ntox86-gdb -quiet

# Specifying the target IP address and the port
# used by pdebug:
    (gdb) target qnx 10.428:8000
    Remote debugging using 10.428:8000
    0x0 in ?? ()

# Uploading the debug executable to the target:
# (This can be a slow operation. If the executable
# is large, you may prefer to build the executable
# into your target image.)
# Note that the file has to be in the target system's namespace,
# so we can get the executable via a network filesystem, ftp,
# or, if no filesystem is present, via the upload command.

    (gdb) upload hello /tmp/hello
```

```
# Loading the symbolic debug information from the
# current working directory:
# (In this case, "hello" must reside on the host system.)
    (gdb) sym hello
   Reading symbols from hello...done.
# Starting the program:
    (gdb) run /tmp/hello
    Starting program: /tmp/hello
   Trying to find symbol file for ldqnx.so.2
   Retrying dynamic interpreter in libc.so.1
# Setting the breakpoint on main():
    (gdb) break main
    Breakpoint 1 at 0x80483ae: file hello.c, line 8.
# Allowing the program to continue to the breakpoint
# found at main():
    (gdb) c
    Continuing.
   Breakpoint 1, main () at hello.c:8
            setprio (0,9);
# Ready to start the debug session.
(gdb)
```

Get help

While in a debug session, any of the following commands could be used as the next action for starting the actual debugging of the project:

n

Step through the program, proceeding through subroutine calls.

1

List the specified function or line.

break

Set a breakpoint on the specified function or line.

help

Get the help main menu.

help data

Get the help data menu.

help inspect

Get help for the inspect command.

inspect y

Inspect the contents of variable y.

set y=3

Assign a value to variable y.

bt

Get a back trace.

For more information about these commands and their arguments, see the *Using GDB* (p. 307) appendix in this guide, or use the help *cmd* command in gdb.

Let's see how to use some of these basic commands.

```
# The list command:
    (gdb) l
    4
       main () {
            int x,y,z;
    6
    7
    8
            setprio (0,9);
    9
            printf ("Hi ya!\n");
    10
    11
            x=3;
    12
            y=2;
# Press <enter> to repeat the last command:
    (gdb) <enter>
    13
            z=3*2;
    14
            exit (0);
    15
    16
       }
    17
# Break on line 11:
   (gdb) break 11
  Breakpoint 2 at 0x80483c7: file hello.c, line 11.
# Continue until the first breakpoint:
    (gdb) c
    Continuing.
   Hi ya!
    Breakpoint 2, main () at hello.c:11
            x=3;
# Notice that the above command went past the
# printf statement at line 9. I/O from the
# printf statement is displayed on screen.
# Inspect variable y, using the short form of the
# inspect command:
    (gdb) ins y
    $1 = -1338755812
# Get some help on the step and next commands:
    (gdb) help s
    Step program until it reaches a different source line.
    Argument N means do this N times (or till program stops
    for another reason).
    (gdb) help n
    Step program, proceeding through subroutine calls.
    Like the "step" command as long as subroutine calls don't
    happen; when they do, the call is treated as one instruction.
    Argument N means do this N times (or till program stops
    for another reason).
# Go to the next line of execution:
    (gdb) n
            y=2;
    12
    (gdb) n
            z=3*2;
    13
    (gdb) inspect z
    $2 = 1
    (gdb) n
            exit (0);
```

```
(gdb) inspe z
$3 = 6

# Continue program execution:
   (gdb) continue
   Continuing.

Program exited normally.

# Quit the debugger session:
   (gdb) quit
   The program is running. Exit anyway? (y or n) y
   (61) con1 /home/allan/src >
```

Sample boot image

```
[virtual=x86,bios +compress] boot = {
    startup-bios -N node428
    PATH=/proc/boot:./ procnto
[+script] startup-script = {
# explicitly running in edited mode for the console link
    devc-ser8250 -e -b115200 &
    reopen
    display_msg Welcome to QNX Neutrino on a PC-compatible BIOS system
# tcp/ip with a NE2000 Ethernet adaptor
    io-pkt-v4 -dne2000 -ptcpip if=ndi0:10.0.1.172 &
    waitfor /dev/socket
    pipe &
# pdebug needs devc-pty
    devc-pty &
# starting pdebug twice on separate ports
    [+session] pdebug 8000 &
[type=link] /usr/lib/ldqnx.so.2=/proc/boot/libc.so
[type=link] /lib=/x86/lib
[type=link] /tmp=/dev/shmem # tmp points to sha:
[type=link] /dev/console=/dev/ser2 # no local terminal
                                      # tmp points to shared memory
                       # Boot images made under MS-Windows need
                       # to be reminded of permissions.
devn-ne2000.so
libc.so
fpemu.so
libsocket.so
                        # All executables that can be restarted
[data=copy]
                        # go below.
devc-ser8250
io-pkt-v4
pipe
devc-pty
pdebug
esh
ping
ls
```

Debugging using libmudflap

QNX includes support for Mudflap through libmudflap. Mudflap provides you with pointer checking capabilities based on compile time instrumentation as it transparently includes protective code to potentially unsafe C/C++ constructs at run time.

For information about the available options for this feature, see the GNU website at:

http://gcc.gnu.org/onlinedocs/gcc-4.2.4/gcc/Optimize-Options.html#index-fmudflap-502

For more debugging information, you can search the GNU website for the topic "Mudflap Pointer Debugging".

This debugging feature is enabled by passing the option -fmudflap to the compiler. For front ends that support it, it instruments all risky pointer and array dereferencing operations, some standard library string and heap functions, and some associated constructs with range and validity tests.

The instrumentation relies on a separate runtime library (libmudflap), which is linked into a program if -fmudflap -lmudflap is given at link time. Runtime behavior of the instrumented program is controlled by the environment variable **MUDFLAP_OPTIONS**. You can obtain a list of options by setting **MUDFLAP_OPTIONS** to -help and calling a Mudflap compiled program.

For your multithreaded programs:

- To compile, you must use the option -fmudflapth instead of -fmudflap
- To link, you must use the option -fmudflapth -lmudflapth

Additionally, if you want instrumentation to ignore pointer reads, you'll need to use the option -fmudflapir in addition to the option -fmudflap or -fmudflapth (for multithreaded). This option creates less instrumentation, resulting in faster execution.



Regardless of whether you're using qcc or gcc, for both the compile and link steps you must specify the option -fmudflap or -fmudflapth.

Chapter 2

Programming Overview

The QNX Neutrino RTOS architecture consists of the microkernel and some number of cooperating processes. These processes communicate with each other via various forms of interprocess communication (IPC). Message passing is the primary form of IPC in QNX Neutrino.

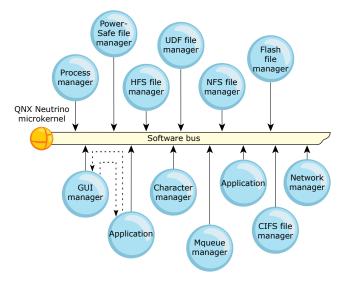


Figure 7: The QNX Neutrino architecture acts as a kind of "software bus" that lets you dynamically plug in/out OS modules.

The above diagram shows an application sending a message to the GUI manager, and the GUI manager responding.

An application as a set of processes

This idea of using a set of cooperating processes isn't limited to the OS "system processes." Your applications should be written in exactly the same way. You might have some driver process that gathers data from some hardware and then needs to pass that data on to other processes, which then act on that data.

Let's use the example of an application that's monitoring the level of water in a reservoir. Should the water level rise too high, then you'll want to alert an operator as well as open some flow-control valve.

In terms of hardware, you'll have some water-level sensor tied to an I/O board in a computer. If the sensor detects some water, it will cause the I/O board to generate an interrupt.

The software consists of a driver process that talks to the I/O board and contains an *interrupt handler* to deal with the board's interrupt. You'll also have a GUI process that will display an alarm window when told to do so by the driver, and finally, another driver process that will open/close the flow-control valve.

Why break this application into multiple processes? Why not have everything done in one process? There are several reasons:

1. Each process lives in its own *protected memory space*. If there's a bug such that a pointer has a value that isn't valid for the process, then when the pointer is next used, the hardware will generate a fault, which the kernel handles (the kernel will set the SIGSEGV signal on the process).

This approach has two benefits. The first is that a stray pointer won't cause one process to overwrite the memory of another process. The implications are that one process can go bad *while other processes keep running*.

The second benefit is that the fault will occur precisely when the pointer is used, not when it's overwriting some other process's memory. If a pointer were allowed to overwrite another process's memory, then the problem wouldn't manifest itself until later and would therefore be much harder to debug.

- 2. It's very easy to add or remove processes from an application as need be. This implies that applications can be made scalable adding new features is simply a matter of adding processes.
- **3.** Processes can be started and stopped *on the fly*, which comes in handy for dynamic upgrading or simply for stopping an offending process.
- **4.** Processing can be easily distributed across multiple processors in a networked environment.
- **5.** The code for a process is much simpler if it concentrates on doing a single job. For example, a single process that acts as a driver, a GUI front-end, and a data logger would be fairly complex to build and maintain. This complexity would increase

- the chances of a bug, and any such bug would likely affect all the activities being done by the process.
- **6.** Different programmers can work on different processes without fear of overwriting each other's work.

Some definitions

Different operating systems often have different meanings for terms such as "process," "thread," "task," "program," and so on.

In the QNX Neutrino RTOS, we typically use only the terms *process* and *thread*. An "application" typically means a collection of processes; the term "program" is usually equivalent to "process."

A *thread* is a single flow of execution or control. At the lowest level, this equates to the program counter or instruction pointer register advancing through some machine instructions. Each thread has its own current value for this register.

A *process* is a collection of one or more threads that share many things. Threads within a process share at least the following:

- variables that aren't on the stack
- signal handlers (although you typically have one thread that handles signals, and you block them in all the other threads)



It isn't safe to use floating-point operations in signal handlers.

- signal ignore mask
- channels
- connections

Threads don't share such things as stack, values for the various registers, SMP thread-affinity mask, and a few other things.

Two threads residing in two different processes don't share very much. About the only thing they do share is the CPU. You can have them share memory between them, but this takes a little setup (see *shm_open()* in the *C Library Reference* for an example).

When you run a process, you're automatically running a thread. This thread is called the "main" thread, since the first programmer-provided function that runs in a C program is main(). The main thread can then create additional threads if need be.

Only a few things are special about the main thread. One is that if it returns normally, the code it returns to calls <code>exit()</code> . Calling <code>exit()</code> terminates the process, meaning that all threads in the process are terminated. So when you return normally from the main thread, the process is terminated. When other threads in the process return normally, the code they return to calls <code>pthread_exit()</code>, which terminates just that thread.

Another special thing about the main thread is that if it terminates in such a manner that the process is still around (e.g. it calls *pthread_exit()* and there are other threads in the process), then the memory for the main thread's stack is *not* freed up. This is

because the command-line arguments are on that stack and other threads may need them. If any other thread terminates, then that thread's stack is freed.

Priorities and scheduling

Although there's a good discussion of priorities and scheduling policies in the *System Architecture* manual, it will help to go over that topic here in the context of a programmer's guide.

The QNX Neutrino RTOS provides a priority-driven preemptive architecture. *Priority-driven* means that each thread can be given a priority and will be able to access the CPU based on that priority. If a low-priority thread and a high-priority thread both want to run, then the high-priority thread will be the one that gets to run.

Preemptive means that if a low-priority thread is currently running and then a high-priority thread suddenly wants to run, then the high-priority thread will take over the CPU and run, thereby preempting the low-priority thread.

Priority range

Threads can have a scheduling priority ranging from 1 to 255 (the highest priority), independent of the scheduling policy.

Unprivileged threads can have a priority ranging from 1 to 63 (by default); root threads (i.e. those with an effective *uid* of 0) and those with the PROCMGR_AID_PRIORITY ability enabled (see *procmgr_ability()*) are allowed to set priorities above 63.

You can change the allowed priority range for unprivileged processes with the procnto -P option.

The special *idle* thread (in the process manager) has priority 0 and is always ready to run. A thread inherits the priority of its parent thread by default.

A thread has both a *real priority* and an *effective priority*, and is scheduled in accordance with its effective priority. The thread itself can change both its real and effective priority together, but the effective priority may change because of priority inheritance or the scheduling policy. Normally, the effective priority is the same as the real priority.

Interrupt handlers are of higher priority than any thread, but they're not scheduled in the same way as threads. If an interrupt occurs, then:

- 1. Whatever thread was running loses the CPU handling the interrupt (SMP issues).
- **2.** The hardware runs the kernel.
- **3.** The kernel calls the appropriate interrupt handler.

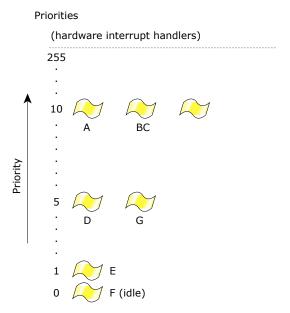


Figure 8: Thread priorities range from 0 (lowest) to 255 (highest).

Although interrupt handlers aren't scheduled in the same way as threads, they're considered to be of a higher priority because an interrupt handler will preempt *any* running thread.

Out-of-range priority requests (QNX Neutrino 6.6 or later)

As an extension to POSIX, when you're setting a priority, you can wrap it in one these macros to specify how to handle out-of-range priority requests:

- SCHED_PRIO_LIMIT_ERROR(priority) indicate an error
- SCHED_PRIO_LIMIT_SATURATE(priority) saturate at the maximum allowed priority

You can append an s or S to procnto's -P option if you want out-of-range priority requests by default to saturate at the maximum allowed value instead of resulting in an error.

BLOCKED and **READY** states

To fully understand how scheduling works, you must first understand what it means when we say a thread is BLOCKED and when a thread is in the READY state. You must also understand a particular data structure in the kernel called the *ready queue*.

A thread is BLOCKED if it doesn't want the CPU, which might happen for several reasons, such as:

- The thread is sleeping.
- The thread is waiting for a message from another thread.
- The thread is waiting on a mutex that some other thread owns.

When designing an application, you always try to arrange it so that if any thread is waiting for something, make sure it *isn't spinning in a loop using up the CPU*. In general, try to avoid polling. If you do have to poll, then you should try to sleep for some period between polls, thereby giving lower-priority threads the CPU should they want it.

For each type of blocking there is a blocking state. We'll discuss these states briefly as they come up. Examples of some blocking states are REPLY-blocked, RECEIVE-blocked, MUTEX-blocked, INTERRUPT-blocked, and NANOSLEEP-blocked.

A thread is READY if it wants a CPU but something else currently has it. If a thread currently has a CPU, then it's in the RUNNING state. Simply put, a thread that's either READY or RUNNING isn't blocked.

The ready queue

The ready queue is a simplified version of a kernel data structure consisting of a queue with one entry per priority. Each entry in turn consists of another queue of the threads that are READY at the priority. Any threads that aren't READY aren't in any of the queues — but they will be when they become READY.

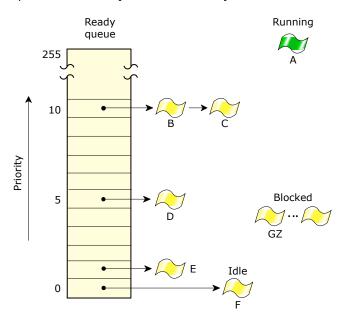


Figure 9: The ready queue for five threads.

In the above diagram, threads B–F are READY. Thread A is currently running. All other threads (G–Z) are BLOCKED. Threads A, B, and C are at the highest priority, so they'll share the processor based on the running thread's scheduling policy.

The *active* thread is the one in the RUNNING state. The kernel uses an array (with one entry per processor in the system) to keep track of the running threads.

Every thread is assigned a priority. The scheduler selects the next thread to run by looking at the priority assigned to every thread in the READY state (i.e. capable of using the CPU). The thread with the highest priority that's at the head of its priority's

queue is selected to run. In the above diagram, thread A was formerly at the head of priority 10's queue, so thread A was moved to the RUNNING state.

Suspending a running thread

The execution of a running thread is temporarily suspended whenever the microkernel is entered as the result of a kernel call, exception, or hardware interrupt. A scheduling decision is made whenever the execution state of any thread changes — it doesn't matter which processes the threads might reside within. *Threads are scheduled globally across all processes*.

Normally, the execution of the suspended thread will resume, but the scheduler will perform a context switch from one thread to another whenever the running thread:

- is blocked
- is preempted
- yields

When the thread is blocked

The running thread will block when it must wait for some event to occur (response to an IPC request, wait on a mutex, etc.). The blocked thread is removed from the running array, and the highest-priority ready thread that's at the head of its priority's queue is then allowed to run. When the blocked thread is subsequently unblocked, it's placed on the end of the ready queue for its priority level.

When the thread is preempted

The running thread will be preempted when a higher-priority thread is placed on the ready queue (it becomes READY as the result of its block condition being resolved). The preempted thread is moved to the start of the ready queue for that priority, and the higher-priority thread runs. When it's time for a thread at that priority level to run again, that thread resumes execution — a preempted thread will not lose its place in the queue for its priority level.

When the thread yields

The running thread voluntarily yields the processor (via *sched_yield()*) and is placed on the end of the ready queue for that priority. The highest-priority thread then runs (which may still be the thread that just yielded).

Scheduling policies

To meet the needs of various applications, QNX Neutrino provides these scheduling policies:

- FIFO scheduling (p. 62) SCHED_FIFO
- Round-robin scheduling (p. 62) SCHED_RR
- Sporadic scheduling (p. 63) SCHED_SPORADIC



Another scheduling policy (called "other" — SCHED_OTHER) behaves in the same way as round-robin. We don't recommend using the "other" scheduling policy, because its behavior may change in the future.

Each thread in the system may run using any method. Scheduling methods are effective on a per-thread basis, not on a global basis for all threads and processes on a node.

Remember that these scheduling policies apply only when two or more threads that share the same priority are READY (i.e. the threads are directly competing with each other). If a higher-priority thread becomes READY, it immediately preempts all lower-priority threads.

In the following diagram, three threads of equal priority are READY. If Thread A blocks, Thread B will run.

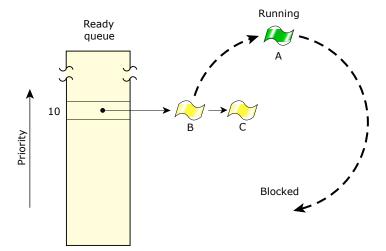


Figure 10: Thread A blocks; Thread B runs.

A thread can call *pthread_attr_setschedparam()* or *pthread_attr_setschedpolicy()* to set the scheduling parameters and policy to use for any threads that it creates.

Although a thread inherits its scheduling policy from its parent thread, the thread can call *pthread_setschedparam()* to request to change the algorithm and priority applied by the kernel, or *pthread_setschedprio()* to change just the priority. A thread can get information about its current algorithm and policy by calling *pthread_getschedparam()*.

Both these functions take a thread ID as their first argument; you can call *pthread_self()* to get the calling thread's ID. For example:

```
struct sched_param param;
int policy, retcode;

/* Get the scheduling parameters. */

retcode = pthread_getschedparam( pthread_self(), &policy, &param);
if (retcode != EOK) {
    printf ("pthread_getschedparam: %s.\n", strerror (retcode));
    return EXIT_FAILURE;
}

printf ("The assigned priority is %d, and the current priority is %d.\n",
    param.sched_priority, param.sched_curpriority);

/* Increase the priority. */
param.sched_priority++;

retcode = pthread_setschedparam( pthread_self(), policy, &param);
if (retcode != EOK) {
    printf ("pthread_setschedparam: %s.\n", strerror (retcode));
    return EXIT_FAILURE;
}
```

When you get the scheduling parameters, the *sched_priority* member of the sched_param structure is set to the assigned priority, and the *sched_curpriority* member is set to the priority that the thread is currently running at (which could be different because of priority inheritance).

Our libraries provide a number of ways to get and set scheduling parameters:

pthread_getschedparam(), pthread_setschedparam(), pthread_setschedprio()

These are your best choice for portability.

SchedGet(), SchedSet()

You can use these to get and set the scheduling priority and policy, but they aren't portable because they're kernel calls.

sched_getparam(), sched_setparam(), sched_getscheduler(), and sched_setscheduler()

These functions are intended for use in single-threaded processes.



Our implementations of these functions don't conform completely to POSIX. In multi-threaded applications, they get or set the parameters for thread 1 in the process *pid*, or for the *calling thread* if *pid* is 0. If you depend on this behavior, your code won't be portable. POSIX 1003.1 says these functions should return -1 and set *errno* to EPERM in a multi-threaded application.

getprio(), setprio()

The QNX Neutrino RTOS supports these functions only for compatibility with QNX 4 programs; don't use them in new programs.

getpriority(), setpriority()

Deprecated; don't use these functions.

FIFO scheduling

In FIFO (SCHED_FIFO) scheduling, a thread selected to run continues executing until it:

- · voluntarily relinquishes control (e.g. it blocks)
- is preempted by a higher-priority thread

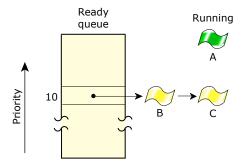


Figure 11: FIFO scheduling. Thread A runs until it blocks.

Round-robin scheduling

In round-robin (SCHED_RR) scheduling, a thread selected to run continues executing until it:

- voluntarily relinquishes control
- is preempted by a higher-priority thread
- · consumes its timeslice

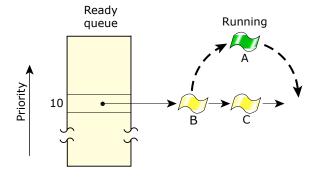


Figure 12: Round-robin scheduling. Thread A ran until it consumed its timeslice; the next READY thread (Thread B) now runs.

A *timeslice* is the unit of time assigned to every process. Once it consumes its timeslice, a thread is put at the end of its queue in the ready queue and the next READY thread at the same priority level is given control.

A timeslice is calculated as:

4 × ticksize

If your processor speed is greater than 40 MHz, then the ticksize defaults to 1 millisecond; otherwise, it defaults to 10 milliseconds. So, the default timeslice is either 4 milliseconds (the default for most CPUs) or 40 milliseconds (the default for slower hardware).

Apart from time-slicing, the round-robin scheduling method is identical to FIFO scheduling.

Sporadic scheduling

The sporadic (SCHED_SPORADIC) scheduling policy is generally used to provide a capped limit on the execution time of a thread within a given period of time. This behavior is essential when Rate Monotonic Analysis (RMA) is being performed on a system that services both periodic and aperiodic events. Essentially, this algorithm allows a thread to service aperiodic events without jeopardizing the hard deadlines of other threads or processes in the system.

Under sporadic scheduling, a thread's priority can oscillate dynamically between a *foreground* or normal priority and a *background* or low priority. For more information, see "Sporadic scheduling" in the QNX Neutrino Microkernel chapter of the *System Architecture* guide.

Why threads?

Now that we know more about priorities, we can talk about why you might want to use threads. We saw many good reasons for breaking things up into separate processes, but what's the purpose of a *multithreaded* process?

Let's take the example of a driver. A driver typically has two obligations: one is to talk to the hardware and the other is to talk to other processes. Generally, talking to the hardware is more time-critical than talking to other processes. When an interrupt comes in from the hardware, it needs to be serviced in a relatively small window of time — the driver shouldn't be busy at that moment talking to another process.

One way of fixing this problem is to choose a way of talking to other processes where this situation simply won't arise (e.g. don't send messages to another process such that you have to wait for acknowledgment, don't do any time-consuming processing on behalf of other processes, etc.).

Another way is to use two threads: a higher-priority thread that deals with the hardware and a lower-priority thread that talks to other processes. The lower-priority thread can be talking away to other processes without affecting the time-critical job at all, because when the interrupt occurs, the *higher-priority thread will preempt the lower-priority thread* and then handle the interrupt.

Although this approach does add the complication of controlling access to any common data structures between the two threads, QNX Neutrino provides synchronization tools such as *mutexes* (mutual exclusion locks), which can ensure exclusive access to any data shared between threads.

Summary

The modular architecture is apparent throughout the entire system: the QNX Neutrino RTOS itself consists of a set of cooperating processes, as does an application.

Each individual process can comprise several cooperating threads. What "keeps everything together" is the priority-based preemptive scheduling in QNX Neutrino, which ensures that time-critical tasks are dealt with by the right thread or process at the right time.

Chapter 3 Processes

As we stated in the Overview chapter, the architecture of the QNX Neutrino RTOS consists of a small microkernel and some number of cooperating processes. We also pointed out that your applications should be written the same way — as a set of cooperating processes.

In this chapter, we'll see how to start processes (also known as *creating* processes) from code, how to terminate them, and how to detect their termination when it happens.

For another perspective, see the Processes and Threads and Message Passing chapters of *Get Programming with the QNX Neutrino*.

Starting processes — two methods

In embedded applications, there are two typical approaches to starting your processes at boot time. One approach is to run a *shell script* that contains the command lines for running the processes.

There are some useful utilities such as on and nice for controlling how those processes are started.

The other approach is to have a *starter process* run at boot time. This starter process then starts up all your other processes. This approach has the advantage of giving you more control over how processes are started, whereas the script approach is easier for you (or anyone) to modify quickly.

Process creation

The process manager component of procesto is responsible for process creation. If a process wants to create another process, it makes a call to one of the process-creation functions, which then effectively sends a message to the process manager.

Here are the process-creation functions:

- exec*() family of functions: exec!(), execle(), execlp(), execvp(), execvp(), execvp()
- fork()
- forkpty()
- popen()
- posix_spawn()
- spawn*() family of functions: spawn(), spawnl(), spawnle(), spawnlp(), spawnlp(), spawnvp(), spawnvp(), spawnvp()
- system()
- vfork()

When you start a new process, it replaces the existing process if:

- You specify P_OVERLAY when calling one of the spawn* functions.
- You call one of the exec* routines.

The existing process may be suspended while the new process executes (control continues at the point following the place where the new process was started) in the following situations:

- You specify P_WAIT when calling one of the *spawn** functions.
- You call system().

There are several versions of *spawn*()* and *exec*()*. The * is one to three letters, where:

- 1 or v (one is required) indicates the way the process parameters are passed
- p (optional) indicates that the PATH environment variable is searched to locate the program for the process
- e (optional) indicates that the environment variables are being passed

For details on each of these functions, see their entries in the QNX Neutrino *C Library Reference*. Here we'll mention some of the things common to many of them.

Concurrency

Three possibilities can happen to the creator during process creation:

1. The child process is created and runs concurrently with the parent. In this case, as soon as process creation is successful, the process manager replies to the parent,

and the child is made READY. If it's the parent's turn to run, then the first thing it does is return from the process-creation function. This may not be the case if the child process was created at a higher priority than the parent (in which case the child will run before the parent gets to run again).

This is how fork(), forkpty(), popen(), and spawn() work. This is also how the spawn*() family of functions work when the mode is passed as P_NOWAIT or P_NOWAITO.

2. The child replaces the parent. In fact, they're not really parent and child, because the image of the given process simply replaces that of the caller. Many things will change, but those things that uniquely identify a process (such as the process ID) will remain the same. This is typically referred to as "execing," since usually the exec*() functions are used.

Many things will remain the same (including the process ID, parent process ID, and file descriptors) with the exception of file descriptors that had the FD_CLOEXEC flag set using *fcntl()*. See the *exec*()* functions for more on what will and will not be the same across the exec.

The login command serves as a good example of execing. Once the login is successful, the login command execs into a shell.

Functions you can use for this type of process creation are the *exec*()* and *spawn*()* families of functions, with mode passed as P_OVERLAY.

3. The parent waits until the child terminates. This can be done by passing the mode as P_WAIT for the *spawn*()* family of functions.

Note that what is going on underneath the covers in this case is that <code>spawn()</code> is called as in the first possibility above. Then, after it returns, <code>waitpid()</code> is called in order to wait for the child to terminate. This means that you can use any of the functions mentioned in our first possibility above to achieve the same thing if you follow them by a call to one of the <code>wait*()</code> functions (e.g. <code>wait()</code> or <code>waitpid()</code>).



Many programmers coming from the Unix world are familiar with the technique of using a call to *fork()* followed by a call to one of the *exec*()* functions in order to create a process that's different from the caller. In QNX Neutrino, you can usually achieve the same thing in a single call to one of the *posix_spawn*()* or *spawn*()* functions.

Inheriting file descriptors

The documentation in the QNX Neutrino *C Library Reference* for each function describes in detail what the child inherits from the parent. One thing that we should talk about here, however, is file-descriptor inheritance.

With many of the process-creation functions, the child inherits the file descriptors of the parent. For example, if the parent had file descriptor 5 in use for a particular file when the parent creates the child, the child will also have file descriptor 5 in use for that same file. The child's file descriptor will have been duplicated from the parent's. This means that at the filesystem manager level, the parent and child have the same open control block (OCB) for the file, so if the child seeks to some position in the file, then that changes the parent's seek position as well. It also means that the child can do a write(5, buf, nbytes) without having previously called open().

If you don't want the child to inherit a particular file descriptor, then you can use fcntl() to prevent it. Note that this won't prevent inheritance of a file descriptor during a fork(). The call to fcntl() would be:

```
fcntl(fd, F_SETFD, FD_CLOEXEC);
```

If you want the parent to set up exactly which files will be open for the child, then you can use the *fd_count* and *fd_map* parameters with *spawn()*. Note that in this case, only the file descriptors you specify will be inherited. This is especially useful for redirecting the child's standard input (file descriptor 0), standard output (file descriptor 1), and standard error (file descriptor 2) to places where the parent wants them to go.

Alternatively this file descriptor inheritance can also be done through use of fork(), one or more calls to dup(), dup2(), and close(), and then $exec^*()$. The call to fork() creates a child that inherits all the of the parent's file descriptors. dup(), dup2() and close() are then used by the child to rearrange its file descriptors. Lastly, $exec^*()$ is called to replace the child with the process to be created. Though more complicated, this method of setting up file descriptors is portable whereas the spawn() method is not.



Inheriting file descriptors can be a security problem for setuid or setgid processes. For example, a malicious programmer might close *stdin*, *stdout*, or *stderr* before spawning the process. If the process opens a file, it can receive file descriptor 0, 1, or 2. If the process then uses *stdin*, *stdout*, or *stderr*, it might unintentionally corrupt the file. To help prevent such a situation, you can use *set_lowest_fd()* to make sure that your process never gets a file descriptor lower than what you expect.

Process termination

A process can terminate in one of two basic ways:

- normally (p. 72) (e.g. the process terminates itself)
- abnormally (p. 72) (e.g. the process terminates as the result of a signal's being set)

In some operating systems, if a parent process dies, then all of its child processes die too. This isn't the case in QNX Neutrino.

Normal process termination

A process can terminate itself by having any thread in the process call *exit()*.

Returning from the main thread (i.e. main()) will also terminate the process, because the code that's returned to calls exit(). This isn't true of threads other than the main thread. Returning normally from one of them causes $pthread_exit()$ to be called, which terminates only that thread. Of course, if that thread is the last one in the process, then the process is terminated.

The value passed to *exit()* or returned from *main()* is called the *exit status*.

Abnormal process termination

A process can be terminated abnormally for a number of reasons. Ultimately, all of these reasons will result in a *signal's being set on the process*. A signal is something that can interrupt the flow of your threads at any time. The default action for most signals is to terminate the process.



Note that what causes a particular signal to be generated is sometimes processor-dependent.

Here are some of the reasons that a process might be terminated abnormally:

- If any thread in the process tries to use a pointer that doesn't contain a valid virtual address for the process, then the hardware will generate a fault and the kernel will handle the fault by setting the SIGSEGV signal on the process. By default, this will terminate the process.
- A floating-point exception will cause the kernel to set the SIGFPE signal on the process. The default is to terminate the process.
- If you create a shared memory object and then map in more than the size of the
 object, when you try to write past the size of the object you'll be hit with SIGBUS.
 In this case, the virtual address used is valid (since the mapping succeeded), but
 the memory cannot be accessed.

To get the kernel to display some diagnostics whenever a process terminates abnormally, configure procnto with multiple -v options. If the process has fd 2 open, then the diagnostics are displayed using (*stderr*); otherwise; you can specify where the diagnostics get displayed by using the -D option to your startup. For example, the -D as used in this buildfile excerpt will cause the output to go to a serial port:

```
[virtual=x86,bios +compress] .bootstrap = {
    startup-bios -D 8250..115200
    procnto -vvvv
}
```

You can also have the current state of a terminated process written to a file so that you can later bring up the debugger and examine just what happened. This type of examination is called *postmortem* debugging. This happens only if the process is terminated due to one of these signals:

Signal	Description
SIGABRT	Program-called abort function
SIGBUS	Parity error
SIGEMT	EMT instruction (emulation trap) Note that SIGEMT and SIGDEADLK (mutex deadlock; see <i>SyncMutexEvent()</i>) refer to the same signal.
SIGFPE	Floating-point error or division by zero
SIGILL	<pre>Illegal instruction executed One possible cause for this signal is trying to perform an operation that requires I/O privileges. To request these privileges: 1. Enable the PROCMGR_AID_IO ability. For more information, see procmgr_ability(). 2. Call ThreadCtl(), specifying the _NTO_TCTL_IO flag: ThreadCtl(_NTO_TCTL_IO, 0);</pre>
SIGQUIT	Quit
SIGSEGV	Segmentation violation
SIGSYS	Bad argument to a system call

Signal	Description
SIGTRAP	Trace trap (not reset when caught)
SIGXCPU	Exceeded the CPU limit
SIGXFSZ	Exceeded the file size limit

The process that dumps the state to a file when the process terminates is called dumper, which must be running when the abnormal termination occurs. This is extremely useful, because embedded systems may run unassisted for days or even years before a crash occurs, making it impossible to reproduce the actual circumstances leading up to the crash.

Detecting process termination

In an embedded application, it's often important to detect if any process terminates prematurely and, if so, to handle it. Handling it may involve something as simple as restarting the process or as complex as:

- 1. Notifying other processes that they should put their systems into a safe state.
- **2.** Resetting the hardware.

This is complicated by the fact that some processes call *procmgr_daemon()*. Processes that call this function are referred to as *daemons*. The *procmgr_daemon()* function:

- detaches the caller from the controlling terminal
- puts it in session 1
- optionally, closes all file descriptors except stdin, stdout, and stderr
- optionally, redirects *stdin*, *stdout*, *stderr* to /dev/null

As a result of the above, their termination is hard to detect.

Another scenario is where a server process wants to know if any of its clients disappear so that it can clean up any resources it had set aside on their behalf.

Let's look at various ways of detecting process termination.

Using the High Availability Framework

The High Availability Framework provides components not only for detecting when processes terminate, but also for recovering from that termination.

The main component is a process called the High Availability Manager (HAM) that acts as a "smart watchdog". Your processes talk to the HAM using the HAM API. With this API you basically set up conditions that the HAM should watch for and take actions when these conditions occur. So the HAM can be told to detect when a process terminates and to automatically restart the process. It will even detect the termination of daemon processes.

In fact, the High Availability Manager can restart a number of processes, wait between restarts for a process to be ready, and notify the process that this is happening.

The HAM also does heartbeating. Processes can periodically notify the HAM that they are still functioning correctly. If a process specified amount of time goes by between these notifications then the HAM can take some action.

The above are just a sample of what is possible with the High Availability Framework. For more information, see the High Availability Framework *Developer's Guide*.

Detecting termination from a starter process

If you've created a set of processes using a starter process, then all those processes are children of that process, with the exception of those that have called procmgr_daemon().

If all you want to do is detect that one of those children has terminated, then a loop that blocks on wait() or sigwaitinfo() will suffice. Note that when a child process calls procmgr_daemon(), both wait() and sigwaitinfo() behave as if the child process died, although the child is still running.

The wait() function will block, waiting until any of the caller's child processes terminate. There's also waitpid(), which lets you wait for a specific child process, wait3(), and wait4(). Lastly, there is waitid(), which is the lower level of all the wait*() functions and returns the most information.

The wait*() functions won't always help, however. If a child process was created using one of the spawn*() family of functions with the mode passed as P_NOWAITO, then the wait*() functions won't be notified of its termination!

What if the child process terminates, but the parent hasn't yet called wait*()? This would be the case if one child had already terminated, so wait*() returned, but then before the parent got back to the wait*(), a second child terminates. In that case, some information would have to be stored away about the second child for when the parent does get around to its wait*().

This is in fact the case. The second child's memory will have been freed up, its files will have been closed, and in general the child's resources will have been cleaned up with the exception of a few bytes of memory in the process manager that contain the child's exit status or other reason that it had terminated and its process ID. When the second child is in this state, it's referred to as a zombie. The child will remain a zombie until the parent either terminates or finds out about the child's termination (e.g. the parent calls wait*()).

What this means is that if a child has terminated and the parent is still alive but doesn't yet know about the terminated child (e.g. hasn't called wait*()), then the zombie will be hanging around. If the parent will never care, then you may as well not have the child become a zombie. To prevent the child from becoming a zombie when it terminates, create the child process using one of the spawn*() family of functions and pass P NOWAITO for the *mode*.

Sample parent process using wait()

The following sample illustrates the use of wait() for waiting for child processes to terminate.

```
/*
* waitchild.c
```

^{*} This is an example of a parent process that creates some child * processes and then waits for them to terminate. The waiting is

```
* done using wait(). When a child process terminates, the * wait() function returns.
#include <spawn.h>
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <sys/wait.h>
main(int argc, char **argv)
   char
                        *args[] = { "child", NULL };
                       i, status;
pid;
   pid t
    struct inheritance inherit;
    // create 3 child processes
   for (i = 0; i < 3; i++) {
    inherit.flags = 0;
       if ((pid = spawn("child", 0, NULL, &inherit, args, environ)) == -1)
    perror("spawn() failed");
           printf("spawned child, pid = %d\n", pid);
   printf("a child terminated, pid = %d\n", pid);
       if (WIFEXITED(status))
       } // else see documentation for wait() for more macros
```

The following is a simple child process to try out with the above parent.

```
#include <stdio.h>
#include <unistd.h>

main(int argc, char **argv)
{
    printf("pausing, terminate me somehow\n");
    pause();
}
```

The *sigwaitinfo()* function will block, waiting until any signals that the caller tells it to wait for are set on the caller. If a child process terminates, then the SIGCHLD signal is set on the parent. So all the parent has to do is request that *sigwaitinfo()* return when SIGCHLD arrives.

Sample parent process using sigwaitinfo()

The following sample illustrates the use of *sigwaitinfo()* for waiting for child processes to terminate.

```
/*
  * sigwaitchild.c
  *
  * This is an example of a parent process that creates some child
  * processes and then waits for them to terminate. The waiting is
  * done using sigwaitinfo(). When a child process terminates, the
  * SIGCHLD signal is set on the parent. sigwaitinfo() will return
  * when the signal arrives.
  */

#include <errno.h>
#include <spawn.h>
#include <stdio.h>
#include <stdio.h>
#include <stdio.h>
#include <stdio.h>
#include <svs/neutrino.h>

void
signal_handler(int signo)
{
    // do nothing
}
main(int argc, char **argv)
```

```
char
                              *args[] = { "child", NULL };
int
pid t
                              pid;
sigset_t
                              mask;
siginfo t
                              info;
struct inheritance
struct sigaction
                              action;
// mask out the SIGCHLD signal so that it will not interrupt us,
// (side note: the child inherits the parents mask)
sigemptyset(&mask);
sigaddset(&mask, SIGCHLD);
sigprocmask(SIG_BLOCK, &mask, NULL);
// by default, SIGCHLD is set to be ignored so unless we happen
// by default, SIGCHLD is set to be ignored so unless we happen
// to be blocked on sigwaitinfo() at the time that SIGCHLD
// is set on us we will not get it. To fix this, we simply
// register a signal handler. Since we've masked the signal
// above, it will not affect us. At the same time we will make
// it a queued signal so that if more than one are set on us,
// sigwaitinfo() will get them all.
sigemptyset(&action.sa_handler = signal_handler;
sigemptyset(&action.sa_mask);
action.sa_flags = SA_SIGINFO; // make it a queued signal
sigaction(SIGCHLD, &action, NULL);
// create 3 child processes
     (i = 0; i < 3; i++) {
inherit.flags = 0;
     if ((pid = spawn("child", 0, NULL, &inherit, args, environ)) == -1)
    perror("spawn() failed");
           printf("spawned child, pid = %d\n", pid);
while (1) {
     if (sigwaitinfo(&mask, &info) == -1) {
           perror("sigwaitinfo() failed");
            continue;
      switch (info.si signo) {
      case SIGCHLD:
            // info.si_pid is pid of terminated process, it is not POSIX
            printf("a child terminated, pid = %d\n", info.si_pid);
            break;
     default:
           // should not get here since we only asked for SIGCHLD
}
```

Detecting dumped processes

As mentioned above, you can run dumper so that when a process dies, dumper writes the state of the process to a file.

You can also write your own dumper-type process to run instead of, or as well as, dumper. This way the terminating process doesn't have to be a child of yours.

To do this, write a resource manager that registers the name, <code>/proc/dumper</code> with type <code>_FTYPE_DUMPER</code>. When a process dies due to one of the appropriate signals, the process manager will open <code>/proc/dumper</code> and write the pid of the process that died — then it'll wait until you reply to the write with success and then it'll finish terminating the process.

It's possible that more than one process will have <code>/proc/dumper</code> registered at the same time, however, the process manager notifies only the process that's at the beginning of its list for that name. Undoubtedly, you want both your resource manager and <code>dumper</code> to handle this termination. To do this, request the process manager to put you, instead of <code>dumper</code>, at the beginning of the <code>/proc/dumper</code> list by passing <code>_RESMGR_FLAG_BEFORE</code> in the <code>flags</code> argument to <code>resmgr_attach()</code>. You must also open <code>/proc/dumper</code> so that you can communicate with <code>dumper</code> if it's running. Whenever your io_write handler is called, write the pid to <code>dumper</code> and do your own handling. Of course this works only when <code>dumper</code> is run before your resource manager; otherwise, your open of <code>/proc/dumper</code> won't work.

The following is a sample process that demonstrates the above:

```
dumphandler.c
    This demonstrates how you get notified whenever a process
    dies due to any of the following signals:
    STGABRT
    SIGBUS
    SIGEMT
    SIGFPE
    SIGILL
    SIGOUIT
    SIGSEGV
    SIGSYS
    SIGTRAP
    SIGXCPU
    SIGXFSZ
    To do so, register the path, /proc/dumper with type
    _FTYPE_DUMPER. When a process dies due to one of the above
    signals, the process manager will open /proc/dumper, and
    write the pid of the process that died - it will wait until
    you reply to the write with success, and then it will finish
    terminating the process.
    Note that while it is possible for more than one process to
    have /\text{proc}/\text{dumper} registered at the same time, the process
    manager will notify only the one that is at the beginning of
    its list for that name.
    But we want both us and dumper to handle this termination.
    To do this, we make sure that we get notified instead of
    dumper by asking the process manager to put us at the
    beginning of its list for /proc/dumper (done by passing
    _RESMGR_FLAG_BEFORE to resmgr_attach()). We also open
    /proc/dumper so that we can communicate with dumper if it is
    running. Whenever our io_write handler is called, we write
    the pid to dumper and do our own handling. Of course, this
    works only if dumper is run before we are, or else our open
    will not work.
* /
#include <errno.h>
#include <stdio.h>
#include <stdlib.h>
#include <fcntl.h>
#include <string.h>
#include <unistd.h>
#include <sys/iofunc.h>
#include <sys/dispatch.h>
#include <sys/neutrino.h>
#include <sys/procfs.h>
#include <sys/stat.h>
int io_write (resmgr_context_t *ctp, io_write_t *msg,
              RESMGR_OCB_T *ocb);
static int dumper_fd;
resmgr_connect_funcs_t connect_funcs;
resmgr_io_funcs_t
                         io_funcs;
                         *dpp;
dispatch_t
resmgr_attr_t
                         rattr;
dispatch_context_t
                         *ctp;
iofunc_attr_t
                        ioattr;
        *progname = "dumphandler";
char
main(int argc, char **argv)
    ^{\prime *} find dumper so that we can pass any pids on to it ^{*}/
    dumper_fd = open("/proc/dumper", O_WRONLY);
    dpp = dispatch_create();
```

```
memset(&rattr, 0, sizeof(rattr));
    rattr.msg_max_size = 2048;
    iofunc_func_init(_RESMGR_CONNECT_NFUNCS, &connect_funcs,
                      _RESMGR_IO_NFUNCS, &io_funcs);
    io_funcs.write = io_write;
    iofunc_attr_init(&ioattr, S_IFNAM | 0600, NULL, NULL);
    resmgr_attach(dpp, &rattr, "/proc/dumper", _FTYPE_DUMPER,
                   RESMGR_FLAG_BEFORE, &connect_funcs,
                   &io_funcs, &ioattr);
    ctp = dispatch_context_alloc(dpp);
    while (1) {
        if ((ctp = dispatch_block(ctp)) == NULL) {
    fprintf(stderr, "%s: dispatch_block failed: %s\n",
                              progname, strerror(errno));
            exit(1);
        dispatch_handler(ctp);
    }
}
struct dinfo s {
                         info;
    procfs_debuginfo
                         pathbuffer[PATH_MAX]; /* 1st byte is
    char
                                                   info.path[0] */
};
int.
display_process_info(pid_t pid)
                     buf[PATH_MAX + 1];
                    fd, status;
    int.
    struct dinfo_s dinfo;
    procfs_greg
                     reg;
    printf("%s: process %d died\n", progname, pid);
    sprintf(buf, "/proc/%d/as", pid);
    if ((fd = open(buf, O_RDONLY|O_NONBLOCK)) == -1)
        return errno;
    status = devctl(fd, DCMD_PROC_MAPDEBUG_BASE, &dinfo,
                     sizeof(dinfo), NULL);
    if (status != EOK) {
        close(fd);
        return status;
    printf("%s: name is %s\n", progname, dinfo.info.path);
     \star For getting other type of information, see sys/procfs.h,
     * sys/debug.h, and sys/dcmd_proc.h
    close(fd);
    return EOK;
int.
io_write(resmgr_context_t *ctp, io_write_t *msg,
         RESMGR_OCB_T *ocb)
    char
             *pstr;
    int
            status;
    if ((status = iofunc_write_verify(ctp, msg, ocb, NULL))
        ! = EOK )
        return status;
    if (msg->i.xtype & _IO_XTYPE_MASK != _IO_XTYPE_NONE)
        return ENOSYS;
    if (ctp->msg_max_size < msg->i.nbytes + 1)
        return ENOSPC; /* not all the message could fit in the
```

For more information about getting process information (including using the DCMD_PROC_MAPDEBUG_BASE (p. 111) *devctl()* command), see "*Controlling processes via the /proc filesystem* (p. 98)," later in this chapter.

Detecting the termination of daemons

What would happen if you've created some processes that subsequently made themselves daemons (i.e. called *procmgr_daemon()*)? As we mentioned above, the *wait*()* functions and *sigwaitinfo()* won't help.

For these you can give the kernel an event, such as one containing a pulse, and have the kernel deliver that pulse to you whenever a daemon terminates. This request for notification is done by calling <code>procmgr_event_notify()</code> with <code>PROCMGR_EVENT_DAEMON_DEATH</code> in <code>flags</code>.

See the documentation for *procmgr_event_notify()* for an example that uses this function.

Detecting client termination

The last scenario is where a server process wants to be notified of any clients that terminate so that it can clean up any resources that it had set aside for them.

This is very easy to do if the server process is written as a *resource manager*, because the resource manager's *io_close_dup()* and *io_close_ocb()* handlers, as well as the *ocb_free()* function, will be called if a client is terminated for any reason. For more information, see *Writing a Resource Manager*.

Process privileges

In systems where security is important, applications should run with the fewest privileges possible. Doing this helps reduce the impact of possible compromises and can also help lower the privilege escalation attack surface of the device.

The more difficult it is for attackers to elevate an application's privileges, the better; forcing attackers to chain multiple attacks against various applications that each have minimal sets of permissions is ideal.

Services and other system processes usually have to be started as root so that they can do privileged things. To improve security, some of these services and processes implement a -U command-line option that specifies the user and group IDs to run as.

This option takes one of these forms:

- -U user_name
- -U uid[:gid[,gid...]]

For example, -U99:98 specifies that the process is to run as user ID 99 and group ID 98. An integration team can assign the appropriate permissions for each user and group.

After the process starts up and carries out any privileged functionality it requires, and possibly obtains capabilities to retain some privileged permissions, it's expected to lower its permission to those specified by the -U command-line option.

The liblogin library includes a standard helper function called <code>set_ids_from_arg()</code> that you can use to do this. In order to use <code>set_ids_from_arg()</code>, you have to include the <code><login.h></code> file and build with the -llogin linker option. The following example shows how to handle the -U argument simply:

```
case 'U':
   if( set_ids_from_arg( optarg ) ) {
      // insert appropriate logging and error handling
      log("Invalid user/group specified [%s]", optarg);
      return EXIT_FAILURE;
   }
   break;
```

If your application can't lower privileges as soon as it parses the -U argument, you should save the option's argument and pass it to *set_ids_from_arg()* later.

You should lower application privileges as soon as possible, in stages if necessary. For instance, a resource manager typically needs to register a name in the path space by calling <code>resmgr_attach()</code>; in order to do this, it requires the <code>PROCMGR_AID_PATHSPACE</code> ability. The service should obtain this ability and immediately drop to the privileges provided by the -U command-line parameter. After registering the name in the path space, the process should drop the ability if it doesn't need to register any more names.

Privilege separation

Privilege separation is a way of designing an application so that its underlying components are divided into a number of processes with differing privileges.

In many applications, services, and drivers, a part of the program will require some amount of elevated privileges to carry out its job. These privileges might be some capability that allows some specific privileged action, some additional groups that allow access to files, and so on. In many designs, these elevated privileges are taken for granted and are simply considered part of the necessary privileges for the entire program. These designs unfortunately usually result in a privileged process's having an unnecessarily large *attack surface*.

The diagram below illustrates a traditional design, with a system service consisting of a single privileged process. In this example, the attack surface exposes the privileged process to all of the clients.

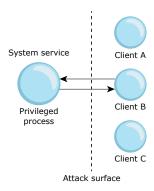


Figure 13: System service with no privilege separation.

For example, a network service that processes incoming packets could be required to carry out some privileged action after processing an incoming packet, requiring the service to have some privileged ability. The processing of all incoming packets, many of which might have nothing to do with running as root or some privileged ability, doesn't explicitly require elevated privileges, and therefore the design unnecessarily increases the attack surface of the process.

In this case, you should consider the feasibility of moving the portion of the service that requires special privileges into a separate process with minimal functionality. In this design, a small privileged process can maintain an IPC channel between itself and the network packet processing part of the service. This IPC channel can expose an extremely minimal protocol. This concept is illustrated in the diagram below, which shows two system service processes, and an attack surface exposing only the process with lower privileges.

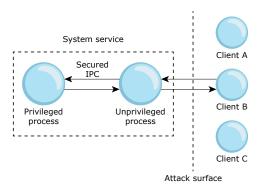


Figure 14: System service with privilege separation.

In the packet-processing scenario, when the nonprivileged part of the application requires some privileged action to take place, it notifies the privileged process, via the IPC channel. This way, any exploited vulnerabilities that manifest from complex operations such as packet processing won't immediately grant an attacker the elevated privileges. The minimal IPC protocol used between the service processes also makes it more difficult for attackers to elevate their privileges by attempting to attack the more privileged process after successfully compromising the less privileged process.

One consideration to keep in mind is the IPC mechanism selected to communicate between the nonprivileged and privileged portions of the service. If you use *fork()* or *spawn()*, followed by *execve()* to start the separated process, then information about the selected IPC mechanism must be transferred because it can't necessarily be inherited easily. In the case of channels and Unix Domain Sockets, the time between when a channel is bound and a child is spawned presents a possible window of attack where the parent process creates the channel and then passes this channel ID to the child process so it can connect. During this window of time, an unauthorized process might be able to connect to the channel. Even if you attempt to enforce UID and GID permissions, there could be another compromised application with the same permissions that might try to connect.

To make sure that the connecting client is in fact the child, we recommend that the implementation verify both the credentials and the process ID (PID) of the channel or UDS client, to make sure that it is in fact the child process connecting. Any other connections should be rejected. In addition, as soon as the connection is established, no further connections should be handled. For a very basic example of how this privilege separation and authentication design might be achieved, see "An example of privilege separation (p. 93)."

Note that other widely used Unix services, such as OpenSSH, also carry out this form of privilege separation.

Thread I/O privileges

Some services and drivers have threads that require I/O privileges, which require some special security.

A thread obtains I/O privileges by passing the _NTO_TCTL_IO flag to the *ThreadCtl()* function.

On ARM, these I/O privileges equate to running with System mode privileges, which is a privileged mode that allows access to kernel memory, etc. System mode can be used to compromise the entire system, including the kernel. A process containing threads with I/O privileges will represent an extremely likely target of exploitation, and as such must be developed with care.

We recommend that you use a privilege separation model when working with I/O privileged threads, where design constraints allow it.

In cases where privilege separation isn't possible and multiple threads must be spawned within one process, only those threads that explicitly require I/O privileges should obtain them.

A thread that has obtained I/O privileges passes those privileges to any thread it spawns.



This inheritance can be problematic in a scenario where you require only one thread to have I/O privileges, and that thread is spawned later on during execution; if you obtain I/O privileges in the main thread, *all the threads it spawns will have I/O privileges*. Obtaining I/O privileges only in the thread explicitly requiring them can make exploitation more difficult by providing an additional obstacle to an attacker who obtains code execution in a non-privileged thread.

Some complications may exist that prevent a process from holding off obtaining I/O privileges; however, these types of issues should be considered and ideally solved during the design phase of the application.

Procmgr abilities

The QNX Neutrino RTOS supports *procmgr abilities*, process-manager settings that govern which operations a particular process is permitted to do.

A privileged process can obtain these abilities before dropping root privileges, which lets it retain some functionality that historically would have been restricted to root. Furthermore, procmgr abilities can be locked, meaning that even root users can't carry out certain actions that they might historically have been able to. This change significantly reduces the attack surface of the system, even when dealing with a root process.

We recommend that you use the procmgr ability model wherever possible, retaining specific abilities, and dropping and locking whatever isn't explicitly required. Once you've used the retained abilities, you should drop and lock them if they're no longer necessary. A number of simple examples of ability retention and locking are included in the following sections.

You can adjust procmgr abilities by calling *procmgr_ability()*. This function is typically used by services that start as root and need to retain certain capabilities before dropping privileges.

The *procmgr_ability()* function takes as its first argument a process ID, or 0 to indicate the calling process. It's followed by a variable number of arguments, each of which consists of a set of flags that indicate:

- an ability
- the domain (root or non-root)
- whether or not the ability should be allowed, denied, inheritable, and so on
- whether or not additional arguments are required (e.g., the PROCMGR_AOP_SUBRANGE flag calls for a range to be associated with the ability)

The list of abilities must be terminated by an argument that includes the PROCMGR_AID_EOL flag.

Ability domains

The process manager supports PROCMGR_ADN_ROOT and PROCMGR_ADN_NONROOT flags that indicate which domain an ability applies to.

These flags let a process further limit what actions can be carried out whether or not it's running as root:

PROCMGR_ADN_NONROOT

Modify the ability of the process when it isn't running with a non-root effective user ID.

PROCMGR ADN ROOT

Modify the ability of the process when it's running as root.

The following example shows how you can retain a specific ability for your process, before dropping root privileges. In the following example, the PROCMGR_AID_PATHSPACE ability is being allowed for non-root users:

Ability ranges

The *procmgr_ability()* function also lets you specify subranges for specific abilities. This is useful for limiting certain abilities to the smallest number of privileges possible.

For example, the PROCMGR_AID_SPAWN_SETUID and PROCMGR_AID_SPAWN_SETGID abilities allow a process to supply specific abilities to a spawned process. Imagine you have a process that needs to spawn child processes that will run with a group other than those of the process. To accomplish this task, the process must obtain one of these abilities. However, the process shouldn't be allowed to simply set arbitrary UIDs and GIDs, or else it might be able to elevate its own privileges. It's possible to supply a subrange that limits what specific user or group identifiers can be supplied.

The following example shows how you can provide a specific subrange to a requested ability:

In this case, the PROCMGR_AID_SPAWN_SETUID ability is being requested, indicated by the PROCMGR_AOP_ALLOW flag, for user IDs in the range from 800 through 899, as indicated by the PROCMGR_AOP_SUBRANGE flag. The PROCMGR_ADN_NONROOT domain indicates that the process wishes to use this ability when it isn't running as root.

We recommend that you limit the subranges requested to as small a set as possible, and include only those values that will explicitly be required.

Locking an ability

An important aspect of procmgr abilities is ability locking, which allows you to force a specific ability to be immutable until the next time the process starts.

This aspect is useful if an ability never needs to be reobtained, especially by a process that is root. This also allows non-inheritable abilities to not be subsequently marked as inheritable, and so on. Keep in mind that if you lock an ability and don't mark it as inheritable, then if and when you spawn a new process, that process will not have the ability locked.

The following example demonstrates how to lock a capability by using the PROCMGR_AOP_LOCK flag, effectively preventing it from being changed during the lifetime of the process. The following example specifically adds additional security to the PROCMGR_AOP_SUBRANGE example:

```
PROCMGR_AOP_SUBRANGE // Limit ability to a subrange PROCMGR_AID_SPAWN_SETUID, // Requested ability (uint64_t)800, (uint64_t)899, // Subrange for ability PROCMGR_AID_EOL // End of ability list);
```

Once this call is made, the PROCMGR_AID_SPAWN_SETUID ability can't be modified by anyone. We recommend that you immediately lock all abilities expected to be static after set.

Take care when locking an allowed and inheritable ability. A vulnerability can be introduced if an allowed ability is locked and inheritable and the process then forks or spawns a child that doesn't require the ability or wishes to drop it. Locking should generally be reserved for situations where you are denying an ability. Always check the return code of *procmgr_ability()* and test for an error value of -1 to identify—early in development—these types of problems you may have with dropping abilities.

Dropping an ability

You can drop an ability that your application doesn't need at all, or that it no longer needs.

Here's an example:

If the application will never again need the ability, you should also specify the PROCMGR_AOP_LOCK flag when you drop it.

If your application has all the abilities that it needs, we recommend that you explicitly deny and lock all other abilities by setting special flags on the PROCMGR_AID_EOL entry that finishes the *procmgr ability()* parameter list:

If you OR PROCMGR_AID_EOL with additional flags, *procmgr_ability()* traverses the entire list and applies those flags to any unlocked abilities that you didn't specify in the arguments to the function.

Ability inheritance

By default, procmgr abilities are set to be noninheritable when a process is forked.

You can modify this setting by specifying the PROCMGR_AOP_INHERIT_YES flag for an ability that might be needed by any children, or PROCMGR_AOP_INHERIT_NO for

abilities that were previously inheritable and no longer need to be. When children inherit abilities from their parent, make sure that they change the inheritability of any abilities that any of *their* children shouldn't receive. For example:

We recommend against making allowed abilities inheritable unless absolutely necessary. Not marking an allowed ability as inheritable allows the system to set it back to a safe default when executing a new process. However, any abilities that have been explicitly locked, denied, or both that shouldn't be accessible to forked or spawned processes should be marked inheritable, to make sure that the locks and deny states persist.

One very important difference exists between way the *fork()* and *spawn()* functions handle ability inheritance:

- A call to fork() creates an nearly exact copy of the parent process, including the
 current abilities. Even if an ability is marked as non-inheritable using the
 PROCMGR_AOP_INHERIT_NO flag, a forked child has the same abilities as its
 parent.
- A child process created using spawn() honors the inheritance flags. This means
 that the child process inherits only those abilities that have been explicitly marked
 as inheritable using PROCMGR_AOP_INHERIT_YES.

Basic inheritance

Inheritance of an allowed ability is typically considered insecure, unless an ability is actually explicitly required by forked or spawned child processes. When granting procmgr abilities in most scenarios, you should use the PROCMGR_AOP_INHERIT_NO flag.

Here's a simple example of potentially insecure inheritance, due to the combination of PROCMGR_AOP_ALLOW and PROCMGR_AOP_INHERIT_YES. If you're required to do this in your program, make sure the child doesn't inherit any procmgr abilities that it doesn't really need.

The following code is more secure because the child will inherit the denied setting for the ability, due to the combination of PROCMGR_AOP_DENY and PROCMGR AOP INHERIT YES:

```
| PROCMGR_AID_SPAWN_SETUID, // Specified ability PROCMGR_AID_EOL // End of ability list.
```

Locking and inheritance

);

Inheritance of a locked and allowed procmgr ability is almost always a vulnerability, unless that ability has been allowed in a more restricted fashion than it would normally be allowed on the system.

The following code is an insecure example of locking and an inheriting an allowed procmgr ability, due to the combination of PROCMGR_AOP_ALLOW,

PROCMGR_AOP_LOCK, and PROCMGR_AOP_INHERIT_YES:

The following code is secure and encouraged because the child will inherit the denied setting for the ability and never be able to unlock it, due to the combination of PROCMGR_AOP_DENY, PROCMGR_AOP_LOCK, and PROCMGR_AOP_INHERIT_YES:

You can use code like this to limit procmgr abilities that are normally allowed in the PROCMGR ADN NONROOT domain.

Creating abilities

Not only can servers check that their clients have the appropriate abilities, but they can create custom abilities.

This allows system services to define their own arbitrary abilities, and then securely and efficiently verify that a client possesses a required set of abilities. The kernel doesn't need any special knowledge of particular system services, and a client can be granted particular capabilities before the associated server has initialized them.

Allocating capabilities

The following functions allocate capabilities:

```
int procmgr_ability_lookup(const char * name);
int procmgr_ability_create(const char * name, unsigned flags);
```

A client can call *procmgr_ability_lookup()* to obtain a numeric ability identifier, which can then be used in a call to *procmgr_ability()* or to verify the abilities of a client (described below).

The parameter is a string that uniquely identifies the ability, and should consist of a service identifier followed by a capability identifier (e.g., "fs-qnx6/some_devctl"). Calling procmgr_ability_lookup() twice with the same string is guaranteed to return the same number. If the ability can't be found in the current list of abilities, the requested ability is added to the list. If the ability can't be added to the list, a negative errno value is returned, indicating the nature of the failure.

The server calls <code>procmgr_ability_create()</code>, which functions identically to <code>procmgr_ability_lookup()</code> but allows the server to use the <code>flags</code> parameter to additionally specify the privilege domains (<code>PROCMGR_ADN_ROOT</code>, <code>PROCMGR_ADN_NONROOT</code>) that will have the ability by default (i.e., if the ability is not specifically granted or restricted using <code>procmgr_ability()</code>). The default privilege domains for an ability may be set only once; further calls to <code>procmgr_ability_create()</code> for the same ability succeed only if they specify the same <code>flags</code> argument.

In order to create an ability, the server must possess the PROCMGR_AID_ABLE_CREATE ability.



There's no requirement for a call to <code>procmgr_ability_create()</code> to precede calls to <code>procmgr_ability_lookup()</code>. This avoids forcing any specific ordering of process initialization, and means that processes don't need to hold on to <code>root</code> privileges until they can synchronize with the servers and get the ability identifiers that they need.

Here's an example of how a server could create an ability:

```
my_ability = procmgr_ability_create(name, PROCMGR_ADN_ROOT | PROCMGR_ADN_NONROOT));
if(my_ability == -EALREADY) {
    /* Some other process or thread already created the ability,
        so just look up the ID. */
    my_ability = procmgr_ability_lookup(name);
}
if(my_ability < 0) {
    /* An error occurred. */
    ...
}</pre>
```

Verifying capabilities

The server can use the following functions to verify that a client has the required capabilities:

ConnectClientInfoAble()

This function is similar to *ConnectClientInfoExt()*, but accepts a list of capabilities and sets the _NTO_CI_UNABLE bit in the returned struct _client_info if the sending process *doesn't* possess all of the required capabilities:

```
struct _client_able {
    unsigned ability;
```

Each of the required abilities must be from the static set of kernel abilities (PROCMGR_AID_*) or must have been previously created using procmgr_ability_create().

iofunc client info able()

This function is similar to *iofunc_client_info_ext()*, but—like *ConnectClientInfoAble()*—takes an array of abilities to check:

The <code>iofunc_check_access()</code> function inspects the returned <code>struct_client_info</code> and rejects the request if the capability check failed.



When you're finished with the struct _client_info structure, call iofunc_client_info_ext_free() to free it.

For example, here's how you could use *iofunc_client_info_able()* in your server process to check for an ability:

```
struct _client_able ability;
struct _client_info * infop;
int ability_count;
int error;
int result;
/* Determine whether or not the caller has this ability */
ability.ability = my_ability;
ability.flags = 0;
ability.range_hi = INT_MAX;
ability.range_lo = 0;
ability_count = 1;
error = iofunc_client_info_able(ctp, 0, &infop, 0, &ability, ability_count);
if((error != EOK) | | (infop == NULL)) {
   /* An error occurred. */
/* The client has the requested ability if _NTO_CI_UNABLE isn't set
   in the info flags. */
result = !(infop->flags & _NTO_CI_UNABLE);
/* Free the _client_info structure. */
(void)iofunc_client_info_ext_free(&infop);
```

An example of privilege separation

Here's a basic example of privilege separation consisting of a low-privileged client and a high-privileged server. The example can easily be adapted to various design paradigms.

Note the use of *fork()* followed by *execve()*, which causes the more privileged process to have its own unique address space and stack cookies.

```
include <stdio.h>
#include <stdlib.h>
#include <string.h>
#include <unistd.h>
#include <sys/neutrino.h>
#include <sys/types.h>
#include <sys/procmgr.h>
#include <login.h>
/* Example credential values */
#define SERVER_UID 88
#define SERVER_GID 88
#define CLIENT UID 99
#define CLIENT_GID 99
static char *set_ids_arg = NULL;
run_server(int chid, pid_t child)
            rcvid;
           msg[10];
    char
    struct _msg_info
                        info;
    struct _client_info * cinfo;
    /* Retain sample capabilities, and deny and lock all the rest */
    procmgr_ability(0,
      PROCMGR_ADN_NONROOT | PROCMGR_AOP_ALLOW | PROCMGR_AID_PATHSPACE,
      PROCMGR_ADN_NONROOT | PROCMGR_AOP_ALLOW | PROCMGR_AID_SETUID,
      PROCMGR_ADN_NONROOT | PROCMGR_AOP_DENY | PROCMGR_AOP_LOCK | PROCMGR_AID_EOL
    /* drop privileges */
    if (set_ids_arg) {
        if( set_ids_from_arg(set_ids_arg) != 0 ) {
            fprintf(stderr, "set_ids_from_arg failed: errno=%d\n", errno);
            exit(EXIT_FAILURE);
    else {
         /st Note that the server side verifies that the process connecting
            to the channel is indeed its child by comparing the incoming
            process ID to the known child ID. */
        if ( setregid(SERVER_GID, SERVER_GID) != 0 )
            fprintf(stderr, "setregid failed: errno=%d\n", errno);
            exit(EXIT_FAILURE);
        if ( setreuid(SERVER_UID, SERVER_UID) != 0 )
            fprintf(stderr, "setreuid failed: errno=%d\n", errno);
            exit(EXIT_FAILURE);
    }
    for ( ; ; ) {
        rcvid = MsgReceive(chid, &msg, sizeof(msg), &info);
        if (rcvid == -1) {
            perror("MsgReceive");
            /* handle errors */
        else if (rcvid == 0) {
            /* handle pulses */
        if (ConnectClientInfoExt(info.scoid, &cinfo,
```

```
_NTO_CLIENTINFO_GETGROUPS) == -1) {
            perror("ConnectClientInfo()");
            exit(EXIT_FAILURE);
        if (cinfo->cred.euid == CLIENT_UID &&
            cinfo->cred.egid == CLIENT_GID &&
            info.pid == child) {
            printf("PID %d: Message from legitimate child\n", getpid());
            /* handle legitimate child request */
            MsgReply(rcvid, 0x1337, NULL, 0);
        free(cinfo);
    }
    exit(EXIT_SUCCESS);
}
void
run_client(int chid)
    int
            err;
    int
            connd;
            send_msg[10];
    char
    char
            reply_msg[10];
    /* drop privileges. no capabilities retained */
    setregid(CLIENT_GID, CLIENT_GID);
    setreuid(CLIENT_UID, CLIENT_UID);
    connd = ConnectAttach(0, getppid(), chid, _NTO_SIDE_CHANNEL,
                           _NTO_COF_CLOEXEC);
    if (connd == -1)
        perror("connd");
        exit(EXIT_FAILURE);
    for ( ; ; ) {
   /* typical functionality with large attack surface here */
        memset(send_msg, 0x41, sizeof(send_msg));
        memset(reply_msg, 0x41, sizeof(reply_msg));
        err = MsgSend(connd, send_msg, sizeof(send_msg), reply_msg,
                      sizeof(reply_msg));
        if (err == -1) {
            perror("MsgSend");
            exit(EXIT_FAILURE);
        printf("PID %d: Got message response!\n", getpid());
    exit(EXIT_SUCCESS);
}
main(int argc, char **argv)
    int.
            c;
    int
            chid;
    int
            connd;
    int
            is_client;
            pid;
    pid_t
    is_client = 0;
    while ((c = getopt(argc, argv, "c:")) != -1) {
        switch(c) {
            /* only used during re-execution */
            case 'c':
                chid = atoi(optarg);
                is_client = 1;
                break;
            /* add a -U case */
            case 'U':
                set_ids_arg = optarg;
                break;
            default:
                //usage();
                exit(EXIT_FAILURE);
                break;
        }
```

```
if (is_client) {
   run_client(chid);
    return 1; // Unreachable code: run_client() calls exit()
/* Create channel */
chid = ChannelCreate(_NTO_CHF_DISCONNECT);
if (chid == -1) {
   perror("ChannelCreate");
   exit(EXIT_FAILURE);
pid = fork(); // alternatively use spawn()
if (pid == -1) {
   perror("fork");
    exit(EXIT_FAILURE);
/* parent */
if (pid) {
   /* Note that the channel identifier is provided to the
      client process, using the command line, so it knows
      where to connect. */
   run server(chid, pid);
/* child */
else {
   unsigned int i;
    char buf[32]; // enough to hold channel id digits
    char ** new_args;
   new_args = malloc((argc+2) * sizeof(char *));
    if (new_args == NULL)
       perror("malloc");
        exit(EXIT_FAILURE);
    for (i = 0; i < argc; i++) {
        new_args[i] = argv[i];
   new_args[i++] = "-c";
    memset(buf, 0, sizeof(buf));
    if (snprintf(buf, sizeof(buf), "%d", chid) == -1) {
        perror("snprintf");
        exit(EXIT_FAILURE);
    new_args[i++] = buf;
   new_args[i] = NULL;
   execve(new_args[0], new_args, NULL);
return 0;
```

Resource constraint thresholds

In many systems, it's important to guard against clumsy or malicious applications that attempt to exhaust global resources.

A system likely has a "core" or "critical" part that consists of essential services and has some bounded (but not necessarily constant) resource consumption. The rest of the system could have unbounded resource consumption, either because it's designed to handle problems with inherently unbounded resource usage, or because the processes can't be relied upon to bound their resource usage.

Resource constraints ensure that the core can operate even if the extended system is maximizing its resource usage. The core system might have a monitoring capability that allows it to reset the extended system in some way, but that's not essential. The

most obvious such resource is system RAM, but the same considerations apply to process table entries, and to resource manager connections (scoids).

A certain level of protection is provided by RLIMIT_FREEMEM (see *setrlimit()*), which prevents applications from allocating memory once the system drops below a certain amount of free memory. Most programs will give up once *malloc()* starts failing, so this provides a reasonable protection againt inadvertent exhaustion, but this solution isn't complete:

- It doesn't reserve other types of resources, such as process IDs and service connection IDs (scoids).
- It doesn't restrict allocations by proxy, where a process induces a resource manager
 or the kernel to allocate memory (or other resources) on its behalf. This is difficult
 to resolve, since the kernel and resource managers can't be limited in the same
 way as applications, because they're required to ensure functioning of the core
 system in a resource-exhaustion situation.

The idea is to identify the critical processes that form the core system, and give them the ability to allocate as many resources as they need. All other processes are resource-constrained. For each resource that is prone to exhaustion, a threshold is defined, and a constrained process is refused allocation if the amount of free resources is below the threshold.

The proxy resource-manager case is handled by communicating the client's status to the server using a bit in the _msg_info structure. The server can then temporarily constrain itself while handling all or part of a request from a constrained client.

The kernel case is handled by having the kernel consider whether the client is constrained or unconstrained when it's asked to allocate a resource.

The ability PROCMGR_AID_RCONSTRAINT (see *procmgr_ability()*) is given to the critical processes only, and allows them to operate without being subject to resource constraint thresholds. A *ThreadCtl()* command, _NTO_TCTL_RCM_GET_AND_SET, allows a thread to constrain itself or free itself from constraint, but if the thread is a member of a process that lacks the PROCMGR_AID_RCONSTRAINT ability, it's effectively constrained regardless.

To handle resource-constraint modes:

- If the server isn't a critical process (as defined above), it can run in constrained mode, and no special code is required.
- If the server is a critical process, but can service requests from the core system without allocating any resources (directly or indirectly), then it can run in constrained mode, and no special code is required.
- If the server is a critical process and may have to allocate resources in order to
 handle a request from the core system, it must run in unconstrained mode. This
 means that the server has the responsibility to ensure that it doesn't allow itself to
 be used by constrained clients to allocate a resource in excess of the currently

defined resource-constraint threshold. Unless the server is actually managing the resource itself, compliance generally means adopting the client's constraint mode when handling a request. This can be accomplished in these ways:

Automatically, by setting RESMGR_FLAG_RCM in the resmgr_attr_t structure
(see the entry for resmgr_attach() in the QNX Neutrino C Library Reference).
This is applicable only to servers using the resource-manager framework:

• Manually, by checking for _NTO_MI_CONSTRAINED in the flags member of the _msg_info structure, available from a call to MsgReceive() or MsgInfo(). If this bit is set, the message was received from a constrained client. At appropriate moments, a thread that allocates resources on behalf of a constrained client should constrain itself using ThreadCtl():

```
int value = 1; // 1 to constrain, 0 to remove constraint
ThreadCtl(_NTO_TCTL_RCM_GET_AND_SET, &value); /* swaps current state
with value */

/* Handle the request... */
ThreadCtl(_NTO_TCTL_RCM_GET_AND_SET, &value); /* restores original state
    */
```

When a server runs as a constrained process, or when it constrains one of its threads, it may find that its resource allocation requests fail when there are still resources available. The server is expected to handle these failures in the same way it would handle a failure caused by complete exhaustion of resources, generally by returning an error to the client. For the sake of overall system stability, it's important for servers that can continue to process messages to do so, even when allocation failures occur.

Controlling processes via the /proc filesystem

Implemented by the Process Manager component of procnto, the /proc virtual filesystem lets you access and control every process and thread running within the system.

The /proc filesystem manifests each process currently running on the system as a directory whose name is the numerical process ID (decimal) of the process. Inside this directory, you'll find a file called as ("address space") that contains the process's entire memory space. Threads are accessible through the as file created for the process; you can select a thread via *devctl()* calls. You can use the following standard functions to access the /proc filesystem:

Function	Purpose
open()	Establish a file descriptor to a process
read()	Read data from the process's address space
write()	Write data to the process's address space
stat()	Return struct stat information
lseek()	Establish a position within the process's address space for further operations
devctI()	Manipulate a process or thread
close()	Release a file descriptor

Ancillary functions (such as readdir(), opendir(), and so on) are supported on the directory /proc itself — this aids in implementing commands such as 1s.

Establishing a connection

To be able to access a process or thread, you must first use the *open()* call to get a valid file descriptor. You can then use this file descriptor with the function calls listed below to access the process or thread.



Open the file (/proc/pid/as), not the /proc/pid directory.

In order to read or write data from or to the process, you must have opened the file descriptor in the appropriate mode. You must also have appropriate privileges to open the particular process. By default:

Any process can read any other process's address space (but see the note below).

To write to a process's address space, your user ID and group ID must match that
of the process or you must be root. Only one process can have a /proc/pid/as
file open for writing at a time.

When you start procnto, you can use the -u option to specify the umask to use for entries in /proc/pid. The default is 0066; loosening this up can be a security problem.



Opening /proc/pid/as for read-only access succeeds, even if the file permissions would normally say that it should fail with an EACESS. However, the kernel marks the OCB as allowing only *devctl()* commands. This prevents unprivileged processes from examining a process's memory, but still allows a non-root pidin to display some useful information.

When you're done accessing the process or thread, you should *close()* the file descriptor. Depending on what you were doing, certain actions can occur on the process or thread when you perform the *close()*. These actions are documented below.

Reading and writing the process's address space

The easiest operation to perform is to access the process's address space. (Since threads exist in the context of a process and have access to everything within a process, there's no need to consider threads in this discussion.)

You can use the *read()*, *write()*, and *Iseek()* functions to access the process's address space. The *read()* function transfers bytes from the current position within the process to the program issuing the *read()*, and *write()* transfers bytes from the program to the process.

Determining the offset

The position at which transfer occurs depends on the current offset as set on the file descriptor.

In virtual-address systems such as QNX Neutrino, the current offset is taken to be the virtual address *from the process's perspective*.

For example, to read 4096 bytes at offset 0x00021000 from process ID number 2259, the following code snippet could be used:

```
int fd;
char buf [4096];

fd = open ("/proc/2259/as", O_RDONLY);
lseek (fd, 0x00021000, SEEK_SET);
read (fd, buf, 4096);
```

Of course, you should check the return values in your real code!

Determining accessibility

If a virtual address process has different chunks of memory mapped into its address space, performing a read or write on a given address may or may not work (or it may not affect the expected number of bytes). This is because the *read()* and *write()* functions affect only *contiguous* memory regions. If you try to read a page of memory that isn't mapped by the process, the read will fail; this is expected.

Manipulating a process or thread

Once you have a file descriptor to a particular process, you can do a number of things to that process and its associated thread(s):

- select a particular thread for further operations (p. 100)
- start and stop a particular thread (p. 100)
- set breakpoints (p. 101)
- examine process and thread attributes (e.g. CPU time) (p. 101)

All of these functions are performed using the *devctl()* call as described in the sections that follow. To be able to use these *devctl()* calls, you'll need at least the following:

```
#include <devctl.h>
#include <sys/procfs.h>
```

Selecting a thread for further operations

When you first perform the *open()* to a particular process, by default you're connected to the first thread (the thread that executed the *main()* function).

If you wish to switch a different thread, use the <code>DCMD_PROC_CURTHREAD</code> (p. 108) <code>devctl()</code> command, as described later in this chapter.

To find out how many threads are available in the given process, see the *devctl()* command <code>DCMD_PROC_INFO</code> (p. 110), below.

Starting/stopping processes and threads

The following *devctl()* commands start and stop processes and threads. You must have opened the file descriptor for writing.

- DCMD_PROC_STOP (p. 116)
- DCMD_PROC_RUN (p. 113)
- DCMD_PROC_FREEZETHREAD (p. 108)
- DCMD_PROC_THAWTHREAD (p. 117)

Setting breakpoints

The following *devctl()* commands set breakpoints. You must have opened the file descriptor for writing.

- DCMD_PROC_BREAK (p. 107)
- DCMD_PROC_WAITSTOP (p. 118)
- DCMD_PROC_GET_BREAKLIST (p. 110)

Examining process and thread attributes

You can use the following *devctl()* commands to examine process and thread attributes:

- DCMD_PROC_SYSINFO (p. 116)
- DCMD_PROC_INFO (p. 110)
- DCMD_PROC_MAPINFO (p. 112)
- DCMD_PROC_MAPDEBUG (p. 111)
- DCMD_PROC_MAPDEBUG_BASE (p. 111)
- DCMD_PROC_SIGNAL (p. 115)
- DCMD_PROC_STATUS (p. 116)
- DCMD_PROC_TIDSTATUS (p. 117)
- DCMD_PROC_GETGREG (p. 109)
- DCMD_PROC_SETGREG (p. 115)
- DCMD_PROC_GETFPREG (p. 109)
- DCMD_PROC_SETFPREG (p. 114)
- DCMD_PROC_GETREGSET (p. 110)
- DCMD_PROC_SETREGSET (p. 115)
- DCMD_PROC_EVENT (p. 108)
- DCMD_PROC_SET_FLAG (p. 115)
- DCMD PROC CLEAR FLAG (p. 107)
- DCMD PROC PAGEDATA (p. 112)
- DCMD_PROC_GETALTREG (p. 109)
- DCMD_PROC_SETALTREG (p. 114)
- DCMD_PROC_TIMERS (p. 118)
- DCMD_PROC_IRQS (p. 110)
- DCMD_PROC_THREADCTL (p. 117)
- DCMD_PROC_CHANNELS (p. 107)

Thread information

Several of the *devctl()* commands use a procfs_status structure (which is the same as debug_thread_t), so let's look at this structure before going into the commands themselves:

- DCMD_PROC_STATUS (p. 116)
- DCMD_PROC_STOP (p. 116)
- DCMD_PROC_TIDSTATUS (p. 117)
- DCMD_PROC_WAITSTOP (p. 118)

The debug_thread_t structure is defined as follows in <sys/debug.h>:

```
typedef struct _debug_thread_info {
                                 pià;
   pid_t
    pthread_t
                                 tid;
    uint32_t
                                 flags;
   uint16_t
                                 why;
    uint16_t
                                 what;
   uint64 t
                                 ip;
    uint64_t
                                 sp;
    uint64_t
                                 stkbase;
   uint64_t
                                 tls;
    uint32 t
                                 stksize;
   uint32 t
                                 tid_flags;
    uint8_t
                                 priority;
    uint8_t
                                 real_priority;
   uint8_t
                                 policy;
   uint8_t
                                 state;
                                 syscall;
    int16 t
    uint16_t
                                 last_cpu;
    uint32_t
                                 timeout;
    int32_t
                                 last_chid;
                                 sig_blocked;
    sigset_t
    sigset_t
                                 sig_pending;
    siginfo_t
                                 info;
    union {
        struct {
            pthread_t
                                          tid;
                                      join;
        struct {
            int32_t
                                          id;
            uintptr_t
                                         sync;
                                      sync;
        struct {
            uint32_t
                                          nd;
            pid_t
                                         pid;
            int32 t
                                         coid;
            int32_t
                                         chid;
            int32_t
                                          scoid;
                                      connect;
        struct
            int32_t
                                         chid;
                                      channel;
        struct {
            pid_t
                                          pid;
            uintptr_t
                                          vaddr;
            uint32_t
                                          flags;
                                      waitpage;
        struct {
            uint32_t
                                         size;
                                      stack;
        uint64_t
                                         filler[4];
                                 blocked;
    uint64_t
                                 start_time;
    uint64_t
                                 sutime;
    uint8_t
                                 extsched[8];
    uint64_t
                                 reserved2[5];
                             debug_thread_t;
```



If you ask for information about a specific thread, and the thread no longer exists, the process manager returns information about the one with the next higher thread ID. If all the process's threads have exited, the *tid* member of the structure is set to 0.

The members include:

pid, tid

The process and thread IDs.

flags

A combination of the following bits:

- _DEBUG_FLAG_STOPPED the thread isn't running.
- _DEBUG_FLAG_ISTOP the thread is stopped at a point of interest.
- _DEBUG_FLAG_IPINVAL the instruction pointer isn't valid.
- _DEBUG_FLAG_ISSYS system process.
- _DEBUG_FLAG_SSTEP stopped because of single-stepping.
- _DEBUG_FLAG_CURTID the thread is the current thread.
- _DEBUG_FLAG_TRACE_EXEC stopped because of a breakpoint.
- _DEBUG_FLAG_TRACE_RD stopped because of read access.
- DEBUG FLAG TRACE WR stopped because of write access.
- _DEBUG_FLAG_TRACE_MODIFY stopped because of modified memory.
- _DEBUG_FLAG_RLC the Run-on-Last-Close flag is set.
- _DEBUG_FLAG_KLC the Kill-on-Last-Close flag is set.
- _DEBUG_FLAG_FORK the child inherits flags (stop on fork or spawn).

why

One of the following:

- _DEBUG_WHY_REQUESTED
- _DEBUG_WHY_SIGNALLED
- _DEBUG_WHY_FAULTED
- _DEBUG_WHY_JOBCONTROL
- _DEBUG_WHY_TERMINATED
- _DEBUG_WHY_CHILD
- _DEBUG_WHY_EXEC

what

The contents of this field depend on the why field:

why	what
_DEBUG_WHY_TERMINATED	The process's exit status
_DEBUG_WHY_SIGNALLED	si_signo
_DEBUG_WHY_FAULTED	si_fltno
_DEBUG_WHY_REQUESTED	0

ip

The current instruction pointer.

sp

The thread's stack pointer.

stkbase

The base address of the thread's stack region.

tls

A pointer to the struct thread_local_storage *tls (which will be on the thread's stack). For more information, see "Local storage for private data" in the entry for *ThreadCreate()* in the QNX Neutrino *C Library Reference*.

stksize

The stack size.

tid_flags

The thread flags; see _NTO_TF_* in <sys/neutrino.h>.

priority

The priority the thread is actually running at (e.g. its priority may have been boosted).

real_priority

The actual priority the thread would be at with no boosting and so on.

policy

The scheduling policy; one of SCHED_FIFO, SCHED_RR, SCHED_OTHER, or SCHED_SPORADIC.

state

The thread's state. The states themselves are defined in <sys/states.h>; for descriptions, see "Thread life cycle" in the QNX Neutrino Microkernel chapter of the *System Architecture* guide. If the thread is waiting for something, the *blocked* member may hold additional information, as described below.

syscall

The last system call; one of the __KER_* values defined in <sys/kercalls.h>.

last_cpu

The processor the thread last ran on.

timeout

```
_NTO_TF_ACTIVE|_NTO_TF_IMMEDIATE|(1 << state) — set by 
 TimerTimeout().
```

last chid

The ID of the last channel this thread received a message on.

sig_blocked

The set of signals that are blocked for the thread.

sig_pending

The set of signals that are pending for the thread.

info

The struct siginfo of the last signal or fault received.

blocked

A union of the following:

- *join* if the *state* is STATE_JOIN or STATE_WAITTHREAD, this structure contains *tid*, the ID of the thread that this thread is waiting for.
- *sync* if the *state* is STATE_CONDVAR, STATE_MUTEX, or STATE_SEM, this structure contains:

id

The address of the synchronization object.

sync

For a condvar, this is a pointer to the associated mutex; for a mutex, it's a pointer to the mutex.

- connect if the state is STATE_SEND or STATE_REPLY, this structure
 contains the node descriptor (nd), process ID (pid), connection ID (coid),
 channel ID (chid), and server connection ID (scoid) that the thread is
 waiting for.
- *channel* if the *state* is STATE_RECEIVE, this structure contains *chid*, the ID of the channel that the thread is waiting for.
- waitpage if the state is STATE WAITPAGE, this structure contains:

pid

The ID of the process whose address space was active when the page fault occurred.

vaddr

The virtual address for which the thread is waiting for physical memory to be allocated.

flags

Internal use only.

• *stack* — if the *state* is STATE_STACK, this structure contains *size*, the amount of stack that the thread is waiting for to be allocated.

start_time

The thread's starting time, in nanoseconds.

sutime

The thread's system plus user running time, in nanoseconds.

extsched

Extended scheduling information; a struct extsched_aps_dbg_thread structure if the adaptive partitioning thread scheduler is installed.

DCMD_PROC_BREAK

Set or remove a breakpoint in the process that's associated with the file descriptor. You must have opened the file descriptor for writing.

The argument is a pointer to a procfs_break structure (see debug_break_t in <sys/debug.h>) that specifies the breakpoint to be set or removed. For example:

```
procfs_break brk;

memset(&brk, 0, sizeof brk);
brk.type = _DEBUG_BREAK_EXEC;
brk.addr = acc->break_addr.offset;
brk.size = 0;
devctl(fd, DCMD_PROC_BREAK, &brk, sizeof brk, 0);
```

Use a size of 0 to set a breakpoint, and a size of -1 to delete it.



Breakpoints other than _DEBUG_BREAK_EXEC are highly dependent on the hardware. In many architectures, other types of breakpoints cause the kernel to make the process run in single-step, checking the watchpoints each time, which can be very slow.

DCMD_PROC_CHANNELS

Get information about the channels owned by the specified process.

Call this the first time with an argument of NULL to get the number of channels:

```
devctl(fd, DCMD_PROC_CHANNELS, NULL, 0, &n);
```

Next, allocate a buffer that's large enough to hold a procfs_channel structure (see debug_channel_t in <sys/debug.h>) for each channel, and pass it to another devctl() call:

DCMD_PROC_CLEAR_FLAG

Clear specific debug flags with the values provided for the process associated with the file descriptor. The flags that can be cleared are described in <sys/debug.h>. The argument is a pointer to an unsigned integer that specifies the debug flags to clear. For example:

To set the flags, use <code>DCMD_PROC_SET_FLAG</code> (p. 115).

DCMD_PROC_CURTHREAD

Switch to another thread. The argument to this command is a pthread_t value that specifies the thread that you want to be made the current thread. For example:

DCMD_PROC_EVENT

Define an event to be delivered when the process associated with the file descriptor reaches a point of interest.

Use the DCMD_PROC_RUN (p. 113) command to set up the point of interest.



The DCMD_PROC_EVENT command won't work unless you've set _DEBUG_RUN_ARM in the *flags* field of the procfs_run structure for the DCMD_PROC_RUN command.

Unlike DCMD_PROC_WAITSTOP (p. 118), the DCMD_PROC_EVENT command doesn't block the calling process.

The argument is a pointer to the sigevent that you want to be delivered at the appropriate time. For example:

```
struct sigevent event;

// Define a sigevent for process stopped notification.
event.sigev_notify = SIGEV_SIGNAL_THREAD;
event.sigev_signo = SIGUSR2;
event.sigev_code = 0;
event.sigev_value.sival_ptr = prp;
event.sigev_priority = -1;
devctl( fd, DCMD_PROC_EVENT, &event, sizeof(event), NULL);
```

DCMD_PROC_FREEZETHREAD

Freeze a thread in the process that's associated with the file descriptor. You must have opened the file descriptor for writing.

The argument is a pointer to a pthread_t value that specifies the thread to be frozen. For example:

```
devctl( fd, DCMD_PROC_FREEZETHREAD, &tid, sizeof tid, 0);
```

To unfreeze the thread, use DCMD_PROC_THAWTHREAD (p. 117).

DCMD_PROC_GETALTREG

Get the information stored in the alternate register set for the process associated with the file descriptor. The argument is a pointer to a procfs_fpreg structure (see debug_fpreg_t in <sys/debug.h>) that's filled in with the required information on return. If you provide a non-NULL extra argument, it's filled with the actual size of the register set. For example:

```
procfs_fpreg reg;
int regsize;
devctl( fd, DCMD_PROC_GETALTREG, &reg, sizeof(reg), &regsize);
```



If the thread hasn't used the alternate register set (e.g. AltiVec registers), the read may fail.

To set the alternate register set, use DCMD_PROC_SETALTREG (p. 114).

DCMD_PROC_GETFPREG

Get the information stored in the Floating Point Data registers for the process associated with the file descriptor. The argument is a pointer to a procfs_fpreg structure (see debug_fpreg_t in <sys/debug.h>) that's filled in with the required information on return. If you provide a non-NULL extra argument, it's filled with the size of the data. For example:

```
procfs_fpreg my_fpreg;
devctl( fd, DCMD_PROC_GETFPREG, my_fpreg, sizeof(procfs_fpreg),
         &size);
```



If the thread hasn't used any floating-point arithmetic, the read may fail because an FPU context has not yet been allocated.

To set the Floating Point Data registers, use DCMD_PROC_SETFPREG (p. 114).

DCMD_PROC_GETGREG

Get the information stored in the CPU registers based on the current thread of the process associated with the file descriptor. The argument is a pointer to a procfs_greg structure (see debug_greg_t in <sys/debug.h>) that's filled in with the required information on return. If you provide a non-NULL extra argument, it's filled with the size of the data. For example:

```
procfs_greg my_greg;
devctl( fd, DCMD_PROC_GETGREG, my_greg, sizeof(procfs_greg),
    &size);
```

To set the CPU registers, use <code>DCMD_PROC_SETGREG</code> (p. 115).

DCMD_PROC_GETREGSET

Read the given register set. The argument is a pointer to a procfs_regset structure that's filled in with the required information on return. For example:

```
procfs_regset regset;

regset.id = REGSET_PERFREGS;
devctl( fd, DCMD_PROC_GETREGSET, &regset, sizeof(regset), NULL );
```

To set a given register set, use DCMD_PROC_SETREGSET (p. 115).

DCMD_PROC_GET_BREAKLIST

Get a list of the active breakpoints for the process associated with the file descriptor. You must have opened the file descriptor for writing.

Call this the first time with an argument of NULL to get the number of breakpoints:

```
devctl( fd, DCMD_PROC_GET_BREAKLIST, NULL, 0, &n);
```

The total number of breakpoints returned is provided as the extra field. Next, allocate a buffer that's large enough to hold a procfs_break structure (see debug_break_t in <sys/debug.h>) for each breakpoint, and pass it to another devctl() call:

To set or clear breakpoints, use DCMD_PROC_BREAK (p. 107).

DCMD_PROC_INFO

Obtain information about the process associated with the file descriptor. The argument is a pointer to a procfs_info structure (see debug_process_t in <sys/debug.h>) that's filled in with the required information on return. For example:

```
procfs_info my_info;
devctl( fd, DCMD_PROC_INFO, &my_info, sizeof(my_info), NULL);
```

DCMD_PROC_IRQS

Get the interrupt handlers owned by the process associated with the file descriptor.

Call this the first time with an argument of NULL to get the number of interrupt handlers:

```
devctl( fd, DCMD_PROC_IRQS, NULL, 0, &n);
```

Next, allocate a buffer that's large enough to hold a procfs_irq structure (see debug_irq_t in <sys/debug.h>) for each handler, and pass it to another *devctl()* call:

```
my_buffer = (procfs_irq *) malloc( sizeof(procfs_irq) * n );
if ( my_buffer == NULL ) {
   /* Not enough memory. */
}
devctl( fd, DCMD_PROC_IRQS, my_buffer, sizeof(procfs_irq) * n,
   &dummy);
```

DCMD PROC MAPDEBUG

Get the best guess to the ELF object on the host machine. This is used by debuggers to find the object that contains the symbol information, even though it may have been stripped on the target machine. This call is useful only on MAP_ELF mappings. If any relocation of the ELF object was done, this translation will be undone. This lets you pass in an address within a ELF module, and get in return the address that the original object was linked at so a debugger can find the symbol. (This is an extension from the SYSV interface.)

The argument is a pointer to a procfs_debuginfo structure that's filled in with the required information on return. The procfs_debuginfo structure can specify the base address of the mapped segment that you're interested in. For example:

```
procfs_debuginfo map;
map.info.vaddr = some_vaddr;
devctl( fd, DCMD_PROC_MAPDEBUG, &map, sizeof map, NULL);
```

DCMD_PROC_MAPDEBUG is useful for non-ELF objects if you need to get the name. Note that the *path* member in procfs_debuginfo is a one-byte array; if you want to get the name, you need to allocate more space for it. For example:

```
struct {
    procfs_debuginfo info;
    char buff[_POSIX_PATH_MAX];
} map;
```

DCMD PROC MAPDEBUG BASE

Get information pertaining to the path associated with the process associated with the file descriptor.

This is a convenience extension; it's equivalent to using <code>DCMD_PROC_INFO</code> (p. 110), and then <code>DCMD_PROC_MAPDEBUG</code> (p. 111) with the <code>base_address</code> field. The base address is the address of the initial executable.

The argument is a pointer to a procfs_debuginfo structure, which is filled in with the required information on return. For example:

```
procfs_debuginfo dinfop;
devctl( fd, DCMD_PROC_MAPDEBUG_BASE, &dinfop, sizeof(dinfop),
```

NULL);

DCMD_PROC_MAPINFO

Obtain segment-specific information about mapped memory segments in the process associated with the file descriptor. This call matches the corresponding *mmap()* calls.



Individual page data isn't returned (i.e. the PG_* flags defined in <mman.h> aren't returned). If you need the page attributes, use DCMD_PROC_PAGEDATA (p. 112) instead.

Call this the first time with an argument of NULL to get the number of map entries:

```
devctl( fd, DCMD_PROC_MAPINFO, NULL, 0, &n);
```

Next, allocate a buffer that's large enough to hold a procfs_mapinfo structure for each map entry, and pass it to another *devctl()* call:

DCMD_PROC_PAGEDATA

Obtain page data about mapped memory segments in the process associated with the file descriptor. This call matches the corresponding *mmap()* calls.



If you need the segment-specific attributes, use DCMD_PROC_MAPINFO (p. 112) instead.

Call this the first time with an argument of NULL to get the number of map entries:

```
devctl(fd, DCMD_PROC_PAGEDATA, NULL, 0, &n);
```

Next, allocate a buffer that's large enough to hold a procfs_mapinfo structure for each map entry, and pass it to another *devctl()* call:

DCMD_PROC_RUN

Resume the process that's associated with the file descriptor, if it has previously been stopped.

You must have opened the file descriptor for writing. To stop the process, use DCMD_PROC_STOP (p. 116).

The DCMD_PROC_RUN command also lets you set the "points of interest" (e.g. signals or faults you want to stop on) and other run flags (e.g. instruction pointer or single-step).

The argument is a pointer to a procfs_run structure (see debug_run_t in <sys/debug.h>). This structure is passed on as control information to the process before it resumes. For example:

```
procfs_run run;
memset( &run, 0, sizeof(run) );
run.flags |= _DEBUG_RUN_CLRFLT | _DEBUG_RUN_CLRSIG;
devctl( fd, DCMD_PROC_RUN, &run, sizeof(run), 0);
```

The procfs_run or debug_run_t structure is defined as follows:

```
typedef struct _debug_run {
    uint32_t
    pthread_t
    sigset_t
    sigset_t
    fltset_t
    uintptr_t
} debug_run_t;
flags;
tid;
trace;
flags:
fla
```

The members include:

flags

A combination of zero or more of the following bits:

- _DEBUG_RUN_CLRSIG clear pending signal.
- _DEBUG_RUN_CLRFLT clear pending fault.
- _DEBUG_RUN_TRACE the *trace* mask flags interesting signals.
- _DEBUG_RUN_FAULT the fault mask flags interesting faults.
- _DEBUG_RUN_VADDR change *ip* before running.
- _DEBUG_RUN_STEP single-step only one thread.
- _DEBUG_RUN_STEP_ALL single-step one thread; other threads run.
- _DEBUG_RUN_CURTID change the current thread (target thread) to the one whose thread ID is specified by tid.
- _DEBUG_RUN_ARM deliver an event at the point of interest. Use the _DCMD_PROC_EVENT (p. 108) command to define the event.

tid

The ID of the thread that you want to become the current thread, for use with <code>_DEBUG_RUN_CURTID</code>.

trace

A set of signals (SIG*) to trace, for use with _DEBUG_RUN_TRACE.

hold

Not currently used.

fault

A set of faults (FLT*) to trace, for use with _DEBUG_RUN_FAULT.

ip

The new value for the instruction pointer, for use with _DEBUG_RUN_VADDR.

Use *sigemptyset()* and *sigaddset()* to build the set of signals or faults for the *trace*, *hold* and *fault* members.

DCMD_PROC_SETALTREG

Set the alternate register set with the values provided for the process associated with the file descriptor. You must have opened the file descriptor for writing. The argument is a pointer to a procfs_fpreg structure (see debug_fpreg_t in <sys/debug.h>) that specifies to set the values of the alternate register set. For example:

```
procfs_fpreg reg;

/* Set the members of reg as required. */
devctl( fd, DCMD_PROC_SETALTREG, &reg, sizeof(reg), NULL);
```

To get the alternate register set, use DCMD_PROC_GETALTREG (p. 109).

DCMD_PROC_SETFPREG

Set the Floating Point Data registers with the values provided for the process associated with the file descriptor. You must have opened the file descriptor for writing. The argument is a pointer to a procfs_fpreg structure (see debug_fpreg_t in <sys/debug.h>) that specifies the values of the Floating Point Data registers. For example:

To get the Floating Point Data registers, use DCMD_PROC_GETFPREG (p. 109).

DCMD_PROC_SETGREG

Set the CPU registers with the values provided for the process associated with the file descriptor. You must have opened the file descriptor for writing. The argument is a pointer to a procfs_greg structure (see debug_greg_t in <sys/debug.h>) that specifies the values to assign to the CPU registers. For example:

To get the CPU registers, use DCMD_PROC_GETGREG (p. 109).

DCMD_PROC_SETREGSET

Set the given register set. The argument is a pointer to a procfs_regset structure that specifies the values to assign to the register set. For example:

```
procfs_regset regset;

regset.id = REGSET_PERFREGS;
devctl( fd, DCMD_PROC_SETREGSET, &regset, sizeof(regset), NULL );
```

To get the given register set, use DCMD_PROC_GETREGSET (p. 110).

DCMD_PROC_SET_FLAG

Set specific debug flags with the values provided for the process associated with the file descriptor. The flags that can be set are described in <sys/debug.h>. The argument is a pointer to an unsigned integer that specifies the debug flags to set. For example:

To clear the debug flags, use DCMD PROC CLEAR FLAG (p. 107).

DCMD_PROC_SIGNAL

Drop a signal on the process that's associated with the file descriptor. This is a way for a debugger to artificially generate signals as if they came from the system.

The argument is a pointer to a procfs_signal structure that specifies the signal to send. For example:

```
procfs_signal signal;
signal.tid = 0;
signal.signo = SIGCONT;
signal.code = 0;
signal.value = 0;
```

```
devctl( fd, DCMD_PROC_SIGNAL, &signal, sizeof signal, NULL);
```

DCMD_PROC_STATUS

Get the current status of the current thread in the process associated with the file descriptor. The argument is a pointer to a procfs_status structure (see debug_thread_t in <sys/debug.h>) that's filled in with the required information on return. For example:



If the current thread no longer exists, the process manager returns information about the one with the next higher thread ID. If all the process's threads have exited, the *tid* member of the procfs_status structure is set to 0.

For more information about the contents of this structure, see "*Thread information* (p. 102)," earlier in this chapter.

DCMD_PROC_STOP

Stop the process that's associated with the file descriptor. You must have opened the file descriptor for writing.

The argument to this command is the address of a procfs_status structure (see debug_thread_t in <sys/debug.h>). This structure is filled with status information on return. For example:

```
procfs_status my_status;
devctl( fd, DCMD_PROC_STOP, &my_status, sizeof(my_status), NULL);
```

For more information about the contents of this structure, see "*Thread information* (p. 102)," earlier in this chapter.

To resume the process, use DCMD_PROC_RUN (p. 113).

DCMD_PROC_SYSINFO

Obtain information stored in the system page.

The argument is a pointer to a procfs_sysinfo structure that's filled in with the required information upon return. To get the whole system page, you have to make two calls: the first gets the size required:

```
devctl( fd, DCMD_PROC_SYSINFO, NULL, 0, &totalsize );
```

You then allocate a buffer of the required size and pass that buffer to the second call:

```
buffer = malloc( totalsize );
devctl( fd, DCMD_PROC_SYSINFO, buffer, totalsize, NULL );
```

The procfs_sysinfo structure is the same as the system page; for more information, see "Structure of the system page" in the Customizing Image Startup Programs chapter of *Building Embedded Systems*.

DCMD_PROC_THAWTHREAD

Unfreeze a thread in the process that's associated with the file descriptor. You must have opened the file descriptor for writing.

The argument is a pointer to a pthread_t value that specifies the thread to be thawed. For example:

```
devctl( fd, DCMD_PROC_THAWTHREAD, &tid, sizeof tid, 0);
```

To freeze a thread, use DCMD PROC FREEZETHREAD (p. 108).

DCMD PROC THREADCTL

Perform a *ThreadCtl()* on another process/thread. The argument is a pointer to a procfs_threadctl structure. For example:

DCMD PROC TIDSTATUS

Get the current status of a thread in the process associated with the file descriptor.

This is a short form of using <code>DCMD_PROC_CURTHREAD</code> (p. 108) to set the current thread, then <code>DCMD_PROC_STATUS</code> (p. 116) to get information about that thread, and then restoring the current thread.

The argument is a pointer to a procfs_status structure (see debug_thread_t in <sys/debug.h>), with the required thread ID specified in the *tid* field. This structure is filled in with the required information on return. For example:



If the thread that you specified no longer exists, the process manager returns information about the one with the next higher thread ID (in which case the *tid* member won't be the same as it was before you called the command). If all the process's threads have exited, the *tid* member is set to 0.

For more information about the contents of this structure, see "*Thread information* (p. 102)," earlier in this chapter.

DCMD_PROC_TIMERS

Get the timers owned by the process associated with the file descriptor.

Call this the first time with an argument of NULL to get the number of timers:

```
devctl( fd, DCMD_PROC_TIMERS, NULL, 0, &n);
```

Next, allocate a buffer that's large enough to hold a procfs_timer structure (see debug_timer_t in <sys/debug.h>) for each timer, and pass it to another *devctl()* call:

DCMD_PROC_WAITSTOP

Hold off the calling process until the process that's associated with the file descriptor reaches a point of interest.

You must have opened the file descriptor for writing. Use the <code>DCMD_PROC_RUN</code> (p. 113) command to set up the point of interest. If you don't want to block the calling process, use <code>DCMD_PROC_EVENT</code> (p. 108) instead of <code>DCMD_PROC_WAITSTOP</code>.

The argument is a pointer to a procfs_status structure (see debug_thread_t in <sys/debug.h>) that's filled with status information on return. For example:

```
procfs_status my_status;
devctl( fd, DCMD_PROC_WAITSTOP, &my_status, sizeof my_status, 0);
```

For more information about the contents of this structure, see "*Thread information* (p. 102)," earlier in this chapter.

Chapter 4

Working with Access Control Lists (ACLs)

Some filesystems, such as the Power-Safe (fs-qnx6.so) filesystem, extend file permissions with Access Control Lists, which are based on the withdrawn IEEE POSIX 1003.1e and 1003.2c draft standards.

As described in "Access Control Lists (ACLs)" in the QNX Neutrino *User's Guide*, ACLs extend the traditional permissions as set with chmod, giving you finer control over who has access to your files and directories.

If you're using the command line, you can use the getfacl and setfacl utilities to get and set the ACL for a file or directory, but there are also ways to manipulate ACLs from a program.

Let's start with the ways that an ACL can be represented, and then we'll look at how to work with them.

ACL formats

There are several ways to represent an ACL, depending on how it's to be used.

External form

The exportable, contiguous, persistent representation of an ACL in user-managed space. A program such as tar could (but currently doesn't) use this representation so that it could later restore the ACLs, even on a different filesystem.

Internal form

The internal representation of an ACL in working storage, which you'll work with in your program. As described below, this form uses various data types to represent an ACL, its entries, and each entry's tag and permissions.

text form

The structured textual representation of an ACL, such as getfacl and setfacl use.

The internal form uses the following data types:

acl_t

A pointer to an opaque ACL data structure in working storage.

acl_entry_t

An opaque descriptor for an entry in an ACL.

acl_permset_t

An opaque set of permissions in an ACL entry.

acl_perm_t

An individual permission; one of:

- ACL_EXECUTE
- ACL_READ
- ACL_WRITE

acl_tag_t

The type of tag; one of the following:

- ACL_GROUP a named group.
- ACL_GROUP_OBJ the owning group.

- ACL_MASK the maximum permissions allowed for named users, named groups, and the owning group.
- ACL_OTHER users whose process attributes don't match any other ACL entry; the "world".
- ACL_USER named users.
- ACL_USER_OBJ the owning user.

acl_type_t

The type of ACL; one of:

- ACL_TYPE_ACCESS an access ACL. (If you expand the abbreviation, this term becomes "access access control list", but that's what the POSIX draft called it.)
- ACL_TYPE_DEFAULT a default ACL that a directory can have. It
 specifies the initial ACL for files and directories created in that directory.



Default ACLs aren't currently implemented.

You can use these functions to translate from one form of an ACL to another:

acl_copy_ext()

Copy an ACL from system space to user space (i.e., translate from the external form to the internal).

acl_copy_int()

Copy an ACL from user space to system space (i.e., translate from the internal form to the external).

acl from text()

Create an internal form of an ACL from a text form.

acl_size()

Determine the size of the external form of an ACL.

acl_to_text()

Convert an internal form of an ACL into a text form.

ACL storage management

There are several functions that manage the memory associated with ACLs.

acl_init()

Allocate and initialize an ACL working storage area. The argument to this function is the number of entries that you want in the list (although *acl_init()* might allocate more). It returns an acl_t pointer.

acl_dup()

Duplicate a access control list in working storage. You pass it an acl_t pointer, and it returns a pointer to the copy of the list.

acl_free()

Free the working storage area allocated for an access control list (ACL) data object. You should use this function to free the memory allocated by the other $acl_*()$ functions.

Manipulating ACL entries in working storage

An ACL can have a number of entries in it. You can use these functions to work with these entries.

acl_copy_entry()

Copy the contents of one ACL entry into another.

acl_create_entry()

Create an entry in an ACL.

acl_delete_entry()

Delete an entry from an access control list.

acl_get_entry()

Get an entry in an access control list.

acl_valid()

Validate an ACL, which you should do before you assign it to a file or directory. This routine makes sure that the list contains the required entries, and that there's only one entry for each named user or group.

Manipulating permissions in an ACL entry

Each ACL entry has a *permission set*. These functions work with these sets and the individual permissions.

The permissions are represented by the constants ACL_READ, ACL_EXECUTE, and ACL_WRITE. Because a permission set is an opaque data type, you have to use these functions to work with them:

acl_add_perm()

Add a permision to an access control list (ACL) permission set.

acl_calc_mask()

Calculate the group class mask for an access control list (ACL).

acl_clear_perms()

Clear all permissions from an ACL permission set.

acl_del_perm()

Delete a permission from an ACL permissions set.

acl_get_permset()

Get a permission set from an ACL entry.

acl_set_permset()

Set the permissions set in an ACL entry.

Manipulating the tag type and qualifier in an ACL entry

Each ACL entry must have a tag type, and some also require a qualifier.

Entry type	Tag type	Qualifier
Owner	ACL_USER_OBJ	_
Named user	ACL_USER	uid_t
Owning group	ACL_GROUP_OBJ	_
Named group	ACL_GROUP	gid_t
Mask	ACL_MASK	_
Others	ACL_OTHER	_

The uid_t and gid_t data types are defined in <sys/types.h>.

The ACL entry is an opaque data type, so you need to use these functions to get or set the tag type and the qualifier:

acl_get_qualifier()

Get the qualifier from an ACL entry.

acl_get_tag_type()

Get the type of tag from an ACL entry.

acl_set_qualifier()

Set the qualifier for an ACL entry.

acl_set_tag_type()

Set the tag type of an ACL entry.

Manipulating ACLs on a file or directory

You can get or set the ACL for a file, via a file descriptor or a path.

acl_get_fd()

Get the access control list associated with a file descriptor.

acl_get_file()

Get the ACL for a given path.

acl_set_fd()

Set the access ACL for the object associated with a file descriptor.

acl_set_file()

Set the access control list for a path.

Example

This example demonstrates how you can get the ACL for a file, modify it, and then set it for the file.

```
#include <stdlib.h>
#include <stdio.h>
#include <sys/acl.h>
#include <sys/types.h>
int main(int argc, char *argv[]) {
acl_t my_acl;
char *text acl;
ssize_t len;
acl_entry_t my_entry;
gid_t group_id;
acl_permset_t permset;
system ("touch my_file.txt");
 /* Get the file's ACL. */
my_acl = acl_get_file ("my_file.txt", ACL_TYPE_ACCESS);
if (my_acl == NULL)
 perror ("acl_get_file()");
 return EXIT_FAILURE;
 /\,^* Convert the ACL into text so we can see what it is. ^*/
text_acl = acl_to_text (my_acl, &len);
 if (text_acl == NULL)
 perror ("acl_to_text()");
 return EXIT_FAILURE;
printf ("Initial ACL: %s\n", text_acl);
 /* We're done with the text version, so release it. */
 if (acl_free (text_acl) == -1)
 perror ("acl_free()");
 return EXIT_FAILURE;
 /* Add an entry for a named group to the ACL. */
if (acl_create_entry (&my_acl, &my_entry) == -1)
 perror ("acl_create_entry()");
 return EXIT_FAILURE;
 if (acl_set_tag_type (my_entry, ACL_USER) == -1)
 perror ("acl_set_tag_type");
 return EXIT_FAILURE;
group_id = 120;
 if (acl_set_qualifier (my_entry, &group_id) == -1)
 perror ("acl_set_qualifier");
 return EXIT_FAILURE;
 /* Modify the permissions. */
if (acl_get_permset (my_entry, &permset) == -1)
 perror ("acl_get_permset");
 return EXIT_FAILURE;
 if (acl_clear_perms (permset ) == -1)
```

```
perror ("acl_clear_perms");
 return EXIT_FAILURE;
if (acl_add_perm (permset, ACL_READ))
 perror ("acl_add_perm");
 return EXIT_FAILURE;
/* Recalculate the mask entry. */
if (acl_calc_mask (my_acl))
perror ("acl_calc_mask");
 return EXIT_FAILURE;
/* Make sure the ACL is valid. */
if (acl_valid (my_acl) ==-1)
 perror ("acl_valid");
 return EXIT_FAILURE;
/* Update the ACL for the file. */
if (acl_set_file ("my_file.txt", ACL_TYPE_ACCESS, my_acl) == -1)
perror ("acl_set_file");
 return EXIT_FAILURE;
/* Free the ACL in working storage. */
if (acl_free (my_acl) == -1)
perror ("acl_free()");
return EXIT_FAILURE;
/* Verify that it all worked, by getting and printing the file's ACL. */
my_acl = acl_get_file ("my_file.txt", ACL_TYPE_ACCESS);
if (my_acl == NULL)
perror ("acl_get_file()");
 return EXIT_FAILURE;
text_acl = acl_to_text (my_acl, &len);
if (text_acl == NULL)
 perror ("acl_to_text()");
 return EXIT_FAILURE;
printf ("Updated ACL: %s\n", text_acl);
/\,^{\star} We're done with the text version, so release it. ^{\star}/\,
if (acl_free (text_acl) == -1)
perror ("acl_free()");
 return EXIT_FAILURE;
return EXIT_SUCCESS;
```

Chapter 5

Tick, Tock: Understanding the Microkernel's Concept of Time

Whether you're working with timers or simply getting the time of day, it's important that you understand how the OS works with time.

The first thing to consider is: what's a tick?

When you're dealing with timing, every moment within the microkernel is referred to as a *tick*. A tick is measured in milliseconds; its initial length is determined by the clock rate of your processor:

- If your CPU is 40 MHz or better, a tick is 1 ms.
- For slower processors, a tick represents 10 ms.

Programmatically you can change the clock period via the *ClockPeriod()* function.

Oversleeping: errors in delays

The tick size becomes important just about every time you ask the kernel to do something related to pausing or delaying your process.

This includes calls to the following functions:

- select()
- alarm()
- nanosleep()
- nanospin()
- delay()
- the whole family of timer_*() functions

Normally, you use these functions assuming they'll do exactly what you say: "Sleep for 8 seconds!", "Sleep for 1 minute!", and so on. Unfortunately, you get into problems when you say "Sleep for 1 millisecond, ten thousand times!"

Delaying for a second: inaccurate code

Does this code work assuming a 1 ms tick?

```
void OneSecondPause() {
    /* Wait 1000 milliseconds. */
    for ( i=0; i < 1000; i++ ) delay(1);
}</pre>
```

Unfortunately, no, this won't return after one second on IBM PC hardware. It'll likely wait for three seconds. In fact, when you call any function based on the nanosleep() or select() functions, with an argument of n milliseconds, it actually takes anywhere from n to infinity milliseconds. But more than likely, this example will take three seconds.

So why exactly does this function take three seconds?

Timer quantization error

What you're seeing is called *timer quantization error*. One aspect of this error is actually something that's so well understood and accepted that it's even documented in a standard: the POSIX Realtime Extension (1003.1b-1993/1003.1i-1995). This document says that it's all right to delay too much, but it *isn't* all right to delay too little — the premature firing of a timer is undesirable.

Since the calling of *delay()* is asynchronous with the running of the clock interrupt, the kernel has to add one clock tick to a relative delay to ensure the correct amount of time (consider what would happen if it didn't, and a one-tick delay was requested just before the clock interrupt went off).



Figure 15: A single 1 ms sleep with error.

That normally adds half a millisecond each time, but in the example given, you end up synchronized with the clock interrupt, so the full millisecond gets tacked on each time.



Figure 16: Twelve 1 ms sleeps with each one's error.

The small error on each sleep accumulates:

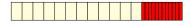


Figure 17: Twelve 1 ms sleeps with the accumulated error.

OK, that should make the loop last 2 seconds — where's the extra second coming from?

The tick and the hardware timer

The problem is that when you request a 1 ms tick rate, the kernel may not be able to actually give it to you because of the frequency of the input clock to the timer hardware. In such cases, it chooses the closest number that's faster than what you requested. In terms of IBM PC hardware, requesting a 1 ms tick rate actually gets you 999,847 nanoseconds between each tick. With the requested delay, that gives us the following:

- 1,000,000 ns + 999,847 ns = 1,999,847 ns of actual delay
- 1,999,847 ns / 999,847 ns = 2.000153 ticks before the timer expires

Since the kernel expires timers only at a clock interrupt, the timer expires after ceil(2.000153) ticks, so each delay(1) call actually waits:

```
999,847 \text{ ns } * 3 = 2,999,541 \text{ ns}
```

Multiply that by a 1000 for the loop count, and you get a total loop time of 2.999541 seconds.

Delaying for a second: better code

So this code should work?

```
void OneSecondPause() {
    /* Wait 1000 milliseconds. */
    for ( i=0; i < 100; i++ ) delay(10);
}</pre>
```

It will certainly get you closer to the time you expect, with an accumulated error of only 1/10 of a second.

Another hiccup with hardware timers

The hardware timer of the PC has another side effect when it comes to dealing with timers.

The "Oversleeping: errors in delays (p. 130)" section explains the behavior of the sleep-related functions. Timers are similarly affected by the design of the PC hardware. For example, let's consider the following C code:

```
#include <assert.h>
#include <stdio.h>
#include <stdlib.h>
#include <sys/neutrino.h>
#include <sys/netmgr.h>
#include <sys/syspage.h>
int main( int argc, char *argv[] )
    int pid;
    int chid;
    int pulse_id;
    timer_t timer_id;
   struct sigevent event;
   struct itimerspec timer;
    struct _clockperiod clkper;
    struct _pulse pulse;
   uint64_t last_cycles=-1;
   uint64_t current_cycles;
    float cpu_freq;
    time_t start;
    /* Get the CPU frequency in order to do precise time
      calculations. */
    cpu_freq = SYSPAGE_ENTRY( qtime )->cycles_per_sec;
    /* Set our priority to the maximum, so we won't get disrupted
      by anything other than interrupts. */
        struct sched_param param;
       param.sched_priority = sched_get_priority_max( SCHED_RR );
       ret = sched_setscheduler( 0, SCHED_RR, &param);
        assert ( ret !=-1 );
    /* Create a channel to receive timer events on. */
    chid = ChannelCreate( 0 );
    assert ( chid != -1 );
    /* Set up the timer and timer event. */
                           = SIGEV_PULSE;
   event.sigev_notify
    event.sigev_coid
                                 = ConnectAttach ( ND_LOCAL_NODE,
                                                   0, chid, 0, 0);
    event.sigev_priority
                                = getprio(0);
    event.sigev_code
                                 = 1023;
    event.sigev_value.sival_ptr = (void*)pulse_id;
    assert ( event.sigev_coid != -1 );
    if ( timer_create( CLOCK_REALTIME, &event, &timer_id ) == -1 )
       perror ( "can't create timer" );
        exit( EXIT_FAILURE );
    /* Change the timer request to alter the behavior. */
          timer.it_value.tv_sec
                                      = 0;
          timer.it_value.tv_nsec
                                    = 1000000;
         timer.it_interval.tv_sec
                                      = 0;
```

```
= 1000000;
          timer.it_interval.tv_nsec
    #else
          timer.it_value.tv_sec
                                       = 0;
          timer.it_interval.tv_sec
                                       = 999847;
                                       = 0;
          timer.it_interval.tv_nsec
                                       = 999847;
    #endif
    /* Start the timer. */
    if ( timer_settime( timer_id, 0, &timer, NULL ) == -1 )
       perror("Can't start timer.\n");
        exit( EXIT_FAILURE );
    /* Set the tick to 1 ms. Otherwise if left to the default of
      10 ms, it would take 65 seconds to demonstrate. */
    clkper.nsec
                   = 1000000;
= 0;
    clkper.fract
    ClockPeriod ( CLOCK_REALTIME, &clkper, NULL, 0 ); // lms
    /* Keep track of time. */
    start = time(NULL);
    for( ;; )
    {
        /* Wait for a pulse. */
       pid = MsgReceivePulse ( chid, &pulse, sizeof( pulse ),
                                NULL );
        /* Should put pulse validation here... */
       current_cycles = ClockCycles();
        /* Don't print the first iteration. */
        if ( last_cycles != -1 )
            float elapse = (current_cycles - last_cycles) /
                          cpu_freq;
            /* Print a line if the request is 1.05 ms longer than
            requested. */
if ( elapse > .00105 )
                 printf("A lapse of %f ms occurred at %d seconds\n",
                         elapse, time( NULL ) - start );
        }
        last_cycles = current_cycles;
    }
}
```

The program checks to see if the time between two timer events is greater than 1.05 ms. Most people expect that given QNX Neutrino's great realtime behavior, such a condition will never occur, but it will, not because the kernel is misbehaving, but because of the limitation in the PC hardware. It's impossible for the OS to generate a timer event at exactly 1.0 ms; it will be .99847 ms. This has unexpected side effects.

Where's the catch?

As described earlier in this chapter, there's a 153-nanosecond (ns) discrepancy between the request and what the hardware can do. The kernel timer manager is invoked every .999847 ms. Every time a timer fires, the kernel checks to see if the timer is periodic and, if so, adds the number of nanoseconds to the expected timer expiring point, no matter what the current time is. This phenomenon is illustrated in the following diagram:

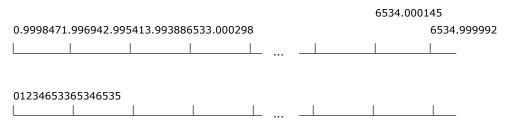


Figure 18: Actual and expected timer expirations.

The first line illustrates the actual time at which timer management occurs. The second line is the time at which the kernel expects the timer to be fired. Note what happens at 6534: the next value appears not to have incremented by 1 ms, thus the event 6535 won't be fired!

For signal frequencies, this phenomenon is called a *beat*. When two signals of various frequencies are "added," a third frequency is generated. You can see this effect if you use your camcorder to record a TV image. Because a TV is updated at 60 Hz, and camcorders usually operate on a different frequency, at playback, you can often see a white line that scrolls in the TV image. The speed of that line is related to the difference in frequency between the camcorder and the TV.

In this case we have two frequencies, one at 1000 Hz, and the other at 1005.495 Hz. Thus, the beat frequency is 1.5 micro Hz, or one blip every 6535 milliseconds.

This behavior has the benefit of giving you the expected number of fired timers, on average. In the example above, after 1 minute, the program would have received 60000 fired timer events (1000 events /sec * 60 sec). If your design requires very precise timing, you have no other choice but to request a timer event of .999847 ms and not 1 ms. This can make the difference between a robot moving very smoothly or scratching your car.

What time is it?

There are several functions that you can use to determine the current time, for use in timestamps or for calculating execution times:

time()

This is the fastest generic time function we have. It's fast because it just reads from the *qtime* entries from the system page (see *SYSPAGE_ENTRY()*).

ClockTime()

The kernel call for time functions. Using CLOCK_MONOTONIC is typically better than using CLOCK_REALTIME because the monotonic clock is always increasing, so you don't have to worry that someone might be changing the clock. Changing the realtime clock just modifies SYSPAGE_ENTRY(qtime)->nsec_tod_adjust to be the difference between the monotonic and realtime clocks.

clock_gettime()

A POSIX cover function for ClockTime().

All the above methods have an accuracy based on the system timer tick. If you need more accuracy, you can use <code>ClockCycles()</code> . This function is implemented differently for each processor, so there are tradeoffs. The implementation tries to be as quick as possible, so it tries to use a CPU register if possible. Because of this, to get accurate times on SMP machines, you need to use thread affinity to lock the thread to a processor, because each processor can have a <code>ClockCycles()</code> base value that may not be synchronized with the values on other processors.

Some caveats for each processor:

x86

Reads from a 64-bit register, except for 486s, where it causes a fault and the fault handler reads from an external clock chip.

ARM

Always faults, and the fault handler reads from an external clock chip to make a 64-bit value.

To convert the cycle number to real time, use SYSPAGE_ENTRY(qtime)->cy cles_per_sec.

If you need a pause, use delay() or the POSIX clock_nanosleep().

If you need a *very* short delay (e.g. for accessing hardware), you should look at the *nanospin*()* functions:

- nanospin()
- nanospin_calibrate()
- nanospin_count()
- nanospin_ns()
- nanospin_ns_to_count()

They basically do a while loop to a calibrated number of iterations to delay the proper amount of time. This wastes CPU, so you should use these functions only if necessary.

Clocks, timers, and power management

If your system needs to manage power consumption, you can set up your timers to help the system to sleep for longer intervals, saving power.

The kernel can reduce power consumption by running in *tickless mode*, although this is a bit of a misnomer. The system still has clock ticks, and everything runs as normal unless the system is idle. Only when the system goes completely idle does the kernel "turn off" clock ticks, and in reality what it does is slow down the clock so that the next tick interrupt occurs just after the next active timer is to fire.

In order for the kernel to enter tickless mode, the following must all be true:

- You must have enabled tickless operation by specifying the -Z option for the startup-* code.
- The clock must not be in the process of being adjusted because of a call to ClockAdjust().
- All processors must be idle.

If the kernel decides to enter tickless mode, it determines the number of nanoseconds until the next timer is supposed to expire. If that expiry is more than a certain time away, the kernel reprograms the timer hardware to generate its next interrupt shortly after that, and then sets some variables to indicate that it's gone tickless. When something other than the idle thread is made ready, the kernel stops tickless operation, checks the list of active timers, and fires off any were supposed to expire before it went to sleep.

So, what can you do to help?

If your timer doesn't have to be too precise, you can give it a *tolerance value*; the kernel then uses the expiry time plus the tolerance to decide if it should enter tickless operation or a low-power mode.



This tolerance may lengthen, but never shortens, the amount of time before the timer expires.

To set the tolerance for a timer, call one of the following functions, specifying the TIMER_TOLERANCE flag:

- TimerSettime()
- TimerTimeout()
- timer timeout()
- timer_settime() the TIMER_TOLERANCE flag is a QNX Neutrino extension to this POSIX function

For *TimerSettime()*, if the *itime* argument is non-NULL, the value it points to indicates the tolerance. If the *otime* argument is non-NULL, the previous tolerance value is stored in the memory it points to. You can call *TimerSettime()* with this flag at any point after calling *TimerCreate()*, without affecting the active/inactive status of the timer.

To determine the tolerance for a timer, call *TimerInfo()*, specifying the _NTO_TI_REPORT_TOLERANCE flag; the function puts the tolerance in the *otime.interval_nsec* field.

It's also possible to set a default timer tolerance for a process, to be used for timers that don't have a specific tolerance, by calling *procmgr_timer_tolerance()*. The default timer tolerance is inherited across a *fork()*, but not an *exec*()* or a *spawn*()*.

Another way to reduce power consumption is to use "lazy" interrupts; for more information, see "*Interrupts and power management* (p. 181)" in the Writing an Interrupt Handler chapter in this guide.

Timer harmonization

Timer harmonization is the adjustment of a timer's expiry so as to increase the probability that it will occur at the same time as other periodic timers of the same interval.

Harmonization uses the CLOCK_HARMONIC clock ID. You can use it with the *ClockPeriod()* kernel call to set or report the harmonic timer boundary; the *nsec* field in the struct _clockperiod is used to specify the number of seconds.



It's in seconds, not nanoseconds as usual, in spite of the field's name.

If the length of time before timer expiry exceeds the value set for CLOCK_HARMONIC, the timer is considered for harmonization processing.



When the kernel is deciding if a timer's expiry time is long enough to be harmonized, it doesn't consider any tolerance specified for the timer, but it does consider any default timer tolerance specified for the process with procedular proced

You can exclude a timer from harmonization by specifying TIMER_PRECISE in the flags parameter of TimerSettime(), timer_settime(), TimerTimeout(), or timer_timeout(). If TIMER_PRECISE was specified for a timer, TimerInfo() reports _NTO_TI_PRECISE in the flags field of the result structure.

Coding with power management in mind

Here are some tips for helping the kernel reduce power consumption:

Avoid polling loops and periodic timers.

Typical implementations of polling loops give the kernel no option to delay your application's execution when in low-power mode. On every iteration of your loop, you wake up the system and cause extra power usage as a result.

Polling loops are commonly caused by using the following functions in an unbounded loop:

- sleep()
- nanosleep()
- pthread_cond_timedwait()
- select() or poll() with a timeout

If you must use a polling loop, make its interval and tolerance as long as possible. This will minimize the power impact while allowing the kernel (through both timer harmonization and timer tolerance) to batch as many wakeups as possible.

Use timer tolerance.

When setting up a timer, you can specify how much tolerance the kernel is allowed when scheduling your thread after the timer fires. The kernel uses your timer's tolerance only when the system isn't awake. Essentially, tolerance allows the system to sleep longer and then do more work when it does wake up.

• Use *ionotify()* combined with a tolerant timer in place of *select()* with a timeout.

The *select()* and *poll()* functions can't use a tolerant timer. You can duplicate the behavior of these functions by using *ionotify()*, while using a tolerant timer for the timeout. Using this method also has the advantage of providing a normal QNX Neutrino pulse when input is available, letting you use your application's existing *MsgReceive()* loop.

Chapter 6

Transparent Distributed Processing Using Qnet

Transparent Distributed Processing (TDP) allows you to leverage the processing power of your entire network by sharing resources and services transparently over the network. TDP uses QNX Neutrino native network protocol Qnet to link the devices in your network.

What is Qnet?

Qnet is QNX Neutrino's protocol for distributed networking. Using Qnet, you can build a transparent distributed-processing platform that is fast and scalable. This is accomplished by extending the QNX Neutrino message passing architecture over a network. This creates a group of tightly integrated QNX Neutrino nodes (systems) or CPUs—a QNX Neutrino native network.

A program running on a QNX Neutrino node in this Qnet network can transparently access any resource, whether it's a file, device, or another process. These resources reside on any other node (a computer, a workstation or a CPU in a system) in the Qnet network. The Qnet protocol builds an optimized network that provides a fast and seamless interface between QNX Neutrino nodes.



For a high-level description, see Native Networking (Qnet) in the *System Architecture* guide; for information about what the *user* needs to know about networking, see Using Qnet for Transparent Distributed Processing in the QNX Neutrino *User's Guide*.

For more advanced topics and programming hints on Qnet, see Advanced Qnet Topics appendix.

Benefits of Qnet

The Qnet protocol extends interprocess communication (IPC) transparently over a network of microkernels. This is done by taking advantage of the QNX Neutrino's message-passing paradigm. Message passing is the central theme of the QNX Neutrino RTOS that manages a group of cooperating processes by routing messages. This enhances the efficiency of all transactions among all processes throughout the system.

For more information about message passing and Qnet, see Advanced Qnet Topics appendix.

What works best

The Qnet protocol is deployed as a network of trusted machines. It lets these machines share all their resources efficiently with minimum overhead. This is accomplished by allowing a client process to send a message to a remote manager in the same way that it sends a message to a local one.

See the "How does it work (p. 145)?" section of this chapter. For example, using Qnet, you can use the QNX Neutrino utilities (cp , mv and so on) to manipulate files anywhere on the Qnet Network as if they were on your machine — by communicating with the filesystem manager on the remote nodes. In addition, the Qnet protocol doesn't do any authentication of remote requests. Files are protected by the normal permissions that apply to users and groups (see "File ownership and permissions" in Working with Files in the *User's Guide*).

Quet, through its distributed processing platform, lets you do the following tasks efficiently:

- access your remote filesystem
- scale your application with unprecedented ease
- write applications using a collection of cooperating processes that communicate transparently with each other using QNX Neutrino message passing
- extend your application easily beyond a single processor or symmetric multi-processor to several single processor machines and distribute your processes among these processors
- divide your large application into several processes that coordinate their work using messages
- debug your application easily for processes that communicate at a very low level, and that use QNX Neutrino's memory protection feature
- use builtin remote procedure call functionality

Since Qnet extends QNX Neutrino message passing over the network, other forms of interprocess communication (e.g. signals, message queues, and named semaphores) also work over the network.

What type of application is well-suited for Qnet?

Any application that inherently needs more than one computer, due to its processing or physical layout requirements, could likely benefit from Qnet.

For example, you can apply Qnet networking successfully in many industrial-automation applications (e.g. a fabrication plant, with computers scattered around). From an application standpoint, Qnet provides an efficient form of distributed computing where all computers look like one big computer because Qnet extends the fundamental QNX Neutrino message passing across all the computers.

Another useful application is in the telecom space, where you need to implement large routers that have several processors. From an architectural standpoint, these routers generally have some interface cards and a central processor that runs a set of server processes. Each interface card, in turn, has a processor that runs another set of interface (e.g. client) processes. These client processes communicate via Qnet using QNX Neutrino message passing with the server processes on the central processor, as if they were all running on the same processor. The scalability of Qnet allows more and more interface cards to be plugged into the router, without any code changes required to the application.

How does it work?

As explained in the *System Architecture* guide, QNX Neutrino client and server applications communicate by QNX Neutrino message passing.

Function calls that need to communicate with a manager application, such as the POSIX functions <code>open()</code>, <code>write()</code>, <code>read()</code>, <code>ioctl()</code>, or other functions such as <code>devctl()</code> are all built on QNX Neutrino message passing.

Quet allows these messages to be sent over a network. If these messages are being sent over a network, how is a message sent to a remote manager vs a local manager?

When you access local devices or manager processes (such as a serial device, mqueue, or TCP/IP socket), you access these devices by opening a pathname under /dev. This may be apparent in the application source code:

```
/*Open a serial device*/
fd = open("/dev/ser1",O_RDWR....);
```

or it may not. For example, when you open a socket:

```
/*Create a UDP socket*/
sock = socket(AF_INET, SOCK_DGRAM, 0);
```

The <code>socket()</code> function opens a pathname under <code>/dev</code> called <code>/dev/socket/2</code> (in the case of AF_INET, which is address family two). The <code>socket()</code> function call uses this pathname to establish a connection with the socket manager (<code>io-pkt*</code>), just as the <code>open()</code> call above established a connection to the serial device manager (<code>devc-ser8250</code>).

The magic of this is that you access all managers by the name that they added to the pathname space. For more information, see the *Writing a Resource Manager* guide.

When you enable the Qnet native network protocol, the pathname spaces of all the nodes in your Qnet network are added to yours. The pathname space of remote nodes appears (by default) under the prefix /net.



Under QNX 4, you use a double slash followed by a node number to refer to another node.

The /net directory is created by the Qnet protocol manager (lsm-qnet.so). If, for example, the other node is called node1, its pathname space appears as follows:

```
/net/node1/dev/socket
/net/node1/dev/ser1
/net/node1/home
/net/node1/bin
....
```

So with Qnet, you can now open pathnames (files or managers) on other remote Qnet nodes, in the same way that you open files locally. This means that you can access

regular files or manager processes on other Qnet nodes as if they were executing on your local node.

First, let's see some basic examples of Qnet use:

To display the contents of a file on another machine (node1), you can use less, specifying the path through /net:

```
less /net/node1/etc/TIMEZONE
```

To get system information about all of the remote nodes that are listed in /net,
 use pidin with the net argument:

```
$ pidin net
```

 You can use pidin with the -n option to get information about the processes on another machine:

```
pidin -n nodel | less
```

 You can even run a process on another machine, using the -f option to the on command:

```
on -f node date
```

In all of these uses, the application source or the libraries (for example libc) they depend on, simply open the pathnames under /net. For example, if you wish to make use of a serial device on another node node1, perform an *open()* function with the pathname /net/node1/dev/ser1 i.e.

```
fd = open("/net/node1/dev/ser1",O_RDWR...);
```

As you can see, the code required for accessing remote resources and local resources is identical. The only change is the pathname used.

In the TCP/IP *socket()* case, it's the same, but implemented differently. In the socket case, you don't directly open a filename. This is done inside the socket library. In this case, an environment variable is provided to set the pathname for the socket call (the *sock* environment variable — see io-pkt*).

Some other applications are:

Remote filesystem access

In order to access /tmp/file1 file on node1 remotely from another node, use /net/node1/tmp/file1 in open().

Message queue

You can create or open a message queue by using mq_open(). The mqueue manager must be running. When a queue is created, it appears in the pathname space under /dev/mqueue. So, you can access /dev/mqueue on nodel from another node by using /net/nodel/dev/mqueue.



The alternate implementation of message queues that uses the $m\mathbf{q}$ server and asynchronous messages doesn't support access to a queue via Qnet.

Semaphores

Using Qnet, you can create or access named semaphores in another node. For example, use /net/node1/semaphore_location in the sem_open() function. This creates or accesses the named semaphore in node1.

This brings up an important issue for the client application or libraries that a client application uses. If you think that your application will be distributed over a network, you will want to include the capability to specify another pathname for connecting to your services. This way, your application will have the flexibility of being able to connect to local or remote services via a user-configuration adjustment. This could be as simple as the ability to pass a node name. In your code, you would add the prefix /net/node_name to any pathname that may be opened on the remote node. In the local case, or default case if appropriate, you could omit this prefix when accessing local managers.

In this example, you're using standard resource managers, such as would be developed using the resource manager framework (see the *Writing a Resource Manager* guide). For further information, or for a more in-depth view of Qnet, see Advanced Qnet Topics appendix.

There is another design issue to contend with at this point: the above design is a static one. If you have services at known locations, or the user will be placing services at known locations, then this may be sufficient. It would be convenient, though, if your client application could locate these services automatically, without the need to know what nodes exist in the Qnet network, or what pathname they've added to the namespace. You can now use the Global Name Service (gns) manager to locate services with an arbitrary name representing that service. For example, you can locate a service with a name such as printer instead of opening a pathname of /net/node/dev/parl for a parallel port device. The printer name locates the parallel port manager process, whether it's running locally or remotely.

Locating services using GNS

You use gns, the Global Name Service or GNS manager to locate services. GNS is a standalone resource manager. With the help of this utility, an application can advertise, look up, and use (connect to) a service across Qnet network, without knowing the details of where the service is, or who the provider is.

Different modes of GNS

The gns utility runs in two different modes: server and client mode. A server-mode manager is a central database that stores advertised services, and handles lookup and connect requests. A client-mode manager relays advertisement, lookup, and connect requests between local application and the GNS server(s).

For more information on starting and configuring GNS, see the gns utility in the *Utilities Reference*.

Here's a simple layout for a GNS client and a GNS server distributed over a network:

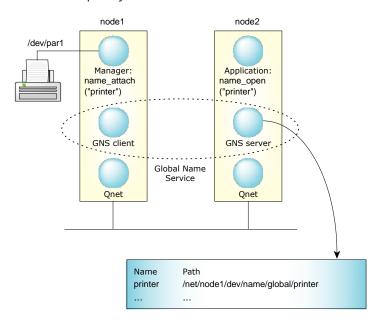


Figure 19: A simple GNS setup.

In this example, there's one gns client and one gns server. As far as an application is concerned, the GNS service is one entity. The client-server relationship is only between gns processes (we'll examine this later). The server GNS process keeps track of the globally registered services, while the client GNS process on the other node relays gns requests for that node to the gns server.

When a client and server application interacts with the GNS service, they use the following APIs:

Server:

name attach()

Register your service with the GNS server.

name_detach()

Deregister your service with the GNS server.

Client:

```
name_open()
```

Open a service via the GNS server.

name_close()

Close the service opened with name_open().

Registering a service

In order to use GNS, you need to first register the manager process with GNS, by calling *name attach()*.

When you register a service, you need to decide whether to register this manager's service locally or globally. If you register your service locally, only the local node is able to see this service; another node is not able to see it. This allows you to have client applications that look for service *names* rather than pathnames on the node it is executing on. This document highlights registering services globally.

When you register GNS service globally, any node on the network running a client application can use this service, provided the node is running a gns client process and is connected to the gns server, along with client applications on the nodes running the gns server process. You can use a typical <code>name_attach()</code> call as follows:

```
if ((attach = name_attach(NULL, "printer", NAME_FLAG_ATTACH_GLOBAL)) == NULL) {
    return EXIT_FAILURE;
}
```

First thing you do is to pass the flag NAME_FLAG_ATTACH_GLOBAL. This causes your service to be registered globally instead locally.

The last thing to note is the *name*. This is the name that clients search for. This name can have a single level, as above, or it can be nested, such as printer/ps. The call looks like this:

```
if ((attach = name_attach(NULL, "printer/ps", NAME_FLAG_ATTACH_GLOBAL)) == NULL) {
    return EXIT_FAILURE;
}
```

Nested names have no impact on how the service works. The only difference is how the services are organized in the filesystem generated by gns. For example:

```
$ ls -l /dev/name/global/printer
total 1
dr-xr-xr-x 0 root techies 1 Feb 06 16:21 ps
```

The first argument to the <code>name_attach()</code> function is the dispatch handle. You pass a dispatch handle to <code>name_attach()</code> once you've already created a dispatch structure. If this argument is NULL, a dispatch structure is created automatically.

What happens if more than one instance of the server application (or two or more applications that register the same service name) are started and registered with GNS? This is treated as a redundant service. If one application terminates or detaches its service, the other service takes over. However, it's not a round-robin configuration; all requests go to one application until it's no longer available. At that point, the requests resolve to another application that had registered the same service. There is no guaranteed ordering.

There's no credential restriction for applications that are attached as local services. An application can attach a service globally only if the application has root privilege.

When your application is to terminate, or you wish not to provide access to the service via GNS, you should call *name_detach()*. This removes the service from GNS.

For more information, see name_attach() and name_detach().

Your client should call <code>name_open()</code> to locate the service. If you wish to locate a global service, you need to pass the flag <code>NAME_FLAG_ATTACH_GLOBAL</code>:

```
if ((fd = name_open("printer", NAME_FLAG_ATTACH_GLOBAL)) == -1) {
    return EXIT_FAILURE;
}

Or:

if ((fd = name_open("printer/ps", NAME_FLAG_ATTACH_GLOBAL)) == -1) {
    return EXIT_FAILURE;
    }
}
```

If you don't specify this flag, GNS looks only for a local service. The function returns an fd that you can then use to access the service manager by sending messages, just as if you it had opened the service directly as /dev/parl, or /net/node/dev/parl.

GNS path namespace

A service is represented by a path namespace (without a leading "/") and is registered under /dev/name/global or /dev/name/local, depending on how it attaches itself. Every machine running a gns client or server on the same network has the same view of the /dev/name/global namespace. Each machine has its own local namespace /dev/name/local that reflects its own local services.

Here's an example after a service called printer has attached itself globally:

```
$ 1s -1 /dev/name/global/
total 2
dr-xr-xr-x 0 root techies 1 Feb 06 16:20 net
dr-xr-xr-x 0 root techies 1 Feb 06 16:21 printer
```

Deploying the gns processes

When you deploy the gns processes on your network, you start the gns process in two modes: server and client. You need at least one gns process running as a server on one node, and you can have one or more gns clients running on the remaining nodes. The role of the gns server process is to maintain the database that stores the advertised services. The role of a client gns process is to relay requests from its node to the gns server process on the other node. A gns process must be running on each node that wishes to access GNS.

It's possible to start multiple global name service managers (gns process) in server mode on different nodes. You can deploy server-mode gns processes in two ways: as redundant servers, or as servers that handle two or more different global domains.

In the first scenario, you have two or more servers with identical database information. The gns client processes are started with contact information for both servers. Operations are then sent to all gns server processes. The gns servers, however, don't communicate with each other. This means that if an application on one gns server node wants to register a global service, another gns server can't do it. This doesn't affect other applications on the network, because when they connect to that service, both GNS servers are contacted.

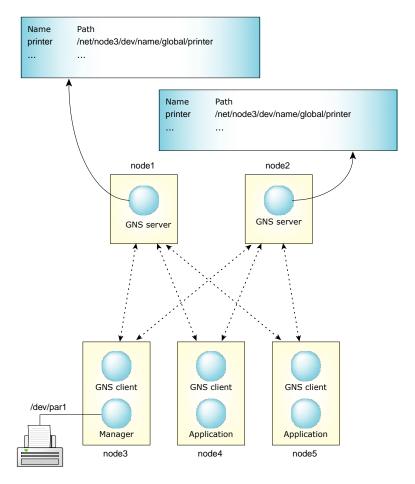


Figure 20: A redundant GNS setup.

You don't have to start all redundant gns servers at the same time. You can start one gns server process first, and then start a second gns server process at a later time. In this case, use the special option -s <code>backup_server</code> on the second gns server process to make it download the current service database from another node that's already running the gns server process. When you do this, the clients connected to the first node (that's already running the gns server process) are notified of the existence of the other server.

In the second scenario, you maintain more than one global domain. For example, assume you have two nodes, each running a gns server process. You also have a client node that's running a gns client process and is connecting to one of the servers. A different client node connects to the other server. Each server node has unique services registered by each client. A client connected to server node1 can't see the service registered on the server node2.

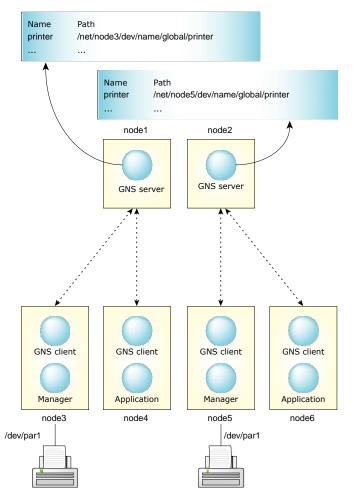


Figure 21: Separate global domains.

What is demonstrated in each scenario is that it's the client that determines whether a server is acting as a redundant server or not. If a client is configured to connect to two or more servers, then those servers are redundant servers for that client's services. The client can see the services that exist on those servers, and it registers its services with those servers.

There's no limit to the number of server mode gns processes that can be run on the network. Increasing the number of servers, however, in a redundant environment can increase network use and make gns function calls such as <code>name_attach()</code> more expensive as clients send requests to each server that exists in its configuration. It's recommended that you run only as many gns servers in a redundant configuration as your system design requires and no more than that.

For more information, see gns documentation in the Utilities Reference.

Quality of Service (QoS) and multiple paths

Quality of Service (QoS) is an issue that often arises in high-availability networks as well as realtime control systems. In the Qnet context, QoS really boils down to *transmission media selection* — in a system with two or more network interfaces, Qnet chooses which one to use, according to the policy you specify.



If you have only a single network interface, the QoS policies don't apply at all.

QoS policies

Quet supports transmission over *multiple networks* and provides the following policies for specifying how Quet should select a network interface for transmission:

loadbalance (the default)

Quet is free to use all available network links, and shares transmission equally among them.

preferred

Quet uses one specified link, ignoring all other networks (unless the preferred one fails).

exclusive

Qnet uses one — and only one — link, ignoring all others, even if the exclusive link fails.

loadbalance

Qnet decides which links to use for sending packets, depending on current load and link speeds as determined by io-pkt*. A packet is queued on the link that can deliver the packet the soonest to the remote end. This effectively provides greater bandwidth between nodes when the links are up (the bandwidth is the sum of the bandwidths of all available links) and allows a graceful degradation of service when links fail.

If a link does fail, Qnet switches to the next available link. By default, this switch takes a few seconds *the first time*, because the network driver on the bad link will have timed out, retried, and finally died. But once Qnet "knows" that a link is down, it will *not* send user data over that link. (This is a significant improvement over the QNX 4 implementation.)

The time required to switch to another link can be set to whatever is appropriate for your application using command-line options of Qnet. See <code>lsm-qnet.so</code> documentation.

Using these options, you can create a redundant behavior by minimizing the latency that occurs when switching to another interface in case one of the interfaces fail.

While load-balancing among the live links, Qnet sends periodic maintenance packets on the failed link in order to detect recovery. When the link recovers, Qnet places it back into the pool of available links.



The loadbalance QoS policy is the default.

preferred

With this policy, you specify a preferred link to use for transmissions. Qnet uses only that one link until it fails. If your preferred link fails, Qnet then turns to the other available links and resumes transmission, using the loadbalance policy.

Once your preferred link is available again, Qnet again uses only that link, ignoring all others (unless the preferred link fails).

exclusive

You use this policy when you want to lock transmissions to only one link. Regardless of how many other links are available, Qnet will latch onto the one interface you specify. And if that exclusive link fails, Qnet will *not* use any other link.

Why would you want to use the exclusive policy? Suppose you have two networks, one much faster than the other, and you have an application that moves large amounts of data. You might want to restrict transmissions to only the fast network, in order to avoid swamping the slow network if the fast one fails.

Specifying QoS policies

You specify the QoS policy as part of the pathname. For example, to access /net/node1/dev/ser1 with a QoS of exclusive, you could use the following pathname:

/net/nodel~exclusive:en0/dev/ser1

The QoS parameter always begins with a tilde (~) character. Here we're telling Qnet to lock onto the enO interface exclusively, even if it fails.

Symbolic links

You can set up symbolic links to the various "QoS-qualified" pathnames:

ln -sP /net/notel~preferred:enl /remote/sql_server

This assigns an "abstracted" name of /remote/sql_server to the node node1 with a preferred QoS (i.e. over the en1 link).



You can't create symbolic links inside /net because Qnet takes over that namespace.

Abstracting the pathnames by one level of indirection gives you multiple servers available in a network, all providing the same service. When one server fails, the abstract pathname can be "remapped" to point to the pathname of a different server. For example, if nodel fails, then a monitoring program could detect this and effectively issue:

```
rm /remote/sql_server
ln -sP /net/magenta /remote/sql_server
```


This removes node1 and reassigns the service to node2. The real advantage here is that applications can be coded based on the abstract "service name" rather than be bound to a specific node name.

For a real world example of choosing appropriate QoS policy in an application, see the following section on designing a system using Qnet.

Designing a system using Qnet

The product: a telecom box

In order to explain the design of a system that takes advantage of the power of Qnet by performing distributed processing, consider a multiprocessor hardware configuration that is suitable for a typical telecom box. This configuration has a generic controller card and several data cards to start with. These cards are interconnected by a high-speed transport (HST) bus. The controller card configures the box by communicating with the data cards, and establishes/enables data transport in and out of the box (i.e. data cards) by routing packets.

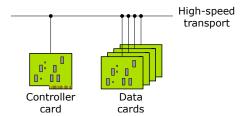

The typical challenges to consider for this type of box include:

- Configuring the data cards
- · Configuring the controller card
- Replacing a data card
- Enhancing reliability via multiple transport buses
- Enhancing reliability via multiple controller cards

Developing your distributed system

You need several pieces of software components (along with the hardware) to build your distributed system.

Before going into further details, you may review the following sections from Using Qnet for Transparent Distributed Processing chapter in the QNX Neutrino *User's Guide*:

- · Software components for Qnet networking
- Starting Qnet
- Conventions for naming nodes

Configuring the data cards

Power up the data cards to start procnto and quet in sequence. These data cards need a minimal amount of flash memory (e.g. typically 1 MB) to store the QNX Neutrino image.

In the buildfile of the data cards, you should link the directories of the data cards to the controller cards as follows:

```
[type=link] /bin = /net/cc0/bin
[type=link] /sbin = /net/cc0/sbin
[type=link] /usr = /net/cc0/usr
```

where cc0 is the name of the the controller card.

Assuming that the data card has a console and shell prompt, try the following commands:

```
$ ls /net
```

You get a list of boards running QNX Neutrino and Qnet:

```
cc0 dc0 dc1 dc2 dc3
```

Or, use the following command on a data card:

```
$ ls /net/cc0
```

You get the following output (i.e. the contents of the root of the filesystem for the controller card):

```
.inodes
                                 mnt0
                                              tmp
                .longfilenames
                                 mnt1
                                              usr
                bin
.altboot
                                              var
                                 net.
                                 proc
.bad_blks
                dev
                                              xfer
.bitmap
                etc
                                 sbin
                                  scratch
.boot
                home
```

Configuring the controller card

Configure the controller card in order to access different servers running on it — either by the data cards, or by the controller card itself. Make sure that the controller card has a larger amount of flash memory than the data cards do. This flash memory contains all the binaries, data and configuration files that the applications on the data cards access as if they were on a local storage device.

Call the following API to communicate with the mqueue server by any application:

```
\label{eq:mq_open} \verb"mq_open("/net/cc0/dev/mqueue/app_q", \dots.)
```

A simple variation of the above command requires that you run the following command during initialization:

```
$ ln -s /net/cc0/dev/mqueue /mq
```


Then all applications, whether they're running on the data cards or on the controller card, can call:

```
mq_open("/mq/app_q", ....)
```

Similarly, applications can even utilize the TCP/IP stack running on the controller card.

Enhancing reliability via multiple transport buses

Quet provides design choices to improve the reliability of a high-speed transport bus, most often a single-point of failure in such type of telecom box.

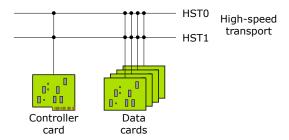

You can choose between different transport selections to achieve a different Quality of Service (or QoS), such as:

- load-balance no interface specified
- preferred specify an interface, but allow failover
- exclusive specify an interface, no failover

These selections allow you to control how data will flow via different transports.

In order to do that, first, find out what interfaces are available. Use the following command at the prompt of any card:

ls /dev/io-net

You see the following:


hs0 hs1

These are the interfaces available: HST 0 and HST 1.

Select your choice of transport as follows:

Use this command:	To select this transport:
ls /net/cc0	Loadbalance, the default choice
ls /net/cc0~preferred:hs0	Preferred. Try HST 0 first; if that fails, then transmit on HST 1.
ls /net/cc0~exclusive:hs0	Exclusive. Try HST 0 first. If that fails, terminate transmission.

You can have another economical variation of the above hardware configuration:

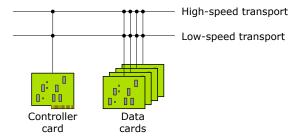

This configuration has asymmetric transport: a High-Speed Transport (HST) and a reliable and economical Low-Speed Transport (LST). You might use the HST for user data, and the LST exclusively for out-of-band control (which can be very helpful for diagnosis and during booting). For example, if you use generic Ethernet as the LST, you could use a bootp ROM on the data cards to economically boot — no flash would be required on the data cards.


With asymmetric transport, use of the QoS policy as described above likely becomes even more useful. You might want some applications to use the HST link first, but use the LST if the HST fails. You might want applications that transfer large amounts of data to exclusively use the HST, to avoid swamping the LST.

Redundancy and scalability using multiple controller cards

Redundancy

The reliability of such a telecom box also hinges on the controller card, that's a critical component and certainly a potential SPOF (single point of failure). You can increase the reliability of this telecom box by using additional controller cards.

The additional controller card is for redundancy. Add another controller card as shown below:

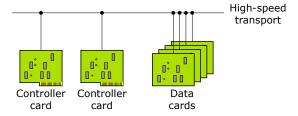

Once the (second) controller card is installed, the challenge is in the determination of the primary controller card. This is done by the software running on the controller cards. By default, applications on the data cards access the primary controller card. Assuming cc0 is the primary controller card, Use the following command to access this card in /cc directory:

ln -s /net/cc0 /cc

The above indirection makes communication between data card and controller card transparent. In fact, the data cards remain unaware of the number of controller cards, or which card is the primary controller card.

Applications on the data cards access the primary controller card. In the event of failure of the primary controller card, the secondary controller card takes over. The applications on the data cards redirect their communications via Qnet to the secondary controller card.

Scalability

You can also scale your resources to run a particular server application using additional controller cards. For example, if your controller card (either a SMP or non-SMP board) doesn't have the necessary resources (e.g. CPU cycle, memory), you could increase the total processor and box resources by using additional controller cards. Qnet transparently distributes the (load of) application servers across two or more controller cards.

Autodiscovery vs static

When you're creating a network of QNX Neutrino hosts via Qnet, one thing you must consider is how they locate and address each other. This falls into two categories: autodiscovery and static mappings.

The decision to use one or the other can depend on security and ease of use.

The autodiscovery mechanism (i.e. en_ionet; see lsm-qnet.so for more information) allows Qnet nodes to discover each other automatically on a transport that supports broadcast. This is a very convenient and dynamic way to build your network, and doesn't require user intervention to access a new node.

One issue to consider is whether or not the physical link being used by your Qnet nodes is secure. Can another untrusted Qnet node be added to this physical network of Qnet nodes? If the answer is yes, you should consider another resolver (file: filename). If you use this resolver, only the nodes listed in the file can be accessed. This file consists of node names and a string representing the addressing scheme of your transport layer. In the Ethernet case, this is the unique MAC address of the Qnet node listed. If you're using the file resolver for this purpose, you also want to specify the option auto_add=0 in lsm-qnet.so. This keeps your node from responding to node discovery protocol requests and adding a host that isn't listed in your resolver file.

Another available resolver, dns lets you access another Qnet node if you know its name (IP). This is used in combination with the IP transport (lsm-qnet.so option bind=ip). Since it doesn't have an auto_add feature as the en_ionet resolver does, you don't need to specify a similar Qnet option. Your Qnet node resolve the remote Qnet node's name only via the file used by the Qnet file resolver.

When should you use Qnet, TCP/IP, or NFS?

In your network design, when should you use Qnet, TCP/IP, or NFS? The decision depends on what your intended application is and what machines you need to connect.

The advantage of using Qnet is that it lets you build a truly distributed processing system with incredible scalability. For many applications, it could be a benefit to be able to share resources among your application systems (nodes). Qnet implements a native network protocol to build this distributed processing system.

The basic purpose of Qnet is to extend QNX Neutrino message passing to work over a network link. It lets these machines share all their resources with little overhead. A Qnet network is a trusted environment where resources are tightly integrated, and remote manager processes can be accessed transparently. For example, with Qnet, you can use the QNX Neutrino utilities (cp, mv and so on) to manipulate files anywhere on the Qnet network as if they were on your machine. Because it's meant for a group of trusted machines (such as you'd find in an embedded system), Qnet doesn't do any authentication of remote requests. Also, the application really doesn't know whether it's accessing a resource on a remote system; and most importantly, the application doesn't need any special code to handle this capability.

If you're developing a system that requires remote procedure calling (RPC), or remote file access, Qnet provides this capability transparently. In fact, you use a form of remote procedure call (a QNX Neutrino message pass) every time you access a manager on your QNX Neutrino system. Since Qnet creates an environment where there's no difference between accessing a manager locally or remotely, remote procedure calling (capability) is builtin. You don't need to write source code to distribute your services. Also, since you are sharing the filesystem between systems, there's no need for NFS to access files on other QNX Neutrino hosts (of the same endian), because you can access remote filesystem managers the same way you access your local one. Files are protected by the normal permissions that apply to users and groups (see "File ownership and permissions" in the Working with Files chapter in the *User's Guide*).


There are several ways to control access to a Qnet node, if required:

- Bind Qnet to a specific network interface; this ensures that the protocol functions only on that specific interface.
- Use maproot and mapany options to control in a limited way what other users can do on your system.
- Use a static list of your peer systems instead of dynamically discovering them.

You can also configure Quet to be used on a local LAN, or routed over to a WAN if necessary (encapsulated in the IP protocol).

Depending on your system design, you may need to include TCP/IP protocols along with Qnet, or instead of Qnet. For example, you could use a TCP/IP-based protocol to

connect your Qnet cluster to a host that's running another operating system, such as a monitoring station that controls your system, or another host providing remote access to your system. You'll probably want to deploy standard protocols (e.g SNMP, HTTP, or a telnet console) for this purpose. If all the hosts in your system are running different operating systems, then your likely choice to connect them would be TCP/IP. The TCP/IP protocols typically do authentication to control access; it's useful for connecting machines that you don't necessarily trust.

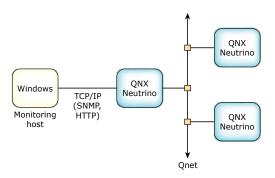



You can also build a QNX Neutrino-based TCP/IP network. A QNX Neutrino TCP/IP network can access resources located on any other system that supports TCP/IP protocol. For a discussion of QNX Neutrino TCP/IP specifics, see TCP/IP Networking in the *System Architecture* guide.

Another issue may be the required behavior. For example, NFS has been designed for filesystem operations between all hosts and all endians. It's widely supported and a connectionless protocol. In NFS, the server can be shut down and restarted, and the client resumes automatically. NFS also uses authentication and controls directory access. However, NFS retries forever to reach a remote host if it doesn't respond, whereas Qnet can return an error if connectivity is lost to a remote host. For more information, see "NFS filesystem" in Working with Filesystems in the *User's Guide*).


If you require broadcast or multicast services, you need to look at TCP/IP functionalities, because Qnet is based on QNX Neutrino message passing, and has no concept of broadcasting or multicasting.

Drivers for Qnet

You don't need a specific driver for your hardware, for example, for implementing a local area network using Ethernet hardware or for implementing TCP/IP networking that require IP encapsulation. In these cases, the underlying io-pkt* and TCP/IP layer is sufficient to interface with the Qnet layer for transmitting and receiving packets. You use standard QNX Neutrino drivers to implement Qnet over a local area network or to encapsulate Qnet messages in IP (TCP/IP) to allow Qnet to be routed to remote networks.

The driver essentially performs three functions: transmitting a packet, receiving a packet, and resolving the remote node's interface (address).

First, let's define what exactly a driver is, from Qnet's perspective. When Qnet is run with its default binding of raw Ethernet (e.g. bind=en0), you'll find the following arrangement of layers that exists in the node:

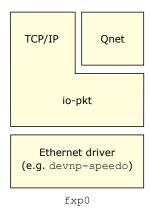

In the above case, io-pkt* is actually the driver that transmits and receives packets, and thus acts as a hardware-abstraction layer. Quet doesn't care about the details of the Ethernet hardware or driver.

So, if you simply want new Ethernet hardware supported, you don't need to write a Qnet-specific driver. What you need is just a normal Ethernet driver that knows how to interface to io-pkt*.

There is a bit of code at the very bottom of Qnet that's specific to io-pkt* and has knowledge of exactly how io-pkt* likes to transmit and receive packets. This is the L4 driver API abstraction layer.

Let's take a look at the arrangement of layers that exist in the node when Qnet is run with the optional binding of IP encapsulation (e.g. bind=ip):

Qnet

TCP/IP

io-pkt

Ethernet driver
(e.g. devnp-speedo)

As far as Qnet is concerned, the TCP/IP stack is now its driver. This stack is responsible for transmitting and receiving packets.

Chapter 7 Writing an Interrupt Handler

The key to handling hardware events in a timely manner is for the hardware to generate an *interrupt*. An interrupt is simply a pause in, or interruption of, whatever the processor was doing, along with a request to do something else.

The hardware generates an interrupt whenever it has reached some state where software intervention is desired. Instead of having the software continually poll the hardware — which wastes CPU time — an interrupt is the preferred method of "finding out" that the hardware requires some kind of service. The software that handles the interrupt is therefore typically called an *Interrupt Service Routine* (ISR).

Although crucial in a realtime system, interrupt handling has unfortunately been a very difficult and awkward task in many traditional operating systems. Not so with the QNX Neutrino RTOS. As you'll see in this chapter, handling interrupts is almost trivial; given the fast context-switch times in QNX Neutrino, most if not all of the "work" (usually done by the ISR) is actually done by a thread.

Let's take a look at the QNX Neutrino interrupt functions and at some ways of dealing with interrupts. For a different look at interrupts, see the Interrupts chapter of *Get Programming with the QNX Neutrino RTOS*.

Interrupts on multicore systems

On a multicore system, each interrupt is directed to one (and only one) CPU, although it doesn't matter which. How this happens is under control of the programmable interrupt controller chip(s) on the board. When you initialize the PICs in your system's startup, you can program them to deliver the interrupts to whichever CPU you want to; on some PICs you can even get the interrupt to rotate between the CPUs each time it goes off.

For the startups we write, we typically program things so that all interrupts (aside from the one(s) used for interprocessor interrupts) are sent to CPU 0. This lets us use the same startup for both procnto and procnto-smp. According to a study that Sun did a number of years ago, it's more efficient to direct all interrupts to one CPU, since you get better cache utilization.

For more information, see the Customizing Image Startup Programs chapter of *Building Embedded Systems*.

An ISR (Interrupt Service Routine) that's added by *InterruptAttach()* runs on the CPU that takes the interrupt.

An IST (Interrupt Service Thread) that receives the event set up by InterruptAttachEvent() runs on any CPU, limited only by the scheduler and the runmask.

A thread that calls *InterruptWait()* runs on any CPU, limited only by the scheduler and the runmask.

Attaching and detaching interrupts

In order to install an ISR, the software must tell the OS that it wishes to associate the ISR with a particular source of interrupts, which can be a hardware *Interrupt Request* line (IRQ) or one of several software interrupts. The actual number of interrupts depends on the hardware configuration supplied by the board's manufacturer. For the interrupt assignments for specific boards, see the sample build files in

```
${QNX_TARGET}/${PROCESSOR}/boot/build.
```

In any case, a thread specifies which interrupt source it wants to associate with which ISR, using the *InterruptAttach()* or *InterruptAttachEvent()* function calls; when the software wishes to dissociate the ISR from the interrupt source, it can call *InterruptDetach()*. For example:

```
#define IRQ3 3

/* A forward reference for the handler */
extern const sigevent *serint (void *, int);
...

/*
 * Associate the interrupt handler, serint,
 * with IRQ 3, the 2nd PC serial port
 */
ThreadCtl( _NTO_TCTL_IO, 0 );
id = InterruptAttach (IRQ3, serint, NULL, 0, 0);
...

/* Perform some processing. */
...

/* Done; detach the interrupt source. */
InterruptDetach (id);
```



The startup code is responsible for making sure that all interrupt sources are masked during system initialization. When the first call to *InterruptAttach()* or *InterruptAttachEvent()* is done for an interrupt vector, the kernel unmasks it. Similarly, when the last *InterruptDetach()* is done for an interrupt vector, the kernel remasks the level.

Because the interrupt handler can potentially gain control of the machine, we don't let just anybody associate an interrupt. The thread must have:

- the PROCMGR_AID_INTERRUPT ability enabled
- I/O privileges, the privileges associated with being able to manipulate hardware
 I/O ports and affect the processor interrupt enable flag (the x86 processor instructions in, ins, out, outs, cli, and sti). This is governed by the PROCMGR_AID_IO ability.

These effectively limit the association of interrupt sources with ISR code. For more information, see *procmgr_ability()*.

Let's now take a look at the ISR itself.

Interrupt Service Routine (ISR)

In our example above, the function *serint()* is the ISR. In general, an ISR is responsible for:

- · determining which hardware device requires servicing, if any
- performing some kind of servicing of that hardware (usually this is done by simply reading and/or writing the hardware's registers)
- updating some data structures shared between the ISR and some of the threads running in the application
- signalling the application that some kind of event has occurred

Depending on the complexity of the hardware device, the ISR, and the application, some of the above steps may be omitted.



It isn't safe to use floating-point operations in Interrupt Service Routines.

Let's take a look at these steps in turn.

Determining the source of the interrupt

Depending on your hardware configuration, there may actually be *multiple* hardware sources associated with an interrupt. This issue is a function of your specific hardware and bus type. This characteristic (plus good programming style) mandates that your ISR ensure that the hardware associated with it actually *caused* the interrupt.

Most *PIC* (Programmable Interrupt Controller) chips can be programmed to respond to interrupts in either an *edge-sensitive* or *level-sensitive* manner. Depending on this programming, interrupts may be sharable.

For example:

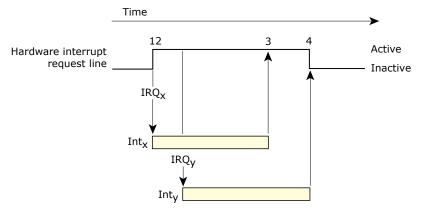


Figure 22: Interrupt request assertion with multiple interrupt sources.

In the above scenario, if the PIC is operating in a level-sensitive mode, the IRQ is considered active whenever it's high. In this configuration, while the second assertion (step 2) doesn't itself *cause* a new interrupt, the interrupt is still considered active even when the original cause of the interrupt is removed (step 3). Not until the last assertion is cleared (step 4) will the interrupt be considered inactive.

In edge-triggered mode, the interrupt is "noticed" only once, at step 1. Only when the interrupt line is cleared, and then reasserted, does the PIC consider another interrupt to have occurred.

QNX Neutrino allows ISR handlers to be *stacked*, meaning that multiple ISRs can be associated with one particular IRQ. The impact of this is that each handler in the chain must look at its associated hardware and determine if it caused the interrupt. This works reliably in a level-sensitive environment, but not an edge-triggered environment.

To illustrate this, consider the case where two hardware devices are sharing an interrupt. We'll call these devices "HW-A" and "HW-B." Two ISR routines are attached to one interrupt source (via the *InterruptAttach()* or *InterruptAttachEvent()* call), in sequence (i.e. ISR-A is attached first in the chain, ISR-B second).

Now, suppose HW-B asserts the interrupt line first. QNX Neutrino detects the interrupt and dispatches the two handlers in order — ISR-A runs first and decides (correctly) that its hardware did *not* cause the interrupt. Then ISR-B runs and decides (correctly) that its hardware *did* cause the interrupt; it then starts servicing the interrupt. But before ISR-B clears the source of the interrupt, suppose HW-A asserts an interrupt; what happens depends on the type of IRQ.

Edge-triggered IRQ

If you have an edge-triggered bus, when ISR-B clears the source of the interrupt, the IRQ line is still held active (by HW-A). But because it's edge-triggered, the PIC is waiting for the next clear/assert transition before it decides that another interrupt has occurred. Since ISR-A already ran, it can't possibly run again to actually *clear* the source of the interrupt. The result is a "hung" system, because the interrupt will *never* transit between clear and asserted again, so no further interrupts on that IRQ line will ever be recognized.

Level-sensitive IRQ

On a level-sensitive bus, when ISR-B clears the source of the interrupt, the IRQ line is still held active (by HW-A). When ISR-B finishes running and QNX Neutrino sends an *EOI* (End Of Interrupt) command to the PIC, the PIC immediately reinterrupts the kernel, causing ISR-A (and then ISR-B) to run.

Since ISR-A clears the source of the interrupt (and ISR-B doesn't do anything, because its associated hardware doesn't require servicing), everything functions as expected.

Servicing the hardware

The above discussion may lead you to the conclusion that "level-sensitive is *good*; edge-triggered is *bad*." However, another issue comes into play.

In a level-sensitive environment, your ISR *must* clear the source of the interrupt (or at least mask it via *InterruptMask()*) before it completes. (If it didn't, then when the kernel issued the EOI to the PIC, the PIC would then immediately reissue a processor interrupt and the kernel would loop forever, continually calling your ISR code.)

In an edge-triggered environment, there's no such requirement, because the interrupt won't be noticed again until it transits from clear to asserted.

In general, to actually service the interrupt, your ISR has to do very little; the minimum it can get away with is to clear the source of the interrupt and then schedule a thread to actually do the work of handling the interrupt. This is the recommended approach, for a number of reasons:

- Context-switch times between the ISR completing and a thread executing are very small — typically on the order of a few microseconds.
- The type of functions that the ISR itself can execute is very limited (those that don't call any kernel functions, except the ones listed below).
- The ISR runs at a priority higher than any software priority in the system having the ISR consume a significant amount of processor has a negative impact on the realtime aspects of the QNX Neutrino RTOS.



Since the range of hardware attached to an interrupt source can be very diverse, the specific how-to's of servicing the interrupt are beyond the scope of this document — this really depends on what your hardware requires you to do.

Safe functions

When the ISR is servicing the interrupt, it can't make any kernel calls (except for the few that we'll talk about shortly). This means that you need to be careful about the library functions that you call in an ISR, because their underlying implementation may use kernel calls.



For a list of the functions that you can call from an ISR, see the Full Safety Information appendix in the *C Library Reference*.

Here are the only kernel calls that the ISR can use:

- InterruptMask()
- InterruptUnmask()
- TraceEvent()

You'll also find these functions (which aren't kernel calls) useful in an ISR:

- InterruptEnable() (not recommended)
- InterruptDisable() (not recommended)
- InterruptLock()
- InterruptUnlock()

Let's look at these functions.

To prevent a thread and ISR from interfering with each other, you'll need to tell the kernel to disable interrupts. On a single-processor system, you can simply disable interrupts using the processor's "disable interrupts" opcode. But on an SMP system, disabling interrupts on one processor doesn't disable them on another processor.

The function *InterruptDisable()* (and the reverse, *InterruptEnable()*) performs this operation on a single-processor system. The function *InterruptLock()* (and the reverse, *InterruptUnlock()*) performs this operation on an SMP system.



We recommend that you *always* use the SMP versions of these functions — this makes your code portable to SMP systems, with a negligible amount of overhead.

The *InterruptMask()* and *InterruptUnmask()* functions disable and enable the PIC's recognition of a particular hardware IRQ line. These calls are useful if your interrupt handler ISR is provided by the kernel via *InterruptAttachEvent()* or if you can't clear the cause of the interrupt in a level-sensitive environment quickly. (This would typically be the case if clearing the source of the interrupt is time-consuming — you don't want to spend a lot of time in the interrupt handler. The classic example of this is a floppy-disk controller, where clearing the source of the interrupt may take many milliseconds.) In this case, the ISR would call *InterruptMask()* and schedule a thread to do the actual work. The thread would call *InterruptUnmask()* when it had cleared the source of the interrupt.

Note that these two functions are *counting* — *InterruptUnmask()* must be called the same number of times as *InterruptMask()* in order to have the interrupt source considered enabled again.

The *TraceEvent()* function traces kernel events; you can call it, with some restrictions, in an interrupt handler. For more information, see the System Analysis Toolkit *User's Guide*.

Updating common data structures

Another issue that arises when using interrupts is how to safely update data structures in use between the ISR and the threads in the application. Two important characteristics are worth repeating:

- The ISR runs at a higher priority than any software thread.
- The ISR can't issue kernel calls (except as noted).

This means that you *can't* use thread-level synchronization (such as mutexes, condvars, etc.) in an ISR.

Because the ISR runs at a higher priority than any software thread, it's up to the thread to protect itself against any preemption caused by the ISR. Therefore, the thread should issue *InterruptDisable()* and *InterruptEnable()* calls around any critical data-manipulation operations. Since these calls effectively turn off interrupts, the thread should keep the data-manipulation operations to a bare minimum.

With SMP, there's an additional consideration: one processor could be running the ISR, and another processor could be running a thread related to the ISR. Therefore, on an SMP system, you must use the *InterruptLock()* and *InterruptUnlock()* functions instead. Again, using these functions on a non-SMP system is safe; they'll work just like *InterruptDisable()* and *InterruptEnable()*, albeit with an insignificantly small performance penalty.

Another solution that can be used in some cases to at least guarantee atomic accesses to data elements is to use the $atomic_*()$ (p. 181) function calls (below).

Signalling the application code

Since the environment the ISR operates in is very limited, generally you'll want to perform most (if not all) of your actual "servicing" operations at the thread level.

At this point, you have two choices:

- You may decide that some time-critical functionality needs to be done in the ISR, with a thread being scheduled later to do the "real" work.
- You may decide that nothing needs to be done in the ISR; you just want to schedule
 a thread.

This is effectively the difference between <code>InterruptAttach()</code> (where an ISR is attached to the IRQ) and <code>InterruptAttachEvent()</code> (where a struct sigevent is bound to the IRQ).

Let's take a look at the prototype for an ISR function and the *InterruptAttach()* and *InterruptAttachEvent()* functions:

Using InterruptAttach()

Looking at the prototype for *InterruptAttach()*, the function associates the IRQ vector (*intr*) with your ISR handler (*handler*), passing it a communications area (*area*).

The *size* and *flags* arguments aren't germane to our discussion here (they're described in the *C Library Reference* for the *InterruptAttach()* function).

For the ISR, the <code>handler()</code> function takes a <code>void *</code> pointer and an <code>int</code> identification parameter; it returns a <code>const struct sigevent *</code> pointer. The <code>void *</code> area parameter is the value given to the <code>InterruptAttach()</code> function—any value you put in the <code>area</code> parameter to <code>InterruptAttach()</code> is passed to your <code>handler()</code> function. (This is simply a convenient way of coupling the interrupt handler ISR to some data structure. You're certainly free to pass in a <code>NULL</code> value if you wish.)

After it has read some registers from the hardware or done whatever processing is required for servicing, the ISR may or may not decide to schedule a thread to actually do the work. In order to schedule a thread, the ISR simply returns a pointer to a const struct sigevent structure — the kernel looks at the structure and delivers the event to the destination. (See the QNX Neutrino *C Library Reference* under sigevent for a discussion of event types that can be returned.) If the ISR decides not to schedule a thread, it simply returns a NULL value.

As mentioned in the documentation for sigevent, the event returned can be a signal or a pulse. You may find that a signal or a pulse is satisfactory, especially if you already have a signal or pulse handler for some other reason.

Note, however, that for ISRs we can also return a SIGEV_INTR. This is a special event that really has meaning only for an ISR and its associated *controlling thread*.

A very simple, elegant, and fast way of servicing interrupts from the thread level is to have a thread dedicated to interrupt processing. The thread attaches the interrupt (via InterruptAttach()) and then the thread blocks, waiting for the ISR to tell it to do something. Blocking is achieved via the InterruptWait() call. This call blocks until the ISR returns a SIGEV_INTR event:

```
main ()
{
    // perform initializations, etc.
    ...
    // start up a thread that is dedicated to interrupt processing pthread_create (NULL, NULL, int_thread, NULL);
    ...
    // perform other processing, as appropriate
    ...
}

// this thread is dedicated to handling and managing interrupts void *
int_thread (void *arg)
{
    // enable I/O privilege
    ThreadCtl (_NTO_TCTL_IO, NULL);
    ...
    // initialize the hardware, etc.
    ...
```

```
// attach the ISR to IRO 3
    InterruptAttach (IRQ3, isr_handler, NULL, 0, 0);
    // perhaps boost this thread's priority here
    // now service the hardware when the ISR says to
    while (1)
        InterruptWait (NULL, NULL);
        // at this point, when InterruptWait unblocks,
        // the ISR has returned a SIGEV_INTR, indicating
        // that some form of work needs to be done.
        // do the work
        // if the isr_handler did an InterruptMask, then
        // this thread should do an InterruptUnmask to
        // allow interrupts from the hardware
// this is the ISR
const struct sigevent *
isr_handler (void *arg, int id)
    // look at the hardware to see if it caused the interrupt
    // if not, simply return (NULL);
    // in a level-sensitive environment, clear the cause of
    // the interrupt, or at least issue InterruptMask to
    // disable the PIC from reinterrupting the kernel
    // return a pointer to an event structure (preinitialized
    // by main) that contains SIGEV_INTR as its notification type.
    // This causes the InterruptWait in "int_thread" to unblock.
    return (&event);
```

In the above code sample, we see a typical way of handling interrupts. The main thread creates a special interrupt-handling thread (<code>int_thread()</code>). The sole job of that thread is to service the interrupts at the thread level. The interrupt-handling thread attaches an ISR to the interrupt (<code>isr_handler()</code>), and then waits for the ISR to tell it to do something. The ISR informs (unblocks) the thread by returning an event structure with the notification type set to <code>SIGEV_INTR</code>.

This approach has a number of advantages over using an event notification type of SIGEV_SIGNAL or SIGEV_PULSE:

- The application doesn't have to have a *MsgReceive()* call (which would be required to wait for a pulse).
- The application doesn't have to have a signal-handler function (which would be required to wait for a signal).
- If the interrupt servicing is critical, the application can create the int_thread()
 thread with a high priority; when the SIGEV_INTR is returned from the isr_handler()
 function, if the int_thread() function is of sufficient priority, it runs immediately.
 There's no delay as there might be, for example, between the time that the ISR
 sent a pulse and another thread eventually called a MsgReceive() to get it.

The only caveat to be noted when using *InterruptWait()* is that the thread that *attached* the interrupt is the one that must *wait* for the SIGEV_INTR.

Using InterruptAttachEvent()

Most of the discussion above for *InterruptAttach()* applies to the *InterruptAttachEvent()* function, with the obvious exception of the ISR. You don't provide an ISR in this case — the kernel notes that you called *InterruptAttachEvent()* and handles the interrupt itself. Since you also bound a struct sigevent to the IRQ, the kernel can now dispatch the event. The major advantage is that we avoid a context switch into the ISR and back.

An important point to note is that the kernel automatically performs an <code>InterruptMask()</code> in the interrupt handler. Therefore, it's up to you to perform an <code>InterruptUnmask()</code> when you actually clear the source of the interrupt in your interrupt-handling thread. This is why <code>InterruptMask()</code> and <code>InterruptUnmask()</code> are counting.

Running out of interrupt events

If you're working with interrupts, you might see an Out of Interrupt Events error. This happens when the system is no longer able to run user code and is stuck in the kernel, most frequently because:

• The interrupt load is too high for the CPU (it's spending all of the time handling the interrupt).

Or:

• There's an interrupt handler — one connected with *InterruptAttach()*, not *InterruptAttachEvent()* — that doesn't properly clear the interrupt condition from the device (leading to the case above).

If you call *InterruptAttach()* in your code, look at the handler code first and make sure you're properly clearing the interrupt condition from the device before returning to the OS.

If you encounter this problem, even with all hardware interrupts disabled, it could be caused by misuse or excessive use of software timers.

Problems with shared interrupts

It's possible for different devices to share an interrupt (for example if you've run out of hardware interrupt lines), but we don't recommend you do this with hardware that will be generating a lot of interrupts. We also recommend you not share interrupts with drivers that you don't have complete source control over, because you need to be sure that the drivers process interrupts properly.

Sharing interrupts can decrease your performance, because when the interrupt fires, *all* of the devices sharing the interrupt need to run and check to see if it's for them. Many drivers read the registers in their interrupt handlers to see if the interrupt is really for them, and then ignore it if it isn't. But some drivers don't; they schedule their thread-level event handlers to check their hardware, which is inefficient and reduces performance.



If you have a frequent interrupt source sharing an interrupt with a driver that schedules a thread to check the hardware, the overhead of scheduling the thread becomes noticeable.

Sharing interrupts can increase interrupt latency, depending upon exactly what each of the drivers does. After an interrupt fires, the kernel doesn't reenable it until *all* driver handlers tell the kernel that they've finished handling it. If one driver takes a long time servicing a shared interrupt that's masked, and another device on the same interrupt causes an interrupt during that time period, the processing of that interrupt can be delayed for an unknown length of time.

Advanced topics

Now that we've seen the basics of handling interrupts, let's take a look at some more details and some advanced topics.

Interrupt environment

When your ISR is running, it runs in the context of the process that attached it, except with a different stack. Since the kernel uses an internal interrupt-handling stack for hardware interrupts, your ISR is impacted in that the internal stack is small. Generally, you can assume that you have about 200 bytes available.

The PIC doesn't get the EOI command until *after* all ISRs — whether supplied by your code via *InterruptAttach()* or by the kernel if you use *InterruptAttachEvent()* — for that particular interrupt have been run. Then the kernel itself issues the EOI; your code should *not* issue the EOI command.

Ordering of shared interrupts

If you're using interrupt sharing, then by default when you attach an ISR using <code>InterruptAttach()</code> or <code>InterruptAttachEvent()</code>, the new ISR goes to the beginning of the list of ISRs for that interrupt. You can specifically request that your ISR be placed at the end of the list by specifying a <code>flags</code> argument of <code>_NTO_INTR_FLAGS_END</code>.

Note that there's no way to specify any other order (e.g. middle, fifth, second, etc.).

Interrupt latency

Another factor of concern for realtime systems is the amount of time taken between the generation of the hardware interrupt and the first line of code executed by the ISR.

There are two factors to consider here:

- If any thread in the system calls InterruptDisable() or InterruptLock(), then no
 interrupts are processed until the InterruptEnable() or InterruptUnlock() function
 call is issued.
- In any event, if interrupts are enabled, the kernel begins executing the first line of the *first* ISR (in case multiple ISRs are associated with an interrupt) in short order (e.g., under 21 CPU instructions on an x86).

Atomic operations

Some convenience functions are defined in the include file <atomic.h> — these allow you to perform atomic operations (i.e. operations that are guaranteed to be indivisible or uninterruptible).

Using these functions alleviates the need to disable and enable interrupts around certain small, well-defined operations with variables, such as:

- adding a value
- subtracting a value
- · clearing bits
- setting bits
- toggling bits

Variables used in an ISR must be marked as "volatile".

See the QNX Neutrino *C Library Reference* under *atomic_*()* for more information.

Interrupts and power management

In order to help the kernel save power, you can make an interrupt "lazy" by specifying an acceptable latency for it.

Before putting the CPU to sleep, the kernel checks all the interrupt latency values and sees if it can guarantee that another interrupt (e.g., for a timer tick) will occur before the latency period has expired. If it can prove that another interrupt will occur first, the kernel masks the lazy interrupt before going to sleep. When any interrupt is received by the CPU, all the lazily masked interrupts are unmasked.

To specify the interrupt latency, use the *InterruptCharacteristic()* kernel call:

setting the arguments as follows:

type

_NTO_IC_LATENCY

id

A value returned by InterruptAttach() or InterruptAttachEvent()

new

A pointer to an unsigned that contains the new latency value for the interrupt, in nanoseconds. The default latency value is zero.

old

If this is non-NULL, the function fills it with the old latency value for the interrupt.

In order to set a latency, the calling thread must be the process that attached to the interrupt, and it must have obtained I/O privileges by calling:



```
ThreadCtl( _NTO_TCTL_IO, 0 );
```

For more information, see the entry for *ThreadCtI()* in the QNX Neutrino *C Library Reference*.

You can set the global latency value for the system by specifying an *id* of -1. If an interrupt attachment doesn't specify a latency value, the kernel uses the global latency number when calculating how deep a sleep state to use. You need to have I/O privileges to set the global latency value.

For more information about power management, see "Clocks, timers, and power management (p. 137)" in the Tick, Tock: Understanding the Microkernel's Concept of Time chapter in this guide.

Chapter 8

Heap Analysis: Making Memory Errors a Thing of the Past

If you develop a program that dynamically allocates memory, you're also responsible for tracking any memory that you allocate whenever a task is performed, and for releasing that memory when it's no longer required. If you fail to track the memory correctly, you may introduce memory leaks or unintentionally write to an area outside of the memory space.

Conventional debugging techniques usually prove to be ineffective for locating the source of corruption or leak because memory-related errors typically manifest themselves in an unrelated part of the program. Tracking down an error in a multithreaded environment becomes even more complicated because the threads all share the same memory address space.

In this chapter, we'll describe how QNX Neutrino manages the heap and introduce you to a special version of our memory management functions that will help you to diagnose your memory management problems.

Dynamic memory management

In a program, you'll dynamically request memory buffers or blocks of a particular size from the runtime environment using *malloc()*, *realloc()*, or *calloc()*, and then you'll release them back to the runtime environment when they're no longer required using *free()*.

The *memory allocator* ensures that your requests are satisfied by managing a region of the program's memory area known as the *heap*. In this heap, it tracks all of the information — such as the size of the original block — about the blocks and heap buffers that it has allocated to your program, in order that it can make the memory available to you during subsequent allocation requests. When a block is released, it places it on a list of available blocks called a *free list*. It usually keeps the information about a block in the header that precedes the block itself in memory.

The runtime environment grows the size of the heap when it no longer has enough memory available to satisfy allocation requests, and it returns memory from the heap to the system when the program releases memory.

The basic heap allocation mechanism is broken up into two separate pieces, a chunk-based small block allocator and a list-based large block allocator. By configuring specific parameters, you can select the various sizes for the chunks in the chunk allocator and also the boundary between the small and the large allocator.

Arena allocations

Both the small and the large portions of the allocator allocate and deallocate memory from the system in the form of *arena* chunks by calling *mmap()* and *munmap()*.

By default, the arena allocations are performed in 32 KB chunks. This value is specified by one of the following:

- a global variable that's defined in the allocator, but can be redefined or modified in the application
- the *amblksiz* global variable

This value must be a multiple of 4 KB, and currently is limited to being less than 256 KB. You can also configure this parameter by setting the **MALLOC_ARENA_SIZE** environment variable, or by calling *mallopt()* with MALLOC_ARENA_SIZE as the command.

For example, if you want to change the arena size to 16 KB, do one of the following:

- _amblksiz = 16384;
- export MALLOC_ARENA_SIZE=16384
- mallopt(MALLOC ARENA SIZE, 16384);

Environment variables are checked only at program startup, but changing them is the easiest way of configuring parameters for the allocator so that these parameters are used for allocations that occur before *main()*.

The allocator also attempts to cache recently used arena blocks. This cache is shared between the small- and the large-block allocator. You can configure the arena cache by setting the following environment variables:

MALLOC_ARENA_CACHE_MAXBLK

The number of cached arena blocks.

MALLOC_ARENA_CACHE_MAXSZ

The total size of the cached arena blocks.

Alternatively, you can call:

```
mallopt(MALLOC_ARENA_CACHE_MAXSZ, size);
mallopt(MALLOC_ARENA_CACHE_MAXBLK, number);
```

You can tell the allocator to never release memory back to the system from its arena cache by setting the environment variable:

```
export MALLOC_MEMORY_HOLD=1
or by calling:
mallopt(MALLOC_MEMORY_HOLD, 1);
```

Once you've changed the values by using *mallopt()* for either

MALLOC_ARENA_CACHE_MAXSZ or MALLOC_ARENA_CACHE_MAXBLK, you must call *mallopt()* to cause the arena cache to be adjusted immediately:

```
// Adjust the cache to the current parameters or
// release all cache blocks, but don't change parameters
mallopt(MALLOC_ARENA_CACHE_FREE_NOW, 0);
mallopt(MALLOC_ARENA_CACHE_FREE_NOW, 1);
```

Without a call with a command of MALLOC_ARENA_CACHE_FREE_NOW, the changes made to the cache parameters will take effect whenever memory is subsequently released to the cache.

So for example, if the arena cache currently has 10 blocks, for a total size of say 320 KB, and if you change the arena parameters to MALLOC_ARENA_CACHE_MAXBLK = 5 and MALLOC_ARENA_CACHE_MAXSZ = 200 KB, an immediate call to mallopt (MAL LOC_ARENA_CACHE_FREE_NOW, 0) will reduce the cache so that the number of blocks is no more than 5, and the total cache size is no more than 320 KB. If you don't make the call to *mallopt()*, then no immediate changes are made. If the application frees some memory, causing a new arena of size 32 KB to get released to the system, this will not be cached, but will be released to the system immediately.

You can use **MALLOC_ARENA_CACHE_MAXSZ** and **MALLOC_ARENA_CACHE_MAXBLK** either together or independently. A value of zero is ignored.

You can preallocate and populate the arena cache by setting the

MALLOC_MEMORY_PREALLOCATE environment variable to a value that specifies the size of the total arena cache. The cache is populated by multiple arena allocation calls in chunks whose size is specified by the value of **MALLOC_ARENA_SIZE**.

The preallocation option doesn't alter the <code>MALLOC_ARENA_CACHE_MAXBLK</code> and <code>MALLOC_ARENA_CACHE_MAXSZ</code> options. So if you preallocate 10 MB of memory in cache blocks, to ensure that this memory stays in the application throughout the lifetime of the application, you should also set the values of

MALLOC_ARENA_CACHE_MAXBLK and MALLOC_ARENA_CACHE_MAXSZ to something appropriate.

Small block configuration

You configure the small blocks by setting various bands of different sizes. Each band defines a fixed size block, and a number that describes the size of the pool for that size. The allocator initially adjusts all band sizes to be multiples of _MALLOC_ALIGN (which is 8), and then takes the size of the pools and normalizes them so that each band pool is constructed from a pool size of 4 KB.

By default, bands in the allocator are defined as:

- _MALLOC_ALIGN × 2 = 16
- _MALLOC_ALIGN × 3 = 24
- _MALLOC_ALIGN × 4 = 32
- _MALLOC_ALIGN \times 6 = 48
- _MALLOC_ALIGN \times 8 = 64
- $_{\text{MALLOC_ALIGN}} \times 10 = 80$
- _MALLOC_ALIGN \times 12 = 96
- _MALLOC_ALIGN × 16 = 128

so the smallest small block is 16 bytes, and the largest small block is 128 bytes. Allocations larger than the largest band size are serviced by the large allocator.

After initial normalization by the allocator, the band sizes and the pool sizes are adjusted to the following:

Band size	Number of items
16	167
24	125
32	100
48	71
64	55

Band size	Number of items
80	45
96	38
128	28

This normalization takes into account alignment restrictions and overhead needed by the allocator to manage these blocks. The number of items is the number of blocks of the given size that are created each time a new "bucket" is allocated.

You can specify you own band configurations by defining the following in your application's code:

```
typedef struct Block Block;
typedef struct Band Band;
struct Band {
   short nbpe; /* element size */
   short nalloc; /* elements per block */
   size_t slurp;
   size_t esize;
   size_t mem;
   size_t rem;
   unsigned nalloc_stats;
   Block * alist; /* Blocks that have data to allocate */ Block * dlist; /* completely allocated (depleted) Blocks */
   unsigned blk_alloced; /* #blocks allocated */
                   blk_freed; /* #blocks freed */
alloc_counter; /* allocs */
   unsigned
   unsigned
                    free_counter; /* frees */
   unsigned
                  blk_size;
                                        /* size of allocated blocks */
   unsigned
static Band a1 = { _MALLOC_ALIGN*2, 32, 60};
static Band a2 = { _MALLOC_ALIGN*3, 32, 60};
static Band a3 = { _MALLOC_ALIGN*4, 32, 60};
static Band a4 = { _MALLOC_ALIGN*5, 24, 60};
static Band a4 = { _MALLOC_ALIGN*5, 24, 60}; static Band a5 = { _MALLOC_ALIGN*6, 24, 60}; static Band a6 = { _MALLOC_ALIGN*7, 24, 60};
static Band a7 = { _MALLOC_ALIGN*8, 16, 60};
static Band a8 = { _MALLOC_ALIGN*9, 8, 60};
static Band a9 = { _MALLOC_ALIGN*10, 8, 60};
static Band al0 = { _MALLOC_ALIGN*11, 8, 60}; static Band al1 = { _MALLOC_ALIGN*12, 8, 60};
static Band a12 = { _MALLOC_ALIGN*13, 8, 60};
static Band a13 = { _MALLOC_ALIGN*32, 10, 60};
Band *__dynamic_Bands[] = { &a1, &a2, &a3, &a4, &a5, &a6,
                                          &a7, &a8, &a9, &a10, &a11, &a12,
                                          &a13,
unsigned __dynamic_nband=13;
```

The main variables are *__dynamic_Bands[] and __dynamic_Bands, which specify the band configurations and the number of bands. For example, the following line:

```
static Band a9 = { _MALLOC_ALIGN*10, 8, 60};
```

specifies a band size of 80 bytes, with each chunk having at least 8 blocks, and a preallocation value of 60. The allocator first normalizes the band size to 80, and the number of items to 45. Then during initialization of the allocator, it preallocates at least 60 blocks of this size band. (Each bucket will have 45 blocks, so 60 blocks will be constructed from two buckets).

If you specify your own bands:



- The sizes must all be distinct.
- The band configuration must be provided in ascending order of sizes (i.e., band 0 size < band 1 size < band 2 size, and so on).

A user-specified band configuration of:

```
static Band a1 =
                     2, 32, 60};
                     15, 32, 60};
static Band a2 =
static Band a3 =
                     29, 32, 60};
static Band a4 =
                     55, 24, 60};
static Band a5 =
                     100, 24, 60};
static Band a6 =
                     130, 24, 60};
static Band a7 = { 260, 8, 60};
static Band a8 = { 600, 4, 60};
Band *__dynamic_Bands[] = {&a1, &a2, &a3, &a4,
                              &a5, &a6, &a7, &a8,
unsigned __dynamic_nband=8;
```

will be normalized to:

Band size	Number of items	
8	251	
16	167	
32	100	
56	62	
104	35	
136	27	
264	13	
600	5	

For the above configuration, allocations larger than 600 bytes will be serviced by the large block allocator.

When used in conjunction with the **MALLOC_MEMORY_PREALLOCATE** option for the arena cache, the preallocations of blocks in bands are performed by initially populating the arena cache, and then allocating bands from this arena cache.

You can also configure the bands by using the **MALLOC_BAND_CONFIG_STR** environment variable. The string format is:

```
N:s1,n1,p1:s2,n2,p2:s3,n3,p3: ... :sN,nN,pN
```

where the components are:

s

The band size.

п

The number of items.

p

The preallocation value, which can be zero.

You must specify s, n, and p for each band. The string can't include any spaces; the only valid characters are digits, colons (:), and commas (,). Position is important. The parsing is simple and strict: sizes are assumed to be provided in ascending order, further validation is done by the allocator. If the allocator doesn't like the string, it ignores it completely.

Heap corruption

Heap corruption occurs when a program damages the allocator's view of the heap. The outcome can be relatively benign and cause a memory leak (where some memory isn't returned to the heap and is inaccessible to the program afterward), or it may be fatal and cause a memory fault, usually within the allocator itself. A memory fault typically occurs within the allocator when it manipulates one or more of its free lists after the heap has been corrupted.

It's especially difficult to identify the source of corruption when the source of the fault is located in another part of the code base. This is likely to happen if the fault occurs when:

- a program attempts to free memory
- a program attempts to allocate memory after it's been freed
- the heap is corrupted long before the release of a block of memory
- the fault occurs on a subsequent block of memory
- contiguous memory blocks (p. 190) are used
- your program is *multithreaded* (p. 190)
- the memory *allocation strategy* (p. 191) changes

Contiguous memory blocks

When contiguous blocks are used, a program that writes outside of the bounds can corrupt the allocator's information about the block of memory it's using, as well as the allocator's view of the heap. The view may include a block of memory that's before or after the block being used, and it may or may not be allocated. In this case, a fault in the allocator will likely occur during an unrelated attempt to allocate or release memory.

Multithreaded programs

Multithreaded execution may cause a fault to occur in a different thread from the thread that actually corrupted the heap, because threads interleave requests to allocate or release memory.

When the source of corruption is located in another part of the code base, conventional debugging techniques usually prove to be ineffective. Conventional debugging typically applies breakpoints — such as stopping the program from executing — to narrow down the offending section of code. While this may be effective for single-threaded programs, it's often unyielding for multithreaded execution because the fault may occur at an unpredictable time, and the act of debugging the program may influence the appearance of the fault by altering the way that thread execution occurs. Even when the source of the error has been narrowed down, there may be a substantial amount

of manipulation performed on the block before it's released, particularly for long-lived heap buffers.

Allocation strategy

A program that works in a particular memory allocation strategy may abort when the allocation strategy is changed in a minor way.

A good example of this is a memory overrun condition (for more information see "Overrun and underrun errors (p. 191)," below) where the allocator is permitted to return blocks that are larger than requested in order to satisfy allocation requests. Under this circumstance, the program may behave normally in the presence of overrun conditions. But a simple change, such as changing the size of the block requested, may result in the allocation of a block of the exact size requested, resulting in a fatal error for the offending program.

Fatal errors may also occur if the allocator is configured slightly differently, or if the allocator policy is changed in a subsequent release of the runtime library. This makes it all the more important to detect errors early in the life cycle of an application, even if it doesn't exhibit fatal errors in the testing phase.

Common sources

Some of the most common sources of heap corruption include:

- a memory assignment that corrupts the header of an allocated block
- an incorrect argument that's passed to a memory allocation function
- an allocator that made certain assumptions in order to avoid keeping additional memory to validate information, or to avoid costly runtime checking
- invalid information that's passed in a request, such as to free()
- overrun and underrun errors (p. 191)
- releasing memory (p. 192)
- using uninitialized or stale pointers (p. 192)

Even the most robust allocator can occasionally fall prey to the above problems. Let's take a look at the last three items in more detail.

Overrun and underrun errors

Overrun and underrun errors occur when your program writes outside of the bounds of the allocated block. They're one of the most difficult type of heap corruption to track down, and usually the most fatal to program execution.

Overrun errors occur when the program writes past the end of the allocated block. Frequently this causes corruption in the next contiguous block in the heap, whether or not it's allocated. When this occurs, the behavior that's observed varies depending on whether that block is allocated or free, and whether it's associated with a part of the program related to the source of the error. When a neighboring block that's allocated

becomes corrupted, the corruption is usually apparent when that block is released elsewhere in the program. When an unallocated block becomes corrupted, a fatal error will usually result during a subsequent allocation request. Although this may well be the next allocation request, it actually depends on a complex set of conditions that could result in a fault at a much later point in time, in a completely unrelated section of the program, especially when small blocks of memory are involved.

Underrun errors occur when the program writes *before* the start of the allocated block. Often they corrupt the header of the block itself, and sometimes, the preceding block in memory. Underrun errors usually result in a fault that occurs when the program attempts to release a corrupted block.

Releasing memory

In order to release memory, your program must track the pointer for the allocated block and pass it to the *free()* function. If the pointer is stale, or if it doesn't point to the exact start of the allocated block, it may result in heap corruption.

A pointer is *stale* when it refers to a block of memory that's already been released. A duplicate request to *free()* involves passing *free()* a stale pointer — there's no way to know whether this pointer refers to unallocated memory, or to memory that's been used to satisfy an allocation request in another part of the program.

Passing a stale pointer to *free()* may result in a fault in the allocator, or worse, it may release a block that's been used to satisfy another allocation request. If this happens, the code making the allocation request may compete with another section of code that subsequently allocated the same region of heap, resulting in corrupted data for one or both. The most effective way to avoid this error is to NULL out pointers when the block is released, but this is uncommon, and difficult to do when pointers are aliased in any way.

A second common source of errors is to attempt to release an interior pointer (i.e. one that's somewhere inside the allocated block rather than at the beginning). This isn't a legal operation, but it may occur when the pointer has been used in conjunction with pointer arithmetic. The result of providing an interior pointer is highly dependent on the allocator and is largely unpredictable, but it frequently results in a fault in the *free()* call.

A more rare source of errors is to pass an uninitialized pointer to *free()*. If the uninitialized pointer is an automatic (stack) variable, it may point to a heap buffer, causing the types of coherency problems described for duplicate *free()* requests above. If the pointer contains some other non-NULL value, it may cause a fault in the allocator.

Using uninitialized or stale pointers

If you use uninitialized or stale pointers, you might corrupt the data in a heap buffer that's allocated to another part of the program, or see memory overrun or underrun errors.

Detecting and reporting errors

The primary goal for detecting heap corruption problems is to correctly identify the source of the error, to avoid getting a fault in the allocator at some later point in time.

A first step to achieving this goal is to create an allocator that's able to determine whether the heap was corrupted on every entry into the allocator, whether it's for an allocation request or for a release request. For example, on a release request, the allocator should be capable of determining whether:

- the pointer given to it is valid
- the associated block's header is corrupt
- either of the neighboring blocks is corrupt

To achieve this goal, we'll use a replacement library for the allocator that can keep additional block information in the header of every heap buffer. You can use this library while testing the application to help isolate any heap corruption problems. When this allocator detects a source of heap corruption, it can print an error message indicating:

- the point at which the error was detected
- the program location that made the request
- information about the heap buffer that contained the problem

The library technique can be refined to also detect some of the sources of errors that may still elude detection, such as memory overrun or underrun errors, that occur before the corruption is detected by the allocator. This may be done when the standard libraries are the vehicle for the heap corruption, such as an errant call to <code>memcpy()</code>, for example. In this case, the standard memory manipulation functions and string functions can be replaced with versions that make use of the information in the debugging allocator library to determine if their arguments reside in the heap, and whether they would cause the bounds of the heap buffer to be exceeded. Under these conditions, the function can then call the error-reporting functions to provide information about the source of the error.

Controlling the level of checking

The *mallopt()* function call allows extra checks to be enabled within the library.

The call to *mallopt()* requires that the application be aware that the additional checks are programmatically enabled. The other way to enable the various levels of checking is to use environment variables for each of the *mallopt()* options. Using environment variables lets you specify options that will be enabled from the time the program runs, as opposed to only when the code that triggers these options to be enabled (i.e. the *mallopt()* call) is reached. For certain programs that perform a lot of allocations before *main()*, setting options using *mallopt()* calls from *main()* or after that may be too late. In such cases, it's better to use environment variables.

The prototype of *mallopt()* is:

The arguments are:

cmd

The command you want to use. The options used to enable additional checks in the library are:

- MALLOC_CKACCESS
- MALLOC_FILLAREA
- MALLOC_CKCHAIN

We look at some of the other commands later in this chapter.

value

A value corresponding to the command used.

For more details, see the entry for *mallopt()* in the QNX Neutrino *C Library Reference*.

Description of optional checks

MALLOC CKACCESS

Turn on (or off) boundary checking for memory and string operations.

Environment variable: **MALLOC_CKACCESS**.

The value argument can be:

- zero to disable the checking
- nonzero to enable it

This helps to detect buffer overruns and underruns that are a result of memory or string operations. When on, each pointer operand to a memory or string operation is checked to see if it's a heap buffer. If it is, the size of the heap buffer is checked, and the information is used to ensure that no assignments are made beyond the bounds of the heap buffer. If an attempt is made that would assign past the buffer boundary, a diagnostic warning message is printed.

Here's how you can use this option to find an overrun error:

```
char *p;
int opt;
opt = 1;
mallopt(MALLOC_CKACCESS, opt);
p = malloc(strlen("hello"));
strcpy(p, "hello, there!"); /* a warning is generated
here */
```

The following illustrates how access checking can trap a reference through a stale pointer:

```
char *p;
int opt;
opt = 1;
mallopt(MALLOC_CKACCESS, opt);
p = malloc(30);
free(p);
strcpy(p, "hello, there!");
```

MALLOC_FILLAREA

Turn on (or off) fill-area boundary checking that validates that the program hasn't overrun the user-requested size of a heap buffer. Environment variable: **MALLOC_FILLAREA**.

The value argument can be:

- · zero to disable the checking
- nonzero to enable it

It does this by applying a guard code check when the buffer is released or when it's resized. The guard code check works by filling any excess space available at the end of the heap buffer with a pattern of bytes. When the buffer is released or resized, the trailing portion is checked to see if the pattern is still present. If not, a diagnostic warning message is printed.

The effect of turning on fill-area boundary checking is a little different than enabling other checks. The checking is performed only on memory buffers allocated after the point in time at which the check was enabled. Memory buffers allocated before the change won't have the checking performed.

Here's how you can catch an overrun with the fill-area boundary checking option:

MALLOC_CKCHAIN

Enable (or disable) full chain checking. This option is expensive and should be considered as a last resort when some code is badly corrupting the heap and otherwise escapes the detection of boundary checking or fill-area boundary checking. Environment variable: **MALLOC_CKCHAIN**.

The value argument can be:

- zero to disable the checking
- nonzero to enable it

This kind of corruption can occur under a number of circumstances, particularly when they're related to direct pointer assignments. In this case, the fault may occur before a check such as fill-area boundary checking can be applied. There are also circumstances in which both fill-area boundary checking and the normal attempts to check the headers of neighboring buffer fail to detect the source of the problem. This may happen if the buffer that's overrun is the first or last buffer associated with a block or arena. It may also happen when the allocator chooses to satisfy some requests, particularly those for large buffers, with a buffer that exactly fits the program's requested size.

Full-chain checking traverses the entire set of allocation chains for all arenas and blocks in the heap every time a memory operation (including allocation requests) is performed. This lets the developer narrow down the search for a source of corruption to the nearest memory operation.

Forcing verification

You can force a full allocation chain check at certain points while your program is executing, without turning on chain checking. Specify the following option for *cmd*:

MALLOC_VERIFY

Perform a chain check immediately. If an error is found, perform error handling. The *value* argument is ignored.

Specifying an error handler

Typically, when the library detects an error, a diagnostic message is printed and the program continues executing. In cases where the allocation chains or another crucial part of the allocator's view is hopelessly corrupted, an error message is printed and the program is aborted (via *abort()*).

You can override this default behavior by specifying what to do when a warning or a fatal condition is detected:

cmd

The error handler to set; one of:

MALLOC_FATAL

Specify the malloc fatal handler. Environment variable: **MALLOC FATAL**.

MALLOC_WARN

Specify the malloc warning handler handler. Environment variable: **MALLOC_WARN**.

value

An integer value that indicates which one of the standard handlers provided by the library to use:

M_HANDLE_ABORT

Terminate execution with a call to abort().

M HANDLE EXIT

Exit immediately.

M_HANDLE_IGNORE

Ignore the error and continue.

M HANDLE CORE

Cause the program to dump a core file.

M_HANDLE_SIGNAL

Stop the program when this error occurs, by sending it a stop signal (SIGSTOP). This lets you attach to this process using a debugger. The program is stopped inside the error-handler function, and a backtrace from there should show you the exact location of the error.

If you use environment variables to specify options to the malloc library for either **MALLOC_FATAL** or **MALLOC_WARN**, you must pass the value that indicates the handler, not its symbolic name:

Handler	Value
M_HANDLE_IGNORE	0
M_HANDLE_ABORT	1
M_HANDLE_EXIT	2
M_HANDLE_CORE	3
M_HANDLE_SIGNAL	4

These values are also defined in /usr/include/malloc_g/malloc-lib.h.



M_HANDLE_CORE and M_HANDLE_SIGNAL were added in QNX Momentics 6.3.0 SP2.

You can OR any of these handlers with the value, **MALLOC_DUMP**, to cause a complete dump of the heap before the handler takes action.

Here's how you can cause a memory overrun error to abort your program:

```
int *foo, *p, i;
int opt;
opt = 1;
mallopt(MALLOC_FILLAREA, opt);
foo = (int *)malloc(10*4);
for (p = foo, i = 12; i > 0; p++, i--)
    *p = 89;
opt = M_HANDLE_ABORT;
mallopt(MALLOC_WARN, opt);
free(foo); /* a fatal error is generated here */
```

Other environment variables

MALLOC_INITVERBOSE

Enable some initial verbose output regarding other variables that are enabled.

MALLOC BTDEPTH

Set the depth of the backtrace for allocations (i.e. where the allocation occurred) on CPUs that support deeper backtrace levels. Currently the builtin-return-address feature of gcc is used to implement deeper backtraces for the debug malloc library. The default value is 0.

MALLOC_TRACEBT

Set the depth of the backtrace for errors and warnings on CPUs that support deeper backtrace levels. Currently the builtin-return-address feature of gcc is used to implement deeper backtraces for the debug malloc library. The default value is 0.

MALLOC_DUMP_LEAKS

Trigger leak detection on exit of the program. The output of the leak detection is sent to the file named by this variable.

$MALLOC_TRACE$

Enable tracing of all calls to *malloc()*, *free()*, *calloc()*, *realloc()*, etc. A trace of the various calls is store in the file named by this variable.

MALLOC_CKACCESS_LEVEL

Specify the level of checking performed by the MALLOC_CKACCESS option. By default, a basic level of checking is performed. By increasing the level

of checking, additional things that could be errors are also flagged. For example, a call to *memset()* with a length of zero is normally safe, since no data is actually moved. If the arguments, however, point to illegal locations (memory references that are invalid), this normally suggests a case where there is a problem potentially lurking inside the code. By increasing the level of checking, these kinds of errors are also flagged.



These environment variables were added in QNX Momentics 6.3.0 SP2.

Caveats

The debug malloc library, when enabled with various checking, uses more stack space (i.e. calls more functions, uses more local variables etc.) than the regular libc allocator. This implies that programs that explicitly set the stack size to something smaller than the default may encounter problems such as running out of stack space. This may cause the program to crash. You can prevent this by increasing the stack space allocated to the threads in question.

MALLOC_FILLAREA is used to do fill-area checking. If fill-area checking isn't enabled, the program can't detect certain types of errors. For example, if an application accesses beyond the end of a block, and the real block allocated by the allocator is larger than what was requested, the allocator won't flag an error unless **MALLOC_FILLAREA** is enabled. By default, this checking isn't enabled.

MALLOC_CKACCESS is used to validate accesses to the str* and mem* family of functions. If this variable isn't enabled, such accesses won't be checked, and errors aren't reported. By default, this checking isn't enabled.

MALLOC_CKCHAIN performs extensive heap checking on every allocation. When you enable this environment variable, allocations can be much slower. Also since full heap checking is performed on every allocation, an error anywhere in the heap could be reported upon entry into the allocator for any operation. For example, a call to free(x) will check block x as well as the complete heap for errors before completing the operation (to free block x). So any error in the heap will be reported in the context of freeing block x, even if the error itself isn't specifically related to this operation.

When the debug library reports errors, it doesn't always exit immediately; instead it continues to perform the operation that causes the error, and corrupts the heap (since the operation that raises the warning is actually an illegal operation). You can control this behavior by using the MALLOC_WARN and MALLOC_FATAL handler described earlier. If specific handlers are not provided, the heap will be corrupted and other errors could result and be reported later because of the first error. The best solution is to focus on the first error and fix it before moving onto other errors. See the

description of **MALLOC_CKCHAIN** for more information on how these errors may end up getting reported.

Although the debug malloc library allocates blocks to the process using the same algorithms as the standard allocator, the library itself requires additional storage to maintain block information, as well as to perform sanity checks. This means that the layout of blocks in memory using the debug allocator is slightly different than with the standard allocator.

If you use certain optimization options such as -01, -02, or -03, the debug malloc library won't work correctly because these options make gcc use builtin versions of some functions, such as strcpy() and strcmp(). Use the -fno-builtin option to prevent this.

Manual checking (bounds checking)

There are times when it may be desirable to obtain information about a particular heap buffer or print a diagnostic or warning message related to that heap buffer. This is particularly true when the program has its own routines providing memory manipulation and you wish to provide bounds checking. This can also be useful for adding additional bounds checking to a program to isolate a problem such as a buffer overrun or underrun that isn't associated with a call to a memory or string function.

In the latter case, rather than keeping a pointer and performing direct manipulations on the pointer, the program may define a pointer type that contains all relevant information about the pointer, including the current value, the base pointer, and the extent of the buffer. Access to the pointer can then be controlled through macros or access functions. The access functions can perform the necessary bounds checks and print a warning message in response to attempts to exceed the bounds.

Any attempt to dereference the current pointer value can be checked against the boundaries obtained when the pointer was initialized. If the boundary is exceeded, you should call the *malloc_warning()* function to print a diagnostic message and perform error handling. The prototype is:

Getting pointer information

You can use the following to obtain information about the pointer:

find_malloc_ptr()

This function finds information about the heap buffer containing the given C pointer, including the type of allocation structure it's contained in and the pointer to the header structure for the buffer. The function returns a pointer to the Dhead structure associated with this particular heap buffer. You can use the returned pointer with the $DH_*()$ macros to obtain more information about the heap buffer. If the pointer doesn't point into the range of a valid heap buffer, the function returns NULL.

Memory leaks

The ability of the malloc library to keep full allocation chains of all the heap memory allocated by the program — as opposed to just accounting for some heap buffers — allows heap memory leaks to be detected by the library in response to requests by the program. Leaks can be detected in the program by performing tracing on the entire heap. This is described in the sections that follow.

Tracing

Tracing is an operation that attempts to determine whether a heap object is reachable by the program. In order to be reachable, a heap buffer must be available either directly or indirectly from a pointer in a global variable or on the stack of one of the threads. If this isn't the case, then the heap buffer is no longer visible to the program and can't be accessed without constructing a pointer that refers to the heap buffer — presumably by obtaining it from a persistent store such as a file or a shared memory object.

The set of global variables and stack for all threads is called the *root set*. Because the root set must be stable for tracing to yield valid results, tracing requires that all threads other than the one performing the trace be suspended while the trace is performed.

Tracing operates by constructing a reachability graph of the entire heap. It begins with a *root set scan* that determines the root set comprising the initial state of the reachability graph. The roots that can be found by tracing are:

- data of the program
- uninitialized data of the program
- initialized and uninitialized data of any shared objects dynamically linked into the program
- used portion of the stacks of all active threads in the program

Once the root set scan is complete, tracing initiates a *mark* operation for each element of the root set. The mark operation looks at a node of the reachability graph, scanning the memory space represented by the node, looking for pointers into the heap. Since the program may not actually have a pointer directly to the start of the buffer — but to some interior location — and it isn't possible to know which part of the root set or a heap object actually contains a pointer, tracing utilizes specialized techniques for coping with *ambiguous roots*. The approach taken is described as a conservative pointer estimation since it assumes that any word-sized object on a word-aligned memory cell that *could* point to a heap buffer or the interior of that heap buffer actually points to the heap buffer itself.

Using conservative pointer estimation for dealing with ambiguous roots, the mark operation finds all children of a node of the reachability graph. For each child in the heap that's found, it checks to see whether the heap buffer has been marked as

referenced. If the buffer has been marked, the operation moves on to the next child. Otherwise, the trace marks the buffer, and then recursively initiates a mark operation on that heap buffer.

The tracing operation is complete when the reachability graph has been fully traversed. At this time every heap buffer that's reachable will have been marked, as could some buffers that aren't actually reachable, due to the conservative pointer estimation. Any heap buffer that hasn't been marked is definitely unreachable, constituting a memory leak. At the end of the tracing operation, all unmarked nodes can be reported as leaks.

Causing a trace and giving results

A program can cause a trace to be performed and memory leaks to be reported by calling the *malloc_dump_unreferenced()* function provided by the library:

Suspend all threads, clear the mark information for all heap buffers, perform the trace operation, and print a report of all memory leaks detected. All items are reported in memory order.

fd

The file descriptor on which the report should be produced.

detail

How the trace operation should deal with any heap corruption problems it encounters:

1

Any problems encountered can be treated as fatal errors. After the error encountered is printed, abort the program. No report is produced.

0

Print case errors, and a report based on whatever heap information is recoverable.

Analyzing dumps

The dump of unreferenced buffers prints out one line of information for each unreferenced buffer. The information provided for a buffer includes:

- address of the buffer
- function that was used to allocate it (malloc(), calloc(), realloc())
- file that contained the allocation request, if available

- line number or return address of the call to the allocation function
- size of the allocated buffer

File and line information is available if the call to allocate the buffer was made using one of the library's debug interfaces. Otherwise, the return address of the call is reported in place of the line number. In some circumstances, no return address information is available. This usually indicates that the call was made from a function with no frame information, such as the system libraries. In such cases, the entry can usually be ignored and probably isn't a leak.

From the way tracing is performed, we can see that some leaks may escape detection and may not be reported in the output. This happens if the root set or a reachable buffer in the heap has something that looks like a pointer to the buffer.

Likewise, each reported leak should be checked against the suspected code identified by the line or call return address information. If the code in question keeps interior pointers — pointers to a location inside the buffer, rather than the start of the buffer — the trace operation will likely fail to find a reference to the buffer. In this case, the buffer may well not be a leak. In other cases, there is almost certainly a memory leak.

Compiler support

The gcc compiler has a feature called Mudflap that adds extra code to the compiled program to check for buffer overruns. Mudflap slows a program's performance, so you should use it while testing, and turn it off in the production version. In C++ programs, you can also use the techniques described below.

C++ issues

In place of a raw pointer, C++ programs can make use of a CheckedPtr template that acts as a smart pointer. The smart pointer has initializers that obtain complete information about the heap buffer on an assignment operation and initialize the current pointer position. Any attempt to dereference the pointer causes bounds checking to be performed and prints a diagnostic error in response an attempt to dereference a value beyond the bounds of the buffer. The CheckedPtr template is provided in the <malloc_g/malloc.h> header for C++ programs.

You can modify the checked pointer template provided for C++ programs to suit the needs of the program. The bounds checking performed by the checked pointer is restricted to checking the actual bounds of the heap buffer, rather than the program requested size.

For C programs it's possible to compile individual modules that obey certain rules with the C++ compiler to get the behavior of the CheckedPtr template. C modules obeying these rules are written to a dialect of ANSI C that can be referred to as Clean C.

Clean C

The Clean C dialect is that subset of ANSI C that is compatible with the C++ language. Writing Clean C requires imposing coding conventions to the C code that restrict use to features that are acceptable to a C++ compiler. This section provides a summary of some of the more pertinent points to be considered. It is a mostly complete but by no means exhaustive list of the rules that must be applied.

To use the C++ checked pointers, the module including all header files it includes must be compatible with the Clean C subset. All the system headers for QNX Neutrino as well as the $<malloc_g/malloc.h>$ header satisfy this requirement.

The most obvious aspect to Clean C is that it must be strict ANSI C with respect to function prototypes and declarations. The use of K&R prototypes or definitions isn't allowed in Clean C. Similarly, you can't use default types for variable and function declarations.

Another important consideration for declarations is that you must provide forward declarations when referencing an incomplete structure or union. This frequently occurs for linked data structures such as trees or lists. In this case, the forward declaration

must occur before any declaration of a pointer to the object in the same or another structure or union. For example, you could declare a list node as follows:

```
struct ListNode;
struct ListNode {
   struct ListNode *next;
   void *data;
};
```

Operations on void pointers are more restrictive in C++. In particular, implicit coercions from void pointers to other types aren't allowed, including both integer types and other pointer types. You must explicitly cast void pointers to other types.

The use of const should be consistent with C++ usage. In particular, pointers that are declared as const must always be used in a compatible fashion. You can't pass const pointers as non-const arguments to functions unless you typecast the const away.

C++ example

Here's how you could use checked pointers in the overrun example given earlier to determine the exact source of the error:

Chapter 9 Freedom from Hardware and Platform Dependencies

Common problems

With the advent of multiplatform support, which involves non-x86 platforms as well as peripheral chipsets across these multiple platforms, we don't want to have to write different versions of device drivers for each and every platform.

While some platform dependencies are unavoidable, let's talk about some of the things that you as a developer can do to minimize the impact. At QNX Software Systems, we've had to deal with these same issues — for example, we support the 8250 serial chip on several different types of processors. Ethernet controllers, SCSI controllers, and others are no exception.

Let's look at these problems:

- I/O space vs memory-mapped
- · Big-endian vs little-endian
- alignment and structure packing
- atomic operations

I/O space vs memory-mapped

The x86 architecture has two distinct address spaces:

- 16-address-line I/O space
- 32-address-line instruction and data space

The processor asserts a hardware line to the external bus to indicate which address space is being referenced. The x86 has special instructions to deal with I/O space (e.g. IN AL, DX vs MOV AL, address). Common hardware design on an x86 indicates that the control ports for peripherals live in the I/O address space. On non-x86 platforms, this requirement doesn't exist — all peripheral devices are mapped into various locations within the same address space as the instruction and code memory.

Big-endian vs little-endian

Big-endian vs little-endian is another compatibility issue with various processor architectures. The issue stems from the byte ordering of multibyte constants. The x86 architecture is little-endian. For example, the hexadecimal number 0×12345678 is stored in memory as:

```
address contents

0 0x78

1 0x56

2 0x34

3 0x12
```

A big-endian processor would store the data in the following order:

```
address contents 0 0x12
```

```
1 0x34
2 0x56
3 0x78
```

This issue is worrisome on a number of fronts:

- typecast mangling
- hardware access
- network transparency

The first and second points are closely related.

Typecast mangling

Consider the following code:

```
func ()
{
    long a = 0x12345678;
    char *p;

    p = (char *) &a;
    printf ("%02X\n", *p);
}
```

On a little-endian machine, this prints the value "0x78"; on a big-endian machine, it prints "0x12". This is one of the big (pardon the pun) reasons why structured programmers generally frown on typecasts.

Hardware access

Sometimes the hardware can present you with a conflicting choice of the "correct" size for a chunk of data. Consider a piece of hardware that has a 4 KB memory window. If the hardware brings various data structures into view with that window, it's impossible to determine *a priori* what the data size should be for a particular element of the window. Is it a 32-bit long integer? An 8-bit character? Blindly performing operations as in the above code sample will land you in trouble, because the CPU will determine what it believes to be the correct endianness, regardless of what the hardware manifests.

Network transparency

These issues are naturally compounded when heterogeneous CPUs are used in a network with messages being passed among them. If the implementor of the message-passing scheme doesn't decide up front what byte order will be used, then some form of identification needs to be done so that a machine with a different byte ordering can receive and correctly decode a message from another machine. This problem has been solved with protocols like TCP/IP, where a defined *network byte order* is always adhered to, even between homogeneous machines whose byte order differs from the network byte order.

Alignment and structure packing

On the x86 CPU, you can access any sized data object at any address (albeit some accesses are more efficient than others). On non-x86 CPUs, you can't — as a general rule, you can access only N-byte objects on an N-byte boundary. For example, to access a 4-byte long integer, it must be aligned on a 4-byte address (e.g. 0x7FBBE008). An address like 0x7FBBE009 will cause the CPU to generate a fault. (An x86 processor happily generates multiple bus cycles and gets the data anyway.)

Generally, this will not be a problem with structures defined in the header files for QNX Neutrino, as we've taken care to ensure that the members are aligned properly. The major place that this occurs is with hardware devices that can map a window into the address space (for configuration registers, etc.), and protocols where the protocol itself presents data in an unaligned manner (e.g. CIFS/SMB protocol).

Atomic operations

One final problem that can occur with different families of processors, and SMP configurations in general, is that of atomic access to variables.

Since this is so prevalent with interrupt service routines and their handler threads, we've already talked about this in the chapter on *Writing an Interrupt Handler* (p. 167).

Solutions

Now that we've seen the problems, let's take a look at some of the solutions you can use.

The following header files are shipped standard with QNX Neutrino:

```
<gulliver.h>
```

isolates big-endian vs little-endian issues

<hw/inout.h>

provides input and output functions for I/O or memory address spaces

Determining endianness

The file <gulliver.h> contains macros to help resolve endian issues. The first thing you may need to know is the target system's endianness, which you can find out via the following macros:

```
__LITTLEENDIAN__

defined if little-endian
__BIGENDIAN__
```

A common coding style in the header files (e.g. <gulliver.h>) is to check which macro is defined and to report an error if none is defined:

```
#if defined(__LITTLEENDIAN__)
// do whatever for little-endian
#elif defined(__BIGENDIAN__)
// do whatever for big-endian
#else
#error ENDIAN Not defined for system
#endif
```

defined if big-endian

The #error statement will cause the compiler to generate an error and abort the compilation.

Swapping data if required

Suppose you need to ensure that data obtained in the host order (i.e. whatever is "native" on this machine) is returned in a particular order, either big- or little-endian. Or vice versa: you want to convert data from host order to big- or little-endian. You

can use the following macros (described here as if they're functions for syntactic convenience):

ENDIAN_LE16()

```
uint16_t ENDIAN_LE16 (uint16_t var)
```

If the host is little-endian, this macro does nothing (expands simply to *var*); else, it performs a byte swap.

ENDIAN_LE32()

```
uint32_t ENDIAN_LE32 (uint32_t var)
```

If the host is little-endian, this macro does nothing (expands simply to *var*); else, it performs a quadruple byte swap.

ENDIAN_LE64()

```
uint64_t ENDIAN_LE64 (uint64_t var)
```

If the host is little-endian, this macro does nothing (expands simply to *var*); else, it swaps octets of bytes.

ENDIAN_BE16()

```
uint16_t ENDIAN_BE16 (uint16_t var)
```

If the host is big-endian, this macro does nothing (expands simply to *var*); else, it performs a byte swap.

ENDIAN BE32()

```
uint32_t ENDIAN_BE32 (uint32_t var)
```

If the host is big-endian, this macro does nothing (expands simply to *var*); else, it performs a quadruple byte swap.

ENDIAN_BE64()

```
uint64_t ENDIAN_BE64 (uint64_t var)
```

If the host is big-endian, this macro does nothing (expands simply to *var*); else, it swaps octets of bytes.

Accessing unaligned data

To access data on nonaligned boundaries, you have to access the data one byte at a time (the correct endian order is preserved during byte access). The following macros (documented as functions for convenience) accomplish this:

UNALIGNED_RET16()

uint16_t UNALIGNED_RET16 (uint16_t * addr16)

Returns a 16-bit quantity from the address specified by *addr16*.

UNALIGNED RET32()

uint32_t UNALIGNED_RET32 (uint32_t * addr32)

Returns a 32-bit quantity from the address specified by addr32.

UNALIGNED_RET64()

uint64_t UNALIGNED_RET64 (uint64_t * addr64)

Returns a 64-bit quantity from the address specified by addr64.

UNALIGNED_PUT16()

void UNALIGNED_PUT16 (uint16_t * addr16 , uint16_t val16)

Stores the 16-bit value *val16* into the address specified by *addr16*.

UNALIGNED PUT32()

void UNALIGNED_PUT32 (uint32_t * addr32 , uint32_t val32)

Stores the 32-bit value *val32* into the address specified by *addr32*.

UNALIGNED_PUT64()

void UNALIGNED_PUT64 (uint64_t * addr64 , uint64_t val64)

Stores the 64-bit value val64 into the address specified by addr64.

Examples

Here are some examples showing how to access different pieces of data using the macros introduced so far.

Mixed-endian accesses

This code is written to be portable. It accesses *little_data* (i.e. data that's known to be stored in little-endian format, perhaps as a result of some on-media storage scheme),

and then manipulates it, writing the data back. This illustrates that the *ENDIAN_*()* macros are bidirectional.

```
uint16_t    native_data;
uint16_t    little_data;
native_data = ENDIAN_LE16 (little_data);// used as "from little-endian"
native_data++;    // do something with native form
little_data = ENDIAN_LE16 (native_data);// used as "to little-endian"
```

Accessing hardware with dual-ported memory

Hardware devices with dual-ported memory may "pack" their respective fields on nonaligned boundaries. For example, if we had a piece of hardware with the following layout, we'd have a problem:

Address	Size	Name
0x18000000	1	PKTTYPE
0x18000001	4	PKTCRC
0x18000005	2	PKTLEN

Let's see why.

The first field, PKTTYPE, is fine — it's a 1-byte field, which according to the rules could be located anywhere. But the second and third fields aren't fine. The second field, PKTCRC, is a 4-byte object, but it's *not* located on a 4-byte boundary (the address is not evenly divisible by 4). The third field, PKTLEN, suffers from a similar problem — it's a 2-byte field that's not on a 2-byte boundary.

The *ideal* solution would be for the hardware manufacturer to obey the same alignment rules that are present on the target processor, but this isn't always possible. For example, if the hardware presented a raw data buffer at certain memory locations, the hardware would have no idea how you wish to interpret the bytes present — it would simply manifest them in memory.

To access these fields, you'd make a set of manifest constants for their offsets:

```
#define PKTTYPE_OFF 0x0000
#define PKTCRC_OFF 0x0001
#define PKTLEN_OFF 0x0005
```

Then, you'd map the memory region via *mmap_device_memory()*. Let's say it gave you a char * pointer called *ptr*. Using this pointer, you'd be tempted to:

```
cr1 = *(ptr + PKTTYPE_OFF);
// wrong!
sr1 = * (uint32_t *) (ptr + PKTCRC_OFF);
er1 = * (uint16_t *) (ptr + PKTLEN_OFF);
```

However, this would give you an alignment fault on non-x86 processors for the *sr1* and *er1* lines.

One solution would be to manually assemble the data from the hardware, byte by byte. And that's exactly what the *UNALIGNED_*()* macros do. Here's the rewritten example:

```
cr1 = *(ptr + PKTTYPE_OFF);
// correct!
sr1 = UNALIGNED_RET32 (ptr + PKTCRC_OFF);
er1 = UNALIGNED_RET16 (ptr + PKTLEN_OFF);
```

The access for *cr1* didn't change, because it was already an 8-bit variable — these are *always* "aligned." However, the access for the 16- and 32-bit variables now uses the macros.

An implementation trick used here is to make the pointer that serves as the base for the mapped area by a char * — this lets us do pointer math on it.

To write to the hardware, you'd again use macros, but this time the *UNALIGNED_PUT*()* versions:

```
*(ptr + PKTTYPE_OFF) = cr1;
UNALIGNED_PUT32 (ptr + PKTCRC_OFF, sr1);
UNALIGNED_PUT16 (ptr + PKTLEN_OFF, er1);
```

Of course, if you're writing code that should be portable to different-endian processors, you'll want to combine the above tricks with the previous endian macros. Let's define the hardware as big-endian. In this example, we've decided that we're going to store everything that the program uses in host order and do translations whenever we touch the hardware:

```
crl = *(ptr + PKTTYPE_OFF); // endian neutral
srl = ENDIAN_BE32 (UNALIGNED_RET32 (ptr + PKTCRC_OFF));
erl = ENDIAN_BE16 (UNALIGNED_RET16 (ptr + PKTLEN_OFF));

And:

*(ptr + PKTTYPE_OFF) = crl; // endian neutral
UNALIGNED_PUT32 (ptr + PKTCRC_OFF, ENDIAN_BE32 (srl));
UNALIGNED_PUT16 (ptr + PKTLEN_OFF, ENDIAN_BE16 (erl));
```

Here's a simple way to remember which *ENDIAN_*()* macro to use. Recall that the *ENDIAN_*()* macros won't change the data on their respective platforms (i.e. the LE macro will return the data unchanged on a little-endian platform, and the BE macro will return the data unchanged on a big-endian platform). Therefore, to access the data (which we know has a *defined* endianness), we effectively want to select the *same macro as the type of data*. This way, if the platform is the same as the type of data present, no changes will occur (which is what we expect).

Accessing I/O ports

When porting code that accesses hardware, the x86 architecture has a set of instructions that manipulate a separate address space called the *I/O address space*. This address space is completely separate from the memory address space. On non-x86 platforms, such an address space doesn't exist — all devices are mapped into memory.

In order to keep code portable, we've defined a number of functions that isolate this behavior. By including the file <hw/inout.h>, you get the following functions:

```
in8()
```

Reads an 8-bit value.

in16(), inbe16(), inle16()

Reads a 16-bit value.

in32(), inbe32(), inle32()

Reads a 32-bit value.

in8s()

Reads a number of 8-bit values.

in16s()

Reads a number of 16-bit values.

in32s()

Reads a number of 32-bit values.

out8()

Writes a 8-bit value.

out16(), outbe16(), outle16()

Writes a 16-bit value.

out32(), outbe32(), outle32()

Writes a 32-bit value.

out8s()

Writes a number of 8-bit values.

out16s()

Writes a number of 16-bit values.

out32s()

Writes a number of 32-bit values.

On the x86 architecture, these functions perform the machine instructions in, out, rep ins*, and rep outs*. On non-x86 architectures, they dereference the supplied address (the *addr* parameter) and perform memory accesses.

Note that the calling process must use *mmap_device_io()* to access the device's I/O registers.

Chapter 10

Conventions for Recursive Makefiles and Directories

In this chapter, we'll take a look at the supplementary files used in the QNX Neutrino development environment. Although we use the standard make command to create libraries and executables, you'll notice we use some of our own conventions in the Makefile syntax.

We'll start with a general description of a full, multiplatform source tree. Then we'll look at how you can build a tree for your products. Next. we'll discuss some *advanced topics* (p. 235), including collapsing unnecessary levels and performing partial builds. Finally, we'll wrap up with some *examples of creating Makefiles* (p. 242).

Although you're certainly not obliged to use our format for the directory structure and related tools, you may choose to use it because it's convenient for developing multiplatform code. If you do use this structure, you should use the addvariant command to create it; for more information, see the *Utilities Reference* as well as the *examples* (p. 242) at the end of this chapter.

Structure of a multiplatform source tree

Here's a sample directory tree for a product that can be built for two different operating systems (QNX 4 and Neutrino), on two CPU platforms (x86 and ARM):

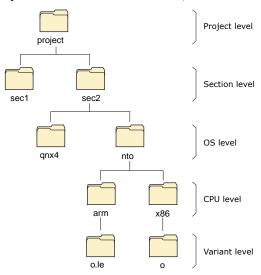


Figure 23: Source tree for a multiplatform project.

We'll talk about the names of the directory levels shortly. At each directory level is a Makefile file that the make utility uses to determine what to do in order to make the final executable.

However, if you examine the makefiles, you can see that most of them simply contain:

include recurse.mk

Why do we have makefiles at every level? Because <code>make</code> can recurse into the bottommost directory level (the variant level in the diagram). That's where the actual work of building the product occurs. This means that you could type <code>make</code> at the topmost directory, and it would go into all the subdirectories and compile everything. Or you could type <code>make</code> from a particular point in the tree, and it would compile only what's needed from that point down.

We'll discuss how to cause make to compile only certain parts of the source tree, even if invoked from the top of the tree, in the "Advanced topics" (p. 236)" section.



When deciding where to place source files, as a rule of thumb you should place them as high up in the directory tree as possible. This not only reduces the number of directory levels to traverse when looking for source, but also encourages you to develop source that's as generic as possible (i.e. that isn't specific to the OS, CPU, or board). Lower directory levels are reserved for more and more specific pieces of source code.

If you look at the source tree that we ship, you'll notice that we follow the directory structure defined above, but with a few shortcuts. We'll cover those shortcuts in the "Advanced Topics (p. 235)" section.

Makefile structure

As mentioned earlier, the makefile structure is almost identical, regardless of the level that the makefile is found in. All makefiles (except the bottommost level) include the recurse.mk file and may set one or more macros.

Here's an example of one of our standard (nonbottommost) Makefiles:

LATE_DIRS=boards include recurse.mk

The recurse.mk file

The recurse.mk file resides under \$QNX_TARGET/usr/include/mk. This directory contains other files that are included within makefiles. Note that while the make utility automatically searches \$QNX_TARGET/usr/include, we've created symbolic links from there to \$QNX_TARGET/usr/include/mk.

The recurse.mk include file is typically used by higher-level makefiles to recurse into lower-level makefiles. All subdirectories present are scanned for files called makefile or Makefile. Any subdirectories that contain such files are recursed into, then make is invoked from within those directories, and so on, down the directory tree.

You can create a special file named Makefile.dnm ("dnm" stands for "Do Not Make") next to a real Makefile to cause recurse.mk not to descend into that directory. The contents of Makefile.dnm aren't examined in any way — you can use touch to create an empty file for it.

Macros

The example given above uses the LATE_DIRS macro. Here are the macros that you can place within a makefile:

- EARLY DIRS
- LATE_DIRS
- LIST
- MAKEFILE
- CHECKFORCE

The EARLY_DIRS and LATE_DIRS macros

To give you some control over the ordering of the directories, the macros EARLY_DIRS and LATE_DIRS specify directories to recurse into *before* or *after* all others. You'd use this facility with directory trees that contain one directory that depends on another

directory at the same level; you want the independent directory to be done first, followed by the dependent directory.

In our example above, we've specified a LATE_DIRS value of boards, because the boards directory depends on the library directory (lib).

Note that the EARLY_DIRS and LATE_DIRS macros accept a list of directories. The list is treated as a group, with no defined ordering *within* that group.

The LIST macro

The LIST macro serves as a tag for the particular directory level that the makefile is found in.

The LIST macro can contain a list of names that are separated by spaces. This is used when we squash directory levels together; see "*Advanced Topics* (p. 235)," later in this chapter.

Here are the common values corresponding to the directory levels:

- VARIANT
- CPU
- OS

Note that you're free to define whatever values you wish — these are simply conventions that we've adopted for the three directory levels specified. See the section on "*More uses for LIST* (p. 237)," below.

Once the directory has been identified via a tag in the makefile, you can specifically exclude or include the directory and its descendants in a make invocation. See "*Performing partial builds* (p. 236)," below.

The MAKEFILE macro

The MAKEFILE macro specifies the name of the makefile that recurse.mk should search for in the child directories.

Normally this is [Mm]akefile, but you can set it to anything you wish by changing the MAKEFILE macro. For example, in a GNU configure-style makefile, addvariant sets it to GNUmakefile (see "GNU configure" (p. 237)," later in this chapter.

The CHECKFORCE macro

The CHECKFORCE macro is a trigger. Its actual value is unimportant, but if you set it, the recurse.mk file looks for Makefile.force files in the subdirectories. If it

finds one, make recurses into that directory, even if the LIST macro settings would normally prevent this from happening.

Directory levels

Let's look at the directory levels themselves in some detail. Note that you can add as many levels as you want *above* the levels described here; these levels reflect the structure of your product. For example, in a factory automation system, the product would consist of the *entire* system, and you'd then have several subdirectories under that directory level to describe various projects within that product (e.g. gui, pidloop, robot_plc, etc.).

Project level

You use the project-level directory mainly to store the bulk of the source code and other directories, structuring these directories logically around the project being developed. For our factory-automation example, a particular project level might be the gui directory, which would contain the source code for the graphical user interface as well as further subdirectories.

Section level (optional)

You use the section-level directory to contain the source base relevant to a part of the project.

You can omit it if you don't need it; see "*Collapsing unnecessary directory levels* (p. 235)," later in this chapter.

OS level

If you were building products to run on multiple operating systems, you'd include an OS-level directory structure. This would serve as a branchpoint for OS-specific subdirectories.

In our factory-floor example, the gui section might be built for both QNX 4 and QNX Neutrino, whereas the other sections might be built just for QNX Neutrino.

If no OS level is detected, QNX Neutrino is assumed.

CPU level

Since we're building executables and libraries for multiple platforms, we need a place to serve as a branchpoint for the different CPUs. Generally, the CPU level contains

nothing but subdirectories for the various CPUs, but it may also contain CPU-specific source files.

Variant level

Finally, the variant level contains object, library, or executable files specific to a particular variant of the processor.

For example, some processors can operate in big-endian or little-endian mode. In that case, we'd have to generate two different sets of output modules. On the other hand, an x86 processor is a little-endian machine only, so we need to build only one set of output modules.

Specifying options

At the project level, there's a file called common.mk. This file contains any special flags and settings that need to be in effect in order to compile and link.

At the bottommost level (the variant level), the format of the makefile is different — it *doesn't* include recurse.mk, but instead includes common.mk (from the project level).

The common.mk file

The common.mk include file is where you put the traditional makefile options, such as compiler options.

In order for the common.mk file to be able to determine which system to build the particular objects, libraries, or executables for, we analyze the pathname components in the bottommost level *in reverse order* as follows:

- the last component is assigned to the VARIANT1 macro
- the next previous component is assigned to the CPU macro
- the next previous component is assigned to the OS macro
- the next previous component is assigned to the SECTION macro
- the next previous component is assigned to the PROJECT macro

For example, if we have a pathname of

/source/factory/robot_plc/driver/nto/arm/o.le, then the macros are set as follows:

Macro	Value
VARIANT1	o.be
СРИ	arm
os	nto
SECTION	driver
PROJECT	robot_plc

The variant-level makefile

The variant-level makefile (i.e. the bottommost makefile in the tree) contains the single line:

include ../../common.mk

The number of ../ components must be correct to get at the common.mk include file, which resides in the project level of the tree. The reason that the number of ../

components isn't necessarily the same in all cases has to do with whether directory levels are being collapsed.

Recognized variant names

You can combine variant names into a *compound variant*, using a period (.), dash (-), or slash (/) between the variants.

The common makefiles are triggered by a number of distinguished variant names:

а

The image being built is an object library.

so

The image being built is a shared object.

dll

The image being built is a DLL; it's linked with the -Bsymbolic option (see 1d in the *Utilities Reference*).

If the compound variant doesn't include a, so, or dll, an executable is being built.

shared

Compile the object files for .so use, but don't create an actual shared object. You typically use this name in an a.shared variant to create a static link archive that can be linked into a shared object.

g

Compile and link the source with the debugging flag set.

be, le

Compile and link the source to generate big- (if be) or little- (if le) endian code.

gcc

Use the GCC (gcc) compiler to compile the source. If you don't specify a compiler, the makefiles provide a default.

0

This is the NULL variant name. It's used when building an image that doesn't really have any variant components to it (e.g. an executable for an x86 CPU, which doesn't support bi-endian operation).

Variant names can be placed in any order in the compound variant, but to avoid confusing a source configuration management tool (e.g. CVS), make sure that the last variant in the list never looks like a generated file suffix. In other words, don't use variant names ending in .a, .so, or .o.

The following table lists some examples:

Variant	Purpose
g.le	A debugging version of a little-endian executable.
so.be	A big-endian version of a shared object.
403.be	A user-defined "403" variant for a big-endian system.



The only valid characters for variant names are letters, digits, and underscores (_).

In order for the source code to tell what variant(s) it's being compiled for, the common makefiles arrange for each variant name to be suffixed to the string VARIANT_ and have that defined as a C or assembler macro on the command line. For example, if the compound variant is so.403.be, the makefiles define the following C macros:

- VARIANT_so
- VARIANT 403
- VARIANT_be

Note that neither VARIANT_be nor VARIANT_le is defined on a CPU that doesn't support bi-endian operation, so any endian-specific code should always test for the C macros __LITTLEENDIAN__ or __BIGENDIAN__ (instead of VARIANT_le or VARIANT_be) to determine what endian-ness it's running under.

Using the standard macros and include files

We've described the pieces you'll provide when building your system, including the common.mk include file. Now let's look at some other include files:

```
• qconfig.mk (p. 226)
```

- qrules.mk (p. 229)
- qtargets.mk (p. 233)

We'll also look at some of the macros that these files set or use.

The qconfig.mk include file

Since the common makefiles have a lot of defaults based on the names of various directories, you can simplify your life enormously in the common.mk include file if you choose your directory names to match what the common makefiles want. For example, if the name of the project directory is the same as the name of the image, you don't have to set the NAME macro in common.mk.

The prototypical common.mk file looks like this:

```
ifndef QCONFIG
QCONFIG=qconfig.mk
endif
include $(QCONFIG)

# Preset make macros go here
include $(MKFILES_ROOT)/qtargets.mk
# Post-set make macros go here
```

The qconfig.mk include file provides the root paths to various install, and usage trees on the system, along with macros that define the compilers and some utility commands that the makefiles use. The purpose of the qconfig.mk include file is to let you tailor the root directories, compilers, and commands used at your site, if they differ from the standard ones that we use and ship. Therefore, nothing in a project's makefiles should refer to a compiler name, absolute path, or command name directly. Always use the qconfig.mk macros.

The qconfig.mk file resides in $QNX_TARGET/usr/include/mk$ as qconf-os.mk (where os is the host OS, e.g. nto, qnx4, linux, win32), which is a symbolic link from the place where make wants to find it (namely

If you wish to override the values of some of the macros defined in qconfig.mk without modifying the contents of the file, set the *QCONF_OVERRIDE* environment variable (or make macro) to be the name of a file to include at the end of the main qconfig.mk file.



Some examples of override files set VERSION_REL, which specifies the version of the OS that you're building for. This variable is primarily for internal use at QNX Software Systems; it indicates that make is running on a build machine instead of on a developer's desktop. If you set this variable, make becomes a lot more particular about other settings (e.g., it will insist that you set PINFO).

Preset macros

Before including qtargets.mk, you might need to set some macros to specify things like what additional libraries need to be searched in the link, the name of the image (if it doesn't match the project directory name), and so on. Do this in the area tagged as "Preset make macros go here" in the sample above.

Postset macros

Following the inclusion of qtargets.mk, you can override or (more likely) add to the macros set by qtargets.mk. Do this in the area tagged as "Post-set make macros go here" in the sample above.

qconfig.mk macros

Here's a summary of the macros available from qconfig.mk:

CP_HOST

Copy files from one spot to another.

LN_HOST

Create a symbolic link from one file to another.

RM_HOST

Remove files from the filesystem.

TOUCH HOST

Update a file's access and modification times.

PWD HOST

Print the full path of the current working directory.

CL_ which

Compile and link.

CC_ which

Compile C/C++ source to an object file.

AS_ which

Assemble something to an object file.

AR which

Generate an object file library (archive).

LR which

Link a list of objects/libraries to a relocatable object file.

LD_ which

Link a list of objects/libraries to a executable/shared object.

UM_ which

Add a usage message to an executable.

The *which* parameter can be either the string HOST for compiling something for the host system or a triplet of the form $os _cpu _compiler$ to specify a combination of target OS and CPU, as well as the compiler to be used.

The *os* is usually the string nto to indicate Neutrino (i.e. the QNX Neutrino RTOS). The *cpu* is one of x86 or arm. Finally, the compiler is usually gcc.

For example, you could use the macro CC_nto_x86_gcc to specify:

- the compilation tool
- a Neutrino target system
- an x86 platform
- the GNU GCC compiler

The following macro contains the command-line sequence required to invoke the GCC compiler:

```
CC_nto_x86_gcc = qcc -Vgcc_ntox86 -c
```

The various makefiles use the CP_HOST, LN_HOST, RM_HOST, TOUCH_HOST, and PWD_HOST macros to decouple the OS commands from the commands used to perform the given actions. For example, under most POSIX systems, the CP_HOST macro expands to the cp utility. Under other operating systems, it may expand to something else (e.g. copy).

In addition to the macros mentioned above, you can use the following macros to specify options to be placed at the end of the corresponding command lines:

- CLPOST_ which
- CCPOST which
- ASPOST_ which

- ARPOST_ which
- LRPOST_ which
- LDPOST_ which
- UMPOST which

The parameter "which" is the same as defined above: either the string "HOST" or the ordered triplet defining the OS, CPU, and compiler.

For example, specifying the following:

```
CCPOST_nto_x86_gcc = -ansi
```

causes the command line specified by CC_nto_x86_gcc to have the additional string "-ansi" appended to it.

The grules.mk include file

The qrules.mk include file defines the macros used for compiling.

You can inspect — and in some cases, also set — the following macros when you use qrules.mk. Since the qtargets.mk file includes qrules.mk, these are available there as well. Don't modify those that are marked "(read-only)."

VARIANT_LIST (read-only)

A space-separated list of the variant names macro. Useful with the \$(filter ...) make function for picking out individual variant names.

CPU

The name of the target CPU. Defaults to the name of the next directory up with all parent directories stripped off.

CPU_ROOT (read-only)

The full pathname of the directory tree up to and including the OS level.

os

The name of the target OS. Defaults to the name of the directory two levels up with all parent directories stripped off.

OS_ROOT (read-only)

The full pathname of the directory tree up to and including the OS level.

SECTION

The name of the section. This is set only if there's a section level in the tree.

SECTION_ROOT (read-only)

The full pathname of the directory tree up to and including the section level.

PROJECT (read-only)

The basename() of the directory containing the common.mk file.

PROJECT_ROOT (read-only)

The full pathname of the directory tree up to and including the project level.

PRODUCT (read-only)

The basename() of the directory above the project level.

PRODUCT_ROOT (read-only)

The full pathname of the directory tree up to and including the product level.

NAME

The basename() of the executable or library being built. Defaults to \$(PROJECT).

SRCVPATH

A space-separated list of directories to search for source files. Defaults to all the directories from the current working directory up to and including the project root directory. You'd almost never want to set this; use EXTRA_SRCVPATH to add paths instead.

EXTRA_SRCVPATH

Added to the end of SRCVPATH. Defaults to none.

INCVPATH

A space-separated list of directories to search for include files. Defaults to \$(SRCVPATH) plus \$(USE_ROOT_INCLUDE). You'd almost never want to set this; use EXTRA_INCVPATH to add paths instead.

EXTRA_INCVPATH

Added to INCVPATH just before the \$(USE_ROOT_INCLUDE). Default is none.

LIBVPATH

A space-separated list of directories to search for library files. Defaults to:

```
. (INSTALL_ROOT_support)/(OS)/(CPUDIR)/lib (USE_ROOT_LIB).
```

You'll almost never want to use this; use EXTRA_LIBVPATH to add paths instead.

EXTRA LIBVPATH

Added to LIBVPATH just before \$(INSTALL_ROOT_support) / \$(OS) / \$(CPUDIR) /lib. Default is none.

DEFFILE

The name of an assembler define file created by mkasmoff. Default is none.

SRCS

A space-separated list of source files to be compiled. Defaults to all *.s, *.S, *.c, and *.cc files in SRCVPATH.

EXCLUDE OBJS

A space-separated list of object files *not* to be included in the link/archive step. Defaults to none.

EXTRA_OBJS

A space-separated list of object files to be added to the link/archive step even though they don't have corresponding source files (or have been excluded by EXCLUDE_OBJS). Default is none.

OBJPREF_ object, OBJPOST_ object

Options to add before or after the specified object:

```
OBJPREF_object = options
OBJPOST_object = options
```

The *options* string is inserted verbatim. Here's an example:

```
OBJPREF_libc_cut.a = -Wl,--whole-archive
OBJPOST_libc_cut.a = -Wl,--no-whole-archive
```

LIBS

A space-separated list of library stems to be included in the link. Default is none.

LIBPREF_ library, LIBPOST_ library

Options to add before or after the specified library:

```
LIBPREF_library = options
LIBPOST_library = options
```

The *options* string is inserted verbatim.

You can use these macros to link some libraries statically and others dynamically. For example, here's how to bind libmystat.a and libmydyn.so to the same program:

```
LIBS += mystat mydyn

LIBPREF_mystat = -Bstatic

LIBPOST_mystat = -Bdynamic
```

This places the -Bstatic option just before -Imystat, and -Bdynamic right after it, so that only that library is linked statically.

CCFLAGS

Flags to add to the C compiler command line.

CXXFLAGS

Flags to add to the C++ compiler command line.

ASFLAGS

Flags to add to the assembler command line.

LDFLAGS

Flags to add to the linker command line.

VFLAG_ which

Flags to add to the command line for C compiles, assemblies, and links; see below.

CCVFLAG_ which

Flags to add to C compiles; see below.

ASVFLAG_ which

Flags to add to assemblies; see below.

LDVFLAG_ which

Flags to add to links; see below.

OPTIMIZE_TYPE

The optimization type; one of:

- OPTIMIZE_TYPE=TIME optimize for execution speed
- OPTIMIZE_TYPE=SIZE optimize for executable size (the default)
- OPTIMIZE_TYPE=NONE turn off optimization

Note that for the VFLAG_ which, CCVFLAG_ which, ASVFLAG_ which, and LDVFLAG_ which macros, the which part is the name of a variant. This combined macro is passed to the appropriate command line. For example, if there were a variant called "403," then the macro VFLAG_403 would be passed to the C compiler, assembler, and linker.



Don't use this mechanism to define a C macro constant that you can test in the source code to see if you're in a particular variant. The makefiles do that automatically for you. Don't set the *VFLAG_* macros for any of the distinguished variant names (listed in the "*Recognized variant names* (p. 224)" section, above). The common makefiles will get confused if you do.

The gtargets.mk include file

The gtargets.mk include file has the linking and installation rules.

You can inspect and/or set the following macros when you use qtargets.mk:

INSTALLDIR

The subdirectory where the executable or library is to be installed. Defaults to bin for executables, and lib/dll for DLLs. If you set it to /dev/null, then no installation is done.

USEFILE

The file containing the usage message for the application. Defaults to none for archives and shared objects and to \$(PROJECT_ROOT) / \$(NAME) .use for executables. The application-specific makefile can set the macro to a null string, in which case nothing is added to the executable.

LINKS

A space-separated list of symbolic link names that are aliases for the image being installed. They're placed in the same directory as the image. The default is none.

PRE_TARGET, POST_TARGET

Extra targets to add as dependencies to the all target before and after the main target.

PRE_CLEAN, POST_CLEAN

Extra commands to run before and after the clean target.

PRE_ICLEAN, POST_ICLEAN

Extra commands to run before and after the iclean target.

PRE_HINSTALL, POST_HINSTALL

Extra commands to run before and after the hinstall target.

PRE_CINSTALL, POST_CINSTALL

Extra commands to run before and after the cinstall target.

PRE_INSTALL, POST_INSTALL

Extra commands to run before and after the install target.

PRE_BUILD, POST_BUILD

Extra commands to run before and after building the image.

SO_VERSION

The SONAME version number to use when building a shared object (the default is 1).

PINFO

Information to go into the *.pinfo file.

For example, you can use the PINFO NAME option to to keep a permanent record of the original filename of a binary. If you use this option, the name that you specify appears in the information from the use -i filename command. Otherwise, the information from use -i contains the NAME entry specified outside of the PINFO define.

For more information about PINFO, see the *hook_pinfo()* (p. 240) function described below for the GNU configure command.

Advanced topics

In this section, we'll discuss how to:

- collapse unnecessary directory levels (p. 235)
- perform partial builds (p. 236)
- perform parallel builds (p. 236)
- use GNU configure (p. 237)

Collapsing unnecessary directory levels

You can *collapse* unnecessary components out of the directory tree.

The directory structure shown in the "Structure of a multiplatform source tree (p. 218)" section defines the complete tree; every possible directory level is shown. In the real world, however, some of these directory levels aren't required. For example, you may wish to build a particular module for an ARM in little-endian mode and *never* need to build it for anything else (perhaps due to hardware constraints). Therefore, it seems a waste to have a variant level that has only the directory o.le and a CPU level that has only the directory arm.

In this situation, you can *collapse* unnecessary directory components out of the tree. You do this by simply separating the name of the components with dashes (–) rather than slashes (/).

For example, in our source tree, let's look at the startup/boards/my_board/arm-le makefile:

include ../common.mk

In this case, we've specified both the variant (as "le" for little-endian) and the CPU (as "arm" for ARM) with a single directory.

Why did we do this? Because the *my_board* directory refers to a very specific board—it's not going to be useful for anything other than an ARM running in little-endian mode.

In this case, the makefile macros would have the following values:

Macro	Value
VARIANT1	arm-le
СРИ	arm
os	nto (default)
SECTION	my_board
PROJECT	boards

The addvariant command knows how to create both the squashed and unsquashed versions of the directory tree. You should always use it when creating the OS, CPU, and variant levels of the tree.

Performing partial builds

By using the LIST tag in the makefile, you can cause the make command to perform a partial build, even if you're at the top of the source tree.

If you were to simply type make without having used the LIST tag, all directories would be recursed into and everything would be built.

However, by defining a macro on make's command line, you can:

- recurse into only the specified tagged directories
 Or:
- · recurse into all of the directories except for the specified tagged ones

Let's consider an example. The following (issued from the top of the source tree):

```
make CPULIST=x86
```

causes only the directories that are at the CPU level and below (and tagged as LIST=CPU), and that are called x86, to be recursed into.

You can specify a space-separated list of directories (note the use of quoting in the shell to capture the space character):

```
make "CPULIST=x86 arm"
```

This causes the x86 and ARM versions to be built.

There's also the inverse form, which causes the specific lists *not* to be built:

```
make EXCLUDE_CPULIST=arm
```

This causes everything *except* the ARM versions to be built.

As you can see from the above examples, the following are all related to each other via the CPU portion:

- LIST=CPU
- CPULIST
- EXCLUDE_CPULIST

Performing parallel builds

To get make to run more than one command in parallel, use the JLEVEL macro. For example:

JLEVEL=4

The default value is 1. If you run parallel builds, the output from different jobs can be interspersed.

For more information, see the -j option in the GNU documentation for make.

More uses for LIST

Besides using the standard LIST values that we use, you can also define your own.

In certain makefiles, you'd put the following definition:

```
LIST=CONTROL
```

Then you can decide to build (or prevent from building) various subcomponents marked with CONTROL. This might be useful in a very big project, where compilation times are long and you need to test only a particular subsection, even though other subsections may be affected and would ordinarily be made.

For example, if you had marked two directories, robot_plc and pidloop, with the LIST=CONTROL macro within the makefile, you could then make just the robot_plc module:

```
make CONTROLLIST=robot_plc
```

Or make both (note the use of quoting in the shell to capture the space character):

```
make "CONTROLLIST=robot_plc pidloop"
```

Or make everything *except* the robot_plc module:

```
make EXCLUDE_CONTROLLIST=robot_plc
```

GNU configure

The addvariant utility knows how to work with code that uses a GNU ./configure script for configuration. If the current working directory contains files named configure and Makefile.in, addvariant automatically squashes the directory levels (as described earlier) into a single OS-CPU-VARIANT level and creates GNUmakefile files in the newly created directories along with a recursing Makefile.

After you've run addvariant, create an executable shell script called build-hooks in the root of the project. This file needs to define one or more of the following shell functions (described in more detail below):

- hook_preconfigure() (p. 239)
- hook_postconfigure() (p. 239)
- hook_premake() (p. 240)
- hook_postmake() (p. 240)
- hook_pinfo() (p. 240)

Every time that you type make in one of the newly created directories, the GNUmakefile is read (a small trick that works only with GNU make). GNUmakefile

in turn invokes the \$QNX_TARGET/usr/include/mk/build-cfg script, which notices whether or not configure has been run in the directory:

- If it hasn't, build-cfg invokes the *hook_preconfigure()* function, then the project's configure, and then the *hook_postconfigure()* function.
- If the configure has already been done, or we just did it successfully, build-cfg invokes the hook_premake(), then does a make -fMakefile, then hook_postmake(), then hook_pinfo().

If a function isn't defined in build-hooks, build-cfg doesn't bother trying to invoke it.

Within the build-hooks script, the following variables are available:

SYSNAME

The host OS (e.g. nto, linux) that we're running on. This is automatically set by build-cfg, based on the results of uname.

TARGET_SYSNAME

The target OS (e.g. nto, win32) that we're going to be generating executables for. It's set automatically by build-cfg, based on the directory that you're in.

make_CC

This variable is used to set the CC make variable when we invoke make. This typically sets the compiler that make uses. It's set automatically by build-cfg, based on the directory that you're in.

make_opts

Any additional options that you want to pass to make (the default is "").

make_cmds

The command goals passed to make (e.g. all). It's set automatically by build-cfg what you passed on the original make command line.

configure_opts

The list of options that should be passed to configure. The default is "", but --srcdir=.. is automatically added just before configure is called.

hook_preconfigure()

This function is invoked just before we run the project's configure script. Its main job is to set the configure_opts variable properly. Here's a fairly complicated example (this is from GCC):

```
# The "target" variable is the compilation target: "ntoarmv7", "ntox86", etc.
function hook_preconfigure {
    case ${sysNaME} in
    nto)
        case "${target}" in
        nto*) basedir=/usr;;
    *) basedir=/opt/QNXsdk/host/qnx6/x86/usr;;
    esac
    ;;
linux)
    host_cpu=$(uname -p)
    case ${nost_cpu} in
    i[34567]86) host_cpu=x86;;
    esac
    basedir=/opt/QNXsdk/host/linux/${host_cpu}/usr;;

*)
    echo "Don't have config for ${sysNaME}"
    exit 1
    ;;
esac
    configure_opts="${configure_opts} --target=${target}"
    configure_opts="${configure_opts} --prefix=${basedir}"
    configure_opts="${configure_opts} --exec-prefix=${basedir}"
    configure_opts="${configure_opts} --with-local-prefix=${basedir}"
    configure_opts="${configure_opts} --enable-haifa"
    configure_opts="${configure_opts} --enable-haifa"
    configure_opts="${configure_opts} --enable-haifa"
    configure_opts="${configure_opts} --enable-haifa"
    configure_opts="${configure_opts} --with-gnu-as"
    configure_opts="${configure_opts} --with-gnu-ld"
    configure_opts="${configure_opts} --with-ld=${basedir}/bin/${target}-as"
    configure_opts="${configure_opts} --with-ld=${basedir}/bin/${target}-ld"
    if [${sysNaME} == nto]; then
        configure_opts="${configure_opts} --enable-multilib"
        c
```

hook_postconfigure()

This is invoked after configure has been successfully run. Usually you don't need to define this function, but sometimes you just can't quite convince configure to do the right thing, so you can put some hacks in here to fix things appropriately. For example, again from GCC:

```
function hook postconfigure {
    echo "s/GCC_CFLAGS *=/&-I\$\(QNX_TARGET\)\/usr\/include /" >/tmp/fix.$$
    if [ $\{SYSNAMB} == nto ]; then
        echo "s/OLDCC = cc/OLDCC = .\/xgcc -B.\/ -I \$\(QNX_TARGET\)\/usr\/include/" >>/tmp/fix.$$
    echo "s/OLDCS = /s/\$/ -I\$\(QNX_TARGET\)\/usr\/include/" >>/tmp/fix.$$
    if [ $\{target\} == ntosh ]; then
        # We've set up GCC to support both big and little endian, but
        # we only actually support little endian right now. This will
        # cause the configures for the target libraries to fail, since
        # it will test the compiler by attempting a big endian compile
        # which won't link due to a missing libc & crt?.o files.
        # Hack things by forcing compiles/links to always be little endian
        sed -e "s/^CPLAGS_FOR_TARGET *=/&-ml /" <Makefile >1.$$
        mv 1.$$ Makefile
    fi
else
    # Only need to build libstdc++ & friends on one host
    rm -Rf $\{target\}

        echo "s/OLDCC = cc/OLDCC = .\/xgcc -B.\//" >>/tmp/fix.$$

fi
cd gcc
    sed -f/tmp/fix.$$ <Makefile >1.$$
    mv 1.$$ Makefile
    cd ..
    rm /tmp/fix.$$
}
```

hook_premake()

This function is invoked just before the make. You don't usually need it.

hook_postmake()

This function is invoked just after the make. We haven't found a use for this one yet, but included it for completeness.

hook_pinfo()

This function is invoked after *hook_postmake()*. Theoretically, we don't need this hook at all and we could do all its work in *hook_postmake()*, but we're keeping it separate in case we get fancier in the future.

This function is responsible for generating all the *.pinfo files in the project. It does this by invoking the <code>gen_pinfo()</code> function that's defined in <code>build-cfg</code>, which generates one .pinfo. The command line for <code>gen_pinfo()</code> is:

```
gen_pinfo [-nsrc_name ] install_name install_dir pinfo_line...
```

The arguments are:

src_name

The name of the pinfo file (minus the .pinfo suffix). If it's not specified, $gen_pinfo()$ uses $install_name$.

install_name

The basename of the executable when it's installed.

install_dir

The directory the executable should be installed in. If it doesn't begin with a /, the target CPU directory is prepended to it. For example, if <code>install_dir</code> is <code>usr/bin</code> and you're generating an x86 executable, the true installation directory is <code>/x86/usr/bin</code>.

pinfo_line

Any additional pinfo lines that you want to add. You can repeat this argument as many times as required. Favorites include:

- DESCRIPTION="This executable performs no useful pur pose"
- SYMLINK=foobar.so

Here's an example from the nasm project:

```
function hook_pinfo {
   gen_pinfo nasm usr/bin LIC=NASM DESCRIPTION="Netwide X86 Assembler"
   gen_pinfo ndisasm usr/bin LIC=NASM DESCRIPTION="Netwide X86 Disassembler"
}
```

Examples of creating MakefileS

If you use our directory structure, you should use the addvariant command to create it. This section gives some examples of creating Makefiles for a single application, as well as for a library and an application.

A single application

Suppose we have a product (we'll use the archiver, 1ha for this example) that we'd like to make available on all the processors that the QNX Neutrino RTOS supports. Unfortunately, we've been using our own custom Makefiles for gcc on x86, and we have no idea how to make binaries for other processors.

The QNX Neutrino Makefile system makes it very easy for us to build different processor versions. Instead of writing the entire complicated Makefile ourselves, we simply include various QNX Neutrino Makefile system files that will do most of the work for us. We just have to make sure the correct variables are defined, and variants are created.

First, let's get the source code for 1ha from http://www2m.biglobe.ne.jp/~dolphin/lha/prog/lha-114i.tar.gz
and unarchive it:

```
tar -zxvf lha-114i.tar.gz
```

This creates a directory called lha-114i. If we run make here, everything will compile, and when it's done, we'll have a x86 binary called lha in the src directory.

A typical compile command for this application using the original Makefile looks like:

```
gcc -02 -DSUPPORT_LH7 -DMKSTEMP -DNEED_INCREMENTAL_INDICATOR \
   -DTMP_FILENAME_TEMPLATE=""/tmp/lhxxxxxx"" \
   -DSYSTIME_HAS_NO_TM -DEUC -DSYSV_SYSTEM_DIR -DMKTIME \
   -c -o lharc.o lharc.c
```

We want to make sure our version compiles with the same options as the original version, so we have to make sure to include those compiler options somewhere.

Let's save the current Makefile as a backup:

```
cd src
mv Makefile Makefile.old
```

As mentioned above, we need to define some variables in a file somewhere that our Makefiles can include. The usual place to put these defines is in a common.mk file. We can use the addvariant utility to create our initial common.mk and new Makefile, like this:

```
addvariant -i OS
```

Let's go through the common.mk file line by line to figure out what's going on, and what we need to add:

```
ifndef QCONFIG
QCONFIG=qconfig.mk
endif
include $(QCONFIG)
```

You should never change these four lines. The default qconfig.mk defines a number of variables that the Makefile system uses.

After these lines, we can define our own variables. Let's start with:

```
INSTALLDIR=usr/bin
```

This defines where to install our binary. Third-party applications should go into usr/bin instead of bin, which is the default.

Next, we put in some packager info:

```
define PINFO PINFO DESCRIPTION=Archiver using lha compression. endef
```

If we define PINFO information like this in our common.mk file, a lha.pinfo file will be created in each of our variant directories. We'll look at this later.

After that, we add:

```
NAME=1ha
```

This tells the Makefile system what the name of our project is. Since we're building binary executables, this will be the name of our binary.

```
#EXTRA_INCVPATH=$(PROJECT_ROOT)/includes
```

EXTRA_INCVPATH defines where our header files are located. By default, all the directories from our PROJECT_ROOT down to our variant directory are added to the main include paths (i.e. where it will look for header files.) In our case, all the project headers are located in the project's root directory, so we don't need an EXTRA_INCVPATH line. This commented-out line serves as an example.

```
EXCLUDE_OBJS=lhdir.o makezero.o
```

Ordinarily, all the source code files in the PROJECT_ROOT directory are compiled and linked to the final executable. If we want to exclude certain files from being compiled and linked, we specify the object files in EXCLUDE_OBJS.

```
CCFLAGS=-02 -DSUPPORT_LH7 -DMKSTEMP -DNEED_INCREMENTAL_INDICATOR -DTMP_FILENAME_TEMPLATE=""/tmp/lhxxxxxx"" -DSYSTIME_HAS_NO_TM -DEUC -DSYSV_SYSTEM_DIR -DMKTIME
```

CCFLAGS defines the compiler flags. This is where we put the original compiler flags listed above.

That's all we need to add to get up and running. The last line in our common.mk file is:

```
include $(MKFILES_ROOT)/qtargets.mk
```

This does all the magic that figures out which CPU compiler to use, what binary to make, etc. You should never change this line.

Here's what our complete common.mk file looks like:

That's it for the common.mk file. We'll see where it is included in Makefiles shortly. How about the Makefile that was just created for us? We'll very rarely have to change any of the Makefiles. Usually they just contain a LIST= line, depending on where they are in our directory tree, and some Makefile code to include the appropriate file that makes the recursion into subdirectories possible. The exception is the Makefile at the very bottom. More on this later.

We'll have to have a usage description for our application as well. In our case, we can get a usage message simply by running 1ha without any parameters, like this:

```
./lha 2> lha.use
```

For our final binaries, when someone types use lha (assuming lha is in their path), they'll get the proper usage message.

As described earlier in this appendix, we use a lot of subdirectories. Here are the ones we need:

Directory	Level
nto	OS
nto/x86/	СРИ
nto/x86/o	Variant

Unless we'll be releasing for QNX 4 as well as the QNX Neutrino RTOS, we'll need only the nto directory for the OS level. For the CPU level, we'll have directories for anything we want to support: ARM and/or x86.

The final variant directory depends on what we're building, and what endian-ness we want to compile for:

- Since x86 only has little endian-ness, it doesn't have an extension.
- If there's a choice, the variant level directory name would have a .be or .le at the end (e.g. o.le).
- If we're building shared libraries, we'd replace the o variant with a so variant.
- If we were building shared objects that aren't meant to be linked directly with applications, we'd use a dll variant.
- If we were building static libraries, we'd use an a variant.

We're building just an executable binary, so we use the o variant. Each directory and subdirectory needs to have a Makefile. Again, for most of them we're simply including the recurse.mk file, which contains everything needed to recurse down our tree until we get to the o* directory, as well as setting a LIST variable, which for general use indicates where we are in our Makefile tree. For example, if the directory contains variants, LIST is set to VARIANT.

Let's use the addvariant utility to create a directory tree and appropriate Makefiles for our various CPUs and variants. The addvariant utility can do more than just add variants, but in our case, that's all we need it for. We create a variant by running:

```
addvariant nto
```

Let's do this for each of our CPUs, like this:

```
addvariant nto arm o.le addvariant nto x86 o
```

If we look at the Makefile in the lha-114i/src/nto/x86/o directory, we see it just contains:

```
include ../../common.mk
```

Since this is the bottom directory, we don't need to recurse any further, but rather we want to include the <code>common.mk</code> file we created earlier. We also don't need a LIST variable, since we have no subdirectories at this point. We now have a complete QNX Neutrino-style <code>Makefile</code> tree.

A library and an application

What if we want to distribute shared libraries (again for all the CPUs we can) and a development package as well? Let's use the bzip2 distribution as our example. The bzip2 binary already comes with QNX Neutrino, but the library doesn't. You can download the source code from http://www.bzip.org.

This is a good example, because it contains both a library (libbz2) and an application (bzip2). Once we've downloaded it, we can extract and build it with:

```
tar -zxvf bzip2-1.0.3.tar.gz
```

```
cd bzip2-1.0.3 make
```

We notice that a typical compile looks like:

```
gcc -Wall -Winline -O2 -fomit-frame-pointer -fno-strength-reduce
-D_FILE_OFFSET_BITS=64 -c decompress.c
```

Let's remember those options for later.

The problem with using the QNX Neutrino makefile system in this case, is that we want to make two projects: the libbz2 library and the bzip2 application. With the QNX Neutrino Makefile system, we usually have a single project.

The best solution is to separate them into different directories. Instead of moving the source code around, we'll just create two subdirectories, one called lib, and the other called app, in which we'll create the appropriate Makefile and common.mk files:

```
mkdir app
cd app
addvariant -i OS
addvariant nto arm o.le
addvariant nto x86 o
cd ..
mkdir lib
cd lib
addvariant -i OS
addvariant nto arm so.le
addvariant nto arm a.le
addvariant nto x86 so
addvariant nto x86 a
```

If we try to build either of these projects now, not much happens. This is because we haven't told the Makefile system where our source files are.

Let's start with the library. Its common.mk file already contains the default lines:

```
ifndef QCONFIG
QCONFIG=qconfig.mk
endif
include $(QCONFIG)
include $(MKFILES_ROOT)/qtargets.mk
```

Let's add a few more lines just before the line that includes qtargets.mk. First, we'll add the compile options it used originally:

```
CCFLAGS+=-Wall -Winline -O2 -fomit-frame-pointer -fno-strength-reduce -D_FILE_OFFSET_BITS=64
```

Next, let's tell it where to find the source files. The PRODUCT_ROOT directory is the parent directory of the PROJECT_ROOT directory, which is where our source code is located. Let's use that to specify where our source code is:

```
EXTRA_SRCVPATH=$(PRODUCT_ROOT)
```

Since the parent directory also contains the source code for the bzip2 application, and we want only the object files for the libbz library, let's weed out the object files we don't need:

```
EXCLUDE_OBJS=bzip2recover.o bzip2.o dlltest.o spewG.o unzcrash.o
```

We should add some PINFO definitions and specify where to install the files (usr/lib in this case):

```
define PINFO
PINFO DESCRIPTION=bzip2 data compressions library
endef
INSTALLDIR=usr/lib
```

Finally, let's make sure the library has the correct name. By default, it uses the directory name of the PROJECT_ROOT directory. Since we don't want to call our library lib, let's change it:

NAME=bz2

If we now run make at the terminal, we can watch all of our libraries being built.



You may notice that there are libbz2S.a libraries being built in the so directories. You can use these libraries if you want to create other shared libraries that require code from this library.

What about our application, bzip2? Let's change into the app directory we built before and set up our common.mk file. This time, though, we exclude everything but the bzip2.o from our objects and add a new line:

LIBS+=bz2

Here's our complete common.mk file:

```
ifndef QCONFIG
QCONFIG=qconfig.mk
endif
include $(QCONFIG)

CCFLAGS+=-Wall -Winline -O2 -fomit-frame-pointer -fno-strength-reduce
    -D_FILE_OFFSET_BITS=64
EXTRA_SRCVPATH=$(PRODUCT_ROOT)
EXCLUDE_OBJS= blocksort.o bzip2recover.o bzlib.o compress.o crctable.o
    decompress.o dlltest.o huffman.o randtable.o spewG.o unzcrash.o
LIBs+=bz2
define PINFO
PINFO DESCRIPTION=bzip2 file compressor/decompressor
endef
INSTALLDIR=usr/bin
NAME=bzip2
include $(MKFILES_ROOT)/qtargets.mk
```

We can easily create our bzip2.use file by getting help from our previously created bzip2 executable:

```
../bzip2 --help 2> bzip2.use
```

Now we can build our binaries, and make sure they exist:

```
make
ls -l nto/*/*/bzip2
```

Chapter 11 POSIX Conformance

This appendix describes how the QNX Neutrino RTOS conforms to POSIX. It's based on the documentation submitted for the QNX Neutrino 6.4.0 certification of compliance as a PSE52 Realtime Controller 1003.13-2003 System.

To set up an environment that conforms to POSIX, do the following:

• Specify the -m~b option to procnto in your buildfile, to make the kernel perform POSIX error checking for arguments to mapped file operations.



- Set the **POSIXLY_CORRECT** environment variable to 1.
- Explicitly configure the compiler for C99 compatibility. For example, with a gcc-4.2.1 compiler:

qcc -V4.2.1,gcc_ntox86 -Wc,-std=c99

Conformance statement

This section is based on the Conformation Statement made for the certification.

System interfaces: general attributes

Supported features

The required features below are supported for all system configurations.

Macro Name	Meaning
_POSIX_NO_TRUNC	Pathname components longer than NAME_MAX generate an error.

Optional features

QNX Neutrino doesn't implement the following optional features:

- _POSIX_TRACE
- _POSIX_TRACE_EVENT_LOG
- _POSIX_TRACE_LOG
- POSIX 1003.26-2003
- POSIX.5c Interfaces (Ada Language Option)

QNX Neutrino supports the following POSIX.1 options and POSIX.13 units of functionality not mandated by the PSE52 Realtime Controller 1003.13-2003 System Product Standard:

- _POSIX_ASYNCHRONOUS_IO
- _POSIX_BARRIERS
- _POSIX_CHOWN_RESTRICTED
- _POSIX_IPV6
- _POSIX_MEMORY_PROTECTION
- _POSIX_PRIORITIZED_IO
- _POSIX_RAW_SOCKETS
- _POSIX_SAVED_IDS
- _POSIX_SPORADIC_SERVER
- _POSIX_THREAD_PROCESS_SHARED
- _POSIX_TYPED_MEMORY_OBJECTS
- POSIX_C_LANG_WIDE_CHAR
- POSIX_DEVICE_SPECIFIC
- POSIX_EVENT_MGMT

- POSIX_FIFO
- POSIX_FILE_ATTRIBUTES
- POSIX_FILE_SYSTEM_EXT
- POSIX_JOB_CONTROL
- POSIX_MULTI_PROCESS
- POSIX_NETWORKING
- POSIX_PIPE
- POSIX_REGEXP
- POSIX_RW_LOCKS
- POSIX_SHELL_FUNCS
- POSIX_SIGNAL_JUMP
- POSIX_STRING_MATCHING
- POSIX_SYMBOLIC_LINKS
- POSIX_SYSTEM_DATABASE
- POSIX_USER_GROUPS
- POSIX_WIDE_CHAR_IO
- XSI_C_LANG_SUPPORT
- XSI_DEVICE_IO
- XSI_DYNAMIC_LINKING
- XSI_FD_MGMT
- XSI_FILE_SYSTEM
- XSI_JOB_CONTROL
- XSI_JUMP
- XSI_MULTI_PROCESS
- XSI_SINGLE_PROCESS
- XSI_SYSTEM_DATABASE
- XSI_SYSTEM_LOGGING
- XSI_TIMERS

Float, standard I/O, and limit values

The values associated with the constants specified in <float.h> are as follows:

Macro Name	Meaning	Value
FLT_RADIX	Radix of the exponent representation.	2
FLT_MANT_DIG	Number of base-FLT_RADIX digits in the float significand.	24

Macro Name	Meaning	Value
DBL_MANT_DIG	Number of base-FLT_RADIX digits in the double significand.	53
LDBL_MANT_DIG	Number of base-FLT_RADIX digits in the long double significand.	64
FLT_DIG	Number of decimal digits, q , such that any floating-point number with q digits can be rounded into a float representation and back again without change to the q digits.	6
DBL_DIG	Number of decimal digits, q , such that any floating-point number with q digits can be rounded into a double representation and back again without change to the q digits.	15
LDBL_DIG	Number of decimal digits, q , such that any floating-point number with q digits can be rounded into a long double representation and back again without change to the q digits.	18
FLT_MIN_EXP	Minimum negative integer such that FLT_RADIX raised to that power minus 1 is a normalised float.	-125
DBL_MIN_EXP	Minimum negative integer such that FLT_RADIX raised to that power minus 1 is a normalised double.	-1021

Macro Name	Meaning	Value
LDBL_MIN_EXP	Minimum negative integer such that FLT_RADIX raised to that power minus 1 is a normalised long double.	-16381
FLT_MIN_10_EXP	Minimum negative integer such that 10 raised to that power is in the range of normalised floats.	-37
DBL_MIN_10_EXP	Minimum negative integer such that 10 raised to that power is in the range of normalised doubles.	-307
LDBL_MIN_10_EXP	Minimum negative integer such that 10 raised to that power is in the range of normalised long doubles.	-4931
FLT_MAX_EXP	Maximum integer such that FLT_RADIX raised to that power minus 1 is a representable finite float.	128
DBL_MAX_EXP	Maximum integer such that FLT_RADIX raised to that power minus 1 is a representable finite double.	1024
LDBL_MAX_EXP	Maximum integer such that FLT_RADIX raised to that power minus 1 is a representable finite long double.	16384
FLT_MAX_10_EXP	Maximum integer such that 10 raised to that power is in the range of representable finite floats.	38
DBL_MAX_10_EXP	Maximum integer such that 10 raised to that power is in the range of	308

Macro Name	Meaning	Value
	representable finite doubles.	
LDBL_MAX_10_EXP	Maximum integer such that 10 raised to that power is in the range of representable finite long doubles.	4932
FLT_MAX	Maximum representable finite float.	3.40282347e+38
DBL_MAX	Maximum representable finite double.	1.7976931348623157e308
LDBL_MAX	Maximum representable finite long double.	1.189731495357231765e+4932
FLT_EPSILON	Difference between 1.0 and the least value greater than 1.0 that is representable as a float.	1.1920929e-07
DBL_EPSILON	Difference between 1.0 and the least value greater than 1.0 that is representable as a double.	2.2204460492503131e-16
LDBL_EPSILON	Difference between 1.0 and the least value greater than 1.0 that is representable as a long double.	1.084202172485504434e-19
FLT_MIN	Minimum normalised positive float.	1.17549435e-38
DBL_MIN	Minimum normalised positive double.	2.2250738585072014e-308
LDBL_MIN	Minimum normalised positive long double.	3.362103143112093506e4932

The values associated with the following constants (optionally specified in imits.h> are as follows:

Macro Name	Meaning	Minimum	Maximum
DELAYTIMER_MAX	Maximum number of timer expiration overruns.	1048576	1048576
FILESIZEBITS	Minimum number of bits needed to represent as a signed integer value the maximum size of a regular file.	32	64
LINK_MAX	Maximum number of links to a single file.	1	2147483647
MQ_OPEN_MAX	The maximum number of open message queue descriptors a process may hold.	8	1024
MQ_PRIO_MAX	The maximum number of message priorities supported by the implementation.	32	32
NAME_MAX	Maximum number of bytes in a filename (not including the terminating null).	91	255
OPEN_MAX	Maximum number of open files that one process can have open at any one time.	100	65534
PAGESIZE	Size of a page in bytes.	4096	4096
PATH_MAX	Maximum number of bytes in a pathname	255	1024

Macro Name	Meaning	Minimum	Maximum
	(including the terminating null).		
PIHHADIASIRCIOR I IBRATIONS	Maximum number of attempts made to destroy a thread's thread-specific data values when a thread exits.	4	4
PTHREAD_KEYS_MAX	Maximum number of data keys that can be created by a process.	128	128
PTHREAD_STACK_MIN	Minimum size in bytes of thread stack storage.	256	256
PIHREAD_THREADS_MAX	Maximum number of threads that can be created per process.	65534	65534
RTSIG_MAX	Maximum number of realtime signals reserved for application use in this implementation.	16	16
SEM_NSEMS_MAX	Maximum number of semaphores that a process may have.	Unlimited	Unlimited
SEM_VALUE_MAX	The maximum value a semaphore may have.	1073741823	1073741823
SIGQUEUE_MAX	Maximum number of queued signals that a process may send and have pending at the receiver(s) at any time.	Unlimited	Unlimited

Macro Name	Meaning	Minimum	Maximum
SS_REPL_MAX	The maximum number of replenishment operations that may be simultaneously pending for a particular sporadic server scheduler.	65535	65535
STREAM_MAX	Number of streams that one process can have open at one time.	Unlimited	Unlimited
TIMER_MAX	Maximum number of timers per process supported by the implementation.	65534	65534
TRACE_EVENT_NAME_MAX	Maximum length of the trace event name.	Not supported	Not supported
TRACE_NAME_MAX	Maximum length of the trace generation version string or of the trace stream name.	Not supported	Not supported
TRACE_SYS_MAX	Maximum number of trace streams that may simultaneously exist in the system.	Not supported	Not supported
TRACE_USER_EMENT_MAX	Maximum number of user trace event type identifiers that may simultaneously exist in a traced process, including the predefined user trace event	Not supported	Not supported

Macro Name	Meaning	Minimum	Maximum
TZNAME_MAX	Maximum number of bytes supported for the name of a time zone.	30	30

The values associated with the following numerical constants specified in the imits.h> header file are as follows:

Macro Name	Meaning	Value
CHAR_MAX	Maximum value of a char.	127
INT_MAX	Maximum value of an int.	2147483647
LONG_MAX	Maximum value of a long int.	2147483647
LLONG_MAX	Maximum value of a long long.	9223372036854775807
SHRT_MAX	Maximum value of a short.	32767
SSIZE_MAX	Maximum value of an object of type ssize_t.	2147483647
UINT_MAX	Maximum value of an unsigned int.	4294967295
ULONG_MAX	Maximum value of an unsigned long int.	4294967295
ULLONG_MAX	Maximum value of a unigsned long long.	18446744073709551615
USHRT_MAX	Maximum value of an unsigned short int.	65535

The values associated with the numerical constants specified in the <stdio.h> header file are as follows:

Macro Name	Meaning	Value
FILENAME_MAX	Maximum size in bytes of	255
	the longest filename string	
	that the implementation	
	guarantees can be opened.	

Macro Name	Meaning	Value
FOPEN_MAX	Number of streams which the implementation guarantees can be open simultaneously.	16
L_tmpnam	Maximum size of character array to hold <i>tmpnam()</i> output.	255
TMP_MAX	Minimum number of unique filenames generated by <i>tmpnam()</i> , which is the maximum number of times an application can call <i>tmpnam()</i> reliably.	17576

Error conditions

The following table indicates which optional errors, (denoted by "may fail" within the specification), listed in the System Interfaces Volume are detected in the circumstances specified:

Function	Error	Detected
access()	EINVAL	Yes
	ENAMETOOLONG	Yes
	ETXTBSY	No
chdir()	ENAMETOOLONG	Yes
	ELOOP	Yes
clock_settime()	EPERM	Yes
close()	EIO	Yes
closedir()	EBADF	Yes
	EINTR	Yes
erfc(), erfcf(), erfcl()	Range Error	Yes
exp(), expf(), expl()	Range Error	Yes
exp2(), exp2f(), exp2l()	Range Error	Yes
expm1(), expm1f()	Range Error	Yes

Function	Error	Detected
fchdir()	EINTR	Yes
	EIO	No
fclose()	ENXIO	No
fcntl()	EDEADLK	Yes
fdim(), fdimf(), fdiml()	Range Error	Yes
fdopen()	EBADF	No
	EINVAL	Yes
	EMFILE	No
	ENOMEM	Yes
fflush()	ENXIO	Yes
fgetc()	ENOMEM	No
	ENXIO	Yes
fgetpos()	EBADF	Yes
	ESPIPE	Yes
fgetwc()	ENOMEM	No
	ENXIO	Yes
fileno()	EBADF	No
fmod(), fmodf(), fmodl()	Range Error	Yes
fopen()	EINVAL	Yes
	ELOOP	Yes
	EMFILE	Yes
	ENAMETOOLONG	Yes
	ENOMEN	Yes
	ETXTBSY	Yes
fpathconf()	EBADF	Yes
	EINVAL	Yes
fputc()	ENOMEM	No
	ENXIO	Yes

Function	Error	Detected
fread()	ENOMEM	No
	ENXIO	Yes
freopen()	EINVAL	Yes
	ELOOP	Yes
	ENAMETOOLONG	Yes
	ENOMEM	Yes
	ENXIO	Yes
	ETXTBSY	Yes
fscanf()	ENOMEM	No
	ENXIO	Yes
fstat()	EOVERFLOW	Yes
ftell()	ESPIPE	Yes
getcwd()	EACCES	Yes
	ENOMEM	Yes
Idexp(), Idexpf(), Idexpl()	Range Error	Yes
link()	ELOOP	Yes
	ENAMETOOLONG	Yes
mkdir()	ELOOP	Yes
	ENAMETOOLONG	Yes
mktime()	EOVERFLOW	No
mlock()	EINVAL	Yes
	ENOMEM	Yes
munlock()	EINVAL	Yes
mlockall()	ENOMEM	Yes
	ENOPERM	Yes
mq_getattr()	EBADF	Yes
mq_receive()	EBADF	Yes
mq_timedreceive()	EBADF	Yes

Function	Error	Detected
open()	EAGAIN	No
	EINVAL	Yes
	ELOOP	Yes
	ENAMETOOLONG	Yes
	ETXTBSY	Yes
opendir()	ELOOP	Yes
	EMFILE	Yes
	ENAMETOOLONG	Yes
	ENFILE	Yes
pathconf()	EACCES	Yes
	EINVAL	Yes
	ELOOP	Yes
	ENAMETOOLONG	Yes
	ENOENT	Yes
	ENOTDIR	Yes
posix_trace_*()	Not supported	Not supported
pow(), powf(), powl()	Range Error	Yes
pthread_attr_destroy()	EINVAL	No
pthread_attr_init()	EBUSY	No
pthread_attr_getdetachstate()	EINVAL	No
pthread_attr_setdetachstate()	EINVAL	No
pthread_attr_getguardsize()	EINVAL	No
pthread_attr_setguardsize()	EINVAL	No
pthread_attr_getinheritsched()	EINVAL	No
pthread_attr_setinheritsched()	EINVAL	No
	ENOSUP	No
pthread_attr_getschedparam()	EINVAL	No
pthread_attr_setschedparam()	EINVAL	No

Function	Error	Detected
	ENOSUP	No
pthread_attr_getschedpolicy()	EINVAL	No
pthread_attr_setschedpolicy()	EINVAL	No
	ENOSUP	No
pthread_attr_getscope()	EINVAL	No
pthread_attr_setscope()	EINVAL	Yes
	ENOSUP	Yes
pthread_attr_getstack()	EINVAL	No
pthread_attr_setstack()	EINVAL	No
	EBUSY	No
pthread_attr_getstackaddr()	EINVAL	No
pthread_attr_setstackaddr()	EINVAL	No
pthread_attr_getstacksize()	EINVAL	No
pthread_attr_setstacksize()	EINVAL	No
pthread_cancel()	ESRCH	Yes
pthread_cond_broadcast()	EINVAL	Yes
pthread_cond_signal()	EINVAL	Yes
pthread_cond_destroy()	EBUSY	Yes
	EINVAL	Yes
pthread_cond_init()	EBUSY	Yes
	EINVAL	Yes
pthread_cond_timedwait()	EINVAL	Yes
	EPERM	Yes
pthread_cond_wait()	EINVAL	Yes
	EPERM	Yes
pthread_condattr_destroy()	EINVAL	No
pthread_condattr_getclock()	EINVAL	No
pthread_condattr_setclock()	EINVAL	No

Function	Error	Detected
pthread_condattr_getpshared()	EINVAL	No
pthread_condattr_setpshared()	EINVAL	No
pthread_create()	EINVAL	Yes
pthread_detach()	EINVAL	Yes
	ESRCH	Yes
pthread_getcpuclockid()	ESRCH	Yes
pthread_getschedparam()	ESRCH	Yes
pthread_setschedparam()	EINVAL	Yes
	ENOTSUP	Yes
	EPERM	Yes
	ESRCH	Yes
pthread_setspecific()	ESRCH	No
pthread_join()	EDEADLK	Yes
	EINVAL	Yes
pthread_key_delete()	EINVAL	Yes
pthread_mutex_destroy()	EBUSY	Yes
	EINVAL	Yes
pthread_mutex_init()	EBUSY	Yes
	EINVAL	Yes
pthread_mutex_lock()	EINVAL	Yes
	EDEADLK	Yes
pthread_mutex_trylock()	EINVAL	Yes
pthread_mutex_unlock()	EINVAL	Yes
	EPERM	Yes
pthread_mutex_timedlock()	EINVAL	Yes
	EDEADLK	Yes
pthread_mutexattr_destroy()	EINVAL	No
pthread_mutexattr_getprioceiling()	EINVAL	No

Function	Error	Detected
	EPERM	No
pthread_mutexattr_setprioceiling()	EINVAL	Yes
	EPERM	No
pthread_mutexattr_getprotocol()	EINVAL	No
	EPERM	No
pthread_mutexattr_setprotocol()	EINVAL	Yes
	EPERM	No
pthread_mutexattr_getpshared()	EINVAL	No
pthread_mutexattr_setpshared()	EINVAL	No
pthread_mutexattr_gettype()	EINVAL	No
pthread_mutexattr_settype()	EINVAL	Yes
pthread_once()	EINVAL	No
pthread_setcancelstate()	EINVAL	Yes
pthread_setcanceltype()	EINVAL	Yes
pthread_schedprio()	EINVAL	Yes
	ENOTSUP	No
	EPERM	Yes
	ESRCH	Yes
putc()	ENOMEM	No
	ENXIO	Yes
putchar()	ENOMEM	No
	ENXIO	Yes
puts()	ENOMEM	No
	ENXIO	Yes
read()	EIO	Yes
	ENOBUFS	Yes
	ENOMEM	Yes
	ENXIO	Yes

Function	Error	Detected
readdir()	EBADF	Yes
	ENOENT	No
remove()	EBUSY	No
	ELOOP	Yes
	ENAMETOOLONG	Yes
	ETXTBSY	No
rename()	ELOOP	Yes
	ENAMETOOLONG	Yes
	ETXTBSY	No
rmdir()	ELOOP	Yes
	ENAMETOOLONG	Yes
sem_close()	EINVAL	Yes
sem_destroy()	EINVAL	Yes
	EBUSY	Yes
sem_getvalue()	EINVAL	Yes
sem_post()	EINVAL	Yes
sem_timedwait()	EDEADLK	No
	EINTR	Yes
	EINVAL	Yes
sem_trywait()	EDEADLK	No
	EINTR	Yes
	EINVAL	Yes
sem_wait()	EDEADLK	No
	EINTR	Yes
	EINVAL	Yes
setvbuf()	EBADF	No
sigaction()	EINVAL	Yes
sigaddset()	EINVAL	Yes

Function	Error	Detected
sigdelset()	EINVAL	Yes
sigismember()	EINVAL	Yes
signal()	EINVAL	Yes
sigtimedwait()	EINVAL	Yes
sigwait()	EINVAL	No
sigwaitinfo()	EINVAL	No
stat()	ELOOP	Yes
	ENAMETOOLONG	Yes
	EOVERFLOW	Yes
strcoll()	EINVAL	No
strerror()	EINVAL	No
strerror_r()	ERANGE	Yes
strtod(), strtof(), strtold()	EINVAL	Yes
strtoimax()	EINVAL	Yes
strtol()	EINVAL	Yes
strtoul()	EINVAL	Yes
strtoumax()	EINVAL	Yes
strxfrm()	EINVAL	No
timer_delete()	EINVAL	Yes
timer_getoverrun()	EINVAL	Yes
timer_gettime()	EINVAL	Yes
timer_settime()	EINVAL	Yes
tmpfile()	EMFILE	Yes
	ENOMEM	Yes
unlink()	ELOOP	Yes
	ENAMETOOLONG	Yes
	ETXTBSY	No
utime()	ELOOP	Yes

Function	Error	Detected
	ENAMETOOLONG	Yes
vfscanf()	EILSEQ	Yes
	EINVAL	No
	ENOMEM	No
	ENXIO	Yes
write()	ENETDOWN	Yes
	ENETUNREACH	Yes
	ENXIO	Yes

Mathematical interfaces

Most implementations support IEEE floating-point format either in hardware or software. Some implementations support other formats with different exponent and mantissa accuracy. QNX Neutrino supports IEEE 754 in hardware.

The fegetexceptflag(), feraiseexcept(), fesetexecptflag(), and fetestexecptflag() functions support the following floating-point exceptions:

- FE_DIVBYZERO
- FE_INEXACT
- FE_INVALID
- FE_OVERFLOW
- FE_UNDERFLOW

The *fegetround()* and *fesetround()* functions support the following floating-point rounding directions:

- FE_DOWNWARD
- FE_TONEAREST
- FE_TOWARDZERO
- FE_UPWARD

QNX Neutrino supports a non-stop floating-point exception mode.

File handling

Access control

QNX Neutrino provides standard access control.

Files and directories

QNX Neutrino doesn't implement any additional or alternate file access control mechanisms that could cause *fstat()* or *stat()* to fail.

Internationalized system interfaces

Coded character sets

QNX Neutrino supports the following coded character sets:

- ISO 8859-1:1987
- ISO 10646-1:2000

The underlying internal codeset is ISO 8859-1:1987.

Threads: Cancellation points

POSIX specifies a list of functions that *must* have cancellation points that occur when a thread is executing, and another of functions that *may* have cancellation points.

The functions listed below are those that POSIX says may have cancellation points and do in the QNX Neutrino implementation:

- closedir()
- closelog()
- dlopen()
- endgrent()
- endhostent()
- endnetent()
- endprotoent()
- endpwent()
- endservent()
- fclose()
- fflush()
- fgetc()
- fgetpos()
- fgets()
- fgetwc()
- fgetws()
- fopen()
- fprintf()
- fputc()
- fputwc()
- fputws()
- fread()

- freopen()
- fscanf()
- fseek()
- fseeko()
- fsetpos()
- ftell()
- ftello()
- ftw()
- fwprintf()
- fwrite()
- fwscanf()
- getc()
- getc_unlocked()
- getchar()
- getchar_unlocked()
- getgrent()
- getgrgid()
- getgrgid_r()
- getgrnam()
- getgrnam_r()
- getlogin()
- getlogin_r()
- getnetbyaddr()
- getnetbyname()
- getnetent()
- getprotobyname()
- getprotobynumber()
- getprotoent()
- getpwent()
- getpwent_r()
- getpwnam()
- getpwnam_r()
- getpwuid()
- getpwuid_r()
- gets()
- getservbyname()
- getservbyport()
- getservent()
- getwc()
- getwchar()

- getwd()
- *glob()*
- ioctl()
- Iseek()
- mkstemp()
- nftw()
- opendir()
- openlog()
- pathconf()
- pclose()
- perror()
- popen()
- posix_fadvise()
- posix_fallocate()
- posix_openpt()
- posix_spawn()
- posix_spawnp()
- printf()
- pthread_rwlock_rdlock()
- pthread_rwlock_timedrdlock()
- pthread_rwlock_timedwrlock()
- pthread_rwlock_wrlock()
- putc()
- putc_unlocked()
- putchar()
- putchar_unlocked()
- puts()
- putwc()
- putwchar()
- readdir()
- readdir_r()
- rewind()
- scanf()
- seekdir()
- setgrent()
- sethostent()
- setnetent()
- setprotoent()
- setpwent()
- setservent()

- syslog()
- tmpfile()
- vfprintf()
- vfwprintf()
- vprintf()
- vwprintf()
- wscanf()

For a list of all the functions (including non-POSIX ones) that are cancellation points, see the Full Safety Information appendix in the QNX Neutrino *C Library Reference*.

Realtime: Prioritized I/O

The QNX Neutrino RTOS supports _POSIX_PRIORITIZED_IO on regular files.

Realtime threads

Scheduling policies

The scheduling policy associated with SCHED_OTHER is SCHED_RR.

Scheduling contention scope

QNX Neutrino supports the PTHREAD_SCOPE_SYSTEM scheduling contention scope.

Default scheduling contention scope

The default scheduling contention scope is PTHREAD_SCOPE_SYSTEM.

Scheduling allocation domain

The mechanism to configure the system so that the scheduling allocation domain has size one, so that the binding of threads to scheduling allocation domains remains static is as follows:

- For a multiprocessor system, the number of processors enabled is controlled by the BSP-specific startup program.
- The -P1 command-line argument to the startup program enables only one processor, creating a scheduling allocation domain of size one.

C-language compilation environment

The QNX Neutrino RTOS provides the following C-language compilation environments:

a C-language compilation environment with 32-bit int, long, pointer, and off_t types

a C-language compilation environment with 32-bit int, long, and pointer types,
 and an off_t type using at least 64 bits

QNX Neutrino *doesn't* provide the following C-language compilation environments:

- a C-language compilation environment with 32-bit int, and 64-bit long, pointer, and off_t types
- a C-language compilation environment with int using at least 32-bits, and long, pointer, and off_t types using at least 64 bits

The Base Definitions Volume defines these four scenarios as possible C-language compilation environment offerings, but doesn't define which corresponding execution environments are supported. The QNX Neutrino RTOS supports the same execution environments as it does compilation environments.

The largest type that can be stored in type off_t is long long The standard requires that off_t be able to store any value contained in type long.

POSIX Conformance Document (PCD)

This section describes the behavior of the implementation-defined features described in IEEE 1003.1-2004 as implemented by the QNX Neutrino RTOS for the PSE52 profile specified by IEEE 1003.13-2003. The section numbers and titles below are those from the standard itself.

Base Definitions

3. Definitions

3.4. Additional File Access Control Mechanism

No additional file access control mechanisms are implemented.

3.12. Alternate File Access Control Mechanism

No alternative file access control mechanisms are implemented.

3.19. Appropriate Privileges

Appropriate privileges are provided by executing with a user ID equal to 0 (root).

3.97. Clock Tick

For CPU targets operating at less than 40 MHz, the default is 100 clock ticks per second.

For CPU targets operating at greater than 40 MHz, the default is 1000 clock ticks per second.

You can set the system clock's resolution by using the QNX-specific *ClockPeriod()* kernel call using the CLOCK_REALTIME clock.

3.159. Extended Security Controls

Extended security controls aren't implemented.

3.387. System Trace Event

The Trace (TRC) option isn't supported.

3.409. Trace Generation Version

The Trace (TRC) option isn't supported.

4. General Concepts

4.3. Extended Security Controls

No extended security controls are implemented.

4.9. Measurement of Execution Time

Process and thread execution time is measured by updating the running time on each clock tick. The running time of the active thread and process on each processor is incremented by the duration of the system clock tick.

The CPU time consumed by interrupt handlers is charged to the thread and process that is currently active on the CPU.

The CPU time consumed by kernel calls is charged to the thread and process performing the kernel call.

The CPU time consumed by system services not implemented by the kernel is charged to the thread in the server process that implements the system service.

4.11. Pathname Resolution

A pathname that begins with two successive slashes is treated as if it begins with a single slash.

4.14. Seconds Since the Epoch

The value of seconds since the Epoch is aligned with the current actual time by a 64-bit offset value that represents the offset, in nanoseconds, from the Epoch to the system boot time.

This offset value is initialised by the platform specific initialisation code within the board support package, for example, by reading RTC hardware if present.

A *clock_settime()* call using the CLOCK_REALTIME clock will set this offset to specified absolute time minus the current monotonic time since booting.

The offset from the Epoch can also be modified by the QNX specific *ClockAdjust()* kernel call. This applies a delta to the offset value on each system clock tick, for a specified number of ticks to perform a gradual adjustment of the offset value.

4.17. Tracing

The Trace (TRC) option isn't implemented.

4.18. Treatment of Error Conditions for Mathematical Functions

4.18.1 Domain Error

The return value for a domain error is NaN.

4.18.3 Range Error

- 4.18.3.2 Result Underflows:
 - The return value for a result that underflows is 0.0.
 - errno is set to ERANGE when (math_errhandling & MATH_ERRNO) is non-zero.
 - The "underflow" floating point exception is raised when (math_errhandling & MATH_ERREXCEPT) is non-zero.

6. Character Set

6.4. Character Set Description File

Applications can provide additional character set description files.

For single byte characters, the decimal, octal or hexadecimal constants are represented as a char value.

For multibyte characters, the decimal, octal or hexadecimal constants are represented as a wchar_t value, whose type is an unsigned 32-bit integer.

7. Locale

7.1. General

When the value of a locale environment variable doesn't begin with a slash, the value is interpreted as the name of a locale with the set of currently defined locales:

- The values C and POSIX identify the built-in POSIX locale.
- The value C-TRADITIONAL identifies the built-in locale that's equivalent to the C locale, except that it supports only single-byte characters.
- Any other value identifies a locale with that name within the set of currently defined locales.

7.2. POSIX Locale

The default locale is the POSIX locale.

7.3. Locale Definition

No additional locale categories beyond those specified are supported.

The values of the characters in the portable character set are those defined by the ASCII and ISO/IEC 8859-1 character sets.

8. Environment Variables

8.2. Internationalization Variables

There are no additional semantics for the following environment variables:

- LC_COLLATE
- LC_CTYPE
- LC_MESSAGES
- LC_MONETARY
- LC_NUMERIC
- LC TIME

The default locale is the POSIX locale.

There are no additional criteria for determining valid locales.

8.3. Other Environment Variables

When the first character of the **TZ** variable is a colon, the colon is ignored and the following characters are handled as a normal time zone specification. For more information, see "Setting the time zone" in the Configuring Your Environment chapter of the QNX Neutrino *User's Guide*.

13. Headers

This section describes how the QNX Neutrino RTOS conforms to POSIX in header files.

<fenv.h>

The default state of the FENV_ACCESS pragma is off. Note that gcc doesn't currently support this pragma.

<float.h>

The accuracy of of floating point operations and the library functions in <math.h> and <complex.h> is unknown.

The default rounding mode for floating-point addition (FLT_ROUNDS) is 1. No additional values beyond those specified are implemented.

The evaluation format mode (FLT_EVAL_METHOD) is -1 (indeterminable). There are no additional implementation-defined values beyond those specified.

The values of floating-point constants are as follows:

Constant	Value
FLT_RADIX	2
FLT_MANT_DIG	24
DBL_MANT_DIG	53
LDBL_MANT_DIG	64
DECIMAL_DIG	21
FLT_DIG	6
DBL_DIG	15
LDBL_DIG	18
FLT_MIN_EXP	-125
DBL_MIN_EXP	-1021
LDBL_MIN_EXP	-16381
FLT_MIN_10_EXP	-37
DBL_MIN_10_EXP	-307

Constant	Value
LDBL_MIN_10_EXP	-4931
FLT_MAX_EXP	128
DBL_MAX_EXP	1024
LDBL_MAX_EXP	16384
FLT_MAX_10_EXP	38
DBL_MAX_10_EXP	308
LDBL_MAX_10_EXP	4932
FLT_MAX	3.40282347e+38
DBL_MAX	1.7976931348623157e308
LDBL_MAX	1.189731495357231765e+4932
FLT_EPSILON	1.1920929e-07
DBL_EPSILON	2.2204460492503131e-16
LDBL_EPSILON	1.084202172485504434e-19
FLT_MIN	1.17549435e-38
DBL_MIN	2.2250738585072014e-308
LDBL_MIN	3.362103143112093506e-4932

imits.h>

The limit values in limits.h> are implemented as follows:

Limit	Value
AIO_LISTIO_MAX	Indeterminate
AIO_MAX	Indeterminate
AIO_PRIO_DELTA_MAX	Indeterminate
ARG_MAX	61440
ATEXIT_MAX	32
CHILD_MAX	Indeterminate
DELAYTIMER_MAX	1048576
HOST_NAME_MAX	Indeterminate
IOV_MAX	Indeterminate

Limit	Value
LOGIN_NAME_MAX	Indeterminate
MQ_OPEN_MAX	Determined by the maqueue or mag server.
	The maximum value is set to 1024, but a lower limit may be imposed by the process RLIMIT_NOFILE limit, as the implementation is via file descriptors.
MQ_PRIO_MAX	32
OPEN_MAX	Determined by the maximum number of file descriptors available to a process.
	The default limit is 1000, but this can be altered using a configuration option to the kernel when building the system image.
	The minimum value that can be supplied is 100, with no imposed maximum.
	A lower limit may be imposed by the process RLIMIT_NOFILE limit.
PAGESIZE	4096
PAGE_SIZE	4096
PTHREAD_DESTRUCTOR_ITERATIONS	4
PTHREAD_KEYS_MAX	128
PTHREAD_STACK_MIN	256
PTHREAD_THREADS_MAX	32767
RE_DUP_MAX	255
RTSIG_MAX	16
SEM_NSEMS_MAX	For unnamed semaphores, this is indeterminate.
	For named semaphores, the limit is determined by the mqueue server. The maximum is set to 4096, but a lower limit may be imposed by the process RLIMIT_NOFILE limit, as the implementation is via file descriptors.
SEM_VALUE_MAX	1073741824

Limit	Value
SIGQUEUE_MAX	Indeterminate
SS_REPL_MAX	65535
STREAM_MAX	Indeterminate
SYMLOOP_MAX	Indeterminate
TIMER_MAX	Indeterminate
TTY_NAME_NAME	Indeterminate
TZNAME_MAX	30
FILESIZEBITS	Depends on the filesystem implementation.
	The value for all currently supported filesystems is 32.
LINK_MAX	65535
MAX_CANON	Depends on the character device driver.
	The default is 256, but may be changed by the -C driver command-line option.
MAX_INPUT	Depends on the character device driver.
	The default is 256, but may be changed by the -C driver command-line option.
NAME_MAX	Depends on the filesystem implementation.
	Most filesystems impose a limit of 255; the ETFS filesystem imposes a limit of 91.
PATH_MAX	Depends on the filesystem implementation.
	Most filesystems impose a limit of 1024; the ETFS filesystem imposes a limit of 255.
PIPE_BUF	512

Limit	Value
SYMLINK_MAX	Depends on the filesystem
	implementation.
	Most filesystems impose a limit of 1024;
	the ETFS filesystem imposes a limit of 256.
BC_BASE_MAX	99
BC_DIM_MAX	2048
BC_SCALE_MAX	99
BC_STRING_MAX	1000
CHARCLASS_NAME_MAX	14
COLL_WEIGHTS_MAX	2
EXPR_NEST_MAX	32
LINE_MAX	2048
NGROUPS_MAX	8
RE_DUP_MAX	255
CHAR_BIT	8
CHAR_MAX	127
CHAR_MIN	-128
INT_MAX	2147483647
LONG_BIT	32
LONG_MAX	2147483647
MB_LEN_MAX	8
SCHAR_MAX	127
SHRT_MAX	32767
SSIZE_MAX	2147483647
UCHAR_MAX	255
UINT_MAX	4294967295
ULONG_MAX	4294967295
USHRT_MAX	65535

Limit	Value
WORD_BIT	32
INT_MIN	-2147383648
LONG_MIN	-2147383648
SCHAR_MIN	-128
SHRT_MIN	-32768
LLONG_MIN	-9223372036854775808
LLONG_MAX	9223372036854775807
ULLONG_MAX	18446744073709551615

<math.h>

If FLT_EVAL_METHOD has a value other than 0, 1 or 2, the type definitions for float_t and double_t are float and double, respectively.

No implementation-defined floating-point classification macros are defined.

The default state of the FP_CONTRACT pragma is off. Note that gcc doesn't currently support this pragma.

<signal.h>

Realtime signal behavior is supported for signals outside of the range SIGRTMIN through SIGRTMAX.

The following additional signals are defined in <signal.h>:

- SIGIOT
- SIGEMT (same signal number as SIGDEADLK)
- SIGDEADLK (same signal number as SIGEMT)
- SIGCLD (same signal number as SIGCHLD)
- SIGPWR
- SIGWINCH
- SIGIO (same signal number as SIGPOLL)

For more information, see "Summary of signals" in the Interprocess Communication (IPC) chapter of the *System Architecture* guide.

<stdint.h>

The limits for specified-width integer types are as follows:

Limit	Value
INT8_MIN	-128

Limit	Value
INT16_MIN	-32768
INT32_MIN	-2147483648
INT64_MIN	-9223372036854775808
INT8_MAX	127
INT16_MAX	32767
INT32_MAX	2147483647
INT64_MAX	9223372036854775807
UINT8_MAX	255
UINT16_MAX	65535
UINT32_MAX	4294967295
UINT64_MAX	18446744073709551615
INT_LEAST8_MIN	-128
INT_LEAST16_MIN	-32768
INT_LEAST32_MIN	-2147483648
INT_LEAST64_MIN	-9223372036854775808
INT_LEAST8_MAX	127
INT_LEAST16_MAX	32767
INT_LEAST32_MAX	2147483647
INT_LEAST64_MAX	9223372036854775807
UINT_LEAST8_MAX	255
UINT_LEAST16_MAX	65535
UINT_LEAST32_MAX	4294967295
UINT_LEAST64_MAX	18446744073709551615
INT_FAST8_MIN	-128
INT_FAST16_MIN	-32768
INT_FAST32_MIN	-2147483648
INT_FAST64_MIN	-9223372036854775808
INT_FAST8_MAX	127

Limit	Value
INT_FAST16_MAX	32767
INT_FAST32_MAX	2147483647
INT_FAST64_MAX	9223372036854775807
UINT_FAST8_MAX	255
UINT_FAST16_MAX	65536
UINT_FAST32_MAX	4294967295
UINT_FAST64_MAX	18446744073709551615
INTPTR_MIN	-2147483648
INTPTR_MAX	2147483647
UINTPTR_MAX	4284967295

The values of other integer types are as follows:

Constant	Value
PTRDIFF_MIN	-2147483648
PTRDIFF_MAX	2147483647
SIG_ATOMIC_MIN	-2147483648
SIG_ATOMIC_MAX	2147483647
SIZE_MAX	4284967295

<sys/stat.h>

There are no additional implementation-defined bits that can be ORed into S_{IRWXU} , S_{IRWXG} , and S_{IRWXO} .

<time.h>

The maximum possible clock jump for the system-wide monotonic clock is the same as the system clock resolution:

- for CPU targets operating at less than 40 MHz, this is 10 milliseconds
- for CPU targets operating at more than 40 Mhz, this is 1 millisecond

The system clock resolution can be set using the QNX-specific *ClockPeriod()* kernel call using the CLOCK_REALTIME clock.

System Interfaces

2.3. Error Numbers

The <errno.h> header file defines the following additional error numbers:

Number	Meaning
EADV	Advertise error
EBADE	Invalid exchange
EBADFD	FD invalid for this operation
EBADFSYS	Corrupted filesystem detected
EBADR	Invalid request descriptor
EBADRPC	RPC struct is bad
EBADRQC	Invalid request code
EBADSLT	Invalid slot
EBFONT	Bad font file
ECHRNG	Channel number out of range
ECOMM	Communication error on send
ECTRLTERM	Remap to the controlling terminal
EDEADLOCK	File locking deadlock
EENDIAN	Endian not supported
EFPOS	File position error
EHOSTDOWN	Host is down
EL2HLT	Level 2 halted
EL2NSYNC	Level 2 not synchronized
EL3HLT	Level 3 halted
EL3RST	Level 3 reset
ELIBACC	Can't access shared library
ELIBBAD	Accessing a corrupted shared library
ELIBEXEC	Attempting to exec a shared library
ELIBMAX	Attempting to link too many libraries
ELIBSCN	.lib section in a.out corrupted

Number	Meaning
ELNRNG	Link number out of range
EMORE	More to do, send message again
ENOANO	No anode
ENOCSI	No CSI structure available
ENOLIC	No license
ENONDP	Need an NDP to run
ENONET	Machine isn't on the network
ENOPKG	Package not installed
ENOREMOTE	Must be done on local machine
ENOTBLK	Block device required
ENOTUNIQ	Given name not unique
EOK	No error
EOWNERDEAD	The owner of a lock died while holding it
EPFNOSUPPORT	Protocol family not supported
EPROCUNAVAIL	Bad procedure call for program
EPROGMISMATCH	Program version wrong
EPROGUNAVAIL	RPC prog. not avail
EREMCHG	Remote address changed
EREMOTE	Object is remote
ERESTART	Restartable system call
ERPCMISMATCH	RPC version wrong
ESHUTDOWN	Can't send after socket shutdown
ESOCKTNOSUPPORT	Socket type not supported
ESRMNT	Srmount error
ESRVRFAULT	Server fault on message pass
ESTRPIPE	If pipe/FIFO, don't sleep in stream head
ETOOMANYREFS	Too many references: can't splice
EUNATCH	Protocol driver not attached

Number	Meaning
EUSERS	Too many users
EXFULL	Exchange full

See also errno in the QNX Neutrino C Library Reference.

2.4. Signal Concepts

If a subsequent occurrence of a pending signal is generated, the signal is delivered or accepted more than once if a handler has been set for the signal with SA_SIGINFO set.

A SIGBUS signal may be generated for a misaligned memory access:

- a 16-bit access using a pointer that isn't 16-bit aligned
- a 32-bit access using a pointer that isn't 32-bit aligned

2.4.2. Realtime Signal Generation and Delivery

The signal mask for a thread created to invoke the *sigev_notify_function* function (see sigevent) inherits the signal mask of the thread to which the signal is delivered.

2.4.3. Signal Actions

For SIGILL signals generated by the execution of an illegal instruction, the si_code field may contain one of the following:

Value	Meaning
ILL_ILLOPC	Illegal opcode is executed
ILL_PRVOPC	Instruction requires privileged CPU mode
ILL_COPROC	Co-processor instruction error

For SIGSEGV signals generated by an invalid memory access, the si_code field may contain one of the following:

Value	Meaning
SEGV_MAPERR	The address isn't mapped
SEGV_ACCERR	The mapping doesn't allow the attempted access

For SIGBUS signals generated by an invalid memory access, the si_code field may contain one of the following:

Value	Meaning
BUS_ADRALN	Invalid address alignment

Value	Meaning
BUS_ADRERR	Access to a non-existent area of a memory object
BUS_OBJERR	Hardware-specific bus error

For SIGTRAP signals generated by breakpoint or other debug traps, the si_code field may contain one of the following:

Value	Meaning
TRAP_BRKPT	Breakpoint trap
TRAP_TRACE	Trace trap

For SIGCLD signals generated during process termination or job control related events, the si_code field may contain one of the following:

Value	Meaning
CLD_EXITED	Process has exited
CLD_KILLED	Process was killed
CLD_DUMPED	Process terminated abnormally
CLD_STOPPED	Process has been stopped
CLD_CONTINUED	A stopped process has been continued

For SIGFPE signals generated for floating-point exceptions, the si_code field may contain one of the following:

Value	Meaning
FPE_INTDIV	Integer division by zero
FPE_INTOVF	Floating point overflow
FPE_FLTDIV	Floating point division by zero
FPE_FLTUND	Floating point underflow
FPE_FLTRES	Floating point inexact result
FPE_FLTINV	Invalid floating point operation
FPE_NOFPU	No floating point hardware or software emulator present
FPE_NOMEM	No memory for floating point context save area

2.5. Standard I/O Streams

When a file is opened with append mode, the file position indicator is initially positioned at the beginning of the file.

The characteristics of unbuffered and fully buffered streams are supported.

Fully buffered streams use all bytes in the allocated buffer.

Line buffered streams are supported for all file types.



As a QNX Neutrino extension, you can use the **STDIO_DEFAULT_BUFSIZE** environment variable to override BUFSIZ as the default buffer size for stream I/O. The value of **STDIO_DEFAULT_BUFSIZE** must be greater than that of BUFSIZ.

2.5.1. Interaction of File Descriptors and Standard I/O Streams

Input is seen exactly once provided the application follows the rules specified.

2.8. Realtime

2.8.3. Memory Management

Memory locking guarantees fixed translation between virtual addresses (as seen by the process) and physical addresses.

2.8.4. Processing Scheduling

No scheduling policies beyond those specified are implemented.

The resolution of the execution time clock for the SCHED_SPORADIC policy is the same as the system clock resolution:

- for CPU targets executing at less than 40 MHz, this is 10 milliseconds
- for CPU targets executing at more than 40 MHz, this is 1 millisecond

The system clock resolution can be set using the QNX-specific *ClockPeriod()* kernel call using the CLOCK_REALTIME clock.

The SCHED_OTHER policy behaves identically to the SCHED_RR policy.

2.8.5. Clocks and Timers

The maximum possible clock jump for the system-wide monotonic clock is the same as the system clock resolution:

- for CPU targets operating at less than 40 MHz, this is 10 milliseconds
- for CPU targets operating at more than 40 Mhz, this is 1 millisecond

The system clock resolution can be set using the QNX-specific *ClockPeriod()* kernel call using the CLOCK_REALTIME clock.

The resolution for time services based on a supported clock is the same as the resolution of that clock.

2.9.4. Thread Scheduling

The default scheduling contention scope is PTHREAD_SCOPE_SYSTEM.

The PTHREAD_SCOPE_PROCESS contention scope isn't supported.

The default value of the *inheritsched* attribute is PTHREAD_INHERIT_SCHED. This means the default *schedpolicy* and *schedparam* attributes are inherited from the parent thread.

The PTHREAD_SCOPE_PROCESS scheduling contention scope isn't supported.

The system determines the scheduling allocation domain size on a per-thread basis using the concept of a "runmask" that indicates the processors on which the thread can be scheduled.

The default runmask for a thread is set to allow scheduling on all processors.

You can set a thread's runmask in the following ways:

- You can use the QNX-specific slay utility to set the runmask for all threads in a specified process, or for a single specified thread in a process.
- You can use the QNX-specific *ThreadCtl()* kernel call to set the runmask for the calling thread.

For threads with scheduling allocation domains of size greater than one, the rules defined for SCHED_FIFO, SCHED_RR, and SCHED_SPORADIC are followed such that if the thread becomes the head of its thread list, the thread may become the runnable thread on any processor in its scheduling allocation domain if it has a higher priority than the running thread on one of those processors.

This may in turn result in the preempted thread's becoming the running thread on a different processor if that thread also has a scheduling allocation domain of size greater than one and its priority is higher than the running thread on one of the other processors in its scheduling allocation domain.

If a thread's scheduling allocation domain has a size greater than one, a runnable thread selects the processor on which it becomes the runnable thread as follows:

- 1. For each processor in the thread's scheduling allocation domain, find the processor whose running thread has the lowest priority that is less than this thread.
- **2.** If the search identifies only one processor, select that processor and make the thread the running thread on that processor.
- **3.** If the search identifies more than one processor, select the processor on which the thread previously ran before becoming a blocked thread.
- **4.** If the thread hadn't run on any of the selected processors before becoming a blocked thread, select the first processor that was found in the search.

For more information, see the Multicore Processing User's Guide .

No scheduling policies beyond SCHED_OTHER, SCHED_FIFO, SCHED_RR and SCHED_SPORADIC are implemented.

2.11. Tracing

The Trace (TRC) option isn't supported.

3. System Interfaces

This section describes how the QNX Neutrino RTOS conforms to POSIX with regards to system interfaces.

acos(), acosf(), and acosl()

For finite values not in the range [-1,1], acos(), acos(), and acos() return NaN. The return value for +/-Inf is NaN.

acosh(), acoshf(), acoshl()

For finite values of x < 1, acosh(), acosh(), and acosh() return NaN. The return value when x is -Inf is NaN.

asin(), asinf(), asinl()

For finite values not in the range [-1,1], asin(), asinf(), and asinf() return NaN. The return value for +/-Inf is NaN.

atan(), atanf(), atanhl()

For finite values of |x| > 1, atan(), atanf(), and atanhl() return NaN. The return value for +/-Inf is NaN.

calloc()

The *calloc()* function returns a unique pointer when the size of space requested is zero.

clock getres(), clock settime()

The resolution of all clocks, as returned by *clock_getres()*, is the same as the system clock resolution:

- for CPU targets executing at less than 40 MHz, the resolution is 10 milliseconds
- for CPU targets executing at more than 40 MHz, the resolution is 1 millisecond

The system clock resolution can be set using the QNX-specific *ClockPeriod()* kernel call using the CLOCK_REALTIME clock.

The clock_settime() function is supported only for the CLOCK_REALTIME clock.

Appropriate privileges for setting the CLOCK_REALTIME clock are obtained by executing with a user ID equal to 0.

cos(), cosf(), cosl()

When x is \pm -Inf, cos(), cosf(), and cosl() return NaN.

erfc(), erfcf(), erfcl()

For a correct value that would cause an underflow, *erfc()*, *erfcf()*, and *erfcl()* return 0.0.

exp(), expf(), expl()

For a correct value that would cause an underflow, exp(), exp(), and exp() return 0.0.

exp2(), exp2f(), exp2l()

For a correct value that would cause an underflow, exp2(), exp2f(), and exp2l() return 0.0.

fclose()

The *fclose()* may give an EIO error under the following circumstances:

- An I/O error occurred when writing cached data to the underlying media.
- An I/O error occurred when updating metadata on the underlying media.
- The filesystem resides on a removable media device, and the media has been forcibly removed.

fcntl()

The following addition values for the *cmd* argument to *fcntl()* are defined:

Value	Meaning
F_ALLOCSP	Allocate storage space for the section of the file specified by the <i>I_start</i> , <i>I_len</i> , and <i>I_whence</i> fields of a struct flock structure pointed to by the argument to <i>fcntl()</i> .
F_FREESP	Free storage space for the section of the file specified by the <i>I_start</i> , <i>I_len</i> , and <i>I_whence</i> fields of a struct flock structure pointed to by the argument to <i>fcntl()</i> .
F_ALLOCSP64	Same as F_ALLOCSP, except that the argument is a pointer to a struct flock64 structure, where the <i>I_start</i> and <i>I_len</i> fields are 64-bit values.

Value	Meaning
F_FREESP64	Same as F_FREESP, except that the argument is a pointer to a struct flock64 structure, where the <i>I_start</i> and <i>I_len</i> fields are 64-bit values.
F_GETLK64	Same as F_GETLK, except that the argument is a pointer to a struct flock64 structure, where the <i>I_start</i> and <i>I_len</i> fields are 64-bit values.
F_SETLK64	Same as F_SETLK, except that the argument is a pointer to a struct flock64 structure, where the <i>I_start</i> and <i>I_len</i> fields are 64-bit values.
F_SETLKW64	Same as F_GETLKW, except that the argument is a pointer to a struct flock64 structure, where the <i>l_start</i> and <i>l_len</i> fields are 64-bit values.

fdim(), fdimf(), fdiml()

When x - y is positive and underflows, fdim(), fdimf(), and fdimI() return 0.0.

fegetexceptflag()

The representation of the floating-point status flags used by *fegetexceptflag()* depends on the CPU architecture. For x86 processors, the following values are used:

Value	Meaning
0x01	Invalid operation exception
0x02	Denormalization exception
0x04	Division-by-zero exception
0x08	Overflow exception
0x10	Underflow exception
0x20	Inexact exception

feraiseexcept()

The *feraiseexcept()* function doesn't raise the inexact floating-point exception whenever it raises the overflow or underflow floating point exception.

fflush()

The fflush() may return an EIO error under the following circumstances:

- an I/O error when writing cached data to the underlying media
- an I/O error when updating metadata on the underlying media
- the filesystem resides on a removable media device, and the media has been forcibly removed

fgetc()

The *fgetc()* function may return an EIO error if the filesystem resides on a removable media device, and the media has been forcibly removed.

fma(), fmaf(), fmal()

When x multiplied by y is an exact infinity, and z is also an infinity with the opposite sign, fma(x), fma(x), and fma(x) return NaN.

The return value when one of x and y is infinite, the other is zero, and z isn't a NaN is NaN.

fmod(), fmodf(), fmodl()

For a correct value that would cause an underflow, fmod(), fmodf(), and fmodl() return 0.0. The return value when y is zero is NaN. The return value when x is infinite is NaN.

fpclassify()

There are no additional classification categories for the *fpclassify()* function, other than NaN, infinite, normal, subnormal and zero.

fprintf()

For the *fprintf()* function, the low-order digit rounding for numbers in double format is round-to-nearest.

For double arguments, the styles for representing infinity and NaN are as follows:

Value	Format conversion specifier	Representation
Infinity	f	[-]inf
Infinity	F	[-]INF
NaN	f	[-]nan
NaN	F	[-]NAN

The value of a pointer for the $\mathfrak p$ conversion specifier is converted to a sequence of hexadecimal digits. The sequence is padded with leading zeroes if the 0 flag is specified.

fputc()

The *fputc()* function may return an EIO error if the filesystem resides on a removable media device, and the media has been forcibly removed.

freopen()

The following mode changes are permitted for freopen():

- wto a
- a to w
- r+ to r
- r+ to w
- r+ to a
- r+ to w+
- r+ to a+
- w+ to r
- w+ to w
- w+ to a
- w+ to r+
- w+ to w+
- w+ to a+
- a+ to r
- a+ to w
- a+ to a
- a+ to r+
- a+ to w+

fscanf()

A – in the scanlist for *fscanf()* that isn't the first character, nor the second where the first character is a ^, nor the last character, defines a range of characters to be matched. This range consists of characters numerically greater than or equal to the character before the –, and numerically less than or equal to the character after the –.

The ${\tt p}$ conversion specifier matches a sequence of hexadecimal digits. If the sequence contains more than 8 digits, the conversion is performed only on the last 8 digits in the sequence.

fseeko()

The *fseeko()* function returns EOF on devices that are incapable of seeking. It sets *errno* to either ESPIPE or ENOSYS, depending on the implementation of the device or filesystem.

An EIO error may be returned if the filesystem resides on a removable media device, and the media has been forcibly removed.

fsetpos()

The *fsetpos()* function returns EOF on devices that are incapable of seeking. It sets *errno* to either ESPIPE or ENOSYS, depending on the implementation of the device or filesystem.

An EIO error may be returned if the filesystem resides on a removable media device, and the media has been forcibly removed.

fstat()

No additional or alternative file access control mechanisms are provided for the *fstat()* function.

fsync()

The *fsync()* function causes all buffered data for the file to be written to the storage device; the file modification times are updated.

kill()

No extended security controls are provided for the *kill()* function.

Idexp(), Idexpf(), Idexpl()

For a correct value that would cause an underflow, <code>ldexp()</code>, <code>ldexpf()</code>, and <code>ldexpl()</code> return 0.0.

log(), logf(), logl()

For finite values of x less than zero, log(), logf(), and logl() return NaN. The return value when x is -Inf is NaN.

log10(), log10f(), log10l()

For finite values of x less than zero, log10(), log10f(), and log10l() return NaN. The return value when x is -Inf is NaN.

log1p(), log1pf(), log1pl()

For finite values of x less than -1, log1p(), log1pf(), and log1pl() return NaN. The return value when x is -Inf is NaN.

log2(), log2f(), log2l()

For finite values of x less than 0, log2(), log2f(), and log2l() return NaN. The return value when x is -Inf is NaN.

Iseek()

The *Iseek()* function returns -1 on devices that are incapable of seeking. It sets *errno* to either ESPIPE or ENOSYS, depending on the implementation of the device or filesystem.

malloc()

The *malloc()* function returns a unique pointer when the size of space requested is zero.

mkdir()

In the *mkdir()* function, the following bits, in addition to file permission bits, behave as follows:

S ISGID

Files and directories created within this directory have the group ID of this directory instead of the group ID of the process creating the file or directory.

S ISVTX

Files can be removed or renamed only if one or more of the following is true:

- The user owns the file.
- The user owns the directory.
- The file is writable by the user.
- The user is privileged.

mlock()

There's no limit on the amount of memory that a process may lock by calling *mlock()*, other than the amount of physical memory in the system.

mlockall(), munlockall()

Locking implied by MCL_FUTURE in a call to *mlockall()* or *munlockall()* is performed during an *mmap()* operation. If this exceeds the amount of available physical memory, that *mmap()* call fails with an ENOMEM error.

There is no limit on the amount of memory that a process may lock other than the amount of physical memory in the system.

mmap()

The return value for a successful *mmap()* call is a pointer whose value is a valid address in the process virtual address space. This establishes translations from the virtual address range to the physical memory addresses corresponding to the specified section of the memory object.

The return value for an unsuccessful mmap() call is MAP_FAILED, whose value is ((void *) -1).

The implementation supports MAP_FIXED.

When MAP_FIXED isn't set, addr is used as a hint to derive the virtual address returned:

- If no mapping currently exists in the range [addr, addr + len), addr is used.
- Otherwise, the system searches for the first available unused area of the process's address space that's large enough to hold the specified size.

There are no limits on the number of memory regions that can be mapped other than the limit imposed on the process's virtual address space.

mq_open()

When the *name* argument doesn't begin with a slash, *mq_open()* creates or opens a message queue with the specified name relative to the current working directory of the calling process. This name appears in the file system and is visible to other functions that take pathnames as arguments.

When the name begins with a slash, the message queue name isn't visible in the filesystem.

Additional slash characters other than the leading slash simply form the name used to identify the message queue:

- If there's a leading slash, this forms a name that doesn't appear in the filesystem.
- If there's no leading slash, this forms a pathname relative to the current directory
 and the name appears in the filesystem. The intermediate directories correspond
 to each slash-separated component of name, and have only read and search
 permissions.

Any bits other file permission bits in the mode argument are ignored.

When $mq_open()$ is called with mq_attr set to NULL, the default message queue attributes are set as follows:

Attribute	Value
mq_maxmsg	1024
mq_msgsize	4096

mq_receive()

If the value of *msg_len* passed to *mq_receive()* is greater than SSIZE_MAX, the message is stored in the supplied buffer, and the length of the selected message is returned.

mq_setattr()

The $mq_setattr()$ function doesn't OR any implementation-defined flags with O_NONBLOCK for the mq_flags member.

open()

The O_TRUNC flag for open() has no effect on file types other than regular files.

posix_trace_*()

The Trace (TRC) option isn't supported, so QNX Neutrino doesn't support the following:

- posix_trace_attr_getlogsize()
- posix_trace_attr_getmaxdatasize()
- posix_trace_attr_getlogstreamsize()
- posix_trace_create_withlog()
- posix_trace_flush,posix_trace_shutdown()
- posix trace eventset()
- posix_trace_getnext_event()
- posix trace trygetnext event()
- posix_trace_timedgetnext_event()

pow(), powf(), powl()

For finite values of x less than 0 and finite non-integer values of y, pow(), powf(), and powl() return NaN. The return value for a correct value that would cause underflow is 0.0.

pthread_attr_destroy()

The QNX Neutrino implementation of *pthread_attr_destroy()* doesn't set an invalid value.

pthread_condattr_destroy(), pthread_condattr_init()

There are no additional implementation-defined condition variable attributes for *pthread_condattr_destroy()* and *pthread_condattr_init()* to destroy or initialize, and no additional functions for getting or setting such attributes.

pthread_getschedparam(), pthread_setschedparam()

The SCHED_OTHER policy is implemented identically to the SCHED_RR policy. The *pthread_getschedparam()* and *pthread_setschedparam()* functions affect only the priority scheduling parameter.

The *pthread_setschedparam()* function supports dynamically changing the policy to SCHED_SPORADIC.

pthread_rwlock_rdlock()

The Thread Execution Scheduling (TPS) option is supported, so a thread that calls *pthread_rwlock_rdlock()* doesn't acquire the lock if a writer holds the lock or there are writers blocked on the lock. The maximum number of simultaneous read locks is 2147483647.

pthread_rwlock_unlock()

The TPS option is supported, so if threads executing with the SCHED_FIFO, SCHED_RR, or SCHED_SPORADIC are waiting on a lock, they acquire the lock in

priority order when a call to *pthread_rwlock_unlock()* means that the lock becomes available. For threads of equal priority, write locks take precedence over read locks.

pthread_rwlockattr_getpshared(), pthread_rwlockattr_setpshared()

There are no additional implementation-defined read-write lock attributes, so there are no functions in addition to *pthread_rwlockattr_getpshared()* and *pthread_rwlockattr_setpshared()* for getting or setting such attributes.

read()

For special device files, a subsequent *read()* request after the end-of-file condition has been reached results in 0 bytes being read.

When the value of *nbyte* is greater than SSIZE_MAX, the number of bytes read is limited to LONG_MAX – *offset*, where *offset* is the current file offset.

An EIO error may be returned if the filesystem resides on a removable media device, and the media has been forcibly removed.

remainder(), remainderf(), remainderl()

When x is infinite or y is zero and the other is non-NaN, remainder(), remainder(), and remainder() return NaN.

remquo(), remquof(), remquol()

For remquo(), remquof(), and remquol(), the value of n used to determine the magnitude of the result is 31. The return value when x is +/-Inf or y is zero and the other argument is non-NaN is NaN.

rint(), rintf(), rintl()

The current rounding mode used is determined by invoking the *fegetround()* function in the implementation of the *rint()*, *rintf()*, and *rintl()* functions.

scalbin(), scalbinf(), scalbin(), scalbin(), scalbin()

When a correct value would cause an underflow, *scalbln()*, *scalbln()*, *scalbln()*, *scalbln()*, and *scalbln()* return 0.0.

sem_open()

When the *name* argument to *sem_open()* doesn't begin with a slash character, the semaphore is created with a name that consists of the specified name prepended with the current working directory.

Additional slash characters other than the leading slash character aren't interpreted, and the specified name, including these slash characters, is used to identify the semaphore.

setlocale()

Valid strings for the locale argument to setlocale() are:

- "C"
- "POSIX"
- "C-TRADITIONAL"
- 11 11
- the name of a locale in the set of currently defined locales

When the locale string is set to "", the default native environment is the POSIX locale.

shm_open()

When the *name* argument doesn't begin with a slash, *shm_open()* creates or opens a shared memory object with the specified name relative to the current working directory of the calling process. This name appears in the file system and is visible to other functions that take pathnames as arguments.

Additional slash characters in the name cause the shared memory object be created with a pathname equivalent to name:

- If there's an initial slash, this specifies an absolute pathname.
- If there's no initial slash, this specifies a pathname relative to the current working directory.

The intermediate directories corresponding to each slash-separated component have only read and search permissions.

sigaction()

When SA_SIGINFO isn't set in the sa_flags member of the sigaction structure passed to sigaction(), the disposition of subsequent occurrences of a pending signal aren't affected.

signal()

If you've used *signal()* to register a function to handle a signal, then when the signal occurs, it's blocked.

SIGBUS may be generated for a misaligned memory access:

- a 16-bit access using a pointer that isn't 16-bit aligned
- a 32-bit access using a pointer that isn't 32-bit aligned

sigwait()

When there are multiple pending instances of a single signal number prior to a call to *sigwait()*, all but one of the pending instances remain pending after a successful return of the *sigwait()* function.

sin(), sinf(), sinl()

If x is \pm -Inf, sin(), sinf(), and sinl() return NaN.

sqrt(), sqrtf(), sqrtl()

For finite values of x < -0, sqrt(), sqrtf(), and sqrtl() return NaN. The return value when x is -Inf is NaN.

stat()

No additional or alternative file access control mechanisms are provided, so there are no implementation-defined reasons for *stat()* to fail.

strtod(), strtof(), strtold()

The *strtod()*, *strtof()*, and *strtold()* functions don't interpret an n-char sequence, and the result is equivalent to specifying nan or NAN without the n-char sequence.

No other subject sequences beyond those specified are accepted.

strtol(), strtoll()

The *strtol()* and *strtoll()* don't accept any other subject sequences beyond those specified.

strtoul(), strtoull()

The *strtoul()* and *strtoull()* functions don't accept any other subject sequences beyond those specified by the standard.

tan(), tanf(), tanl()

For a correct value that would cause an underflow, tan(), tanf(), and tanl() return 0.0. The return value when x is \pm -Inf is NaN.

tgamma(), tgammaf(), tgammal()

When x is a negative integer, tgamma(), tgammaf(), and tgammal() return NaN. The return value when x is -Inf is NaN.

timer_create()

The *timer_create()* function fails if the clock ID corresponds to the CPU-time clock of a process or thread different from the process or thread invoking the function.

tmpnam()

After TMP_MAX names have been generated, *tmpnam()* reuses names that have been previously generated:

- If a file with the new name doesn't exist, the new name is returned.
- If a file with the new name does exist, a default pathname with a basename of 000000 is returned.

tzset()

If the **TZ** environment variable isn't set when you call <code>tzset()</code>, the value of the implementation-defined <code>_CS_TIMEZONE</code> confstr() string is used as the default time zone.

If no _CS_TIMEZONE string is set, the default timezone UTCO is used.

uname()

The communications network for the nodename reported by *uname()* is primarily a TCP/IP network.

If the networking server has QNX Neutrino Transparent Distributed Processing ("Qnet") enabled, the nodename is used to identify the node within the network of nodes that are able to communicate via the Qnet protocol.

Each member of the utsname structure is a 257-byte array:

This member:	Contains the:
sysname[]	OS name: "QNX"
nodename[]	Host name in an unspecified format
release[]	OS release level "x.y.z"
version[]	Build date of the OS kernel as generated by a date +%Y/%m/%d-%T%Z command
machine[]	Name of the hardware platform, in an unspecified format

write()

When the value of *nbyte* is greater than SSIZE_MAX, the number of bytes written by the *write()* function is limited to LONG_MAX – *offset*, where *offset* is the current file offset.

An EIO error may be returned if the filesystem resides on a removable media device, and the media has been forcibly removed.

Non-POSIX functions with POSIX-sounding names

The following functions have POSIX-sounding names, but aren't part of a POSIX standard. Some have a suffix of "_np", which stands for for "non-POSIX."

- execlpe()
- execvpe()
- fcloseall()
- fgetchar()
- flock()
- fputchar()
- gamma()
- gammaf()
- gammaf_r()
- gamma_r()
- isfdtype()
- Itrunc()
- mallopt()
- mem_offset()
- memalign()
- memcpyv()
- memicmp()
- mmap_device_io()
- mmap_device_memory()
- mq_timedreceive_monotonic()
- mq_timedsend_monotonic()
- munmap_device_io()
- munmap_device_memory()
- munmap_flags()
- openfd()
- posix_spawn_file_actions_init()
- posix_spawnattr_addpartid()
- posix_spawnattr_addpartition()
- posix_spawnattr_getnode()
- posix_spawnattr_getpartid()
- posix_spawnattr_getrunmask()
- posix_spawnattr_getsigignore()
- posix_spawnattr_getstackmax()
- posix_spawnattr_getxflags()

- posix_spawnattr_setnode()
- posix_spawnattr_setrunmask()
- posix_spawnattr_setstackmax()
- posix_spawnattr_setxflags()
- pthread_abort()
- pthread_attr_getstacklazy()
- pthread_attr_getstackprealloc()
- pthread_attr_setstacklazy()
- pthread_attr_setstackprealloc()
- pthread_getname_np()
- pthread_mutex_timedlock_monotonic()
- pthread_mutex_wakeup_np()
- pthread_mutexattr_getrecursive()
- pthread_mutexattr_getwakeup_np()
- pthread_mutexattr_setrecursive()
- pthread_mutexattr_setwakeup_np()
- pthread_setname_np()
- pthread_sleepon_broadcast()
- pthread_sleepon_lock()
- pthread_sleepon_signal()
- pthread_sleepon_timedwait()
- pthread_sleepon_unlock()
- pthread_sleepon_wait()
- pthread_timedjoin()
- pthread_timedjoin_monotonic()
- sched_get_priority_adjust()
- sem_timedwait_monotonic()
- shm_ctl()
- shm_ctl_special()
- sigblock()
- sigmask()
- sigsetmask()
- sigunblock()
- spawn()
- spawnl()
- spawnle()
- spawnlp()
- spawnlpe()
- spawnp()
- spawnv()

- spawnve()
- spawnvp()
- spawnvpe()
- straddstr()
- strcmpi()
- stricmp()
- strlcat()
- strlcpy()
- strlwr()
- strnicmp()
- strnset()
- strrev()
- strsep()
- strset()
- strsignal()
- strupr()
- tcdropline()
- tcgetsize()
- tcinject()
- tcischars()
- tcsetsid()
- tcsetsize()
- tell()
- timer_getexpstatus()
- timer_timeout()
- timer_timeout_r()
- wait3()
- wait4()
- writeblock()

For more information about classification, see the Full Safety Information appendix in the HTML version of the QNX Neutrino *C Library Reference*, as well as the entries for individual functions.

Chapter 12 Using GDB

QNX Neutrino-specific extensions

The QNX Neutrino implementation of GDB includes some extensions:

target qnx

Set the target; see "Setting the target (p. 315)."

set nto-inherit-env

Set where the remote process inherits its environment from; see "*Your program's environment* (p. 317)."

set nto-cwd

Set the working directory for the remote process; see "Starting your program (p. 316)."

set nto-timeout

Set the timeout for remote reads; see "Setting the target (p. 315)."

upload local_path remote_path

Send a file to a remote target system.

download remote_path local_path

Retrieve a file from a remote target system.

info pidlist

Display a list of processes and their process IDs on the remote system

info meminfo

Display a list of memory-region mappings (shared objects) for the current process being debugged.

A quick overview of starting the debugger

To debug an application, do the following:

1. Start GDB, but don't specify the application as an argument:

gdb

2. Load the symbol information for the application:

file my_application

3. If you're debugging remotely, set the target:

```
target qnx com_port_specifier | host:port | pty
```

4. If you're debugging remotely, send the application to the target:

```
upload my_application /tmp/my_application
```

5. Set any breakpoints. For example, to set a breakpoint in *main()*:

```
set break main
```

6. Start the application:

run

GDB commands

You can abbreviate a GDB command to the first few letters of the command name, if that abbreviation is unambiguous; and you can repeat certain GDB commands by typing just **Enter**. You can also use the **Tab** key to get GDB to fill out the rest of a word in a command (or to show you the alternatives available, if there's more than one possibility).

You may also place GDB commands in an initialization file and these commands will be run before any that have been entered via the command line. For more information, see:

- gdb in the Utilities Reference
- the GNU documentation for GDB

Command syntax

A GDB command is a single line of input. There's no limit on how long it can be. It starts with a command name, which is followed by arguments whose meaning depends on the command name. For example, the command step accepts an argument that is the number of times to step, as in step 5. You can also use the step command with no arguments. Some command names don't allow any arguments.

GDB command names may always be truncated if that abbreviation is unambiguous. Other possible command abbreviations are listed in the documentation for individual commands. In some cases, even ambiguous abbreviations are allowed; for example, s is specifically defined as equivalent to step even though there are other commands whose names start with s. You can test abbreviations by using them as arguments to the help command.

A blank line as input to GDB (typing just **Enter**) means to repeat the previous command. Certain commands (for example, run) don't repeat this way; these are commands whose unintentional repetition might cause trouble and which you're unlikely to want to repeat.

When you repeat the list and x commands with **Enter**, they construct new arguments rather than repeat exactly as typed. This permits easy scanning of source or memory.

GDB can also use **Enter** in another way: to partition lengthy output, in a way similar to the common utility more. Since it's easy to press one **Enter** too many in this situation, GDB disables command repetition after any command that generates this sort of display.

Any text from a # to the end of the line is a comment. This is useful mainly in command files.

Command completion

GDB can fill in the rest of a word in a command for you if there's only one possibility; it can also show you what the valid possibilities are for the next word in a command, at any time. This works for GDB commands, GDB subcommands, and the names of symbols in your program.

Press the **Tab** key whenever you want GDB to fill out the rest of a word. If there's only one possibility, GDB fills in the word, and waits for you to finish the command (or press **Enter** to enter it). For example, if you type:

```
(gdb) info bre Tab
```

GDB fills in the rest of the word breakpoints, since that is the only info subcommand beginning with bre:

```
(gdb) info breakpoints
```

You can either press **Enter** at this point, to run the info breakpoints command, or backspace and enter something else, if breakpoints doesn't look like the command you expected. (If you were sure you wanted info breakpoints in the first place, you might as well just type **Enter** immediately after info bre, to exploit command abbreviations rather than command completion).

If there's more than one possibility for the next word when you press **Tab**, GDB sounds a bell. You can either supply more characters and try again, or just press **Tab** a second time; GDB displays all the possible completions for that word. For example, you might want to set a breakpoint on a subroutine whose name begins with make_, but when you type:

```
b make_Tab
```

GDB just sounds the bell. Typing **Tab** again displays all the function names in your program that begin with those characters, for example:

```
make_a_section_from_file
make_abs_section
make_blockvector
make_cleanup
make_command
(qdb) b make_
make_environ
make_function_type
make_pointer_type
make_reference_type
make_symbol_completion_list
```

After displaying the available possibilities, GDB copies your partial input (b make_in the example) so you can finish the command.

If you just want to see the list of alternatives in the first place, you can press **Esc** followed by **?** (rather than press **Tab** twice).

Sometimes the string you need, while logically a "word", may contain parentheses or other characters that GDB normally excludes from its notion of a word. To permit word completion to work in this situation, you may enclose words in ' (single quote marks) in GDB commands.

The most likely situation where you might need this is in typing the name of a C++ function. This is because C++ allows function overloading (multiple definitions of the same function, distinguished by argument type). For example, when you want to set a breakpoint you may need to distinguish whether you mean the version of name that takes an int parameter, name(int), or the version that takes a float parameter, name(float). To use the word-completion facilities in this situation, type a single quote ' at the beginning of the function name. This alerts GDB that it may need to consider more information than usual when you press **Tab**, or **Esc** followed by **?**, to request word completion:

```
(gdb) b 'bubble(Esc?
bubble(double,double) bubble(int,int)
(gdb) b 'bubble(
```

In some cases, GDB can tell that completing a name requires using quotes. When this happens, GDB inserts the quote for you (while completing as much as it can) if you don't type the quote in the first place:

```
(gdb) b bub Tab
```

GDB alters your input line to the following, and rings a bell:

```
(gdb) b 'bubble(
```

In general, GDB can tell that a quote is needed (and inserts it) if you haven't yet started typing the argument list when you ask for completion on an overloaded symbol.

Getting help

You can always ask GDB itself for information on its commands, using the command help.

help or h

You can use help (h) with no arguments to display a short list of named classes of commands:

```
(gdb) help
List of classes of commands:
running -- Running the program
stack -- Examining the stack
data -- Examining data
breakpoints -- Making program stop at certain
points
files -- Specifying and examining files
status -- Status inquiries
support -- Support facilities
user-defined -- User-defined commands
aliases -- Aliases of other commands
obscure -- Obscure features
Type "help" followed by a class name for a list
of commands in that class.
Type "help" followed by command name for full
documentation.
Command name abbreviations are allowed if
unambiguous.
(gdb)
```

help class

Using one of the general help classes as an argument, you can get a list of the individual commands in that class. For example, here's the help display for the class status:

```
(gdb) help status
Status inquiries.
List of commands:
show -- Generic command for showing things set
with "set"
info -- Generic command for printing status
Type "help" followed by command name for full
documentation.
Command name abbreviations are allowed if
unambiguous.
(gdb)
```

help command

With a command name as help argument, GDB displays a short paragraph on how to use that command.

complete args

The complete args command lists all the possible completions for the beginning of a command. Use args to specify the beginning of the command you want completed. For example:

```
results in:

info
inspect
ignore
```

This is intended for use by GNU Emacs.

In addition to help, you can use the GDB commands info and show to inquire about the state of your program, or the state of GDB itself. Each command supports many topics of inquiry; this manual introduces each of them in the appropriate context. The listings under info and show in the index point to all the sub-commands.

info

This command (abbreviated i) is for describing the state of your program. For example, you can list the arguments given to your program with info args, list the registers currently in use with info registers, or list the breakpoints you've set with info breakpoints. You can get a complete list of the info sub-commands with help info.

set

You can assign the result of an expression to an environment variable with set. For example, you can set the GDB prompt to a \$-sign with set prompt \$.

show

In contrast to info, show is for describing the state of GDB itself. You can change most of the things you can show, by using the related command set; for example, you can control what number system is used for displays with set radix, or simply inquire which is currently in use with show radix.

To display all the settable parameters and their current values, you can use show with no arguments; you may also use info set. Both commands produce the same display.

Here are three miscellaneous show subcommands, all of which are exceptional in lacking corresponding set commands:

show version

Show what version of GDB is running. You should include this information in GDB bug-reports. If multiple versions of GDB are in use at your site, you may occasionally want to determine which version of GDB you're running; as GDB evolves, new commands are introduced, and old ones may wither away. The version number is also announced when you start GDB.

show copying

Display information about permission for copying GDB.

show warranty

Display the GNU "NO WARRANTY" statement.

Running programs under GDB

To run a program under GDB, you must first generate debugging information when you compile it. You may start GDB with its arguments, if any, in an environment of your choice. You may redirect your program's input and output, debug an already running process, or kill the process being debugged.

Compiling for debugging

Debugging information is stored in the object file; it describes the data type of each variable or function and the correspondence between source line numbers and addresses in the executable code.

To request debugging information, specify the -g option when you run the compiler.

GCC, the GNU C compiler, supports -g with or without -O, making it possible to debug optimized code. We recommend that you *always* use -g whenever you compile a program. You may think your program is correct, but there's no sense in pushing your luck.

When you debug a program compiled with -g -O, remember that the optimizer is rearranging your code; the debugger shows you what is really there. Don't be too surprised when the execution path doesn't exactly match your source file! An extreme example: if you define a variable, but never use it, GDB never sees that variable—because the compiler optimizes it out of existence.

Some things don't work as well with -g -O as with just -g, particularly on machines with instruction scheduling. If in doubt, recompile with -g alone, and if this fixes the problem, please report it to us — and include a test case.

Setting the target

If you're debugging locally, you don't need to specify the target (or you can specify target procfs).

If you're debugging remotely, you need to specify the target to use:

```
target qnx com_port_specifier | host:port | pty
```

The pty option spawns a pdebug server on the local machine and connects via a pty.



The devc-pty manager must be running on the machine that's running pdebug, and a ptyp/ttyp pair must be available.

Starting your program

The execution of a program is affected by certain information it receives from its superior. GDB provides ways to specify this information, which you must do *before* starting your program. (You can change it after starting your program, but such changes affect your program the *next* time you start it.) This information may be divided into the following categories:

set nto-cwd path

Specify the remote process's working directory. You should do this before starting your program.

run or r

Use the run command to start your program under GDB. You must first specify the program name with an argument to GDB (see the description of the gdb utility).

The run creates an inferior process and makes that process run your program.

Arguments

Specify the arguments to give your program as the arguments of the run command. If a shell is available on your target, the shell is used to pass the arguments, so that you may use normal conventions (such as wildcard expansion or variable substitution) in describing the arguments. In Unix systems, you can control which shell is used with the **SHELL** environment variable. See "Your program's arguments (p. 317)."

Environment

Your program normally inherits its environment from GDB, but you can use the GDB commands set environment and unset environment to change parts of the environment that affect your program. See "Your program's environment (p. 317)."



While input and output redirection work, you can't use pipes to pass the output of the program you're debugging to another program; if you attempt this, GDB is likely to wind up debugging the wrong program.

If the modification time of your symbol file has changed since the last time GDB read its symbols, GDB discards its symbol table and reads it again. When it does this, GDB tries to retain your current breakpoints.

Here's an example of starting a program for local debugging:

```
(gdb) file /tmp/helloworld Reading symbols from /tmp/helloworld...done.
```

Here's an example of starting the program for remote debugging:

```
(gdb) target qnx mytst:8000
Remote debugging using mytst:8000
Remote target is little-endian
(gdb) file /tmp/helloworld
Reading symbols from /tmp/helloworld...done.
(gdb) upload /tmp/helloworld /tmp/helloworld
(gdb) b main
Breakpoint 1 at 0x804860c: file ./main.c, line 5.
(gdb) r
Starting program:
Remote: /tmp/helloworld
Breakpoint 1, main () at ./main.c:5
5 {
(gdb)
```

If your communication line is slow, you might need to set the timeout for remote reads:

```
set nto-timeout time
```

where *time* is the timeout, in seconds. The default is 10 seconds.

Your program's arguments

The arguments to your program can be specified by the arguments of the run command.

A run command with no arguments uses the same arguments used by the previous run, or those set by the set args command.

set args

Specify the arguments to be used the next time your program is run. If set args has no arguments, run executes your program with no arguments. Once you've run your program with arguments, using set args before the next run is the only way to run it again without arguments.

show args

Show the arguments to give your program when it's started.

Your program's environment

The *environment* consists of a set of environment variables and their values. Environment variables conventionally record such things as your user name, your home directory, your terminal type, and your search path for programs to run. Usually you set up environment variables with the shell and they're inherited by all the other

programs you run. When debugging, it can be useful to try running your program with a modified environment without having to start GDB over again.

set nto-inherit-env Value

If *value* is 0, the process inherits its environment from GDB. If *value* is 1 (the default), the process inherits its environment from pdebug.

path directory

Add *directory* to the front of the PATH environment variable (the search path for executables), for both GDB and your program. You may specify several directory names, separated by a colon (:) or whitespace. If *directory* is already in the path, it's moved to the front, so it's searched sooner.

You can use the string \$cwd to refer to the current working directory at the time GDB searches the path. A period (.) refers to the directory where you executed the path command. GDB replaces the period in the *directory* argument by the current path before adding *directory* to the search path.

show paths

Display the list of search paths for executables (the PATH environment variable).

show environment [varname]

Print the value of environment variable *varname* to be given to your program when it starts. If you don't supply *varname*, print the names and values of all environment variables to be given to your program. You can abbreviate environment as env.

set environment varname [=] value

Set environment variable *varname* to *value*. The value changes for your program only, not for GDB itself. The *value* may be any string; the values of environment variables are just strings, and any interpretation is supplied by your program itself. The *value* parameter is optional; if it's eliminated, the variable is set to a null value.

For example, this command:

set env USER=foo

tells a Unix program, when subsequently run, that its user is named foo.

unset environment Varname

Remove variable *varname* from the environment to be passed to your program.

This is different from set env *varname* =, in that unset environment

removes the variable from the environment, rather than assign it an empty value.

Your program's input and output

By default, the program you run under GDB does input and output to the same terminal that GDB uses. GDB switches the terminal to its own terminal modes to interact with you, but it records the terminal modes your program was using and switches back to them when you continue running your program.

You can redirect your program's input and/or output using shell redirection with the run command. For example,

run > outfile

starts your program, diverting its output to the file outfile.

Debugging an already-running process

To use attach, you must have permission to send the process a signal.

attach process-id

This command attaches to a running process—one that was started outside GDB. (The info files command shows your active targets.) The command takes as its argument a process ID. To find out a process ID, use the pidin utility (see the *Utilities Reference*), or use GDB's info pidlist command.

The attach command doesn't repeat if you press **Enter** a second time after executing the command.

When using attach, you should first use the file command to specify the program running in the process and load its symbol table.

The first thing GDB does after arranging to debug the specified process is to stop it. You can examine and modify an attached process with all the GDB commands that are ordinarily available when you start processes with run. You can insert breakpoints; you can step and continue; you can modify storage. If you want the process to continue running, use the continue command after attaching GDB to the process.

detach

When you've finished debugging the attached process, you can use the detach command to release it from GDB control. Detaching the process continues its execution. After the detach command, that process and GDB become completely independent once more, and you're ready to attach another process or start one with run. The detach command doesn't repeat if you press **Enter** again after executing the command.

If you exit GDB or use the run command while you have an attached process, you kill that process. By default, GDB asks for confirmation if you try to do either of these things; you can control whether or not you need to confirm by using the set confirm command.

Killing the process being debugged

This command is useful if you wish to debug a core dump instead of a running process. GDB ignores any core dump file while your program is running.

kill

Kill the process being debugged.

The kill command is also useful if you wish to recompile and relink your program. With QNX Neutrino, it's possible to modify an executable file while it's running in a process. If you want to run the new version, kill the current process; when you next type run, GDB notices that the file has changed, and reads the symbol table again (while trying to preserve your current breakpoint settings).

Debugging programs with multiple threads

In QNX Neutrino, a single program may have more than one *thread* of execution. Each thread has its own registers and execution stack, and perhaps private memory.

GDB provides these facilities for debugging multithreaded programs:

- thread *threadno*, a command to switch between threads
- info threads, a command to inquire about existing threads
- thread apply [threadno] [all] args, a command to apply a command to a list of threads
- thread-specific breakpoints

The GDB thread debugging facility lets you observe all threads while your program runs—but whenever GDB takes control, one thread in particular is always the focus of debugging. This thread is called the *current thread*. Debugging commands show program information from the perspective of the current thread.

GDB associates its own thread number—always a single integer—with each thread in your program.

info threads

Display a summary of all threads currently in your program. GDB displays for each thread (in this order):

- 1. Thread number assigned by GDB
- 2. Target system's thread identifier (systag)
- **3.** Current stack frame summary for that thread.

An asterisk * to the left of the GDB thread number indicates the current thread. For example:

thread threadno

Make thread number threadno the current thread. The command argument threadno is the internal GDB thread number, as shown in the first field of the info threads display. GDB responds by displaying the system identifier of the thread you selected and its current stack frame summary:

```
(gdb) thread 2 [Switching to process 35 thread 23] 0x34e5 in signause ()
```

thread apply [threadno] [all] args

The thread apply command lets you apply a command to one or more threads. Specify the numbers of the threads that you want affected with the command argument *threadno*. To apply a command to all threads, use thread apply all *args*.

Whenever GDB stops your program because of a breakpoint or a signal, it automatically selects the thread where that breakpoint or signal happened. GDB alerts you to the context switch with a message of the form [Switching to systag] to identify the thread.

See "Stopping and starting multithreaded programs (p. 339)" for more information about how GDB behaves when you stop and start programs with multiple threads.

See "Setting watchpoints (p. 327)" for information about watchpoints in programs with multiple threads.

Debugging programs with multiple processes

GDB has no special support for debugging programs that create additional processes using the *fork()* function. When a program forks, GDB continues to debug the parent process, and the child process runs unimpeded. If you've set a breakpoint in any code that the child then executes, the child gets a SIGTRAP signal, which (unless it catches the signal) causes it to terminate.

However, if you want to debug the child process, there's a workaround that isn't too painful:

1. Put a call to *sleep()* in the code that the child process executes after the *fork()*. It may be useful to sleep only if a certain environment variable is set, or a certain

- file exists, so that the delay doesn't occur when you don't want to run GDB on the child.
- **2.** While the child is sleeping, get its process ID by using the pidin utility (see the *Utilities Reference*) or by using GDB's info pidlist command.
- **3.** Tell GDB (a new invocation of GDB if you're also debugging the parent process) to attach to the child process (see "*Debugging an already-running process* (p. 319)"). From that point on you can debug the child process just like any other process that you've attached to.

Stopping and continuing

Inside GDB, your program may stop for any of several reasons, such as a signal, a breakpoint, or reaching a new line after a GDB command such as step. You may then examine and change variables, set new breakpoints or remove old ones, and then continue execution. Usually, the messages shown by GDB provide ample explanation of the status of your program—but you can also explicitly request this information at any time.

info program

Display information about the status of your program: whether it's running or not, what process it is, and why it stopped.

Breakpoints, watchpoints, and exceptions

A *breakpoint* makes your program stop whenever a certain point in the program is reached. For each breakpoint, you can add conditions to control in finer detail whether your program stops.

You can set breakpoints with the break command and its variants (see "Setting breakpoints" (p. 324)") to specify the place where your program should stop by line number, function name or exact address in the program. In languages with exception handling (such as GNU C++), you can also set breakpoints where an exception is raised (see "Breakpoints and exceptions" (p. 323)").

A *watchpoint* is a special breakpoint that stops your program when the value of an expression changes. You must use a different command to set watchpoints (see "*Setting watchpoints*" (p. 327)"), but aside from that, you can manage a watchpoint like any other breakpoint: you enable, disable, and delete both breakpoints and watchpoints using the same commands.

You can arrange to have values from your program displayed automatically whenever GDB stops at a breakpoint. See "*Automatic display* (p. 358)."

GDB assigns a number to each breakpoint or watchpoint when you create it; these numbers are successive integers starting with 1. In many of the commands for controlling various features of breakpoints you use the breakpoint number to say which breakpoint you want to change. Each breakpoint may be *enabled* or *disabled*; if disabled, it has no effect on your program until you enable it again.

Setting breakpoints

Use the break (b) command to set breakpoints.

The debugger convenience variable \$ppnum records the number of the breakpoints you've set most recently; see "Convenience variables (p. 366)" for a discussion of what you can do with convenience variables.

You have several ways to say where the breakpoint should go:

break function

Set a breakpoint at entry to *function*. When using source languages such as C++ that permit overloading of symbols, *function* may refer to more than one possible place to break. See "*Breakpoint menus* (p. 334)" for a discussion of that situation.

break +offset or break -offset

Set a breakpoint some number of lines forward or back from the position at which execution stopped in the currently selected frame.

break linenum

Set a breakpoint at line *linenum* in the current source file. That file is the last file whose source text was printed. This breakpoint stops your program just before it executes any of the code on that line.

break filename: linenum

Set a breakpoint at line *linenum* in source file *filename*.

break filename: function

Set a breakpoint at entry to *function* found in file *filename*. Specifying a filename as well as a function name is superfluous except when multiple files contain similarly named functions.

break *address

Set a breakpoint at address *address*. You can use this to set breakpoints in parts of your program that don't have debugging information or source files.

break

When called without any arguments, <code>break</code> sets a breakpoint at the next instruction to be executed in the selected stack frame (see "Examining the Stack (p. 341)"). In any selected frame but the innermost, this makes your program stop as soon as control returns to that frame. This is similar to the effect of a finish command in the frame inside the selected frame—except

that finish doesn't leave an active breakpoint. If you use break without an argument in the innermost frame, GDB stops the next time it reaches the current location; this may be useful inside loops.

GDB normally ignores breakpoints when it resumes execution, until at least one instruction has been executed. If it didn't do this, you wouldn't be able to proceed past a breakpoint without first disabling the breakpoint. This rule applies whether or not the breakpoint already existed when your program stopped.

break ... if cond

Set a breakpoint with condition *cond*; evaluate the expression *cond* each time the breakpoint is reached, and stop only if the value is nonzero—that is, if *cond* evaluates as true. The ellipsis (...) stands for one of the possible arguments described above (or no argument) specifying where to break. For more information on breakpoint conditions, see "*Break conditions*" (p. 331)."

There are several variations on the break command, all using the same syntax as above:

tbreak

Set a breakpoint enabled only for one stop. The breakpoint is set in the same way as for the break command, except that it's automatically deleted after the first time your program stops there. See "Disabling breakpoints" (p. 330)."

hbreak

Set a hardware-assisted breakpoint. The breakpoint is set in the same way as for the break command, except that it requires hardware support (and some target hardware may not have this support).

The main purpose of this is EPROM/ROM code debugging, so you can set a breakpoint at an instruction without changing the instruction.

thbreak

Set a hardware-assisted breakpoint enabled only for one stop. The breakpoint is set in the same way as for the break command. However, like the tbreak command, the breakpoint is automatically deleted after the first time your program stops there. Also, like the hbreak command, the breakpoint requires hardware support, which some target hardware may not have. See "Disabling breakpoints" (p. 330)" and "Break conditions" (p. 331)."

rbreak regex

Set breakpoints on all functions matching the regular expression *regex*. This command sets an unconditional breakpoint on all matches, printing a list of all breakpoints it set. Once these breakpoints are set, they're treated just like the breakpoints set with the break command. You can delete them, disable them, or make them conditional the same way as any other breakpoint.

When debugging you're C++ programs, rbreak is useful for setting breakpoints on overloaded functions that aren't members of any special classes.

The following commands display information about breakpoints and watchpoints:

info breakpoints [N] or info break [N] or info watchpoints [N]

Print a table of all breakpoints and watchpoints set and not deleted, with the following columns for each breakpoint:

- Breakpoint Numbers.
- Type breakpoint or watchpoint.
- Disposition whether the breakpoint is marked to be disabled or deleted when hit.
- Enabled or Disabled enabled breakpoints are marked with y, disabled with n.
- Address where the breakpoint is in your program, as a memory address.
- What where the breakpoint is in the source for your program, as a file and line number.

If a breakpoint is conditional, info break shows the condition on the line following the affected breakpoint; breakpoint commands, if any, are listed after that.

An info break command with a breakpoint number n as argument lists only that breakpoint. The convenience variable $_a$ and the default examining-address for the $_a$ command are set to the address of the last breakpoint listed (see "Examining memory (p. 356)").

The info break command displays the number of times the breakpoint has been hit. This is especially useful in conjunction with the ignore command. You can ignore a large number of breakpoint hits, look at the breakpoint information to see how many times the breakpoint was hit, and then run again, ignoring one less than that number. This gets you quickly to the last hit of that breakpoint.

GDB lets you set any number of breakpoints at the same place in your program. There's nothing silly or meaningless about this. When the breakpoints are conditional, this is even useful (see "*Break conditions* (p. 331)").

GDB itself sometimes sets breakpoints in your program for special purposes, such as proper handling of longjmp (in C programs). These internal breakpoints are assigned negative numbers, starting with -1; info breakpoints doesn't display them.

You can see these breakpoints with the GDB maintenance command, maint info breakpoints.

maint info breakpoints

Using the same format as info breakpoints, display both the breakpoints you've set explicitly and those GDB is using for internal purposes. The type column identifies what kind of breakpoint is shown:

- breakpoint normal, explicitly set breakpoint.
- watchpoint normal, explicitly set watchpoint.
- longjmp internal breakpoint, used to handle correctly stepping through longjmp calls.
- longjmp resume internal breakpoint at the target of a longjmp.
- until temporary internal breakpoint used by the GDB until command.
- finish temporary internal breakpoint used by the GDB finish command.

Setting watchpoints

You can use a watchpoint to stop execution whenever the value of an expression changes, without having to predict a particular place where this may happen.

Although watchpoints currently execute two orders of magnitude more slowly than other breakpoints, they can help catch errors where in cases where you have no clue what part of your program is the culprit.

watch *expr*

Set a watchpoint for an expression. GDB breaks when *expr* is written into by the program and its value changes.

rwatch arg

Set a watchpoint that breaks when watch *arg* is read by the program. If you use both watchpoints, both must be set with the rwatch command.

awatch arg

Set a watchpoint that breaks when *arg* is read and written into by the program. If you use both watchpoints, both must be set with the awatch command.

info watchpoints

This command prints a list of watchpoints and breakpoints; it's the same as info break.



In multithreaded programs, watchpoints have only limited usefulness. With the current watchpoint implementation, GDB can watch the value of an expression *in a single thread only*. If you're confident that the expression can change due only to the current thread's activity (and if you're also confident that no other thread can become current), then you can use watchpoints as usual. However, GDB may not notice when a noncurrent thread's activity changes the expression.

Breakpoints and exceptions

Some languages, such as GNU C++, implement exception handling. You can use GDB to examine what caused your program to raise an exception and to list the exceptions your program is prepared to handle at a given point in time.

catch exceptions

You can set breakpoints at active exception handlers by using the catch command. The *exceptions* argument is a list of names of exceptions to catch.

You can use info catch to list active exception handlers. See "Information about a frame (p. 344)."

There are currently some limitations to exception handling in GDB:

- If you call a function interactively, GDB normally returns control to you when the
 function has finished executing. If the call raises an exception, however, the call
 may bypass the mechanism that returns control to you and cause your program to
 continue running until it hits a breakpoint, catches a signal that GDB is listening
 for, or exits.
- You can't raise an exception interactively.
- You can't install an exception handler interactively.

Sometimes catch isn't the best way to debug exception handling: if you need to know exactly where an exception is raised, it's better to stop *before* the exception handler is called, since that way you can see the stack before any unwinding takes place. If you set a breakpoint in an exception handler instead, it may not be easy to find out where the exception was raised.

To stop just before an exception handler is called, you need some knowledge of the implementation. In the case of GNU C++, exceptions are raised by calling a library function named <u>__raise_exception()</u>, which has the following ANSI C interface:

```
void __raise_exception (void **addr, void *id);
/* addr is where the exception identifier is stored.
   id is the exception identifier. */
```

To make the debugger catch all exceptions before any stack unwinding takes place, set a breakpoint on __raise_exception(). See "Breakpoints, watchpoints, and exceptions (p. 323)."

With a conditional breakpoint (see "*Break conditions* (p. 331)") that depends on the value of *id*, you can stop your program when a specific exception is raised. You can use multiple conditional breakpoints to stop your program when any of a number of exceptions are raised.

Deleting breakpoints

You often need to eliminate a breakpoint or watchpoint once it's done its job and you no longer want your program to stop there. This is called *deleting* the breakpoint. A breakpoint that has been deleted no longer exists and is forgotten.

With the clear command you can delete breakpoints according to where they are in your program. With the delete command you can delete individual breakpoints or watchpoints by specifying their breakpoint numbers.

You don't have to delete a breakpoint to proceed past it. GDB automatically ignores breakpoints on the first instruction to be executed when you continue execution without changing the execution address.

clear

Delete any breakpoints at the next instruction to be executed in the selected stack frame (see "Selecting a frame (p. 343)"). When the innermost frame is selected, this is a good way to delete a breakpoint where your program just stopped.

clear function or clear filename: function

Delete any breakpoints set at entry to function.

clear linenum or clear filename: linenum

Delete any breakpoints set at or within the code of the specified line.

delete[breakpoints][bnums...]

Delete the breakpoints or watchpoints of the numbers specified as arguments. If no argument is specified, delete all breakpoints (GDB asks for confirmation,

unless you've set confirm off). You can abbreviate this command as d.

Disabling breakpoints

Rather than delete a breakpoint or watchpoint, you might prefer to *disable* it. This makes the breakpoint inoperative as if it had been deleted, but remembers the information on the breakpoint so that you can *enable* it again later.

You disable and enable breakpoints and watchpoints with the enable and disable commands, optionally specifying one or more breakpoint numbers as arguments. Use info break or info watch to print a list of breakpoints or watchpoints if you don't know which numbers to use.

A breakpoint or watchpoint can have any of the following states:

Enabled

The breakpoint stops your program. A breakpoint set with the break command starts out in this state.

Disabled

The breakpoint has no effect on your program.

Enabled once

The breakpoint stops your program, but then becomes disabled. A breakpoint set with the tbreak command starts out in this state.

Enabled for deletion

The breakpoint stops your program, but immediately afterwards it's deleted permanently.

You can use the following commands to enable or disable breakpoints and watchpoints:

disable [breakpoints] [bnums...]

Disable the specified breakpoints—or all breakpoints, if none is listed. A disabled breakpoint has no effect but isn't forgotten. All options such as ignore-counts, conditions and commands are remembered in case the breakpoint is enabled again later. You may abbreviate disable as dis.

enable [breakpoints] [bnums...]

Enable the specified breakpoints (or all defined breakpoints). They become effective once again in stopping your program.

enable [breakpoints] once bnums...

Enable the specified breakpoints temporarily. GDB disables any of these breakpoints immediately after stopping your program.

enable [breakpoints] delete bnums...

Enable the specified breakpoints to work once, then die. GDB deletes any of these breakpoints as soon as your program stops there.

Except for a breakpoint set with tbreak (see "Setting breakpoints (p. 324)"), breakpoints that you set are initially enabled; subsequently, they become disabled or enabled only when you use one of the commands above. (The command until can set and delete a breakpoint of its own, but it doesn't change the state of your other breakpoints; see "Continuing and stepping (p. 334).")

Break conditions

The simplest sort of breakpoint breaks every time your program reaches a specified place. You can also specify a *condition* for a breakpoint.

A condition is just a Boolean expression in your programming language (see "*Expressions* (p. 352)"). A breakpoint with a condition evaluates the expression each time your program reaches it, and your program stops only if the condition is *true*.

This is the converse of using assertions for program validation; in that situation, you want to stop when the assertion is violated—that is, when the condition is false. In C, if you want to test an assertion expressed by the condition *assert*, you should set the condition! *assert* on the appropriate breakpoint.

Conditions are also accepted for watchpoints; you may not need them, since a watchpoint is inspecting the value of an expression anyhow—but it might be simpler, say, to just set a watchpoint on a variable name, and specify a condition that tests whether the new value is an interesting one.

Break conditions can have side effects, and may even call functions in your program. This can be useful, for example, to activate functions that log program progress, or to use your own print functions to format special data structures. The effects are completely predictable unless there's another enabled breakpoint at the same address. (In that case, GDB might see the other breakpoint first and stop your program without checking the condition of this one.) Note that breakpoint commands are usually more convenient and flexible for the purpose of performing side effects when a breakpoint is reached (see "*Breakpoint command lists* (p. 333)").

Break conditions can be specified when a breakpoint is set, by using if in the arguments to the break command. See "Setting breakpoints (p. 324)." They can also be changed at any time with the condition command. The watch command doesn't recognize the if keyword; condition is the only way to impose a further condition on a watchpoint.

condition bnum expression

Specify expression as the break condition for breakpoint or watchpoint number bnum. After you set a condition, breakpoint bnum stops your program only if the value of expression is true (nonzero, in C). When you use condition, GDB checks expression immediately for syntactic correctness, and to determine whether symbols in it have referents in the context of your breakpoint. GDB doesn't actually evaluate expression at the time the condition command is given, however. See "Expressions (p. 352)."

condition bnum

Remove the condition from breakpoint number *bnum*. It becomes an ordinary unconditional breakpoint.

A special case of a breakpoint condition is to stop only when the breakpoint has been reached a certain number of times. This is so useful that there's a special way to do it, using the *ignore count* of the breakpoint. Every breakpoint has an ignore count, which is an integer. Most of the time, the ignore count is zero, and therefore has no effect. But if your program reaches a breakpoint whose ignore count is positive, then instead of stopping, it just decrements the ignore count by one and continues. As a result, if the ignore count value is *n*, the breakpoint doesn't stop the next *n* times your program reaches it.

ignore bnum count

Set the ignore count of breakpoint number *bnum* to *count*. The next *count* times the breakpoint is reached, your program's execution doesn't stop; other than to decrement the ignore count, GDB takes no action.

To make the breakpoint stop the next time it's reached, specify a count of zero.

When you use continue to resume execution of your program from a breakpoint, you can specify an ignore count directly as an argument to continue, rather than use ignore. See "Continuing and stepping (p. 334)."

If a breakpoint has a positive ignore count and a condition, the condition isn't checked. Once the ignore count reaches zero, GDB resumes checking the condition.

You could achieve the effect of the ignore count with a condition such as \$foo-- <= 0 using a debugger convenience variable that's decremented each time. See "Convenience variables (p. 366)."

Breakpoint command lists

You can give any breakpoint (or watchpoint) a series of commands to execute when your program stops due to that breakpoint. For example, you might want to print the values of certain expressions, or enable other breakpoints.

commands [bnum] ... command-list ... end

Specify a list of commands for breakpoint number *bnum*. The commands themselves appear on the following lines. Type a line containing just end to terminate the commands.

To remove all commands from a breakpoint, type commands and follow it immediately with end; that is, give no commands.

With no *bnum* argument, commands refers to the last breakpoint or watchpoint set (not to the breakpoint most recently encountered).

Pressing **Enter** as a means of repeating the last GDB command is disabled within a *command-list*.

You can use breakpoint commands to start your program up again. Just use the continue command, or step, or any other command that resumes execution.

Commands in *command-list* that follow a command that resumes execution are ignored. This is because any time you resume execution (even with a simple next or step), you may encounter another breakpoint—which could have its own command list, leading to ambiguities about which list to execute.

If the first command you specify in a command list is silent, the usual message about stopping at a breakpoint isn't printed. This may be desirable for breakpoints that are to print a specific message and then continue. If none of the remaining commands print anything, you see no sign that the breakpoint was reached. The silent command is meaningful only at the beginning of a breakpoint command list.

The commands echo, output, and printf allow you to print precisely controlled output, and are often useful in silent breakpoints.

For example, here's how you could use breakpoint commands to print the value of x at entry to foo() whenever x is positive:

```
break foo if x>0
commands
silent
printf "x is %d\n",x
cont
end
```

One application for breakpoint commands is to compensate for one bug so you can test for another. Put a breakpoint just after the erroneous line of code, give it a condition to detect the case in which something erroneous has been done, and give it commands to assign correct values to any variables that need them. End with the

continue command so that your program doesn't stop, and start with the silent command so that no output is produced. Here's an example:

```
break 403
commands
silent
set x = y + 4
cont
end
```

Breakpoint menus

Some programming languages (notably C++) permit a single function name to be defined several times, for application in different contexts. This is called *overloading*. When a function name is overloaded, break *function* isn't enough to tell GDB where you want a breakpoint.

If you realize this is a problem, you can use something like:

```
break function (types)
```

to specify which particular version of the function you want. Otherwise, GDB offers you a menu of numbered choices for different possible breakpoints, and waits for your selection with the prompt >. The first two options are always [0] cancel and [1] all. Typing 1 sets a breakpoint at each definition of function, and typing 0 aborts the break command without setting any new breakpoints.

For example, the following session excerpt shows an attempt to set a breakpoint at the overloaded symbol *String::after()*. We choose three particular definitions of that function name:

```
(gdb) b String::after
[0] cancel
[1] all
[2] file:String.cc; line number:867
[3] file:String.cc; line number:860
[4] file:String.cc; line number:875
[5] file:String.cc; line number:853
[6] file:String.cc; line number:846
[7] file:String.cc; line number:735
> 2 4 6
Breakpoint 1 at 0xb26c: file String.cc, line 867. Breakpoint 2 at 0xb344: file String.cc, line 875.
Breakpoint 3 at 0xafcc: file String.cc, line 846.
Multiple breakpoints were set.
Use the "delete" command to delete unwanted
 breakpoints.
(gdb)
```

Continuing and stepping

Continuing means resuming program execution until your program completes normally. In contrast, *stepping* means executing just one more "step" of your program, where

"step" may mean either one line of source code, or one machine instruction (depending on what particular command you use).

Either when continuing or when stepping, your program may stop even sooner, due to a breakpoint or a signal. (If due to a signal, you may want to use handle, or use signal 0 to resume execution. See "Signals (p. 338).")

continue [ignore-count] or c [ignore-count] or fg [ignore-count]

Resume program execution, at the address where your program last stopped; any breakpoints set at that address are bypassed. The optional argument *ignore-count* lets you specify a further number of times to ignore a breakpoint at this location; its effect is like that of ignore (see "*Break conditions* (p. 331)").

The argument *ignore-count* is meaningful only when your program stopped due to a breakpoint. At other times, the argument to continue is ignored.

The synonyms c and fg are provided purely for convenience, and have exactly the same behavior as continue.

To resume execution at a different place, you can use return (see "Returning from a function (p. 376)") to go back to the calling function; or jump (see "Continuing at a different address (p. 375)") to go to an arbitrary location in your program.

A typical technique for using stepping is to set a breakpoint (see "*Breakpoints*, watchpoints, and exceptions (p. 323)") at the beginning of the function or the section of your program where a problem is believed to lie, run your program until it stops at that breakpoint, and then step through the suspect area, examining the variables that are interesting, until you see the problem happen.

step

Continue running your program until control reaches a different source line, then stop it and return control to GDB. This command is abbreviated s.



If you use the step command while control is within a function that was compiled without debugging information, execution proceeds until control reaches a function that does have debugging information. Likewise, it doesn't step into a function that is compiled without debugging information. To step through functions without debugging information, use the stepi command, described below.

The step command stops only at the first instruction of a source line. This prevents multiple stops in switch statements, for loops, etc. The step command stops if a function that has debugging information is called within the line.

Also, the step command enters a subroutine only if there's line number information for the subroutine. Otherwise it acts like the next command.

step count

Continue running as in step, but do so *count* times. If a breakpoint is reached, or a signal not related to stepping occurs before *count* steps, stepping stops right away.

next [count]

Continue to the next source line in the current (innermost) stack frame. This is similar to step, but function calls that appear within the line of code are executed without stopping. Execution stops when control reaches a different line of code at the original stack level that was executing when you gave the next command. This command is abbreviated n.

The *count* argument is a repeat count, as for step.

The next command stops only at the first instruction of a source line. This prevents the multiple stops in switch statements, for loops, etc.

finish

Continue running until just after function in the selected stack frame returns. Print the returned value (if any).

Contrast this with the return command (see "*Returning from a function* (p. 376)").

u or until

Continue running until a source line past the current line in the current stack frame is reached. This command is used to avoid single-stepping through a loop more than once. It's like the next command, except that when until encounters a jump, it automatically continues execution until the program counter is greater than the address of the jump.

This means that when you reach the end of a loop after single-stepping though it, until makes your program continue execution until it exits the loop. In contrast, a next command at the end of a loop simply steps back to the beginning of the loop, which forces you to step through the next iteration.

The until command always stops your program if it attempts to exit the current stack frame.

The until command may produce somewhat counterintuitive results if the order of machine code doesn't match the order of the source lines. For

example, in the following excerpt from a debugging session, the f (frame) command shows that execution is stopped at line 206; yet when we use until, we get to line 195:

This happened because, for execution efficiency, the compiler had generated code for the loop closure test at the end, rather than the start, of the loop—even though the test in a C for-loop is written before the body of the loop. The until command appeared to step back to the beginning of the loop when it advanced to this expression; however, it hasn't really gone to an earlier statement—not in terms of the actual machine code.

An until command with no argument works by means of single instruction stepping, and hence is slower than until with an argument.

until location or u location

Continue running your program until either the specified location is reached, or the current stack frame returns. The *location* is any of the forms of argument acceptable to break (see "Setting breakpoints (p. 324)"). This form of the command uses breakpoints, and hence is quicker than until without an argument.

stepi [count] or si [count]

Execute one machine instruction, then stop and return to the debugger.

It's often useful to do display/i \$pc when stepping by machine instructions. This makes GDB automatically display the next instruction to be executed, each time your program stops. See "Automatic display" (p. 358)."

The *count* argument is a repeat count, as in step.

nexti [count] or ni [count]

Execute one machine instruction, but if it's a function call, proceed until the function returns.

The *count* argument is a repeat count, as in next.

Signals

A signal is an asynchronous event that can happen in a program. The operating system defines the possible kinds of signals, and gives each kind a name and a number. The table below gives several examples of signals:

Signal:	Received when:
SIGINT	You type an interrupt, Ctrl -C
SIGSEGV	The program references a place in memory far away from all the areas in use.
SIGALRM	The alarm clock timer goes off (which happens only if your program has requested an alarm).

Some signals, including SIGALRM, are a normal part of the functioning of your program. Others, such as SIGSEGV, indicate errors; these signals are *fatal* (killing your program immediately) if the program hasn't specified in advance some other way to handle the signal. SIGINT doesn't indicate an error in your program, but it's normally fatal so it can carry out the purpose of the interrupt: to kill the program.

GDB has the ability to detect any occurrence of a signal in your program. You can tell GDB in advance what to do for each kind of signal. Normally, it's set up to:

- Ignore signals like SIGALRM that don't indicate an error so as not to interfere with their role in the functioning of your program.
- Stop your program immediately whenever an error signal happens.

You can change these settings with the handle command.

info signals or info handle

Print a table of all the kinds of signals and how GDB has been told to handle each one. You can use this to see the signal numbers of all the defined types of signals.

handle signal keywords...

Change the way GDB handles signal *signal*. The *signal* can be the number of a signal or its name (with or without the SIG at the beginning). The *keywords* say what change to make.

The keywords allowed by the handle command can be abbreviated. Their full names are:

nostop

GDB shouldn't stop your program when this signal happens. It may still print a message telling you that the signal has come in.

stop

GDB should stop your program when this signal happens. This implies the print keyword as well.

print

GDB should print a message when this signal happens.

noprint

GDB shouldn't mention the occurrence of the signal at all. This implies the nostop keyword as well.

pass

GDB should allow your program to see this signal; your program can handle the signal, or else it may terminate if the signal is fatal and not handled.

nopass

GDB shouldn't allow your program to see this signal.

When a signal stops your program, the signal isn't visible until you continue. Your program sees the signal then, if pass is in effect for the signal in question at that time. In other words, after GDB reports a signal, you can use the handle command with pass or nopass to control whether your program sees that signal when you continue.

You can also use the signal command to prevent your program from seeing a signal, or cause it to see a signal it normally doesn't see, or to give it any signal at any time. For example, if your program stopped due to some sort of memory reference error, you might store correct values into the erroneous variables and continue, hoping to see more execution; but your program would probably terminate immediately as a result of the fatal signal once it saw the signal. To prevent this, you can continue with signal 0. See "Giving your program a signal (p. 376)."

Stopping and starting multithreaded programs

When your program has multiple threads, you can choose whether to set breakpoints on all threads, or on a particular thread.

(See "Debugging programs with multiple threads (p. 320).")

break linespec thread threadno or break linespec thread threadno if ...

The *linespec* specifies source lines; there are several ways of writing them, but the effect is always to specify some source line.

Use the qualifier thread *threadno* with a breakpoint command to specify that you want GDB to stop the program only when a particular thread reaches this breakpoint. The *threadno* is one of the numeric thread identifiers assigned by GDB, shown in the first column of the info threads display.

If you don't specify thread threadno when you set a breakpoint, the breakpoint applies to *all* threads of your program.

You can use the thread qualifier on conditional breakpoints as well; in this case, place thread *threadno* before the breakpoint condition, like this:

```
(gdb) break frik.c:13 thread 28 if bartab > lim
```

Whenever your program stops under GDB for any reason, *all* threads of execution stop, not just the current thread. This lets you examine the overall state of the program, including switching between threads, without worrying that things may change underfoot.

Conversely, whenever you restart the program, *all* threads start executing. *This is true even when single-stepping* with commands like step or next.

In particular, GDB can't single-step all threads in lockstep. Since thread scheduling is up to the microkernel (not controlled by GDB), other threads may execute more than one statement while the current thread completes a single step. Moreover, in general, other threads stop in the middle of a statement, rather than at a clean statement boundary, when the program stops.

You might even find your program stopped in another thread after continuing or even single-stepping. This happens whenever some other thread runs into a breakpoint, a signal, or an exception before the first thread completes whatever you requested.

Examining the stack

When your program has stopped, the first thing you need to know is where it stopped and how it got there.

Each time your program performs a function call, information about the call is generated. That information includes the location of the call in your program, the arguments of the call, and the local variables of the function being called. The information is saved in a block of data called a *stack frame*. The stack frames are allocated in a region of memory called the *call stack*.

When your program stops, the GDB commands for examining the stack allow you to see all of this information.

One of the stack frames is *selected* by GDB, and many GDB commands refer implicitly to the selected frame. In particular, whenever you ask GDB for the value of a variable in your program, the value is found in the selected frame. There are special GDB commands to select whichever frame you're interested in. See "*Selecting a frame* (p. 343)."

When your program stops, GDB automatically selects the currently executing frame and describes it briefly, similar to the frame command (see "*Information about a frame* (p. 344)").

Stack frames

The call stack is divided up into contiguous pieces called *stack frames*, or *frames* for short; each frame is the data associated with one call to one function. The frame contains the arguments given to the function, the function's local variables, and the address at which the function is executing.

When your program is started, the stack has only one frame, that of the function main(). This is called the *initial* frame or the *outermost* frame. Each time a function is called, a new frame is made. Each time a function returns, the frame for that function invocation is eliminated. If a function is recursive, there can be many frames for the same function. The frame for the function in which execution is actually occurring is called the *innermost* frame. This is the most recently created of all the stack frames that still exist.

Inside your program, stack frames are identified by their addresses. A stack frame consists of many bytes, each of which has its own address; each kind of computer has a convention for choosing one byte whose address serves as the address of the frame. Usually this address is kept in a register called the *frame pointer register* while execution is going on in that frame.

GDB assigns numbers to all existing stack frames, starting with 0 for the innermost frame, 1 for the frame that called it, and so on upward. These numbers don't really

exist in your program; they're assigned by GDB to give you a way of designating stack frames in GDB commands.

Some compilers provide a way to compile functions so that they operate without stack frames. (For example, the gcc option -fomit-frame-pointer generates functions without a frame.) This is occasionally done with heavily used library functions to reduce the time required to set up the frame. GDB has limited facilities for dealing with these function invocations. If the innermost function invocation has no stack frame, GDB nevertheless regards it as though it had a separate frame, which is numbered 0 as usual, allowing correct tracing of the function call chain. However, GDB has no provision for frameless functions elsewhere in the stack.

frame args

The frame command lets you move from one stack frame to another, and to print the stack frame you select. The *args* may be either the address of the frame or the stack frame number. Without an argument, frame prints the current stack frame.

select-frame

The select-frame command lets you move from one stack frame to another without printing the frame. This is the silent version of frame.

Backtraces

A backtrace is a summary of how your program got where it is. It shows one line per frame, for many frames, starting with the currently executing frame (frame 0), followed by its caller (frame 1), and on up the stack.

backtrace or bt

Print a backtrace of the entire stack, with one line per frame, for all frames in the stack.

You can stop the backtrace at any time by typing the system interrupt character, normally **Ctrl** –**C** .

backtrace n or bt n

Similar, but print only the innermost *n* frames.

backtrace - n or bt - n

Similar, but print only the outermost *n* frames.

The names where and info stack (info s) are additional aliases for backtrace.

Each line in the backtrace shows the frame number and the function name. The program counter value is also shown—unless you use set print address off.

The backtrace also shows the source filename and line number, as well as the arguments to the function. The program counter value is omitted if it's at the beginning of the code for that line number.

Here's an example of a backtrace. It was made with the command bt 3, so it shows the innermost three frames:

```
#0 m4_traceon (obs=0x24eb0, argc=1, argv=0x2b8c8)
   at builtin.c:993
#1 0x6e38 in expand_macro (sym=0x2b600) at macro.c:242
#2 0x6840 in expand_token (obs=0x0, t=177664, td=0xf7fffb08)
   at macro.c:71
(More stack frames follow...)
```

The display for frame O doesn't begin with a program counter value, indicating that your program has stopped at the beginning of the code for line 993 of builtin.c.

Selecting a frame

Most commands for examining the stack and other data in your program work on whichever stack frame is selected at the moment. Here are the commands for selecting a stack frame; all of them finish by printing a brief description of the stack frame just selected.

frame n or f n

Select frame number *n*. Recall that frame 0 is the innermost (currently executing) frame, frame 1 is the frame that called the innermost one, and so on. The highest-numbered frame is the one for main.

frame addr or f addr

Select the frame at address *addr*. This is useful mainly if the chaining of stack frames has been damaged by a bug, making it impossible for GDB to assign numbers properly to all frames. In addition, this can be useful when your program has multiple stacks and switches between them.

up 11

Move n frames up the stack. For positive numbers, this advances toward the outermost frame, to higher frame numbers, to frames that have existed longer. The default for n is 1.

down 11

Move n frames down the stack. For positive numbers, this advances toward the innermost frame, to lower frame numbers, to frames that were created more recently. The default for n is 1. You may abbreviate down as do.

All of these commands end by printing two lines of output describing the frame. The first line shows the frame number, the function name, the arguments, and the source

file and line number of execution in that frame. The second line shows the text of that source line.

For example:

After such a printout, the list command with no arguments prints ten lines centered on the point of execution in the frame. See "*Printing source lines* (p. 346)."

up-silently # or down-silently

These two commands are variants of up and down; they differ in that they do their work silently, without causing display of the new frame. They're intended primarily for use in GDB command scripts, where the output might be unnecessary and distracting.

Information about a frame

There are several other commands to print information about the selected stack frame:

frame or f

When used without any argument, this command doesn't change which frame is selected, but prints a brief description of the currently selected stack frame. It can be abbreviated £. With an argument, this command is used to select a stack frame. See "Selecting a frame (p. 343)."

info frame Or info f

This command prints a verbose description of the selected stack frame, including:

- the address of the frame
- the address of the next frame down (called by this frame)
- the address of the next frame up (caller of this frame)
- the language in which the source code corresponding to this frame is written
- the address of the frame's arguments
- the program counter saved in it (the address of execution in the caller frame)
- which registers were saved in the frame

The verbose description is useful when something has gone wrong that has made the stack format fail to fit the usual conventions.

info frame addr or info f addr

Print a verbose description of the frame at address *addr*, without selecting that frame. The selected frame remains unchanged by this command. This requires the same kind of address (more than one for some architectures) that you specify in the frame command. See "*Selecting a frame* (p. 343)."

info args

Print the arguments of the selected frame, each on a separate line.

info locals

Print the local variables of the selected frame, each on a separate line. These are all variables (declared either static or automatic) accessible at the point of execution of the selected frame.

info catch

Print a list of all the exception handlers that are active in the current stack frame at the current point of execution. To see other exception handlers, visit the associated frame (using the up, down, or frame commands); then type info catch. See "Breakpoints and exceptions (p. 328)."

Examining source files

GDB can print parts of your program's source, since the debugging information recorded in the program tells GDB what source files were used to build it. When your program stops, GDB spontaneously prints the line where it stopped.

Likewise, when you select a stack frame (see "Selecting a frame (p. 343)"), GDB prints the line where execution in that frame has stopped. You can print other portions of source files by explicit command.

Printing source lines

To print lines from a source file, use the list (1) command. By default, ten lines are printed. There are several ways to specify what part of the file you want to print. Here are the forms of the list command most commonly used:

list linenum

Print lines centered around line number *linenum* in the current source file.

list function

Print lines centered around the beginning of function function.

list

Print more lines. If the last lines printed were printed with a list command, this prints lines following the last lines printed; however, if the last line printed was a solitary line printed as part of displaying a stack frame (see "Examining the Stack (p. 341)"), this prints lines centered around that line.

list -

Print lines just before the lines last printed.

By default, GDB prints ten source lines with any of these forms of the list command. You can change this using set listsize:

set listsize count

Make the list command display *count* source lines (unless the list argument explicitly specifies some other number).

show listsize

Display the number of lines that list prints.

Repeating a list command with **Enter** discards the argument, so it's equivalent to typing just list. This is more useful than listing the same lines again. An exception

is made for an argument of -; that argument is preserved in repetition so that each repetition moves up in the source file.

In general, the list command expects you to supply zero, one or two *linespecs*. Linespecs specify source lines; there are several ways of writing them but the effect is always to specify some source line. Here's a complete description of the possible arguments for list:

list linespec

Print lines centered around the line specified by linespec.

list first, last

Print lines from *first* to *last*. Both arguments are linespecs.

list , last

Print lines ending with last.

list first,

Print lines starting with first.

list +

Print lines just after the lines last printed.

list -

Print lines just before the lines last printed.

list

As described in the preceding table.

Here are the ways of specifying a single source line—all the kinds of *linespec*:

number

Specifies line *number* of the current source file. When a list command has two linespecs, this refers to the same source file as the first linespec.

+offset

Specifies the line *offset* lines after the last line printed. When used as the second linespec in a list command that has two, this specifies the line *offset* lines down from the first linespec.

- offset

Specifies the line *offset* lines before the last line printed.

filename: number

Specifies line *number* in the source file *filename*.

function

Specifies the line that begins the body of the function *function*. For example: in C, this is the line with the open brace, }.

filename: function

Specifies the line of the open brace that begins the body of *function* in the file *filename*. You need the filename with a function name only to avoid ambiguity when there are identically named functions in different source files.

* address

Specifies the line containing the program address *address*. The *address* may be any expression.

Searching source files

The commands for searching through the current source file for a regular expression are:

forward-search regexp or search regexp or fo regexp

Check each line, starting with the one following the last line listed, for a match for *regexp*, listing the line found.

reverse-search regexp or rev regexp

Check each line, starting with the one before the last line listed and going backward, for a match for *regexp*, listing the line found.

Specifying source directories

Executable programs sometimes don't record the directories of the source files from which they were compiled, just the names. Even when they do, the directories could be moved between the compilation and your debugging session. GDB has a list of directories to search for source files; this is called the *source path*. Each time GDB wants a source file, it tries all the directories in the list, in the order they're present in the list, until it finds a file with the desired name.



The executable search path *isn't* used for this purpose. Neither is the current working directory, unless it happens to be in the source path.

If GDB can't find a source file in the source path, and the object program records a directory, GDB tries that directory too. If the source path is empty, and there's no record of the compilation directory, GDB looks in the current directory as a last resort.

Whenever you reset or rearrange the source path, GDB clears out any information it has cached about where source files are found and where each line is in the file.

When you start GDB, its source path is empty. To add other directories, use the directory command.

directory dirname ... or dir dirname ...

Add directory *dirname* to the front of the source path. Several directory names may be given to this command, separated by colons (:) or whitespace. You may specify a directory that is already in the source path; this moves it forward, so GDB searches it sooner.

You can use the string <code>\$cdir</code> to refer to the compilation directory (if one is recorded), and <code>\$cwd</code> to refer to the current working directory. Note that <code>\$cwd</code> isn't the same as a period (.); the former tracks the current working directory as it changes during your GDB session, while the latter is immediately expanded to the current directory at the time you add an entry to the source path.

directory

Reset the source path to empty again. This requires confirmation.

show directories

Print the source path: show which directories it contains.

If your source path is cluttered with directories that are no longer of interest, GDB may sometimes cause confusion by finding the wrong versions of source. You can correct the situation as follows:

- 1. Use directory with no argument to reset the source path to empty.
- **2.** Use directory with suitable arguments to reinstall the directories you want in the source path. You can add all the directories in one command.

Source and machine code

You can use the command info line to map source lines to program addresses (and vice versa), and the command disassemble to display a range of addresses as machine instructions. When run under GNU Emacs mode, the info line command causes the arrow to point to the line specified. Also, info line prints addresses in symbolic form as well as hex.

info line linespec

Print the starting and ending addresses of the compiled code for source line *linespec*. You can specify source lines in any of the ways understood by the list command (see "*Printing source lines* (p. 346)").

For example, we can use info line to discover the location of the object code for the first line of function m4 changequote:

```
(gdb) info line m4_changecom Line 895 of "builtin.c" starts at pc 0x634c and ends at 0x6350.
```

We can also inquire (using *addr as the form for *linespec*) what source line covers a particular address:

```
(gdb) info line *0x63ff
Line 926 of "builtin.c" starts at pc 0x63e4 and ends at 0x6404.
```

After info line, the default address for the x command is changed to the starting address of the line, so that x/i is sufficient to begin examining the machine code (see "Examining memory (p. 356)"). Also, this address is saved as the value of the convenience variable x (see "Convenience variables").

disassemble

This specialized command dumps a range of memory as machine instructions. The default memory range is the function surrounding the program counter of the selected frame. A single argument to this command is a program counter value; GDB dumps the function surrounding this value. Two arguments specify a range of addresses (first inclusive, second exclusive) to dump.

We can use disassemble to inspect the object code range shown in the last info line example (the example shows SPARC machine instructions):

```
(gdb) disas 0x63e4 0x6404
Dump of assembler code from 0x63e4 to 0x6404:
0x63e4 <builtin_init+5340>:
ble 0x63f8 <builtin_init+5360>
0x63e8 <builtin_init+5344>:
                               sethi %hi(0x4c00), %o0
0x63ec <builtin_init+5348>:
                              ld [%i1+4], %o0
0x63f0 <builtin_init+5352>:
                               b 0x63fc <builtin_init+5364>
                              ld [%o0+4], %o0
0x63f4 <builtin_init+5356>:
0x63f8 <builtin_init+5360>:
                              or %00, 0x1a4, %00
0x63fc <builtin_init+5364>:
                               call 0x9288 <path_search>
0x6400 <builtin_init+5368>:
                               nop
End of assembler dump.
```

set assembly-language instruction-set

This command selects the instruction set to use when disassembling the program via the disassemble or x/i commands. It's useful for architectures that have more than one native instruction set.

Currently it's defined only for the Intel x86 family. You can set *instruction-set* to either i386 or i8086. The default is i386.

Shared libraries

You can use the following commands when working with shared libraries:

sharedlibrary [regexp]

Load shared object library symbols for files matching the given regular expression, *regexp*. If *regexp* is omitted, GDB tries to load symbols for all loaded shared libraries.

info sharedlibrary

Display the status of the loaded shared object libraries.

The following parameters apply to shared libraries:

set solib-search-path dir[:dir...]

Set the search path for loading shared library symbols files that don't have an absolute path. This path overrides the **PATH** and **LD_LIBRARY_PATH** environment variables.

set solib-absolute-prefix prefix

Set the prefix for loading absolute shared library symbol files.

set auto-solib-add value

Make the loading of shared library symbols automatic or manual:

- If value is nonzero, symbols from all shared object libraries are loaded automatically when the inferior process (i.e. the one being debugged) begins execution, or when the dynamic linker informs GDB that a new library has been loaded.
- If *value* is zero, symbols must be loaded manually with the sharedlibrary command.

You can query the settings of these parameters with the show solib-search-path, show solib-absolute-prefix, and show auto-solib-add commands.

Examining data

The usual way to examine data in your program is with the print (p) command or its synonym inspect. It evaluates and prints the value of an expression of the language your program is written in.

print exp or print / f exp

exp is an expression (in the source language). By default, the value of exp is printed in a format appropriate to its data type; you can choose a different format by specifying /f, where f is a letter specifying the format; see "Output formats" (p. 355)."

print or print / f

If you omit *exp*, GDB displays the last value again (from the *value history*; see "*Value history* (p. 365)"). This lets you conveniently inspect the same value in an alternative format.

A lower-level way of examining data is with the x command. It examines data in memory at a specified address and prints it in a specified format. See "Examining memory (p. 356)."

If you're interested in information about types, or about how the fields of a structure or class are declared, use the ptype *exp* command rather than print. See "*Examining the symbol table* (p. 370)."

Expressions

The print command and many other GDB commands accept an expression and compute its value. Any kind of constant, variable or operator defined by the programming language you're using is valid in an expression in GDB. This includes conditional expressions, function calls, casts and string constants. It unfortunately doesn't include symbols defined by preprocessor #define commands.

GDB supports array constants in expressions input by the user. The syntax is { element, element... }. For example, you can use the command print {1, 2, 3} to build up an array in memory that is malloc'd in the target program.

Because C is so widespread, most of the expressions shown in examples in this manual are in C. In this section, we discuss operators that you can use in GDB expressions regardless of your programming language.

Casts are supported in all languages, not just in C, because it's useful to cast a number into a pointer in order to examine a structure at that address in memory.

GDB supports these operators, in addition to those common to programming languages:

@

Binary operator for treating parts of memory as arrays. See "*Artificial arrays* (p. 354)" for more information.

::

Lets you specify a variable in terms of the file or function where it's defined. See "*Program variables* (p. 353)."

{type} addr

Refers to an object of type *type* stored at address *addr* in memory. The *addr* may be any expression whose value is an integer or pointer (but parentheses are required around binary operators, just as in a cast). This construct is allowed regardless of what kind of data is normally supposed to reside at *addr*.

Program variables

The most common kind of expression to use is the name of a variable in your program.

Variables in expressions are understood in the selected stack frame (see "Selecting a frame (p. 343)"); they must be either:

• global (or static)

Or:

 visible according to the scope rules of the programming language from the point of execution in that frame

This means that in the function:

```
foo (a)
        int a;
{
   bar (a);
   {
   int b = test ();
   bar (b);
   }
}
```

you can examine and use the variable *a* whenever your program is executing within the function *foo()*, but you can use or examine the variable *b* only while your program is executing inside the block where *b* is declared.

There's an exception: you can refer to a variable or function whose scope is a single source file even if the current execution point isn't in this file. But it's possible to have more than one such variable or function with the same name (in different source files). If that happens, referring to that name has unpredictable effects. If you wish, you can specify a static variable in a particular function or file, using the colon-colon notation:

```
file::variable function::variable
```

Here *file* or *function* is the name of the context for the static *variable*. In the case of filenames, you can use quotes to make sure GDB parses the filename as a single word. For example, to print a global value of x defined in £2.c:

```
(gdb) p 'f2.c'::x
```

This use of :: is very rarely in conflict with the very similar use of the same notation in C++. GDB also supports use of the C++ scope resolution operator in GDB expressions.

Occasionally, a local variable may appear to have the wrong value at certain points in a function, such as just after entry to a new scope, and just before exit.



You may see this problem when you're stepping by machine instructions. This is because, on most machines, it takes more than one instruction to set up a stack frame (including local variable definitions); if you're stepping by machine instructions, variables may appear to have the wrong values until the stack frame is completely built. On exit, it usually also takes more than one machine instruction to destroy a stack frame; after you begin stepping through that group of instructions, local variable definitions may be gone.

Artificial arrays

It's often useful to print out several successive objects of the same type in memory; a section of an array, or an array of dynamically determined size for which only a pointer exists in the program.

You can do this by referring to a contiguous span of memory as an *artificial array*, using the binary operator @. The left operand of @ should be the first element of the desired array and be an individual object. The right operand should be the desired length of the array. The result is an array value whose elements are all of the type of the left operand. The first element is actually the left operand; the second element comes from bytes of memory immediately following those that hold the first element, and so on. For example, if a program says:

```
int *array = (int *) malloc (len * sizeof (int));
you can print the contents of array with:
```

```
p *array@len
```

The left operand of @ must reside in memory. Array values made with @ in this way behave just like other arrays in terms of subscripting, and are coerced to pointers when used in expressions. Artificial arrays most often appear in expressions via the value history (see "Value history" (p. 365)"), after printing one out.

Another way to create an artificial array is to use a cast. This reinterprets a value as if it were an array. The value need not be in memory:

```
(gdb) p/x (short[2])0x12345678
$1 = {0x1234, 0x5678}
```

As a convenience, if you leave the array length out — as in (type[])value — gdb calculates the size to fill the value as sizeof(value)/sizeof(type). For example:

```
(gdb) p/x (short[])0x12345678
$2 = {0x1234, 0x5678}
```

Sometimes the artificial array mechanism isn't quite enough; in moderately complex data structures, the elements of interest may not actually be adjacent—for example, if you're interested in the values of pointers in an array. One useful workaround in this situation is to use a convenience variable (see "*Convenience variables* (p. 366)") as a counter in an expression that prints the first interesting value, and then repeat that expression via **Enter**. For instance, suppose you have an array *dtab* of pointers to structures, and you're interested in the values of a field *fv* in each structure. Here's an example of what you might type:

```
set $i = 0
p dtab[$i++]->fv
Enter
Enter
```

Output formats

By default, GDB prints a value according to its data type. Sometimes this isn't what you want. For example, you might want to print a number in hex, or a pointer in decimal. Or you might want to view data in memory at a certain address as a character string or as an instruction. To do these things, specify an *output format* when you print a value.

The simplest use of output formats is to say how to print a value already computed. This is done by starting the arguments of the print command with a slash and a format letter. The format letters supported are:

x

Regard the bits of the value as an integer, and print the integer in hexadecimal.

d

Print as integer in signed decimal.

u

Print as integer in unsigned decimal.

0

Print as integer in octal.

t

Print as integer in binary. The letter t stands for two. (The letter b can't be used because these format letters are also used with the x command, where b stands for byte. See "Examining memory (p. 356).")

а

Print as an address, both absolute in hexadecimal and as an offset from the nearest preceding symbol. You can use this format used to discover where (in what function) an unknown address is located:

```
(gdb) p/a 0x54320
$3 = 0x54320 <_initialize_vx+396>
```

C

Regard as an integer and print it as a character constant.

f

Regard the bits of the value as a floating point number and print using typical floating point syntax.

For example, to print the program counter in hex (see "Registers (p. 368)"), type:

p/x \$pc



No space is required before the slash; this is because command names in GDB can't contain a slash.

To reprint the last value in the value history with a different format, you can use the print command with just a format and no expression. For example, p/x reprints the last value in hex.

Examining memory

You can use the command \mathbf{x} (for "examine") to examine memory in any of several formats, independently of your program's data types.

x / nfu addr or x addr or x

Use the \mathbf{x} command to examine memory.

The n, f, and u are all optional parameters that specify how much memory to display and how to format it; addr is an expression giving the address where you want to start displaying memory. If you use defaults for nfu, you need not type the slash /. Several commands set convenient defaults for addr.

п

The repeat count is a decimal integer; the default is 1. It specifies how much memory (counting by units *u*) to display.

f

The display format is one of the formats used by print, s (null-terminated string), or i (machine instruction). The default is x (hexadecimal) initially. The default changes each time you use either x or print.

И

The unit size is any of:

- b bytes.
- h halfwords (two bytes).
- w words (four bytes). This is the initial default.
- g giant words (eight bytes).

Each time you specify a unit size with x, that size becomes the default unit the next time you use x. (For the s and i formats, the unit size is ignored and isn't normally written.)

addr

The address where you want GDB to begin displaying memory. The expression need not have a pointer value (though it may); it's always interpreted as an integer address of a byte of memory. See "Expressions (p. 352)" for more information on expressions. The default for addr is usually just after the last address examined—but several other commands also set the default address: info breakpoints (to the address of the last breakpoint listed), info line (to the starting address of a line), and print (if you use it to display a value from memory).

For example, x/3uh 0x54320 is a request to display three halfwords (h) of memory, formatted as unsigned decimal integers (u), starting at address 0x54320. The x/4xw \$sp command prints the four words (w) of memory above the stack pointer (here, \$sp; see "Registers" (p. 368)") in hexadecimal (x).

Since the letters indicating unit sizes are all distinct from the letters specifying output formats, you don't have to remember whether unit size or format comes first; either order works. The output specifications 4xw and 4wx mean exactly the same thing. (However, the count n must come first; wx4 doesn't work.)

Even though the unit size u is ignored for the formats s and i, you might still want to use a count n; for example, 3i specifies that you want to see three machine

instructions, including any operands. The command disassemble gives an alternative way of inspecting machine instructions; see "Source and machine code (p. 349)."

All the defaults for the arguments to x are designed to make it easy to continue scanning memory with minimal specifications each time you use x. For example, after you've inspected three machine instructions with x/3i addr, you can inspect the next seven with just x/7. If you use **Enter** to repeat the x command, the repeat count x is used again; the other arguments default as for successive uses of x.

The addresses and contents printed by the x command aren't saved in the value history because there's often too much of them and they would get in the way. Instead, GDB makes these values available for subsequent use in expressions as values of the convenience variables a and a. After an a command, the last address examined is available for use in expressions in the convenience variable a. The contents of that address, as examined, are available in the convenience variable a.

If the ${\bf x}$ command has a repeat count, the address and contents saved are from the last memory unit printed; this isn't the same as the last address printed if several units were printed on the last line of output.

Automatic display

If you find that you want to print the value of an expression frequently (to see how it changes), you might want to add it to the *automatic display list* so that GDB prints its value each time your program stops. Each expression added to the list is given a number to identify it; to remove an expression from the list, you specify that number. The automatic display looks like this:

```
2: foo = 38
3: bar[5] = (struct hack *) 0x3804
```

This display shows item numbers, expressions and their current values. As with displays you request manually using x or print, you can specify the output format you prefer; in fact, display decides whether to use print or x depending on how elaborate your format specification is—it uses x if you specify a unit size, or one of the two formats (i and s) that are supported only by x; otherwise it uses print.

display exp

Add the expression *exp* to the list of expressions to display each time your program stops. See "*Expressions* (p. 352)." The display command doesn't repeat if you press **Enter** again after using it.

display/fmt exp

For *fmt* specifying only a display format and not a size or count, add the expression *exp* to the auto-display list but arrange to display it each time in the specified format *fmt*. See "*Output formats* (p. 355)."

display/fmt addr

For fmt i or s, or including a unit-size or a number of units, add the expression addr as a memory address to be examined each time your program stops. Examining means in effect doing x/fmt addr. See "Examining memory (p. 356)."

For example, display/i \$pc can be helpful, to see the machine instruction about to be executed each time execution stops (\$pc is a common name for the program counter; see "Registers (p. 368)").

undisplay dnums... or delete display dnums...

Remove item numbers *dnums* from the list of expressions to display.

The undisplay command doesn't repeat if you press **Enter** after using it. (Otherwise you'd just get the error No display number)

disable display dnums...

Disable the display of item numbers *dnums*. A disabled display item isn't printed automatically, but isn't forgotten; it may be enabled again later.

enable display dnums...

Enable the display of item numbers *dnums*. It becomes effective once again in auto display of its expression, until you specify otherwise.

display

Display the current values of the expressions on the list, just as is done when your program stops.

info display

Print the list of expressions previously set up to display automatically, each one with its item number, but without showing the values. This includes disabled expressions, which are marked as such. It also includes expressions that wouldn't be displayed right now because they refer to automatic variables not currently available.

If a display expression refers to local variables, it doesn't make sense outside the lexical context for which it was set up. Such an expression is disabled when execution enters a context where one of its variables isn't defined.

For example, if you give the command display last_char while inside a function with an argument *last_char*, GDB displays this argument while your program continues to stop inside that function. When it stops where there's no variable *last_char*, the

display is disabled automatically. The next time your program stops where *last_char* is meaningful, you can enable the display expression once again.

Print settings

GDB provides the following ways to control how arrays, structures, and symbols are printed.

These settings are useful for debugging programs in any language:

set print address or set print address on

GDB prints memory addresses showing the location of stack traces, structure values, pointer values, breakpoints, and so forth, even when it also displays the contents of those addresses. The default is on. For example, this is what a stack frame display looks like with set print address on:

```
(gdb) f
#0 set_quotes (lq=0x34c78 "<<", rq=0x34c88 ">>")
    at input.c:530
530     if (lquote != def_lquote)
```

set print address off

Don't print addresses when displaying their contents. For example, this is the same stack frame displayed with set print address off:

You can use set print address off to eliminate all machine-dependent displays from the GDB interface. For example, with print address off, you should get the same text for backtraces on all machines—whether or not they involve pointer arguments.

show print address

Show whether or not addresses are to be printed.

When GDB prints a symbolic address, it normally prints the closest earlier symbol plus an offset. If that symbol doesn't uniquely identify the address (for example, it's a name whose scope is a single source file), you may need to clarify. One way to do this is with info line, for example info line *0x4537. Alternately, you can set GDB to print the source file and line number when it prints a symbolic address:

set print symbol-filename on

Tell GDB to print the source filename and line number of a symbol in the symbolic form of an address.

```
set print symbol-filename off
```

Don't print source filename and line number of a symbol. This is the default.

show print symbol-filename

Show whether or not GDB prints the source filename and line number of a symbol in the symbolic form of an address.

Another situation where it's helpful to show symbol filenames and line numbers is when disassembling code; GDB shows you the line number and source file that correspond to each instruction.

Also, you may wish to see the symbolic form only if the address being printed is reasonably close to the closest earlier symbol:

set print max-symbolic-offset max-offset

Tell GDB to display the symbolic form of an address only if the offset between the closest earlier symbol and the address is less than *max-offset*. The default is 0, which tells GDB to always print the symbolic form of an address if any symbol precedes it.

show print max-symbolic-offset

Ask how large the maximum offset is that GDB prints in a symbolic address.

If you have a pointer and you aren't sure where it points, try set print symbol-filename on. Then you can determine the name and source file location of the variable where it points, using p/a pointer. This interprets the address in symbolic form. For example, here GDB shows that a variable ptt points at another variable t, defined in hi2.c:

```
(gdb) set print symbol-filename on
(gdb) p/a ptt
$4 = 0xe008 <t in hi2.c>
```



For pointers that point to a local variable, p/a doesn't show the symbol name and filename of the referent, even with the appropriate set print options turned on.

Other settings control how different kinds of objects are printed:

set print array Of set print array on

Pretty print arrays. This format is more convenient to read, but uses more space. The default is off.

set print array off

Return to compressed format for arrays.

show print array

Show whether compressed or pretty format is selected for displaying arrays.

set print elements number-of-elements

Set a limit on how many elements of an array GDB prints. If GDB is printing a large array, it stops printing after it has printed the number of elements set by the set print elements command. This limit also applies to the display of strings. Setting *number-of-elements* to zero means that the printing is unlimited.

show print elements

Display the number of elements of a large array that GDB prints. If the number is 0, the printing is unlimited.

set print null-stop

Cause GDB to stop printing the characters of an array when the first NULL is encountered. This is useful when large arrays actually contain only short strings.

set print pretty on

Cause GDB to print structures in an indented format with one member per line, like this:

```
$1 = {
  next = 0x0,
  flags = {
    sweet = 1,
    sour = 1
  },
  meat = 0x54 "Pork"
}
```

set print pretty off

Cause GDB to print structures in a compact format, like this:

```
$1 = {\text{next} = 0x0, flags} = {\text{sweet} = 1, sour} = 1}, \\ \text{meat} = 0x54 "Pork"}
```

This is the default format.

show print pretty

Show which format GDB is using to print structures.

set print sevenbit-strings on

Print using only seven-bit characters; if this option is set, GDB displays any eight-bit characters (in strings or character values) using the notation \setminus *nnn*. This setting is best if you're working in English (ASCII) and you use the high-order bit of characters as a marker or "meta" bit.

set print sevenbit-strings off

Print full eight-bit characters. This lets you use more international character sets, and is the default.

show print sevenbit-strings

Show whether or not GDB is printing only seven-bit characters.

set print union on

Tell GDB to print unions that are contained in structures. This is the default setting.

set print union off

Tell GDB not to print unions that are contained in structures.

show print union

Ask GDB whether or not it prints unions that are contained in structures. For example, given the declarations:

These settings are of interest when debugging C++ programs:

set print demangle Or set print demangle on

Print C++ names in their source form rather than in the encoded ("mangled") form passed to the assembler and linker for type-safe linkage. The default is on.

show print demangle

Show whether C++ names are printed in mangled or demangled form.

set print asm-demangle or set print asm-demangle on

Print C++ names in their source form rather than their mangled form, even in assembler code printouts such as instruction disassemblies. The default is off.

show print asm-demangle

Show whether C++ names in assembly listings are printed in mangled or demangled form.

set demangle-style style

Choose among several encoding schemes used by different compilers to represent C++ names. The choices for *style* are:

auto

Allow GDB to choose a decoding style by inspecting your program.

gnu

Decode based on the GNU C++ compiler (g++) encoding algorithm. This is the default.

lucid

Decode based on the Lucid C++ compiler (1cc) encoding algorithm.

arm

Decode using the algorithm in the *C++ Annotated Reference Manual*.

This setting alone isn't sufficient to allow debugging cfront-generated executables. GDB would require further enhancement to permit that.

foo

Show the list of formats.

show demangle-style

Display the encoding style currently in use for decoding C++ symbols.

set print object Or set print object on

When displaying a pointer to an object, identify the *actual* (derived) type of the object rather than the *declared* type, using the virtual function table.

set print object off

Display only the declared type of objects, without reference to the virtual function table. This is the default setting.

show print object

Show whether actual, or declared, object types are displayed.

set print static-members of set print static-members on

Print static members when displaying a C++ object. The default is on.

set print static-members off

Don't print static members when displaying a C++ object.

show print static-members

Show whether C++ static members are printed, or not.

set print vtbl or set print vtbl on

Pretty print C++ virtual function tables. The default is off.

set print vtbl off

Don't pretty print C++ virtual function tables.

show print vtbl

Show whether C++ virtual function tables are pretty printed, or not.

Value history

Values printed by the print command are saved in the GDB value history. This lets you refer to them in other expressions. Values are kept until the symbol table is reread or discarded (for example with the file or symbol-file commands). When the symbol table changes, the value history is discarded, since the values may contain pointers back to the types defined in the symbol table.

The values printed are given *history numbers*, which you can use to refer to them. These are successive integers starting with 1. The print command shows you the history number assigned to a value by printing num = before the value; here num is the history number.

To refer to any previous value, use \$ followed by the value's history number. The way print labels its output is designed to remind you of this. Just \$ refers to the most recent value in the history, and \$\$ refers to the value before that. \$\$n refers to the nth value from the end; \$\$2 is the value just prior to \$\$, \$\$1 is equivalent to \$\$, and \$\$0 is equivalent to \$.

For example, suppose you have just printed a pointer to a structure and want to see the contents of the structure. It suffices to type:

p *\$

If you have a chain of structures where the component next points to the next one, you can print the contents of the next one with this:

```
p *$.next
```

You can print successive links in the chain by repeating this command—which you can do by just typing **Enter**.

The history records values, not expressions. If the value of ${\bf x}$ is 4 and you type these commands:



print x

then the value recorded in the value history by the print command remains 4 even though the value of x has changed.

show values

Print the last ten values in the value history, with their item numbers. This is like p \$\$9 repeated ten times, except that show values doesn't change the history.

show values n

Print ten history values centered on history item number n.

show values +

Print ten history values just after the values last printed. If no more values are available, show values + produces no display.

Pressing **Enter** to repeat show values n has exactly the same effect as show values +.

Convenience variables

GDB provides *convenience variables* that you can use within GDB to hold on to a value and refer to it later. These variables exist entirely within GDB; they aren't part of your program, and setting a convenience variable has no direct effect on further execution of your program. That's why you can use them freely.

Convenience variables are prefixed with \$. Any name preceded by \$ can be used for a convenience variable, unless it's one of the predefined machine-specific register names (see "*Registers* (p. 368)"). Value history references, in contrast, are *numbers* preceded by \$. See "*Value history* (p. 365)."

You can save a value in a convenience variable with an assignment expression, just as you'd set a variable in your program. For example:

```
set $foo = *object_ptr
```

saves in \$foo the value contained in the object pointed to by object_ptr.

Using a convenience variable for the first time creates it, but its value is void until you assign a new value. You can alter the value with another assignment at any time.

Convenience variables have no fixed types. You can assign to a convenience variable any type of value, including structures and arrays, even if that variable already has a value of a different type. The convenience variable, when used as an expression, has the type of its current value.

show convenience

Print a list of convenience variables used so far, and their values. Abbreviated show con.

One of the ways to use a convenience variable is as a counter to be incremented or a pointer to be advanced. For example, to print a field from successive elements of an array of structures:

```
set $i = 0
print bar[$i++]->contents
```

Repeat that command by pressing **Enter**.

Some convenience variables are created automatically by GDB and given values likely to be useful:

\$_

The variable \$_ is automatically set by the x command to the last address examined (see "Examining memory (p. 356)"). Other commands that provide a default address for x to examine also set \$_ to that address; these commands include info line and info breakpoint. The type of \$_ is void * except when set by the x command, in which case it's a pointer to the type of \$__.

\$___

The variable \$__ is automatically set by the x command to the value found in the last address examined. Its type is chosen to match the format in which the data was printed.

\$_exitcode

The variable \$_exitcode is automatically set to the exit code when the program being debugged terminates.

Registers

You can refer to machine register contents, in expressions, as variables with names starting with \$. The names of registers are different for each machine; use info registers to see the names used on your machine.

info registers

Print the names and values of all registers except floating-point registers (in the selected stack frame).

info all-registers

Print the names and values of all registers, including floating-point registers.

info registers regname ...

Print the value of each specified register *regname*. As discussed in detail below, register values are normally relative to the selected stack frame. The *regname* may be any register name valid on the machine you're using, with or without the initial \$.

GDB has four "standard" register names that are available (in expressions) on most machines—whenever they don't conflict with an architecture's canonical mnemonics for registers:

\$pc

Program counter.

\$sp

Stack pointer.

\$fp

A register that contains a pointer to the current stack frame.

\$ps

A register that contains the processor status.

For example, you could print the program counter in hex with:

p/x \$pc

or print the instruction to be executed next with:

x/i \$pc

or add four to the stack pointer with:

set \$sp += 4



This is a way of removing one word from the stack, on machines where stacks grow downward in memory (most machines, nowadays). This assumes that the innermost stack frame is selected; setting \$sp isn't allowed when other stack frames are selected. To pop entire frames off the stack, regardless of machine architecture, use the **Enter** key.

Whenever possible, these four standard register names are available on your machine even though the machine has different canonical mnemonics, so long as there's no conflict. The info registers command shows the canonical names.

GDB always considers the contents of an ordinary register as an integer when the register is examined in this way. Some machines have special registers that can hold nothing but floating point; these registers are considered to have floating point values. There's no way to refer to the contents of an ordinary register as floating point value (although you can *print* it as a floating point value with print/f \$regname).

Some registers have distinct "raw" and "virtual" data formats. This means that the data format in which the register contents are saved by the operating system isn't the same one that your program normally sees. For example, the registers of the 68881 floating point coprocessor are always saved in "extended" (raw) format, but all C programs expect to work with "double" (virtual) format. In such cases, GDB normally works with the virtual format only (the format that makes sense for your program), but the info registers command prints the data in both formats.

Normally, register values are relative to the selected stack frame (see "Selecting a frame (p. 343)"). This means that you get the value that the register would contain if all stack frames farther in were exited and their saved registers restored. In order to see the true contents of hardware registers, you must select the innermost frame (with frame 0).

However, GDB must deduce where registers are saved, from the machine code generated by your compiler. If some registers aren't saved, or if GDB is unable to locate the saved registers, the selected stack frame makes no difference.

Floating point hardware

Depending on the configuration, GDB may be able to give you more information about the status of the floating point hardware.

info float

Display hardware-dependent information about the floating point unit. The exact contents and layout vary depending on the floating point chip. Currently, info float is supported on x86 machines.

Examining the symbol table

The commands described in this section allow you to inquire about the symbols (names of variables, functions and types) defined in your program. This information is inherent in the text of your program and doesn't change as your program executes. GDB finds it in your program's symbol table, in the file indicated when you started GDB (see the description of the gdb utility).

Occasionally, you may need to refer to symbols that contain unusual characters, which GDB ordinarily treats as word delimiters. The most frequent case is in referring to static variables in other source files (see "*Program variables* (p. 353)"). Filenames are recorded in object files as debugging symbols, but GDB ordinarily parses a typical filename, like foo.c, as the three words foo, ., and c. To allow GDB to recognize foo.c as a single symbol, enclose it in single quotes. For example:

```
p 'foo.c'::x
```

looks up the value of x in the scope of the file foo.c.

info address symbol

Describe where the data for *symbol* is stored. For a register variable, this says which register it's kept in. For a nonregister local variable, this prints the stack-frame offset at which the variable is always stored.

Note the contrast with print & symbol, which doesn't work at all for a register variable, and for a stack local variable prints the exact address of the current instantiation of the variable.

whatis exp

Print the data type of expression *exp*. The *exp* expression isn't actually evaluated, and any side-effecting operations (such as assignments or function calls) inside it don't take place. See "*Expressions* (p. 352)."

whatis

Print the data type of \$, the last value in the value history.

ptype typename

Print a description of data type *typename*, which may be the name of a type, or for C code it may have the form:

- class *class-name*
- struct struct-tag
- union *union-tag*
- enum enum-tag

ptype exp or ptype

Print a description of the type of expression *exp*. The ptype command differs from whatis by printing a detailed description, instead of just the name of the type. For example, for this variable declaration:

```
struct complex {double real; double imag;} v;
```

the two commands give this output:

```
(gdb) whatis v
type = struct complex
(gdb) ptype v
type = struct complex {
    double real;
    double imag;
}
```

As with whatis, using ptype without an argument refers to the type of \$, the last value in the value history.

info types regexp or info types

Print a brief description of all types whose name matches *regexp* (or all types in your program, if you supply no argument). Each complete typename is matched as though it were a complete line; thus, i type value gives information on all types in your program whose name includes the string value, but i type ^value\$ gives information only on types whose complete name is value.

This command differs from ptype in two ways: first, like whatis, it doesn't print a detailed description; second, it lists all source files where a type is defined.

info source

Show the name of the current source file—that is, the source file for the function containing the current point of execution—and the language it was written in.

info sources

Print the names of all source files in your program for which there is debugging information, organized into two lists: files whose symbols have already been read, and files whose symbols are read when needed.

info functions

Print the names and data types of all defined functions.

info functions regexp

Print the names and data types of all defined functions whose names contain a match for regular expression *regexp*. Thus, info fun step finds all functions whose names include step; info fun 'step finds those whose names start with step.

info variables

Print the names and data types of all variables that are declared outside of functions (i.e. excluding local variables).

info variables regexp

Print the names and data types of all variables (except for local variables) whose names contain a match for regular expression *regexp*.

Some systems allow individual object files that make up your program to be replaced without stopping and restarting your program. If you're running on one of these systems, you can allow GDB to reload the symbols for automatically relinked modules:

- set symbol-reloading on replace symbol definitions for the corresponding source file when an object file with a particular name is seen again.
- set symbol-reloading off don't replace symbol definitions when reencountering object files of the same name. This is the default state; if you aren't running on a system that permits automatically relinking modules, you should leave symbol-reloading off, since otherwise GDB may discard symbols when linking large programs, that may contain several modules (from different directories or libraries) with the same name.
- show symbol-reloading show the current on or off setting.

maint print symbols filename or maint print psymbols filename or maint print msymbols filename

Write a dump of debugging symbol data into the file *filename*. These commands are used to debug the GDB symbol-reading code. Only symbols with debugging data are included.

- If you use maint print symbols, GDB includes all the symbols for which it has already collected full details: that is, *filename* reflects symbols for only those files whose symbols GDB has read. You can use the command info sources to find out which files these are.
- If you use maint print psymbols instead, the dump shows information about symbols that GDB only knows partially—that is, symbols defined in files that GDB has skimmed, but not yet read completely.

• Finally, maint print msymbols dumps just the minimal symbol information required for each object file from which GDB has read some symbols.

Altering execution

Once you think you've found an error in your program, you might want to find out for certain whether correcting the apparent error would lead to correct results in the rest of the run. You can find the answer by experimenting, using the GDB features for altering execution of the program.

For example, you can store new values in variables or memory locations, give your program a signal, restart it at a different address, or even return prematurely from a function.

Assignment to variables

To alter the value of a variable, evaluate an assignment expression.

```
See "Expressions (p. 352)". For example,
```

```
print x=4
```

stores the value 4 in the variable x and then prints the value of the assignment expression (which is 4).

If you aren't interested in seeing the value of the assignment, use the set command instead of the print command. The set command is really the same as print except that the expression's value isn't printed and isn't put in the value history (see "Value history (p. 365)"). The expression is evaluated only for its effects.

If the beginning of the argument string of the set command appears identical to a set subcommand, use the set variable command instead of just set. This command is identical to set except for its lack of subcommands. For example, if your program has a variable width, you get an error if you try to set a new value with just set width=13, because GDB has the command set width:

```
(gdb) whatis width
type = double
(gdb) p width
$4 = 13
(gdb) set width=47
Invalid syntax in expression.
```

The invalid expression, of course, is =47. In order to actually set the program's variable width. use:

```
(gdb) set var width=47
```

GDB allows more implicit conversions in assignments than C; you can freely store an integer value into a pointer variable or vice versa, and you can convert any structure to any other structure that is the same length or shorter.

To store values into arbitrary places in memory, use the $\{\ldots\}$ construct to generate a value of specified type at a specified address (see "*Expressions* (p. 352)"). For

example, $\{int\}0x83040$ refers to memory location 0x83040 as an integer (which implies a certain size and representation in memory), and:

```
set {int}0x83040 = 4
```

stores the value 4 in that memory location.

Continuing at a different address

Ordinarily, when you continue your program, you do so at the place where it stopped, with the continue command. You can instead continue at an address of your own choosing, with the following commands:

jump linespec

Resume execution at line *linespec*. Execution stops again immediately if there's a breakpoint there. See "*Printing source lines* (p. 346)" for a description of the different forms of *linespec*.

The jump command doesn't change the current stack frame, or the stack pointer, or the contents of any memory location or any register other than the program counter. If line *linespec* is in a different function from the one currently executing, the results may be bizarre if the two functions expect different patterns of arguments or of local variables. For this reason, the jump command requests confirmation if the specified line isn't in the function currently executing. However, even bizarre results are predictable if you're well acquainted with the machine-language code of your program.

jump *address

Resume execution at the instruction at address.

You can get much the same effect as the jump command by storing a new value in the register \$pc. The difference is that this doesn't start your program running; it only changes the address of where it *will* run when you continue. For example:

```
set $pc = 0x485
```

makes the next continue command or stepping command execute at address 0x485, rather than at the address where your program stopped. See "Continuing and stepping (p. 334)."

The most common occasion to use the jump command is to back up — perhaps with more breakpoints set — over a portion of a program that has already executed, in order to examine its execution in more detail.

Giving your program a signal

Invoking the signal command isn't the same as invoking the kill utility from the shell.

Sending a signal with kill causes GDB to decide what to do with the signal depending on the signal handling tables (see "Signals" (p. 338)"). The signal command passes the signal directly to your program.

signal signal

Resume execution where your program stopped, but immediately give it the given *signal*. The *signal* can be the name or number of a signal. For example, on many systems signal 2 and signal SIGINT are both ways of sending an interrupt signal.

Alternatively, if *signal* is zero, continue execution without giving a signal. This is useful when your program stopped on account of a signal and would ordinary see the signal when resumed with the continue command; signal 0 causes it to resume without a signal.

The signal command doesn't repeat when you press **Enter** a second time after executing the command.

Returning from a function

When you use return, GDB discards the selected stack frame (and all frames within it). You can think of this as making the discarded frame return prematurely. If you wish to specify a value to be returned, give that value as the argument to return.

return or return expression

You can cancel the execution of a function call with the return command. If you give an *expression* argument, its value is used as the function's return value.

This pops the selected stack frame (see "Selecting a frame (p. 343)") and any other frames inside it, leaving its caller as the innermost remaining frame. That frame becomes selected. The specified value is stored in the registers used for returning values of functions.

The return command doesn't resume execution; it leaves the program stopped in the state that would exist if the function had just returned. In contrast, the finish command (see "Continuing and stepping (p. 334)") resumes execution until the selected stack frame returns naturally.

Calling program functions

You can use this variant of the print command if you want to execute a function from your program, but without cluttering the output with void returned values. If the result isn't void, it's printed and saved in the value history.

call expr

Evaluate the expression *expr* without displaying void returned values.

A user-controlled variable, *call_scratch_address*, specifies the location of a scratch area to be used when GDB calls a function in the target. This is necessary because the usual method of putting the scratch area on the stack doesn't work in systems that have separate instruction and data spaces.

Patching programs

By default, GDB opens the file containing your program's executable code (or the core file) read-only. This prevents accidental alterations to machine code; but it also prevents you from intentionally patching your program's binary.

If you'd like to be able to patch the binary, you can specify that explicitly with the set write command. For example, you might want to turn on internal debugging flags, or even to make emergency repairs.

set write on Or set write off

If you specify set write on, GDB opens executable and core files for both reading and writing; if you specify set write off (the default), GDB opens them read-only.

If you've already loaded a file, you must load it again (using the exec-file or core-file command) after changing set write for your new setting to take effect.

show write

Display whether executable files and core files are opened for writing as well as reading.

Chapter 13

QNX Neutrino for ARMv7 Cortex A-8 and A-9 Processors

This chapter describes how to set up QNX Neutrino for boards that support ARMv7 Cortex A-8 and Cortex A-9 processors.

The support for ARMv7 architecture processors (Cortex) is provided by:

- the libstartup.a library, which initializes the ARMv7 MMU features (see "The startup library" in the Customizing Image Startup Programs chapter of *Building Embedded Systems*)
- the microkernel, procnto, which uses the ARMv7 MMU



ARMv7 has two options for handling single-precision floating point: NEON and VFPv3. When ARMv7 processors boot, libstartup detects the presence of the NEON engine and Floating-Point Unit (FPU), and sets the CPU flags accordingly.

\$QNX_TARGET/armle-v7 provides binaries that run only on ARMv7 processors, and that were built with options optimized for the ARMv7 architecture:

- They use only ARMv7 instructions.
- They use VFPv3-d16 instructions for floating-point operations.

The kernels are named procnto and procnto-instr because there's a single variant that supports only ARMv7 processors.

libstartup

The libstartup CPU detection and configuration library includes the following:

- armv_cache
- armv_chip
- armv chip detect()
- armv_pte
- armv_setup_v7()

For more information, see their entries in "The startup library" in the Customizing Image Startup Programs chapter of *Building Embedded Systems*.

The default startup/lib/arm/cstart.S uses some CP15 cache maintenance operations that aren't implemented on ARMv7 processors. This means that you'll need to create a modified copy of this file in your board startup directory, and then modify the lines that are commented with "FIXME v7".

For example, replace the instruction:

(to invalidate the data and instruction caches) with the instruction:



(to invalidate the instruction cache). The startup code typically assumes that the data cache is cleaned by the IPL before the startup program is executed, and that the startup doesn't run with the MMU enabled. These assumptions mean that there's no requirement to invalidate the data cache; however:

- If the IPL doesn't clean and invalidate the data cache, you must explicitly
 do this in cstart. S in the _start() function.
- If your startup enables the MMU, you must clean and invalidate the data cache before jumping to the kernel in *vstart()*.

Behavior of shm_ctl()

The process of the ARMv7 MMU's physically-tagged cache to remove the 32 MB address space restriction imposed by the earlier ARM MMU architecture; the per-process address space is now 2 GB.

The microkernel doesn't implement the ARM-specific global memory region implemented by earlier microkernels for ARM. This means that $shm_ctl()$ no longer has any ARM-specific special behavior:

- Objects created with *shm_ctl()* are always mapped into each process's address space. These mappings are inherited across calls to *fork()*.
- SHMCTL_GLOBAL is ignored, since all mappings are placed in the per-process address space.
- SHMCTL_PRIV and SHMCTL_LOWERPROT are ignored. All mappings are created in the per-process address space with user mode access protections.

CPU flags

Runtime features for a processor are indicated by the following flags found within the *flags* member of the *cpuinfo* area of the system page:

CPU_FLAG_FPU

A VFP unit is present. The VFP functionality support is enabled when the startup program detects the presence of VFP hardware and sets the system page CPU_FLAG_FPU flag.

ARM_CPU_FLAG_NEON

A NEON unit is present.

ARM_CPU_FLAG_WMMX2

An iWMMX2 coprocessor is present.

ARM_CPU_FLAG_V7

The CPU implements the ARMv7 architecture.

ARM_CPU_FLAG_SMP

The target is running multiple processors.



NEON is optional in ARMv7 and may not be implemented by all processor implementations. The ARM_CPU_FLAG_NEON flag is set if a NEON unit is present.

For more information about the system page, see the Customizing Image Startup Programs chapter of *Building Embedded Systems*.

Board startup for SMP

The procnto-smp kernel relies on the startup program to manage the initialization of each CPU and to provide support for interprocess communication using interprocess interrupts (IPIs). This support is divided into two areas:

- generic support in libstartup
- board-specific support in the board startup

For every BSP that has SMP support, we include a board_smp.c file. This board-specific startup program is responsible for providing a number of support functions for the generic libstartup code:

- board_smp_num_cpu() (p. 383): return the number of CPUs on the system
- board_smp_init() (p. 384): perform any board-specific SMP initialization
- board_smp_start() (p. 384): perform any board- and CPU-specific actions required to start the specified CPU
- board_smp_adjust_num() (p. 384): perform any board- and CPU-specific actions required to adjust the CPU number

In addition to the board-specific startup program file included with the software, you'll need to create a send_ipi callout used by procnto-smp to send interprocess interrupts. The kernel uses this board-specific callout routine to send an interprocess interrupt (IPI) to a specific CPU.

This callout routine must be manually created in assembler to ensure it is position-independent, meaning that the code is copied into the system page.

The kernel IPI protocol uses a bitmask of pending commands for each CPU. Use this send_ipi callout to set the command bit for the target CPU and to perform the board-specific operations required to trigger an IPI interrupt on the target CPU:

board_smp_num_cpu()

The *smp_init()* function calls this function to find the number of CPUs physically present in the system.

Example:

unsigned

```
board_smp_num_cpu()
{
    unsigned num;

    // A board-specific operation to determine the number of
    // CPUs in the system
    return num;
}
```

board smp init()

The *smp_init()* function calls this function to perform any board-specific SMP initialization in the system page. At a minimum, it must specify the board-specific send_ipi callout:

Example:

```
void
board_smp_init(struct smp_entry *smp, unsigned num_cpus)
{
    smp->send_ipi = (void *)&my_send_ipi;
}
```

board_smp_start()

The *start_aps()* function calls this function to perform any board- and CPU-specific actions required to start the specified CPU.

```
int
board_smp_start(unsigned cpu, void (*start)(void)) {
    return of_smp_start(cpu, start);
}
```

board_smp_adjust_num()

The *start_aps()* function calls this function to perform any board- and CPU-specific actions required to adjust the CPU number.

Example:

```
unsigned
board_smp_adjust_num(unsigned cpu)
{
    // Board- or CPU-specific actions to set CPU ID to CPU
    return cpu;
}
```

Using ARMv7 instructions

By default, qcc provides only ARMv7 instructions.

The ARMv7 architecture introduces a number of new instructions that may provide performance benefits for certain code. For example, DSP algorithms can take advantage of the new media instructions.

For ARMv7, the -Vgcc_ntoarmv7le option makes qcc use ARMv7 instructions and generate VFPv3-d16 code for floating point. This is the default for the ARMle-v7 variant; it instructs the compiler to generate code that uses only 16 double registers (d0-d15), even if the processor implements 32 double registers.

The reason for this restriction is that the ARMv7 architecture allows either a vfp-d16 or vfp-d32 implementation, and there are implementations that provide only 16 doubles, so we use that option to ensure that code will run on all ARMv7 processors.

The VFP unit is configured to use RunFast mode by default:

- Trapped floating point exceptions are disabled.
- The Round-to-nearest mode is enabled.
- The Flush-to-zero mode is enabled.
- Default NaNs are enabled.

Both Round-to-nearest and Flush-to-zero are defined in the IEEE754 standard. For more information about the RunFast mode of operation, see the *ARM Architecture Reference Manual*.

This doesn't provide complete compliance with IEEE754. Applications can set the FPSCR to enable the required rounding mode and NaN behavior if strict IEEE754 behavior is required.

Chapter 14 Advanced Qnet Topics

This appendix covers some advanced aspects of Transparent Distributed Processing (TDP) or Qnet.

Low-level discussion of Qnet principles

The Qnet protocol extends interprocess communication (IPC) transparently over a network of microkernels. This is done by taking advantage of the QNX Neutrino RTOS's message-passing paradigm. Message passing is the central theme of QNX Neutrino that manages a group of cooperating processes by routing messages. This enhances the efficiency of all transactions among all processes throughout the system.

As we found out in the "How does it work? (p. 145)" section of the Transparent Distributed Processing Using Qnet chapter, many POSIX and other function calls are built on this message passing. For example, the write() function is built on the MsgSendv() function. In this section, you'll find several things, e.g. how Qnet works at the message passing level; how node names are resolved to node numbers, and how that number is used to create a connection to a remote node.

In order to understand how message passing works, consider two processes that wish to communicate with each other: a client process and a server process. First we consider a single-node case, where both client and server reside in the same machine. In this case, the client simply creates a connection (via *ConnectAttach()*) to the server, and then sends a message (perhaps via *MsgSend()*).

The Qnet protocol extends this message passing over to a network. For example, consider the case of a simple network with two machines: one contains the client process, the other contains the server process. The code required for client-server communication is identical (it uses same API) to the code in the single-node case. The client creates a connection to the server and sends the server a message. The only difference in the network case is that the client specifies a different node descriptor for the *ConnectAttach()* function call in order to indicate the server's node. See the diagram below to understand how message passing works.






Each node in the network is assigned a unique name that becomes its identifier. This is what we call a *node descriptor*. This name is the only visible means to determine whether the OS is running as a network or as a standalone operating system.

Details of Qnet data communication


As mentioned before, Qnet relies on the message passing paradigm of QNX Neutrino. Before any message pass, however, the application (e.g. the client) must establish a connection to the server using the low-level *ConnectAttach()* function call:

ConnectAttach(nd, pid, chid, index, flags);

In the above call, *nd* is the node descriptor that identifies each node uniquely. The node descriptor is the only visible means to determine whether the QNX Neutrino RTOS is running as a network or as a standalone operating system. If *nd* is zero, you're specifying a local server process, and you'll get local message passing from the client to the server, carried out by the local kernel as shown below:

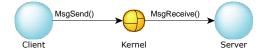

When you specify a nonzero value for *nd*, the application transparently passes message to a server on another machine, and connects to a server on another machine. This way, Qnet not only builds a network of trusted machines, it lets all these machines share their resources with little overhead.

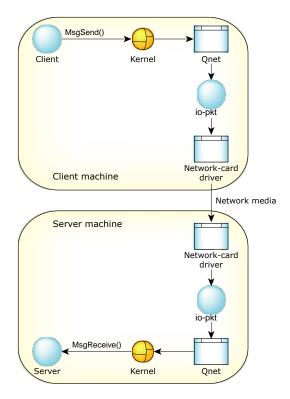

The advantage of this approach lies in using the same API. The key design features are:

- The kernel puts the user data directly into (and out of) the network card's buffers there's no copying of the payload.
- There are no context switches as the packet travels from (and to) the kernel from the network card.

These features maximize performance for large payloads and minimize turnaround time for small packets.

Node descriptors

The <sys/netmgr.h> header defines the ND_LOCAL_NODE macro as zero. You can use it any time that you're dealing with node descriptors to make it obvious that you're talking about the local node.

As discussed, node descriptors represent machines, but they also include *Quality of Service* information. If you want to see if two node descriptors refer to the same machine, you can't just arithmetically compare the descriptors for equality; use the *ND_NODE_CMP()* macro instead:

- If the return value from the macro is zero, the descriptors refer to the same node.
- If the value is less than 0, the first node is "less than" the second.
- If the value is greater than 0, the first node is "greater than" the second.

This is similar to the way that strcmp() and memcmp() work. It's done this way in case you want to do any sorting that's based on node descriptors.

The <sys/netmgr.h> header file also defines the following networking functions:

- netmgr strtond()
- netmgr_ndtostr()
- netmgr_remote_nd()

netmgr_strtond()

This function converts the string pointed at by *nodename* into a node descriptor, which it returns. If there's an error, *netmgr_strtond()* returns -1 and sets *errno*. If the *endstr* parameter is non-NULL, *netmgr_strtond()* sets **endstr* to point at the first character beyond the end of the node name. This function accepts all three forms of node name — simple, directory, and FQNN (Fully Qualified NodeName). FQNN identifies a QNX Neutrino node using a unique name on a network. The FQNN consists of the nodename and the node domain.

```
int netmgr_strtond(const char *nodename, char **endstr);
```

netmgr_ndtostr()

This function converts the given node descriptor into a string and stores it in the memory pointed to by *buf*. The size of the buffer is given by *maxbuf*. The function returns the actual length of the node name (even if the function had to truncate the name to get it to fit into the space specified by *maxbuf*), or -1 if an error occurs (*errno* is set).

```
char *buf,
size_t maxbuf);
```

The *flags* parameter controls the conversion process, indicating which pieces of the string are to be output. The following bits are defined:

ND2S_DIR_SHOW, ND2S_DIR_HIDE

Show or hide the network directory portion of the string. If you don't set either of these bits, the string includes the network directory portion if the node isn't in the default network directory.

ND2S_QOS_SHOW, ND2S_QOS_HIDE

Show or hide the quality of service portion of the string. If you don't specify either of these bits, the string includes the quality of service portion if it isn't the default QoS for the node.

ND2S_NAME_SHOW, ND2S_NAME_HIDE

Show or hide the node name portion of the string. If you don't specify either of these bits, the string includes the name if the node descriptor doesn't represent the local node.

ND2S_DOMAIN_SHOW, ND2S_DOMAIN_HIDE

Show or hide the node domain portion of the string. If you don't specify either of these bits, and a network directory portion is included in the string, the node domain is included if it isn't the default for the output network directory. If you don't specify either of these bits, and the network directory portion isn't included in the string, the node domain is included if the domain isn't in the default network directory.

By combining the above bits in various combinations, all sorts of interesting information can be extracted, for example:

ND2S NAME SHOW

A name that's useful for display purposes.

ND2S_DIR_HIDE | ND2S_NAME_SHOW | ND2S_DOMAIN_SHOW

A name that you can pass to another node and know that it's referring to the same machine (i.e. the FQNN).

ND2S_DIR_SHOW | ND2S_NAME_HIDE | ND2S_DOMAIN_HIDE with ND_LOCAL_NODE

The default network directory.

ND2S_DIR_HIDE | NDS2_QOS_SHOW | ND2S_NAME_HIDE | ND2S_DOMAIN_HIDE with ND_LOCAL_NODE

The default Quality of Service for the node.

netmgr_remote_nd()

This function takes the *local_nd* node descriptor (which is relative to this node) and returns a new node descriptor that refers to the same machine, but is valid only for the node identified by *remote_nd*. The function can return -1 in some cases (e.g. if the *remote_nd* machine can't talk to the *local_nd* machine).

int netmgr_remote_nd(int remote_nd, int local_nd);

Booting over the network

Overview

Unleash the power of Qnet to boot your computer (i.e. client) over the network! You can do it when your machine doesn't have a local disk or large flash. In order to do this, you first need the GRUB executable. GRUB is the generic boot loader that runs at computer startup and is responsible for loading the OS into memory and starting to execute it.

During booting, you need to load the GRUB executable into the memory of your machine, by using:

- a GRUB floppy or CD (i.e. local copy of GRUB)
 Or-
- Network card boot ROM (e.g. PXE, bootp downloads GRUB from server)

The QNX Neutrino RTOS doesn't include GRUB. To get GRUB:

- 1. Go to www.gnu.org/software/grub website.
- 2. Download the GRUB executable.
- **3.** Create a floppy or CD with GRUB on it, or put the GRUB binary on the server for downloading by a network boot ROM.

Here's what the PXE boot ROM does to download the OS image:

- The network card of your computer broadcasts a DHCP request.
- The DHCP server responds with the relevant information, such as IP address, netmask, location of the pxegrub server, and the menu file.
- The network card then sends a TFTP request to the pxegrub server to transfer the OS image to the client.

Here's an example to show the different steps to boot your client using PXE boot ROM:

Creating directory and setting up configuration files

Create a new directory on your DHCP server machine called /tftpboot and run make install. Copy the pxegrub executable image from /opt/share/grub/i386-pc to the /tftpboot directory.

Modify the /etc/dhcpd.conf file to allow the network machine to download the pxegrub image and configuration menu, as follows:

```
# dhcpd.conf
#
Sample configuration file for PXE dhcpd
#
subnet 192.168.0.0 netmask 255.255.255.0 {
  range 192.168.0.2 192.168.0.250;
  option broadcast-address 192.168.0.255;
  option domain-name-servers 192.168.0.1;
```

```
# Hosts which require special configuration options can be listed in # host statements. If no address is specified, the address will be # allocated dynamically (if possible), but the host-specific information # will still come from the host declaration.

host testpxe {
    hardware ethernet 00:E0:29:88:0D:D3;  # MAC address of system to boot fixed-address 192.168.0.3;  # This line is optional option-150 "(nd)/tftpboot/menu.1st";  # Tell grub to use Menu file filename "/tftpboot/pxegrub";  # Location of PXE grub image } # End dhcpd.conf
```

If you're using an ISC 3 DHCP server, you may have to add a definition of code 150 at the top of the dhcpd.conf file as follows:



```
option pxe-menu code 150 = text;
```

Then instead of using option option-150, use:

```
option pxe-menu "(nd)/tftpboot/menu.1st";)
```

Here's an example of the menu.1st file:

Building an OS image

Here's a functional buildfile that you can use to create an OS image that can be loaded by GRUB without a hard disk or any local storage.

Create the image by typing the following:

```
$ mkifs -vvv build.txt build.img
$ cp build.img /tftpboot
```

Here is the buildfile:



In a real buildfile, you can't use a backslash (\) to break a long line into shorter pieces, but we've done that here, just to make the buildfile easier to read.

```
[virtual=x86,elf +compress] boot = {
    startup-bios

PATH=/proc/boot:/bin:/usr/bin:/sbin:/usr/sbin: \
    /usr/local/bin:/usr/local/sbin \
    LD_LIBRARY_PATH-/proc/boot: \
    /lib:/usr/lib:/lib/dll procnto
}
[+script] startup-script = {
    procmgr_symlink ../../proc/boot/libc.so.3 /usr/lib/ldqnx.so.2

# # do magic required to set up PnP and pci bios on x86
    # display_msg Do the BIOS magic ...
    seedres
    pci-bios
    waitfor /dev/pci
```

```
# A really good idea is to set hostname and domain # before quet is started
     #
setconf _CS_HOSTNAME my_host
setconf _CS_DOMAIN my_domain.somewhere.com
     # If you do not set the hostname to something
# unique before quet is started, quet will try
# to create and set the hostname to a hopefully
# unique string constructed from the ethernet
      # address, which will look like EAc07f5e
      # which will probably work, but is pretty ugly.
     # start io-pkt, network driver and gnet
      # NB to help debugging, add verbose=1 after -pgnet below
     display_msg Starting io-pkt-v6-hc and speedo driver and qnet ...
      io-pkt-v6-hc -dspeedo -pqnet
     display_msg Waiting for Ethernet driver to initialize ...
     if_up -lp -s 60 fxp0
     \tt display\_msg Waiting for <code>Qnet</code> to initialize ... waitfor /net 60
      # Now that we can fetch executables from the remote server
      # we can run devc-con and ksh, which we do not include in
      # the image, to keep the size down
     # In our example, the server we are booting from # has the hostname qpkg and the SAME domain: ott.qnx.com
      "
# We clean out any old bogus connections to the qpkg server
     # if we have recently rebooted quickly, by fetching a trivial
# executable which works nicely as a sacrificial lamb
      /net/qpkg/bin/true
      # now print out some interesting techie-type information
      display_msg hostname:
     getconf _CS_HOSTNAME
display_msg domain:
getconf _CS_DOMAIN
display_msg uname -a:
      # create some text consoles
     display_msg Starting 3 text consoles which you can flip display_msg between by holding ctrl alt + OR ctrl alt -
     display_msg
     devc-con -n3
      waitfor /dev/con1
      # start up some command line shells on the text consoles
     [+session] TERM=qansi HOME=/ PATH=/bin:/usr/bin:\
/usr/local/bin:/sbin:/usr/sbin:/usr/local/sbin:\
      /proc/boot ksh &
     [+session] TERM=qansi HOME=/ PATH=/bin:/usr/bin:\
/usr/local/bin:/sbin:/usr/sbin:\
/usr/local/sbin:/proc/boot ksh &
     [+session] TERM=qansi HOME=/ PATH=/bin:\
/usr/bin:/usr/local/bin:/sbin:/usr/sbin:\
/usr/local/sbin:/proc/boot ksh &
      # startup script ends here
# Let's create some links in the virtual file system so that
# applications are fooled into thinking there's a local hard disk
# Make /tmp point to the shared memory area
[type=link] /tmp=/dev/shmem
# Redirect console (error) messages to con1
[type=link] /dev/console=/dev/con1
Mow for the diskless quet magic. In this example, we are booting using a server which has the hostname qpkg. Since we do not have a hard disk, we will create links to point to the servers disk
```

}

```
#
[type=link] /bin=/net/qpkg/bin
[type=link] /boot=/net/qpkg/boot
[type=link] /etc=/net/qpkg/loot
[type=link] /home=/net/qpkg/lib
[type=link] /lib=/net/qpkg/lib
[type=link] /pkg=-link] /pkgs=/net/qpkg/pkgs
[type=link] /pkgs=/net/qpkg/pkgs
[type=link] /sbin=/net/qpkg/sbin
[type=link] /sbin=/net/qpkg/sbin
[type=link] /war=/net/qpkg/war
[type=link] /war=/net/qpkg/war
[type=link] /war=/net/qpkg/var
[type=link] /war=/net/qpkg/out
[type=link] /war=/net/qpkg/bin
```

Booting the client

With your DHCP server running, boot the client machine using the PXE ROM. The client machine attempts to obtain an IP address from the DHCP server and load pxegrub. If successful, it should display a menu of available images to load. Select your option for the OS image. If you don't select any available option, the BIOS image is loaded after 3 seconds. You can also use the arrow keys to select the downloaded OS image.

If all goes well, you should now be running your OS image.

Troubleshooting

If the boot is unsuccessful, troubleshoot as follows:

Make sure that:

- your DHCP server is running and is configured correctly
- TFTP isn't commented out of the /etc/inetd.conf file
- all users can read pxegrub and the OS image
- inetd is running

What are the limitations...

- Qnet's functionality is limited when applications create a shared-memory region. That only works when the applications run on the same machine.
- Server calls such as MsgReply(), MsgError(), MsgWrite(), MsgRead(), and
 MsgDeliverEvent() behave differently for local and network cases. In the local case,
 these calls are non blocking, whereas in the network case, these calls block. In the
 non blocking scenario, a lower priority thread won't run; in the network case, a
 lower priority thread can run.
- The mq isn't working.
- The ConnectAttach() function appears to succeed the first time, even if the remote
 node is nonoperational or is turned off. In this case, it should report a failure, but
 it doesn't. For efficiency, ConnectAttach() is paired up with MsgSend(), which in
 turn reports the error. For the first transmission, packets from both ConnectAttach()
 and MsgSend() are transmitted together.
- Qnet isn't appropriate for broadcast or multicast applications. Since you're sending
 messages on specific channels that target specific applications, you can't send
 messages to more than one node or manager at the same time.
- For cross-endian development:
 - Qnet has limited support for communication between a big-endian and a little-endian machine; however, it is supported between machines of different processor types (e.g. ARMLE-V7, x86) that are of the same endian. If you require cross-endian networking with Qnet, you need to be aware of these limitations:
 - Not all QNX resource managers support cross-endian. The ones that support
 cross-endian are: pipe, mqueue, HAM, io-char, devf, ETFS, and parts
 of proc (name resolve in procnto, /dev/shmem, pathmgr and spawning
 handle cross-endian messages, but procfs doesn't.)
 - For servers that use only QNX messages, you'll need to set the cross-endian flag RESMGR_FLAG_CROSS_ENDIAN in the resmgr_attr_t structure that you pass to the function resmgr_attach() in order to identify it as a cross-endian capable server. The actual byte-swapping code is done in libc.



Only the servers need to have the cross-endian flag RESMGR_FLAG_CROSS_ENDIAN set; the clients don't require this flag to be set.

If a server uses custom messages (i.e. devctls), the server will need to be
modified to handle different endian messages. Incoming messages will
contain a flag to identify whether it is the "other" endian (the big or the
little endian). The server would be responsible for doing the endian swap for

proper consumption. The server is also responsible for replying in the correct endian of the client. The servers can access the endian swap code that is in libc.

- You'll need to make the fs-flash3 library endian-aware.
- There is a requirement for readdir() processing in order for the server to handle requests. You'll need to issue one resmgr_msgreplyv() rather than use MsgWrite() one at a time.

Forcing retransmission

The _NETMGR_QOS_FLUSH message lets an application force a retransmission instead of waiting for Qnet to activate its own timeout.

This is useful for periodic detectable hardware failures where the application can take action, instead of enabling shorter timeout periods for Qnet, which would add more load to the system. For example:

A20 gate

On x86-based systems, a hardware component that forces the A20 address line on the bus to zero, regardless of the actual setting of the A20 address line on the processor. This component is in place to support legacy systems, but the QNX Neutrino RTOS doesn't require any such hardware. Note that some processors, such as the 386EX, have the A20 gate hardware built right into the processor itself — our IPL will disable the A20 gate as soon as possible after startup.

adaptive

Scheduling policy whereby a thread's priority is decayed by 1. See also *FIFO*, *round robin*, and *sporadic*.

adaptive partitioning

A method of dividing, in a flexible manner, CPU time, memory, file resources, or kernel resources with some policy of minimum guaranteed usage.

application ID

A number that identifies all processes that are part of an application. Like process group IDs, the application ID value is the same as the process id of the first process in the application. A new application is created by spawning with the POSIX_SPAWN_NEWAPP or SPAWN_NEWAPP flag. A process created without one of those inherits the application ID of its parent. A process needs the PROCMGR_AID_CHILD_NEWAPP ability in order to set those flags.

The SignalKill() kernel call accepts a SIG_APPID flag ORed into the signal number parameter. This tells it to send the signal to all the processes with an application ID that matches the pid argument. The DCMD_PROC_INFO devctl() returns the application ID in a structure field.

asymmetric multiprocessing (AMP)

A multiprocessing system where a separate OS, or a separate instantiation of the same OS, runs on each CPU.

atomic

Of or relating to atoms. :-)

In operating systems, this refers to the requirement that an operation, or sequence of operations, be considered *indivisible*. For example, a thread may need to move a file position to a given location and read data. These operations must be performed in an atomic manner; otherwise, another

thread could preempt the original thread and move the file position to a different location, thus causing the original thread to read data from the second thread's position.

attributes structure

Structure containing information used on a per-resource basis (as opposed to the *OCB*, which is used on a per-open basis).

This structure is also known as a *handle*. The structure definition is fixed (iofunc_attr_t), but may be extended. See also *mount structure*.

bank-switched

A term indicating that a certain memory component (usually the device holding an *image*) isn't entirely addressable by the processor. In this case, a hardware component manifests a small portion (or "window") of the device onto the processor's address bus. Special commands have to be issued to the hardware to move the window to different locations in the device. See also *linearly mapped*.

base layer calls

Convenient set of library calls for writing resource managers. These calls all start with $resmgr_*()$. Note that while some base layer calls are unavoidable (e.g. $resmgr_pathname_attach()$), we recommend that you use the POSIX layer calls where possible.

BIOS/ROM Monitor extension signature

A certain sequence of bytes indicating to the BIOS or ROM Monitor that the device is to be considered an "extension" to the BIOS or ROM Monitor — control is to be transferred to the device by the BIOS or ROM Monitor, with the expectation that the device will perform additional initializations.

On the x86 architecture, the two bytes 0×55 and $0 \times AA$ must be present (in that order) as the first two bytes in the device, with control being transferred to offset 0×0003 .

block-integral

The requirement that data be transferred such that individual structure components are transferred in their entirety — no partial structure component transfers are allowed.

In a resource manager, directory data must be returned to a client as block-integral data. This means that only complete struct dirent structures can be returned — it's inappropriate to return partial structures, assuming that the next _IO_READ request will "pick up" where the previous one left off.

bootable

An image can be either bootable or *nonbootable*. A bootable image is one that contains the startup code that the IPL can transfer control to.

bootfile

The part of an OS image that runs the *startup code* and the microkernel.

bound multiprocessing (BMP)

A multiprocessing system where a single instantiation of an OS manages all CPUs simultaneously, but you can lock individual applications or threads to a specific CPU.

budget

In *sporadic* scheduling, the amount of time a thread is permitted to execute at its normal priority before being dropped to its low priority.

buildfile

A text file containing instructions for mkifs specifying the contents and other details of an *image*, or for mkefs specifying the contents and other details of an embedded filesystem image.

canonical mode

Also called edited mode or "cooked" mode. In this mode the character device library performs line-editing operations on each received character. Only when a line is "completely entered" — typically when a carriage return (CR) is received — will the line of data be made available to application processes. Contrast *raw mode*.

channel

A kernel object used with message passing.

In QNX Neutrino, message passing is directed towards a *connection* (made to a channel); threads can receive messages from channels. A thread that wishes to receive messages creates a channel (using *ChannelCreate()*), and then receives messages from that channel (using *MsgReceive()*). Another thread that wishes to send a message to the first thread must make a connection to that channel by "attaching" to the channel (using *ConnectAttach()*) and then sending data (using *MsgSend()*).

chid

An abbreviation for channel ID.

CIFS

Common Internet File System (also known as SMB) — a protocol that allows a client workstation to perform transparent file access over a network to a Windows 95/98/NT server. Client file access calls are converted to CIFS protocol requests and are sent to the server over the network. The server receives the request, performs the actual filesystem operation, and sends a response back to the client.

CIS

Card Information Structure — a data block that maintains information about flash configuration. The CIS description includes the types of memory devices in the regions, the physical geometry of these devices, and the partitions located on the flash.

coid

An abbreviation for connection ID.

combine message

A resource manager message that consists of two or more messages. The messages are constructed as combine messages by the client's C library (e.g. *stat()*, *readblock()*), and then handled as individual messages by the resource manager.

The purpose of combine messages is to conserve network bandwidth and/or to provide support for atomic operations. See also *connect message* and *I/O message*.

connect message

In a resource manager, a message issued by the client to perform an operation based on a pathname (e.g. an io_open message). Depending on the type of connect message sent, a context block (see *OCB*) may be associated with the request and will be passed to subsequent I/O messages. See also *combine message* and I/O message.

connection

A kernel object used with message passing.

Connections are created by client threads to "connect" to the channels made available by servers. Once connections are established, clients can *MsgSendv()* messages over them. If a number of threads in a process all attach to the same channel, then the one connection is shared among all

the threads. Channels and connections are identified within a process by a small integer.

The key thing to note is that connections and file descriptors (*FD*) are one and the same object. See also *channel* and *FD*.

context

Information retained between invocations of functionality.

When using a resource manager, the client sets up an association or *context* within the resource manager by issuing an *open()* call and getting back a file descriptor. The resource manager is responsible for storing the information required by the context (see *OCB*). When the client issues further file-descriptor based messages, the resource manager uses the OCB to determine the context for interpretation of the client's messages.

cooked mode

See canonical mode.

core dump

A file describing the state of a process that terminated abnormally.

critical section

A code passage that *must* be executed "serially" (i.e. by only one thread at a time). The simplest from of critical section enforcement is via a *mutex*.

deadlock

A condition in which one or more threads are unable to continue due to resource contention. A common form of deadlock can occur when one thread sends a message to another, while the other thread sends a message to the first. Both threads are now waiting for each other to reply to the message. Deadlock can be avoided by good design practices or massive kludges — we recommend the good design approach.

device driver

A process that allows the OS and application programs to make use of the underlying hardware in a generic way (e.g. a disk drive, a network interface). Unlike OSs that require device drivers to be tightly bound into the OS itself, device drivers for the QNX Neutrino RTOS are standard processes that can be started and stopped dynamically. As a result, adding device drivers doesn't affect any other part of the OS — drivers can be developed and debugged like any other application. Also, device drivers are in their own protected address space, so a bug in a device driver won't cause the entire OS to shut down.

discrete (or traditional) multiprocessor system

A system that has separate physical processors hooked up in multiprocessing mode over a board-level bus.

DNS

Domain Name Service — an Internet protocol used to convert ASCII domain names into IP addresses. In QNX Neutrino native networking, dns is one of *Qnet*'s builtin resolvers.

dynamic bootfile

An OS image built on the fly. Contrast static bootfile.

dynamic linking

The process whereby you link your modules in such a way that the Process Manager will link them to the library modules before your program runs. The word "dynamic" here means that the association between your program and the library modules that it uses is done *at load time*, not at linktime. Contrast *static linking*. See also *runtime loading*.

edge-sensitive

One of two ways in which a *PIC* (Programmable Interrupt Controller) can be programmed to respond to interrupts. In edge-sensitive mode, the interrupt is "noticed" upon a transition to/from the rising/falling edge of a pulse. Contrast *level-sensitive*.

edited mode

See canonical mode.

EOI

End Of Interrupt — a command that the OS sends to the PIC after processing all Interrupt Service Routines (ISR) for that particular interrupt source so that the PIC can reset the processor's In Service Register. See also *PIC* and *ISR*.

EPROM

Erasable Programmable Read-Only Memory — a memory technology that allows the device to be programmed (typically with higher-than-operating voltages, e.g. 12V), with the characteristic that any bit (or bits) may be individually programmed from a 1 state to a 0 state. To change a bit from a 0 state into a 1 state can only be accomplished by erasing the *entire* device, setting *all* of the bits to a 1 state. Erasing is accomplished by shining an ultraviolet light through the erase window of the device for a fixed period

of time (typically 10-20 minutes). The device is further characterized by having a limited number of erase cycles (typically 10e5 - 10e6). Contrast *flash* and *RAM*.

event

A notification scheme used to inform a thread that a particular condition has occurred. Events can be signals or pulses in the general case; they can also be unblocking events or interrupt events in the case of kernel timeouts and interrupt service routines. An event is delivered by a thread, a timer, the kernel, or an interrupt service routine when appropriate to the requestor of the event.

FD

File Descriptor — a client must open a file descriptor to a resource manager via the *open()* function call. The file descriptor then serves as a handle for the client to use in subsequent messages. Note that a file descriptor is the exact same object as a connection ID (*coid*, returned by *ConnectAttach()*).

FIFO

First In First Out — a scheduling policy whereby a thread is able to consume CPU at its priority level without bounds. See also *adaptive*, *round robin*, and *sporadic*.

flash memory

A memory technology similar in characteristics to *EPROM* memory, with the exception that erasing is performed electrically instead of via ultraviolet light, and, depending upon the organization of the flash memory device, erasing may be accomplished in blocks (typically 64 KB at a time) instead of the entire device. Contrast *EPROM* and *RAM*.

FQNN

Fully Qualified Node Name — a unique name that identifies a QNX Neutrino node on a network. The FQNN consists of the nodename plus the node domain tacked together.

garbage collection

Also known as space reclamation, the process whereby a filesystem manager recovers the space occupied by deleted files and directories.

НΑ

High Availability — in telecommunications and other industries, HA describes a system's ability to remain up and running without interruption for extended periods of time.

handle

A pointer that the resource manager base library binds to the pathname registered via *resmgr_attach()*. This handle is typically used to associate some kind of per-device information. Note that if you use the *iofunc_*() POSIX layer calls*, you must use a particular *type* of handle — in this case called an *attributes structure*.

hard thread affinity

A user-specified binding of a thread to a set of processors, done by means of a *runmask*. Contrast *soft thread affinity*.

image

In the context of embedded QNX Neutrino systems, an "image" can mean either a structure that contains files (i.e. an OS image) or a structure that can be used in a read-only, read/write, or read/write/reclaim FFS-2-compatible filesystem (i.e. a flash filesystem image).

inherit mask

A bitmask that specifies which processors a thread's children can run on. Contrast *runmask*.

interrupt

An event (usually caused by hardware) that interrupts whatever the processor was doing and asks it do something else. The hardware will generate an interrupt whenever it has reached some state where software intervention is required.

interrupt handler

See ISR.

interrupt latency

The amount of elapsed time between the generation of a hardware interrupt and the first instruction executed by the relevant interrupt service routine. Also designated as " T_{ii} ". Contrast *scheduling latency*.

interrupt service routine

See ISR.

interrupt service thread

A thread that is responsible for performing thread-level servicing of an interrupt.

Since an *ISR* can call only a very limited number of functions, and since the amount of time spent in an ISR should be kept to a minimum, generally the bulk of the interrupt servicing work should be done by a thread. The thread attaches the interrupt (via *InterruptAttach()*) or *InterruptAttachEvent()*) and then blocks (via *InterruptWait()*), waiting for the ISR to tell it to do something (by returning an event of type SIGEV_INTR). To aid in minimizing *scheduling latency*, the interrupt service thread should raise its priority appropriately.

I/O message

A message that relies on an existing binding between the client and the resource manager. For example, an _IO_READ message depends on the client's having previously established an association (or *context*) with the resource manager by issuing an *open()* and getting back a file descriptor. See also *connect message*, *context*, *combine message*, and *message*.

I/O privileges

A particular right, that, if enabled for a given thread, allows the thread to perform I/O instructions (such as the x86 assembler in and out instructions). By default, I/O privileges are disabled, because a program with it enabled can wreak havoc on a system. To enable I/O privileges, the thread must be running as root, and call *ThreadCtl()*.

IPC

Interprocess Communication — the ability for two processes (or threads) to communicate. The QNX Neutrino RTOS offers several forms of IPC, most notably native messaging (synchronous, client/server relationship), POSIX message queues and pipes (asynchronous), as well as signals.

IPL

Initial Program Loader — the software component that either takes control at the processor's reset vector (e.g. location 0xFFFFFFFF0 on the x86), or is a BIOS extension. This component is responsible for setting up the machine into a usable state, such that the startup program can then perform further initializations. The IPL is written in assembler and C. See also *BIOS* extension signature and startup code.

IRQ

Interrupt Request — a hardware request line asserted by a peripheral to indicate that it requires servicing by software. The IRQ is handled by the *PIC*, which then interrupts the processor, usually causing the processor to execute an *Interrupt Service Routine (ISR)*.

ISR

Interrupt Service Routine — a routine responsible for servicing hardware (e.g. reading and/or writing some device ports), for updating some data structures shared between the ISR and the thread(s) running in the application, and for signalling the thread that some kind of event has occurred.

kernel

See microkernel.

level-sensitive

One of two ways in which a *PIC* (Programmable Interrupt Controller) can be programmed to respond to interrupts. If the PIC is operating in level-sensitive mode, the IRQ is considered active whenever the corresponding hardware line is active. Contrast *edge-sensitive*.

linearly mapped

A term indicating that a certain memory component is entirely addressable by the processor. Contrast *bank-switched*.

message

A parcel of bytes passed from one process to another. The OS attaches no special meaning to the content of a message — the data in a message has meaning for the sender of the message and for its receiver, but for no one else.

Message passing not only allows processes to pass data to each other, but also provides a means of synchronizing the execution of several processes. As they send, receive, and reply to messages, processes undergo various "changes of state" that affect when, and for how long, they may run.

microkernel

A part of the operating system that provides the minimal services used by a team of optional cooperating processes, which in turn provide the higher-level OS functionality. The microkernel itself lacks filesystems and many other services normally expected of an OS; those services are provided by optional processes.

mount structure

An optional, well-defined data structure (of type iofunc_mount_t) within an *iofunc_*()* structure, which contains information used on a per-mountpoint basis (generally used only for filesystem resource managers). See also *attributes structure* and *OCB*.

mountpoint

The location in the pathname space where a resource manager has "registered" itself. For example, the serial port resource manager registers mountpoints for each serial device (/dev/ser1, /dev/ser2, etc.), and a CD-ROM filesystem may register a single mountpoint of /cdrom.

multicore system

A chip that has one physical processor with multiple CPUs interconnected over a chip-level bus.

mutex

Mutual exclusion lock, a simple synchronization service used to ensure exclusive access to data shared between threads. It is typically acquired (pthread_mutex_lock()) and released (pthread_mutex_unlock()) around the code that accesses the shared data (usually a critical section). See also critical section.

name resolution

In a QNX Neutrino network, the process by which the *Qnet* network manager converts an *FQNN* to a list of destination addresses that the transport layer knows how to get to.

name resolver

Program code that attempts to convert an *FQNN* to a destination address.

nd

An abbreviation for *node descriptor*, a numerical identifier for a node *relative* to the current node. Each node's node descriptor for itself is 0 (ND_LOCAL_NODE).

NDP

Node Discovery Protocol — proprietary QNX Software Systems protocol for broadcasting name resolution requests on a QNX Neutrino LAN.

network directory

A directory in the pathname space that's implemented by the *Qnet* network manager.

NFS

Network FileSystem — a TCP/IP application that lets you graft remote filesystems (or portions of them) onto your local namespace. Directories on the remote systems appear as part of your local filesystem and all the utilities

you use for listing and managing files (e.g. ls, cp, mv) operate on the remote files exactly as they do on your local files.

NMI

Nonmaskable Interrupt — an interrupt that can't be masked by the processor. We don't recommend using an NMI!

Node Discovery Protocol

See NDP.

node domain

A character string that the *Qnet* network manager tacks onto the nodename to form an *FQNN*.

nodename

A unique name consisting of a character string that identifies a node on a network.

nonbootable

A nonbootable OS image is usually provided for larger embedded systems or for small embedded systems where a separate, configuration-dependent setup may be required. Think of it as a second "filesystem" that has some additional files on it. Since it's nonbootable, it typically won't contain the OS, startup file, etc. Contrast *bootable*.

OCB

Open Control Block (or Open Context Block) — a block of data established by a resource manager during its handling of the client's *open()* function. This context block is bound by the resource manager to this particular request, and is then automatically passed to all subsequent I/O functions generated by the client on the file descriptor returned by the client's *open()*.

package filesystem

A virtual filesystem manager that presents a customized view of a set of files and directories to a client. The "real" files are present on some medium; the package filesystem presents a virtual view of selected files to the client.

partition

A division of CPU time, memory, file resources, or kernel resources with some policy of minimum guaranteed usage.

pathname prefix

See mountpoint.

pathname space mapping

The process whereby the Process Manager maintains an association between resource managers and entries in the pathname space.

persistent

When applied to storage media, the ability for the medium to retain information across a power-cycle. For example, a hard disk is a persistent storage medium, whereas a ramdisk is not, because the data is lost when power is lost.

PIC

Programmable Interrupt Controller — hardware component that handles IRQs. See also *edge-sensitive*, *level-sensitive*, and *ISR*.

PID

Process ID. Also often pid (e.g. as an argument in a function call).

POSIX

An IEEE/ISO standard. The term is an acronym (of sorts) for Portable Operating System Interface — the "X" alludes to "UNIX", on which the interface is based.

POSIX layer calls

Convenient set of library calls for writing resource managers. The POSIX layer calls can handle even more of the common-case messages and functions than the *base layer calls*. These calls are identified by the *iofunc_*()* prefix. In order to use these (and we strongly recommend that you do), you must also use the well-defined POSIX-layer *attributes* (iofunc_attr_t), *OCB* (iofunc_ocb_t), and (optionally) *mount* (iofunc_mount_t) structures.

preemption

The act of suspending the execution of one thread and starting (or resuming) another. The suspended thread is said to have been "preempted" by the new thread. Whenever a lower-priority thread is actively consuming the CPU, and a higher-priority thread becomes READY, the lower-priority thread is immediately preempted by the higher-priority thread.

prefix tree

The internal representation used by the Process Manager to store the pathname table.

priority inheritance

The characteristic of a thread that causes its priority to be raised or lowered to that of the thread that sent it a message. Also used with mutexes. Priority inheritance is a method used to prevent *priority inversion*.

priority inversion

A condition that can occur when a low-priority thread consumes CPU at a higher priority than it should. This can be caused by not supporting priority inheritance, such that when the lower-priority thread sends a message to a higher-priority thread, the higher-priority thread consumes CPU *on behalf of* the lower-priority thread. This is solved by having the higher-priority thread inherit the priority of the thread on whose behalf it's working.

process

A nonschedulable entity, which defines the address space and a few data areas. A process must have at least one *thread* running in it — this thread is then called the first thread.

process group

A collection of processes that permits the signalling of related processes. Each process in the system is a member of a process group identified by a process group ID. A newly created process joins the process group of its creator.

process group ID

The unique identifier representing a process group during its lifetime. A process group ID is a positive integer. The system may reuse a process group ID after the process group dies.

process group leader

A process whose ID is the same as its process group ID.

process ID (PID)

The unique identifier representing a process. A PID is a positive integer. The system may reuse a process ID after the process dies, provided no existing process group has the same ID. Only the Process Manager can have a process ID of 1.

pty

Pseudo-TTY — a character-based device that has two "ends": a master end and a slave end. Data written to the master end shows up on the slave end, and vice versa. These devices are typically used to interface between a program that expects a character device and another program that wishes

to use that device (e.g. the shell and the telnet daemon process, used for logging in to a system over the Internet).

pulses

In addition to the synchronous Send/Receive/Reply services, QNX Neutrino also supports fixed-size, nonblocking messages known as pulses. These carry a small payload (four bytes of data plus a single byte code). A pulse is also one form of *event* that can be returned from an ISR or a timer. See *MsgDeliverEvent()* for more information.

Qnet

The native network manager in the QNX Neutrino RTOS.

QoS

Quality of Service — a policy (e.g. loadbalance) used to connect nodes in a network in order to ensure highly dependable transmission. QoS is an issue that often arises in high-availability (*HA*) networks as well as realtime control systems.

RAM

Random Access Memory — a memory technology characterized by the ability to read and write any location in the device without limitation. Contrast *flash* and *EPROM*.

raw mode

In raw input mode, the character device library performs no editing on received characters. This reduces the processing done on each character to a minimum and provides the highest performance interface for reading data. Also, raw mode is used with devices that typically generate binary data — you don't want any translations of the raw binary stream between the device and the application. Contrast *canonical mode*.

replenishment

In *sporadic* scheduling, the period of time during which a thread is allowed to consume its execution *budget*.

reset vector

The address at which the processor begins executing instructions after the processor's reset line has been activated. On the x86, for example, this is the address 0xfffffff.

resource manager

A user-level server program that accepts messages from other programs and, optionally, communicates with hardware. QNX Neutrino resource managers are responsible for presenting an interface to various types of devices, whether actual (e.g. serial ports, parallel ports, network cards, disk drives) or virtual (e.g. /dev/null, a network filesystem, and pseudo-ttys).

In other operating systems, this functionality is traditionally associated with *device drivers*. But unlike device drivers, QNX Neutrino resource managers don't require any special arrangements with the kernel. In fact, a resource manager looks just like any other user-level program. See also *device driver*.

RMA

Rate Monotonic Analysis — a set of methods used to specify, analyze, and predict the timing behavior of realtime systems.

round robin

A scheduling policy whereby a thread is given a certain period of time to run. Should the thread consume CPU for the entire period of its timeslice, the thread will be placed at the end of the ready queue for its priority, and the next available thread will be made READY. If a thread is the only thread READY at its priority level, it will be able to consume CPU again immediately. See also *adaptive*, *FIFO*, and *sporadic*.

runmask

A bitmask that indicates which processors a thread can run on. Contrast *inherit mask*.

runtime loading

The process whereby a program decides while it's actually running that it wishes to load a particular function from a library. Contrast static linking.

scheduling latency

The amount of time that elapses between the point when one thread makes another thread READY and when the other thread actually gets some CPU time. Note that this latency is almost always at the control of the system designer.

Also designated as "T_{sl}". Contrast *interrupt latency*.

scoid

An abbreviation for server connection ID.

session

A collection of process groups established for job control purposes. Each process group is a member of a session. A process belongs to the session that its process group belongs to. A newly created process joins the session of its creator. A process can alter its session membership via *setsid()*. A session can contain multiple process groups.

session leader

A process whose death causes all processes within its process group to receive a SIGHUP signal.

soft thread affinity

The scheme whereby the microkernel tries to dispatch a thread to the processor where it last ran, in an attempt to reduce thread migration from one processor to another, which can affect cache performance. Contrast hard thread affinity.

software interrupts

Similar to a hardware interrupt (see *interrupt*), except that the source of the interrupt is software.

sporadic

A scheduling policy whereby a thread's priority can oscillate dynamically between a "foreground" or normal priority and a "background" or low priority. A thread is given an execution *budget* of time to be consumed within a certain *replenishment* period. See also *adaptive*, *FIFO*, and *round robin*.

startup code

The software component that gains control after the IPL code has performed the minimum necessary amount of initialization. After gathering information about the system, the startup code transfers control to the OS.

static bootfile

An image created at one time and then transmitted whenever a node boots. Contrast *dynamic bootfile*.

static linking

The process whereby you combine your modules with the modules from the library to form a single executable that's entirely self-contained. The word "static" implies that it's not going to change — *all* the required modules are already combined into one.

symmetric multiprocessing (SMP)

A multiprocessor system where a single instantiation of an OS manages all CPUs simultaneously, and applications can float to any of them.

system page area

An area in the kernel that is filled by the startup code and contains information about the system (number of bytes of memory, location of serial ports, etc.) This is also called the SYSPAGE area.

thread

The schedulable entity under the QNX Neutrino RTOS. A thread is a flow of execution; it exists within the context of a *process*.

tid

An abbreviation for thread ID.

timer

A kernel object used in conjunction with time-based functions. A timer is created via *timer_create()* and armed via *timer_settime()*. A timer can then deliver an *event*, either periodically or on a one-shot basis.

timeslice

A period of time assigned to a *round-robin* or *adaptive* scheduled thread. This period of time is small (on the order of tens of milliseconds); the actual value shouldn't be relied upon by any program (it's considered bad design).

TLB

An abbreviation for *translation look-aside buffer*. To maintain performance, the processor caches frequently used portions of the external memory page tables in the TLB.

TLS

An abbreviation for thread local storage.

Index

BIGENDIAN 225	_POSIX_MEMORY_PROTECTION 250
KER_* 105	_POSIX_NO_TRUNC 250
LITTLEENDIAN 225	_POSIX_PRIORITIZED_IO 250, 272
QNX 21	_POSIX_RAW_SOCKETS 250
QNXNTO 21	_POSIX_SAVED_IDS 250
amblksiz 184	_POSIX_SPORADIC_SERVER 250
_CS_TIMEZONE 303	_POSIX_THREAD_PROCESS_SHARED 250
_DEBUG_BREAK_EXEC 107	_POSIX_TRACE* (not implemented) 250
DEBUG_FLAG_CURTID 103	_POSIX_TYPED_MEMORY_OBJECTS 250
_DEBUG_FLAG_FORK 103	_QNX_SOURCE 19, 20
DEBUG FLAG IPINVAL 103	_RESMGR_FLAG_BEFORE 78
_DEBUG_FLAG_ISSYS 103	-Bsymbolic 224
_DEBUG_FLAG_ISTOP 103	-fmudflap 50
_DEBUG_FLAG_KLC 103	-fmudflapir 50
_DEBUG_FLAG_RLC 103	-fmudflapth 50
_DEBUG_FLAG_SSTEP 103	-fmudflapth -lmudflapth 50
_DEBUG_FLAG_STOPPED 103	-Imudflapth 50
_DEBUG_FLAG_TRACE_EXEC 103	-znow linker option 35
_DEBUG_FLAG_TRACE_MODIFY 103	/ characters 298
_DEBUG_FLAG_TRACE_RD 103	message queues 298
_DEBUG_FLAG_TRACE_WR 103	message queues 250
_DEBUG_RUN_ARM 108, 113	1000.1
_DEBUG_RUN_CLRFLT 113	1003.1e and 1003.2c POSIX drafts (withdrawn) 119
_DEBUG_RUN_CLRSIG 113	
_DEBUG_RUN_CURTID 113	Α
_DEBUG_RUN_FAULT 113	
_DEBUG_RUN_STEP 113	abort() 196
_DEBUG_RUN_STEP_ALL 113	access control 268, 269, 274
DEBUG_RUN_TRACE 113	Access Control Lists (ACLs) 119, 120, 122
_DEBUG_RUN_VADDR 113	allocating 122
_DEBUG_WHY_CHILD 103	duplicating 122
_DEBUG_WHY_EXEC 103	external form 120
_DEBUG_WHY_FAULTED 103	freeing 122
DEBUG_WHY_JOBCONTROL 103	internal form 120
DEBUG_WHY_REQUESTED 103	text form 120
DEBUG_WHY_SIGNALLED 103	access() 259
DEBUG_WHY_TERMINATED 103	acl_add_perm() 124
FILE_OFFSET_BITS 19	acl_calc_mask() 124
 _FTYPE_DUMPER 78	acl_clear_perms() 124
LARGEFILE64_SOURCE 19	acl_copy_entry() 123
 _MALLOC_ALIGN 186	acl_copy_ext() 121
 _msg_info 96, 97	acl_copy_int() 121
_NETMGR_QOS_FLUSH 400	acl_create_entry() 123
NTO_IC_LATENCY 181	acl_del_perm() 124
 _NTO_INTR_FLAGS_END 180	acl_delete_entry() 123
 _NTO_MI_CONSTRAINED 97	acl_dup() 122
 _NTO_TCTL_IO 73, 85, 182	acl_entry_t 120
NTO_TCTL_NAME 117	ACL_EXECUTE 120, 124
NTO_TCTL_RCM_GET_AND_SET 96	acl_free() 122
 _NTO_TI_PRECISE 138	acl_from_text() 121
NTO_TI_REPORT_TOLERANCE 138	acl_get_entry() 123
 _POSIX_ASYNCHRONOUS_IO 250	acl_get_fd() 126
 _POSIX_BARRIERS 250	acl_get_file() 126
_POSIX_C_SOURCE 19, 20	acl_get_permset() 124
_POSIX_CHOWN_RESTRICTED 250	acl_get_qualifier() 125
 _POSIX_IPV6	acl_get_tag_type() 125
	ACL GROUP 120

ACL_GROUP_OBJ 120	big-endian 208
acl_init() 122	binding, lazy 33
ACL_MASK 121	BLOCKED state 57
ACL_OTHER 121	blocking states 58
acl_perm_t 120	bounds checking 201
acl_permset_t 120	breakpoints 101, 107, 110, 118, 288
ACL_READ 120, 124	setting 101, 107, 110, 118
acl_set_fd() 126	traps 288
acl_set_file() 126	buckets 187
acl_set_permset() 124	BUFSIZ 289
acl_set_qualifier() 125	build-cfg 237
acl_set_tag_type() 125	build-hooks 237, 239
acl_size() 121	configure_opts 239
acl_t 120, 122	hook_preconfigure() 239
allocating 122	buildfile 25
acl_tag_t 120	builds 236
acl_to_text() 121	parallel 236
ACL_TYPE_ACCESS 121	partial 236
ACL_TYPE_DEFAULT 121	BUS_ADRALN 287
	BUS ADRERR 287
acl_type_t 121	=
ACL_USER 121	BUS_OBJERR 287
ACL_USER_OBJ 121	
acl_valid() 123	С
ACL_WRITE 120, 124	· ·
ACLs (Access Control Lists) 119, 120, 122	C locale 276, 301
allocating 122	C-language compilation environments 272
duplicating 122	
external form 120	C-TRADITIONAL 276, 301
freeing 122	C99 compatibility 249
internal form 120	cached data, writing 292, 294
text form 120	calloc() 184, 291
	cancellation points 269
acos(), acosf(), acosl() 291	CCFLAGS macro 232, 243
acosh(), acoshf(), acoshl() 291	CCVFLAG_* macro 232
adaptive partitioning thread scheduler 106	channels 54, 105, 107
address space for a process 98	getting a list of for a process 107
AIO_LISTIO_MAX 278	last one that a thread received a message on 105
AIO_MAX 278	shared by threads 54
AIO_PRIO_DELTA_MAX 278	
alarm() 130	char 276
alternate registers 109, 114	CHAR_BIT 278
	CHAR_MAX 258, 278
getting 109	CHAR_MIN 278
setting 114	character sets 269, 276
ANSI-compliant code 19	description files 276
arenas 184	portable 276
ARG_MAX 278	CHARCLASS_NAME_MAX 278
as (address space) files 98	chdir() 259
ASCII 276	CheckedPtr 205
ASFLAGS macro 232	
asin(), asinf(), asinl() 291	CHECKFORCE macro 221
ASVFLAG_* macro 232	CHILD_MAX 278
	CLD_CONTINUED 288
atan(), atanf(), atanhl() 291	CLD_DUMPED 288
ATEXIT_MAX 278	CLD_EXITED 288
attack surfaces 83, 93	CLD_KILLED 288
	CLD_STOPPED 288
В	Clean C 205
D	client processes, detecting termination of 81
handa 196	
bands 186	clock tick 129, 131, 135, 274
BC_BASE_MAX 278	dependency on timer hardware 131
BC_DIM_MAX 278	clock_getres() 291
BC_SCALE_MAX 278	clock_gettime() 135
BC_STRING_MAX 278	CLOCK_HARMONIC 138
beats 134	CLOCK MONOTONIC 135

clock_nanosleep() 135	DCMD_PROC_MAPDEBUG 111
CLOCK_REALTIME 135, 274, 275, 284, 289, 291	DCMD_PROC_MAPDEBUG_BASE 111
clock_settime() 259, 275, 291	DCMD_PROC_MAPINFO 112
ClockAdjust() 275	DCMD_PROC_PAGEDATA 112
ClockCycles() 135	DCMD_PROC_RUN 113
ClockPeriod() 129, 138, 274, 284, 289	DCMD_PROC_SET_FLAG 115
ClockTime() 135	DCMD_PROC_SETALTREG 114
close() 98, 99, 259	DCMD_PROC_SETFPREG 114
closedir() 259, 269	DCMD_PROC_SETGREG 115
closelog() 269	DCMD_PROC_SETREGSET 115
code, portable 19, 21	DCMD_PROC_SIGNAL 115
OS-specific 21	DCMD_PROC_STATUS 116, 117
coded character sets 269	DCMD_PROC_STOP 116
coexistence of OS versions 18	DCMD_PROC_SYSINFO 116
COLL_WEIGHTS_MAX 278	DCMD_PROC_THAWTHREAD 117
common.mk file 223	DCMD_PROC_THREADCTL 117
compilation environments 272	DCMD_PROC_TIDSTATUS 117
compiler 19	DCMD_PROC_TIMERS 118
conforming to standards 19	DCMD_PROC_WAITSTOP 118
CONDVAR state 105	debug agent 40, 41
configure 237	pdebug 41
configure_opts 238, 239	process-level 41
confstr() 303	debug flags, setting and clearing 107, 115
core file, dumping for memory errors 197	debug traps 288
cos(), cosf(), cosl() 292	debug_break_t 107, 110
CP_HOST macro 228	debug_channel_t 107
CPU macro 229	debug_fpreg_t 109, 114
CPU_ROOT macro 229	debug_greg_t 109, 115
cross-development 23, 24, 25	debug_irq_t 111
deeply embedded 25	debug_process_t 110
network filesystem 24	debug_run_t 113
with debugger 25	debug_thread_t 102, 116, 117, 118
cross-endian support 398	debug_timer_t 118
ctype.h 20	debugger 308, 310, 311, 312, 313, 314, 315, 316, 317,
CXXFLAGS macro 232	318, 319, 320, 321, 323, 324, 325, 326, 327,
	328, 329, 330, 331, 332, 333, 334, 335, 336,
D	337, 338, 339, 341, 342, 343, 344, 345, 346,
	348, 349, 350, 351, 352, 353, 354, 355, 356,
daemons 75, 81	357, 358, 359, 360, 361, 362, 363, 364, 365,
detecting termination of 81	366, 367, 368, 369, 370, 371, 372, 374, 375,
DBL_DIG 251, 277	376, 377
DBL_EPSILON 251, 277	{} 353, 374
DBL_MANT_DIG 251, 277	@ 353, 354
DBL_MAX 251, 277	# (comment) 310
DBL_MAX_10_EXP 251, 277	\$cdir 349
DBL_MAX_EXP 251, 277	\$cwd 318, 349
DBL_MIN 251, 277	address 370
DBL_MIN_10_EXP 251, 277	all-registers 368
DBL_MIN_EXP 251, 277	args 317, 345
DCMD_PROC_BREAK 107	assembly-language 350
DCMD_PROC_CHANNELS 107	attach 319
DCMD_PROC_CLEAR_FLAG 107	auto-solib-add 351
DCMD_PROC_CURTHREAD 100, 108, 117	awatch 328
DCMD_PROC_EVENT 108, 113	backtrace 342
DCMD_PROC_FREEZETHREAD 108	break 323, 324, 331, 339
DCMD_PROC_GET_BREAKLIST 110	call 377
DCMD_PROC_GETALTREG 109	call_scratch_address 377
DCMD_PROC_GETFPREG 109	catch 328, 345
DCMD_PROC_GETGREG 109	clear 329
DCMD_PROC_GETREGSET 110	commands 310, 311, 333
DCMD_PROC_INFO 100, 110, 111	complete 313
DCMD_PROC_IRQS 110	condition 331

debugger (continued)	debugger (continued)
confirm 320	print vtbl 365
continue 319, 332, 333, 335	printf 333
convenience 367	program 316, 317, 318, 319, 320, 323, 367
copying 314	psymbols 372
core-file 377	ptype 352, 370
delete 329	registers 368
demangle-style 364	return 335, 376
detach 319	reverse-search 348
directories 349	run 316, 317, 319
directory 349	rwatch 327
disable display 359	search 348
disassemble 349, 357	select-frame 342
display 358, 359	set 314, 374
down 343	set variable 374
down-silently 344	sharedlibrary 351
echo 333	show 313, 314
enable display 359	signal 376
environment 316, 318, 319	signals 338, 376
exec-file 377	silent 333
fg 335	solib-absolute-prefix 351
file 319	solib-search-path 351
float 369	source 371
forward-search 348	sources 371
frame 342, 343, 344	stack 342
functions 371	step 333, 335
handle 338	stepi 335, 337
help 312	symbol-reloading 372
ignore 332	symbols 372
info 313, 326	target procfs 315
inspect 352	target qnx 315
jump 335, 375	tbreak 325, 331
kill command 320	thread 320, 321
kill utility 376	thread apply 320, 321
line 349, 360	threads 320, 321, 339
list 344, 346	types 371
listsize 346	undisplay 359
locals 345	until 331, 336
maint print 372	up 343
msymbols 372	up-silently 344
next 336	values 366
nexti 337	variables 372
nto-cwd 316	version 314
nto-inherit-env 318	warranty 314
nto-timeout 317	watch 327, 331
output 333	where 342
path 318	write 377
paths 318	x 352, 356
print 352, 355, 365, 374	:: 353
print address 360	@ 353, 354
print array 361, 362	assertions 331
print asm-demangle 364	break 323, 324, 331, 339
print demangle 363	breakpoints 323, 324, 325, 326, 327, 328, 329, 330
print elements 362	331, 332, 333, 334, 339
print max-symbolic-offset 361	bugs, working around 333
print null-stop 362	command list 333
print object 364, 365	conditions 331
print pretty 362	defined 323
print sevenbit-strings 362, 363	deleting 329
print static-members 365	disabling 330
print symbol-filename 360, 361	enabling 330
print union 363	exceptions 328

debugger <i>(continued)</i>	debugger (continued)
breakpoints (continued)	libraries, shared 351
hardware-assisted 325	list 344, 346
ignore count 332	maint info 327
listing 326	memory, examining 356
menus 334	pipes, problems with 316
one-stop 325	process 319, 320, 321
regular expression 326	connecting to 319
setting 324	detaching from 319
threads 339	killing 320
catch 328, 345	multiple 321
commands 310, 311, 333	program 316, 317, 318, 319, 320, 323, 367
abbreviating 310	set nto-inherit-env 318
blank line 310	arguments 316, 317
comments 310	environment 316, 318
completion 311	exit code 367
initialization file 310	killing 320
repeating 310	multithreaded 320
syntax 310	path 318
compiling for debugging 315	reloading 320
continuing 335	standard input and output 319
convenience variables 324, 326, 350, 355, 358, 366,	QNX Neutrino extensions 308
367	rbreak 326
\$_ 326, 350, 358, 367	registers 368
\$_ 358, 367	search path 318
\$ 330, 307 \$_exitcode 367	shared libraries 351
\$_ 326, 350, 358, 367	signals 338, 376
\$bpnum 324	source files 346, 348, 349, 361
printing 367	directories 348
data 352, 353, 354, 355, 356, 358, 360, 363, 365,	examining 346
368, 369	line numbers 361
array constants 352	machine code 349
artificial arrays 354	printing lines 346
automatic display 358	searching 348
casting 352, 355	stack frames 341, 342, 343, 344, 376
demangling names 363	about 341
examining 352	backtraces 342
examining 332 examining memory 356	printing information 344
expressions 352	return, when using 376
floating-point hardware 369	selecting 342, 343
output formats 355	stack, examining 341
print settings 360	stepping 335
program variables 353	symbol table, examining 370
registers 368	tbreak 325, 331
static members 365	thbreak 325
value history 365	threads 320, 321, 339
	applying command to 320, 321
virtual function tables 365	
directory 349	current 320 information 320
compilation 349	
current working 349	switching among 320, 321
exceptions 328	value history 371
execution 374, 375, 376, 377	variables, assigning to 374
altering 374	version number 314
calling a function 377	watchpoints 323, 326, 327, 328, 331, 333
continuing at a different address 375	command list 333
patching programs 377	conditions 331
returning from a function 376	defined 323
signalling your program 376	listing 326
finish 336, 376	setting 327
frame 342, 343, 344	threads 328
hbreak 325	whatis 370
info 313, 326	working directory 318

debugging 40, 42, 50	ELIBSCN 285
cross-development 40	ELNRNG 285
libmudflap 50	ELOOP 259
symbolic 40	EMFILE 259
via TCP/IP link 42	EMORE 285
DECIMAL_DIG 277	ENAMETOOLONG 259
DEFFILE macro 231	End of Interrupt (EOI) 171, 180
delay() 130, 135	endgrent() 269
DELAYTIMER_MAX 254, 278	endhostent() 269
devctl() 98, 99, 100	endian-specific code 225
devices 25	endnetent() 269
/dev/shmem 25	endprotoent() 269
DL_DEBUG 35, 38, 39	endpwent() 269
dlopen() 34, 37, 269	endservent() 269
domain error 275	ENFILE 259
double 282	ENOANO 285
double_t 282	ENOBUFS 259
dumper 74, 78	ENOCSI 285
dynamic 28, 29, 43, 232	ENOENT 259
library 29	ENOLIC 285
linking 28, 232	ENOMEM 259, 297
port link via TCP/IP 43	ENOMEN 259
dynamic linker, See runtime linker	ENONDP 285
dynamic miker, occ rantime miker	ENONET 285
	ENOPERM 259
E	ENOPKG 285
EACCES 259	ENOREMOTE 285
EADV 285	ENOSUP 259
EAGAIN 259	ENOSYS 295, 296
EARLY_DIRS macro 220	ENOTBLK 285
EBADE 285	ENOTSUP 259
EBADF 259	ENOTUNIQ 285
EBADFD 285	environment variables 18, 21, 35, 38, 39, 69, 184, 185,
EBADFSYS 285	186, 188, 198, 199, 226, 249, 277, 289, 303,
EBADR 285	316, 317, 351
EBADRPC 285	DL_DEBUG 35, 38, 39
EBADRQC 285	LD_BIND_NOW 35, 39
	LD_DEBUG 39
EBADSLT 285	LD_LIBRARY_PATH 351
EBFONT 285	MALLOC_ARENA_CACHE_MAXBLK 185
EBUSY 259	MALLOC_ARENA_CACHE_MAXSZ 185
ECHRNG 285	MALLOC_ARENA_SIZE 184
ECOMM 285	MALLOC BAND CONFIG STR 188
ECTRLTERM 285	MALLOC_BAND_CONTIG_STR 108 MALLOC_BTDEPTH 198
EDEADLK 259	MALLOC_CKACCESS 199
EDEADLOCK 285	
edge-sensitive interrupts 170	MALLOC_CKACCESS_LEVEL 199
EENDIAN 285	MALLOC_CKCHAIN 199
EFPOS 285	MALLOC_DUMP_LEAKS 198
EHOSTDOWN 285	MALLOC_FILLAREA 199
EILSEQ 259	MALLOC_INITVERBOSE 198
EINTR 259	MALLOC_MEMORY_HOLD 185
EINVAL 259	MALLOC_MEMORY_PREALLOCATE 186
EIO 259, 292, 294, 295, 296, 300, 303	MALLOC_TRACE 198
EL2HLT 285	MALLOC_TRACEBT 198
EL2NSYNC 285	PATH 69, 351
	POSIXLY_CORRECT 21, 249
EL3HLT 285 FL3RST 285	QCONF_OVERRIDE 226
EL3RST 285	SHELL 316, 317
ELF objects 111	TZ 277, 303
ELIBACC 285	DL_DEBUG 35, 38, 39
ELIBBAD 285	LD_BIND_NOW 35, 39
ELIBEXEC 285	LD_BIND_NOW 33, 39 LD_DEBUG_OUTPUT 38, 39
ELIBMAX 285	LU ULUUG UUTFULJO.JJ

environment variables (continued)	F
QNX_CONFIGURATION 18	
QNX_HOST 18	F_ALLOCSP 292
QNX_TARGET 18	F_ALLOCSP64 292
STDIO_DEFAULT_BUFSIZE 289	F_FREESP 292
ENXIO 259	F_FREESP64 292
EOF 295, 296	F_GETLK 292
EOK 285	F GETLK64 292
EOVERFLOW 259	F_GETLKW 292
EPERM 259	F_SETFD 71
EPFNOSUPPORT 285	F_SETLK 292
Epoch, seconds since 275	F_SETLK64 292
EPROCUNAVAIL 285	F_SETLKW64 292
EPROGMISMATCH 285	faults 114
EPROGUNAVAIL 285	fchdir() 259
	fclose() 259, 269, 292
ERANGE 259, 275	
EREMOTE 285	fcloseall() 304
EREMOTE 285	fcntl.h 20
ERESTART 285	fcntl() 71, 259, 292
erfc(), erfcf(), erfcl() 259, 292	FD_CLOEXEC 70, 71
ERPCMISMATCH 285	fdim(), fdimf(), fdiml() 259, 293
errno 275	fdopen() 259
errno.h 285	FE_DIVBYZERO 268
errors, timer quantization 130	FE_DOWNWARD 268
ESHUTDOWN 285	FE_INEXACT 268
ESOCKTNOSUPPORT 285	FE_INVALID 268
ESPIPE 259, 295, 296	FE_OVERFLOW 268
ESRCH 259	FE_TONEAREST 268
ESRMNT 285	FE_TOWARDZERO 268
ESRVRFAULT 285	FE_UNDERFLOW 268
ESTRPIPE 285	FE_UPWARD 268
ETOOMANYREFS 285	feature-test macros 19
ETXTBSY 259	fegetexceptflag() 268, 293
EUNATCH 285	fegetround() 268, 300
EUSERS 285	FENV_ACCESS pragma (off by default) 277
events, interrupt, running out of 178	fenv.h 277
events, scheduling for delivery 108	feraiseexcept() 268, 293
exceptions, floating point 72	fesetexecptflag() 268
EXCLUDE_OBJS macro 231, 243, 246	fesetround() 268
exec* family of functions 69, 138	fetestexecptflag() 268
execing 70	fflush() 259, 269, 294
execlpe() 304	fgetc() 259, 269, 294
execution time, measuring 275	fgetchar() 304
execve() 84, 93	fgetpos() 259, 269
execvpe() 304	fgets() 269
EXFULL 285	fgetwc() 259, 269
exit status 72, 103	fgetws() 269
exit() 54, 72	FIFO (scheduling method) 62
exp(), expl(), expl() 259, 292	FIFO scheduling 60, 62, 104, 290, 291
exp2(), exp2f(), exp2l() 259, 292	file descriptors 71, 289
expm1(), expm1f() 259	inheriting 71
EXPR_NEST_MAX 278	interaction with standard I/O streams 289
extended scheduling 106	setting the minimum acceptable 71
extended security controls (not implemented) 274	FILENAME_MAX 258
EXTRA_INCVPATH macro 230, 243	fileno() 259
EXTRA_INCVERTITION 230, 243	files 18, 19, 28, 29, 31, 43, 98, 217, 219, 223, 226, 229,
EXTRA_OBJS macro 231	233, 268, 269, 274, 296, 300, 302, 310
EXTRA_OBJS Macro 231 EXTRA_SRCVPATH macro 230, 246	.1 extension 31
extsched_aps_dbg_thread 106	.a suffix 28
chisched_aps_ubg_tilleau 100	.so suffix 29
	\$QNX_TARGET/usr/include/ 219
	\$QNX_TARGET/us/include/ 219 \$QNX_TARGET/usr/include/mk/ 219
	Ψαίλ ΙΔΙΛΟΕΙ/USI/IIICIUUC/IIIN/ Δ13

files (continued)	FPE_FLTRES 288
as (address space) 98	FPE_FLTUND 288
common.mk 223	FPE_INTDIV 288
inetd.conf 43	FPE_INTOVF 288
Makefile.dnm 219	FPE_NOFPU 288
qconf-qrelease.mk 226	FPE_NOMEM 288
qconfig.mk 226	fprintf() 269, 294
grules.mk 229	fputc() 259, 269, 295
qtargets.mk 233	fputchar() 304
recurse.mk 219	fputwc() 269
access control 268, 269, 274	fputws() 269
debugger initialization 310	FQNN (Fully Qualified Node Name) 392
host-specific 18	fread() 259, 269
large, support for 19	free list 184
Makefile 217	free() 184, 192
modification times 296	freopen() 259, 269, 295
offsets, 64-bit 19	fscanf() 259, 269, 295
special device, reading past end-of-file 300	fseek() 269
target-specific 18	fseeko() 269, 295
temporary, naming 302	fsetpos() 269, 296
FILESIZEBITS 254, 278	fstat() 259, 269, 296
filesystem 25, 40	fsync() 296
/proc 40	ftell() 259, 269
builtin via /dev/shmem 25	ftello() 269
fill-area boundary checking 195	ftw() 269
find_malloc_ptr() 201	Fully Qualified Node Name (FQNN) 392
float 282	
	fwprintf() 269
float_t 282	fwrite() 269
float.h 20, 277	fwscanf() 269
floating point exceptions 72, 268, 275, 288	
floating point operations 277	G
floating point registers 109, 114	u
getting 109	gamma*() 304
getting 109 setting 114	gamma*() 304 gdb 35
	gdb 35
setting 114	gdb 35 forces the loading of all lazy-load dependencies 35
setting 114 floating-point format 268	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getchar() 259
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getcwd() 259 getgrent() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getcwd() 259 getgrent() 269 getgrgid_r() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getcwd() 259 getgrent() 269 getgrgid_r() 269 getgrgid() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getcwd() 259 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX 251, 277	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getcwd() 259 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getgrnam_r() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX 251, 277 FLT_MAX_10_EXP 251, 277	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getcwd() 259 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_10_EXP 251, 277	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getcwd() 259 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getgrnam_r() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MIN 251, 277	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getcwd() 259 getgrent() 269 getgrgid_r() 269 getgrgid_r() 269 getgrnam_r() 269 getgrnam() 269 getgrnam() 269 getlogin_r() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MIN 251, 277 FLT_MIN 251, 277 FLT_MIN_10_EXP 251, 277	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getcwd() 259 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getgrnam() 269 getlogin_r() 269 getlogin() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MIN 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getcwd() 259 getgrent() 269 getgrent() 269 getgrgid_r() 269 getgrnam_r() 269 getgrnam() 269 getlogin_r() 269 getlogin() 269 getnetbyaddr() 269 getnetbyname() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MIN 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_EXP 251, 277 FLT_MIN_EXP 251, 277 FLT_RADIX 251, 277	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getcwd() 259 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getgrnam() 269 getlogin_r() 269 getlogin() 269 getnetbyaddr() 269 getnetbyname() 269 getnetent() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MIN 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_EXP 251, 277 FLT_RADIX 251, 277 FLT_RADIX 251, 277 FLT_ROUNDS 277	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getcwd() 259 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getgrnam() 269 getlogin_r() 269 getlogin() 269 getnetbyaddr() 269 getnetbyname() 269 getnetetl() 269 getnetent() 269 getprio(), use only for QNX 4 compatibility 62
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MIN 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_EXP 251, 277 FLT_MIN_EXP 251, 277 FLT_RADIX 251, 277	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getcwd() 259 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getgrnam() 269 getlogin_r() 269 getlogin() 269 getnetbyaddr() 269 getnetbyname() 269 getnetett() 269 getnetent() 269 getprio(), use only for QNX 4 compatibility 62 getpriority(), don't use 62
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MIN 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_EXP 251, 277 FLT_RADIX 251, 277 FLT_RADIX 251, 277 FLT_ROUNDS 277	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getcwd() 259 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getgrnam() 269 getlogin_r() 269 getlogin() 269 getnetbyaddr() 269 getnetbyname() 269 getnetent() 269 getprio(), use only for QNX 4 compatibility 62 getpriotobyname() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MIN 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_RADIX 251, 277 FLT_ROUNDS 277 fma(), fmaf(), fmal() 294	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getgrent() 269 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getgrnam_r() 269 getlogin_r() 269 getlogin() 269 getnetbyaddr() 269 getnetbyname() 269 getnetent() 269 getprio(), use only for QNX 4 compatibility 62 getprotobyname() 269 getprotobynumber() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX_251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MIN_251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_EXP 251, 277 FLT_ROUNDS 277 fma(), fmaf(), fmal() 294 fmod(), fmodf(), fmodl() 259, 294 FOPEN_MAX 258	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getgrent() 269 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getgrnam_r() 269 getlogin_r() 269 getlogin() 269 getnetbyaddr() 269 getnetbyname() 269 getnetent() 269 getprior(), use only for QNX 4 compatibility 62 getprotobyname() 269 getprotobynumber() 269 getprotobynumber() 269 getprotoent() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MIN_251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_ROUNDS 277 fLT_ROUNDS 277 fma(), fmaf(), fmal() 294 fmod(), fmodf(), fmodl() 259, 294 FOPEN_MAX 258 fopen() 259, 269	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getchar() 269 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getgrnam_r() 269 getlogin_r() 269 getlogin() 269 getnetbyaddr() 269 getnetbyaddr() 269 getnetbyname() 269 getprior(), use only for QNX 4 compatibility 62 getprotobyname() 269 getprotobyname() 269 getprotobynumber() 269 getprotoent() 269 getprotoent() 269 getprotoent() 269 getpwent_r() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MIN 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_EXP 251, 277 FLT_ROUNDS 277 fma(), fmaf(), fmal() 294 fmod(), fmodf(), fmodl() 259, 294 FOPEN_MAX 258 fopen() 259, 269 fork() 84, 89, 93, 138	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getchar() 269 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getgrnam() 269 getlogin_r() 269 getlogin() 269 getnetbyaddr() 269 getnetbyname() 269 getnettyname() 269 getprior(), use only for QNX 4 compatibility 62 getprotobyname() 269 getprotobynumber() 269 getprotobynumber() 269 getprotoent() 269 getpwent_r() 269 getpwent_r() 269 getpwent() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_EXP 251, 277 FLT_ROUNDS 277 fltT_ROUNDS 277 fma(), fmaf(), fmal() 294 fmod(), fmodf(), fmodl() 259, 294 FOPEN_MAX 258 fopen() 259, 269 fork() 84, 89, 93, 138 FP_CONTRACT pragma (off by default 282	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getchar() 269 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getlogin_r() 269 getlogin() 269 getnetbyaddr() 269 getnetbyname() 269 getnetbyname() 269 getprio(), use only for QNX 4 compatibility 62 getpriotobyname() 269 getprotobynumber() 269 getprotobynumber() 269 getprotoent() 269 getpwent_r() 269 getpwent_r() 269 getpwent_r() 269 getpwnam_r() 269 getpwnam_r() 269 getpwnam_r() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MIN_251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_EXP 251, 277 FLT_ROUNDS 277 fma(), fmaf(), fmal() 294 fmod(), fmodf(), fmodl() 259, 294 FOPEN_MAX 258 fopen() 259, 269 fork() 84, 89, 93, 138 FP_CONTRACT pragma (off by default 282 fpathconf() 259	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getchar() 269 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getlogin_r() 269 getlogin() 269 getnetbyaddr() 269 getnetbyname() 269 getnetent() 269 getpriority(), don't use 62 getprotobyname() 269 getprotobynumber() 269 getprotoent() 269 getpwent_r() 269 getpwent_r() 269 getpwamm_r() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX_251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_EXP 251, 277 FLT_ROUNDS 277 fma(), fmaf(), fmal() 294 fmod(), fmodf(), fmodl() 259, 294 FOPEN_MAX 258 fopen() 259, 269 fork() 84, 89, 93, 138 FP_CONTRACT pragma (off by default 282 fpathconf() 259 fpclassify() 294	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getchar() 269 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getlogin_r() 269 getlogin() 269 getnetbyaddr() 269 getnetbyname() 269 getnetbyname() 269 getpriority(), don't use 62 getprotobyname() 269 getprotobynumber() 269 getpwent_r() 269 getpwent_r() 269 getpwamm_r() 269 getpwuid_r() 269
setting 114 floating-point format 268 floating-point operations 54, 170 not safe to use in ISRs 170 not safe to use in signal handlers 54 flock, flock64 structures 292 flock() 304 FLT_DIG 251, 277 FLT_EPSILON 251, 277 FLT_EPSILON 251, 277 FLT_EVAL_METHOD 277, 282 FLT_MANT_DIG 251, 277 FLT_MAX_10_EXP 251, 277 FLT_MAX_EXP 251, 277 FLT_MIN_251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_10_EXP 251, 277 FLT_MIN_EXP 251, 277 FLT_ROUNDS 277 fma(), fmaf(), fmal() 294 fmod(), fmodf(), fmodl() 259, 294 FOPEN_MAX 258 fopen() 259, 269 fork() 84, 89, 93, 138 FP_CONTRACT pragma (off by default 282 fpathconf() 259	gdb 35 forces the loading of all lazy-load dependencies 35 getc_unlocked() 269 getc() 269 getchar_unlocked() 269 getchar() 269 getchar() 269 getgrent() 269 getgrgid_r() 269 getgrgid() 269 getgrnam_r() 269 getlogin_r() 269 getlogin() 269 getnetbyaddr() 269 getnetbyname() 269 getnetent() 269 getpriority(), don't use 62 getprotobyname() 269 getprotobynumber() 269 getprotoent() 269 getpwent_r() 269 getpwent_r() 269 getpwamm_r() 269

getservbyname() 269	INT_FAST32_MIN 282
getservbyport() 269	INT_FAST64_MAX 282
getservent() 269	INT_FAST64_MIN 282
getwc() 269	INT_FAST8_MAX 282
getwchar() 269	INT_FAST8_MIN 282
getwd() 269	INT_LEAST16_MAX 282
glob() 269	INT_LEAST16_MIN 282
Global Offset Table (GOT) 33	INT_LEAST32_MAX 282
GNU configure 237	INT_LEAST32_MIN 282
GOT (Global Offset Table) 33	INT_LEAST64_MAX 282
	INT_LEAST64_MIN 282
H	INT_LEAST8_MAX 282
•	INT_LEAST8_MIN 282
HAM (High Availability Manager) 75	INT_MAX 258, 278
hardware 131, 132, 167, 303	INT_MIN 278
current platform 303	INT16_MAX 282
interrupts, See interrupts, ISR	INT16_MIN 282
timers 131, 132	INT32_MAX 282
effect on the tick size 131	INT32_MIN 282
effect on timers 132	INT64_MAX 282
	INT64_MIN 282
header files 22	INT8_MAX 282
heap 184, 190, 202	INT8_MIN 282
buffers 202	interprocess communication, See IPC
tracing 202	interrupt handlers 52, 56, 110, 167
corruption 190	See also ISR
defined 184	getting for a process 110
Hello, world! program 23	
High Availability Manager (HAM) 75	will preempt any thread 56
hook_pinfo() 238, 240	See also ISR
hook_postconfigure() 238, 239	Interrupt Request (IRQ) 169
hook_postmake() 238, 240	defined 169
hook_preconfigure() 238, 239	Interrupt Service Routine, See ISR
hook_premake() 238, 240	Interrupt Service Thread (IST) 168
host name 303	InterruptAttach() 168, 169, 174
HOST_NAME_MAX 278	InterruptAttachEvent() 168, 169, 174
host-specific files, location of 18	InterruptCharacteristic() 181
nost specific files, location of 10	InterruptDetach() 169
	InterruptLock() 174
	InterruptMask() 173
	interrupts 167, 169, 171, 172, 173, 177, 178, 179, 180,
1/0 73, 85, 272, 289, 292, 294	181
errors 292, 294	defined 167
prioritized 272	edge-triggered 171
privileges 73, 85	latency 179, 180, 181
streams, standard 289	lazy 181
IEEE 1003.1e and 1003.2c drafts (withdrawn) 119	level-sensitive 171
IEEE 754 floating-point format 268	
ILL_COPROC 287	masking 169, 172, 173, 177
ILL_ILLOPC 287	automatically by the kernel 169
ILL_PRVOPC 287	running out of events 178
illegal instructions, execution of 287	sharing 179, 180
immediate dependencies 37	InterruptUnlock() 174
implicit dependencies 37	InterruptUnmask() 173
· · · · ·	must be called same number of times as InterruptMask()
include directory 22	173
INCVPATH macro 230	InterruptWait() 168
infinity, representing in print 294	INTPTR_MAX 282
initialization, debugger commands 310	INTPTR_MIN 282
INSTALLDIR macro 233, 247	invalid memory access 287
instruction pointer 103, 104, 114	ioctl() 269
int 272	ionotify() 139
INT_FAST16_MAX 282	IOV_MAX 278
INT_FAST16_MIN 282	IPC (interprocess communication) 51
INT_FAST32_MAX 282	

isfdtype() 304	LDBL_EPSILON 251, 277
ISO 10646-1 269	LDBL_MANT_DIG 251, 277
2000 character set 269	LDBL_MAX 251, 277
ISO 8859-1 269	LDBL_MAX_10_EXP 251, 277
1987 character set 269	LDBL_MAX_EXP 251, 277
ISO/IEC 8859-1 character set 276	LDBL_MIN 251, 277
ISR 110, 167, 168, 169, 170, 172, 174, 175, 178, 180	LDBL MIN 10 EXP 251, 277
See also interrupt handlers	LDBL_MIN_EXP 251, 277
coupling data structure with 175	ldd_add_event_handler() 38
defined 167	Idexp(), Idexpf(), Idexpl() 259, 296
environment 180	LDFLAGS macro 232
floating-point operations aren't safe to use in 170	Idanx.so.2 26
functions safe to use within 172	LDVFLAG_* macro 232
getting for a process 110	leaks, memory 183
multicore systems 168	level-sensitive interrupts 170
preemption considerations 174	liblogin 82
pseudo-code example 175	libmudflap 50
responsibilities of 172	LIBPOST_ macro 231
returning SIGEV_INTR 175	LIBPREF_ macro 231
returning SIGEV_PULSE 175	library 28, 29, 31, 232
returning SIGEV_SIGNAL 175	dynamic 29, 232
rules of acquisition 169	linking against 31
running out of interrupt events 178	static 28, 232
signalling a thread 174	LIBS macro 231, 247
See also interrupt handlers	LIBVPATH macro 230
IST (Interrupt Service Thread) 168	limits.h 20, 278
	LINE_MAX 278
J	LINK_MAX 254, 278
J	link() 259
JLEVEL 236	linker, runtime 26, 33
job control 288	optimizing 33
JOIN state 105	linking 28, 31, 33, 35, 232
John State 100	-znow option 35
	dynamic 28, 232
K	lazy 33
	static 28, 232
kernel 182	LINKS macro 233
calls 182	LIST macro 220, 236
ThreadCtl(), ThreadCtl_r() 182	little-endian 208
kill() 296	LLONG_MAX 258, 278
	LLONG_MIN 278
L	LN HOST macro 228
	loading, lazy 37
L_tmpnam 258	locales 276, 301
large-file support 19	default 276
LATE_DIRS macro 220	locks, read-write 299, 300
latency, interrupts 179, 180, 181	log(), logf(), logl() 296
lazy binding or linking 33	log10(), log10f(), log10l() 296
lazy interrupts 181	log1p(), log1pf(), log1pl() 296
lazy loading 37	log2(), log2f(), log2l() 296
LC_COLLATE 276	LOGIN_NAME_MAX 278
LC_CTYPE 276	long 272
LC_MESSAGES 276	long long 273
LC_MONETARY 276	LONG_BIT 278
LC_NUMERIC 276	LONG_MAX 258, 278, 300, 303
LC_TIME 276	LONG_MIN 278
LD_BIND_NOW 35, 39	Iseek() 98, 99, 269, 296
LD_DEBUG 39	Itrunc() 304
LD_DEBUG_OUTPUT 38, 39	
LD_LIBRARY_PATH 351	
LD_PRELOAD 38	M
LDBL_DIG 251, 277	M HANDLE ABORT 197

M_HANDLE_CORE 197	memory (continued)
M_HANDLE_EXIT 197	arenas 184
M_HANDLE_IGNORE 197	bands 186
M_HANDLE_SIGNAL 197	buckets 187
make_CC 238	checks 194, 195, 196, 199, 200, 201
make_cmds 238	additional stack space required 199
make_opts 238	boundaries 194, 195
Makefile 217, 222, 232, 236	chain 195, 196
CXXFLAGS macro 232	compiler optimization and 200
LIST macro 236	manual 201
partial builds 236	leaks 202
recursive 217	locking 289
variant level 222	mapping 112
MAKEFILE macro 220	misaligned access 301
Makefile.dnm file 219	releasing 192
MALLOC_ARENA_CACHE_FREE_NOW 185	shared 301
MALLOC_ARENA_CACHE_MAXBLK 185	opening 301
MALLOC_ARENA_CACHE_MAXSZ 185	metadata, writing 292, 294
MALLOC_ARENA_SIZE 184	misaligned memory access 301
MALLOC_BAND_CONFIG_STR 188	mkdir() 259, 297
MALLOC_BTDEPTH 198	mkifs 26
MALLOC_CKACCESS 194, 199	mkstemp() 269
MALLOC_CKACCESS_LEVEL 199	mktime() 259
MALLOC_CKCHAIN 194, 195, 199	mlock() 259, 297
MALLOC_DUMP_LEAKS 198	mlockall() 259, 297
malloc_dump_unreferenced() 203	mmap_device_io() 304
MALLOC_FATAL 196, 199	mmap_device_memory() 304
MALLOC_FILLAREA 194, 195, 199	mmap() 112, 184, 297
MALLOC_INITVERBOSE 198	mq_getattr() 259
MALLOC_MEMORY_HOLD 185	MQ_OPEN_MAX 254, 278
MALLOC_MEMORY_PREALLOCATE 186	mq_open() 298
MALLOC_TRACE 198	MQ_PRIO_MAX 254, 278
MALLOC_TRACEBT 198	mq_receive() 259, 298
MALLOC_VERIFY 196	mq_setattr() 298
MALLOC_WARN 197, 199	mq_timedreceive_monotonic() 304
malloc_warning() 201	mq_timedreceive() 259
malloc() 184, 297	mq_timedsend_monotonic() 304
mallopt() 184, 193, 304	mudflap 50
manifest constants 19, 21	Mudflap 205
defining 19	multicore systems 105, 168, 173, 174, 290
OS-specific code 21	controlling the processors a thread can run on 290
MAP_ELF 111	determining which processor a thread last ran on 105
MAP_FAILED 297	interrupts on 168, 173, 174
MAP_FIXED 297	munlock() 259
mapped memory segments 112	munlockall() 297
MATH_ERRNO 275	munmap_device_io() 304
math.h 20, 282	munmap_device_memory() 304
mathematical functions, error conditions 275	munmap_flags() 304
MAX_CANON 278	munmap() 184
MAX_INPUT 278	mutex 57, 64
MB_LEN_MAX 278	MUTEX state 105
MCL_FUTURE 297	
media, removable 292, 294, 295, 296, 300, 303	N
mem_offset() 304	
memalign() 304	NAME macro 230, 247
memcpyv() 304	NAME_MAX 250, 254, 278
memicmp() 304	named semaphores 300
memory 112, 183, 184, 186, 187, 192, 194, 195, 196,	opening 300
199, 200, 201, 202, 287, 289, 301	NaN (Not a Number) 275, 294
access, invalid 287	domain errors 275
access, misaligned 287	representing in print 294
allocation 183	nanosleep() 130, 139

nanospin*() 130, 136	popen() 269
nftw() 269	portable code 19, 21, 249
NGROUPS_MAX 278	OS-specific 21
nice 68	POSIX 19, 119, 249, 250, 276, 301, 304
ntoarmv7-gdb 41	1003.1e and 1003.2c drafts (withdrawn) 119
ntox86-gdb 41	ANSI-compliant code 19
	IEEE Std 1003.13-2003 249
0	locale 276, 301
O	POSIX-sounding function names 304
O_NONBLOCK 298	PSE52 Realtime Controller 1003.13-2003 249
O_TRUNC 298	unsupported optional features 250
OBJPOST_ macro 231	POSIX_C_LANG_WIDE_CHAR 250
OBJPREF_ macro 231	POSIX_DEVICE_SPECIFIC 250
off_t 272, 273	POSIX_EVENT_MGMT 250
offsets, 64-bit 19	posix_fadvise() 269
on utility 68	posix_fallocate() 269
on-demand dependency loading 37	POSIX_FIFO 251
on-demand symbol resolution 33	POSIX_FILE_ATTRIBUTES 251
OPEN_MAX 254, 278	POSIX_FILE_SYSTEM_EXT 251
open() 98, 259, 298	POSIX_JOB_CONTROL 251
opendir() 98, 259, 269	POSIX_MULTI_PROCESS 251
openfd() 304	POSIX_NETWORKING 251
openlog() 269	posix_openpt() 269
OPTIMIZE_TYPE macro 232	POSIX_PIPE 251
OS 18, 303	POSIX_REGEXP 251
name 303	POSIX_RW_LOCKS 251
release level 303	POSIX_SHELL_FUNCS 251
versions, coexistence of 18	POSIX_SIGNAL_JUMP 251
OS macro 229	posix_spawn_file_actions_init() 304
OS_ROOT macro 229	posix_spawn() 269
other scheduling 60, 104, 272, 289, 291, 299	posix_spawnattr_addpartition() 304
Out of interrupt events 178	posix_spawnattr_addpartition() 304
	posix_spawnattr_getnode() 304
P	posix_spawnattr_getpartid() 304 posix_spawnattr_getrunmask() 304
•	posix_spawnattr_getsigignore() 304
P_NOWAIT 70	posix_spawnattr_getstackmax() 304
P_NOWAITO 70, 76	posix_spawnattr_getxflags() 304
P_OVERLAY 69, 70	posix_spawnattr_setnode() 304
P_WAIT 69, 70	posix_spawnattr_setriode() 304
PAGE_SIZE 278	posix_spawnattr_setstackmax() 304
PAGESIZE 254, 278	posix_spawnattr_setxflags() 304
parallel builds 236	posix_spawnp() 269
partial builds 236	POSIX_STRING_MATCHING 251
PATH 69, 351	POSIX_SYMBOLIC_LINKS 251
PATH_MAX 254, 278	POSIX_SYSTEM_DATABASE 251
pathconf() 259, 269	posix_trace_*() (not supported) 259, 299
pathname resolution 275	POSIX_USER_GROUPS 251
pclose() 269	POSIX_WIDE_CHAR_IO 251
pdebug 35	POSIXLY_CORRECT 21, 249
forces the loading of all lazy-load dependencies 35	POST_BUILD macro 234
perror() 269	POST_CINSTALL macro 234
PIC 170	POST_CLEAN macro 233
pidin 99	POST_HINSTALL macro 234
PINFO 227, 234, 240, 243, 247	POST_ICLEAN macro 233
PIPE_BUF 278	POST_INSTALL macro 234
PLT (Procedure Linkage Table) 33	POST_TARGET macro 233
pointers 272, 294	postmortem debugging 73
representing in print 294	pow(), powf(), powl() 259, 299
pointers, stale 192	power management 137
polling 58, 167	clocks and timers 137
polling 58, 167	PRE_BUILD macro 234
use interrupts instead 167	

PRE_CINSTALL macro 234	procfs_irq 111
PRE_CLEAN macro 233	procfs_mapinfo 112
PRE_HINSTALL macro 234	procfs_regset 110, 115
PRE_ICLEAN macro 233	procfs_run 113
PRE_INSTALL macro 234	procfs_signal 115
PRE_TARGET macro 233	procfs_status 102, 116, 117, 118
preprocessor symbols 19, 21	procfs_sysinfo 116
defining 19	procfs_timer 118
OS-specific code 21	procmgr abilities 85
printf() 269	procmgr_ability() 56, 86, 87, 88, 89, 90, 93, 96
priorities 56, 60	PROCMGR_ADN_NONROOT 86, 87
effective 56	PROCMGR_ADN_ROOT 86
range 56	PROCMGR_AID_EOL 86, 88
real 56	specifying flags with 88
prioritized I/O 272	PROCMGR_AID_INTERRUPT 169
privilege separation 83, 93	PROCMGR_AID_IO 73, 169
privileges 274	PROCMGR_AID_PATHSPACE 82, 86
privileges, I/O 73, 85	PROCMGR_AID_PRIORITY 56
proc filesystem 98	PROCMGR_AID_RCONSTRAINT 96
Procedure Linkage Table (PLT) 33	PROCMGR_AID_SPAWN_SETGID 87
process manager abilities, See procmgr abilities	PROCMGR_AID_SPAWN_SETUID 87, 88
process.h 20	PROCMGR_AOP_ALLOW 87, 89, 90
processes 52, 54, 64, 68, 69, 72, 75, 78, 82, 98, 100,	PROCMGR_AOP_DENY 89, 90
101, 102, 103, 105, 107, 110, 114, 115, 116,	PROCMGR_AOP_INHERIT_NO 88, 89
117, 118, 182, 288	PROCMGR_AOP_INHERIT_YES 88, 89, 90
	PROCMGR_AOF_LOCK 87, 88, 90
attributes, examining 101	
breakpoints, setting 101, 107, 110, 118	PROCMGR_AOP_SUBRANGE 86, 87
can be started/stopped dynamically 52	procmgr_daemon() 75, 76
channel 105	PROCMGR_EVENT_DAEMON_DEATH 81
last one a message was received on 105	procmgr_event_notify() 81
channels 107	procmgr_timer_tolerance() 138
getting a list of 107	procnto 73
concurrency 69	diagnostics for abnormal process termination 73
controlling via /proc 98	PRODUCT macro 230
creation 69	PRODUCT_ROOT macro 230, 246
defined 54	Programmable Interrupt Controller, See PIC
dumped, detecting 78	PROJECT macro 230
exit status 72, 103	PROJECT_ROOT macro 230, 243, 246, 247
faults 114	PSE52 Realtime Controller 1003.13-2003 249
I/O privileges, requesting 182	pthread_abort() 304
interrupt handlers, getting a list of 110	pthread_attr_destroy() 259, 299
manipulating 100	pthread_attr_getdetachstate() 259
multithreaded, purpose of 64	pthread_attr_getguardsize() 259
privileges 82	pthread_attr_getinheritsched() 259
reasons for breaking application into multiple 52	pthread_attr_getschedparam() 259
signals 105, 114, 115	pthread_attr_getschedpolicy() 259
delivering 115	pthread_attr_getscope() 259
starting 68	pthread_attr_getstack() 259
starting do starting via shell script 68	
	pthread_attr_getstackaddr() 259
status, getting 102, 116, 117	pthread_attr_getstacklazy() 304
termination 72, 75, 288	pthread_attr_getstackprealloc() 304
abnormal 72	pthread_attr_getstacksize() 259
detecting 75	pthread_attr_init() 259
effect on child processes 72	pthread_attr_setdetachstate() 259
normal 72	pthread_attr_setguardsize() 259
timers, getting a list of 118	pthread_attr_setinheritsched() 259
procfs_break 107, 110	pthread_attr_setschedparam() 60, 259
procfs_channel 107	pthread_attr_setschedpolicy() 60, 259
procfs_debuginfo 111	pthread_attr_setscope() 259
procfs_fpreg 109, 114	pthread_attr_setsack() 259
procfs_greg 109, 115	pthread_attr_setstacka(/ 259 pthread_attr_setstackaddr() 259
procfs info 110	pthread_attr_setstackaddi() 239
DIOCIO IIIIO XXV	princad atti sotsiaoniazyl/ sot

pthread_attr_setstackprealloc() 304	pthread_setschedprio() 60, 61
pthread_attr_setstacksize() 259	pthread_setspecific() 259
pthread_cancel() 259	pthread_sleepon_broadcast() 304
pthread_cond_broadcast() 259	pthread_sleepon_lock() 304
pthread_cond_destroy() 259	pthread_sleepon_signal() 304
pthread_cond_init() 259	pthread_sleepon_timedwait() 304
pthread_cond_signal() 259	pthread_sleepon_unlock() 304
pthread_cond_timedwait() 139, 259	pthread_sleepon_wait() 304
pthread_cond_wait() 259	PTHREAD_STACK_MIN 254, 278
pthread_condattr_destroy() 259, 299	PTHREAD_THREADS_MAX 254, 278
pthread_condattr_getclock() 259	pthread_timedjoin(), pthread_timedjoin_monotonic() 304
pthread_condattr_getpshared() 259	PTRDIFF_MAX 284
pthread_condattr_setclock() 259	PTRDIFF_MIN 284
pthread_condattr_setpshared() 259	pulses 175
pthread_create() 259	interrupt handlers 175
PTHREAD_DESTRUCTOR_ITERATIONS 254, 278	putc_unlocked() 269
pthread_detach() 259	putc() 259, 269
pthread_exit() 54	putchar_unlocked() 269
pthread_getcpuclockid() 259	putchar() 259, 269
pthread_getrame_np() 304	puts() 259, 269
pthread_getschedparam() 60, 61, 259, 299	putwc() 269
PTHREAD_INHERIT_SCHED 290	putwchar() 269
pthread_join() 259	PWD_HOST 228
pthread_lom() 259 pthread_key_delete() 259	TWD_11031 226
PTHREAD_KEYS_MAX 254, 278	
pthread_mutex_destroy() 259	Q
pthread_mutex_init() 259	qcc 21
pthread_mutex_lock() 259	OS-specific code 21
pthread_mutex_timedlock_monotonic() 304	QCONF_OVERRIDE 226
pthread_mutex_timedlock() 259	qconfig 18
pthread_mutex_trylock() 259	qconn 44
pthread_mutex_unlock() 259	Qnet 141, 303, 387, 398, 400
pthread_mutex_wakeup_np() 304	cross-endian support 398
pthread_mutexattr_destroy() 259	
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259	cross-endian support 398
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259	cross-endian support 398 forcing retransmission 400
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_settype() 259	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_settype() 259 pthread_mutexattr_setwakeup_np() 304	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_settype() 259 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_once() 259	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_settype() 259 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_once() 259 pthread_rwlock_rdlock() 269, 299	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_settype() 259 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_once() 259 pthread_rwlock_rdlock() 269, 299 pthread_rwlock_timedrdlock() 269	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269 readdir() 98, 259, 269
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setpriocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_settype() 259 pthread_mutexattr_setvakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_once() 259 pthread_rwlock_rdlock() 269, 299 pthread_rwlock_timedrdlock() 269 pthread_rwlock_timedwrlock() 269	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269 readdir() 98, 259, 269 ready queue 57, 58
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_settype() 259 pthread_mutexattr_settype() 259 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_rwlock_rdlock() 269, 299 pthread_rwlock_timedrdlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlock_unlock() 299	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269 readdir() 98, 259, 269 ready queue 57, 58 READY state 57
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setpriocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_settype() 259 pthread_mutexattr_setvakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_rwlock_rdlock() 269, 299 pthread_rwlock_timedrdlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlock_unlock() 299 pthread_rwlock_wrlock() 269	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269 readdir() 98, 259, 269 ready queue 57, 58 READY state 57 realloc() 184
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setpriocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_settype() 259 pthread_mutexattr_setvakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_rwlock_rdlock() 269, 299 pthread_rwlock_timedrdlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlock_unlock() 299 pthread_rwlock_wrlock() 269 pthread_rwlockattr_getpshared() 300	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269 readdir_r() 269 readdir() 98, 259, 269 ready queue 57, 58 READY state 57 realloc() 184 realtime signals 282
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_settype() 259 pthread_mutexattr_settype() 259 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_rwlock_rdlock() 269, 299 pthread_rwlock_timedrdlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlock_unlock() 299 pthread_rwlock_wrlock() 269 pthread_rwlockattr_getpshared() 300 pthread_rwlockattr_setpshared() 300	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269 readdir_r() 269 readdir() 98, 259, 269 ready queue 57, 58 READY state 57 realloc() 184 realtime signals 282 RECEIVE state 106
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_settype() 259 pthread_mutexattr_settype() 259 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_rwlock_rdlock() 269, 299 pthread_rwlock_timedrdlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlock_unlock() 299 pthread_rwlock_wrlock() 269 pthread_rwlockattr_getpshared() 300 pthread_schedprio() 259	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269 readdir_r() 269 readdir_r() 98, 259, 269 ready queue 57, 58 READY state 57 realloc() 184 realtime signals 282 RECEIVE state 106 recurse.mk file 219
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_setvakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_rwlock_rdlock() 269, 299 pthread_rwlock_timedrdlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlock_wrlock() 269 pthread_rwlockattr_getpshared() 300 pthread_rwlockattr_setpshared() 300 pthread_schedprio() 259 PTHREAD_SCOPE_PROCESS (not supported) 290	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269 readdir_r() 269 readdir() 98, 259, 269 ready queue 57, 58 READY state 57 realloc() 184 realtime signals 282 RECEIVE state 106 recurse.mk file 219 recursive Makefiles 217
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setpriocol() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_settype() 259 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_rwlock_rdlock() 269, 299 pthread_rwlock_timedrdlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlock_unlock() 299 pthread_rwlockattr_getpshared() 300 pthread_rwlockattr_setpshared() 300 pthread_schedprio() 259 PTHREAD_SCOPE_PROCESS (not supported) 290 PTHREAD_SCOPE_SYSTEM 272, 290	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269 readdir() 98, 259, 269 ready queue 57, 58 READY state 57 realloc() 184 realtime signals 282 RECEIVE state 106 recurse.mk file 219 recursive Makefiles 217 registers 109, 110, 114, 115
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_setvakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_rwlock_rdlock() 269, 299 pthread_rwlock_timedrdlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlock_unlock() 269 pthread_rwlockattr_getpshared() 300 pthread_rwlockattr_setpshared() 300 pthread_schedprio() 259 PTHREAD_SCOPE_PROCESS (not supported) 290 PTHREAD_SCOPE_SYSTEM 272, 290 pthread_self() 60	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269 readdir() 98, 259, 269 readdy queue 57, 58 READY state 57 realloc() 184 realtime signals 282 RECEIVE state 106 recurse.mk file 219 recursive Makefiles 217 registers 109, 110, 114, 115 getting 109, 110
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setpriocol() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_setvakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_rwlock_rdlock() 269, 299 pthread_rwlock_timedrdlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlock_unlock() 299 pthread_rwlockattr_getpshared() 300 pthread_rwlockattr_setpshared() 300 pthread_schedprio() 259 PTHREAD_SCOPE_PROCESS (not supported) 290 PTHREAD_SCOPE_SYSTEM 272, 290 pthread_self() 60 pthread_setcancelstate() 259	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269 readdir() 98, 259, 269 ready queue 57, 58 READY state 57 realloc() 184 realtime signals 282 RECEIVE state 106 recurse.mk file 219 recursive Makefiles 217 registers 109, 110, 114, 115 getting 109, 110 setting 114, 115
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_setvakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_rwlock_rdlock() 269, 299 pthread_rwlock_timedrdlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlockattr_getpshared() 300 pthread_rwlockattr_setpshared() 300 pthread_schedprio() 259 PTHREAD_SCOPE_PROCESS (not supported) 290 PTHREAD_SCOPE_SYSTEM 272, 290 pthread_setcancelstate() 259 pthread_setcancelstate() 259	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269 readdir() 98, 259, 269 readdy queue 57, 58 READY state 57 realloc() 184 realtime signals 282 RECEIVE state 106 recurse.mk file 219 recursive Makefiles 217 registers 109, 110, 114, 115 getting 109, 110 setting 114, 115 remainder(), remainderf(), remainderl() 300
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_setvecursive() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_rwlock_rdlock() 269, 299 pthread_rwlock_timedrdlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlockattr_getpshared() 300 pthread_rwlockattr_setpshared() 300 pthread_schedprio() 259 PTHREAD_SCOPE_PROCESS (not supported) 290 PTHREAD_SCOPE_SYSTEM 272, 290 pthread_setcancelstate() 259 pthread_setcancelstate() 259 pthread_setname_np() 304	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269 readdir() 98, 259, 269 readdy queue 57, 58 READY state 57 realloc() 184 realtime signals 282 RECEIVE state 106 recurse.mk file 219 recursive Makefiles 217 registers 109, 110, 114, 115 getting 109, 110 setting 114, 115 remainder(), remainderf(), remainderl() 300 removable media 292, 294, 295, 296, 300, 303
pthread_mutexattr_destroy() 259 pthread_mutexattr_getprioceiling() 259 pthread_mutexattr_getprotocol() 259 pthread_mutexattr_getpshared() 259 pthread_mutexattr_getrecursive() 304 pthread_mutexattr_gettype() 259 pthread_mutexattr_getwakeup_np() 304 pthread_mutexattr_setprioceiling() 259 pthread_mutexattr_setprotocol() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setpshared() 259 pthread_mutexattr_setrecursive() 304 pthread_mutexattr_setvakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_mutexattr_setwakeup_np() 304 pthread_rwlock_rdlock() 269, 299 pthread_rwlock_timedrdlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlock_timedwrlock() 269 pthread_rwlockattr_getpshared() 300 pthread_rwlockattr_setpshared() 300 pthread_schedprio() 259 PTHREAD_SCOPE_PROCESS (not supported) 290 PTHREAD_SCOPE_SYSTEM 272, 290 pthread_setcancelstate() 259 pthread_setcancelstate() 259	cross-endian support 398 forcing retransmission 400 QNX_CONFIGURATION 18 QNX_HOST 18 QNX_TARGET 18 R range error 275 rate monotonic analysis (RMA) 63 RCT (resource constraint thresholds) 95 RE_DUP_MAX 278 read-write locks 299, 300 read() 98, 99, 259, 300 readdir_r() 269 readdir() 98, 259, 269 readdy queue 57, 58 READY state 57 realloc() 184 realtime signals 282 RECEIVE state 106 recurse.mk file 219 recursive Makefiles 217 registers 109, 110, 114, 115 getting 109, 110 setting 114, 115 remainder(), remainderf(), remainderl() 300

rename() 259	scheduling (continued)
REPLY state 106	policies (continued)
resmgr_attach() 78, 82	inheriting 290
resmgr_attr_t 97	other 60, 104, 272, 289, 291, 299
RESMGR_FLAG_CROSS_ENDIAN 398	round-robin 60, 62, 104, 272, 289, 290, 291, 299
RESMGR_FLAG_RCM 97	sporadic 60, 63, 104, 289, 290, 291, 299
resource constraint thresholds (RCT) 95	script, shell, See shell script
result underflows 275	seconds since the Epoch 275
rewind() 269	SECTION macro 229
rint(), rintf(), rintl() 300	SECTION_ROOT macro 229
RLIMIT_FREEMEM 96	security 71, 82, 99
RLIMIT_NOFILE 278	file descriptor, setting lowest 71
RM_HOST macro 228	process address space 99
rmdir() 259	process privileges 82
root set 202	seekdir() 269
round-robin scheduling 60, 62, 104, 272, 289, 290, 291,	SEGV_ACCERR 287
299	SEGV_MAPERR 287
rounding 277	select() 130, 139
RTLD_GLOBAL 37	SEM state 105
RTLD_GROUP 37	sem_close() 259
RTLD_LAZYLOAD 37	sem_destroy() 259
RTLD_WORLD 37	sem_getvalue() 259
RTSIG_MAX 254, 278	SEM_NSEMS_MAX 254, 278
runmask 290	sem_open() 300
runtime linker 26, 33	sem_post() 259
optimizing 33	sem_timedwait_monotonic() 304
runtime loading 28	sem_timedwait() 259
	sem_trywait() 259
S	SEM_VALUE_MAX 254, 278
	sem_wait() 259
S_IRWXG 284	semaphores 300
S_IRWXO 284	opening 300
S_IRWXU 284	SEND state 106
S_ISGID 297	servers, detecting client termination 81
S_ISVTX 297	set_ids_from_arg() 82
SA_SIGINFO 287, 301	set_lowest_fd() 71
scalbln(), scalblnf(), scalblnl() 300	setgrent() 269
scalbn(), scalbnf(), scalbnl() 300	sethostent() 269
scanf() 269	setjmp.h 20
SCHAR_MAX 278	setlocale() 301
SCHAR_MIN 278	setnetent() 269 setprio(), use only for QNX 4 compatibility 62
SCHED_FIFO 60, 62, 104, 290, 291	setpriority(), don't use 62
sched_get_priority_adjust() 304	setprotoent() 269
sched_getparam() 61	setpwent() 269
sched_getscheduler() 61	setrlimit() 96
SCHED_OTHER 60, 104, 272, 289, 291, 299	setservent() 269
sched_param 60	setvbuf() 259
SCHED_PRIO_LIMIT_ERROR() 57	shared interrupts 179, 180
SCHED_PRIO_LIMIT_SATURATE() 57	shared memory objects, opening 301
SCHED_RR 60, 62, 104, 272, 289, 290, 291, 299	shared objects 224, 234
sched_setparam() 61	building 224
sched_setscheduler() 61	version number 234
SCHED_SPORADIC 60, 63, 104, 289, 290, 291, 299	SHELL 316, 317
sched_yield() 59	shell script, starting processes via 68
SchedGet() 61	shm_ctl_special() 304
SchedSet() 61	shm_ctl() 304
scheduling 56, 60, 62, 63, 104, 272, 289, 290, 291, 299	shm_open() 301
contention scope 272, 290	SHRT_MAX 258, 278
parameters 290, 299	SHRT_MIN 278
inheriting 290	si_code 287
policies 60, 62, 63, 104, 272, 289, 290, 291, 299	SIG_ATOMIC_MAX 284

SIG_ATOMIC_MIN 284	slay 290
SIGABRT 73	sleep() 139
sigaction 301	SMP (Symmetric Multiprocessing) 105, 168, 173, 174, 290
sigaction() 259, 301	controlling the processors a thread can run on 290
sigaddset() 259	determining which processor a thread last ran on 105
sigblock() 304	interrupts on 168, 173, 174
SIGBUS 72, 73, 287, 301	SO_VERSION macro 234
SIGCHLD 77, 282	software bus 51
SIGCLD 282, 288	spawn() 84, 89, 304
SIGDEADLK 73, 282	spawn* family of functions 69, 71, 76, 138
sigdelset() 259	inheriting file descriptors 71
SIGEMT 73, 282	spawnI() 304
sigevent 108, 287	spawnie() 304
SIGFPE 72, 73, 288	spawnip() 304
SIGILL 73	spawnipe() 304
SIGIO 282	spawnp() 304
SIGIOT 282	spawny() 304
	·
sigismember() 259	spawnye() 304
sigmask() 304	spawnvp() 304
signal.h 20, 282	spawnype() 304
signal() 259, 301	special device files, reading past end-of-file 300
signals 54, 72, 73, 105, 114, 115, 175, 197, 282, 287,	sporadic scheduling 60, 63, 104, 289, 290, 291, 299
301, 338, 376	sqrt(), sqrtf(), sqrtl() 302
actions 287	SRCS macro 231
debugger 338, 376	SRCVPATH macro 230
default action 72	SS_REPL_MAX 254, 278
delivering 115	SSIZE_MAX 258, 278, 298, 300, 303
floating-point operations aren't safe to use in handlers 54	stack 104, 199
interrupt handlers 175	pointer 104
masks 287	size 104
pending 287, 301	space, additional required for memory checking 199
postmortem debugging 73	STACK state 106
sending for memory errors 197	stale pointers 192
threads 54, 105	standard I/O streams 289
SIGPOLL 282	standards, conforming to 19
SIGPWR 282	starter process 68, 76
SIGQUEUE_MAX 254, 278	startup code (startup-*) 137
SIGQUIT 73	tickless operation 137
SIGRTMAX 282	stat.h 20
SIGRTMIN 282	stat() 98, 259, 269, 302
SIGSEGV 72, 73, 287	STATE_CONDVAR 105
sigsetmask() 304	STATE_JOIN 105
SIGSTOP 197	STATE_MUTEX 105
SIGSYS 73	STATE_RECEIVE 106
sigtimedwait() 259	STATE_REPLY 106
SIGTRAP 73, 288	STATE_SEM 105
sigunblock() 304	STATE_SEND 106
sigwait() 259, 301	STATE_STACK 106
sigwaitinfo() 76, 77, 259	STATE_WAITPAGE 106
SIGWINCH 282	STATE_WAITTHREAD 105
SIGXCPU 73	static 28, 43, 232
SIGXFSZ 73	library 28
sin(), sinf(), sinI() 301	linking 28, 232
SIZE_MAX 284	port link via TCP/IP 43
slash characters 145, 224, 275, 276, 298, 300, 301	stdint.h 282
locale names 276	STDIO_DEFAULT_BUFSIZE 289
message queues 298	stdio.h 20
named semaphores 300	stdlib.h 20
pathnames 275	straddstr() 304
QNX 4 node names 145	strcmpi() 304
shared memory objects 301	strcoll() 259
variant names 224	STREAM MAX 254 278

strerror_r() 259	ThreadCtI() 73, 85, 96, 117, 290
strerror() 259	ThreadCtI(), ThreadCtI_r() 182
stricmp() 304	threads 54, 56, 60, 73, 85, 98, 100, 101, 102, 104, 105,
string operations, boundary checking for 194	106, 107, 108, 110, 113, 114, 115, 116, 117,
string.h 20	118, 176, 272, 290
stricat() 304	"main" 54
strlcpy() 304	attributes, examining 101
strlwr() 304	breakpoints, setting 101, 107, 110, 118
strnicmp() 304	channel 105
strnset() 304	last one a message was received on 105
strrev() 304	channels 107
strsep() 304	getting a list of 107
strset() 304	controlling via /proc 98
strsignal() 304	controlling which processors to run on 290
strtod() 259, 302	defined 54
	faults 114
strtof() 259, 302	
strtoimax() 259	flags 104
strtol() 259, 302	I/O privileges, requesting 73, 85
strtold() 259, 302	ID, getting 60
strtoll() 302	interrupt handlers, getting a list of 110
strtoul() 259, 302	joining 105
strtoull() 302	local storage 104
strtoumax() 259	manipulating 100
struct sigevent 174	priorities 56, 60, 104
strupr() 304	processor last run on 105
strxfrm() 259	scheduling 56, 60, 104, 106, 272, 290
symbol resolution, on-demand 33	scheduling attributes 290
SYMLINK_MAX 278	selecting 100
SYMLOOP_MAX 278	signals 105, 114, 115
sys/stat.h 284	delivering 115
syslog() 269	stacks 104
SYSNAME 238	pointer 104
SYSPAGE_ENTRY() 135	starting and stopping 100, 108, 113, 116, 117
system clock 284, 289	starting time 106
System mode 85	states 105
system page, getting 116	status, getting 102, 116, 117
system trace events (not implemented) 274	switching to 108
system() 69	system mode, executing in 85
	timers, getting a list of 118
T	using to handle interrupts 176
Т	tick 129, 131, 135, 274
tan() tanf() tanl() 200	dependency on timer hardware 131
tan(), tanf(), tanl() 302	tickless operation 137
TARGET_SYSNAME 238	time 135, 275
target-specific files, location of 18	determining the current time 135
tcdropline() 304	measuring execution 275
tcgetsize() 304	time zones 277, 303
tcinject() 304	default 303
tcischars() 304	time.h 20, 284
TCP/IP 42, 43	time() 135
debugging and 42	timer_*() 130
dynamic port link 43	timer_create() 302
static port link 43	timer_delete() 259
tcsetsid() 304	timer_getexpstatus() 304
tcsetsize() 304	timer_getoxpstatus() 359
TDP (Transparent Distributed Processing) 141, 303, 387	timer_gettime() 259
Technical support 15	TIMER_MAX 254, 278
tell() 304	TIMER_PRECISE 138
temporary files, naming 302	timer_settime() 137, 138, 259
termios.h 20	timer_timeout_r() 304
tgamma(), tgammaf(), tgammal() 302	timer_timeout() 137, 138, 304
Thread Execution Scheduling (TPS) option 299	TIMER_TOLERANCE 137
thread local storage 104	THE LOCALIVITOR 10/

TimerCreate() 138	uname() 303
TimerInfo() 138	unistd.h 20
timers 118, 130, 131, 132, 137, 138	unlink() 259
getting for a process 118	USEFILE macro 233
hardware 131, 132	USHRT_MAX 258, 278
effect on the tick size 131	utime() 259
effect on timers 132	utsname 303
harmonization 138	
quantization error 130	17
tickless operation 137	V
tolerance 137, 138	VARIANT LIGT 000
TimerSettime() 137, 138	VARIANT_LIST macro 229
TimerTimeout() 105, 137, 138	VERSION_REL 227
timeslice 63	VFLAG_* macro 232
TMP_MAX 258, 302	vfprintf() 269
tmpfile() 259, 269	vfscanf() 259
tmpnam() 302	vfwprintf() 269
TOUCH_HOST macro 228	vprintf() 269
TRACE_EVENT_NAME_MAX 254	vwprintf() 269
TRACE_NAME_MAX 254	
TRACE_SYS_MAX 254	W
	••
TRACE_USER_EVENT_MAX 254	wait*() 70, 76
TraceEvent() 173 Transporant Distributed Processing (TDP) 141, 202, 387	wait3() 304
Transparent Distributed Processing (TDP) 141, 303, 387	wait4() 304
TRAP_BRKPT 288	WAITPAGE state 106
TRAP_TRACE 288	WAITTHREAD state 105
traps, breakpoint and other debug 288	wchar_t 276
TRC option (not implemented) 274	WORD_BIT 278
TTY_NAME_NAME 278	write() 98, 99, 259, 303
types.h 20	writeblock() 304
Typographical conventions 13	wscanf() 269
TZ 277, 303	Woodin() 203
TZNAME_MAX 254, 278	
tzset() 303	X
U	x86 208, 210
	accessing data objects via any address 210
UCHAR_MAX 278	distinct address spaces 208
UINT_FAST16_MAX 282	XSI_C_LANG_SUPPORT 251
UINT_FAST32_MAX 282	XSI_DEVICE_IO 251
UINT_FAST64_MAX 282	XSI_DYNAMIC_LINKING 251
UINT_FAST8_MAX 282	XSI_FD_MGMT 251
UINT_LEAST16_MAX 282	XSI_FILE_SYSTEM 251
UINT_LEAST32_MAX 282	XSI_JOB_CONTROL 251
UINT_LEAST64_MAX 282	XSI_JUMP 251
UINT_LEAST8_MAX 282	XSI_MULTI_PROCESS 251
UINT_MAX 258, 278	XSI_SINGLE_PROCESS 251
UINT16_MAX 282	XSI_SYSTEM_DATABASE 251
UINT32_MAX 282	XSI_SYSTEM_LOGGING 251
UINT64_MAX 282	XSI_TIMERS 251
UINT8_MAX 282	
UINTPTR_MAX 282	Z
ULLONG_MAX 258, 278	-
ULONG_MAX 258, 278	zombies 76

umask 99