vcdMaker

A User's Guide to vcdMaker Edition 2 December, 2016

Table of Contents

1	Licensing	<u>1</u>
2	Introduction	
3	Installation	3
	3.1 Windows	3
	3.1.1 Installing	
	3.1.2 Uninstalling	
	3.2 Linux	
	3.2.1 Installing	4
	RPM	
	DPKG	4
	3.2.2 Uninstalling	<u>4</u>
	RPM	
	DPKG	<u>4</u>
4	Getting Started with vcdMaker	<u>5</u>
5	Creating log files	<u>6</u>
6	Creating VCD files	<u>8</u>
7	Merging log files	<u>8</u>
8	Viewing VCD files	<u>10</u>
	8.1 GtkWave	<u>10</u>
	8.1.1 Downloading	<u>10</u>
	8.1.2 First steps	<u>10</u>
9	Reference projects	<u>20</u>
	Release notes	
	10.1 Version 1.0.1	<u>21</u>
	10.2 Version 2.0.1	21

1 Licensing

The MIT License (MIT)

Copyright (c) 2015 vcdMaker team

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

2 Introduction

Quite often while debugging a computer system there are created huge log files which need to be analyzed afterwards. That could be achieved by parsing the trace and extracting the relevant information but initially one needs to know what the information is. The *vcdMaker* tool set has been created to serve this purpose and help software and firmware engineers to analyze their applications and systems. It translates a human readable log files into the Variable Change Dump format files allowing for their further visualization which can be done using any of the VCD viewers. As a single picture is said to be worth thousand words the approach makes the debugging process easier and more efficient.

The tool set is provided as a freeware. There are no charges for using it but the development team would appreciate your feedback. All of the comments, requests or screen captures presenting the way you benefited from using it are appreciated. Contact us via *vcdmaker@mail.com*.

3 Installation

3.1 Windows

3.1.1 Installing

Start the installation by executing the *vcdMakerInstaller.msi*. Then just follow the installer. During the process you will be able to adjust the installation path. The installer will copy all the necessary files, create the shortcut to the *vcdMaker* manual in your Programs Menu and update the user's environmental variable PATH. Therefore once installed a user will be able to invoke the application from any location.

The setup log could be created by invoking the installer in the following way:

msiexec /i vcdMakerInstaller.msi /l*v vcdMakerInstallation.log

3.1.2 Uninstalling

The *vcdMaker* package can be easily and entirely removed by the Programs and Features Control Panel tool. Alternatively one could use the following command:

msiexec /x vcdMakerInstaller.msi

3.2 Linux

There are binary packages available for the Linux distributions using the RPM and the DPKG package managers. The packages contain the applications themselves, the manual pages, the user documentation as well as sample files. By default, they will be installed in the '/usr/share/doc/vcdMaker' folder.

3.2.1 Installing

RPM

rpm -i package_name.rpm

DPKG

dpkg -i package_name.deb

3.2.2 Uninstalling

RPM

rpm -e vcdmaker

DPKG

dpkg -r vcdmaker

4 Getting Started with vcdMaker

Running *vcdMaker* is easy but to make the learning curve really steep there have been provided sample files one could use to get the knack of the tool.

In the target installation folder there is a *sample* sub-folder containing the *example.txt* file (for Windows, for Linux see 4). It composes of an arbitrary set of signals and their values changing over time. The format of the input file has been described in 5. Copy the file to any folder you wish to experiment in.

Then, use the following command to create the output VCD file:

```
vcdMaker -o output.vcd -t us example.txt
```

The *vcdMaker* will parse the *example.txt* file and create the *output.vcd* file. That's it!

So as to get the feeling of how you could use the VCD file it is recommended to read the Chapter 8 first.

Using *vcdMerge* is equally easy! There are sample files provided. Let's merge *system1_time1.txt* and *system2_time2.txt*. The logs represent systems working in different time domains (they are not synchronized).

The synchronization points in both logs have been marked with the 'Sync' events. Browse the logs and search for them. Their time stamps are the parameters of the signals sources.

The syntax is:

```
vcdMerge.exe -o merge_t1_t2.vcd
T,71050601,us,System1,Counter,system1_time1.txt
T,234256037,us,System2,Counter,system2_time2.txt
```

For the synchronized sources (*system1_time1.txt* and *system2_time1.txt*) the time stamps shall be set to 0:

```
vcdMerge.exe -o merge_t1_t1.vcd
T,0,us,System1,Counter,system1_time1.txt
T,0,us,System2,Counter,system2_time1.txt
```

5 Creating log files

Let's present the format of the log file by an example below.

```
#77655698 FRDM.Sensors.Magnetometer.MagY 873 32
#77655817 FRDM.Sensors.Magnetometer.MagZ 3126 32
#77756251 FRDM.Buttons.SW1 1 1 Key pressed
#77805674 FRDM.Sensors.Magnetometer.MagX 64955 32
#77805797 FRDM.Sensors.Magnetometer.MagY 853 32
#77805916 FRDM.Sensors.Magnetometer.MagZ 3191 32
#77806061 FRDM.Sensors.Slider 99 7
#77806070 FRDM.Sync e
#77808473 FRDM.Sensors.Accelerometer.AccX 0.538574 f
#77808473 FRDM.Sensors.Accelerometer.AccY 0.172852 f
#77808473 FRDM.Sensors.Accelerometer.AccZ 0.706543 f
...
```

Currently there are three available formats of the values which might be specified within the log:

integer values

```
#Timestamp TopModule...SubModule.VarName Value Size Comment
E.g.
#77655698 FRDM.Sensors.Magnetometer.MagY 873 32
```

Value – The value of the variable.

Size - The *size* parameter represents the number of bits needed to represent the value. Currently the maximum size shall not exceed 64.

real values

```
#Timestamp TopModule...SubModule.VarName Value f Comment
E.g.
#77808473 FRDM.Sensors.Accelerometer.AccZ 0.706543 f
```

Value - Real values shall be expressed in the '%f printf()' format.


events

```
#Timestamp TopModule...SubModule.EventName e Comment
E.g.
#77806070 FRDM.Sync e
```

There are also common properties of the log signals:

- Timestamp The system time stamp. The time unit is provided later during the creation of the VCD file. The entries in the log file do not have to be ordered. In other words, the entries with lower time stamp values might follow the entries with higher time stamp values. The events will be reordered properly during the VCD file creation. This might be useful when there are a few loggers in your system accessing the same logging device (e.g. UART). They all might log at their own pace and flush their buffers randomly.
- Signal name (applicable to all three types)

The structure describing the hierarchy for accessing the signal or the variable. The hierarchy can be illustrated by the tree. For instance:

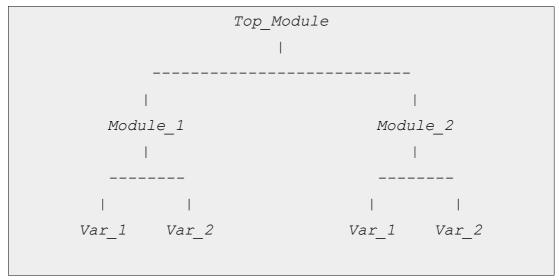

In total there are four variables in the system above. They could be described as follows:

```
Top_Module.Module_1.Var_1
Top_Module.Module_1.Var_2
Top_Module.Module_2.Var_1
Top_Module.Module_2.Var_2
```

6 Creating VCD files

Producing the VCD file from the log file saved in the format presented in 5 is not difficult. The syntax of the command is:

```
vcdMaker -t timeUnit [-c LineCounterName] [-v] -o filename.vcd logFilename
```

filename – The target VCD file name.

timeUnit – The time unit in which the samples have been recorded. Available time units are: *s*, *ms*, *us*, *ns*, *ps*, *fs*.

- -c LineCounterName the switch is optional and it allows for adding a signal containing the log line number referencing to any signal change occurring at a given time. By following the line number one can easily identify the interesting place in the log. The lcSignalName name shall follow the standard signal format. If no top module name is provided *Top* will be assumed.
- \mathbf{v} the switch is optional while it enables the verbose mode in which the application will print out all of the log lines not matching the expected format. It is recommended to use this mode after the initial *vcdMaker* execution returns a positive number of invalid lines.

logFilename – The name of the log file created in the format presented in 5.

7 Merging log files

There is also a possibility to produce a single output VCD file out of several input log files. The feature might be useful while analyzing behaviors of distributed systems. The syntax of the *vcdMerge* command is as follows:

```
vcdMerge [-t timeUnit] [-v] -o filename sources
```

filename – The target VCD file name.

timeUnit – The time unit in which the output VCD file will be produced. Available time units are: *s*, *ms*, *us*, *ns*, *ps*, *fs*. If the parameter is not provided then the finest time base among the sources is

selected. E.g. if one of the sources provides a log in 'ms' while another one provides a log in 'us' the output file will be in 'us'.

Warning! When the time unit is forced and it is less accurate that the finest unit within the provided sources the time stamps of some signals in the output VCD file might contain a rounding error (+/- 1 [time unit]). Usually, it is better to use the automatically chosen time unit.

-v – the switch is optional. It enables the verbose mode in which the application will print out all of the log lines not matching the expected format.

sources – The descriptions of the signals sources.

Each source is characterized be a set of parameters separated with ',':

format,timestamp,unit,prefix,counter,filename

format The format of the input file. Currently only 'T' option is supported.

timestamp The synchronization time for the input log. Set to 0 for synchronized logs.

unit The unit of the time stamp.

prefix The prefix to be added to all the signals within the unit. It can be left empty.

Then, no prefix is added.

counter The line counter signal name to be added to the output file. It can be left

empty. Then, no line counter signal is added.

filename The name of the file to be merged.

Examples:

All source options used:

vcdMerge -o out.vcd -v T,71050601,us,Prefix1,Counter1,log1.txt T,234256037,us,Prefix2,Counter2,log2.txt

No signal counters:

vcdMerge -o out.vcd -v T,71050601,us,Prefix1,,log1.txt T,234256037,us,Prefix2,,log2.txt

No prefixes nor signal counters:

vcdMerge -o out.vcd -v T,71050601,us,,,log1.txt T,234256037,us,,,log2.txt

8 Viewing VCD files

There are many applications on the market allowing for viewing Variable Change Dumb format files and they are especially popular among RTL designers. Although very often such tools are quite expensive there exist a few free alternatives and one of them has been presented later in this manual.

8.1 GtkWave

GtkWave has been chosen for various reasons. It's free, light, easy to use and it has got rich features.

8.1.1 Downloading

The tool can be downloaded from:


http://gtkwave.sourceforge.net/

8.1.2 First steps

For the users convenience there has been provided the introduction to the GtkWave on the following pages. The further details related to the tool can be found in the GtkWave documentation itself.


Run the tool. Drag and drop the examples.vcd file to the GtkWave.

In the top SST pane expand the FRDM and select Buttons. Keep 'Ctrl' pressed and in the bottom SST pane select SW1 and SW3. Click the *Append* button.

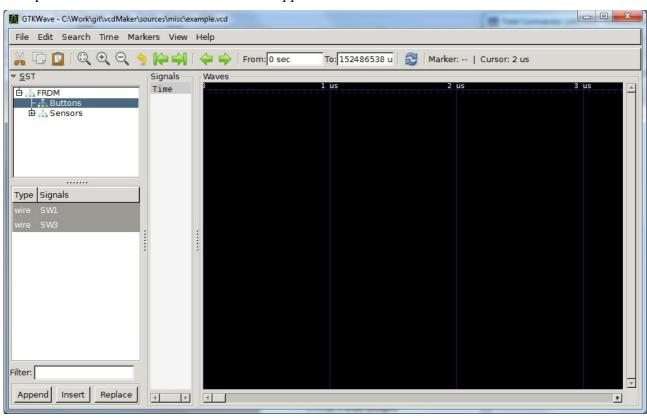


Step 2


In the top SST pane set the focus on Sensors. Keeping 'Ctrl' pressed select Light and Slider from the

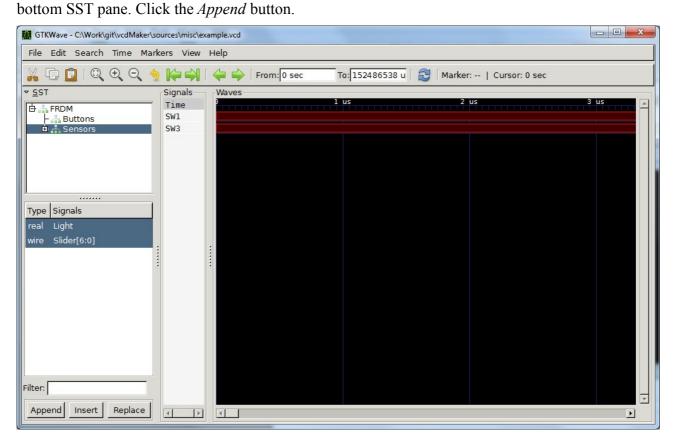


Step 3 In the top SST pane expand Sensors and select Accelerometer. In the bottom SST pane select AccX. Click *Append* again.

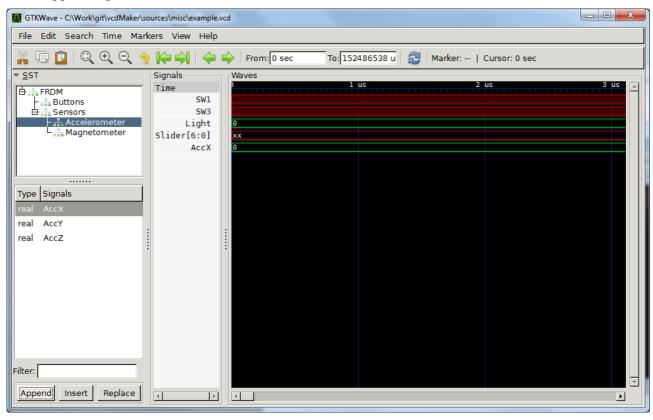


In the Signals pane select SW3. Press *Find Next Edge* button (green right arrow) three times. Then, press *Zoom Out* button (zoom minus) several times so as you get a similar view scale as below.

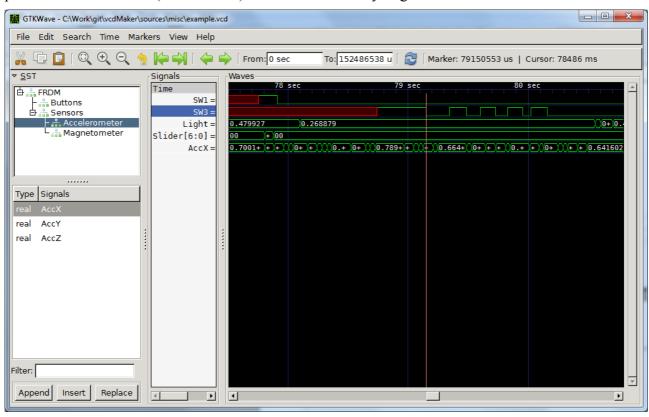


Now, click close to the next rising edge of the SW3. Press 'b' key. Then click on the nearest falling SW3 edge. As measured by GtkWave the pulse is 142.712 [ms] width. Congratulations! You just learned how to measure time between two registered events.

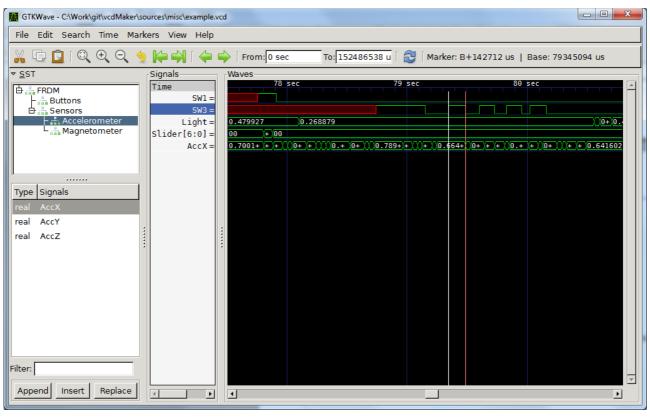


In the Signals pane select Slider. Right click on Slider. Select *Data Format -> Analog -> Interpolated*. Now, you can scroll left and right the Waves window to see the changes of the signal over time. Of course, you can zoom it in or out to get the better results.

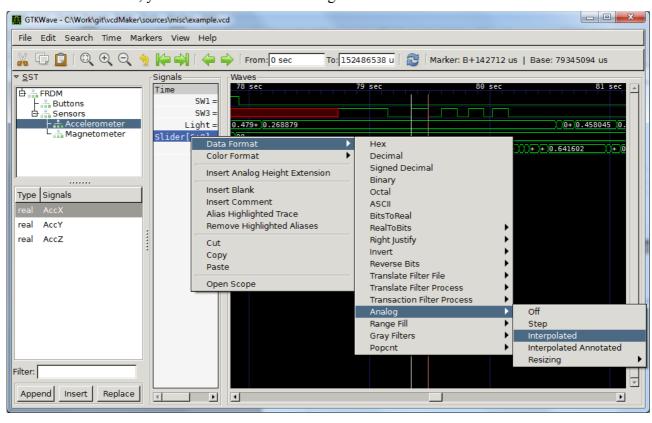

In the Signals pane select Slider and right click on it. Select *Insert Analog Height Extension*. It will make the row higher and scaled better for the analog view. You can repeat steps 6 and 7 for AccX as well.

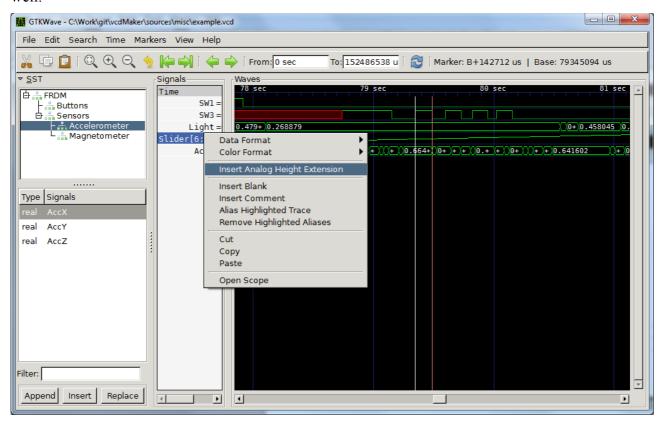

Well done! Hopefully, these simple steps let you know the most basic operations of the GtkWave. There are also the most commonly used ones as well. For further information about the tool please refer to its documentation.

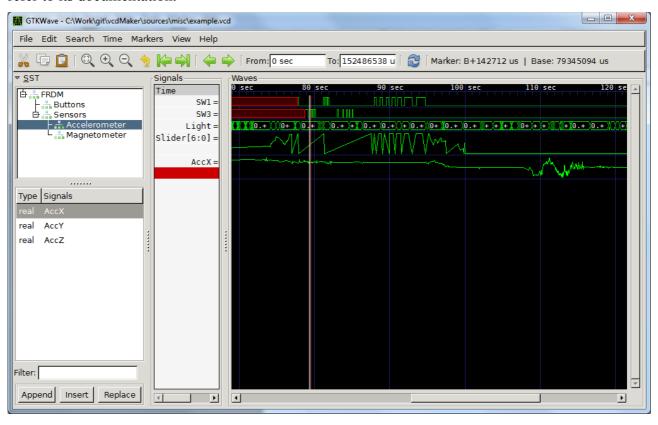

9 Reference projects

There are a few projects which have been created using popular development platforms and which demonstrate the way *vcdMaker* tools could be used.

The demo for the Freescale FRDM-KL46Z kit:

https://developer.mbed.org/users/ketjow/code/vcdMaker Demo/

The demo for the STM Discovery L476 kit:

https://developer.mbed.org/users/ketjow/code/vcdMaker_Demo_DISCO_L476/

The demo for the Microchip Xpress kit:

https://mplabxpress.microchip.com/mplabcloud/example/details/261

10 Release notes

10.1 Version 1.0.1

- vcdMaker
 - The initial version of the application
 - o Supported platforms:
 - Win32

10.2 Version 2.0.1

- vcdMaker
 - New features:
 - Updated command line interface removed '-f' option
 - Line counter
 - Events logging
 - o Supported platforms:
 - Win32
 - Linux
 - Resolved issues:
 - #1 Floats in vcd not rounded.

vcdMerge

- The initial version of the application
- Supported platforms:
 - Win32
 - Linux