

The Thorium fuel cycle in nuclear reactors

Frank Worman Garcia Eslava

Advisor: PhD. Juan Carlos Sanabria Arenas

Thesis presented to obtain the degree of Physicist

Bogotá, Colombia

November 17, 2024

Regards

Resumen

Esta tesis explora el potencial de los combustibles nucleares basados en torio en los Reactores de Agua Presurizada (PWRs), enfocándose en el ciclo del combustible de torio y sus diversas implementaciones. La investigación investiga los beneficios y desafíos asociados con el combustible de torio, incluyendo sus mayores ratios de conversión, mejores propiedades térmicas y resistencia intrínseca a la proliferación. El estudio incluye simulaciones detalladas utilizando OpenMC para analizar el comportamiento del óxido de torio (ThOX) con uranio-233 (^{233}U) en diferentes concentraciones. Los resultados demuestran que, aunque los combustibles basados en torio pueden lograr la reproducción, mantener la criticidad presenta desafíos. La tesis también examina el impacto de la composición y concentración del combustible en el rendimiento y la seguridad del reactor. Los hallazgos sugieren que optimizar estos parámetros es crucial para mejorar el rendimiento y la seguridad de los combustibles basados en torio. La investigación concluye con una discusión sobre las perspectivas futuras del torio en la industria nuclear y la necesidad de más investigación y desarrollo para realizar plenamente su potencial como un combustible nuclear sostenible.

Palabras clave: Ciclo del combustible de torio, Reactor de Agua Presurizada, Uranio-233, Combustible nuclear, Simulación de reactores, OpenMC, Energía sostenible, Reactores de Sales Fundidas de Torio

Abstract

This thesis explores the potential of thorium-based nuclear fuels in Pressurized Water Reactors (PWRs), focusing on the thorium fuel cycle and its various implementations. The research investigates the benefits and challenges associated with thorium fuel, including its higher conversion ratios, improved thermal properties, and intrinsic proliferation resistance. The study includes detailed simulations using OpenMC to analyze the behavior of thorium oxide (ThOX) with uranium-233 (^{233}U) at different concentrations. The results demonstrate that while thorium-based fuels can achieve breeding, maintaining criticality presents challenges. The thesis also examines the impact of fuel composition and concentration on reactor performance and safety. The findings suggest that optimizing these parameters is crucial for enhancing the performance and safety of thorium-based fuels. The research concludes with a discussion on the future prospects of thorium in the nuclear industry and the need for further research and development to fully realize its potential as a sustainable nuclear fuel.

Keywords: Thorium fuel cycle, Pressurized Water Reactor, Uranium-233, Nuclear fuel, Reactor simulation, OpenMC, Sustainable energy, Thorium Molten Salt Reactors

Table of Contents

Re	egard	S		iii
Αŀ	ostrac	ct		iv
Lis	st of	figures		4
Lis	st of	tables		6
1.	Intro	oductio	on Control of the Con	8
2.	The	Physic	cs Behind Nuclear Reactors	11
	2.1.	Bindir	ng energy	11
		2.1.1.	Liquid-Drop Model	13
		2.1.2.	Instability of Isotopes	14
		2.1.3.	Valley of Instability	17
	2.2.	Nuclea	ar Fission	17
		2.2.1.	Fission Products	19
		2.2.2.	Fission Cross Sections	20
	2.3.	Abund	lances of Isotopes	22
		2.3.1.	Notation	23
		2.3.2.	Fissionable and Fertile Material	24
	2.4.	Neutro	on Interactions	25
		2.4.1.	Neutron Multiplication	25
		2 4 2	Heat Produced by the Fuel	27

2 Table of Contents

	2.5.	Microscopic and Macroscopic Cross Sections	27
		2.5.1. Macroscopic Cross Section	28
	2.6.	Nuclei Density (N)	29
		2.6.1. Enriched Uranium	31
	2.7.	Neutrons Cross Sections	32
		2.7.1. Neutron Energy Range	3
3.	The	Design of a Nuclear Reactor 3	5
	3.1.	Nuclear Fuel Properties	35
	3.2.	Slow Down Decrement	37
	3.3.	Neutron Moderators	8
		3.3.1. Energy Spectra of Neutrons	89
		3.3.2. Fast Neutrons	10
		3.3.3. Intermediate Neutrons	1
		3.3.4. Thermal Neutrons	13
	3.4.	Reaction Rates Averaged Over Energy	13
	3.5.	Multiplicative Factor for Infinite Media	15
4.	Stru	cture of a Nuclear Reactor 4	6
	4.1.	Time Dependence of Neutron Flux	16
		4.1.1. Infinite Multiplicative Media	<u>1</u> 7
			18
		4.1.3. Delayed Neutron Kinetics	19
		4.1.4. Kinetic Equations	51
	4.2.	Spatial Diffusion of Neutrons	52
		4.2.1. Continuity Equation	53
		4.2.2. Diffusion approximation	64
		4.2.3. Boundary Conditions	5
	4.3.	Non-Leakage Probability	66
		4.3.1. Spherical Geometry	57

Table of Contents 3

		4.3.2.	Time-Independent Diffusion Equation	59
		4.3.3.	Cylindrical Reactor	60
5.	Nuc	lear Fu	el Cycles	62
	5.1.	Fronte	nd of Fuel Cycle	62
	5.2.	Backer	nd of Fuel Cycle	63
		5.2.1.	Reprocessing	65
		5.2.2.	Waste Management	65
	5.3.	Fuel C	ycles	66
		5.3.1.	Open Fuel Cycle	67
		5.3.2.	Closed Fuel Cycle	67
6.	Tho	rium Fı	uel Cycle	70
	6.1.	Consid	lerations for the Thorium Fuel Cycle	70
	6.2.	Thoriu	ım Front End	71
	6.3.	Thoriu	ım Open Fuel Cycle	72
	6.4.	Thoriu	ım Closed Fuel Cycle	73
		6.4.1.	Reprocessing	74
		6.4.2.	Backend Issues	75
6.5. Molten Salt Reactors (MSR)				
		6.5.1.	Challenges for the Implementation of Molten Salt Reactors	77
		6.5.2.	Thorium Molten Salt Reactors	78
7.	Read	ctor Fu	el Simulations	83
	7.1.	Metho	dology	83
		7.1.1.	Monte Carlo Method	83
		7.1.2.	OpenMC	84
	7.2.	Model		85
		7.2.1.	Project Structure	85
	7.3.	Result	s	87
	7.4	Conclu	ısion	88

4	Table of Contents

8.	. Present and future of Thorium					
	8.1.	Thorium Fuel Cycle	93			
	8.2.	Simulation Results	93			
	8.3.	Challenges and Future Research	94			
	8.4.	Conclusion	95			
Α.	Sim	ulation Plots	96			
Bil	Bibliography 10					

List of figures

2-1 .	This figure shows the binding energy per nucleon as a function of the number	
	of nucleons. From Ref. [6]	12
2-2 .	Detailed Schematic of a Nuclear Fission Reaction. From Ref. [4]	18
2-3 .	Graph illustrating the relationship between the number of neutrons and the	
	number of protons in nuclei. From Ref. [5]	20
2-4 .	Fission cross section of ^{233}U . Data retrieved from Ref. [10]	21
2-5 .	Fission reaction chain schematic. From Ref. [5]	26
3-1 .	Figure showing two plots of η as function of energy for uranium fuel at different levels of enrichment. From Ref. [5]	36
4-1 .	Extrapolated boundary conditions. From Ref. [12]	57
6-1 .	Liquid Fuel Thorium Molten Salt Reactor (TMSR-LF) design. From Ref. [20]	81
6-2 .	TRISO particle structure. From Ref. [22]	82
6-3 .	Solid Fuel Thorium Molten Salt Reactor (TMSR-SF) design. From Ref. [3]	82
7-1 .	Percentage change of isotopes in the simulation of a PWR fuel assembly using	
	UOX at 10% thorium concentration	87
7-2 .	Percentage change of isotopes in the simulation of a PWR fuel assembly using	
	UOX at 50 % thorium concentration	88
7-3 .	Reactivity over time of the simulation of a PWR fuel assembly using UOX at	
	10% thorium concentration	89
7-4 .	Reactivity over time of the simulation of a PWR fuel assembly using UOX at	
	50% thorium concentration	90

6 List of figures

7-5 .	Percentage change of isotopes in the simulation of a PWR fuel assembly using	
	ThOX and 10 % plutonium concentration	91
7-6 .	Reactivity over time of the simulation of a PWR fuel assembly using ThOX	
	and 10 % plutonium concentration	92
A-1.	. Percentage change of isotopes in the simulation of a PWR fuel assembly using	
	ThOX at 5% ²³³ U concentration	97
A-2.	. Percentage change of isotopes in the simulation of a PWR fuel assembly using	
	ThOX at 10% ²³³ U concentration	98
A-3.	. Reactivity of the simulation of a PWR fuel assembly using ThOX at 5 $\%$ ^{233}U	
	concentration	99
A-4.	. Reactivity of the simulation of a PWR fuel assembly using ThOX at 10%	
	^{233}U concentration	100
A-5.	. Reactivity of the simulation of a PWR fuel assembly using UOX	101

List of tables

3-1 .	Slowing Down	Properties of Common	Moderators.	From Ref.	[5]	 39
4-1	Delayed Neutro	on Fractions for Differe	ent Isotopes	From Ref .	[5]	50

1. Introduction

Nuclear reactors remain a highly debated topic in both scientific and political circles. While they play a crucial role in generating clean energy, significant challenges related to safety, environmental impact, and economics persist. For instance, the time and capital required to deploy a nuclear reactor are substantial [1]. This thesis aims to examine the current state of nuclear reactors, focusing on their design, operations, and the potential of thorium fuel cycles. It will explore the benefits and drawbacks of various nuclear fuel cycles and reactor designs, as well as their future prospects.

Nuclear energy is often associated with atomic weapons due to the events of World War II and the subsequent arms race during the Cold War [2]. However, following the end of the Cold War, the focus of the nuclear industry shifted towards civilian applications, particularly energy production, largely driven by growing concerns over greenhouse gas emissions. One of the key advantages of nuclear energy is that it produces power without emitting greenhouse gases [2].

The development of nuclear reactors began in the mid-20th century, initially driven by military needs, particularly for the propulsion of naval vessels, such as submarines and aircraft carriers. Nuclear power offered significant advantages, especially in submarines, where it allowed them to operate underwater for extended periods. In the case of aircraft carriers, nuclear propulsion freed up space previously used for fuel oil, allowing more room for aviation fuel and other supplies [2].

Several countries explored the use of nuclear reactors for civilian ship propulsion. The U.S. nuclear-powered merchant ship, 'Savannah', operated briefly during the 1960s and 1970s, demonstrating the technical feasibility of nuclear propulsion for commercial vessels, though

it proved economically unviable. Other nations, including Japan, Germany, and the Soviet Union, also experimented with nuclear-powered merchant ships. Notably, Germany's ore carrier, 'Otto Hahn', operated successfully for a decade before being decommissioned due to high costs. In contrast, the Soviet Union's icebreaker 'Lenin' demonstrated the value of nuclear power in extreme environments, leading to the construction of additional nuclear-powered icebreakers [2].

Nuclear power was also explored for other applications. In 1945, Eugene Wigner and Alvin Weinberg proposed a liquid fuel reactor design [3]. The Oak Ridge National Laboratory (ORNL) investigated a potential nuclear application of this concept to jet engines [3]. From 1949 to 1961, the U.S. invested approximately one billion dollars in the Aircraft Nuclear Propulsion Project (ANP). This project aimed to develop a nuclear-powered aircraft capable of long-range missions, a crucial priority during the early Cold War. However, with the advent of long-range ballistic missiles, the need for such an aircraft diminished, and the project was ultimately terminated [2].

At the time, there were concerns that the global supply of ^{235}U would be insufficient to meet future energy demands. Weinberg and his colleagues recognized that molten salt reactors (MSRs) could be used to breed ^{233}U from thorium [3]. Between 1965 and 1969, ORNL successfully operated an MSR experiment for 15 months, achieving an impressive 87% operational uptime, even utilizing ^{233}U as fuel [3]. Despite this success, the MSR program was eventually discontinued as other nuclear concepts received greater political support [3].

This thesis aims to explore the potential of the thorium fuel cycle in the nuclear industry and its prospects for the near future. The research investigates the benefits and challenges associated with thorium fuel, as well as the various proposed implementations for integrating this cycle into commercial reactors.

The thesis is structured as follows: Chapters 2 and 3 provide an overview of the principal concepts of nuclear reactors, covering fundamental concepts and defining important parameters that characterize reactor performance. In Chapter 4, the theoretical framework for describing reactor behavior is introduced, including the neutron transport equation and the diffusion approximation. A brief explanation of fuel cycles, with a focus on the thorium fuel

10 1 Introduction

cycle, is offered in Chapter 5. The thorium fuel cycle is explored in greater depth in Chapter 6, discussing various possible implementations, such as novels reactors designs. The simulations conducted in this work and the results obtained are detailed in Chapter 7. Finally, the conclusions are presented in Chapter 8.

2. The Physics Behind Nuclear Reactors

The level of interactions within a nuclear reactor is governed by neutron transport [4]. In this chapter we will delve into the physical details that drive a nuclear reactor.

The theory of relativity tells us that there is a direct relation between mass and energy, expressed by the equation $E = mc^2$. Nuclear reactors are the most well-known practical application of this theory, as they harness some of the energy held in the nucleus's mass to generate electricity for our society [5]. To understand the wide difference between chemical reactions, used in fossil fuel generations methods, and nuclear energy, we will study and compare the amount of energy each one generates.

The combustion of coal is given by the chemical reaction $C + O_2 \rightarrow CO_2$ while the nuclear energy production uses the reaction: neutron+ $^{235}U \rightarrow$ Fission's products. Each carbon atom combusted produces approximately 4.0 eV, whereas each uranium atom fissioned produces around 200 million eV (200 MeV) [5]. There are eight orders of magnitude in energy release.

2.1. Binding energy

If one adds the mass of all the nucleons in a nucleus, and then compared it with the mass of the nucleus, you would know that these two values do not match. This discrepancy is known as the mass defect [4].

$$\Delta = [Zm_p + (A - Z)m_n] - m(A, Z)$$
 (2-1)

Disassembling the nucleus into nucleons will results in an increase in mass equivalent to the mass defect. This energy is known as the binding energy of the nucleus $BE = \Delta c^2$, where

 Δ is the mass defect. This energy can be normalized by dividing it by the total amount of nucleons, resulting in the binding energy per nucleon, as follows [5]:

$$\Delta c^2/(Z+N) = \Delta c^2/A \tag{2-2}$$

Fig (2-1) shows the binding energy per nucleon for various isotopes, highlighting the stability of different nuclei. The peak of the curve, around iron (Fe), highlights the most stable nuclei, with the highest binding energy per nucleon.

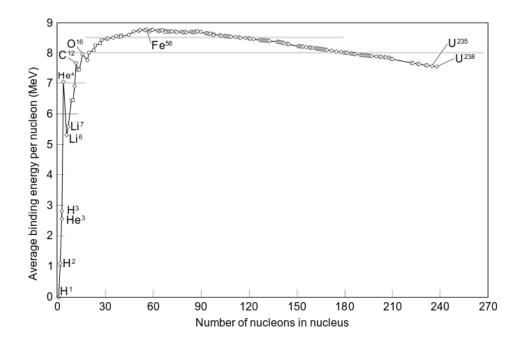


Figure 2-1: This figure shows the binding energy per nucleon as a function of the number of nucleons. From **Ref.** [6]

Processes that result in nuclei with more binding energy per nucleon convert mass into energy [4]. There are two possible processes in which this may happen: fission and fusion reactions. Fusion reactions happen when two light nuclei combine and form a heavier nucleus [5]. On the contrary, fission occurs when a heavier nucleus splits to form lighter nuclei [4]. Fission is the process on which nuclear reactors are based.

2.1.1. Liquid-Drop Model

The liquid-drop model, one of the first nuclear models, was proposed by Bohr in 1935. It is based on the short range of nuclear forces as well as the additivity of volumes and binding energies. The basic idea is that nucleons interact strongly with their neighbours, similar to how molecules interact in a drop of water [7].

Based on this model, in 1935 Bethe and Weizsäcker made an excellent parametrization of the binding energies of nuclei in their ground state. This formula extends the idea of the liquid-drop model to incorporate two new ingredients, related to quantum properties of the nuclear mater. The first one is the asymmetric energy which tends to stabilize nuclei with equal number of protons and neutrons. The other is the pairing energy which favors paired fermions [7]. The formula is composed by five therms:

- The first parameter in the formula is related to the volume $(a_v = 15.753 MeV)$. This term reflects the nearest neighbor interactions and leads to a constant binding energy per nucleon.
- The term a_s lowers the binding energy and is related to the surface of the nucleus. While internal nucleus feel isotropic interactions, nucleus on the surface feel forces coming only from the inside. Since superficial area of a sphere is $4\pi R^2$ and $R \sim A^{2/3}$, this therm is proportional to $A^{2/3}$.
- a_c is related to the Coulomb repulsion of protons therefore lowers binding energy of the nucleus. Coulomb potential is proportional to Q^2/R thus $a_c \sim Z^2/A^{1/3}$.
- While a_c favors neutron excess over protons, the term a_a favors symmetry between protons and neutrons related to the isospin.
- Finally, $\delta(A)$ is a quantum pairing term.

The Bethe-Weizsäcker's formula is:[7]

$$B(A,Z) = a_v A - a_s A^{2/3} - a_c \frac{Z^2}{A^{1/3}} - a_a \frac{(N-Z)^2}{A} + \delta(A)$$
 (2-3)

Since this is a empirical formula each parameter a_i has to be fitted to the data. This fitting process results in the following values:

- $a_v = 15.753 MeV$
- $a_s = 17.804 MeV$
- $a_c = 0.7103 MeV$
- $a_a = 23.69 MeV$

$$\bullet \ \delta(A) = \begin{cases} 33.6A^{-3/4} & \text{if } N \text{ and } Z \text{ are even} \\ -33.6A^{-3/4} & \text{if } N \text{ and } Z \text{ are odd} \\ 0 & \text{if } A = N + Z \text{ is odd} \end{cases}$$

2.1.2. Instability of Isotopes

Induced fission occurs when a probe transfers energy into a nucleus, leaving it in an excited state, which may then split into two fragments of similar size. There are various kinds of probe, but for induced fission reactions, neutrons are the most effective because they do not have an electric charge. Therefore, they do not experience Coulomb repulsion, allowing them to penetrate deeper into the nucleus, bringing energy and causing a rearrangement in the shell structure of the nucleus.[8]

For instance suppose and spherical nucleus with:

$$V = \frac{4}{3}\pi R^3$$
$$S = 4\pi R^2$$

We will explore the effects of a small deformation like an prolate spheroid. Since nuclear mater is incompressible, the volume will not change, at least to first order. Consider a small deformation, $\epsilon << 1$:

$$a = R(1 + \epsilon); b = R(1 + \epsilon)^{-1/2}$$

$$V = \frac{4}{3}\pi ab^{2} = \frac{4}{3}\pi R^{3}$$

With these definitions, the volume remains constant, but the surface area increases. Using a Taylor series expansion for small ϵ , we have:

$$\frac{a}{b} = 1 + \frac{3}{2}\epsilon + \frac{3}{8}\epsilon^2 + \cdots$$

Also,

$$\left(\frac{b}{a}\right)^2 = 1 - 3\epsilon + 6\epsilon^2 - 10\epsilon^3 + \cdots$$

Given $\frac{\arcsin \epsilon}{\epsilon} = 1 + \frac{1}{2}\epsilon - \frac{13}{40}\epsilon^2 + \cdots$, we get:

$$\left(\frac{b}{a}\right)^2 \left(\frac{\arcsin \epsilon}{\epsilon}\right) = 2\left(1 + \epsilon + \frac{2}{3}\epsilon^2 + \cdots\right)$$

Substituting into the surface area S:

$$S = 4\pi R^2 \left(1 + \frac{2}{5}\epsilon + \cdots \right) \tag{2-4}$$

Finally, considering the average distance between nucleons inside the deformed nucleus:

$$\bar{R} = R \left(1 + \frac{1}{5} \epsilon^2 + \cdots \right)$$

$$\bar{R}^{-1} = R^{-1} \left(1 - \frac{1}{5} \epsilon^2 + \cdots \right)$$
(2-5)

Knowing how \bar{R} and S change in the nucleus with the small deformation **Eq.**(2-5) and **Eq.**(2-4) respectively, we can evaluate the binding energy **Eq.**(2-3) and see how it changes. The

Coulomb and the surface terms are the ones that change. The following analysis will detail these changes:

$$\Delta E = B(\epsilon) - B(0)$$

$$\Delta E = \left(-\frac{2}{5}a_s A^{2/3} + \frac{1}{5}a_c z(z-1)A^{-1/3}\right)\epsilon^2$$

If $\Delta E > 0$, then $B(\epsilon) > Bb(\epsilon = 0)$. This means that the deformed nucleus is lighter that the spherical one, resulting in an tendency towards stretching in the nucleus, which leads to fission [9]. We will focus on the conditions that lead to $\Delta E > 0$:

$$-\frac{2}{5}a_sA^{2/3} + \frac{1}{5}a_cz(z-1)A^{-1/3} > 0$$
$$\frac{1}{5}a_cz(z-1)A^{-1/3} > \frac{2}{5}a_sA^{2/3}$$
$$(z \gtrsim 90) \to z(z-1) \approx z^2$$
$$a_cZ^2 > 2a_sA$$
$$Z^2/A > \frac{2a_s}{a_c}$$

The right side of the expression can be approximated $\frac{2a_s}{a_c} \approx 47$ which leave us we the condition [9]:

$$\frac{Z^2}{A} > 47.$$
 (2-6)

A nucleus with this property is completely unstable to fission. When discussing about nuclear reactors, we want isotopes that are prone to fission, but this probability should not be too high because spontaneous fission would dominate the reaction, reducing the efficiency of the reactor [8]. Nuclei with Z > 90 and A > 230 undergo fission relatively easily, either through induced or spontaneous processes.[5]

2.2 Nuclear Fission 17

2.1.3. Valley of Instability

The presence of Coulomb and asymmetric terms in the binding energy $\mathbf{Eq.}(2\text{-}3)$ implies the existence of a maximum in the binding energy for a given A, as a function of Z [7]. To find this relation, we set $\partial B/\partial Z = 0$, as shown in the following expression:

$$\left. \frac{\partial B}{\partial Z} \right|_{A=\text{const}} = -2a_c \frac{Z_{\min}}{A^{1/3}} + 2a_a \frac{(N-Z_{\min})}{A}$$

Setting this expression to zero and replacing N = A - Z, we get:

$$0 = -2a_c \frac{Z_{\min}}{A^{1/3}} + 2a_a \frac{(A - 2Z_{\min})}{A}$$
$$0 = -a_c \frac{Z_{\min}}{A^{1/3}} + a_a - 2\frac{Z_{\min}}{A}$$
$$Z_{\min} = \frac{A}{2 + a_c A^{2/3}/(2a_a)}$$

This expression can be approximated by N=Z=A/2 and $a_c/a_a\approx 0.0075$ [7]. This leaves us with the expression:

$$Z_{\min} \approx \frac{A}{2} \frac{1}{1 + 0.0075 \, A^{2/3}}$$
 (2-7)

The $\mathbf{Eq.}(2-7)$ tells us which is the most stable isotope for a given A. This information will be helpful later in the document when we discuss the requirement of stable isotopes for the reactor fuel.

2.2. Nuclear Fission

A first approximation to study the probability of a nuclear fission, one can suppose that the fission fragments live within the nucleus and fission takes place when one of them surpasses the Coulomb barrier [8].

For instance, consider the fission reaction of a nucleus, specifically ^{235}U undergoing an induced fission reaction. We will delve into this type of fission later in the document. This

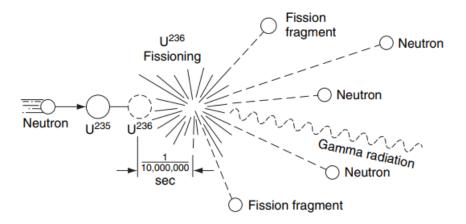


Figure 2-2.: Detailed Schematic of a Nuclear Fission Reaction. From Ref. [4].

reaction results in many products such as neutrons, fission fragments and radiation, as shown in **Fig** (2-2). Each of these products plays its role in a nuclear reactor.

Subsequently, suppose that the nucleus splits in two similar fragments, ${}^{119}_{46}Pd$. To compute the energy liberated in the reaction we just need to compute the difference in binding energy between ${}^{238}U$ and $2 \times {}^{119}Pd$, which is equal to 214 MeV.

To continue, we compute the Coulomb barrier, knowing that $R = R_1 + R_2$, $R_2 = R_1$ and $R_1 = R_0(119)^{1/3} = 6 \,\text{fm}$:

$$V = \frac{1}{4\pi\epsilon_0} \frac{Z_1 Z_2 e^2}{R}$$
$$R = 12 \,\text{fm}$$
$$Z_1 = Z_2 = 46$$
$$V = 253 \,\text{MeV}$$

The excitation energy of the fragments inside ^{238}U is 214 MeV and the height of the Coulomb barrier is 253 MeV. This values are not that different, which makes the probability non-zero for one of the fragments escaping the nucleus because of quantum tunneling. This calculation is a mere sketch of what a real calculation needs to consider. For example, if we choose the two fragments to be $^{79}_{30}Zn$ and $^{159}_{62}Sm$ the Coulomb barrier will be reduced to 221. In more sophisticated version of these calculations, two new parameters will be added:

2.2 Nuclear Fission 19

- Fission barrier
- Activation energy

These more sophisticated calculation are based on the liquid-drop model and give us an idea of the activation energy, the energy required for a nucleus to surpass the fission barrier and fission [9].

When a neutron is absorbed into a heavy nucleus resulting in a compound nucleus, the binding energy per nucleon decreases. For some nuclei, such as $^{233}_{92}U$, $^{235}_{92}U$, $^{239}_{92}Pu$, this decrease is so significant that the compound nucleus will undergo fission with high probability, even if the neutron has very low energy [4]. A compound nucleus is an excited nucleus which decays via multiple paths, depending on the isotope.

2.2.1. Fission Products

Fission is an asymmetric process, this means the two resulting fragments have different masses. However, the probability that the two fragments have the same mass is close to zero, which is not well understand [8].

Fission fragments are unstable because they neutron excess [5]. When a nucleus undergoes fission, it not only produces fragments but also emits neutrons, known as prompt neutrons. This emission changes the proton-to-neutron ratio of the fragments. Nonetheless, these fragments still lie about the stability curve in **Fig** (2-3). Some of these nuclei, less than 1%, decay by delayed-neutron emission, most of the fragments decay via beta emission or gamma rays. For example:

$$n + {}^{235}_{92}U \rightarrow {}^{140}_{54}Xe + {}^{94}_{38}Sr + 2n + 200MeV$$

 $^{140}_{\ 54}Xe$ follows the chain of reactions:

$${}^{140}_{54}Xe \xrightarrow{\beta} {}^{140}_{55}Cs \xrightarrow{\beta} {}^{140}_{56}Ba \xrightarrow{\beta} {}^{140}_{57}La \xrightarrow{\beta} {}^{140}_{58}Ce$$

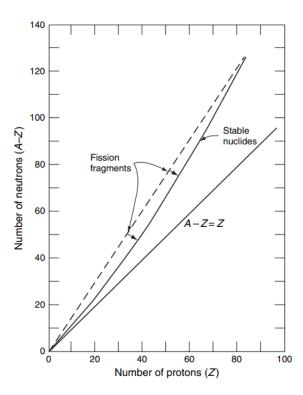


Figure 2-3.: Graph illustrating the relationship between the number of neutrons and the number of protons in nuclei. From Ref. [5]

This process shows only one of the 40 possible pairs that results from fission [5]. These fragments are highly radioactive and, in some cases, they can produced delayed neutron. Prompt and delayed neutrons play and fundamental role in the dynamics of a nuclear reactor.

2.2.2. Fission Cross Sections

Next we are going to focus on σ known as the nuclear reaction cross-section, which is a value that quantifies the probability of a nuclear reaction occurring [4]. This parameter is expressed in terms of the number of neutrons traveling with speed v a distance dx in a material with N nuclei per unit volume

$$\sigma := \frac{\text{reaction rate}}{nvNdx} \tag{2-8}$$

 σ has units of area, consistent with the idea that σ is an effective area of interaction. That

2.2 Nuclear Fission 21

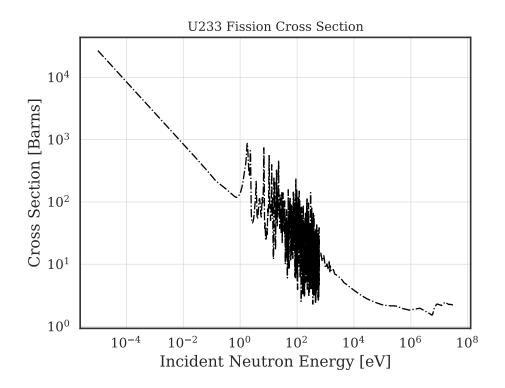


Figure 2-4.: Fission cross section of ^{233}U . Data retrieved from Ref. [10]

is why is called 'cross-section'. Typically, this parameter is measured in Barns. 1barn = $10^{-24}cm$ [4].

The fission cross section (σ_f) , represents the probability that the interaction of a neutron and a nucleus will result in fission [4]. The probability peaks when the energy delivered to the nucleus, matches the energy difference between an excited state and the ground state of the compound nucleus. This phenomenon is known as resonances [4].

 ^{238}U fissions only by fast neutrons which are neutrons of high energy (energies around MeV). However, this cross section is small compared to others [8]. On the other hand, ^{235}U and ^{239}Pu undergo fission with neutrons across all energy spectra present in a nuclear reactor [8], as shown in **Fig** (2-4), including its resonances, which corresponds to the peaks in the graph.

2.3. Abundances of Isotopes

We already explored the instability of isotopes. Relation $\mathbf{Eq.}(2\text{-}6)$ give us an idea of how prone is a nucleus to fission. For instance, if we compute this parameter for the following nuclei, we get:

$$^{208}_{82}Pb \rightarrow 32.33$$

$$^{232}_{90}Th \rightarrow 34.91$$

$$^{238}_{92}U \rightarrow 35.56$$

$$^{235}_{92}U \rightarrow 36.02$$

$$^{233}_{92}U \rightarrow 36.33$$

$$^{239}_{94}Pu \rightarrow 36.97$$

$$^{252}_{94}Cf \rightarrow 38.11$$

All isotopes can undergo fission if they are hit with enough energy. In nuclear physics, probes usually have kinetic energies around MeV. Lead (Pb) is a very stable isotope. Isotopes, including Thorium-232 (^{232}Th) and Uranium-238 (^{238}U), have a non-zero probability of fission, yet their cross-sections are small. In contrast, isotopes, such as ^{235}U , ^{233}U and ^{239}Pu , are more prone to fission. Nuclei over Plutonium (Pu) can undergo spontaneous fission. This condition worsens for isotopes with $Z^2/A \geq 39$ which have infinitesimally small mean life [8]. Bringing this in mind, we can estimate some ranges for the stability of isotopes:

$$Z^2/A < 35 \rightarrow \text{Too stable}$$
 $Z^2/A \sim 35 \rightarrow \text{Fissile but not that much}$ $Z^2/A \sim 36 \rightarrow \text{Prone to fission}$ $Z^2/A \sim 38 \rightarrow \text{Spontaneous fission}$ $Z^2/A \gtrsim 39 \rightarrow \text{Too unstable}$ $Z^2/A > 47 \rightarrow \text{Not possible}$

Besides, we have to look for isotopes that are close to the bottom of the valley of stability **Eq.** (2-7). Those far away from the valley will decay via $\beta^{+/-}$, α , neutron or proton evaporation [8]. This leaves us with three possible isotopes:

$$^{233}U \to \tau = 160000\, {
m years}$$
 $^{235}U \to \tau = 700\, {
m million\ years}$ $^{239}Pu \to \tau = 24000\, {
m years}$

For an approximation of how much of each material is available on Earth, we are going to compare their mean life with the lifespan of Earth which is around 4.54 billion years. $^{239}Pu, \tau = 24000$ years This means it has passed 187000 mean lifespans since the creation of Earth, which indicates there is no plutonium left on earth. Something similar happens for ^{233}U . Quite the contrary is the case of ^{235}U which has a mean life comparable to earth's age, which means there is ^{235}U on the planet but not that much.

The uranium available on Earth is known as 'natural uranium' (^{Nat}U). Its composition is :

$$\begin{cases} 2^{38}U & \to 99.274\% \\ 2^{35}U & \to 0.720\% \\ 2^{34}U & \to 0.005\% \end{cases}$$

These isotopes are the ones that could be used as initial nuclear fuel for a nuclear reactor [8].

2.3.1. Notation

Latter on this document an special notation will be used to indicate the isotopes discussed here. The reader may notice the following pattern:

$$Th \rightarrow Z = 90$$

 $Pu \rightarrow Z = 94$
 $Z \in [90, 94]$

As well as:

$$^{232}Th \rightarrow A = 232$$

 $^{239}Pu \rightarrow A = 239$
 $A \in [232, 239]$

So we can think that we have the 'general case':

$${}^{23b}_{9a}X \to \begin{cases} a = 0, 1, 2, 3, 4\\ b = 2, 3, 4, 5, 6, 7, 8, 9 \end{cases}$$

So we can use this two numbers to refer to a certain isotope. For example:

$$^{232}_{90}Th \rightarrow 02$$
$$^{235}_{92}U \rightarrow 25$$
$$^{238}_{92}U \rightarrow 28$$

2.3.2. Fissionable and Fertile Material

Having introduced the fuel of a nuclear reactor, now we have to distinguish between two sub classes of fissionable material. Firstly, we have fissile nuclei which are the ones that undergo fission when they are irradiated by neutrons of some energy. For example ^{235}U is fissile. Secondly, we have fertile material which can undergo fission only by high energy

neutrons. However, fertile materials can become fissile if they captures neutrons, transmutating via β decays or capturing neutrons again. This is the case of Thorium-232 (^{232}Th) and Uranium-238 (^{238}U).

$$n + {}^{238}_{92}U \rightarrow {}^{239}_{92}U^* \xrightarrow{\beta^-} {}^{239}_{93}Np \xrightarrow{\beta^-} {}^{239}_{94}Pu$$

$$n + {}^{232}_{90}Th \rightarrow {}^{233}_{90}Th^* \xrightarrow{\beta^-} {}^{233}_{91}Pa \xrightarrow{\beta^-} {}^{233}_{92}U$$

The crust of Earth has at least three times more Thorium-232 than Uranium [11]. Using this material to breed ^{233}U is the idea behind a Thorium fuel cycle. However, a breeding chain reaction is more difficult to sustain than a fission chain reaction [8].

2.4. Neutron Interactions

In order to produce energy, a nuclear reactor must sustain an equilibrium between the neutrons generated within the core and the neutrons lost[2]. To achieve this, a nuclear reactor must sustain an induced fission chain reaction. In this process, neutrons, produced by fission, induced new fissions in other fissile nuclei [2]. These new fissions produce more neutrons, which induce further reactions, repeating the process. Fig (2-5) illustrates this process. In each fission of ^{235}U , an average of 2.4 neutrons are produced [5]. We have already seen that around 200 MeV of energy is liberated after the fission of ^{235}U . Nonetheless, this energy is released as kinetic energy of the fission fragments (FF) and is eventually dissipated as heat.

2.4.1. Neutron Multiplication

The reaction represented in \mathbf{Fig} (2-5) can be described in terms of a parameter known as 'multiplication factor', denoted as k [5]. The factor is defined as the number of neutrons produced in one generation divided by the number of neutrons produced in the preceding generation.

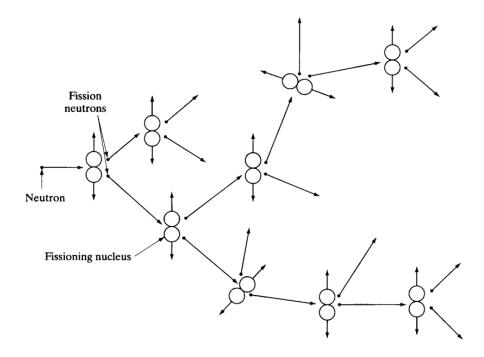


Figure 2-5.: Fission reaction chain schematic. From Ref. [5]

$$k := \frac{\text{Number of fission's neutrons produced in one generation}}{\text{Number of fission's neutrons produced in the preceding generation}}$$
 (2-9)

In addition, if we want to estimate the number of neutrons produced in one generation, we need to use l, which is the lifespan of a neutron inside the reactor [5]. This is the time between the production and the absorption of neutrons. Suppose that there are n_0 neutrons at t = 0, then, we can use the following formula to compute the number of neutrons of the *ith* generation:

$$n(t) = n_0 k^{t/l} (2-10)$$

There are three possibilities for the values of k:

$$k = \begin{cases} k > 1 : \text{``Supercritical''}. \text{ Neutrons increases exponentially.} \\ k = 1 : \text{``critical''}. \text{ The number of neutrons remains constant.} \\ k < 1 : \text{``Subcritical''}. \text{ The number of neutrons decreases.} \end{cases}$$

2.4.2. Heat Produced by the Fuel

Around 8% of the 200 MeV of the energy produced by fission corresponds to the gamma rays associated with the beta decays of fission products [5]. Therefore, after a shutdown, a reactor that has been operating a for a time will keep radiating a significant amount of heat [5]. The heat produced after shutdown due to beta and gamma decays could be computed using the Wigner-Way formula.

$$P_d(t) = 0.0622P_0[t^{-0.2} + (t_0 + t)^{-0.2}]$$
(2-11)

Where $P_d(t)$ is the power generated at time t, P_0 is the power of the reactor before the shutdown and t_0 is the time of power operation before the shutdown. Due to the decay heat produced after the shutdown, the reactor must be refrigerated to prevent overheating for a considerable period of time [5].

2.5. Microscopic and Macroscopic Cross Sections

After the previous discussion on nuclear fuel, we want to determine how neutrons interact with the material inside the reactor. To achieve this, let us consider a beam of neutrons traveling in the +x direction. The intensity of the beam is given by I = n'''v, where n''' is the volumetric neutron's density and v is the velocity at which all of the neutrons are traveling [5].

We assume that a neutron that collides with a nucleus is either absorbed or scattered into a different direction, reducing the number of neutrons traveling in the same direction [5]. This causes a decline in the intensity of the beam.

Let I(x) be the intensity of the beam after penetrating a distant x in the material. Then, if the beam travels an additional infinitesimal distance dx, some neutrons will be removed. This removal is proportional to the number of nucleus in this region denoted as N and the cross-section, σ [5]. Therefore, we have:

¹In this notation, quantities marked with triple primes ("") represent volumetric densities, double primes (") indicate surface densities, and single primes (') denote linear densities.

$$I(x + dx) = (1 - N\sigma dx)I(x)$$

If $I(0) = I_0$ and applying the derivative:

$$\frac{d}{dx}I(x) = -N\sigma I(x)$$

Solving the differential equation an integrating from 0 to x:

$$I(x) = I_0 e^{-N\sigma x} \tag{2-12}$$

2.5.1. Macroscopic Cross Section

After this result, we want to introduce the macroscopic cross section, defined as:

$$\Sigma := N\sigma \tag{2-13}$$

Where σ refers to the microscopic cross section, measured in $cm^2/nucleus$, and N is still the volumetric nuclei density, measured in $nuclei/cm^3$. Then, the macroscopic cross section must have units of cm^{-1} .

Replacing $N\sigma$ in Eq.(2-12) with Σ , we obtain a macroscopic version of the flux. We can interpret this collided flux as a probabilistic distribution indicating the likelihood of a neutron reaching a depth x into a material without colliding [5].

$$I(x) = I_0 e^{-\Sigma x}$$

Dividing I(x) by I_0 , we obtain the fraction of neutrons that have reached a distance x without colliding. Interpreting $\frac{dI}{dx} = -\Sigma I(x)$ as the probability of a neutron having its first collision in the next dx, we have:

$$p(x)dx = (\Sigma dx)(\frac{I(x)}{I_0}) = \Sigma e^{-\Sigma x} dx$$

We can compute the mean free path λ , the mean distance traveled by a neutron between collisions, as [5]:

$$\lambda = \int_0^\infty x p(x) dx = \int_0^\infty x \sum e^{-\sum x} dx = \frac{1}{\sum x}$$

2.6. Nuclei Density (N)

The Avogadro's number is the total of molecules in a mole of a substance, $N_0 = 0.6023 \cdot 10^2 4$ [5]. In order to compute the density of the molecule of a substance, we have to divide N_0 by the molecular wight A and, finally, multiply it by the density of the substance ρ [5]:

$$N = \rho N_0 / A$$

Replacing this in Eq.(2-13) we have:

$$\Sigma = \frac{\rho N_0}{A} \sigma$$

Now if we apply this formula to an chemical element we have to consider that this element, in reality, exist in nature as a mixture of isotopes. To adjust the formula to this case we denote N^i/N as the atomic fraction of the isotope with A_i atomic weight, Thus we define the atomic weight of the mixture as [5]:

$$A = \sum_{i} (N^{i}/N)A_{i},$$

where $N = \sum_{i} N^{i}$. Applying this to get the macroscopic cross section we get:

$$\Sigma = \frac{\rho N_0}{A} \sum_{i} \frac{N^i}{N} \sigma^i \tag{2-14}$$

Where σ^i is the microscopic cross section of the *ith* isotope.

In many cases material are combined using volume fractions. Once again, we want to make adjustment to our equation to consider this situation. Let V_i/V the volume fraction where $V = \sum_i V_i$, the cross section of the mixture is [5]:

$$\Sigma = \sum_{i} (V_i/V) N_i \sigma^i \tag{2-15}$$

To compute each of the nuclei number density we make use of the density of the ith nuclei ρ_i and its atomic weight A_i

$$N_i = \rho_i N_0 / A_i$$

The expression in $\mathbf{Eq.}(2-15)$ can be re written in terms of the macroscopic cross section of its components.

$$\Sigma = \sum_{i} (V_i/V) \Sigma^i$$

Where $\Sigma^i = N_i \sigma^i$. This expression can also be written in terms of mass fractions. Applying the same idea as before we get:

$$\sigma = \sum_{i} (M_i/M) \frac{\rho N_0}{A_i} \sigma^i$$

Where $M_i/M = \rho_i V_i/(\rho_i V)$ is the mass fraction, $M = \sum_i M_i$ and $\rho = M/V$.

2.6.1. Enriched Uranium

We have already mentioned that in nature uranium is found as a mixture of two main isotopes: 99.3% of ^{238}U and 0.7% of ^{235}U . However, in a nuclear reactor, enriched uranium is needed which is uranium where the mass fraction of ^{235}U has been increased. We denote the enrichment as [5]:

$$\tilde{e_a} = \frac{N^{25}}{(N^{25} + N^{28})} \tag{2-16}$$

This expression is known as the atomic enrichment, and from the definition, we can deduced that $1-\tilde{e_a}=N^{28}/(N^{28}+N^{25})$ is the Uranium-238 fraction. We can compute the macroscopic cross section using the enrichment as follows [5]:

$$\Sigma^{U} = \frac{\rho_{U} N_{0}}{\tilde{e_{a}} 235 + (1 - \tilde{e_{a}}) 238} [\tilde{e_{a}} \sigma^{25} + (1 - \tilde{e_{a}}) \sigma^{28}]$$

Another definition way to defined the enrichment is using the masses:

$$\tilde{e_w} = \frac{M^{25}}{(M^{28} + M^{25})}$$

We can also get the mass fraction for ^{238}U based on the enrichment by $1 - \tilde{e_w} = \frac{M^{28}}{(M^{25} + M^{28})}$. Using this definition to compute the macroscopic cross section:

$$\Sigma^{U} = \rho N_0 \left[\frac{1}{235} \tilde{e_w} \sigma^{25} + \frac{1}{238} (1 - \tilde{e_w}) \sigma^{28} \right]$$

There exits a relation between $\tilde{e_a}$ and $\tilde{e_w}$. Using $N^{25} \sim M^{25}/235$ and $N^{28} \sim M^{28}/238$:

$$\tilde{e_a} = \frac{\frac{M^{25}}{235}}{\left(\frac{M^{25}}{235} + \frac{M^{25}}{235}\right)}$$

$$\tilde{e_a} = \frac{\frac{1}{235} \frac{M^{25}}{M}}{\left(\frac{1}{235} \frac{M^{25}}{M} + \frac{1}{238} \frac{M^{28}}{M}\right)}$$

$$\tilde{e_a} = \frac{\frac{M^{25}}{M} \text{ and } 1 - e_w \sim \frac{M^{28}}{M}$$

$$\tilde{e_a} = \frac{\frac{238}{235} \tilde{e_w}}{\left(\frac{238}{235}\right) \tilde{e_w} + \left(1 - \tilde{e_w}\right)}$$

which finally becomes:

$$\tilde{e_a} = \frac{1.0128\tilde{e_w}}{1 + 0.0128\tilde{e_w}}$$

Using the relation for a level $\tilde{e_w} = 0.007$, the atomic enrichment would be $\tilde{e_a} = 0.00709$, and the values gets closer the higher the enrichment. This means that the approximation $\tilde{e_w} \approx \tilde{e_a} \approx \tilde{e}$ is accurate.

2.7. Neutrons Cross Sections

So far, we have only introduced the probability that a neutron interacts with a nucleus but we have not talked about the processes that could happened afterwards. The cross section introduced before is known as the total cross section an is denoted as σ_t . When a neutron hits a nucleus, it is either scatter or absorbed, this could be considered in our relations as [5]:

$$\sigma_f = \sigma_s + \sigma_a$$

In the expression σ_s and σ_a denotes the scattering and absorption cross sections. With this formulation of the total cross section we can easily compute the probability for given interaction to end in scattering or absorption using the fractions σ_s/σ_t and σ_a/σ_t respectively. 2.7 Neutrons Cross Sections

33

However, the scattering cross section is divided further into elastic and inelastic scattering [5]. In the inelastic scattering the neutron give energy to the nucleus leaving it in an excited state. Both kinds of scattering conserve momentum, but only elastic scattering conserve kinetic energy. This arises in the expression:

$$\sigma_s = \sigma_n + \sigma_{n'}$$

Where $\sigma_{n'}$ denotes the cross section for the inelastic scattering. Something similar happens with the absorption scattering.

$$b\sigma_a = \sigma_\gamma + \sigma_f$$

We have two processes, the first one is the formation of a compound nucleus that does not re emit the neutron but eliminates its exited energy via gamma decays, denoted as σ_{γ} . This process is known as capture reaction and the remaining nucleus could be unstable and decay later on [5]. The other process, more interesting for our application, is a fission process σ_f . We express a particular macroscopic cross section using a sub index $x = s, a, \gamma, f$ which indicates the particular reaction that we are considering.

$$\Sigma_r = N\sigma_r$$

2.7.1. Neutron Energy Range

We have talked about cross sections but we have not considered it energy dependence. In this case, their dependence refers to the energy of the neutron. First we have to establish an upper and a lower limit for the neutron's energy distribution.

• Thermal neutrons: 0.001eV - 1.0 ev

• Intermediate neutrons: 1.0eV - 0.1MeV

 \bullet Fast neutrons: 0.1 MeV - 10 MeV

Neutron produced in a fission reaction follow a energy distribution. If $\chi(E)$ is the energy distribution then a reasonable approximation of the distribution [5]:

$$\chi(E) = 0.453 \exp(-1.036E) \sinh(\sqrt{2.29}E)$$
(2-17)

Prompt neutrons suffer multiple collisions before being absorbed. The nuclei with which they collide follow a thermal distribution with $E_N = \frac{3}{2}kT$, where T is the temperature of the reactor. Therefore, when neutrons collide, they lose energy, passing through an intermediate energy region. Eventually, those neutrons become thermal neutrons, which follow a Maxwell-Boltzmann distribution. These distributions are important because, later in the document, we will see the dependence of cross sections on energy, and this dependence can change the dynamics of the nuclear reactor.

3. The Design of a Nuclear Reactor

Following our study of cross sections and the interactions between nuclei and neutrons, we will now delve into the properties of the nuclear fuel. This chapter will explore the dependence of cross sections on energy, analyze the distributions of neutrons, and estimate the multiplication factor, k.

To achieve this, we will examine how different materials within the reactor core influence reaction rates and the neutron flux distribution across the energy spectrum.

3.1. Nuclear Fuel Properties

Cross sections of fissile and fertile materials are functions of energy; therefore, many of the processes that occur inside a nuclear reactor are determined by the energy of the neutrons. The dependence on energy of the cross sections extends over a broad range from: 10 MeV to 0.001 eV. Fertile materials can undergo fission when absorbing neutrons, but only if the transfer energy surpasses a threshold. A fraction of the total neutrons will be absorbed; this fraction is also energy-dependent. This leads to the following expression:

$$\eta(E) = \frac{\nu \Sigma_f(E)}{\Sigma_a(E)} \tag{3-1}$$

The expression represents the fraction of neutrons that create new neutrons after being absorbed. ν is the number of neutrons produced by fission, and Σ_x represents the cross section of the fission and absorption processes. By definition, Σ depends on the nuclei density, so we can cancel out these factors and end up with σ .

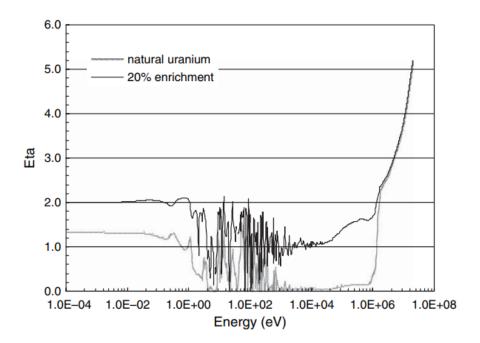


Figure 3-1.: Figure showing two plots of η as function of energy for uranium fuel at different levels of enrichment. From **Ref.** [5]

However, nuclear fuel is composed of multiple isotopes, then σ_x should be adjusted to consider the mixture of isotopes. First, we have to consider the enrichment **Eq.**(2-16). We are going to label the cross sections as σ_x^y , where x indicates the process considered (f for fission and g for absorption), and g indicates the fissionable material (f for fissile and f for fertile). All of these considerations lead to the following expression:

$$\eta(E) = \frac{\nu \,\tilde{e} \,\sigma_f^{fi}(E) + \nu \,(1 - \tilde{e}) \,\sigma_f^{fe}(E)}{\tilde{e} \,\sigma_a^{fi}(E) + (1 - \tilde{e}) \,\sigma_a^{fe}(E)} \tag{3-2}$$

The changes caused by the level of enrichment are reflected on Fig 3-1.

Nuclear reactors are designed to concentrate in the fast or thermal energy ranges, this is due to the valley in the intermediate energy range. As mentioned before in the document, neutrons lose energy due to elastic scattering, until they reach thermal equilibrium with the medium. There are two types of nuclear reactors, fast and thermal reactors, each one with their own specifications.

In fast reactor design inside the core any kind of material is avoided, different from fuel, so

that neutrons experience few scatterings and stay in the fast energy range. Low atomic weight materials are capable to quickly reduce neutrons energy, consequently, they are avoided. This increases the possibility for uranium-238 to absorb neutrons, which depletes the amount neutrons [5]. This makes it impossible for a fast reactor to be fueled with natural uranium [5]; it needs of high enrichment-uranium (HEU) with $\tilde{e} \gtrsim 10\%$.

The opposite situation happens for thermal reactors. They need materials, called moderators, to slow-down the neutrons. A thermal nuclear reactor can operate with much lower enrichment [5]. We must examine the properties of moderators to understand their behavior.

3.2. Slow Down Decrement

To measure the effectiveness of a nucleus to slow neutrons down by elastic scattering, we use the slow down decrement, denoted as ξ . It is defined as the mean value of the logarithm of the fraction of energy lost [5]:

$$\xi := \overline{\ln\left(\frac{E}{E}\right)} = \int \ln\left(\frac{E}{E'}\right) p(E \to E') dE' \tag{3-3}$$

A long deduction gives us that:

$$p(E \to E') = \frac{1}{(1-\alpha)E} dE' \tag{3-4}$$

Where $\alpha = \left(\frac{A-1}{A+1}\right)^2$, which can be replaced into **Eq.**(3-3) resulting in:

$$\xi = 1 + \frac{\alpha}{1 - \alpha} \ln \alpha \tag{3-5}$$

This parameter can be approximated as $\xi \approx \frac{2}{A+2/3}$. With it, we can estimate the number of collisions necessary to reduce the energy of a neutron from fast neutrons to thermal neutrons. For instance, consider E_1, E_2, \ldots, E_n to be the neutron energies after the *i*-th collision, this would be:

$$\ln\left(\frac{E_0}{E_n}\right) = \ln\left(\frac{E_0}{E_1}\right) + \ln\left(\frac{E_1}{E_2}\right) + \dots + \ln\left(\frac{E_{n-1}}{E_n}\right)$$
(3-6)

Replacing each of the terms for the average logarithmic energy loss ξ , we have:

$$n = \frac{1}{\xi} \ln \left(\frac{E_0}{E_n} \right) \tag{3-7}$$

Evaluating the expression for hydrogen, we get $n \approx 18$. However, this expression considers only one kind of nucleus. In order to consider the effects of other isotopes, we have to make an average over their ξ , resulting in:

$$\overline{\xi} = \frac{1}{\Sigma_s} \sum_i \xi_i \Sigma_{si} \tag{3-8}$$

The concept of the slow down decrement is crucial in understanding how neutrons lose energy through collisions. This directly impacts the design and efficiency of neutron moderators, which are essential components in thermal reactors.

3.3. Neutron Moderators

Thermal reactors must reduce the neutrons' energy with as few collisions as possible so that they make the transit to the thermal region without being absorbed in resonance processes [5]. The slowing down decrement is the parameter most suitable for this purpose.

A good moderator must possess additional properties, beyond just a high slowing down decrement. One crucial property is the slowing down power, defined as $\xi \Sigma_s$, where Σ_s is the macroscopic scattering cross section. This parameter indicates the effectiveness of a material in slowing down neutrons through scattering interactions. A high slowing down power ensures that neutrons lose energy efficiently during collisions.

Another important parameter is the slowing down ratio, which is the ratio of the material's slowing down power to its thermal absorption cross section, Σ_a (thermal). This ratio indicates how well a material can slow down neutrons without absorbing them. A high slowing down ratio is desirable because it means the material can effectively moderate neutrons to thermal energies while minimizing neutron absorption.

For example, heavy water (D_2O) has a high slowing down ratio, making it an excellent moderator for reactors using natural uranium fuel. On the other hand, materials with lower slowing down ratios, such as ordinary water (H_2O) , require enriched uranium fuel to achieve efficient moderation.

Table 3-1.: Slowing Down Properties of Common Moderators. From **Ref.** [5]

	Slowing Down Decrement	Slowing Down Power	Slowing Down Ratio
Moderator	ξ	$\xi\Sigma_s$	$\frac{\xi \Sigma_s}{\Sigma_a(\text{thermal})}$
${\rm H_2O}$	0.93	1.28	58
D_2O	0.51	0.18	21,000
\mathbf{C}	0.158	0.056	200

3.3.1. Energy Spectra of Neutrons

Having discussed moderation, it is time to study the energy spectra of neutrons. This energy spectrum results from the competition between scattering and absorption reactions.

Neutrons with kinetic energies around the thermal range lose energy during scattering processes. In contrast, thermal neutrons do not lose energy because they are in thermal equilibrium with the medium. When the reactor medium has both, a large average energy loss per collision and a high ratio of scattering to absorption cross-sections, neutrons follow a distribution close to thermal equilibrium, known as soft, or thermal, spectrum. Conversely, systems that do not meet these conditions are characterized by a distribution close to the fission spectrum, known as hard, or fast, spectrum.

We can express this distribution in terms of the density distribution $\tilde{n}'''(E)dE$, which is the number of neutrons/cm³ with energies between E and E + dE. However, the neutron flux frequently, defined as:

$$\varphi(E) = v(E)\tilde{n}'''(E) \tag{3-9}$$

where v(E) corresponds to the speed of a neutron with kinetic energy E. Together with the macroscopic cross-section $\mathbf{Eq.}(2\text{-}13)$, we can construct the probability distribution of the number of collisions of type x, per cm³ per second, for neutrons with energy between E and E + dE as:

$$\Sigma_x(E)\varphi(E)dE \tag{3-10}$$

Integrating over all energy, we get the probable number of collisions of type x per cm³ per second for all neutrons [5].

For instance, consider the scenario where a collision removes a neutron, either by absorption or scattering, from the energy region E and E + dE. However, neutrons colliding from another energy region, say E' and E' + dE', enter the first region. When the number of neutrons leaving the region and entering it are equal, we have a stationary state [5].

An expression for the balance situation can be deduced by using $\Sigma_t(E) = \Sigma_s(E) + \Sigma_a(E)$ and the probability that a neutron scattered from the energy region E' + dE' ends up in E + dE, denoted as $P(E' \to E)$ and $P(E \to E')$. Additionally, we have to consider the prompt neutrons, whose number will be $\chi(E)$ Eq.(2-17) multiplied by the number of neutrons produced in each fission, denoted as s'''_f . This results in:

$$\Sigma_t(E)\varphi(E) = \int P(E' \to E)\Sigma_s(E')\varphi(E')dE' + \chi(E)s_f'''$$
(3-11)

We already know the distribution of $P(E' \to E)$ from Eq.(3-4). The Eq.(3-11) is known as the balanced equation. Finally, we can define the parameter $\Sigma_s(E' \to E) = p(E' \to E)\Sigma_s(E')$ for brevity. Now we are going to delve into the three different regions introduced before and, using the balanced equation, deduce the flux.

3.3.2. Fast Neutrons

This energy range is dominated by fission neutrons that have suffered almost no collisions because even one collision can dissipate too much energy. Using this idea, we can approximate the distribution as:

$$\varphi(E) \approx \frac{\chi(E)S_f'''}{\Sigma_t(E)}$$
(3-12)

This distribution is deformed by inelastic interactions and absorption processes. In fast reactors, neutrons are absorbed before they experience many collisions and reach the lowenergy tail of the distribution.

3.3.3. Intermediate Neutrons

Having talk about the upper energy range in the distribution of neutrons, we must explored the range where the thermal motion of nuclei must be considered in our calculation.

Before we delve into this distribution we have to introduce the concept of slowing-down density denoted as q(E) [5].

Slowing Down Density

The slowing-down density, q(E), is defined as the number of neutrons slowing down below energy E per cm^3 per second [5].

For energies around $1.0\,\text{eV}$, neutrons can gain energy through collisions with the medium [8]. Every fission neutron produced over the energy range $1.0\,\text{eV}-0.1\,\text{MeV}$ will arrive to this range if it is not absorbed. This fact can be expressed as:

We can express the source term q(E) as follows:

$$q(E) = \underbrace{\int_{E}^{\infty} \chi(E') s_f''' dE'}_{\text{Term 1}} - \underbrace{\int_{E}^{\infty} \Sigma_a(E') \varphi(E') dE'}_{\text{Term 2}}$$
(3-13)

Here, term 1 represents the contribution from the fission, which produce neutron with energy greater than energy E, and term 2 represents the neutrons absorbed before arriving to energies below E. We can make the following approximation: $\chi(E) \approx 0$ for E < 0.1 MeV, then the integral $\int_{E}^{\infty} \chi(E') dE' \approx \int_{0}^{\infty} \chi(E') dE' = 1$ is justified. This leads to the approximation of q(E):

$$q(E) \approx s_f''' - \int_E^\infty \Sigma_a(E') \varphi(E') dE'$$

By taking the derivative of the expression, we end up with $\frac{d}{dE}q(E) = -\Sigma_a(E)\varphi(E)$. This means that an increase in $\Sigma_a(E)$ causes a decrease in the slowing-down density. In the intermediate region, most of the contribution to absorption comes from resonances. Additionally, cross section between resonances are small enough to be ignored [5]. Finally, if we are below the energy range where fission neutrons are produced, then we can simplify **Eq.**(3-11) to:

$$\Sigma_s(E)\varphi(E) = \int_E^{E/\alpha} p(E' \to E) \Sigma_s(E')\varphi(E') dE'$$
(3-14)

By solving the integral equation, we can establish the relation $\Sigma_s(E)\varphi(E) = \frac{C}{E}$. Since we are interested in the neutrons that will scattered in the interval $\alpha E'' \leq E$, we will consider only with initial energy between $E < E' < E/\alpha$. Considering this we can end up with the following expression for q:

$$q = \int_{E}^{E/\alpha} \left[\int_{\alpha E'}^{E} \frac{1}{(1-\alpha)E'} \frac{C}{E} dE'' \right] dE'$$

Solving the integral, we end up with:

$$q(E) = \underbrace{\left[1 + \frac{\alpha}{1 - \alpha} \ln \alpha\right]}_{\text{Term 1}} C$$

The similarity of the first term 1 to ξ in Eq.(3-5) is noticeable. Using this result and the solution for Eq.(3-14) we get and expression for φ :

$$\varphi(E) \approx \frac{q(E)}{\xi \Sigma_s(E)E}$$
(3-15)

Once again, we can improve this expression to consider multiple isotopes and materials by using Eq.(3-8).

3.3.4. Thermal Neutrons

After some time and several collisions, the energy of neutrons will drop below 0.1 eV. At this point, further collisions may either absorb or release energy. Subsequently, neutrons reach thermal equilibrium with the medium at, say, temperature T, which is the one of the reactor. In this region of energy, the term related to fission neutrons in Eq.(3-11) vanishes [5]. A first approximation is to consider that the neutron flux follows Maxwell-Boltzmann distribution:

$$\varphi(E) \approx \varphi_{MB}(E) = \frac{1}{(kT)^2} \exp(-E/(kT))$$
(3-16)

However, the scenario is not that simple, as many neutrons are absorbed before reaching thermal equilibrium. Consequently, thermal neutrons do not follow a Maxwell-Boltzmann distribution, as their distribution is shifted towards higher energies. Describing these circumstances is not an easy task, since neutrons collide with atoms or even with the lattice of the material, complicating the calculations [8].

An approximation is to use a Maxwell-Boltzmann distribution but with an effective temperature $T_k > T$:

$$\varphi(E) \approx \varphi_{MB}(E; T_k)$$

$$T_k = T + a \left(\frac{\Sigma_a}{\xi \Sigma_s}\right) \tag{3-17}$$

Where a is a fitted constant.

3.4. Reaction Rates Averaged Over Energy

The ability to sustain a chain reaction greatly depends on the distribution of neutrons across the energy range, which in turn depends on the composition of the different materials in the core and their effectiveness in slowing down neutrons [5]. For this reason, cross sections must be averaged over the entire energy spectrum. We define the average cross section as:

$$\bar{\Sigma}_x = \int_0^\infty \Sigma_x(E)\varphi(E) dE / \int_0^\infty \varphi(E) dE$$
 (3-18)

From the definition of Σ_x in **Eq.**(2-13), it is possible to use σ by canceling the atom density. The flux can be expressed as the product of the mean speed and the density of neutrons:

$$\phi = \bar{v}n''' \tag{3-19}$$

From this relation, the mean velocity can be defined as:

$$\bar{v} = \int_0^\infty v(E)\tilde{n}'''(E) dE / \int_0^\infty \tilde{n}'''(E) dE$$
 (3-20)

A more precise treatment of neutron populations requires cross section averaging over specific energy ranges rather than the entire energy spectrum [5]. The reaction rates should be partitioned as:

$$\int \sigma_x(E)\varphi(E) dE = \int_T \sigma_x(E)\varphi(E) dE + \int_I \sigma_x(E)\varphi(E) dE + \int_F \sigma_x(E)\varphi(E) dE$$
 (3-21)

Here, T denotes the thermal region $(0 \le E \le 1.0 \,\text{eV})$, I denotes the intermediate or resonance region $(1.0 \,\text{eV} \le E \le 0.1 \,\text{MeV})$, and F denotes the fast region $(0.1 \,\text{MeV} \le E \le \infty)$. This can be written as the sum of each averaged energy:

$$\bar{\sigma}_r \phi = \bar{\sigma}_{rT} \phi_T + \bar{\sigma}_{rI} \phi_I + \bar{\sigma}_{rF} \phi_F$$

This expression is obtained by multiplying and dividing Eq.(3-21) by:

$$\phi_{\Omega} = \int_{\Omega} \varphi(E) dE, \quad \Omega = T, I, F$$

Defining the energy-averaged cross section as:

$$\bar{\sigma}_{x\Omega} = \int_{\Omega} \sigma_x(E)\varphi(E) dE / \int_{\Omega} \varphi(E) dE, \quad \Omega = T, I, F$$
 (3-22)

More advanced approximations, known as multi-group methods, divide the spectrum into more than three intervals.

3.5. Multiplicative Factor for Infinite Media

This discussion introduces the concept of the infinite multiplication factor k_{∞} , which is defined by the multiplication factor Eq.(2-9) for a reactor with an infinite medium approximation. The term "infinite" refers to the assumption of an unbounded medium, and it is also assumed that all neutrons are generated instantaneously.

To account for the finite volume of the reactor, we introduce the non-leakage probability:

$$k = k_{\infty} P_{NL} \tag{3-23}$$

Here, P_{NL} is the probability that a neutron does not leak from the reactor before being absorbed. This factor depends on the geometry, the volume of the core, the distribution, and the composition of the materials within the reactor [5].

An expression for k_{∞} , derived from the definition and using energy-averaged cross sections and flux given in the previous section, is:

$$k_{\infty} = \nu \bar{\Sigma}_f / \bar{\Sigma}_a \tag{3-24}$$

It is crucial to note that only fissionable materials contribute to $\bar{\Sigma}_f$, while $\bar{\Sigma}_a$ considers all the materials composing the reactor core [5].

In the next chapter, we will delve deeper into the study of this parameter and ultimately determine the equations that describe the behavior of a reactor.

4. Structure of a Nuclear Reactor

When designing a power reactor core, two key criteria must be satisfied. First, criticality must be sustained across the entire range of power levels and throughout the fuel depletion process. Second, the core must allow for efficient transfer of the thermal energy produced by fission reactions without causing overheating [5]. In this chapter, we will discuss neutron behavior and the influence of the reactor lattice on the multiplication factor.

4.1. Time Dependence of Neutron Flux

In the previous chapter, we examined neutron flux but disregarded its time dependence. To investigate this aspect, we will analyze two types of systems:

- Non-multiplicative systems: Systems without fissionable material.
- Multiplicative systems: Systems containing fissionable material.

To perform the necessary calculations, we must define the following variables:

- n(t): The total number of neutrons at a given time t.
- \bar{v} : The average velocity of neutrons.
- Σ_x : The macroscopic cross-section for a specific reaction x (e.g., absorption, scattering, or fission).

4.1.1. Infinite Multiplicative Media

In this initial approximation, we will account only for the effects of prompt neutrons and neutron leakage. Based on these assumptions, we can outline the factors contributing to the rate of change in the neutron population over time [5]:

 $\frac{d}{dt}n(t)=$ neutrons produced per second by the source $+ \mbox{ neutrons produced by fission}$ $- \mbox{ neutrons absorbed}$

To represent the neutrons introduced by an external source, we define the variable S(t), which describes the rate of neutron production by the source at time t [5]. In addition, let ν be the average number of neutrons, thus $\nu \Sigma_f \bar{v} n(t)$ is the number of fission neutrons produced per second. Finally, $\Sigma_a \bar{v} n(t)$ is the number of neutrons absorbed per second. With this we get the expression:

$$\frac{d}{dt}n(t) = S(t) + \nu \Sigma_f \bar{v}n(t) - \Sigma_a \bar{v}n(t)$$
(4-1)

It can be easily shown that the mean lifetime of a neutron, defined as the time between its production and absorption, is given by $l_{\infty} = \frac{1}{\bar{v}\Sigma_a}$. By using the definition of k_{∞} from Eq.(3-23), we obtain the following equation for the time dependence of the neutron population:

$$\frac{d}{dt}n(t) = S(t) + \frac{(k_{\infty} - 1)}{l_{\infty}}n(t) \tag{4-2}$$

If there is no external source and neutrons are produced solely through fission (S(t) = 0), the equation simplifies to:

$$\frac{d}{dt}n(t) = \frac{(k_{\infty} - 1)}{l_{\infty}}n(t)$$

This equation describes three possible behaviors for the neutron population, depending on the value of k_{∞} :

- k_{∞} < 1: The neutron population decreases exponentially, indicating a sub critical state.
- $k_{\infty} > 1$: The neutron population increases exponentially, corresponding to a supercritical state.
- $k_{\infty} = 1$: The neutron population remains constant, representing a critical state.

4.1.2. Finite Multiplicative Media

In real life nuclear reactors are finite, thus neutrons could escape through the borders of the reactor. This effect should be considered in the rate of change in the neutrons populations:

 $\frac{d}{dt}n(t)=$ neutrons produced per second by the source + neutrons produced by fission - neutrons absorbed - neutrons escaping the system

First, it is important to notice that the effect of the leakage of neutrons is proportional to neutrons population at a time t [5]. Define the coefficient Γ in a way that:

Neutrons escaping the system = $\Gamma \Sigma_a \bar{v} n(t)$

This leads to:

$$\frac{d}{dt}n(t) = S(t) + \nu \Sigma_f \bar{v}n(t) - \Sigma_a \bar{v}n(t) - \Gamma \Sigma_a \bar{v}n(t)$$
(4-3)

From the definition of Γ , we can deduce expressions for the leakage probability (P_L) and the non-leakage probability (P_{NL}) . The non-leakage probability corresponds to neutrons that remain inside the reactor and can induce new fissions. We define the leakage probability as:

$$P_L = \frac{\text{neutrons that escape}}{\text{neutrons produced}}$$

which gives the following expression [5]:

$$P_L = \frac{\Gamma \Sigma_a \bar{v} n}{\Sigma_a \bar{v} n + \Gamma \Sigma_a \bar{v} n} = \frac{\Gamma}{1 + \Gamma}$$

The non-leakage probability P_{NL} can be easily derived from the definition of P_L as:

$$P_{NL} = \frac{1}{1+\Gamma} \tag{4-4}$$

In the next section, we will explore the relationship between the size and shape of the reactor and the parameter Γ . For now, we can rewrite $\mathbf{Eq.}(4-3)$ in terms of P_{NL} as follows:

$$P_{NL}\frac{d}{dt}n(t) = P_{NL}S(t) + \frac{(P_{NL}k_{\infty} - 1)}{l_{\infty}}n(t)$$

By defining $k = k_{\infty} P_{NL}$ and $l = l_{\infty} P_{NL}$, and substituting these into the above equation, we obtain:

$$\frac{d}{dt}n(t) = S(t) + \frac{(k-1)}{l}n(t) \tag{4-5}$$

4.1.3. Delayed Neutron Kinetics

Around 99 % of fission neutrons are prompt neutrons, emitted at the moment of fission [5]. The remaining fraction, denoted by β , are delayed neutrons emitted through the decay of fission products. The nuclei that emit the delayed neutrons are divided in six groups based on their half-lives, which go from a fraction of a second to nearly a minute [5]. These groups are showed in the Table **4-1**.

We defined β as the sum of the delayed neutron fraction of each group, this is:

$$\beta = \sum_{i=1}^{6} \beta_i \tag{4-6}$$

Approximate Half-life (sec)	U^{233}	U^{235}	Pu ²³⁹
56	0.00023	0.00021	0.00007
23	0.00078	0.00142	0.00063
6.2	0.00064	0.00128	0.00044
2.3	0.00074	0.00257	0.00069
0.61	0.00014	0.00075	0.00018
0.23	0.00008	0.00027	0.00009
Total delayed fraction	0.00261	0.00650	0.00210
Total neutrons/fission	2.50	2.43	2.90

Table 4-1.: Delayed Neutron Fractions for Different Isotopes. From **Ref.** [5]

For instance, consider the half-life for the *i*th group, $t_{i1/2}$. Using these half-lives we can define the average half-life of the delayed neutrons by:

$$t_{1/2} = \frac{1}{\beta} \sum_{i=1}^{6} \beta_i t_{i1/2}$$

Since half-lives and decay constant are related by $t_{i1/2} = 0.693/\lambda_i$, it is possible to define the average decay constant by:

$$\frac{1}{\lambda} = \frac{1}{\beta} \sum_{i=1}^{6} \beta_i \frac{1}{\lambda_i} \tag{4-7}$$

Until now, the mean lifetimes l and l_{∞} have only included the contribution of prompt neutrons. To account for the contributions of delayed neutrons, denoted by l_d , we must derive an expression for their lifetime:

$$l_d = \underbrace{l}_{\text{Term 1}} + \underbrace{\frac{1}{\lambda}}_{\text{Term 2}} \tag{4-8}$$

The first term represents the time it takes for a delayed neutron to be absorbed or to escape, while the second term accounts for the time between the fission of the parent nucleus and the emission of the delayed neutrons through the decay of fission products.

Taking both, prompt and delayed neutrons, into account, the average neutron lifetime is defined as:

$$\bar{l} = (1 - \beta)l + \beta l_d = l + \frac{\beta}{\lambda} \tag{4-9}$$

It is clear that $\bar{l} >> l$. The presence of delayed neutrons significantly increases the mean neutron lifetime, leading to modifications to the equations for the rate of change in neutron population, such as equation (4-3), due to the substantial delays involved.

4.1.4. Kinetic Equations

To incorporate the effects of delayed neutrons into the neutron balance equation (4-3), we separate the contributions from prompt and delayed neutrons. Defining the fraction of delayed neutrons as β , the prompt neutrons are produced at a rate $(1 - \beta)\nu\Sigma_f \bar{v}n(t)$ [5]. The delayed neutrons, on the other hand, are produced by the decay of fission products. Let $C_i(t)$ represent the number of precursor nuclei producing neutrons with a half-life $t_{i1/2}$. Thus, the production rate of delayed neutrons is $\lambda_i C_i(t)$. The resulting expression for the neutron population balance is as follows:

$$\frac{d}{dt}n(t) = S(t) + (1 - \beta)\nu \Sigma_f \bar{v}n(t) + \sum_i \lambda_i C_i(t) - \Sigma_a \bar{v}n(t) - \Gamma \bar{v}n(t)$$
(4-10)

Since the concentration of the precursors is unknown, we require extra equations to determine their concentrations. We divided the delayed group in six subgroups we are going to have six different equations, each one with the form of a balance equation [5]:

 $\frac{d}{dt}C_i(t)$ = precursors produced per second – precursors decaying per second

The number of precursors produced per second is $\beta_i \nu \Sigma_f \bar{v} n(t)$ while the decay rate is $\lambda_i C_i(t)$. This leads to:

$$\frac{d}{dt}C_i(t) = \beta_i \nu \Sigma_f \bar{v}n(t) - \lambda_i C_i \qquad i = 1, 2, 3, ..., 6$$

$$(4-11)$$

Reactivity

The reactivity is defined:

$$\rho = \frac{k-1}{k} \tag{4-12}$$

The reactivity can have three possible conditions:

$$\rho = \begin{cases} > 0 & \text{(supercritical)} \\ = 0 & \text{(critical)} \\ < 0 & \text{(subcritical)} \end{cases}$$

Additionally, define the prompt generation time as $\Lambda=1/k$ with these definitions the kinetics equations (4-10) and (4-11) can be simplified as:

$$\frac{d}{dt}n(t) = S(t) + \frac{(\rho - \beta)}{\Lambda}n(t) + \sum_{i} \lambda_{i}C_{i}(t)$$
(4-13)

$$\frac{d}{dt}C_i(t) = \frac{\beta_i}{\Lambda}n(t) - \lambda_i C_i(t), \qquad i = 1, 2, \dots, 6$$
(4-14)

4.2. Spatial Diffusion of Neutrons

We have included the diffusion of neutrons by introducing the factor P_{NL} . However, a better understanding of the relation between P_{NL} and the shape and size of a nuclear reactor is necessary to understand how these parameters affects the reactivity.

4.2.1. Continuity Equation

Consider an arbitrary volume V, centered at $\vec{r} = (x, y, z)$, and establish a balance equation between the number of neutrons leaving and entering V [2]:

Neutrons leaking from V + Neutrons absorbed inside V =

Neutrons emitted by a source inside V

+ Neutrons produced by fission inside V

Neutron Leaking

Neutrons pass through the surface of the volume. To describe this, we define $\vec{J} = J(x, y, z)$ as the current density per cm^2 . If J_i represents the neutron current along the j-k plane, then:

Neutron leaking =
$$\sum_{i=x}^{z} \left[J_i \left(i + \frac{1}{2} di, \cdots \right) - J_i \left(i - \frac{1}{2} di, \cdots \right) \right] \frac{1}{di}$$

This can be expressed as:

Neutron leaking =
$$\int_{V} (\nabla \cdot \vec{J}) dV$$
 (4-15)

Neutrons Absorbed

The number of neutrons absorbed is given by $\Sigma_a \Phi$ [2], where Φ is the neutron flux defined as $\Phi = \bar{v}n'''$. Thus:

Neutrons absorbed =
$$\int_{V} \Sigma_a \Phi \, dV$$
 (4-16)

Here, n''' is averaged over all energy ranges: $\bar{n'''} = \int_0^\infty n'''(E) dE$. Additionally, $\Phi = \Phi(E, \vec{r})$ can be expressed as $\phi(\vec{r}) = \int_0^\infty \phi(E, \vec{r}) dE$ with this change the flux depends on \vec{r} [2].

Neutrons Produced by a Source

Let $S'''(\vec{r})$ represent the number of neutrons produced by a source per second per unit volume. The total number of neutrons produced inside V is:

Neutrons produced by a source =
$$\int_{V} S''' dV$$
 (4-17)

Neutrons Produced by Fission

The total number of neutrons produced by fission inside V is given by:

Neutrons produced by fission =
$$\int_{V} \nu \Sigma_{f} \Phi \, dV$$
 (4-18)

Balance Equation

Since all the terms introduced are integrated over the same volume, the integral over volume can be removed. In a stationary state, where the neutron population remains constant over time $(\partial n/\partial t = 0)$, the continuity equation becomes:

$$\nabla \cdot \vec{J} + \Sigma_a(\vec{r})\phi(\vec{r}) = S'''(\vec{r}) + \nu \Sigma_f(\vec{r})\phi(\vec{r})$$
(4-19)

However, in the equation we got two unknowns variables, \vec{J} and ϕ , this forces us to express $\nabla \cdot \vec{J}$ in terms of ϕ . In order to solve this situation, we will use the diffusion approximation and the Fick's Law [2].

4.2.2. Diffusion approximation

Fick's law is the start point of diffusion theory [2]. Fick's law states that if the concentration of a solute is grater in one region of a solution than in another, the solute diffuses from the region of higher concentration to the region of lower concentration. Moreover, the rate of solute flow is proportional to the negative of the gradient of the solute concentration [2]. A

good approximation is to assume that neutrons inside a reactor behave mostly as a solute in a solution, this is:

$$\vec{J} = -D(\vec{r})\nabla\phi \tag{4-20}$$

Where D denotes the diffusion coefficient. In an approximation, $D(\vec{r}) = 1/3\Sigma_{tr}$, where Σ_{tr} is the transport cross sections, defined as $\Sigma_{tr} = \Sigma_t - \bar{\mu}\Sigma_s$, where $\bar{\mu}$ is the average scattering angle. For isotropic scattering, $\bar{\mu} = 0$. This reduces the transport cross section to the total cross section Σ_t [5].

Using Fick's law in $\mathbf{Eq.}(4-19)$ one gets the neutron diffusion equation [5]:

$$-\nabla \cdot D(\vec{r})\nabla\phi + \Sigma_a(\vec{r})\phi(\vec{r}) = S'''(\vec{r}) + \nu\Sigma_f(\vec{r})\phi(\vec{r})$$
(4-21)

4.2.3. Boundary Conditions

It is easy to notice that the diffusion equation is a second order equation. This means that, for example, in one dimensional problems, two arbitrary constants are part of the solution. In order to know the value of these constants two boundary conditions must be known. An easy way to determinate these conditions is to use what is known as partial currents [5]. To understand the partial currents, let $J_x(x)$ be the net number of neutrons crossing the plane y-z per second per cm^2 . Now we factorize $J_x(x)$ in two different contributions: $J_x^+(x)$ and $J_x^-(x)$ traveling in the positive and negative x directions, respectively [5]. Then:

$$J_x = J_x^+(x) - J_x^-(x)$$

It can be shown that in the diffusion approximation:

$$J_x^{\pm}(x) = \frac{1}{4}\phi(x) \pm \frac{1}{2}J_x(x)$$

Employing Eq.(4-20) the equation yields:

$$J_x^{\pm}(x) = \frac{1}{4}\phi(x) \pm \frac{1}{2}D(r)\frac{d}{dx}\phi(x)$$

We can define the boundaries of this surface as x_r and x_l . In this case we, imagine a surface that does not allow any neutrons to enter, which could occur if a vacuum extends infinitely without any neutron sources. This scenario is known as a vacuum boundary condition. If the boundary is located at x_l , the neutron current condition can be expressed as $J_x^+(x_l) = 0$.

Conversely, for a boundary at x_r , the condition would be $J_x^-(x_r) = 0$. Using the definition

of the partial current, we can write the condition for the right boundary as:

$$0 = \frac{1}{4}\phi(x_r) - \frac{1}{2}D\left|\frac{d}{dx}\phi(x)\right|_{x=0}$$

Furthermore, in the context of isotropic scattering, the diffusion coefficient is defined as $D = \frac{1}{3\Sigma_t}$, while the mean free path λ is given by $\lambda = \frac{1}{\Sigma_t}$. This allows us to reformulate the vacuum boundary condition as:

$$\frac{\phi(x_r)}{\left|\frac{d}{dx}\phi(x)\right|_{x_r}} = \frac{2}{3}\lambda$$

Let $d = \frac{2}{3}\lambda \approx 0.66\lambda$. Frequently, when vacuum boundaries are encountered, the most straightforward approach is to apply the zero-flux condition and adjust the dimensions accordingly. This is expressed as $\phi(x_r + d) = 0$ and $\phi(x_l + d) = 0$. We refer to these conditions as the extrapolated boundaries, denoted by \tilde{x}_r and \tilde{x}_l .

A more accurate approach, based on transport theory, yields a value of $d_{tr} = 0.7104\lambda$. This concept is illustrated in **Fig 4-1**.

4.3. Non-Leakage Probability

Finally, to determinate the non-leakage probability lets consider a multiplicative $(\nu \Sigma_f > 0)$ and uniform system, which means that the source $S'''(r) = S'''_0$, $D(\vec{r}) = D = cte$ and all

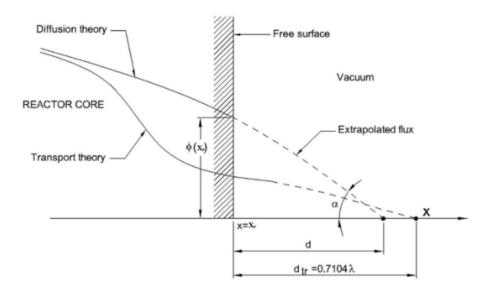


Figure 4-1.: Extrapolated boundary conditions. From Ref. [12]

cross section are space-independent constants. Additionally, let $L = \sqrt{D/\Sigma_a}$ and take k_{∞} as defined in Eq.(3-24). Including all of these in the diffusion equation (4-21) we get:

$$-\nabla^2 \phi(\vec{r}) + \frac{1}{L^2} \phi(\vec{r}) = \frac{1}{D} s_0''' + \frac{1}{L^2} k_\infty \phi(\vec{r})$$
 (4-22)

4.3.1. Spherical Geometry

In spherical geometry, the Laplacian ∇^2 is replaced by:

$$-\frac{1}{r^2}\frac{d}{dr}\left(r^2\frac{d\phi}{dr}\right) + \frac{1}{L^2}(1 - k_{\infty})\phi = \frac{1}{D}S_0'''$$

The solution to this equation is a superposition of the general and particular solutions, $\phi(r) = \phi_g(r) + \phi_p(r)$. Assuming a uniform source, we have $\phi_p(r) = \text{const} = \frac{S_0'''}{(1-k_\infty)\Sigma_a}$ [5]. For the general solution, consider the case where $k_\infty < 1$. The equation becomes:

$$\frac{1}{r^2}\frac{d}{dr}\left(r^2\frac{d\phi_g}{dr}\right) - \frac{1}{L^2}(1-k_\infty)\phi_g = 0$$

Applying the previously discussed boundary conditions, the solution is:

$$\phi(r) = \frac{S_0'''}{(1 - k_\infty)\Sigma_a} \left[1 - \frac{\tilde{R}\sinh(\kappa r)}{r\sinh(\kappa \tilde{R})} \right]$$

where $\kappa = \frac{1}{L}\sqrt{1 - k_{\infty}}$ and $\tilde{R} = R + \frac{2}{3}\lambda$, representing the extrapolated boundary conditions. Now consider the supercritical case $k_{\infty} > 1$, where the particular solution is:

$$\phi_p = -\frac{S_0'''}{(k_\infty - 1)\Sigma_a}$$

Solving the general equation and applying the boundary conditions, the solution is:

$$\phi(r) = \frac{S_0'''}{(k_\infty - 1)\Sigma_a} \left[\frac{\tilde{R}\sin(Br)}{r\sin(B\tilde{R})} - 1 \right]$$

where $B = \frac{1}{L}\sqrt{k_{\infty} - 1}$.

Criticality Condition

In the supercritical solution, consider the limit $B\tilde{R} \to \pi$ then $\phi_p \to \infty$, implying that the sphere becomes critical [5]. The condition for criticality is then:

$$\frac{1}{L}\sqrt{k_{\infty}-1}\tilde{R}=\pi$$

Solving for k_{∞} gives:

$$k_{\infty} = 1 + \frac{\pi^2 L^2}{\tilde{R}^2}$$

For a finite reactor, the criticality condition is $k = P_{NL}k_{\infty} = 1$. Thus, for the critical sphere, the non-leakage probability is:

$$P_{NL} = \frac{1}{1 + \left(\frac{\pi L}{\tilde{R}}\right)^2} \tag{4-23}$$

Now lets define two new variables. First, the material buckling defined as $B_m = \frac{1}{L}\sqrt{k_{\infty-1}}$ and secondly the geometrical buckling $B_g = \pi/\tilde{R}$. With this the criticality condition can be expressed as:

$$B_m = B_q$$

4.3.2. Time-Independent Diffusion Equation

If we set the source to be zero, then the steady diffusion equation (4-21) becomes:

$$\nabla \cdot D(\vec{r}) \nabla \phi(\vec{r}) + \nu \Sigma_f \phi(\vec{r}) - \Sigma_a \phi(\vec{r}) = 0$$
(4-24)

In this equation, ϕ tends to zero if the reactor is subcritical. Conversely, if the reactor is in a supercritical state, ϕ tends to infinity. In either case, the kinetic equations (4-10) and (4-11) are necessary to describe the system's behavior [5]. The challenge is to determine the critical state by varying the reactor's geometry or its material composition [5].

To compute this, we apply the following approach: suppose it is possible to adjust the average number of neutrons produced per fission (ν) by a factor ν_0/ν , where ν_0 is the number of neutrons per fission required to bring the reactor to a critical state [5]. Since $k \sim \nu$, we have $\nu_0/\nu = 1/k$ [5]. Thus, the time-independent diffusion equation (4-24) can be rewritten as:

$$\nabla \cdot D(\vec{r}) \nabla \phi(\vec{r}) + \frac{1}{k} \nu \Sigma_f \phi(\vec{r}) - \Sigma_a \phi(\vec{r}) = 0$$
(4-25)

It is easy to see that if $\nu_0 > \nu$, then the reactor is subcritical. On the other hand, if $\nu_0 < \nu$, the reactor is supercritical. By incorporating this adjustment into the diffusion equation and solving for k, we transform the problem into finding how far a given configuration (defined by the reactor core's dimensions and cross-sections) is from criticality.

This can be framed as an eigenvalue problem, where k is the eigenvalue and ϕ is the eigenfunction. Typically, these problems have an infinite set of solutions. However, by applying the boundary conditions and focusing on physically meaningful solutions, those in which the

neutron flux is positive everywhere within the reactor, we narrow the problem to the relevant solution. This solution corresponds to the largest eigenvalue, the corresponding eigenfuntion ϕ is referred as the fundamental mode solution.

Uniform Reactors

Now suppose that the reactor is uniform, which implies that D is constant. Using the same definitions for k_{∞} and L^2 as in equation (4-22), the diffusion equation (4-25) can be written as:

$$\nabla^2 \phi + \frac{k_{\infty}/k - 1}{L^2} \phi = 0$$

Since the term multiplying ϕ is constant, we define $B^2 = \frac{k_{\infty}/k-1}{L^2}$. From this equation, it can be shown that the non-leakage probability P_{NL} is:

$$P_{NL} = \frac{1}{1 + (LB)^2}$$

Here, B is referred to as the geometric buckling, or simply the buckling [5]. To determine the buckling, we must solve the following equation, which is the Helmholtz equation:

$$\nabla^2 \phi + B^2 \phi = 0 \tag{4-26}$$

The solution must satisfy the condition $0 < \phi < \infty$ within the reactor, as well as the boundary conditions at the reactor's surfaces [5].

4.3.3. Cylindrical Reactor

Given a cylindrical reactor with an extrapolated radius $\tilde{R} = R + \frac{2}{3}\lambda$ and height $\tilde{H} = H + \frac{4}{3}\lambda$, we now examine the buckling. Replacing ∇^2 in equation (4-26) with its form in cylindrical coordinates gives:

$$\frac{1}{r}\frac{\partial}{\partial r}\left(r\frac{d\phi}{dr}\right) + \frac{\partial^2}{\partial z^2}\phi + B^2\phi = 0$$

This equation corresponds to a partial differential equation that can be solved by separating variables. Assuming the solution takes the form $\phi(r, z) = \psi(r)\chi(z)$, substituting and dividing by ϕ yields:

$$\frac{1}{\psi}\frac{d}{dr}\left(r\frac{d\psi}{dr}\right) + \frac{1}{\chi}\frac{d^2\chi}{dz^2} + B^2 = 0$$

Since B^2 is a constant, the first term depends only on r, and the second term depends only on z, meaning each term must equal a constant for the equation to have a solution. Thus, we assume that the total buckling can be written as $B_r^2 + B_z^2 = B^2$. These constants must satisfy the following differential equations:

$$\frac{d}{dr}\left(r\frac{d\psi}{dr}\right) + B_r^2\psi = 0$$
$$\frac{d^2\chi}{dz^2} + B_z^2\chi = 0$$

Solving these equations gives the expressions $B_z = \pi/\tilde{H}$ and $B_r = 2.405/\tilde{R}$. Thus, the total buckling is:

$$B^2 = \left(\frac{2.405}{\tilde{R}}\right)^2 + \left(\frac{\pi}{\tilde{H}}\right)^2 \tag{4-27}$$

Although spherical reactors are the most efficient due to their higher non-leakage probability (P_{NL}) , they represent significant technical challenges, such as structural complexity and cooling issues [8]. This is why most commercial reactors have cylindrical geometry.

In the next chapter, we will explore the different fuels used in reactors, examining how they are managed before, during, and after reactor operation.

5. Nuclear Fuel Cycles

Now we will examine the life cycle of the materials used as fuel in nuclear reactors. The fuel cycle spans from the mining of the ore to the fabrication of the fuel, its irradiation in the reactor, and the subsequent processing of the spent nuclear fuel [13]. The nuclear fuel cycle can vary depending on several factors, such as:

- The fissile nuclei being used for energy generation, such as any of the isotopes mentioned in **Section** 2.3.
- The form in which the fuel is used.
- The type of reactor in which the fuel is deployed.

The nuclear fuel cycle begins with uranium mining and ends with the disposal of nuclear waste [13], although some steps may not apply to every fuel cycle.

5.1. Frontend of Fuel Cycle

The steps involving mining, milling, conversion, enrichment, and fuel fabrication correspond to the "frontend" of the nuclear fuel cycle. Uranium-rich minerals are radioactive primarily due to the daughter products derived from radioactive decays of uranium. In 2019, global uranium production was approximately 54,750 tons, with most of the mined uranium being used as fuel for nuclear power plants [13].

Uranium recovery is achieved through extraction from ores, followed by concentration and purification. This process involves both excavation and in-situ leaching (ISL). Typically, open-pit mining is used for deposits near the surface, while underground mining is applied

for deeper deposits [13]. The mined uranium ore is then processed by grinding, followed by uranium leaching using either alkaline or acidic methods. The milling process yields "yellowcake", which contains uranium in the form of U_3O_8 , with a uranium content greater than 80 % [13].

Approximately 200 tons of U_3O_8 are required to fuel a 1000 MWe nuclear power reactor for one year. The U_3O_8 produced from the uranium mill is further enriched to increase the U^{235} content from 0.72% to between 3% and 5%, which is required for light water reactors. The enrichment process involves converting uranium into uranium hexafluoride (UF_6), which is solid at room temperature but sublimates at 56.5°C, allowing it to be used in isotope separation [13].

The primary method used for isotope enrichment today is centrifugation, where thousands of rapidly spinning vertical tubes exploit the small mass difference between the uranium isotope hexafluorides, leading to their separation [13].

However, the UF_6 is not suitable to be used as fuel in a nuclear reactor, hence it must be converted into ceramic pellets of UO_2 sintered at temperatures over the 1400°C. Other pellets composed by a mixed of U, Pu oxide (MOX) are also fabricated [13]. Currently, conventional Uranium Oxide (UOX) fuel have an additive less than 10% of thorium. This increases the thermal distribution by reducing the need of burnable poison isotopes in the reactor [14].

5.2. Backend of Fuel Cycle

The processes that occur after the discharge of irradiated fuel from the reactor, such as the temporary storage of spent fuel, reprocessing, and waste management, are collectively known as the "backend" of the nuclear fuel cycle. The energy released by fission extracted from the fuel is known as the "burn-up" [13].

The burn-up of nuclear fuel is defined as the energy produced per unit mass of fuel and is related to the inventory of fission products present in the fuel. It affects both physical and material properties and is an important parameter for the design and operation of power reactors from a safety point of view. Different units of burn-up include megawatt-days per ton of heavy metal (MWd/THM), atom percent (atom %), and fissions per cubic centimeter (fissions/cc) [13].

The calculation of burn-up is commonly defined by comparing the number of fissioned atoms to the number of heavy metal (HM) atoms present before irradiation in a given fuel. This widely adopted definition provides a clear metric for assessing the extent of fuel utilization [13]:

$$BU(\text{atom\%}) = \frac{\text{number of fissioned atoms}}{\text{pre-irradiation number of HM atoms}} \times 100$$

The most commonly used metric for fuel burn-up is the amount of fission energy produced per unit mass of fuel. This is expressed as the total energy released, measured in megawatt-days, divided by the initial mass of fuel, including both fissile and fertile materials, and is referred to as megawatt-days per ton (MWd/T) [15]. Since natural uranium contains only 0.72% of the fissile isotope ^{235}U , the burn-up of fuel based on natural uranium is expected to be below 0.72 atom %. However, due to the breeding of ^{239}Pu from neutron absorption in ^{238}U , burn-up can achieve values of up to 1 atom % (10,000 MWd/T) [13].

In typical pressurized heavy water reactors (PHWRs), the burn-up level is around $7000 \, MWd/T$. For light water reactors (LWRs) using enriched uranium, burn-up levels can reach 6–7 atom %, while in fast reactors, burn-up can exceed $10 \, \text{atom}$ %, with some cases achieving burn-up as high as $20 \, \text{atom}$ % [13].

However, fuel burn-up is limited by the accumulation of fission products and actinides, which absorb neutrons and negatively impact neutron economy, leading to a decrease in the reactor's efficiency. This necessitates the removal of the fuel from the reactor. Nevertheless, a typical fuel based on low enrichment uranium (LEU) still contains 96% of its original uranium content, approximately 1% of plutonium, and 3% of fission products and minor actinides [13]. Thus, regardless of the type of fuel or reactor, the irradiated fuel remains a valuable source of fissile materials. Even if the uranium is depleted in terms of its fissile content, it can still be used to prepare fuel for a fast reactor by adding plutonium. Therefore, the fuel discharged from a nuclear reactor, although commonly referred to as "spent fuel", is not truly "spent" as it still contains fissionable materials [13].

5.2.1. Reprocessing

Methods for reprocessing discharged fuel have been developed and used either at the research stage or commercial scale for uranium and thorium based fuels. Some methods are [14]:

- Pyrometallurgy: This method uses heat to initiate the separation of metals from their minerals.
- Electrometallurgy: Also known as pyroprocessing; this technique employs electricity to initiate the separation of metals. However, it is still in the research stage [14].
- Hydrometallurgy: This method involves the use of an aqueous solution to dissolve the metal content. In the case of uranium and plutonium extraction, hydrometallurgy uses a solution containing 30% tri-n-butyl phosphate (TBP) in an aliphatic hydrocarbon diluent, such as kerosene or a mixture of normal paraffinic hydrocarbons, to preferentially extract U and Pu. Popularly known as PUREX (Plutonium Uranium Redox EXtraction) [13].

5.2.2. Waste Management

Radioactive waste management is a crucial aspect of the nuclear energy program. The common strategy for managing radioactive waste involves vitrification, where solid waste oxides are encapsulated in borosilicate glass blocks. These glass blocks are then buried in deep geological repositories (DGRs). However, this disposal method requires long-term surveillance due to the very long half-lives of minor actinides (such as neptunium, americium, and curium) and some fission products, making the waste management program highly expensive [13].

The decay of buried radionuclides takes millions of years, and it takes a significant amount of time for the radiotoxicity of long-lived radionuclides present in the waste blocks to reduce to a level comparable to that of natural uranium[13]. To address these challenges, processes for partitioning minor actinides, which means separating elements such as neptunium (Np), americium (Am), and curium (Cm) from the spent fuel, as well as fission products, have

been developed. These processes aim to reduce the average exposure to operating personnel and can be followed by the transmutation of long-lived radionuclides in fast reactors or accelerator-driven sub-critical systems (ADS) [13].

The strategy of "Actinide Partitioning" combined with other emerging strategies such as "lanthanide-actinide separation" and "Am-Cm separation" offers additional benefits, including the recovery of valuable materials like americium (Am) and curium (Cm) [13].

Actinides are a series of heavy elements in the periodic table, ranging from actinium (Ac) to lawrencium (Lr). They include important nuclear materials such as uranium (U) and plutonium (Pu), as well as minor actinides like neptunium (Np), americium (Am), and curium (Cm). Minor actinides are those actinides that are present in spent nuclear fuel (SNF) in smaller quantities compared to uranium and plutonium.

Lanthanides, on the other hand, are a group of 15 metallic elements from lanthanum (La) to lutetium (Lu) in the periodic table. They are chemically similar to actinides and often found together in SNF, making their separation a challenging but necessary process for effective nuclear waste management.

In the long term, the "Partitioning & Transmutation" (P&T) strategy effectively addresses concerns about radioactive waste management. This strategy involves separating long-lived radionuclides, such as minor actinides, from the waste and transmuting them into shorter-lived or stable isotopes. By doing so, P&T provides a potential solution for reducing the radiotoxicity and heat load of long-lived radionuclides, thereby improving the safety and sustainability of nuclear waste disposal [13].

5.3. Fuel Cycles

The nuclear fuel cycle can be classified into two main categories: open and closed fuel cycles. The open fuel cycle, also known as the "once-through" fuel cycle, is characterized by the use of nuclear fuel without reprocessing. In this cycle, the fuel is used until it is no longer economically viable to extract energy from it, after which it is disposed of as waste [13].

5.3 Fuel Cycles 67

5.3.1. Open Fuel Cycle

The open fuel cycle is the simplest and most common fuel cycle used in commercial nuclear power plants. In this cycle, the fuel is used in the reactor only once, then discharged and stored in interim storage facility where it is kept until most of the short-lived material has decayed. The spent fuel is stored in a DGR for long-term disposal. The open fuel cycle is used in the USA, UK and South Africa [13].

Twice-Through Fuel Cycle

This cycle reprocess the spent fuel to recover uranium and plutonium for reuse in the reactor. MOX is fabricated from the reprocessed fuel and then used in the reactor for a second time before being disposed of in a DGR similar to the "once-through" cycle [13]. The major reason for recycling of the spent nuclear fuel (SNF) in the case of the "twice-through" nuclear fuel cycle (NFC) is due to the fact that the SNF still contains approximately 96% of the reusable material (U and Pu) and, hence, is still considered as an energy source due to its appreciable fissile material content. Additional cycles in a thermal reactor are not practical due to degradation of the isotopic composition of Pu [13].

As compared to the "once-through" NFC, in which the SNF is stored after use and buried in DGRs following the vitrification process, the "twice-through" NFC can utilize 17% more natural uranium by the MOX fuel option, which can largely reduce the heavy enrichment costs [13].

5.3.2. Closed Fuel Cycle

The objective of the closed fuel cycle is a more efficient utilization of fissile materials and the reduction of long-lived radioactive waste. The closed fuel cycle requires the development of advance technologies for reprocessing to achieve a sustainable NFC [13].

Closed Fuel Cycle without MA Recovery

In a closed fuel cycle with minor actinide and fission product recovery, uranium and plutonium are extracted from the irradiated fuel. The separated plutonium can be reused in thermal or fast reactors, while the depleted uranium can be utilized in MOX fuels for both types of reactors. This approach was initially implemented by countries with limited uranium reserves, aiming to recover and utilize the depleted uranium and plutonium from the discharge fuel [13].

Closed Fuel Cycle with MA Recovery

The recovery of minor actinides often involves the simultaneous recovery of lanthanides due to their chemical properties' similarity. These recovered minor actinides can then be burned in ADSs or fast reactors. In this context, the separation of lanthanides from actinides, followed by the separation of americium from curium, has become an important step for the effective transmutation of long-lived actinides. It is essential, however, that the recovery of radiotoxic minor actinides be nearly 100 % effective in order to simplify waste immobilization and ensure the remnant waste qualifies as "non-alpha" waste for disposal in DGRs [13].

Closed Fuel Cycle with MA and Fission Product Recovery

Fission products constitute about 0.6% of the irradiated fuel, with long-lived fission products making up only around 0.04%. Although they are present in small quantities, the main source of radioactivity in high level liquid waste (HLLW) comes from highly radioactive fission nuclides like ^{137}Cs and ^{90}Sr , which are responsible for the majority of the radiation dose.

Other radionuclides, such as ^{106}Ru with moderate activity, and long-lived fission products like ^{99}Tc , ^{93}Zr , ^{135}Cs , ^{129}I , and ^{107}Pd , also contribute to the overall radioactivity [13].

Some of these fission products, such as ^{90}Y are useful in nuclear medicine. This has led to efforts to separate these radionuclides from HLLW before vitrification. In addition, long-lived fission products can be transmuted into shorter-lived ones to reduce the time required for monitoring vitrified waste. In India, the current strategy involves separating fission products prior to the actinide partitioning step [13].

Next chapter will delve into the thorium fuel cycle and its potential advantages over the uranium fuel cycle, as well as drawbacks and challenges associated with its implementation.

5.3 Fuel Cycles 69

Additionally, it will explore a promising prospect for the fourth generation of nuclear reactors, the molten salt reactor (MSR), which is well-suited for the thorium fuel cycle.

6. Thorium Fuel Cycle

Thorium based nuclear fuel have been of interest from 1950 to 1970 [14]. This led to the development of multiple experimental reactors that could operate with thorium based fuel [3]. In the 1950, thorium was of special interest due to its higher abundance compared to uranium, being three times more abounded than uranium [3], [14]. Recently, there is a renewed interest in thorium fuel cycle to generate electricity at commercial scale. This renewed interest can be attributed to the multiple factors, some of which are the generation IV reactors based on thorium based nuclear fuel, China and USA research project on thorium utilization for molten salt reactors and the new Atomic Act on Peaceful Utilization of Nuclear Energy and Ionizing Radiation published as Act No. 253/2016 Coll effective since 2017 [14]. The thorium fuel cycle is based on the use of ^{232}Th as fertile material, which is converted into fissile ^{233}U by neutron capture and beta decay. This implies that an additional step of converting the fertile isotope into the fissile material is required. The subsequent use of ^{233}U as fuel is possible in two ways. The first option is an open fuel cycle, based of the breading of ^{233}U and in situ fission of this isotope, this would not involve chemical separation of ^{233}U from the irradiated fuel [16]. The second option is a closed fuel cycle, where the irradiated fuel is reprocessed to separate the fissile material from the rest of the irradiated fuel, this fissile material is then used to fabricate new fuel elements [16].

6.1. Considerations for the Thorium Fuel Cycle

The chemical properties of thorium make thorium dioxide more stable and has higher radiation resistance than uranium dioxide [16]. ThO_2 has higher thermal conductivity and lower coefficient of thermal expansion compared to UO_2 , this might make ThO_2 based fuels to have a better in-pile perform [16]. Furthermore, ThO_2 is considered inert and does not oxidize unlike UO_2 , making long term storage of irradiated fuel easier [16].

The thorium fuel cycle has a higher conversion ratio in thermal reactors compared to the uranium fuel cycle, this is due to the fact that ^{232}Th has a higher neutron capture cross section compared to ^{238}U with thermal neutrons [16]. Additionally, the fraction of neutrons liberated per neutron absorbed (η) is greater than 2.0 over a wide range of thermal neutron, unlike ^{235}U and ^{239}Pu . Making $^{232}Th-^{233}U$ operational with fast or thermal spectra. Unlike $^{238}U-^{239}Pu$ which a breading chain reaction can only be obtained with fast neutrons [16]. Finally, the thorium fuel cycle has "intrinsic proliferation resistance" [16]. This is because of the formation of ^{232}U via neutron multiplication reactions (n, 2n) with $^{232}Th, ^{233}Pa$ and $^{233}U.$ ^{232}U has physical properties, such as a very short half-life $(t_{1/2} = 68.90 \, \text{years})$ and the emission of strong gamma radiation by its decay products [10], [16]. This makes the thorium fuel cycle less attractive for the production of nuclear weapons [16].

6.2. Thorium Front End

All thorium isotopes have short half-lives, except ^{232}Th which has a half-life of $t_{1/2} = 1.405 \times 10^{10}$ years [10], making all the natural thorium available on earth constituted by ^{232}Th . Generally, Natural thorium is presented in association with other elements, such as rare earths elements and uranium in diverse rocks types such as veins of thorite, thorianite, uranothorite and monazite in granite and other acidic intrusions [16].

The global thorium reserves to 2013 are estimated to be around 6.24 million tons. India has the largest thorium reserves, with approximately 846,000 tons, followed by Brazil with 632,000 tons and the United States with 595,000 tons [14].

Thorium reserves in Colombia are associated mainly with igneous rocks, such as granite and pegmatites, and can also be found in placers, especially in alluvial deposits [17]. The concentration of thorium in the country varies significantly depending on the geological formation, with values ranging between 0.1 and 585 mg/kg in sediments. The highest concentrations are observed in areas with granitic formations, such as the Sierra Nevada de Santa Marta and parts of the Andean region, which are known for their igneous and metamorphic rocks

[17].

The mining and extraction of thorium from monazite is relatively straightforward and differs significantly from the extraction of uranium from its ores. Most commercially exploited monazite comes from beach or river sands, often alongside other heavy minerals. Compared to uranium mining, thorium extraction involves much less overburden, and the radioactive waste produced is approximately two orders of magnitude lower. The so-called radon impact is also considerably smaller for thorium mining, due to the shorter half-life of thoron (^{220}Rn) compared to radon (^{222}Rn), leading to simpler tailings' management [16], [18].

The monazite is finely ground and dissolved in concentrated sodium hydroxide at around $140^{\circ}C$, followed by a series of chemical processes, including solvent extraction and ion exchange, to yield pure thorium nitrate. This is then precipitated as thorium oxalate and calcined to obtain ThO_2 powder. Thorium recovery projects typically separate thorium in pure oxalate form, which is easier to handle and store for future applications, such as preparing mantle-grade thorium nitrate or nuclear-grade thorium oxide. Uranium present in monazite is also separated in the form of crude uranium concentrate during the process [16].

6.3. Thorium Open Fuel Cycle

An open fuel cycle avoids the complex engineering requirements associated with reprocessing irradiated fuel and fabricating highly radiotoxic ^{233}U -based fuels. The core layout is designed such that each fuel assembly comprises a "seed" material, typically medium-enriched uranium or plutonium, and "blanket" material of thorium [16]. Separation of seed and blanket, optimization moderator to fuel ratio and long periods of fuel usage offer the possibility that around 40 % of the power generated by fission comes from ^{233}U [16].

This scheme is very attractive for an introduction if thorium in nuclear power reactors because of the direct utilization of ^{233}U , avoiding the need of reprocessing and fabrication of new fuel elements with ^{233}U [16]. Furthermore, the once-through thorium fuel cycle opens the possibility of incineration if weapons-grade plutonium in light water reactors [16]. To achieve this, thorium oxide containing 5% of PuO_2 , could be used as driver fuel. The

exclusion of uranium from the fuel composition results in an increase in the rate of plutonium incineration compared to standard MOX fuel [16].

Similarly, civil plutonium could be burned in a thorium fuel cycle by using the same combination of thorium oxide and plutonium oxide [16]. Since, ^{240}Pu is present is significant quantities in civil grade plutonium, and it is a good burnable absorbed, then there is no need for use burnable absorber in the form of gadolinium, integrated into the fuel [16]. Plutonium oxide fuel without major modification in the reactor core could be a direct replacement for LEU oxide fuel [16].

6.4. Thorium Closed Fuel Cycle

The closed fuel cycle for thorium-based fuels includes essential steps such as reprocessing irradiated fuel and separating converted ^{233}U . In some reactor designs, like LWRs, mixed thorium-plutonium oxide fuel is used to facilitate the conversion of ^{232}Th to ^{233}U . However, an important consideration in recycling ^{233}U is the presence of ^{232}U , which introduces radiological challenges due to its strong gamma emissions [16].

Various countries have implemented closed thorium fuel cycles. In Russia, fast breeder reactors like the BN-800 have been studied for their capability to achieve self-sufficiency in the $^{232}Th-^{233}U$ cycle with a breeding ratio close to or exceeding 1.0. France has also explored similar concepts in reactor types such as high-temperature gas-cooled reactors (HTGRs) and HWRs, finding that these reactors can approach a breeding ratio of 1.0, though not exceed it [16].

India has adopted a strategic three-stage nuclear program to maximize its vast thorium reserves. The first stage, utilizing PHWRs, employs ThO₂ assemblies to flatten neutron flux. The second stage, using liquid metal-cooled fast breeder reactors (LMFBRs), incorporates ThO₂ blankets to produce ^{233}U . Finally, the third stage involves advanced thermal reactors that are self-sustaining in $^{232}Th - ^{233}U$ fuels, like the Advanced Heavy Water Reactor (AHWR) designed by Bhabha Atomic Research Center (BARC). This multistage program enables India to establish a sustainable thorium cycle by gradually transitioning to a thorium-based closed fuel cycle [16].

6.4.1. Reprocessing

The THOREX (Thorium-uranium EXtraction) process is the primary method proposed for reprocessing thorium-based fuels. Developed at Oak Ridge National Laboratory in the 1950s, THOREX uses solvent extraction with tributyl phosphate (TBP) to separate uranium and thorium from fission products. This process builds on the success of TBP in the PUREX process, making it a natural choice for thorium fuel reprocessing. The THOREX process has mainly been implemented at laboratory or pilot scales in a few countries. For example, India established a facility at BARC in 1970 to reprocess thorium irradiated in the CIRUS reactor (Canada India Reactor Utility Services), successfully achieving high-purity ^{233}U with minimal ^{232}U contamination [13], [16].

The objective of the THOREX process is to separate and purify ^{232}Th , ^{233}U , and ^{233}Pa from irradiated thorium fuel, effectively minimizing impurities and contaminants. Despite its technical feasibility, the process has yet to reach the commercial maturity of PUREX, primarily due to engineering challenges such as solvent handling and multiple purification stages. Current research has led to the development of three primary THOREX flowsheets: Interim 23, THOREX-1, and THOREX-2, each offering distinct methods for optimizing separation and improving the efficiency of thorium fuel reprocessing [13].

Interim 23

Developed to recover ^{233}U from irradiated thorium fuel, the Interim 23 process uses 1.5% TBP in solutions of irradiated thoria (ThO_2) . In this process, silica gel is applied to remove protactinium (Pa), while Dowex 50 exchange resin is used to concentrate the final product. The process achieves a thorium separation factor of over 10^5 with an overall loss of approximately 0.5%. Additionally, solvent extraction provides a fission product separation factor of greater than 10^5 , which improves to 10^7 after the silica gel and concentration steps [13].

THOREX-1

The THOREX-1 process was developed with the aim of separating ^{233}Pa , ^{233}U , and ^{232}Th from irradiated thorium fuel. The process involved multiple stages: diisobutyl carbitol was

used specifically for the separation of ^{233}Pa , ^{233}U extraction was performed with 5% TBP, and ^{232}Th extraction required a higher concentration of 45% TBP. Although the THOREX-1 process achieved adequate decontamination of the products, it encountered significant engineering challenges. These included the complexity of handling different solvents, separate chemical treatments for solvent purification, and managing hot solutions across various processing stages [13].

THOREX-2

An alternative TBP-based process for separating ^{233}U and thorium from irradiated thorium fuel has been developed. This method uses a single TBP solvent system with concentrations between 41 % and 55 % for the initial separation of thorium and uranium. The process begins under slightly acidic conditions, intentionally kept low to minimize the extraction of protactinium and fission products while avoiding thorium precipitation. To ensure Pa remains in the high-active waste stream, an aluminum nitrate scrub solution is added, maintaining a mildly acidic environment. Separation of thorium from uranium is achieved through selective stripping with dilute nitric acid, and ^{233}U is removed using a very low-concentration nitric acid solution [13].

Careful regulation of flow rates is necessary to prevent third-phase formation, which can complicate thorium separation. This approach avoids the need for benzene as a solvent. Following this, Pa is recovered by adsorption onto a silica gel column, eliminating the need for further adjustments to the feed solution. By adjusting acidity levels and controlling flow rates at each stage, the process maintains effective separation of ^{233}U and thorium with minimal loss [13].

6.4.2. Backend Issues

The backend of the thorium fuel cycle presents unique challenges that must be addressed before thorium can be widely adopted in commercial reactors. Key issues include the management of radionuclide inventories in spent thorium-based fuels, which may contain various fertile/fissile combinations, such as $^{232}Th - ^{235}U - ^{238}U$, $^{232}Th - ^{239}Pu$, and $^{232}Th - ^{233}U$.

An understanding of the residual heat, radiological impact, and quantities of actinides and long-lived fission products in these spent fuels is essential [16].

Several additional challenges complicate the reprocessing of thorium-based fuels. Protactinium (^{233}Pa), formed as an intermediate in the conversion of ^{232}Th to ^{233}U , has a relatively long half-life (27 days) compared to ^{239}Np in the uranium cycle. This requires a cooling period of around 12 months to allow ^{233}Pa to decay to ^{233}U , avoiding loss of fissile material. Protactinium, often relegated to the waste stream, also introduces radiological concerns due to ^{231}Pa , a long-lived alpha emitter in the thorium chain. Attempts to co-extract Pa with U and Th in the HNO_3 -TBP/kerosene process have been unsuccessful, though a selective adsorption technique using Vycor glass has shown promise, achieving approximately 98% separation of protactinium [16].

The presence of ^{232}U in spent thorium fuel is another concern. ^{232}U , formed through neutron interactions with ^{232}Th and its products, decays into gamma-emitting daughters like ^{208}Tl , complicating handling and storage due to the high radiation levels. The ^{232}U content is influenced by the neutron spectrum and irradiation duration, with fast reactors yielding higher ^{232}U levels than thermal reactors. Strategies such as positioning thorium blankets away from the core in reactors like the BN-350 have successfully minimized ^{232}U concentrations in the produced ^{233}U .

Lastly, dissolving thorium dioxide in nitric acid presents challenges, as ThO_2 is highly stable compared to uranium and plutonium oxides. Dissolution generally requires the addition of hydrofluoric acid (HF) to nitric acid, though this accelerates corrosion of processing equipment. The THOREX reagent is the most effective solution developed to date for dissolving Th-based fuels. Higher temperatures and pressures during dissolution also improve the process, addressing this unique aspect of thorium reprocessing [16].

6.5. Molten Salt Reactors (MSR)

Currently, most nuclear power plants operate with LWRs, which present several disadvantages. One key issue is the proliferation risk due to the production of ^{239}Pu in used fuel, which remains a concern whether the fuel is reprocessed or disposed of as waste. Additionally,

LWRs have limited thermal efficiency, typically capped at around 35 %, due to temperature constraints. There is also the risk of steam explosions in these reactors, as well as high core after heat during accidents, which raises the danger of fuel melting, as observed in incidents like Three Mile Island and Fukushima [3].

MSRs offer promising solutions to many of these challenges. Unlike LWRs, MSRs can operate at low pressures, reducing the risks associated with high-pressure containment and the need for robust, large containment domes. Moreover, MSRs eliminate the need for cladding, which reduces the risk of cladding failure and hydrogen production, a key contributor to explosions in accidents involving high-temperature interactions between zirconium cladding and water. Since the fuel in an MSR is already molten, there is no risk of solid fuel melting during accidents [3].

In addition, MSRs provide advantages such as continuous online refueling and reactivity adjustments, which allow for smoother operation and safer control. They can also maintain lower core excess reactivity, simplifying reactor control. Continuous removal of fission products, such as ^{137}Cs , reduces core radioactivity and mitigates the release of contaminants in severe accidents. Noble gases like xenon and krypton, which cause xenon poisoning in reactors, can be easily removed, avoiding common control issues seen in LWRs [3].

6.5.1. Challenges for the Implementation of Molten Salt Reactors

Several issues should be addressed before implementing an MSR. One challenge is that the fuel flowing out of the reactor continues to emit radiation, requiring a remote maintenance required for the plumbing. Other limiting factor is the corrosion of structure and plumbing materials, which must withstand the high temperatures and corrosive environment of the molten salt, this could be alleviated using Hastelloy-N, a nickel-based alloy that has shown good resistance to corrosion in molten salt environments [3], [19].

Another challenge is the need for a reprocessing facility to separate fission products and actinides from the fuel salt. This facility must be able to handle the high radiation levels of the fuel salt, which can be achieved by using remote maintenance and shielding. The reprocessing facility must also be able to separate the fission products and actinides from

the fuel salt, which can be achieved using solvent extraction [3].

6.5.2. Thorium Molten Salt Reactors

The thorium molten salt reactor (TMSR) is designed for thorium based nuclear energy utilization. There are two possible implementations of TMSRs: the liquid-fueled (TMSR-LF) and the solid-fueled (TMSR-SF) [3].

Liquid Fuel Thorium Molten Salt Reactor (TMSR-LF)

The TMSR-LF is designed to produce an electrical power output of 168 MWe per unit and can be scaled to meet different power needs, including configurations of one, two, or six units, reaching up to GWe. This reactor consists of three main loops: the primary loop with fuel salt, a secondary loop for isolating radioactivity, and a third loop for energy utilization. In the primary loop, a molten salt mixture of $LiF - BeF_2 - UF_4 - ThF_4$ is used, where the lithium is enriched to 99.995% in 7Li and uranium to 19.75% in ^{235}U . The secondary loop contains FNaBe salt. The inlet and outlet temperatures of the primary loop are $600^{\circ}C$ and $700^{\circ}C$, respectively, allowing high-efficiency power generation through a combined Brayton and Rankine cycle, achieving thermoelectric conversion efficiencies above 45% [3].

The TMSR-LF features an online refueling system that maintains low excess reactivity, along with an off-gas system to continuously remove gaseous fission products, including xenon, helium, and tritium. This improves neutron economy and reduces the demands on the reactivity control system. For safety, a passive residual heat removal system is designed to manage heat during accident scenarios, and a passive fuel salt discharge system with a freezing valve is incorporated to safely shut down and dissipate heat under extreme conditions [3].

The TMSR-LF plant layout is divided into three main zones: the nuclear island, conventional island, and service region. The nuclear island, housing key nuclear components, is located underground to enhance safety, while the conventional island, containing auxiliary facilities like cooling towers and turbines, is placed nearby to reduce heat transfer distances. Additional auxiliary buildings, including those for hydrogen production and seawater de-

salination, are part of the conventional island [3]. This schematic is represented in **Fig. 6-1**.

Designed with modularity in mind, the reactor body module of the TMSR-LF has a lifespan of approximately five years, with easy installation and replacement. The reactor vessel and primary circuit are housed within a steel containment structure, which acts as an additional safety barrier. A gas layer between the containment and reactor vessel also aids in tritium removal. The TMSR-LF is a promising candidate for implementing the Th - U fuel cycle, aiming to optimize thorium resource use, reduce nuclear waste, support nonproliferation efforts, and ultimately achieve a fully closed Th - U cycle [3].

Solid Fuel Thorium Molten Salt Reactor (TMSR-SF)

The TMSR-SF is a small modular fluoride salt-cooled high-temperature reactor (FHR) with an electrical power output comparable to the TMSR-LF. These nuclear systems use TRISO (Tristructural-Isotropic) fuel, where each fuel particle has a uranium dioxide (UO₂) kernel surrounded by a multi-layered coating. This coating consists of a low-density carbon buffer layer that accommodates fission gases, a silicon carbide (SiC) layer to act as a primary barrier for fission products, and two high-density isotropic pyrolytic carbon (PyC) layers encasing the SiC [21], [22]. **Fig. 6-2** shows the structure of a TRISO particle.

In the TMSR-SF design, the fuel pebbles are 30-mm diameter spherical elements containing TRISO particles dispersed within a graphite matrix. Each pebble houses approximately 2,400 microfuel particles with uranium kernels enriched to 19.75%. When the reactor core is fully loaded, it contains around 870,000 fuel pebbles, packed randomly to optimize neutron distribution. A sophisticated fuel handling system circulates the pebbles through various functions, including loading, discharge, purification, monitoring, and storage, using a combination of mechanical operations, buoyancy, and gravity [3].

Reactivity control is maintained by a dual shutdown system. The primary system includes 12 control rods with rectangular shapes, which move vertically within channels in a SiC plate, while the secondary system consists of eight shutdown blades that can be inserted directly through the graphite reflector into the pebble bed during emergency shutdowns. Both the

rods and blades contain natural boron carbide encased in a nickel-based alloy, ensuring they can achieve sufficient shutdown margins to maintain subcritical conditions when needed [3]. Heat management within the TMSR-SF is achieved through salt/air heat exchangers in the secondary loops. These heat exchangers transfer heat from the salt to compressed air in the power conversion unit (PCU) using spirally fluted tube-shell designs, which enhance convective heat transfer. This system can also handle the significant pressure differences between the salt and air sides under normal operating conditions. The TMSR-SF generates electricity using an open-air Brayton cycle combined with a steam Rankine cycle, achieving thermoelectric conversion efficiencies over 45%. The PCU includes components such as compressors, turbines, generators, and residual heat recovery units. Purified, hot compressed air from the heat exchangers drives turbines for electricity production, while the remaining residual heat powers the steam Rankine cycle to further enhance efficiency [3].

The modular design of the TMSR-SF facilitates efficient installation and maintenance, and its inherent passive safety features enhance operational safety and flexibility. This design approach, along with an underground nuclear island setup, online refueling capabilities, and auxiliary applications such as hydrogen production or seawater desalination, makes the TMSR-SF a versatile and safe option for future thorium-based energy production [3]. **Fig. 6-3** shows the TMSR-SF design.

Having talked about the thorium fuel cycle and the molten salt reactors, the next chapter delve in the simulation of the performance of MOX in a PWR. This is done to understand the behavior of the fuel and the reactor.

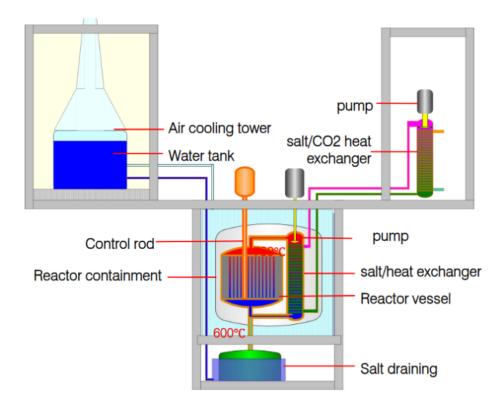


Figure 6-1.: Liquid Fuel Thorium Molten Salt Reactor (TMSR-LF) design. From Ref. [20]

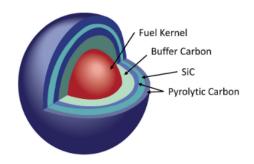


Figure 6-2.: TRISO particle structure. From Ref. [22]

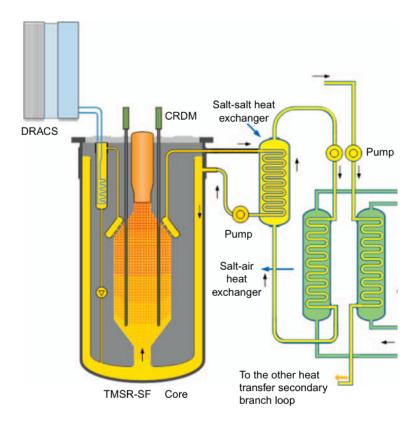


Figure 6-3.: Solid Fuel Thorium Molten Salt Reactor (TMSR-SF) design. From Ref. [3]

7. Reactor Fuel Simulations

In this project it was simulated a Pressurized Water Reactor (PWR) with different Thorium fuel cycles. The simulation aims to understand the behavior of thorium based nuclear fuels in a PWR.

7.1. Methodology

The simulation was done using openMC, which is a library for Monte Carlo simulations of neutron transport. The code was developed by the Computational Reactor Physics Group (CRPG) at the Massachusetts Institute of Technology (MIT).

7.1.1. Monte Carlo Method

The Monte Carlo method is a statistical technique used to solve mathematical problems by generating random samples to obtain numerical results. This method simulates a large number of individual particles and their interactions with materials, then estimates the desired quantities by averaging the results of all particles [3].

The simulation code is written in Fortran 2008 and uses the FoX XML library to process input files in XML format [23]. XML is used for all inputs because it allows developers to easily modify options, and the FoX library efficiently handles these changes as long as the file structure is well-defined and consistent with the specification files [23].

7.1.2. **OpenMC**

The input files are divided into three mandatory categories for every simulation: settings, materials, and geometry. The settings file contains all simulation parameters, including the number of particles to run. The materials file describes the composition of the materials by densities and elements or nuclei. The geometry file defines the model's geometry [23].

However, it is needed to set an additional environment variable to run the code. The environment variable is called "OPENMC_CROSS_SECTIONS" and it is used to specify the path to the cross-section data. The cross-section data is a library that contains the cross-sections for all isotopes used in the simulation. The library is generated using the "NJOY" nuclear data processing code. However, it is also possible to use the cross-section data from the official data libraries like ENDF/B-VII.1 [23].

The implemented code uses depletion calculations to simulate the evolution of the fuel composition over time. The depletion calculations are done using the OpenMC depletion capability. The library uses numerical integration to solve the coupled concentration equation known as bateman equations [23]. Bateman equations are a series of differential equations that describe the time evolution of the concentration of isotopes in a nuclear reactor. The equations are given by:

$$\frac{dN_i(t)}{dt} = \sum_{j} \left[\int_0^\infty \sigma_{j\to i}(E, t)\phi(E, t)dE + \lambda_{j\to i} \right] N_j(t)$$

$$-\sum_{j} \left[\int_0^\infty \sigma_{i\to j}(E, t)\phi(E, t)dE + \lambda_{i\to j} \right] N_i(t) \tag{7-1}$$

Where $N_i(t)$ is the number of nuclei of isotope i at time t, $\sigma_{j\to i}(E,t)$ is the microscopic crosssection for the reaction where a nucleus of the kind j generates an isotope of the kind i [24]. For the depletion calculations, it is necessary to give an additional input file that contains the transmutation reactions and the decay constants for the isotopes. The depletion file is also in XML format [25].

The results from the depletion calculations are stored in an output file in HDF5 format. The HDF5 format allows parallel writing of the data, make it possible multi threading execution,

7.2 Model 85

and is a widely used format for storing large amounts of data. The output file contains the number of nuclei of each isotope at each time step, the k-effective, and the neutron flux [25], [26]. Additional, information about the output file can be found in the OpenMC documentation Ref.[25].

7.2. Model

The model used in the simulation is a PWR. It was use the model from the OpenMC example files. The model is a 17×17 fuel assembly from the "BEAVRS" benchmark. The model is a 3D model with 3 regions: fuel, water, and cladding. The fuel is a UO_2 fuel with 3.1% enrichment. The cladding is made of Zircaloy-4 and the water is light water (H_2O) .

The code is made of two main parts. The first part implements the assembly and defines the nuclear model. In this script settings like the number of particles, the number of batches, and the number of generations are defined. The second part is the depletion script. This script defines the depletion calculations and the output file.

Multiple file for plotting the results are also implemented. The files are written in Python and use the libraries "numpy", "matplotlib", and "h5py". The files read the output file from the depletion calculations and plot the results. The plots show the percentage change in each step of simulation of each isotope. Finally, the plots are saved in a directory called "plots".

7.2.1. Project Structure

The project is organized into several directories and files, each serving a specific purpose:

• dockerfile: Docker configuration.

```
Root/: Project root directory.
   • Data: Data files for the simulation.
       - chain_endfb80_pwr.xml
   • Plots/: Plot images from simulation results.
       - percentual_change_th232_con_10.pdf
   • Results/: Simulation results.
       - Th232/
   • Simulation/: Simulation scripts and files.
       - plotter_3.py
        - pwr_model_source.py
        - run_reactor.py
   • README.md: Project documentation.
```

The simulation directory contains the core Python scripts essential for the simulation process. The "pwr_model_source.py" script implements the detailed fuel assembly. The "run_reactor.py" script manages the simulation execution. The "plotter_3.py" script processes the simulation data, generating visual representations of the results. The data directory includes critical files such as depletion chain file. The results directory stores the output files from the simulations, sorting the generated data.

7.3 Results 87

7.3. Results

Multiple simulations were conducted to evaluate the behavior of the fuel during the operation of the PWR over a period of 6 months. Simulations were performed with various thorium concentrations in uranium oxide fuel, specifically 10% and 50%. Figures Fig. 7-1 and Fig. 7-2 illustrate the results of these simulations, showing the percentage change of isotopes in the fuel assembly over the simulation period. The plots indicate the achievement of breeding in the fuel assembly for ^{233}U . However, it is noticeable that the stability of breeding is achieved much later compared to ^{239}Pu . This is expected since the breeding of ^{233}U follows the chain reaction of $^{232}Th \xrightarrow{\text{absorption}} ^{233}Th \xrightarrow{22 \text{minutes}} ^{233}Pa \xrightarrow{\text{27 days}} ^{233}U$, which is a much slower breading process than the chain reaction of $^{238}U \xrightarrow{\text{absorption}} ^{239}U$ $\xrightarrow{\text{absorption}} ^{239}Vu$ for plutonium breading.

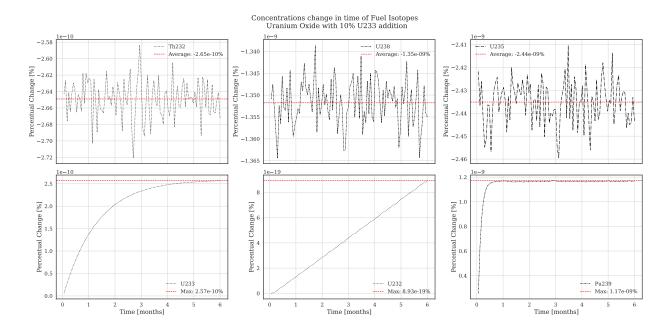


Figure 7-1.: Percentage change of isotopes in the simulation of a PWR fuel assembly using UOX at 10 % thorium concentration.

The simulations demonstrate that a 10 % thorium concentration in the fuel results in a good neutronic economy, aligning with previously reported results [27]. However, a 50 % thorium concentration leads to subcritical reactor behavior. This result are shown in figures **Fig.7-3**

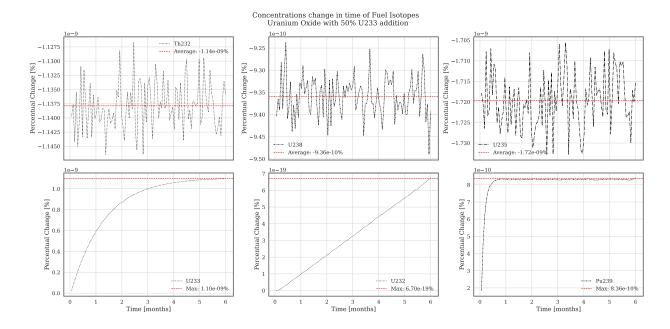


Figure 7-2.: Percentage change of isotopes in the simulation of a PWR fuel assembly using UOX at 50 % thorium concentration.

and **Fig.7-3**.

Additional simulations were done to evaluate the behavior of thorium based fuel using thorium oxide and plutonium as seed isotope. The concentration of plutonium was set to 10%. The simulation shows that the fuel assembly reaches a critical state as well as it achieves a breeding ratio of ^{233}U . However, the reactivity of the fuel assembly is higher than 0, this implies a more dangerous reactor behavior and additional technical issues to run it safetly. The results are shown in figures **Fig.7-5**. The behavior of reactivity is show in figure **Fig. 7-6**.

7.4. Conclusion

The simulations conducted in this project provide valuable insights into the behavior of thorium-based nuclear fuels in a Pressurized Water Reactor. The results demonstrate that thorium oxide with ^{233}U at concentrations of 5% and 10% can achieve breeding. However, the stability of breeding is achieved much later compared to plutonium-239 (^{239}Pu). This

7.4 Conclusion 89

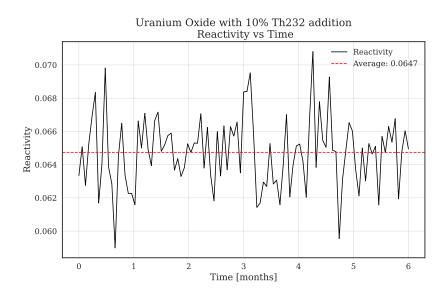


Figure 7-3:: Reactivity over time of the simulation of a PWR fuel assembly using UOX at 10 % thorium concentration.

delay is due to the slower breeding process of ^{233}U from ^{232}Th compared to the breeding of ^{239}Pu from ^{238}U .

Additionally, the simulations show an improvement in neutronic economy with thorium-based fuels. This improvement is characterized by a reduction in excess reactivity at the beginning of the fuel cycle, which helps to minimize the initial reactivity spike and associated control challenges. Furthermore, the simulations indicate that thorium-based fuels can maintain criticality towards the end of the fuel cycle, ensuring a more stable and efficient reactor operation over time. Overall, the use of ThOX with ^{233}U not only supports breeding but also enhances the neutronic performance of the reactor by providing a more balanced reactivity profile throughout the fuel cycle.

The simulation results for ThOX with 10% thorium concentration (**Fig.7-1**) show a good neutronic economy, aligning with previously reported results. However, increasing the thorium concentration to 50% leads to subcritical reactor behavior (**Fig.7-2**). This indicates that while thorium can be beneficial in certain concentrations, higher concentrations may pose challenges for maintaining criticality.

Additionally, the simulation of ThOX with 10% plutonium concentration (Fig.7-5) shows

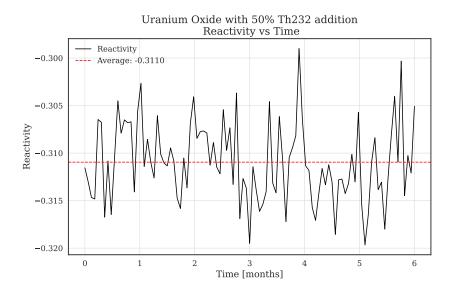


Figure 7-4.: Reactivity over time of the simulation of a PWR fuel assembly using UOX at 50% thorium concentration.

that the fuel assembly reaches a critical state and achieves a breeding ratio of ^{233}U . However, the higher reactivity of the fuel assembly implies a more dangerous reactor behavior and additional technical issues to ensure safe operation (**Fig.7-6**).

For comparison, the simulation using UOX as a reference (**Fig. A-5**) highlights the differences in behavior between traditional uranium-based fuels and thorium-based fuels. The results indicate that while UOX can maintain criticality, the breeding capabilities of thorium-based fuels offer potential advantages for long-term sustainability and fuel utilization.

Thorium-based fuels, particularly thorium oxide with uranium-233 (^{233}U), show significant promise for use in Pressurized Water Reactors. The simulations demonstrate that while it is possible to sustain a chain reaction with these fuels, achieving and maintaining criticality presents challenges. The reactivity levels observed were higher than zero and even higher than reference (**Fig. A-5**). Also, the simulation indicates difficulties in reaching a breeding condition for ^{233}U .

7.4 Conclusion 91

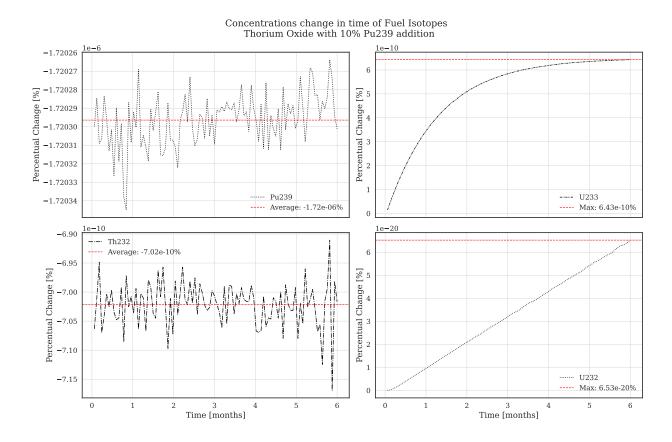


Figure 7-5.: Percentage change of isotopes in the simulation of a PWR fuel assembly using ThOX and $10\,\%$ plutonium concentration.

To balance breeding capabilities and ensure reactor safety, careful consideration of the fuel composition and concentration is essential. However, achieving optimal breeding ratios with ThOX and ^{233}U may require more sophisticated designs in the fuel lattice and core configuration [28]. The results suggest that optimizing these parameters is crucial for enhancing the performance and safety of thorium-based fuels. Further research and development are necessary to address these challenges and fully realize the potential of thorium as a nuclear fuel.

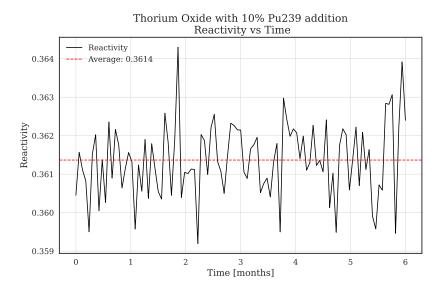


Figure 7-6.: Reactivity over time of the simulation of a PWR fuel assembly using ThOX and $10\,\%$ plutonium concentration.

8. Present and future of Thorium

The research and simulations conducted in this project provide valuable insights into the potential and challenges of using thorium-based nuclear fuels in PWRs. The thorium fuel cycle, with its unique properties and benefits, presents a promising alternative to traditional uranium-based fuels. However, several technical and operational challenges must be addressed to fully realize its potential.

8.1. Thorium Fuel Cycle

The thorium fuel cycle offers several advantages over the conventional uranium fuel cycle. Thorium is more abundant than uranium, and its use in nuclear reactors can lead to higher efficiency harvesting energy from the fuel. The chemical stability and higher thermal conductivity of thorium dioxide (ThO_2) compared to uranium dioxide (UO_2) make it a more suitable material for nuclear fuel, potentially improving in-pile performance and long-term storage of irradiated fuel.

The intrinsic proliferation resistance of the thorium fuel cycle, due to the formation of ^{232}U and its strong gamma emissions, makes it less attractive for the production of nuclear weapons. This adds a significant layer of security in the context of nuclear non-proliferation.

8.2. Simulation Results

The simulations conducted using OpenMC provided detailed insights into the behavior of thorium-based fuels in a PWR. The results demonstrated that thorium oxide (ThOX) with uranium-233 (^{233}U) at concentrations of 5% and 10% can not achieve breeding. Thi is

consistent with previous studies that have shown that breeding with ThOX and ^{233}U is challenging in thermal reactors [28]. However, it may be possible to achieve breeding with more sophisticated simulations and optimization of fuel composition and core configuration. Simulations also show that using ThO_2 in combination with ^{239}Pu a breeding ration can be achieved. However, the saturation point of the breeding process is achieved much later compared to ^{239}Pu breeding using uranium oxide. This delay is due to the slower breeding process of ^{233}U from ^{232}Th compared to the breeding of ^{239}Pu from ^{238}U .

The simulations also showed an improvement in neutronic economy with thorium-based fuels. This improvement is characterized by a reduction in excess reactivity at the beginning of the fuel cycle, which helps to minimize the initial reactivity spike and associated control challenges. Furthermore, the simulations indicate that thorium-based fuels can maintain criticality towards the end of the fuel cycle, ensuring a more stable and efficient reactor operation over time. This behavior is consistent with the finding in **Ref.**[29]

8.3. Challenges and Future Research

Despite the promising results, several challenges remain in the implementation of thorium-based fuels. Achieving and maintaining criticality with ThOX and ^{233}U requires careful consideration of fuel composition and concentration. The simulations indicated that higher thorium concentrations could lead to subcritical reactor behavior.

Additionally, achieving optimal breeding ratios with ThOX and ^{233}U may require more sophisticated designs in the fuel lattice and core configuration. The results suggest that optimizing these parameters is crucial for enhancing the performance and safety of thorium-based fuels.

Further research and development are necessary to address these challenges and fully realize the potential of thorium as a sustainable nuclear fuel. This includes exploring advanced reactor designs, such as Molten Salt Reactors (MSRs), which offer several advantages over traditional Light Water Reactors (LWRs), including higher thermal efficiency, lower proliferation risk, and improved safety features.

Additionally, it is essential to develop fuel reprocessing and recycling technologies to eco-

8.4 Conclusion 95

nomically extract and reuse valuable fissile materials from irradiated thorium-based fuels. This will help reduce the volume of radioactive waste and maximize the energy potential of thorium resources.

Finally, regulatory and policy frameworks must be established to support the deployment of thorium-based fuels and ensure their safe and secure operation. This includes addressing licensing and permitting requirements, as well as establishing international cooperation and standards for the use of thorium in nuclear energy production.

8.4. Conclusion

In conclusion, thorium-based fuels, particularly ThOX with ^{233}U , show significant promise for use in PWRs. The simulations conducted in this project provide valuable insights into the behavior of these fuels and highlight the potential benefits and challenges associated with their use. While the thorium fuel cycle offers several advantages, including higher conversion ratios, improved thermal properties, and intrinsic proliferation resistance, achieving and maintaining criticality presents challenges that require further research and optimization. The future of thorium-based nuclear fuels looks promising, with ongoing research and development efforts aimed at overcoming the technical and operational challenges. By addressing these challenges, thorium-based fuels could play a crucial role in the future of sustainable and safe nuclear energy production.

A. Simulation Plots

Here are listed additional plots generated from the simulations. The plots show the percentage change of isotopes in the simulation with different thorium concentrations. The plots show the percentage change in each step of simulation of each isotope.

Finally, the following plots show the reactivity behavior of the fuel assemblies during the simulation. The reactivity is calculated as in **Eq** (4-12). It is noticeable that the reactivity of UOX, used as reference, is higher than 0 this is due to the consideration for the start of nuclear reactor, where it is needed this reactivity excess to ensure criticality of the reactor through the cycle.

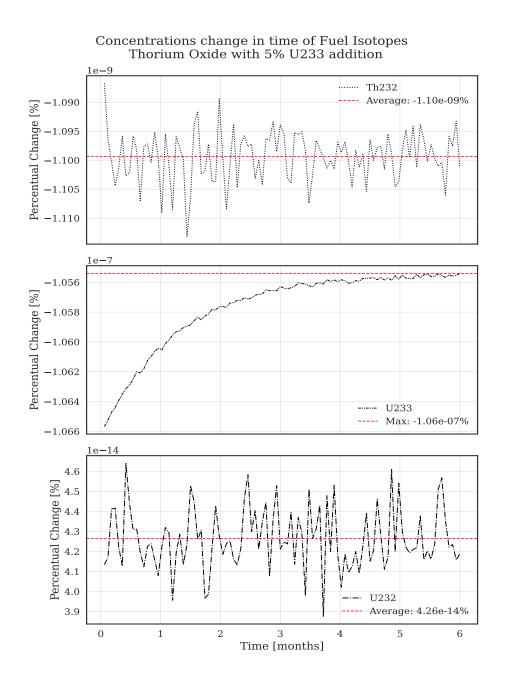


Figure A-1.: Percentage change of isotopes in the simulation of a PWR fuel assembly using ThOX at $5\,\%$ ^{233}U concentration.

98 A Simulation Plots

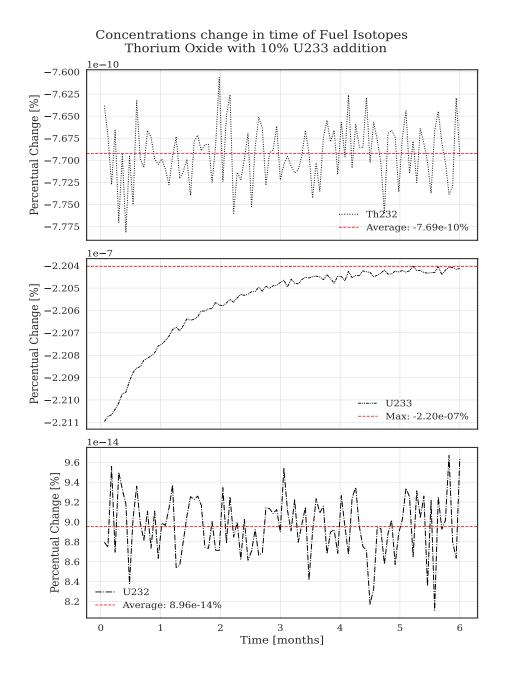


Figure A-2.: Percentage change of isotopes in the simulation of a PWR fuel assembly using ThOX at $10\,\%$ ^{233}U concentration.

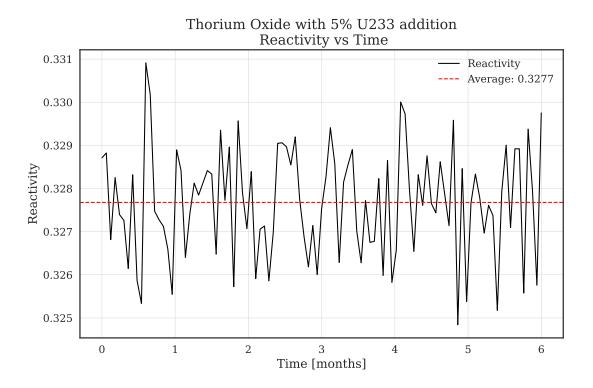


Figure A-3.: Reactivity of the simulation of a PWR fuel assembly using ThOX at 5 % ^{233}U concentration.

100 A Simulation Plots

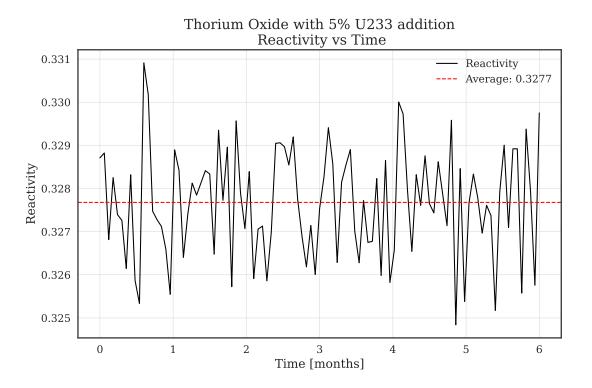


Figure A-4.: Reactivity of the simulation of a PWR fuel assembly using ThOX at $10\,\%$ ^{233}U concentration.

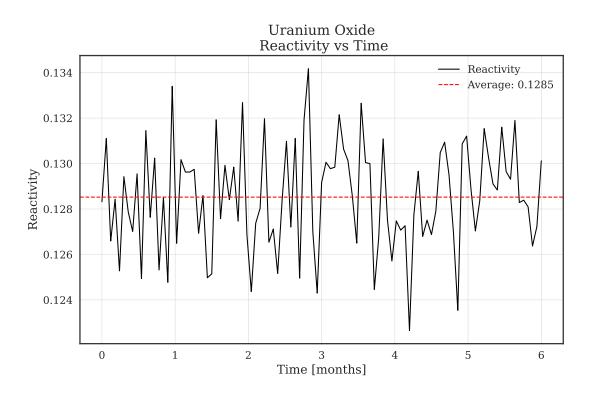


Figure A-5.: Reactivity of the simulation of a PWR fuel assembly using UOX.

- [1] K. Kornecki and C. F. Wise, "The role of advanced nuclear reactors and fuel cycles in a future energy system," *PNAS Nexus*, vol. 3, no. 2, 2024. DOI: 10.1093/pnasnexus/pgae030.
- [2] J. R. Lamarsh and A. J. Baratta, *Introduction to nuclear engineering*. Prentice Hall; Pearson Education distributor, 2009.
- [3] T. J. Dolan, *Molten Salt Reactors and Thorium Energy*, 1st ed. Woodhead Publishing, 2017, ISBN: 9780081011263.
- [4] W. M. Stacey, Nuclear reactor physics Weston M. Stacey. Wiley-VCH-Verl, 2010.
- [5] E. E. Lewis, Fundamentals of Nuclear Reactor Physics. Elsevier e-books, 2014.
- [6] A. Asghari, "The water neutron detector (wand)," 2016. [Online]. Available: https://api.semanticscholar.org/CorpusID:100282839.
- [7] M. S. Jean-Louis Basdevant James Rich, Fundamentals in nuclear physics: from nuclear structure to cosmology, 1st ed. Springer, 2005, ISBN: 9780387016726.
- [8] J. C. Sanabria, "Reactores nucleares notas de clase," unpublished, 2021.
- [9] K. S. Krane, Introductory Nuclear Physics, 2nd. John Wiley, 1988, ISBN: 9780471805533.
- [10] N. N. D. Center, National nuclear data center, Accessed: 2024-08-24, 2024. [Online]. Available: https://www.nndc.bnl.gov/.
- [11] I. A. E. Agency, "Thorium fuel cycle potential benefits and challenges," International Atomic Energy Agency, Vienna, Austria, Tech. Rep. IAEA-TECDOC-1450, 2005. [Online]. Available: https://www.iaea.org/publications/7196/thorium-fuel-cycle-potential-benefits-and-challenges.

[12] K. U. e. P. Mohanakrishnan (editor) Om Pal Singh (editor), *Physics of Nuclear Reactors*, 1st ed. Academic Press, 2021, ISBN: 9780128224410.

- [13] B. S. Tomar, P. R. V. Rao, S. B. Roy, J. P. Panakkal, K. Raj, and A. N. Nandakumar, Nuclear Fuel Cycle. Springer, 2023, ISBN: 9789819909483.
- [14] U. E. Humphrey and M. U. Khandaker, "Viability of thorium-based nuclear fuel cycle for the next generation nuclear reactor: Issues and prospects," *Renewable and Sustainable Energy Reviews*, vol. 97, pp. 259–275, 2018, ISSN: 1364-0321. DOI: https://doi.org/10.1016/j.rser.2018.08.019. [Online]. Available: https://www.sciencedirect.com/science/article/pii/S1364032118305951.
- [15] E. E. Lewis, Fundamentals of Nuclear Reactor Physics. Academic Press, 2008, ISBN: 9780123706317.
- [16] Thorium Fuel Cycle Potential Benefits and Challenges (TECDOC Series 1450). Vienna: INTERNATIONAL ATOMIC ENERGY AGENCY, 2005, ISBN: 92-0-103405-9. [Online]. Available: https://www.iaea.org/publications/7192/thorium-fuel-cycle-potential-benefits-and-challenges.
- [17] Atlas geoquímico de colombia: Concentración de torio (th), Bogotá: Servicio Geológico Colombiano, versión 2020, https://www.sgc.gov.co.
- [18] Deutsches Institut für Normung e.V. (DIN), "Measurement of radioactivity in the environment air: Radon-222 pt 11: Test method for soil gas with sampling at depth (iso 11665-11:2016); german version en iso 11665-11:2019," 2020.
- [19] H. I. Inc., Nickel alloy brochure, https://haynesintl.com/wp-content/uploads/ 2024/05/n-brochure.pdf, Accessed: 2024-10-07, 2024.
- [20] H. Xu, The development of tmsr technology in china, https://www.gen-4.org/gif/upload/docs/application/pdf/2017-05/03_hongjie_xu_china.pdf, Accessed: 2024-10-07, 2017.
- [21] D. A. Andersson, C. R. Stanek, C. Matthews, et al., "The past, present, and future of nuclear fuel," MRS Bulletin, vol. 48, pp. 1154–1162, 2023. DOI: 10.1557/s43577-023-00631-3. [Online]. Available: https://doi.org/10.1557/s43577-023-00631-3.

[22] Performance Analysis Review of Thorium TRISO Coated Particles During Manufacture, Irradiation and Accident Condition Heating Tests (TECDOC Series 1761).

Vienna: INTERNATIONAL ATOMIC ENERGY AGENCY, 2015, ISBN: 978-92-0-100715-5. [Online]. Available: https://www.iaea.org/publications/10844/performance-analysis-review-of-thorium-triso-coated-particles-during-manufacture-irradiation-and-accident-condition-heating-tests.

- [23] P. K. Romano, N. E. Horelik, B. R. Herman, A. G. Nelson, B. Forget, and K. Smith, "Openmc: A state-of-the-art monte carlo code for research and development," *Annals of Nuclear Energy*, vol. 82, pp. 90–97, 2015, Joint International Conference on Supercomputing in Nuclear Applications and Monte Carlo 2013, SNA + MC 2013. Pluriand Trans-disciplinarity, Towards New Modeling and Numerical Simulation Paradigms, ISSN: 0306-4549. DOI: https://doi.org/10.1016/j.anucene.2014.07.048. [Online]. Available: https://www.sciencedirect.com/science/article/pii/S030645491400379X.
- [24] C. Josey, B. Forget, and K. Smith, "High order methods for the integration of the bateman equations and other problems of the form of y=f(y,t)y," *Journal of Computational Physics*, vol. 350, pp. 296–313, 2017, ISSN: 0021-9991. DOI: https://doi.org/10.1016/j.jcp.2017.08.025. [Online]. Available: https://www.sciencedirect.com/science/article/pii/S002199911730596X.
- [25] The OpenMC Development Team, *Openmc documentation*, https://docs.openmc.org/en/stable/, Accessed: 2024-10-07, 2024.
- [26] The HDF Group, *Hdf5 documentation*, https://support.hdfgroup.org/documentation/, Accessed: 2024-10-07, 2024.
- [27] C. W. Lau, C. Demazière, H. Nylén, and U. Sandberg, "Improvement of lwr thermal margins by introducing thorium," *Progress in Nuclear Energy*, vol. 61, pp. 48–56, 2012, ISSN: 0149-1970. DOI: https://doi.org/10.1016/j.pnucene.2012.07.004. [Online]. Available: https://www.sciencedirect.com/science/article/pii/S0149197012000972.

[28] S. Si, "Roadmap design for thorium-uranium breeding recycle in pwr," International Atomic Energy Agency (IAEA), Vienna, Austria, Tech. Rep., 2011.

[29] C. W. Lau, C. Demazière, H. Nylén, and U. Sandberg, "Improvement of lwr thermal margins by introducing thorium," *Progress in Nuclear Energy*, vol. 61, pp. 48–56, 2012, ISSN: 0149-1970. DOI: https://doi.org/10.1016/j.pnucene.2012.07.004. [Online]. Available: https://www.sciencedirect.com/science/article/pii/S0149197012000972.