STANDARD DEPARTURE CHART **INSTRUMENT (SID)** RNAV (GNSS) -

TWR 118.6 / 118.25 APP 120.3 124.05 ACC 134.2

TRANSITION ALTITUDE 11 000ft

D-ATIS AP ID-WSSS 128.6

SINGAPORE/Singapore Changi

DODSO DEPARTURES DODSO 1F RWY 20R

GENERAL INFORMATION

PROCEDURE INFORMATION

INITIAL CLIMB 3000FT

CAUTION: RWY 02R/20L NOT AVAILABLE FOR CIVIL USE UNTIL FURTHER ADVISED

NOTE: RADAR REQUIRED

NOTE: RNAV-1 NAVIGATION SPECIFICATION GNSS REQUIRED

NOTE: ACFT UNABLE TO FLY THE SID PROFILE SHALL INFORM ATC PRIOR TO DEPARTURE AND EXPECT RADAR VECTORING IF NECESSARY

NOTE: WHEN TAKEN OFF THE SID, AS INSTRUCTED BY ATC, REFER TO ENR 1.5, SECTION 3, PARAGRAPH 3.4.2 - FOR RWY 20R MINIMUM CLIMB GRADIENT

NOTE: REFER TO BACK PAGE FOR
- FORMAL AND TABULAR DESCRIPTIONS
- RADIO COM FAILURE PROCEDURES


TEKONIC

1003 1821 300 1518 250 835 SID SHALL BE ON A MINIMUM CLIMB GRADIENT OF 6% UNTIL REACHING OR PASSING 2500FT, THEREAFTER 3.3% 1215 200 899 CRUISING LEVELS WILL BE ISSUED AFTER TAKE-OFF BY SINGAPORE RADAR. 150 911 501 SID SHALL NOT EXCEED IAS 230KTS UNTIL PASSING 4000FT AMSL AND NOT EXCEED IAS 250KTS UNTIL PASSING 10000FT AMSL. 100 809 334 75 456 251 GND SPEED - KNOTS 3.3% V/V (fpm) 6% V/V (fpm)

ELEV, ALT IN FEET

BEARINGS, TRACKS AND RADIALS ARE MAGNETIC VAR 0°23'E (2020)

DISTANCES IN NM

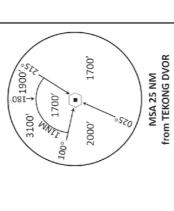

DODSO 01*22.25*N 106*14'02"E	NOT TO SCALE
TOMAN 01°21'47"N 10°5'47'17"E 10°5'47'17"E	
VEBMA 01'22'32'E	
GOTGA 01°2213 N 104°42 00°E 04°42 00°E	
SEBVO 01+12 58"N 104*72 58"N 104*72 58"N 104*74 49"E	
880 ₀	
TEKONG TEKONG TOWOR/DME 116.5	
103°56 10	

DODSO 1F (SID) RNAV GNSS RWY 20R - DESCRIPTIONS

Formal & Abbreviated Descriptions

Formal Description	Abbreviated Description	Path Terminator	Fly-Over required
To LEDOX on course 203° at or above 1500ft.	LEDOX [M203; A015+] -	CF	N
To LETGO at or above 2500ft, turn left.	LETGO [A025+; L] -	TF	N
To DUBOT at or above 4000ft, turn left.	DUBOT [A040+; L] -	TF	N
To ERVIV at 6000ft, turn left.	ERVIV [@A060; L] -	TF	N
To MUMDU, turn left.	MUMDU [L] -	TF	N
To SEBVO at or below 9000ft.	SEBVO [A090-] -	TF	N
To GOTGA, turn right.	GOTGA [R] -	TF	N
To VEBMA.	VEBMA -	TF	N
To TOMAN.	TOMAN -	TF	N
To DODSO.	DODSO	TF	N

Tabular Descriptions

Tabulai De	Tabular Descriptions									
Path Term	Waypoint Name	Fly-Over	Course °M(°T)	Distance (NM)	Turn Direction	Altitude	Speed Limit	Navigation Spec		
CF	LEDOX	•	203(203.4)	5.0	-	A015+	-	RNAV1		
TF	LETGO	•	203(203.4)	3.0	L	A025+	-	RNAV1		
TF	DUBOT		135(135.4)	8.0	L	A040+	-	RNAV1		
TF	ERVIV	-	113(113.4)	10.0	L	@A060	-	RNAV1		
TF	MUMDU	-	088(088.4)	17.0	L	-	-	RNAV1		
TF	SEBVO		045(045.4)	11.0	-	A090-	-	RNAV1		
TF	GOTGA	-	045(045.4)	10.0	R	-	-	RNAV1		
TF	VEBMA	-	088(088.4)	12.0	-	-	-	RNAV1		
TF	TOMAN		088(088.4)	54.0	-	-	-	RNAV1		
TF	DODSO	-	088(088.4)	27.0	-	-	-	RNAV1		

Radio Communications Failure Procedure

- 1 SET TRANSPONDER TO MODE A/C CODE 7600
 - 2 COMMUNICATIONS FAILURE OCCURS IMMEDIATELY AFTER DEPARTURE:

PROCEED DIRECT TO SAMKO HOLDING AREA (SHA) CLIMBING TO THE LAST ASSIGNED
ALTITUDE, THEREAFTER REFER TO SINGAPORE AIP ON RADIO COMMUNICATIONS FAILURE
PROCEDURE.