
STANDARD DEPARTURE CHART RNAV (GNSS) -**INSTRUMENT (SID)**

118.6 / 118.25 APP 120.3 124.05 D-ATIS AP ID-WSSS ACC 134.4

TRANSITION ALTITUDE 11 000ft

SINGAPORE/Singapore Changi **RWY 20R IDBUD DEPARTURES IDBUD 1F**

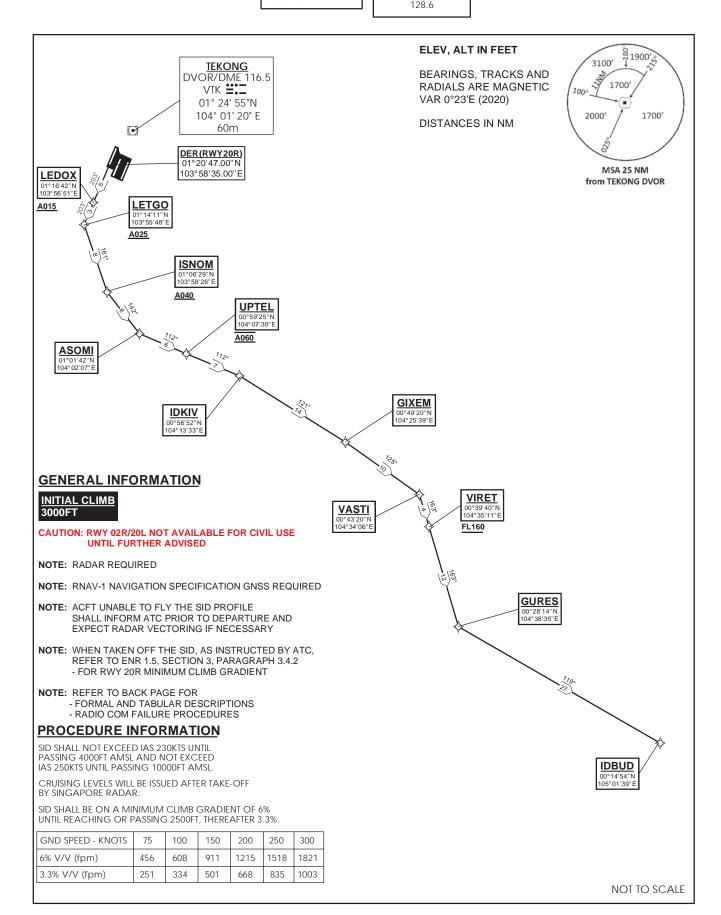

IDBUD 1F (SID) RNAV GNSS RWY 20R - DESCRIPTIONS

Formal & Abbreviated Descriptions

Formal Description	Abbreviated Description	Path Terminator	Fly-Over required
To LEDOX on course 203° at or above 1500ft.	LEDOX [M203; A015+] -	CF	N
To LETGO at or above 2500ft, turn left.	LETGO [A025+; L] -	TF	N
To ISNOM at or above 4000ft, turn left.	ISNOM [A040+; L] -	TF	N
To ASOMI, turn left.	ASOMI [L] -	TF	N
To UPTEL at 6000ft.	UPTEL [@A060] -	TF	N
To IDKIV, turn right.	IDKIV [R] -	TF	N
To GIXEM, turn right.	GIXEM [R] -	TF	N
To VASTI, turn right.	VASTI [R] -	TF	N
To VIRET at or above FL160.	VIRET [FL160+] -	TF	N
To GURES, turn left.	GURES [L] -	TF	N
To IDBUD.	IDBUD	TF	N

Tabular Descriptions

Path Term	Waypoint Name	Fly-Over	Course °M(°T)	Distance (NM)	Turn Direction	Altitude	Speed Limit	Navigation Spec
CF	LEDOX	-	203(203.4)	5.0	-	A015+	-	RNAV1
TF	LETGO		203(203.4)	3.0	L	A025+	-	RNAV1
TF	ISNOM		161(161.4)	8.0	L	A040+	-	RNAV1
TF	ASOMI		142(142.4)	6.0	L	-	-	RNAV1
TF	UPTEL		112(112.4)	6.0	-	@A060	-	RNAV1
TF	IDKIV		112(112.4)	7.0	R	-	-	RNAV1
TF	GIXEM	-	121(121.4)	14.0	R	-	-	RNAV1
TF	VASTI		125(125.4)	10.0	R	-	-	RNAV1
TF	VIRET		163(163.4)	4.0	•	FL160+	-	RNAV1
TF	GURES	-	163(163.4)	12.0	L	-	-	RNAV1
TF	IDBUD		119(119.4)	27.0	-	-	-	RNAV1

Radio Communications Failure Procedure

1	SET TRANSPONDER TO MODE A/C CODE 7600
2	COMMUNICATIONS FAILURE OCCURS IMMEDIATELY AFTER DEPARTURE:
	PROCEED DIRECT TO SAMKO HOLDING AREA (SHA) CLIMBING TO THE LAST ASSIGNED
	ALTITUDE, THEREAFTER REFER TO SINGAPORE AIP ON RADIO COMMUNICATIONS FAILURE
	PROCEDURE.