CSE3038 – COMPUTER ORGANIZATION. – Spring 2023 CHEAT SHEET for QUIZ

Note: Do not write/draw anything on this document. You are not allowed to write/include anything on this paper. You should use it as is during the QUIZ.

Function			
AND			
OR			
add			
subtract			
set-on-less-than			
NOR			

Instruction opcode	ALUOp	Instruction Funct field		Desired ALU action	ALU control input	
LW	00	load word	XXXXXX	add	0010	
SW	00	store word	XXXXXX	add	0010	
Branch equal	01	branch equal	XXXXXX	subtract	0110	
R-type	10	add	100000	add	0010	
R-type	10	subtract	100010	subtract	0110	
R-type	10	AND	100100	AND	0000	
R-type	10	OR	100101	OR	0001	
R-type	10	set on less than	101010	set on less than	0111	

2-bit ALUOp derived from opcode


Figure 4.12 (260)

AL	UOp	Funct field						
ALUOp1	ALUOp0	F5	F4	F3	F2	F1	FO	Operation
0	0	X	Х	Х	Х	Х	Х	0010
X	1	Х	Х	Х	Х	Х	Х	0110
1	X	Х	Х	0	0	0	0	0010
1	X	Х	Х	0	0	1	0	0110
1	Х	Х	Х	0	1	0	0	0000
1	Х	Х	Х	0	1	0	1	0001
1	Х	Х	Х	1	0	1	0	0111

Figure 4.13 (261)

The Main Control Unit

Control signals derived from instruction

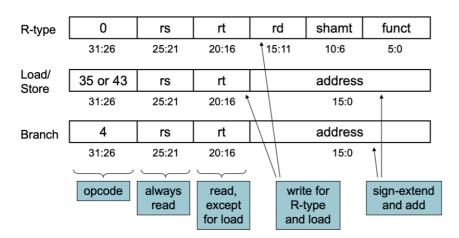


Signal name	Effect when deasserted	Effect when asserted
RegDst	The register destination number for the Write register comes from the rt field (bits 20:16).	The register destination number for the Write register comes from the rd field (bits 15:11).
RegWrite	None.	The register on the Write register input is written with the value on the Write data input.
ALUSrc	The second ALU operand comes from the second register file output (Read data 2).	The second ALU operand is the sign-extended, lower 16 bits of the instruction.
PCSrc	The PC is replaced by the output of the adder that computes the value of PC + 4.	The PC is replaced by the output of the adder that computes the branch target.
MemRead	None.	Data memory contents designated by the address input are put on the Read data output.
MemWrite	None.	Data memory contents designated by the address input are replaced by the value on the Write data input.
MemtoReg	The value fed to the register Write data input comes from the ALU.	The value fed to the register Write data input comes from the data memory.

Fig	ure
4.1	6

Instruction	RegDst	ALUSrc	Memto- Reg		Mem- Read	Mem- Write	Branch	ALUOp1	ALUOp0
R-format	1	0	0	1	0	0	0	1	0
1 w	0	1	1	1	1	0	0	0	0
SW	Х	1	Х	0	0	1	0	0	0
beq	Х	0	Х	0	0	0	1	0	1

(Note: You should also consider jump control line)

Figure 4.18

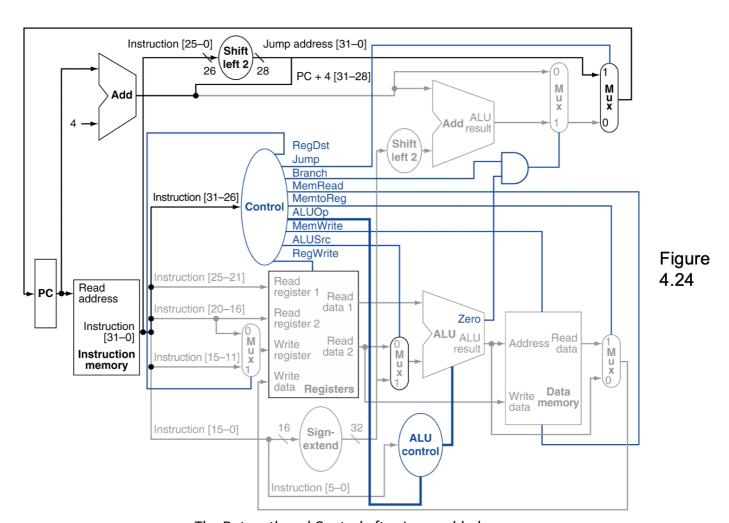

The Datapath and Control after Jump added.