
Signals Classification

Signals are classified into the following categories:


- Continuous Time and Discrete Time Signals
- · Deterministic and Non-deterministic Signals
- Even and Odd Signals
- Periodic and Aperiodic Signals
- · Energy and Power Signals
- · Real and Imaginary Signals

Continuous Time and Discrete Time Signals

A signal is said to be continuous when it is defined for all instants of time.

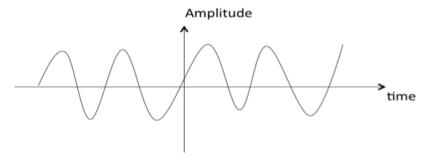


A signal is said to be discrete when it is defined at only discrete instants of time/

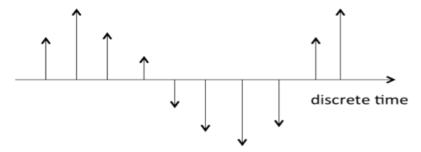


Deterministic and Non-deterministic Signals

A signal is said to be deterministic if there is no uncertainty with respect to its value at any instant of time. Or, signals which can be defined exactly by a mathematical formula are known as deterministic signals.

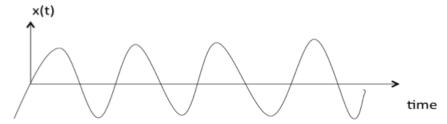

A signal is said to be non-deterministic if there is uncertainty with respect to its value at some instant of time. Non-deterministic signals are random in nature hence they are called random signals. Random signals cannot be described by a mathematical equation. They are modelled in probabilistic terms.

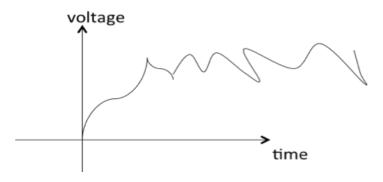

Even and Odd Signals

A signal is said to be even when it satisfies the condition x(t) = x(-t)


Example 1: t2, t4... cost etc.

Let
$$x(t) = t2$$

$$x(-t) = (-t)2 = t2 = x(t)$$

∴, t2 is even function

Example 2: As shown in the following diagram, rectangle function x(t) = x(-t) so it is also even function.

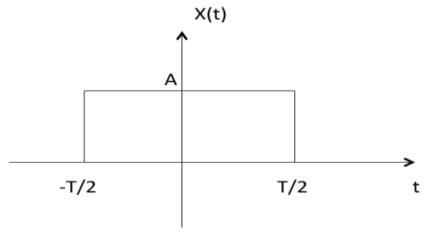

A signal is said to be odd when it satisfies the condition x(t) = -x(-t)

Example: t, t3 ... And sin t

Let
$$x(t) = \sin t$$

$$x(-t) = \sin(-t) = -\sin t = -x(t)$$

 \therefore , sin t is odd function.

Any function f(t) can be expressed as the sum of its even function $f_{\rm e}(t)$ and odd function $f_{\rm o}(t)$.

$$f(t\,)=f_{\rm e}(t\,)+f_0(t\,)$$

where

$$f_{\rm e}(t) = \frac{1}{2}[f(t) + f(-t)]$$


Periodic and Aperiodic Signals

A signal is said to be periodic if it satisfies the condition x(t) = x(t + T) or x(n) = x(n + N).

Where

T = fundamental time period,

1/T = f = fundamental frequency.

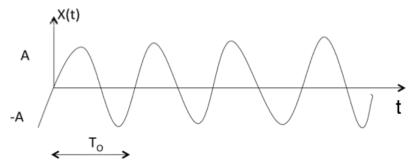

The above signal will repeat for every time interval T₀ hence it is periodic with period T₀.

Energy and Power Signals

A signal is said to be energy signal when it has finite energy.

Energy
$$E = \int_{-\infty}^{\infty} x^2(t) dt$$

A signal is said to be power signal when it has finite power.

$$ext{Power}\,P = \lim_{T o\infty}\,rac{1}{2T}\,\int_{-T}^T x^2(t)dt$$

NOTE:A signal cannot be both, energy and power simultaneously. Also, a signal may be neither energy nor power signal.

Power of energy signal = 0

Energy of power signal = ∞

Real and Imaginary Signals

A signal is said to be real when it satisfies the condition $x(t) = x^*(t)$

A signal is said to be odd when it satisfies the condition $x(t) = -x^*(t)$

Example:

If x(t)=3 then $x^*(t)=3^*=3$ here x(t) is a real signal.

If x(t)=3j then $x^*(t)=3j^*=-3j=-x(t)$ hence x(t) is a odd signal.

Note: For a real signal, imaginary part should be zero. Similarly for an imaginary signal, real part should be zero.

⊟ Print Page