# 1. Description


# 1.1. Project

Project Name	DSPro
Board Name	DSPro
Generated with:	STM32CubeMX 4.23.0
Date	12/08/2017

# 1.2. MCU

MCU Series	STM32F1
MCU Line	STM32F103
MCU name	STM32F103RCTx
MCU Package	LQFP64
MCU Pin number	64

# 2. Pinout Configuration

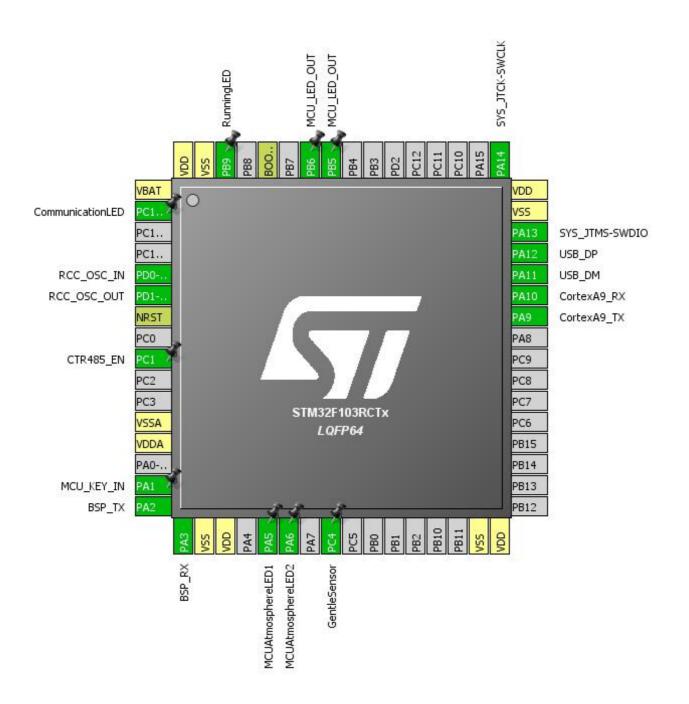


# 3. Pins Configuration

Pin Number	Pin Name	Pin Type	Alternate	Label
LQFP64	(function after		Function(s)	
	reset)		( )	
1	VBAT	Power		
2	PC13-TAMPER-RTC *	1/0	GPIO_Output	CommunicationLED
5	PD0-OSC_IN	I/O	RCC_OSC_IN	
6	PD1-OSC_OUT	I/O	RCC_OSC_OUT	
7	NRST	Reset		
9	PC1 *	I/O	GPIO_Output	CTR485_EN
12	VSSA	Power		
13	VDDA	Power		
15	PA1	I/O	GPIO_EXTI1	MCU_KEY_IN
16	PA2	I/O	USART2_TX	BSP_TX
17	PA3	I/O	USART2_RX	BSP_RX
18	VSS	Power		
19	VDD	Power		
21	PA5 *	I/O	GPIO_Output	MCUAtmosphereLED1
22	PA6 *	I/O	GPIO_Output	MCUAtmosphereLED2
24	PC4 *	I/O	GPIO_Input	GentleSensor
31	VSS	Power		
32	VDD	Power		
42	PA9	I/O	USART1_TX	CortexA9_TX
43	PA10	I/O	USART1_RX	CortexA9_RX
44	PA11	I/O	USB_DM	
45	PA12	I/O	USB_DP	
46	PA13	I/O	SYS_JTMS-SWDIO	
47	VSS	Power		
48	VDD	Power		
49	PA14	I/O	SYS_JTCK-SWCLK	
57	PB5 *	I/O	GPIO_Output	MCU_LED_OUT
58	PB6 *	I/O	GPIO_Output	MCU_LED_OUT
60	BOOT0	Boot		
62	PB9 *	I/O	GPIO_Output	RunningLED
63	VSS	Power		
64	VDD	Power		

<sup>\*</sup> The pin is affected with an I/O function

# 4. Clock Tree Configuration

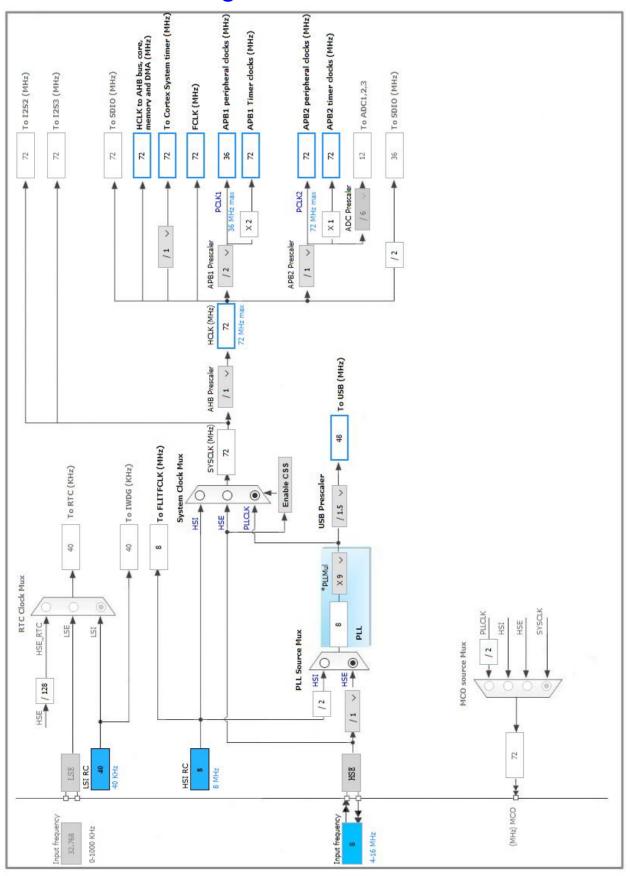

# 5. IPs and Middleware Configuration

### 5.1. CRC

mode: Activated

### 5.2. RCC

High Speed Clock (HSE): Crystal/Ceramic Resonator

### 5.2.1. Parameter Settings:

#### **System Parameters:**

VDD voltage (V) 3.3
Prefetch Buffer Enabled

Flash Latency(WS) 2 WS (3 CPU cycle)

**RCC Parameters:** 

HSI Calibration Value 16
HSE Startup Timout Value (ms) 100
LSE Startup Timout Value (ms) 5000

# 5.3. SYS

**Debug: Serial Wire** 

Timebase Source: SysTick

#### 5.4. TIM4

mode: Clock Source

### 5.4.1. Parameter Settings:

## **Counter Settings:**

Prescaler (PSC - 16 bits value) 72-1 \*

Counter Mode Up

Counter Period (AutoReload Register - 16 bits value ) 1000-1 \*

Internal Clock Division (CKD) No Division auto-reload preload Enable \*

# **Trigger Output (TRGO) Parameters:**

Master/Slave Mode Disable (no sync between this TIM (Master) and its Slaves

Trigger Event Selection Reset (UG bit from TIMx\_EGR)

# 5.5. TIM5

mode: Clock Source

# 5.5.1. Parameter Settings:

#### **Counter Settings:**

Prescaler (PSC - 16 bits value) 72-1 \*
Counter Mode Up

Counter Period (AutoReload Register - 16 bits value ) 100-1 \*

Internal Clock Division (CKD)

No Division

auto-reload preload

Enable \*

#### **Trigger Output (TRGO) Parameters:**

Master/Slave Mode Disable (no sync between this TIM (Master) and its Slaves

Trigger Event Selection Reset (UG bit from TIMx\_EGR)

### 5.6. USART1

**Mode: Asynchronous** 

### 5.6.1. Parameter Settings:

### **Basic Parameters:**

Baud Rate 115200

Word Length 8 Bits (including Parity)

Parity None Stop Bits 1

**Advanced Parameters:** 

Data Direction Receive and Transmit

Over Sampling 16 Samples

# **5.7. USART2**

**Mode: Asynchronous** 

## 5.7.1. Parameter Settings:

#### **Basic Parameters:**

Baud Rate 115200

Word Length 8 Bits (including Parity)

Parity None Stop Bits 1

**Advanced Parameters:** 

Data Direction Receive and Transmit

Over Sampling 16 Samples

# 5.8. USB

mode: Device (FS)

### 5.8.1. Parameter Settings:

#### **Basic Parameters:**

Speed Full Speed 12MBit/s

Endpoint 0 Max Packet size 8 Bytes

**Power Parameters:** 

Low PowerDisabledLink Power ManagementDisabledBattery ChargingDisabled

# 5.9. USB\_DEVICE

Class For FS IP: Communication Device Class (Virtual Port Com)

### 5.9.1. Parameter Settings:

#### **Basic Parameters:**

USBD\_MAX\_NUM\_INTERFACES (Maximum number of supported interfaces) 1
USBD\_MAX\_NUM\_CONFIGURATION (Maximum number of supported configuration) 1
USBD\_MAX\_STR\_DESC\_SIZ (Maximum size for the string descriptors) 512

USBD\_SUPPORT\_USER\_STRING (Enable user string descriptor)

USBD\_SELF\_POWERED (Enabled self power)

Enabled

USBD\_DEBUG\_LEVEL (USBD Debug Level) 0: No debug message

**Class Parameters:** 

USB CDC Rx Buffer Size 2048
USB CDC Tx Buffer Size 2048

# 5.9.2. Device Descriptor:

### **Device Descriptor:**

VID (Vendor IDentifier) 1155

LANGID\_STRING (Language Identifier) English(United States)

MANUFACTURER\_STRING (Manufacturer Identifier) STMicroelectronics

**Device Descriptor FS:** 

PID (Product IDentifier) 22336

PRODUCT\_STRING (Product Identifier) STM32 Virtual ComPort

SERIALNUMBER\_STRING (Serial number) 0000000001A
CONFIGURATION\_STRING (Configuration Identifier) CDC Config
INTERFACE\_STRING (Interface Identifier) CDC Interface

<sup>\*</sup> User modified value

# 6. System Configuration

# 6.1. GPIO configuration

		<u> </u>	0710	0710 11/ 11		
IP	Pin	Signal	GPIO mode	GPIO pull/up pull	Max	User Label
				down	Speed	
RCC	PD0-	RCC_OSC_IN	n/a	n/a	n/a	
	OSC_IN					
	PD1- OSC_OUT	RCC_OSC_OUT	n/a	n/a	n/a	
SYS	PA13	SYS_JTMS- SWDIO	n/a	n/a	n/a	
	PA14	SYS_JTCK- SWCLK	n/a	n/a	n/a	
USART1	PA9	USART1_TX	Alternate Function Push Pull	n/a	High *	CortexA9_TX
	PA10	USART1_RX	Input mode	No pull-up and no pull-down	n/a	CortexA9_RX
USART2	PA2	USART2_TX	Alternate Function Push Pull	n/a	High *	BSP_TX
	PA3	USART2_RX	Input mode	No pull-up and no pull-down	n/a	BSP_RX
USB	PA11	USB_DM	n/a	n/a	n/a	
	PA12	USB_DP	n/a	n/a	n/a	
GPIO	PC13- TAMPER- RTC	GPIO_Output	Output Push Pull	n/a	Low	CommunicationLED
	PC1	GPIO_Output	Output Push Pull	n/a	Low	CTR485_EN
	PA1	GPIO_EXTI1	External Interrupt Mode with Rising edge trigger detection	No pull-up and no pull-down	n/a	MCU_KEY_IN
	PA5	GPIO_Output	Output Push Pull	n/a	Low	MCUAtmosphereLED1
	PA6	GPIO_Output	Output Push Pull	n/a	Low	MCUAtmosphereLED2
	PC4	GPIO_Input	Input mode	Pull-up *	n/a	GentleSensor
	PB5	GPIO_Output	Output Push Pull	n/a	Low	MCU_LED_OUT
	PB6	GPIO_Output	Output Push Pull	n/a	Low	MCU_LED_OUT
	PB9	GPIO_Output	Output Push Pull	n/a	Low	RunningLED

# 6.2. DMA configuration

DMA request	Stream	Direction	Priority
USART1_RX	DMA1_Channel5	Peripheral To Memory	Low
USART1_TX	DMA1_Channel4	Memory To Peripheral	Low
USART2_RX	DMA1_Channel6	Peripheral To Memory	Low
USART2_TX	DMA1_Channel7	Memory To Peripheral	Low

# USART1\_RX: DMA1\_Channel5 DMA request Settings:

Mode: Normal
Peripheral Increment: Disable
Memory Increment: Enable \*
Peripheral Data Width: Byte

Byte

Memory Data Width:

# USART1\_TX: DMA1\_Channel4 DMA request Settings:

Mode: Normal
Peripheral Increment: Disable
Memory Increment: Enable \*
Peripheral Data Width: Byte
Memory Data Width: Byte

# USART2\_RX: DMA1\_Channel6 DMA request Settings:

Mode: Normal
Peripheral Increment: Disable
Memory Increment: Enable \*
Peripheral Data Width: Byte
Memory Data Width: Byte

### USART2\_TX: DMA1\_Channel7 DMA request Settings:

Mode: Normal
Peripheral Increment: Disable
Memory Increment: Enable \*
Peripheral Data Width: Byte

Peripheral Data Width: Byte Memory Data Width: Byte

DSPro Project
Configuration Report

# 6.3. NVIC configuration

Interrupt Table	Enable	Preenmption Priority	SubPriority
Non maskable interrupt	true	0	0
Hard fault interrupt	true	0	0
Memory management fault	true	0	0
Prefetch fault, memory access fault	true	0	0
Undefined instruction or illegal state	true	0	0
System service call via SWI instruction	true	0	0
Debug monitor	true	0	0
Pendable request for system service	true	0	0
System tick timer	true	0	0
EXTI line1 interrupt	true	0	0
DMA1 channel4 global interrupt	true	0	0
DMA1 channel5 global interrupt	true	0	0
DMA1 channel6 global interrupt	true	0	0
DMA1 channel7 global interrupt	true	0	0
USB low priority or CAN RX0 interrupts	true	0	0
TIM4 global interrupt	true	0	0
USART1 global interrupt	true	0	0
USART2 global interrupt	true	0	0
TIM5 global interrupt	true	0	0
PVD interrupt through EXTI line 16	unused		
Flash global interrupt	unused		
RCC global interrupt	unused		
USB high priority or CAN TX interrupts	unused		

<sup>\*</sup> User modified value

# 7. Power Consumption Calculator report

### 7.1. Microcontroller Selection

Series	STM32F1
Line	STM32F103
мси	STM32F103RCTx
Datasheet	14611_Rev12

#### 7.2. Parameter Selection

Temperature	25
Vdd	3.3

# 8. Software Project

# 8.1. Project Settings

Name	Value	
Project Name	DSPro	
Project Folder	C:\Users\17657\Desktop\DSv1.3\DSPro	
Toolchain / IDE	EWARM	
Firmware Package Name and Version	STM32Cube FW_F1 V1.6.0	

# 8.2. Code Generation Settings

Name	Value
STM32Cube Firmware Library Package	Copy all used libraries into the project folder
Generate peripheral initialization as a pair of '.c/.h' files	Yes
Backup previously generated files when re-generating	No
Delete previously generated files when not re-generated	Yes
Set all free pins as analog (to optimize the power	No
consumption)	